

PREVOST

Instruction Sheet

IS-18903

ENTRANCE DOOR HANDLE

APPLICATION



Model	VIN	
H3 VIP Models Model Years : from 1990 to 2015	From 2P9V33402 <u>L</u> 1001 <u>030</u> up to 2PCVS3498 <u>FC</u> 71 <u>2929</u> incl.	

DESCRIPTION

This procedure describes how to set the right entrance door handle configuration for handle replacement.

MATERIAL

Order kit #IS18903 that contains the following parts:

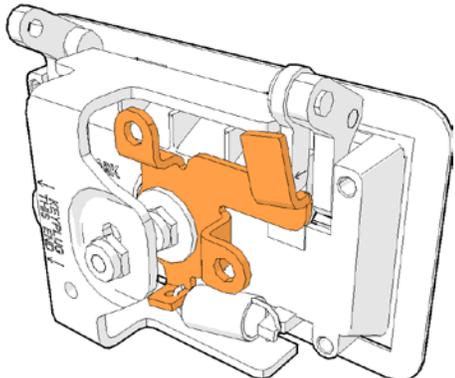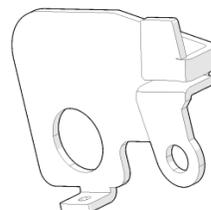Part No.	Description	Qty	3D view
780432	Handle with original lever installed (Option A)	1	
284058	Lever (For option B)	1	
IS-18903	Instruction sheet	1	
FI-18903	Feuille d'instruction	1	

NOTE

Material can be obtained through regular channels.

PROCEDURE



DANGER

Park vehicle safely, apply parking brake, stop engine. Prior to working on the vehicle, set the ignition switch to the OFF position and trip the main circuit breakers equipped with a trip button.

OPTION A (HANDLE WITH ORIGINAL LEVER INSTALLED)

1. Dismount existing entrance door handle.
2. Check the existing linkage rod lever. If the existing entrance door handle has the same lever than the new handle (part #780432, Figure 1), install the new handle without any modification. If not, move to step 4 (option B).
3. Bulletin is complete.

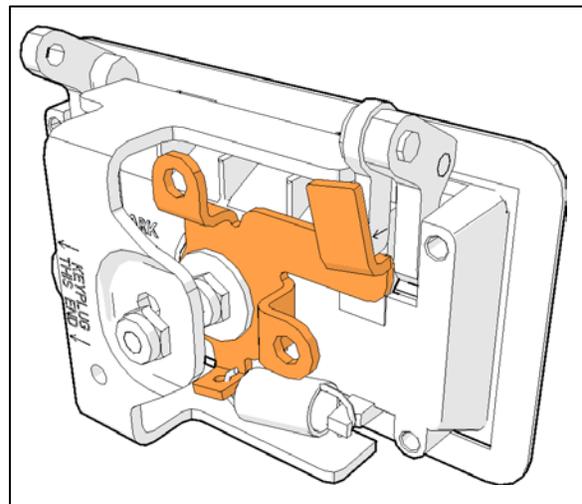


FIGURE 1

OPTION B (LEVER REPLACEMENT)

4. Remove the linkage rod lever from the new handle (part #780432, Figure 2).
5. Discard the lever.

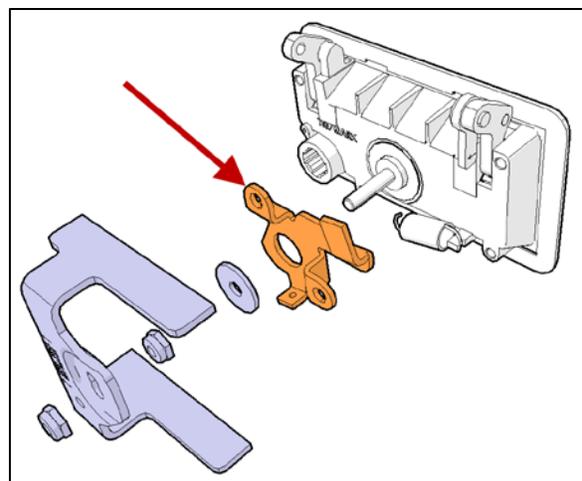


FIGURE 2

6. Install remaining parts with the new lever (part #284058, Figure 3).
7. Bulletin is complete.

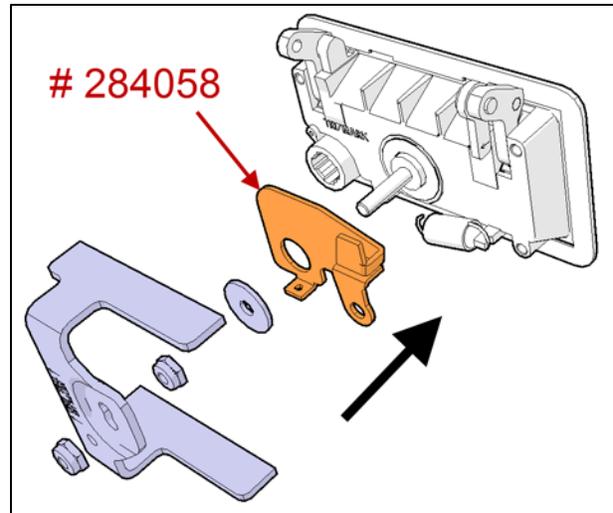


FIGURE 3

PARTS / WASTE DISPOSAL

Discard waste according to applicable environmental regulations (Municipal/State[Prov.]/ Federal)