PREVOST:

Instructions Sheet

IS-92097

REPLACEMENT OF ENGINE BELT GUARD #01-1512 BY #01-1611

MATERIAL

Part no	Description	Qty
01-1611	Engine belt guard	1
21-2192	Bracket	
IS-92097	Instruction sheet	10
FI-92097	Feuille d'instructions	1


PROCEDURE

Warning: Park vehicle safely, apply parking brake, stop engine and set battery master switches to the "OFF" position prior to working on the vehicle.

- 1. Open engine compartment rear door.
- 2. Disconnect DDEC, ABS, electronically controlled transmission and preheater module connectors (if applicable) in order to protect these systems from voltage surges during welding procedure.
- 3. Remove the 2 wing nuts and washers retaining engine belt guard then lift and remove belt guard.
- 4. Remove and keep rubber washer mounted on the belt guard upper R.H. bracket (see fig.1).
- 5. Grind welding bead retaining belt guard upper R.H. bracket to vertical post, then remove and discard bracket.

Warning: Always wear safety goggles during grinding operations.

Caution: Protect nearby wiring, hoses and other accessories from intense heat and sparks prior to grinding and welding.

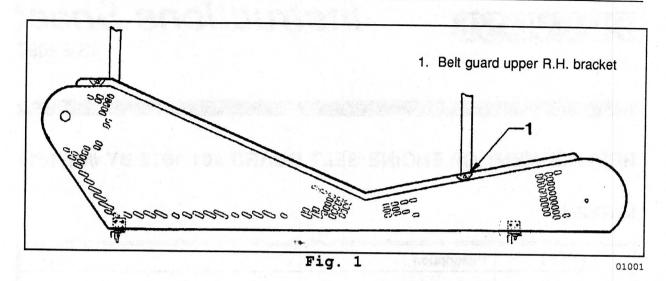

6. Using locking pliers, seat new bracket (#21-2192) on vertical post as illustrated in figure 2, then weld it with a "MIG" semi-automatic welding machine using the GMAW (gas metal arc welding) process set to Gas: T-90-H (90% He, 7.5% Ar, 2.5% CO₂) Lavo souge

Voltage: 20 ± 2 volts

Pone à l'aieni mette un sendiment

Amne: 150 the following parameters:

Amps: 150

IPM: 260

Note: If such an equipment is not available, a conventional electric arc welding machine can be used according to the SMAW (shield metal arc welding) process. In this case, use a 308L-16 1/8" (3,2 mm) diameter welding rod which conforms to AWS (American welding standards) A5.9 specification. Set machine to 90-125 amps.

Warning: Always wear an appropriate safety equipment to perform welding. Remember that welding must be performed by trained personnel only.

- 7. Allow welding to cool then put the rubber washer (previously removed) on new bracket.
- 8. Install new belt guard (#01-1611) then fix it using the 2 wing nuts and washers.
- 9. Reconnect DDEC, ABS, electronically controlled transmission and preheater module connectors (if applicable).

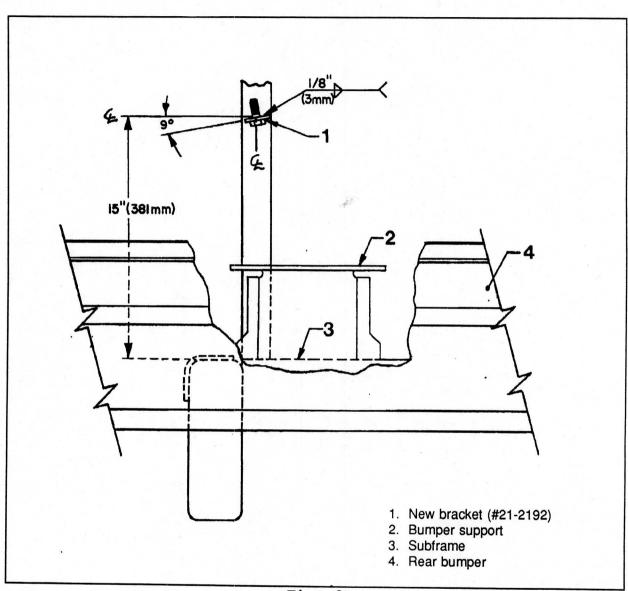


Fig. 2