

# PREVOST

## Instruction Sheet

## IS-23510

### INSTALLATION OF A V.D.O. KILOMETER HUBODOMETER

First Release

09-14-2023

#### MATERIAL

Kit #IS23510 includes the following parts:

Part No	Description	Qty
590216	V.D.O. KILOMETER HUBODOMETER 	1
650145	HUBODOMETER SUPPORT 	1
IS-23510	Instruction Sheet	1
FI-23510	Feuille d'instructions	1

#### NOTE

*Material can be obtained through regular channels.*

## SAFETY PRECAUTIONS

- Eye protection should always be worn when working in a shop.
- Rules for Personal Protection Equipment should always be respected. Wear your PPE including but not limited to the following:



# Safety First!



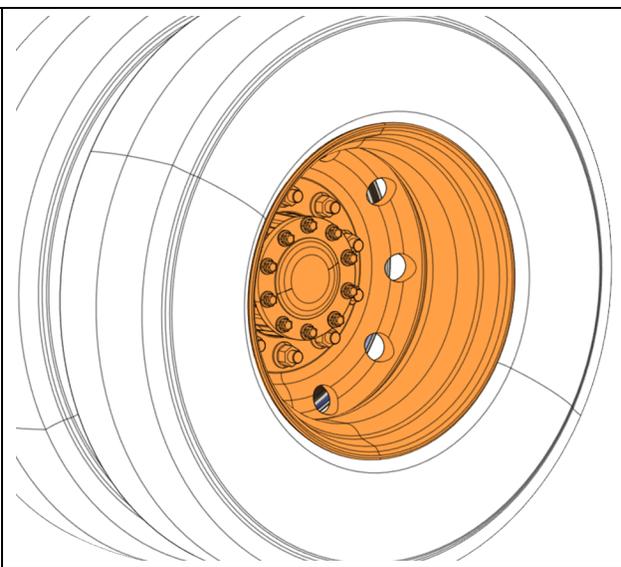
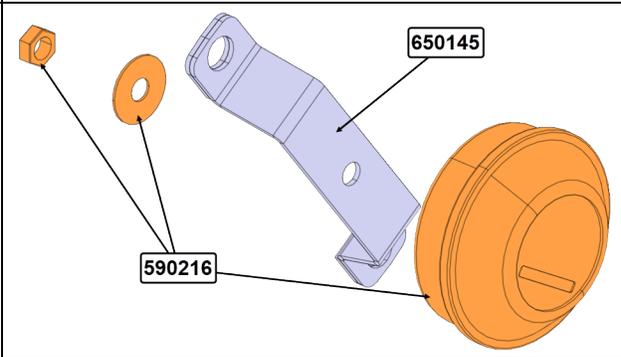
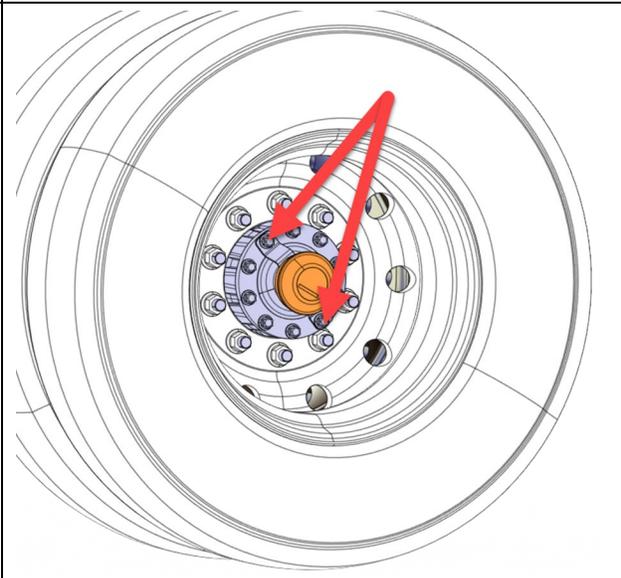
## PROCEDURE



### DANGER

Park vehicle safely, apply parking brake, stop engine. Prior to working on the vehicle, set the ignition switch to the OFF position and trip the main circuit breakers equipped with a trip button. On Commuter type vehicles, set the battery master switch (master cut-out) to the OFF position.

Lock out & Tag out (LOTO) must be performed during set-up, maintenance or repair activities. Refer to your local procedure for detailed information regarding the control of hazardous energy.

<p>1. Clean inside of drive axle wheel on curb side.</p>	
<p>2. Install hubodometer 590216 on bracket 650145.</p>	
<p>3. Remove two opposite nuts from the drive axle on the curb side.</p> <p>4. Install the bracket and hubodometer assembly on the axle.</p> <p>5. Reinstall the two axle nuts and torque to between 150 and 230 lb-ft.</p>	

## PARTS / WASTE DISPOSAL

Discard waste according to applicable environmental regulations (Municipal/State[Prov.]/ Federal)