

## TABLE OF CONTENTS

ENGINE	01
CLUTCH	02
FUEL SYSTEM	03
EXHAUST SYSTEM	04
COOLING SYSTEM	05
ELECTRICAL SYSTEM	06
TRANSMISSION	07
PROPELLER SHAFT	09
FRONT AXLE	10
REAR AXLE	11
BRAKE AND AIR SYSTEM	12
WHEELS, HUBS AND TIRES	13
STEERING	14
SUSPENSION	16
BODY	18
HEATING AND A/C SYSTEMS	22
ACCESSORIES	23
LUBRICATION	24

---

# XL MAINTENANCE MANUAL

---

## SAFETY NOTICE

This maintenance manual has been prepared in order to assist skilled mechanics in the efficient repair and maintenance of PRÉVOST CAR - XL VEHICLES.

This manual covers only the procedures as of the manufacturing date.

Safety features may be impaired if other than genuine PRÉVOST parts are installed.

Torque wrench tightening specifications must be strictly observed. Locking devices must be installed or replaced by new ones, where specified. If the efficiency of a locking device is impaired, It must be replaced.

This manual, or portions thereof, cannot be reproduced in any form whatsoever, in whole or in part, without the written consent of PRÉVOST CAR INC..

The following words are used to emphasize particularly important information:

**Warning:** *Identifies instructions which if not followed, could result in serious personal injury or loss of life.*

**Caution:** *Denotes instructions which if not followed, could cause serious damage to vehicle components.*

**Note:** *Indicates supplementary information needed to fully understand and complete an instruction.*

Although, the mere reading of such information does not eliminate the hazard, your understanding of the information will promote its correct use.

For your own safety and to ensure prolonged service life of the vehicle, heed our *Cautions*, *Warnings* and *Notes*; Ignoring them could result in extensive damage and/or serious personal injury.

---