

CONTROL VALVE OPT. "LOW-BUOY", "A" OR "B" SETTING:

POSITION "A": VALVE IS OPEN,

AIR FLOW BETWEEN SUPPLY (S) AND DELIVERY (D), LOW-BUOY IS IN FUNCTION.

POSITION "B": VALVE CLOSED,
AIR DOES'NT FLOW BETWEEN SUPPLY (S) AND DELIVERY (D), LOW-BUOY IS NOT IN FUNCTION.

BALLOON	PIPE
*1	1/4" O.D. BLUE
*2	3/8" O.D. BLUE
*3	1/2" O.D. BLUE
*4	1/4" O.D. BLACK
<b>*</b> 5	3/8" O.D. YELLOW
*6	3/8" O.D. BLACK

PREVOST®

DESCRIPTION:

H3-41 & H3-45 COACHES, WITH FRONT BEAM AXLE WITH KNEELING AND LOW-BUOY OPTION

EFF. W/ VEH : \*8-1045...

DATE: 2007/05 REV.: PAGE:

D140354 P3.1