

CONTROL VALVE OPT. "LOW-BUOY", "A" OR "B" SETTING:

POSITION "A": VALVE IS OPEN,

AIR FLOW BETWEEN SUPPLY (S) AND DELIVERY (D), LOW-BUOY IS IN FUNCTION.

POSITION "B": VALVE CLOSED, AIR DOES'NT FLOW BETWEEN SUPPLY (S) AND DELIVERY (D), LOW-BUOY IS NOT IN FUNCTION.

BALLOON	PIPE
*1	1/4" O.D. BLUE
*2	3/8" O.D. BLUE
*3	1/2" O.D. BLUE
*4	1/4" O.D. BLACK
* 5	3/8" O.D. BLACK
*6	3/8" O.D. YELLOW
·	

PREVOST_®

DESCRIPTION:

H3-41 & H3-45 COACHES, WITH FRONT BEAM AXLE WITH KNEELING, LOW-BUOY & HIGH-COMBINATION

EFF.W/ VEH:

#8-1045... DATE: 2007/05

REV.:

PAGE:

D140354 P5.1