SECTION 00: GENERAL INFORMATION

CONTENTS

1. FOR	EWORD	00-2
2. SCH	EMATICS	00-2
3. PRE	00-2	
4. SAFI	ETY NOTICE	00-4
4.1	DATA PLATES AND CERTIFICATIONS	
4.1.1	Engine	
4.1.2	? Transmission	
4.1.3		
4.1.4		
4.1.5	σ · · · · · · · · · · · · · · · · · · ·	
4.1.6		
4.1.7	,	
4.1.8		
4.1.9		
4.1.1		
4.1.1	(
5. FAS	TENER STRENGTH IDENTIFICATION	00-8
5.1	SELF-LOCKING FASTENERS	
5.2 F	RECOMMENDATIONS FOR REUSE	
5.3	SIX LOBED SOCKET HEAD	00-9
ILLUST	RATIONS	
	: DETROIT DIESEL SERIES 60	
	WORLD TRANSMISSION	
	ZF-ASTRONIC TRANSMISSION	
	TYPICAL SERIAL & MODEL NUMBERS	
	TYPICAL SERIAL & MODEL NUMBERS	
	ISS TYPICAL SERIAL & MODEL NUMBERS	
	: POWER STEERING PUMP NAMEPLATE	
	DOT CERTIFICATION PLATE	
	: ENGINE COMPARTMENT	
): VEHICLE I.D.	
	1: VEHICLE IDENTIFICATION NUMBER	
	2: THREAD NOTATION	
	3: BOLT STRENGTH MARKINGS	
	4: SELF-LOCKING FASTENERS	
	5: METRIC - US STANDARD CONVERSION TABLE	
FIGURE 16	6: CONVERSION CHART	∩∩ - 11

1. FOREWORD

This manual includes procedures for diagnosis, service, maintenance and repair for components of the XL2 series coach or bus shell model listed on the front cover page. This manual should be kept in a handy place for ready reference by the technician. If properly used, it will meet the needs of the technician and owner.

Information provided in Section 1 through 24 pertains to standard equipment items, systems and components as well as the most commonly used optional equipment and special equipment offered on the coach models covered by this manual. At the beginning of each section: a Table of Contents and a list of illustrations give the page number on which each subject begins and where each figure is located. Coach operating information is provided in a separate Operator's Manual. Audio/Video system operator instructions are also included in a separate manual.

More specific information on engine operating, transmission maintenance. and overhaul information is contained in the applicable engine or transmission service manual published by the engine or transmission manufacturer. Engine and transmission parts information is contained in the applicable engine or transmission parts catalog published by the or transmission manufacturer. All information. illustrations and specifications contained in this manual are based on the latest product information available at the time of publication approval. The right is reserved to make product changes at any time without notice.

NOTE

Typical illustrations may be used; therefore minor illustration difference may exist when compared to actual parts or other publications.

Prévost Car occasionally sends Maintenance Information, Warranty Bulletins, Safety Recalls or other literature to update users with the latest service procedures. They are issued, when required, to supplement or supersede information in this manual. Update sheet should be filled out and bulletins should be filled at the end of their respective section for future reference.

2. SCHEMATICS

Vehicle AIR SCHEMATICS are provided at the end of Section 12, "Brake". SUSPENSION AIR SCHEMATICS are provided at the end of Section 16, "Suspension". Moreover,

ELECTRICAL SCHEMATICS are provided in the technical publications box. Refer to those schematics for detailed circuit information or during diagnosis.

3. PRECAUTIONS TO BE OBSERVED BEFORE WELDING

riangle CAUTION riangle

Cut off battery power in main power compartment using battery safety switch.

 Disconnect "Ground" cables from battery terminals.

NOTE

Disconnect "Ground" cables only.

- If welding must be done near the dashboard i.e. steering column, you must disconnect all electronic control modules (radio & control head, HVAC, TTLT cluster Volvo). You must also disconnect alternator module located in front service compartment.
- Disconnect three wiring harness connectors from ECM (Electronic Control Module). The ECM is mounted on the starter side of the engine.
- For vehicles equipped with an Allison automatic transmission, disconnect three wiring harness connectors from ECU (Electronic Control Unit). The ECU is located in front service compartment.
- 5. For vehicles equipped with WCL system, disconnect electronic controller connector.
- For vehicles equipped with ABS (Anti-Lock Brake System), disconnect wiring harness connectors from ABS Electronic Control Unit. The ABS Electronic Control Unit is located in front service compartment.
- 7. Cover electronic control components and wiring to protect from hot sparks, etc.
- 8. Do not connect welding cables to electronic control components.
- 9. Do the appropriate welding on vehicle.

\triangle CAUTION \triangle

Position welding machine ground clamp as close as possible to the work.

- 10. When welding is complete, reconnect ECM, ECU, ABS electronic control units, etc.
- 11.Terminate by reconnecting "Ground" cables to battery terminals.

STEEL - STEEL WELDING

\triangle CAUTION \triangle

Before welding, disconnect electronic modules and battery terminals.

NOTE

Welding surfaces must be free of scale, slag, rust, paint, grease, humidity or other foreign material that would render welding impossible.

△ WARNING △

Only a qualified and experienced person must do welding.

- FCAW (Flux Cored Arc Welding) process;
- Electrode wire conforms to A5.20 AWS (American Welding Society) specifications;
- E4801T-9-CH, type electrode wire with 0,045" diameter (1,14 mm);

Material Thickness	Voltage	Current	Wire Feed Rate	Shielding Gas
1/8" to ½"	26 ± 2 volts	260 Amps	450 ipm. approx.	75% argon – 25% CO2 or 100% CO2

If necessary and with great care to prevent perforating the material, it is possible to use a conventional electric arc welding machine according to the following specifications:

- SMAW (Shielded Metal-Arc Welding) process;
- Welding rod conforms to A5.1 of AWS (American Welding Society) specifications; E 7018 type welding rod with 1/8" diameter (3,2 mm).
- Current: 100 amperes to 150 amperes; optimum at 120 amps.

It is important to grind weld bead starts and stops and also to grind arc strikes from surfaces.

STEEL - STAINLESS STEEL OR STAINLESS STEEL - STAINLESS STEEL WELDING

\triangle CAUTION \triangle

Before welding, disconnect electronic modules and battery terminals.

NOTE

Welding surfaces must be free of scale, slag, rust, paint, grease, humidity or other foreign material that would render welding impossible.

△ WARNING △

Only a qualified and experienced person must do welding.

- GMAW (Gas Metal-Arc Welding) process;
- Welding wire conforms to AWS (American Welding Standards) A5.9 specifications;
- 308LSi type welding wire with 0.035" diameter (0,9 mm);

STEEL - STAINLESS STEEL WELDING

Steel Thickness	SS Thickness	Voltage	Current	Wire Feed Rate	Shielding Gas
Less than 1/8"	Any type	20±1.5 volts	130±15 Amps	290 ipm approx.	90% He, 7.5% Ar, 2.5% CO2
1/8" and more	Any type	22±1.5 volts	160±15 Amps	330 ipm approx.	90% He, 7.5% Ar, 2.5% CO2

STAINLESS STEEL - STAINLESS STEEL WELDING

SS Thickness	Voltage	Current	Wire Feed Rate	Shielding Gas
Any type	20 ± 1.5 volts	130 ± 15 Amps	290 ipm approx.	90% He – 7.5% Ar, 2.5% CO2

If necessary and with great care to prevent perforating the material, it is possible to use a conventional electric arc welding machine according to the following specifications:

- SMAW (Shield Metal-Arc Welding) process;
- Welding rod conforms to AWS (American Welding Standards) A5.4 specifications; 308L-17 type welding rod with 3/32" diameter (2,4 mm);
- Current: 50 amperes to 90 amperes, optimum at 60 amperes.

It is important to grind weld bead starts and stops and also to grind arc strikes from surfaces.

4. SAFETY NOTICE

This maintenance manual has been prepared in order to assist skilled mechanics in the efficient repair and maintenance of PRÉVOST vehicles.

This manual covers only the procedures as of manufacturing date.

Safety features may be impaired if other than genuine PRÉVOST parts are installed.

Torque wrench tightening specifications must be strictly observed. Locking devices must be installed or replaced by new ones, where specified. If the efficiency of a locking device is impaired, It must be replaced.

This manual emphasizes particular information outlined by the wording and symbols:

△ WARNING △

Identifies an instruction which, if not followed, could cause personal injuries.

igtriangle Caution igtriangle

Outlined an instruction which, if not followed, could severely damage vehicle components.

NOTE

Indicates supplementary information needed to fully complete an instruction. Although, the mere reading of such information does not eliminate the hazard, understanding of the information will promote its correct use.

4.1 DATA PLATES AND CERTIFICATIONS

Delay and confusion can be avoided by placing the complete vehicle identification number of the coach and the serial numbers of the engine on parts orders and correspondence. Also, the transmission, axles, power steering pump chassis and other major components are identified by serial numbers.

4.1.1 Engine

The engine serial and model numbers are stamped on the cylinder block (as viewed from

the flywheel end) on the left side just below the fire deck and above the cast-in Detroit Diesel logo (Fig. 1).

In addition, option plates made of laminated paper are located on the rocker cover (starter side). The engine serial and model number and a list of the optional engine equipment is written on the option plate. Refer to this information when ordering replacement parts (Fig. 1).

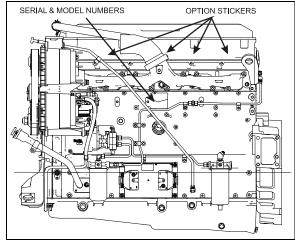


FIGURE 1: DETROIT DIESEL SERIES 60

00043

4.1.2 Transmission

The transmission identification plate is located on the fluid level dipstick side of the transmission (WT) or on transmission, on the vehicle R.H. side (ZF) (Fig. 2 & 3). The identification plate shows the transmission serial number, part number (assembly number), and model number. Use all three numbers when ordering parts.

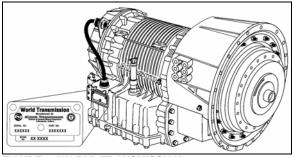


FIGURE 2: WORLD TRANSMISSION

07076

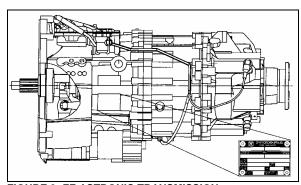


FIGURE 3: ZF-ASTRONIC TRANSMISSION

0004

4.1.3 Drive Axle

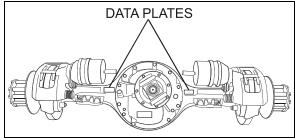


FIGURE 4: TYPICAL SERIAL & MODEL NUMBERS 1101

4.1.4 Front Axle

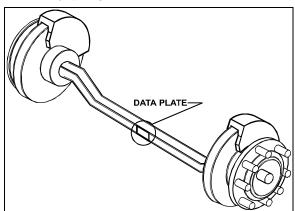


FIGURE 5: TYPICAL SERIAL & MODEL NUMBERS 10024

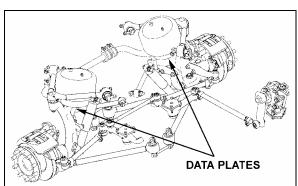


FIGURE 6: ISS TYPICAL SERIAL & MODEL NUMBERS

4.1.5 Power Steering Pump

Power steering pump serial number is located on a tag on the pump (Fig. 7). The pump is mounted on the engine beside the crankshaft pulley.

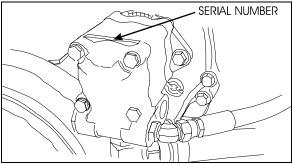


FIGURE 7: POWER STEERING PUMP NAMEPLATE 00035

4.1.6 Coach Final Record

The Coach Final Record is a record of all data pertaining to the assembly of the coach. This record is included in the technical publication package supplied with the coach. Retain this record in the company records office for reference and safe-keeping.

4.1.7 Safety Certification

Coach components meet specifications and standards as follows:

- Material and parts conform to ASTM and/or SAE standards in effect at the time of manufacture.
- All factory-installed interior materials meet FMVSS 302 for fire resistance.
- Certified according to Provincial, State and Federal Safety standards (Canadian and US) BMCSS, FMVSS, and CMVSS.

Other applicable certification labels are affixed to the component.

4.1.8 DOT Certification Label

This certifies that coaches manufactured by Prevost Car Inc., comply with all Federal Motor Vehicle Safety Standards at the time of manufacture. Information such as date of manufacture, model year, gross vehicle weight rating, tire types and inflation pressure is also etched on this plate. The DOT Certification plate is affixed to L.H. control panel.

Section 00: GENERAL INFORMATION

 


FIGURE 8: DOT CERTIFICATION PLATE

00016

4.1.9 EPA Engine Label

The exhaust emission certification label affixed to the rear junction box certifies that the engine conforms to federal and any state exhaust emission regulations (Fig. 9). It gives the operating conditions under which certification was made.

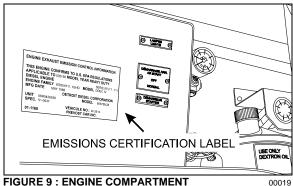


FIGURE 9: ENGINE COMPARTMENT

4.1.10 Fuel Tank Label

The fuel tank label is molded on the side of the fuel tank. To read this label, unscrew the fuel tank access panel nuts located at the left in the condenser compartment.

4.1.11 Vehicle Identification Number (VIN)

The seventeen digit vehicle identification number (VIN) is located on a plate (Fig. 10 & 11) located on the windshield frame pillar (driver's side). The VIN is visible from the outside of the coach. Make sure the correct vehicle identification number is given when ordering replacement parts. Using the VIN when ordering parts will facilitate processing.

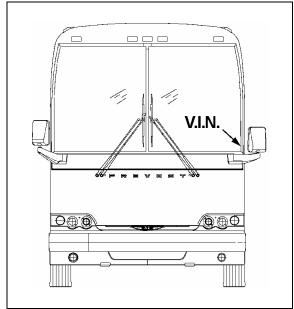


FIGURE 10: VEHICLE I.D.

00020

NOTE

Record the VIN in the coach documentation and keep with company records. The VIN will normally be used for vehicle registration and for obtaining vehicle insurance coverage.

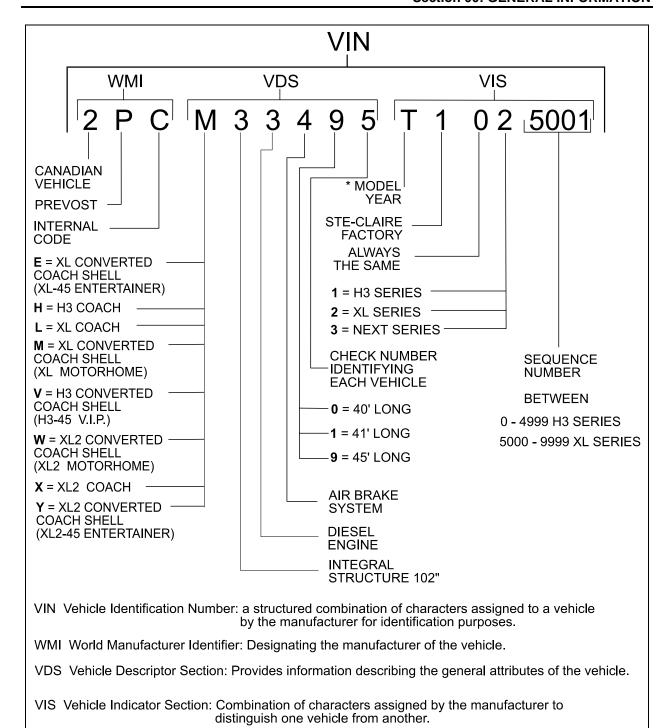


FIGURE 11: VEHICLE IDENTIFICATION NUMBER

VIN1

YEAR	CODE	YEAR	CODE
1995	S	2001	1
1996	Т	2002	2
1997	V	2003	3
1998	W	2004	4
1999	X	2005	5
2000	Υ	2006	6

5. FASTENER STRENGTH IDENTIFICATION

Most commonly used metric fastener strength property classes are 9.8 and 10.9 with the class identification embossed on the head of each bolt. Customary (inch) strength classes range from grade 2 to 8 with radial line identification embossed on each bolt head actual grade (i.e., a grade 7 bolt will have 5 embossed radial lines on the bolt head). Some metric nuts will be marked with single digit strength identification numbers on the nut face. Fig. 13 shows the different strength markings. When replacing metric

fasteners, be careful to use fasteners of the same or greater strength than the original fasteners (the same number marking or higher). It is also important to select replacement fasteners of the correct size. Correct replacement fasteners are available through the parts division. Some metric fasteners available in after-market parts sources were designed to metric standards of countries other the United States and may be of a lower strength, may not have the numbered head marking system, and may be of a different thread pitch.

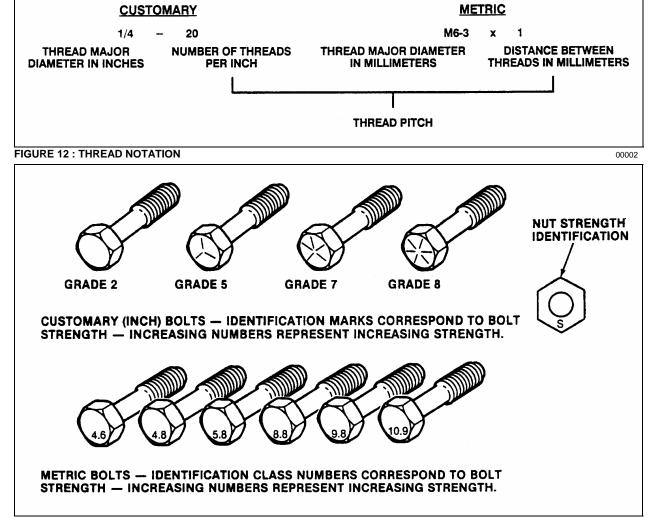


FIGURE 13: BOLT STRENGTH MARKINGS

The metric fasteners used on the coach are designed to new standards and may not yet be manufactured by some non-domestic fastener suppliers. In general, except for special applications, the common sizes and pitches are:

- M 8 X 1.25;
- M 10 X 1.5;
- M 12 X 1.75;
- M 14 X 2;

00003

5.1 SELF-LOCKING FASTENERS

A self-locking fastener is designed with an interference fit between the nut and bolt threads. This is most often accomplished by distortion of the top thread of an all-metal nut or bolt or by using a nylon patch on the threads. A nylon insert or the use of adhesives may also be used as a method of interference between nut and bolt threads (Fig. 14).

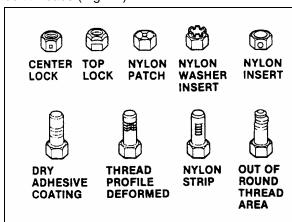


FIGURE 14: SELF-LOCKING FASTENERS

5.2 RECOMMENDATIONS FOR REUSE

Clean, unrusted self-locking fasteners may be reused as follows:

- a) Clean dirt and other foreign matter from the fastener;
- b) Inspect the fastener to ensure there is no crack, elongation, or other sign of fatigue or overtightening. If there is any doubt, replace with a new self-locking fastener of equal or greater strength;
- c) Assemble parts and hand start fastener;
- d) Observe that, before the fastener seats, it develops torque per the chart in table two.
 If there is any doubt, replace with a new self-locking fastener of equal or greater strength;
- e) Tighten the fastener to the torque specified in the applicable section of this manual;

Fasteners which are rusty or damaged should be replaced with new ones of equal or greater strength.

SELF-LOCKING FASTENER TORQUE CHART												
METRIC		6 & 6.3	8		10		1	2		14	16	20
NUTS AND	Nm	0.4	0.8		1.4	1	2	.2	;	3.0	4.2	7.0
ALL-METAL BOLTS	Lbf-in	4.0	7.0		12	2	1	8		25	35	57
ADHESIVE OR NYLON	Nm	0.4	0.6		1.2	2	1	.6	:	2.4	3.4	5.6
COATED BOLTS	Lbf-in	4.0	5.0		10)	1	4		20	28	46
US STANDARD		.250	.312		.375	.4	37	.500)	.562	.625	.750
NUTS AND	Nm	0.4	0.6		1.4	1	.8	2.4		3.2	4.2	6.2
ALL-METAL BOLTS	Lbf-in	4.0	5.0		12	1	5	20		27	35	51
ADHESIVE OR NYLON	Nm	0.4	0.6		1.0	1	.4	1.8	,	2.6	3.4	5.2
COATED BOLTS	Lbf-in	4.0	5.0		9.0	1	2	15	·	22	28	43

00004

5.3 SIX LOBED SOCKET HEAD

Six lobed socket head (Torx) fasteners are used in some applications on vehicles covered in this manual. The tools designed for these fasteners are available commercially. However, in some cases, if the correct tool is not available, a hex socket head wrench may be used.

FIGURE 15: METRIC - US STANDARD CONVERSION TABLE

00005

FRACTIONS	DECIMAL IN.	METRIC MM	FRACTIONS	DECIMAL IN.	METRIC MM
1/64	.015625	.39688	33/64	.515625	13.09687
1/32	.03125	.79375	17/32	.53125	13.49375
3/64	.046875	1.19062	35/64	.546875	13.89062
1/16	.0625	1.58750	9/16	.5625	14.28750
5/64	.078125	1.98437	37/64	.578125	14.68437
3/32	.09375	2.38125	19/32	.59375	15.08125
7/64	.109375	2.77812	39/64	.609375	15.47812
1/8	.125	3.1750	5/8	.625	15.87500
9/64	.140625	3.57187	41/64	.640625	16.27187
5/32	.15625	3.96875	21/32	.65625	16.66875
11/64	.171875	4.36562	43/64	.671875	17.06562
3/16	.1875	4.76250	11/16	.6875	17.46250
13/64	.203125	5.15937	45/64	.703125	17.85937
7/32	.21875	5.55625	23/32	.71875	18.25625
15/64	.234375	5.95312	47/64	.734375	18.65312
1/4	.250	6.35000	3/4	.750	19.05000
17/64	.265625	6.74687	49/64	.765625	19.44687
9/32	.28125	7.14375	25/32	.78125	19.84375
19/64	.296875	7.54062	51/64	.796875	20.24062
5/16	.3125	7.93750	13/16	.8125	20.63750
21/64	.328125	8.33437	53/64	.828125	21.03437
11/32	.34375	8.73125	27/32	.84375	21.43125
23/64	.359375	9.12812	55/64	.859375	21.82812
3/8	.375	9.52500	7/8	.875	22.22500
25/64	.390625	9.92187	57/64	.890625	22.62187
13/32	.40625	10.31875	29/32	.90625	23.01875
27/64	421875	10.71562	59/64	.921875	23.41562
7/16	.4375	11.11250	15/16	.9375	23.81250
29/64	.453125	11.50937	61/64	.953125	24.20937
15/32	.46875	11.90625	31/32	.96875	24.60625
31/64	.484375	12.30312	63/64	.984375	25.00312

FIGURE 16: CONVERSION CHART

00006

SECTION 01: ENGINE

CONTENTS

1. VOLVO D13 ENGINE	2
1.1 System Overview	2
1.2 ENGINE OVERVIEW	6
1.3 ENGINE OIL	7
1.3.1 General	
	7
	8
	8
	8
	8
	9
	9
	9
	10
	11
	14
1.6 ENGINE MOUNTS	15
2. ELECTRONIC FOOT PEDAL ASSEMBLY ((EFPA) & THROTTLE POSITION SENSOR16
3. SPECIFICATIONS	17
U L LIGTD A TIONS	
ILLUSTRATIONS	
	5
	6
	.)7
	8
	10
	10
	11
	11 11
F 40	
FIGURE 11: ENGINE COMPARTMENT X3 COACHES (TY	
FIGURE 11: ENGINE COMPARTMENT X3 COACHES (TY FIGURE 12: NORMAL OIL COOLER POSITION	
FIGURE 11: ENGINE COMPARTMENT X3 COACHES (TY FIGURE 12: NORMAL OIL COOLER POSITION	

1. VOLVO D13 ENGINE

1.1 SYSTEM OVERVIEW

NOTE

The "Premium Tech Tool" (PTT) is the preferred tool for performing diagnostic work. Contact your local dealer for more information.

The Engine Management System (EMS) controls many engine functions such as: fuel timing and delivery, engine protection functions, engine brake operation, EGR valve function and the turbocharger nozzle function. The Engine Electronic Control Unit (EECU) along with other supporting control units and sensors are responsible for monitoring and controlling these functions. These control units communicate through the J1939 high speed serial data line to share data.

In addition to their control functions, the modules have on-board diagnostic capabilities. The onboard diagnostics are designed to detect faults or abnormal conditions that are not within their operating parameters. When the system detects a fault or abnormal condition, the fault will be logged in one or both of the modules' memory. The vehicle operator will be advised that a fault has occurred by the illumination of a malfunction indicator lamp and a message in the driver information display, if equipped. The module may initiate the engine shutdown procedure if the system determines that the abnormal condition could damage the engine. In some situations, the system will enter the "limp home" mode. Limp home mode allows continued vehicle operation but, the system may substitute a sensor or signal value that may result in reduced engine performance.

Fault codes logged in the system memory, can later be read to aid in diagnosing the fault. These faults can be read via a diagnostic computer or through the instrument cluster display, if equipped. The "Premium Tech Tool" (PTT) is the preferred tool for performing diagnostic work. Using a diagnostic computer (or PTT) connected to the Serial Communication Port, expands the technicians diagnostic capabilities with additional data and tests.

For diagnostic software, contact your local dealer.

The following is a list of engine sensors that provide input to the EMS:

- Ambient Air Temperature Sensor
- Ambient Pressure sensor
- Boost Air Pressure (BAP) Sensor
- Camshaft Position (Engine Position) Sensor
- Crankshaft Position (Engine Speed) Sensor
- Differential Pressure DPF Sensor
- EGR Differential Pressure Sensor
- EGR Temperature Sensor
- Engine Coolant Level (ECL) Sensor
- Engine Coolant Temperature (ECT) Sensor
- Engine Oil Pressure (EOP) Sensor
- Engine Oil Level (EOL) Sensor
- Engine Oil Temperature (EOT) Sensor
- Exhaust Temperature Sensor (DPF Sensors)
- Fuel Pressure Sensor
- Intake Air Temperature And Humidity (IATH) Sensor
- Intake Manifold (Boost) Temperature Sensor
- Throttle Position (TP) Sensor
- Turbo Speed Sensor
- Variable Geometry Turbocharger (VGT) Position Sensor

Sensors

Ambient Air Temperature Sensor

The Ambient Air Temperature Sensor is used to detect the outside air temperature. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the ambient air temperature. The sensor uses a thermistor that is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

The Ambient Air Temperature Sensor is located in the front of the vehicle.

Ambient (Atmospheric) Pressure Sensor

The Ambient (Atmospheric) Pressure Sensor contains a pressure sensitive diaphragm and an electrical amplifier. Mechanical pressure applied to the diaphragm causes the diaphragm to deflect and the amplifier to produce an electrical signal proportional to the deflection.

The Ambient (Atmospheric) Pressure Sensor is built into the Engine Management System (EMS) Module.

Camshaft Position Sensor

The Camshaft Position (Engine Position) Sensor is located in the rear face of the timing gear cover at the rear of the engine, near the bottom of the valve cover. It uses magnetic induction to generate a pulsed electrical signal. It senses the passage of seven (7) timing bumps on the edge of the camshaft dampener. Six of the holes correspond to the phasing of the electronic unit injectors, while the seventh hole indicates the top dead center position.

Crankshaft Position (Engine Speed) Sensor

The Crankshaft Position (Engine Speed) Sensor uses magnetic induction to generate a pulsed electrical signal. Notches are machined into the edge of the flywheel. When one of the notches passes close to the sensor, electric pulses result.

The Crankshaft Position (Engine Speed) Sensor also indicates when the crankshaft is at the top dead center position.

Differential Pressure DP Sensor

The differential pressure sensor is used for flow measurement of the Diesel Particulate Filter (DPF). This sensor has two pressure ports and senses the difference in pressure between the two ports. Measurement of the pressure before and after the DPF is used to calculate diesel filter regeneration.

The Differential Pressure DPF Sensor is located on the side of the Diesel Particulate Filter (DPF).

EGR Differential Pressure Sensor

The EGR differential pressure sensor is used for flow measurement of the Exhaust Gas Recirculation (EGR) valve. This sensor has two pressure ports and senses the difference in pressure between the two ports. Measurement of the pressure before and after the EGR valve is used to calculate EGR flow.

The EGR Differential Pressure Sensor is located on the left or right side of the engine.

EGR Temperature Sensor

The EGR temperature sensor detects exhaust gas temperature for EGR system. The sensor modifies a voltage signal from the control unit. The modified signal returns to the control unit as

the exhaust temperature of the EGR system to confirm EGR operation. The sensor uses a thermistor that is sensitive to the change in temperature.

The EGR Temperature Sensor is located near the EGR valve.

Engine Coolant Level (ECL) Sensor

The Engine Coolant Level (ECL) Sensor is a switch. If engine coolant level falls below a calibrated point the contacts open and the driver will be notified of the low coolant level.

The Engine Coolant Level (ECL) Sensor is located in the cooling system reservoir tank.

Engine Coolant Temperature (ECT) Sensor

The Engine Coolant Temperature Sensor is located at the front of the engine. The sensor will indicate a high coolant temperature caused by problems like radiator blockage, thermostat failure, heavy load, or high ambient temperatures. This sensor is also used for cold start enhancement and for fan clutch engagement.

Engine Oil Pressure (EOP) Sensor

The Engine Oil Pressure Sensor contains a pressure sensitive diaphragm and a electrical amplifier. Mechanical pressure applied to the diaphragm causes the diaphragm to deflect and the amplifier to produce an electrical signal proportional to the deflection.

The Engine Oil Pressure Sensor is located on the oil filter assembly. The sensor monitors engine oil pressure to warn of lubrication system failure.

Engine Oil Level (EOL) Sensor

The Engine Oil Level Sensor is located in the oil pan.

Engine Oil Temperature (EOT) Sensor

The Engine Oil Temperature Sensor is a thermistor whose resistance varies inversely to temperature. The sensor has a negative temperature coefficient, which means the sensor resistance will decrease as the engine oil temperature increases.

The Engine Oil Temperature Sensor is located in the oil pan.

Exhaust Temperature Sensor (DPF Sensors)

The exhaust gas temperature sensor detects exhaust gas temperature for DPF protection as well as DPF regeneration control. The sensor modifies a voltage signal from the control unit. The modified signal returns to the control unit as the exhaust temperature at that specific location of the exhaust. The sensor uses a thermistor that is sensitive to the change in temperature.

The Exhaust Temperature Sensors are located in the DPF assembly.

Fuel Pressure Sensor

The fuel pressure sensor contains a diaphragm that senses fuel pressure. A pressure change causes the diaphragm to flex, inducing a stress or strain in the diaphragm. The resistor values in the sensor change in proportion to the stress applied to the diaphragm and produces an electrical output.

The Fuel Pressure Sensor is located on top of the fuel filter housing.

Intake Air Temperature and Humidity (IATH) Sensor

The Intake Air Temperature and Humidity (IATH) Sensor contains a thermistor and a capacitive sensor. The resistance of the thermistor varies inversely to temperature. The output of the capacitive sensor increases as the humidity of the surrounding air increases. By monitoring the signals from both portions of the sensor, the Engine Management System (EMS) Module calculates the temperature and humidity of the air passing through the air filter housing.

The Intake Air Temperature and Humidity (IATH) Sensor is located in the air intake tube just downstream from the air filter canister.

Intake Manifold (Boost) Temperature Sensor

The Intake Manifold (Boost) Temperature Sensor is a thermistor whose resistance varies inversely to temperature. The sensor has a negative temperature coefficient, which means the sensor resistance will decrease as the inlet air temperature increases.

The Intake Manifold (Boost) Temperature Sensor is located in the intake manifold.

Intake Manifold Pressure Sensor

The Intake Manifold Pressure Sensor contains a pressure sensitive diaphragm and an electrical amplifier. Mechanical pressure applied to the diaphragm causes the diaphragm to deflect and the amplifier to produce an electrical signal proportional to the deflection.

The Intake Manifold Pressure Sensor is located on the air inlet pipe before the intake manifold.

Throttle Position (TP) Sensor

The Throttle Position Sensor is a potentiometer that is mechanically linked to the accelerator pedal. A potentiometer is a variable resistor whose resistance will change as the pedal is pressed. As the resistance changes, the signal voltage of the sensor changes indicating the accelerator pedal position.

The Throttle Position Sensor is located above the accelerator pedal. The sensor is designed to improve the driver's control by reducing sensitivity to chassis motion. This sensor provides the driver's fuel request input to the VECU.

Turbo Speed Sensor

The Turbo Speed Sensor informs the EMS of the turbo shaft speed. The sensor does not read from the vanes, but reads from the shaft. The Engine Management System (EMS) Module uses this signal in conjunction with the VGT position sensor signal to control the speed of the turbocharger and therefore optimize the intake manifold pressure.

The Turbo Speed Sensor is mounted in the center of the turbocharger.

Variable Geometry Turbocharger Smart Remote Actuator (VGT SRA)

The Variable Geometry Turbocharger Smart Remote Actuator (VGT SRA) takes the position commands from the EMS, moves the nozzle of the turbocharger to the desired position, and performs all of the diagnostics and self checks on the actuator.

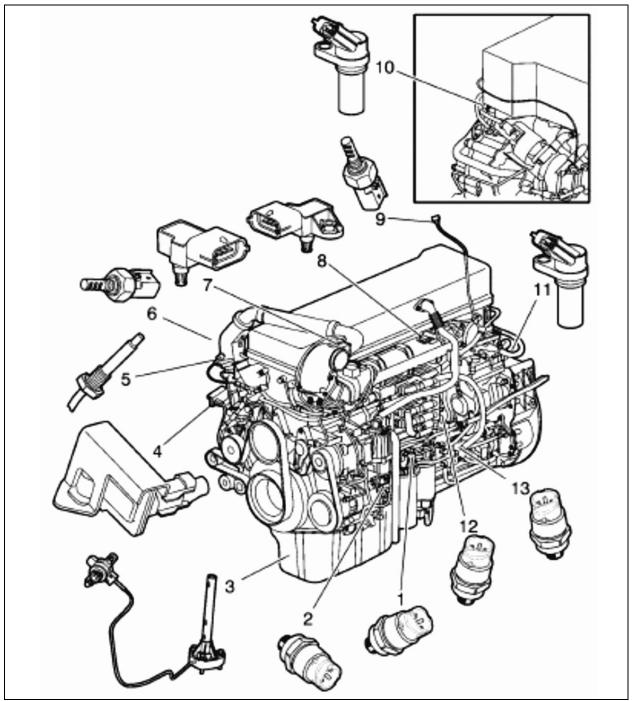


FIGURE 1: ENGINE SENSORS LOCATION

1	Fuel Pressure	8	Air Temperature
2	Crankcase Pressure	9	Humidity/Ambient Air Temperature
3	Oil Level/Temperature	10	Camshaft Speed
4	EGR Differential Pressure	11	Crankshaft Speed
5	EGR Temperature	12	Oil Pressure
6	Coolant Temperature	13	AFI Fuel Pressure
7	Boost Pressure		

1.2 ENGINE OVERVIEW

NOTE

For maintenance on or repair of engine components or engine-related components, please refer to Volvo Trucks Canada or Volvo Trucks North America Web Site under: Parts & Service, purchase engine literature, D13F engine.

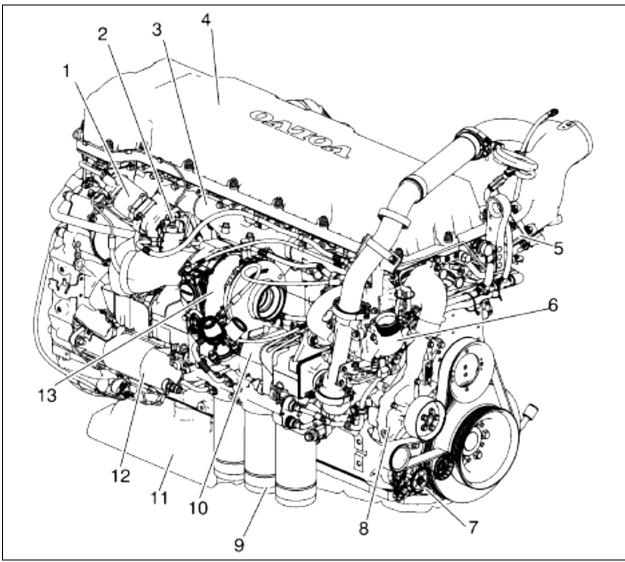


FIGURE 2: D13F ENGINE, TURBO SIDE (TYPICAL)

1. EGR Valve	8. Coolant Pump	
2. Aftertreatment Fuel Injector	9. Oil Filters	
3. Exhaust Manifold	10. EGR Cooler	
4. Valve Cover	11. Oil Pan	
5. Engine Preheater Element	12. Starter Motor	
6. Thermostat Cover	13. Turbocharger	
7. Belt Tensioner		

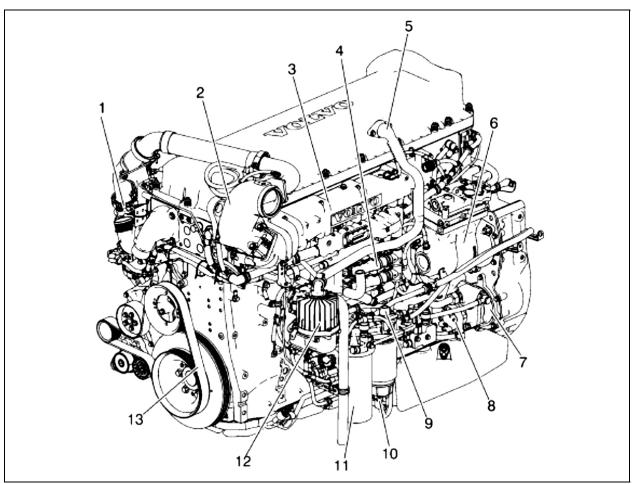


FIGURE 3: D13F ENGINE, ALTERNATOR SIDE (TYPICAL)

1. Venturi Pipe	8. Fuel Pump
2. EGR Mixing Chamber	9. Hand Primer
3. Intake Manifold	10. Fuel/Water Separator
4. Engine Electronic Control Unit (EECU)	11. Fuel Filter
5. Breather Tube	12. Crankcase Ventilator
6. Air Compressor	13. Fan/Coolant Pump Belt
7. Power Steering Pump	

1.3 ENGINE OIL

1.3.1 General

Keep the engine oil at the proper level and change it at the recommended intervals. Always replace the oil filters at the same time as when the oil is changed.

1.3.2 Oil Quality

Volvo North America recognizes engine oils that meet or exceed the standards given by American Petroleum Institute (API) for the oil classifications listed in this manual. Only oils licensed to carry the API symbol should be used. Lubricants meeting API standards have provided maximum engine life when used together with the recommended oil and oil filter change intervals.

EO-O Premium Plus (or VDS-4) diesel engine oil is mandatory for use in all 2010 emission compliant Volvo engines. These engines, which can be identified by the presence of an exhaust aftertreatment system using Selective Catalytic Reduction (SCR), also require the use of Ultra Low Sulfur Diesel (ULSD) fuel. EO-O Premium Plus oils exceed the new API service category CJ-4.



CAUTION

DO NOT add extra oil additives. Additives such as break-in oils, top oils, graphitizers, and friction-reducing liquids are not necessary and can harm the engine.

1.3.3 Oil Change Intervals

The length of time an engine can operate before an oil change depends on the quality oil used, the type of fuel used, fuel consumption, engine oil consumption, vehicle application, level of dust in the air, and fuel consumption. The change intervals given in this manual are maximum intervals. If the vehicle is operating in heavy-duty operation, dusty or off-road conditions, etc., reduce the intervals for more frequent oil changes.

NOTE

Use the information in the table below to determine the operating condition and usage applicable to your vehicle.

Engine Operating Condition	Medium	Heavy	Severe
Total Fuel Consumption (mpg)	More than 6	More than 4.7	More than 3.7
Total Fuel Consumption (L/100 KM)	Less than 39	Less than 50	Less than 64
Engine Oil and Filter Change Interval, miles (km) – 41 U.S. quarts (39L) Oil capacity	35,000 (55 000)	25,000 (40 000)	15,000 (24 000)

NOTE: If idle time is greater than 25%, use the next lower drain interval.

NOTE

Oil filters should always be changed when changing the oil.

1.3.4 Oil Filters

There are three filters on the engine, one of which is a bypass filter. This should be changed at the same time as the full-flow filter(s).



CAUTION

Volvo branded oil filters are designed to provide the proper level of filtration and protection for Volvo engines. Filters that do not meet the same stringent requirements may void engine warranty.

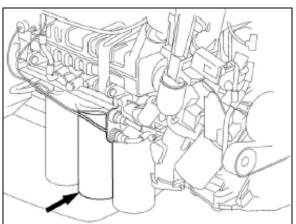


FIGURE 4: D13F OIL FILTERS

1.3.5 Synthetic Lubrication

Synthetic oils are offered by some oil suppliers as an alternative to the traditional, petroleum based oils for engines. These oils may be used in Volvo engines, provided they meet the quality levels specified on the previous pages, that is: both VDS-4 and EO-O Premium Plus.


The use of synthetic oils does not permit the extension of the recommended oil change intervals.

1.3.6 Oil Viscosity

The viscosity grade defines the thickness of the oil. The oil must be thin enough at low temperatures for easy cold starts and thick enough to protect at high temperatures. An oil is not fully defined until both the API quality classification and the viscosity grade are specified.

Choose the viscosity grade for the typical ambient temperature for the application. Multigrade oils have a broad range that suit operation in changing temperature.

Volvo North America recommends the viscosities shown in the viscosity/temperature table for Volvo engines.

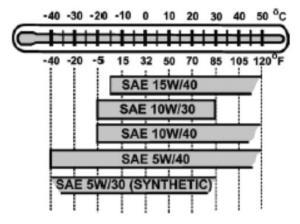

1.3.7 Oil Additives



CAUTION

Extra oil additives must never be added to any engine oil used. Additives such as breakin oils, top oils, graphitizers, and friction reducing liquids are not necessary and may even harm the engine.

Using oils to the quality standards recommended in this manual makes the use of extra oil additives unnecessary, as these oils already contain a balanced treatment of additives.

1.3.8 Oil Consumption

Once the engine is stopped, check the oil level daily. If the engine has just been stopped and it is warm, wait approximately five minutes to allow the oil to drain back to the oil pan before checking. Add oil as necessary.



CAUTION

DO NOT overfill engine with oil.

All diesel engines are designed to consume some oil, so it is normal to add oil periodically. An engine used in heavy-duty operation will consume more oil than one in normal operation.

1.3.9 Oil Change



WARNING

A hot engine or engine oil can be dangerous. Serious burns can result from contact with a hot engine or oil. Take precautions when draining the oil. Wear gloves or let the engine cool down before draining.



WARNING

When draining the oil, use the proper tools and keep away as far as possible. Raise the elbow so the forearm is parallel to the ground to prevent oil running down the arm, causing burns.



CAUTION

Always dispose of all lubricants (motor oil, coolant, gear box oils, etc) and filters according to Federal or local regulations. Used oil disposed of in nature or waterways contaminates our drinking water and kills wildlife.



WARNING

Prolonged contact with used engine oil may be harmful. Use rubber gloves when handling used oil. Wash skin thoroughly if it comes in contact with used oil.

It is important to drain as much oil as possible. Try to change oil immediately after driving, when the oil is warm. Always replace the oil filters when changing the oil.

Component	Capacity (L)	
Oil pan	24 (min) – 32 (max)	
Engine block	1	
Filters (3)	6	
Total oil fill (empty)	39	

NOTE

Since about 1 liter of oil remains in the engine after draining, approximately 38 liters will be needed for a complete oil change.

1.3.10 Oil Filters Change



WARNING

Hot oil can cause severe burns. DO NOT allow hot oil to contact the skin. When changing oil, wear protective gloves.



CAUTION

Volvo-branded oil filters are designed to provide the proper level of filtration and protection for Volvo engines. Filters that do not meet the same stringent requirements may cause unsatisfactory results.

 Clean around the oil filter housing and remove the filters using the oil filter wrench or the oil filter socket.

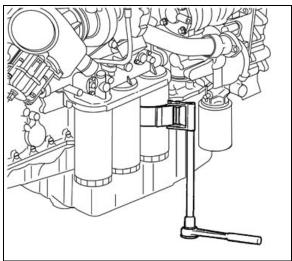


FIGURE 5: OIL FILTER WRENCH

 Prefill the new oil filters with approved engine oil. Also, lubricate the filter gaskets with engine oil (1). Hand tighten the oil filters until they contact the sealing surface of the oil filter housing (2). Manually tighten the oil filters an additional ¾ to 1 full turn (3).

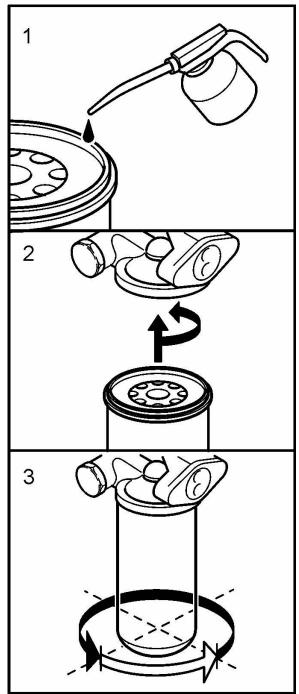


FIGURE 6: OIL FITER REPLACEMENT

- Start the engine and check for leaks around the oil filter housing and filters.
- Check the oil level. Add approved engine oil to the recommended level, if necessary. Do not overfill.

1.3.11 Checking the Oil Level

Ensure that the vehicle is parked on level ground before checking the oil level. Wait five minutes after shutting off the engine and then proceed with checking the oil.



CAUTION

DO NOT let the oil level fall below the marking on the dipstick. **DO NOT** overfill so the level is above the upper marking on the dipstick. This could lead to excessive oil temperature and/or poor crankcase breather performance. Add oil through the oil filler pipe as required in order to maintain level within the safe range.

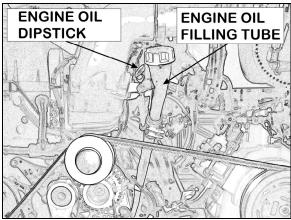


FIGURE 7: ENGINE OIL FILLING TUBE

 


FIGURE 8: ENGINE OIL LEVEL DIPSTICK

1.4 POWER PLANT ASSEMBLY REMOVAL

To access the engine or engine-related components, the vehicle power plant assembly must be removed as a whole unit by means of a slide-out cradle. The power plant assembly includes the engine, transmission (including retarder if so equipped), air compressor, alternator and transmission oil cooler.

Remove the power plant assembly as follows:



CAUTION

Tag hoses and cables for identification before disconnecting in order to facilitate reinstallation. Plug all openings to prevent dirt from entering the system.

NOTE

No parts within the EECU are serviceable. If found defective, replace the EECU as a unit.

First

- 1. Shut off the heater line shut-off valves.
- Disconnect the battery or batteries from the starting system by removing one or both of the battery cables from each battery system. With the electrical circuit disrupted, accidental contact with the starter button will not produce an engine start.



WARNING

Due to the heavy load of the rear bumper assembly, it must be adequately supported before attempting to remove it.

- Remove the rear bumper assembly complete with hitch if applicable from the vehicle. Refer to Section 18, BODY, under "REAR BUMPER REMOVAL".
- Using the quick-connect drain hose, drain the engine cooling system. Refer to Section 05, COOLING under "DRAINING COOLING SYSTEM".
- If applicable, disconnect the block heater connector located near the EGR mixing chamber.

With Vehicle Raised

- Using a vehicle lift or jack, raise vehicle to access transmission fasteners and wire harness.
- 2. Disconnect propeller shaft.
- 3. Partially remove L.H. side transmission protective panel to access connectors.
- 4. On vehicles equipped with an automatic transmission provided with a hydraulic output retarder, disconnect steel-braided airline from pressure regulator output. The pressure regulator is mounted in the upper section of engine compartment backwall and is accessible through the engine compartment R.H. side door.
- 5. Untighten bolts A and C. Remove bolts B and D and pivot oil cooler towards transmission. Reinstall bolts B and D.

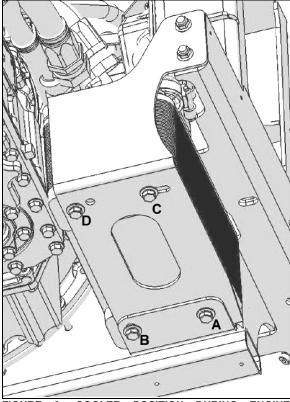


FIGURE 9: COOLER POSITION DURING ENGINE CRADLE INSERTION OR REMOVAL

- 6. From underneath, unfasten the bolts fixing the engine cradle.
- 7. Disconnect the engine coolant hose near the starter.
- 8. Disconnect air compressor suction and discharge hoses.

• With Vehicle Lowered

Lower the vehicle enough to access all components.

- > Engine Compartment R.H. side
 - Disconnect cables from two chassis grounds located on diagonal member.
 - Inside engine compartment, disconnect starter, alternators and heater cables.
 Also disconnect AFSS cable if applicable.
 - Disconnect from engine, connector C398 and vehicle interface harness connector located above EECU connectors. Also disconnect DPF cable.
 - Disconnect power steering pump hoses.
 - Shut off fuel line shut-off valve.

- Close engine fuel supply shut-off valve on primary fuel filter. Disconnect the fuel line located above fuel filters and connected to inlet port.
- Disconnect fuel return line located above fuel filters.
- Disconnect alternators cooling duct and put aside.

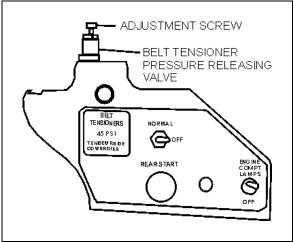


FIGURE 10: BELT TENSIONER VALVE

1220

- Locate the A/C compressor belt tensioner pressure releasing valve (Fig. 10). Turn pressure releasing valve handle counterclockwise in order to release pressure in belt-tensioner air bellows and loosen belts. Remove the belts.
- Disconnect and remove the engine-air intake duct mounted between air cleaner housing and turbocharger inlet.



CAUTION

To avoid damage to turbocharger, cover the turbocharger inlet opening to prevent foreign material from entering.

Disconnect and remove the exhaust pipe mounted between the flexible coupling and the pipe going to the Diesel Oxidation Catalyst (DOC) and Diesel Particulate Filter (DPF) assembly. If necessary, refer to Section 4: EXHAUST SYSTEM under "EXHAUST AFTERTREATMENT SYSTEM OVERVIEW".

- Disconnect and remove the air intake duct mounted between the charge air cooler outlet and the engine intake.
- Engine Compartment L.H. side
 - Disconnect fan driving shaft from radiator fan drive mechanism support.



CAUTION

To avoid damage to cooling fan right angle gearbox, make sure the power plant cradle clears the gearbox when pulling the engine out.

- Disconnect and remove section of coolant pipe assembly mounted between the radiator outlet and the water pump inlet.
- Disconnect and remove a section of coolant pipe assembly mounted between the thermostat housing and the radiator inlet.
- Disconnect the electric fan-clutch connector located near the cooling fan right angle gearbox.
- Disconnect and remove the air intake duct mounted between the turbocharger outlet and the air cooler inlet.
- Disconnect and remove surge tank hose connected to pump inlet pipe and hose connected to engine.

- Unfasten and put aside engine compartment lighting fixture and turbocharger fire suppression nozzle if applicable.
- Disconnect Exhaust Aftertreatment System control cable.

Last

- Inspect the power plant assembly to ensure that nothing will interfere when sliding out the cradle. Check for connections or hoses not mentioned in this list as some vehicles are equipped with special or aftermarket components.
- 2. Make sure the ten retaining bolts, washers and nuts securing the power plant cradle to the vehicle rear subframe are removed (Fig. 13).

NOTE

Check if any spacer(s) have been installed between power plant cradle and vehicle rear subframe, and if so, note position of each washer for reinstallation purposes.

- 3. Using a suitable equipment with a minimum capacity of 4,000 lbs (1 800 kg), slightly raise the power plant cradle.
- Pull engine out slowly from the engine compartment. Make sure all lines, wiring and accessories are disconnected and are not tangled.

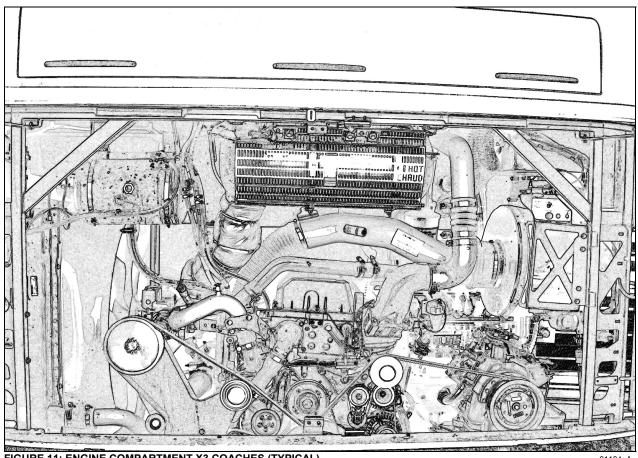


FIGURE 11: ENGINE COMPARTMENT X3 COACHES (TYPICAL)

1.5 POWER PLANT ASSY. INSTALLATION

To install a power plant assembly, follow the same procedure as in "Power Plant Assembly Removal" except in reverse order, then proceed with the following:

- Torque the power plant cradle mounting bolts to 190 lbf-ft (258 Nm).
- 2. Remove bolts B and D. Untighten bolts A and C then pivot oil cooler as per figure 12. Install bolts B and D and tighten all bolts.
- 3. Refill cooling system with saved fluid (refer to Section 05, COOLANT SYSTEM).
- 4. Once engine fuel system has been drained, it will aid restarting if fuel filters are filled with fuel oil (refer to Section 03, FUEL SYSTEM).
- 5. Start engine for a visual check. Check fuel, oil, cooling, pneumatic and hydraulic system connections for leakage. Test operation of engine controls and accessories.

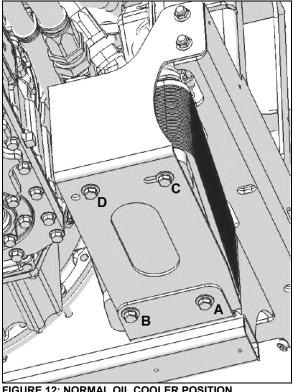


FIGURE 12: NORMAL OIL COOLER POSITION

1.6 ENGINE MOUNTS

The power plant assembly is mounted to the cradle by means of rubber mounts and supports.

Two engine support brackets are used at the front of the engine while two rubber mounts are mounted underneath the engine & radiator fan drive mechanism support and the engine & alternator support (Fig. 13).

It is recommended that new rubber mounts be installed at each major overhaul.

NOTF

Refer to the table on the following page for engine cradle tightening torques.

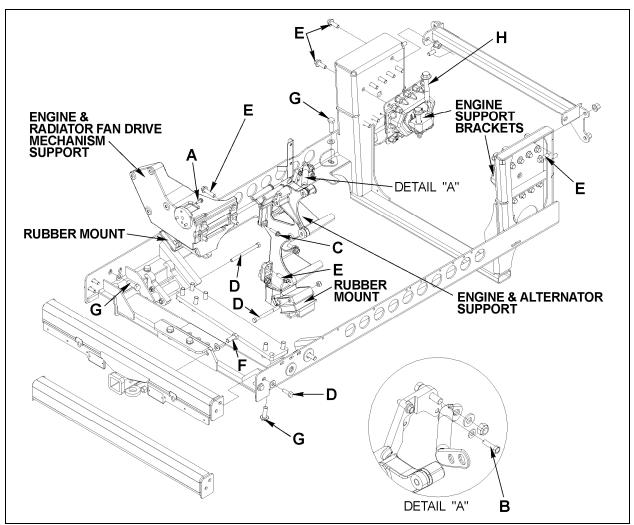


FIGURE 13: VOLVO ENGINE POWER PLANT CRADLE INSTALLATION

DRY TORQUES			
REFERENCE	DESCRIPTION	Lbf-Ft	Nm
Α	SCREW, CAP HEXAGONAL HEAD M8 - 1.25 G8.8	16	22
В	SCREW, CAP HEXAGONAL HEAD M8 - 1.25 G10.9	22	30
С	SCREW, CAP HEXAGONAL HEAD M10 - 1.5 G10.9	43	58
D	SCREW, CAP HEXAGONAL HEAD M12 - 1.75 G8.8	60	81
E	SCREW, CAP HEXAGONAL HEAD M14 - 2.0 G8.8	90	122
F	SCREW, CAP HEXAGONAL HEAD M16 - 2.0 G8.8	140	190
G	SCREW, CAP HEXAGONAL HEAD M16 - 2.0 G10.9	190	258
н	SCREW, CAP HEXAGONAL HEAD M20 - 2.5 G10.9	450	610

2. ELECTRONIC FOOT PEDAL ASSEMBLY (EFPA) & THROTTLE POSITION SENSOR

The Electronic Foot Pedal Assembly (EFPA) connects the accelerator pedal to a Throttle Position Sensor (TPS). The (TPS) is a device, which sends an electrical signal to the Motor Control Module (MCM). The TPS varies in voltage depending on how far the pedal is depressed. The system is installed in the space normally occupied by a mechanical foot pedal. The (EFPA) has maximum and minimum stops that are built into the unit during manufacturing (Fig. 14). The (TPS) converts the operator's foot pedal input into a signal for the MCM.

When installed by the equipment manufacturer, the TPS should not require adjustment. If the TPS is suspected of being misadjusted, confirm that the sensor is installed in accordance with the manufacturer's specifications. It is recommended that the idle count be at 50 or higher with a full throttle count of up to 200.

The TPS is self-calibrating and therefore has no optimum closed throttle or wide open throttle count value. If the counts are within the 50 to 200 range, the sensor is properly set.

Monitor the (TPS) at the controls as you move it through its full stroke. Be sure there is no misalignment or obstruction preventing the smooth movement of the TPS through the full stroke. Using a diagnostic data reader, check that the idle and full throttle position counts do not fall within the error zones. The error zones occur when the idle position is less than 14 counts, or when the full throttle position is more than 233 counts. Should these conditions occur, the CPC will signal diagnostic codes of 21-12 for idle error and 21-23 for wide-open throttle error.

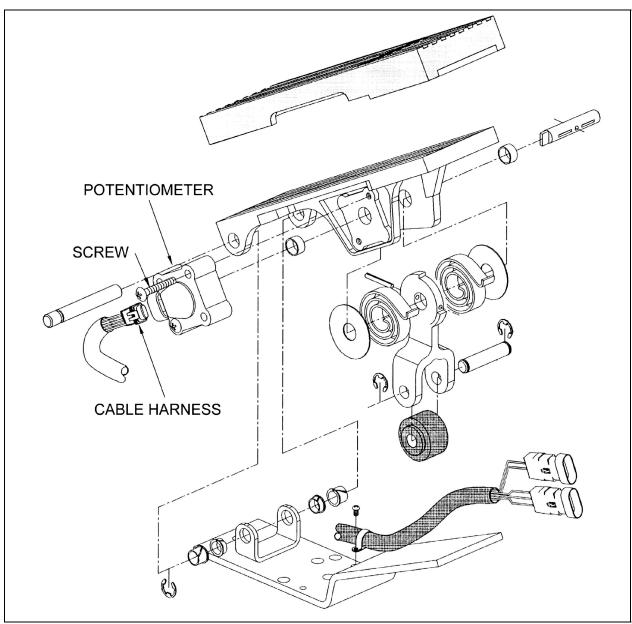


FIGURE 14: ELECTRONIC FOOT PEDAL ASSEMBLY

03035

3. SPECIFICATIONS

Volvo D13 Engine

Make	Volvo
Туре	Diesel four cycle/in-line direct injection engine
Description	Turbo/Air to air charge cooled
No. of cylinders	6
Operating range	1400-1800 RPM
X3-45 Coaches Peak Power Rating	435 HP (324 kW)
X3-45 Coaches Peak Torque Rating	1700 Ft-lb (2304 Nm)

Section 01: ENGINE

Low Idle	600 rpm
Fast Idle	2150 rpm
Maximum full load revolutions	1900 rpm
Engine oil level quantity	
Oil Pan Capacity, Low Limit	25 quarts/24 liters
Oil Pan Capacity, High Limit	34 quarts/32 liters
Total Engine Oil Capacity with Filters	41 quarts/39 liters
Lubricating oil filter elements	
Type	By-pass
Prévost number	510938
Type	Full Flow
Prévost number	
Torque specification	
Engine oil filter	Tighten ¾ of a turn to 1 full turn after gasket contact
Filters	
Engine Air Cleaner Filter	
Prévost number	
Engine Coolant Filter/Conditioner	
Prévost number	

SECTION 03: FUEL SYSTEM

CONTENTS

1. FL	UEL SYSTEM WITH VOLVO D13 ENGINE	3
1.1 1.2	DESCRIPTIONFUEL VALVES	3
1.3	FUEL FILTERS	
	3.1 Primary Fuel Filter Replacement	
	3.2 Secondary Fuel Filter Replacement	
1.4	PRIMING THE FUEL SYSTEM	6
1.5	FUEL PUMP REMOVAL AND INSTALLATION	6
2. FL	UEL LINES AND FLEXIBLE HOSES	7
3. FL	UEL TANK	7
3.1	TANK REMOVAL	8
3.2	TANK INSTALLATION	
3.3	FUEL TANK VERIFICATION	8
3.4	POLYETHYLENE FUEL TANK REPAIR	8
4. FL	UEL SPECIFICATIONS	9
4.1	FUEL TYPE	9
4.2	Blending	
4.3	BIODIESEL FUELS	10
5. AI	IR CLEANER (DRY TYPE)	10
5.1	PRE-CLEANER SERVICING	
5.2	AIR CLEANER SERVICING	11
5.3	GENERAL RECOMMENDATIONS	
5.4	AIR CLEANER RESTRICTION INDICATOR	11
6. FL	UEL PEDAL	11
6.1	FUEL PEDAL ADJUSTMENT	11
6.2	POTENTIOMETER REPLACEMENT	
7. SF	PECIFICATIONS	12

Section 03: FUEL SYSTEM

ILLUTRATIONS

FIGURE 1: FUEL SYSTEM SCHEMATIC (VOLVO D13 ENGINE)	3
FIGURE 2: MANUAL SHUT-OFF VALVE (VOLVO D13 ENGINE)	
FIGURE 3: FUEL LINE COMPRESSION FITTING	
FIGURE 4: FUEL FILTERS WITH VOLVO D13 ENGINE	5
FIGURE 5: HAND PRIMING PUMP	6
FIGURE 6: FUEL PUMP REMOVAL	7
FIGURE 7: FUEL PUMP DRIVE AXLE	7
FIGURE 8: 208 US GAL. FUEL TANK	9
FIGURE 9: FUEL TANK REPAIR	
FIGURE 10: RESTRICTION INDICATOR	11
FIGURE 11: ELECTRONIC FOOT PEDAL ASSEMBLY	12

1. FUEL SYSTEM WITH VOLVO D13 ENGINE

1.1 DESCRIPTION

NOTE

For additional information concerning Volvo D13 engine components or engine-related components, consult Volvo Trucks Canada or Volvo Trucks North America Web Site under: Parts & Service. On Volvo web site, you will find detailed service procedures for parts replacement, repair and maintenance.

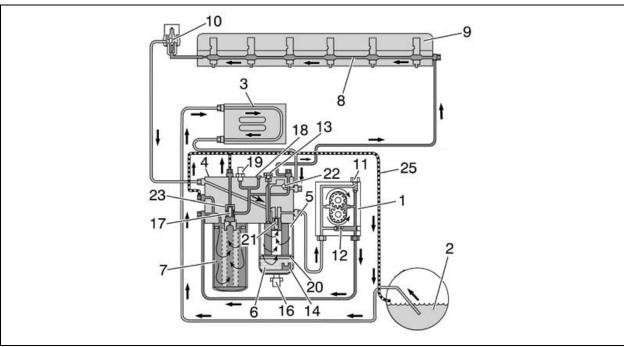


FIGURE 1: FUEL SYSTEM SCHEMATIC (VOLVO D13 ENGINE)

03086

Fuel is drawn up the fuel lines by the supply pump (1) through the pickup tube in the tank (2) and through the Engine Electronic Control Unit (EECU) cooling coil (3) and into the fuel filter housing (4). The fuel housing is equipped with a primary fuel filter (fuel/water separator) consisting of a filter cartridge and a water separation bowl.

The supply pump (1) forces the fuel into the fuel filter housing through the secondary filter (main) to a cylinder head longitudinal gallery (8). This channel supplies each unit injector (9) with pressurized fuel by a circular groove around each unit injector in the cylinder head. The overflow valve (10) controls the fuel supply pressure to the unit injectors.

The return fuel from the overflow valve (10) is returned back to the fuel filler housing and is mixed with the fuel from the fuel tank in a channel within the fuel filter housing (4).

Supply Pump Valves

Two valves are located in the supply pump (1). The safety valve (11) allows fuel to flow back to the suction side when the pressure becomes too high, e.g., if the fuel filter is blocked or is too restricted. The non-return valve (12) opens when the hand-priming pump is used.

Automatic Bleeding

If air gets into the system, it is bled when the engine starts. During bleeding, air is pressed out through the fuel filter housing over to the fuel tank through the return line (25). Bleeding for the filter replacement is controlled by valves (17) and (23).

Other

The fuel filter housing eliminates the need to drain the fuel when replacing the filter. The valve pegs (17) and (21) close when the fuel filter is removed. It is not necessary to bleed the fuel system after replacing the filter, since this is performed automatically when the engine is started and runs for more than 2 minutes.

The plugged outlet (18) is fitted on the fuel filter housing. This outlet is used when measuring supply pressure after the fuel filter with an external pressure gauge. The pressure sensor (19) on the fuel filter housing monitors the supply pressure after the fuel filter. A fault code is displayed on the instrument cluster if the fuel supply pressure is less than the specified value.

Hand Priming Pump

The hand priming pump (13) is located on the fuel filter housing and is used to pump fuel (when engine is not running) after the fuel system has been drained for repair, etc. The non-return valve (22) for the hand priming pump is also located in the fuel filter housing.

1.2 FUEL VALVES

The manual shut-off valve on engine fuel-supply line is located on the R.H. side of engine compartment. A manual shut-off valve is located at the inlet side of the primary fuel filter.

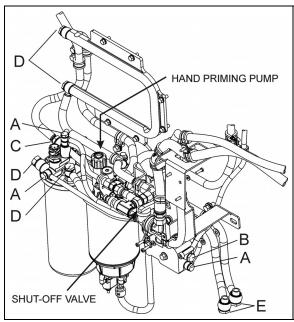


FIGURE 2: MANUAL SHUT-OFF VALVE (VOLVO D13 ENGINE)

Shut-off valve is designed to prevent loss of fuel prime. No manual valve is required on preheater fuel-supply line, since the positive-displacement fuel pump (located close to the fuel tank) prevents fuel flow when not activated.

FUEL LINE FITTINGS – VOLVO D13 ENGINE		
Α	13 ± 2 ft-lb	(18 ± 3 Nm)
В	20.5 ± 3 ft-lb	(28 ± 4 Nm)
С	22 ± 3 ft-lb	$(30 \pm 4 \text{ Nm})$
D	26 ± 4 ft-lb	$(35 \pm 5 \text{ Nm})$
Е	29.5 ± 4 ft-lb	$(40 \pm 5 \text{ Nm})$
F	35 ± 4 ft-lb	(48 ± 5 Nm)

 


FIGURE 3: FUEL LINE COMPRESSION FITTING



CAUTION

Always replace the fuel line compression sealing washers when troubleshooting for fuel aeration or performing any service procedure that requires the removal of engine fuel lines.

1.3 FUEL FILTERS

A primary fuel filter is installed on the engine. This filter consists of a filter cartridge, a water separation bowl with a drain valve. It is used to prevent water from entering the fuel system.



MAINTENANCE

The primary and secondary fuel filters are of a spin-on type and must be replaced at **every engine oil change**.

The primary fuel filter should be drained periodically or when the telltale light on the dashboard illuminates if equipped with this system. To drain water, loosen the drain valve below the separator. Place an appropriate container under the filter. Close the drain valve when finished.


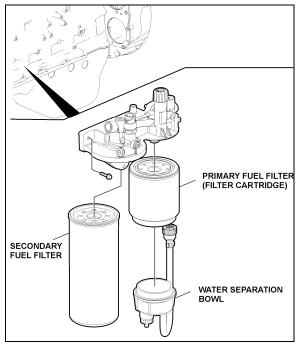



FIGURE 4: FUEL FILTERS WITH VOLVO D13 ENGINE

1.3.1 Primary Fuel Filter Replacement


- Stop engine, close the fuel supply line shutoff valve.
- 2. Place an appropriate container under the fuel filter housing, then drain the water from the water separation bowl.
- Disconnect the fuel/water separator indicator electrical connector.

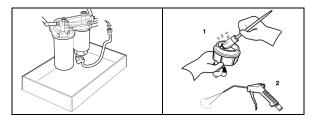

 
- 4. Unscrew and remove the primary fuel filter from the fuel filter housing. Drain filter.
- 5. Unscrew and remove the separation bowl from the filter cartridge.
- Remove and discard the old gasket from the water separation bowl. Clean the bowl thoroughly and then blow dry with filtered compressed air.



 - 7. Check that the drainage hole in the water separator bowl is not blocked.
- 8. Apply a thin coating of clean engine oil to the surface of the water separation bowl.



- Install a new gasket to the water separation bowl and then reinstall the separation bowl to the new primary fuel filter cartridge.
- 10. Apply a thin coating of clean engine oil to the surface of the primary fuel filter, install the primary fuel filter to the fuel filter housing, then tighten the primary fuel filter \(\frac{1}{2}\)-\(\frac{3}{4}\) turn.

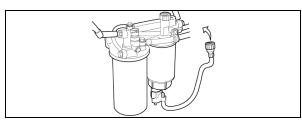


- 11. Connect the electrical connector for the water/fuel separation bowl indicator.
- 12. Open the fuel supply line shut-off valve.
- 13. Purge air from the filter by operating the priming pump to draw fuel and fill the filter. When using the hand priming pump, approximately 100 strokes will be required.
- 14. Start the engine and carry out a fueltightness check. Let the engine run for about 5 minutes to remove air pockets from the fuel system.

1.3.2 Secondary Fuel Filter Replacement

 Stop engine, close the fuel supply line shutoff valve. Place an appropriate container under the fuel filter housing.

 - 2. Clean around sealing area on fuel filter and housing.
- 3. Unscrew and remove the secondary fuel filter from the fuel filter housing.
- 4. Apply a thin coating of clean engine oil to the gasket of the secondary fuel filter. Screw the fuel filter into position. Tighten the filter ³/₄ to 1 turn after the gasket makes contact with the fuel filter housing.





CAUTION

Fuel in the old filter **must absolutely not** be poured into the new filter. This kind of contaminated fuel can damage the unit injectors.

- Prime the fuel system by pumping the hand priming pump on the fuel filter housing until resistance is felt indicating that the system is full of fuel.
- Start the engine and carry out a fuel-tightness check. Let the engine run for about 5 minutes to remove air pockets from the fuel system.

1.4 PRIMING THE FUEL SYSTEM

The fuel system will need to be bled if:

- The vehicle has run out of fuel.
- The engine has not been running for an extended period of time.
- Service work has been done on the fuel system, (tank, fuel lines, filters, valves, etc.) for example cleaning or replacing fuel filter cartridges.
- The engine is new or rebuilt.



CAUTION

When priming the system, movement of the primer pump should be as up and down as possible. Avoid putting any side load on the pump or causing a binding condition. Failure to follow these instructions could prematurely damage the primer pump.

NOTE

When the fuel system is empty, 200 or more pump strokes may be needed to properly prime system. There are no bleed nipples to be opened to prime the fuel system.

- 1. Stop engine;
- 2. Unlock the hand pump by turning the handle counterclockwise.
- Prime the system by moving the primer pump in an up and down pumping motion. Avoid putting any side load on the pump or causing a binding condition.

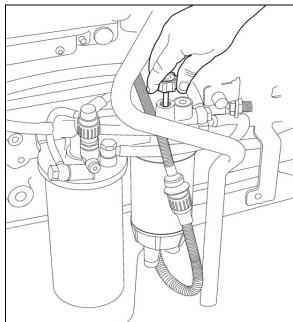


FIGURE 5: HAND PRIMING PUMP

- 4. Lock the hand primer pump by retracting it into the housing and turning it clockwise.
- Start the engine and run it at an increased idle speed for approximately 5 minutes to remove any remaining air in the system. Check the fuel system for leaks.

1.5 FUEL PUMP REMOVAL AND INSTALLATION

The pump is located underneath the air compressor and is accessible through the engine compartment R.H. access door.

To remove the pump, proceed as follows:

Clean around the fuel pump and fuel lines.
 Position a container to catch any fuel that might drain from the pump or lines.

Remove the fuel pump.

NOTE

Only unfasten the bolts marked with arrows.

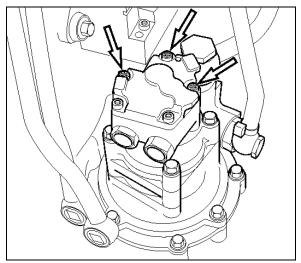


FIGURE 6: FUEL PUMP REMOVAL



CAUTION

Ensure to clean around the head of the bolts. Debris will prevent the tool from fitting properly and cause damage to the fasteners..

• Check that the adapter and fuel pump drive axle are not damaged.

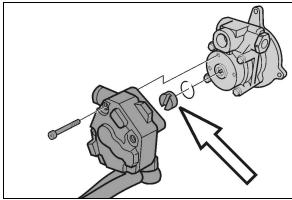


FIGURE 7: FUEL PUMP DRIVE AXLE

Install the fuel pump. Torque-tighten bolts to specification.

NOTE

Use a new sealing ring. Check that the fuel pump drive axle sits correctly in the power steering pump.

 Using the hand primer on the fuel filter housing, prime the fuel system. Start the engine and let run for 5 minutes.
 Make sure that there are no leaks.

2. FUEL LINES AND FLEXIBLE HOSES

Make a visual check for fuel leaks at all enginemounted fuel lines and connections and at the fuel tank suction and return lines. Since fuel tanks are susceptible to road hazards, leaks in this area may best be detected by checking for accumulation of fuel under the tank. Engine performance and auxiliary equipment is greatly dependent on the ability of flexible hoses to transfer lubricating oil, air, coolant and fuel oil. Diligent maintenance of hoses is an important step in ensuring efficient, economical and safe operation of engine and related equipment.



MAINTENANCE

Check hoses daily as part of the pre-start-up inspection. Examine hoses for leaks and check all fittings, clamps and ties carefully. Make sure that the hoses are not resting on or touching shafts, couplings, and heated surfaces, including exhaust manifolds, any sharp edges or other obviously hazardous areas.

Since all machinery vibrates and moves to a certain extent, clamps and ties can fatigue with age. To ensure continued proper support, inspect fasteners frequently and tighten or replace them as necessary. Refer to the schematic diagram of the fuel system (Fig. 1).



CAUTION

Oil level above the dipstick full mark or a decrease in lube oil consumption may indicate internal fuel leaks. Check oil level frequently.

3. FUEL TANK

X3-45 coaches are equipped with a high-density cross-link polyethylene fuel tank with a capacity of 208 US gallons (787 liters).

The fuel filling access door is located on the R.H. side of vehicle providing easy fuel filling.

A pressure relief valve on the fuel tank connection-panel relieves high-pressure buildup and an overflow tube allows offset air in the tank to escape during filling. For 95% of the tank volume, 5% of tank inside space is kept filled with air with no exit opening, allowing for a fuel

expansion safety margin. A drain plug, accessible from under the vehicle, is fitted at the bottom of the tank.

3.1 TANK REMOVAL



DANGER

Park vehicle safely, apply parking brake, stop engine and set battery master switch(es) to the OFF position prior to working on the vehicle.

Before working under an air-suspended vehicle, it is strongly recommended to support the body at the recommended jacking points.

NOTE

Before removal, the fuel tank should be completely drained by unscrewing the drain plug. Ensure that the container used has a capacity equal to the amount of fuel remaining in the tank.

- Open the condenser door and remove the fuel tank access panel. The rear baggage compartment fuel tank access panel may also be removed to facilitate access to components.
- Unscrew clamps retaining R.H. side filler tube to fuel tank and filler neck. Disconnect tube and remove it.
- 3. If applicable, unscrew preheater supply line, preheater return line, auxiliary return line and/or auxiliary return line from fuel tank connection-panel.
- 4. Unscrew engine supply and return lines from fuel tank connection-panel, identify them for reinstallation.
- 5. Disconnect electrical wiring from tank on connection plate.



DANGER

Before removing the bolts securing the tank support to the frame, make sure the tank is supported adequately. Failure to do so could result in injury as well as damage to the tank.

6. From under the vehicle, on R.H. side, unscrew the 4 bolts (2 in front, 2 in back) retaining the tank support to the frame.

- 7. From under the vehicle, on the L.H. side, unscrew the 2 bolts (1 in front, 1 in back) retaining the tank support to the frame.
- 8. Carefully remove tank from under the vehicle.

3.2 TANK INSTALLATION

To install tank, simply reverse the "Tank Removal" procedure.

3.3 FUEL TANK VERIFICATION

Inspect fuel tank from under vehicle for leaks or fuel traces. If a leak is detected, repair immediately as per "Polyethylene Fuel Tank Repair" in this section.



DANGER

Park vehicle safely, apply parking brake, stop engine and set battery master switch(es) to the OFF position prior to working on the vehicle.

Before working under an air-suspended vehicle, it is strongly recommended to support the body at the recommended jacking points.

3.4 POLYETHYLENE FUEL TANK REPAIR

NOTE

Fuel level must be lower than perforation to carry out this procedure.



DANGER

Park vehicle safely, apply parking brake, stop engine and set battery master switch(es) to the OFF position prior to working on the vehicle.

- 1. Locate perforation on fuel tank.
- 2. If necessary, remove fuel tank as per instructions in this section.
- 3. Drill perforation with a 23/64" bit. Make sure drill hole is perfectly round.
- 4. Insert a screw (Prevost #500196) and a washer (Prevost #5001244) into anchor nut (Prevost #500331).
- 5. Place assembly in drill hole. Tighten screw by 10 complete turns. Refer to Fig. 9.
- 6. Apply sealant on head plug (Prevost #507300) and seal hole with the head plug.


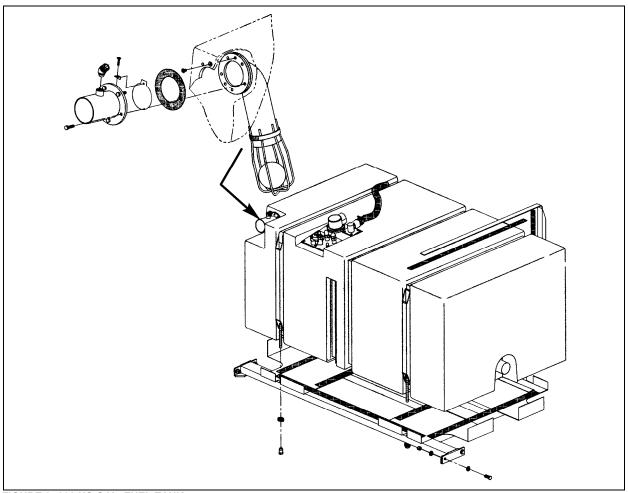


FIGURE 8: 208 US GAL. FUEL TANK



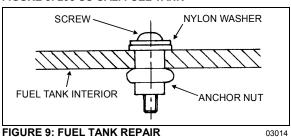

4. FUEL SPECIFICATIONS

The quality of fuel oil used for high-speed diesel engine operation is a very important factor in obtaining satisfactory engine performance, long engine life and acceptable exhaust emission levels.

The U.S. Environmental Protection Agency (EPA) has issued new standards to improve air quality by significantly reducing emissions through a combination of cleaner-burning diesel engines and vehicles.

To meet EPA standards, the petroleum industry produces **Ultra Low Sulfur Diesel** (ULSD) fuel, also referred to as S15, containing a maximum 15ppm (parts-per-million) sulfur.

On-highway diesel engines meeting 2010 emission regulations are designed to operate **ONLY** with ULSD fuel. ULSD fuel will enable the use of cleaner technology diesel engines and vehicles with advanced emissions control devices, resulting in significantly improved air quality.

4.1 FUEL TYPE

EPA-10 engines like the Volvo D13 are designed to run on **Ultra Low Sulfur Diesel** (ULSD) fuel, which can contain no more than 15 ppm sulfur.

Fuel used must meet engine manufacturer's specification. Refer to Volvo engine specifications.



CAUTION

ULSD fuel is necessary to avoid fouling the engine's Exhaust Aftertreatment System. Improper fuel use will reduce the efficiency of the engine's Aftertreatment System and may permanently damage the system.



CAUTION

Owners of 2010 and later model year onhighway diesel engine must refuel only with ULSD fuel.

NOTE

Burning Low Sulfur Diesel fuel (instead of ULSD fuel) in 2010 and later model year diesel engines is illegal and punishable with civil penalties.

NOTE

Engine and vehicle manufacturers expect ULSD fuel to be fully compatible with the existing fleet, including 2006 and earlier model year vehicles. In some instances, the introduction of ULSD fuel to older vehicles may affect fuel system components or loosen deposits in fuel tanks. As part of a good maintenance program, owners and operators of existing cars, trucks and buses are encouraged to monitor their diesel-powered vehicles closely for potential fuel system leaks or premature fuel filter plugging during the change-over to ULSD fuel.

NOTE

Like Low Sulfur Diesel fuel, ULSD fuel requires good lubricity and corrosion inhibitors to prevent unacceptable engine wear. As necessary, additives to increase lubricity and to inhibit corrosion will be added to ULSD fuel **prior** to its retail sale.

4.2 BLENDING

Only ultra low sulfur kerosene – No.1 diesel with no more than 15ppm sulfur may be blended with ULSD fuel to improve cold weather performance. With so many kerosene formulations on the market, care must be taken

to select kerosene with a maximum of 15ppm sulfur.

Blend rates remain the same as with Low Sulfur Diesel fuel.

4.3 BIODIESEL FUELS

ULSD-B5 biodiesel may be used. B5 tells you the percentage of biodiesel mixed in with ULSD. B5 is 5% biodiesel and 95% ULSD.

Fuel used must meet engine manufacturer's specification for biodiesel fuel. Refer to Volvo engine specifications.

Biodiesel fuels are alkyl esters of long chain fatty acids derived from renewable resources. Volvo highly recommends biodiesel fuels made from soybean or rapeseed oil through the proper transesterification reaction process. Other feedstock source of biodiesel fuels such as animal fat and used cooking oils are not recommended by Volvo. Failures attributed to the use of biodiesel fuel will not be covered by Volvo or Prevost product warranty. Also, any engine performance problem related to the use of biodiesel fuel would not be recognized nor considered as Volvo or Prevost's responsibility.

5. AIR CLEANER (DRY TYPE)

The vehicle is equipped with a dry-type replaceable element air cleaner, located in the engine compartment. Access the air cleaner through the engine R.H. side door. Engine air enters the air cleaner through (1) one intake duct located just above engine R.H. side door. It then flows through a pre-cleaner and finally through the air cleaner. The pre-cleaner removes dust and moisture by means of a discharge tube at the bottom of the element. It is in series with a replaceable impregnated paper filter element (air cleaner).

5.1 PRE-CLEANER SERVICING



MAINTENANCE

The pre-cleaner is designed to be self-cleaning; however, it should be inspected and any accumulated foreign material removed during the periodic replacement of the impregnated paper filter element.

5.2 AIR CLEANER SERVICING

Stop the engine, open the R.H. side engine compartment door, and loosen the wing nut retaining the air cleaner element to the air cleaner. Remove the element by pulling on the handle in the center of the air cleaner element.

Install cleaner element as follows:

- 1. Inspect the gasket-sealing surface inside the air cleaner. It must be smooth, flat and clean;
- 2. Install the air cleaner element;
- 3. Make sure that the element seals securely;
- 4. Inspect element cover gasket and replace if necessary.

Whenever it becomes necessary to remove the air cleaner assembly (dry type) for maintenance or other repair in this area, great care should be taken when installing air cleaner assembly.

The pre-filter should be installed snugly in the air duct and clamped tightly to the air cleaner inlet to prevent any dust infiltration into the air cleaner.

5.3 GENERAL RECOMMENDATIONS

The following maintenance procedures will ensure efficient air cleaner operation:

- 1. Keep the air cleaner housing tight on the air intake pipe;
- 2. Make sure the correct filters are used for replacement;
- 3. Keep the air cleaner properly assembled so the joints are air-tight;
- 4. Immediately repair any damage to the air cleaner or related parts;
- Inspect, clean or replace the air cleaner or elements as operating conditions warrant. Whenever an element has been removed from the air cleaner housing the inside surface of the housing must be cleaned with a soft clean cloth;
- Periodically inspect the entire system. Dustladen air can pass through an almost invisible crack or opening which may eventually cause damage to an engine;
- 7. Never operate the engine without an element in the air cleaner assembly;

CAUTION

Do not ignore the Warning given by the air restriction indicator. This could result in serious engine damage.

8. Store new elements in a closed area free from dust and possible damage.

5.4 AIR CLEANER RESTRICTION INDICATOR

A resettable restriction indicator may be installed on the engine air-intake duct, clearly visible from the rear engine compartment. The indicator monitors the vacuum level between the air filter and the engine. A red marker is displayed when the air filter is clogged and must be replaced. Reset by pressing on the indicator's extremity.

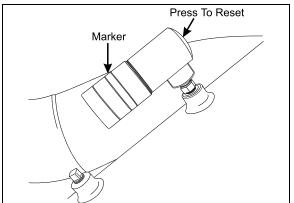


FIGURE 10: RESTRICTION INDICATOR

01052

6. FUEL PEDAL

The EFPA (Electronic Foot Pedal Assembly) connects the accelerator pedal to a potentiometer (a device that sends an electrical signal to the ECM, which varies in voltage, depending on how far down the pedal is depressed). The EFPA is installed in the space normally occupied by a mechanical foot pedal. It has maximum and minimum stops that are built into the unit during manufacturing.

6.1 FUEL PEDAL ADJUSTMENT

The EFPA contains a throttle position sensor that varies the electrical signal sent to the ECM. The sensor must be adjusted whenever an EFPA is serviced. In addition, the sensor should be adjusted any time codes 21 and 22 are flashed.

With the ignition "ON" and the proper diagnostic tool (DDR) (for information regarding the DDR, see "01 ENGINE" in this manual), check the throttle counts at idle and full throttle positions.

Proper pedal output should be 20/30 counts at idle and 200/235 at full throttle. If adjustment is necessary, remove the potentiometer retaining screws and rotate the potentiometer clockwise to increase counts or counterclockwise to decrease. When correct output is confirmed, tighten retaining screws.

6.2 POTENTIOMETER REPLACEMENT

- 1. Disconnect cable harness connector.
- 2. Loosen the two screws and remove potentiometer. Retain for re-assembly.
- 3. Discard potentiometer (Fig. 11).



CAUTION

Note the routing and clamping locations of the cable before disassembly. Proper cable routing and fastening is critical to the operation of this system. Marking the foot pedal assembly to record cable routing is recommended.

 Position new potentiometer. Press potentiometer onto the potentiometer shaft, matching cutouts in shaft to drive tangs of potentiometer. Apply hand pressure until potentiometer has bottomed out in housing.

- Reinstall screws (Fig. 11) and tighten just enough to secure potentiometer lightly. Tighten screws to 10 20 Lbf-in (1.13 2.26 Nm).
- 3. Reconnect electronic foot pedal assembly's cable harness to the ECM connector. If potentiometer calibration is necessary (see "FUEL PEDAL ADJUSTMENT" in this section).



CAUTION

Make sure the cable harness is routed correctly, and securely installed so that it does not become pinched, stretched, or otherwise damaged during vehicle operation.

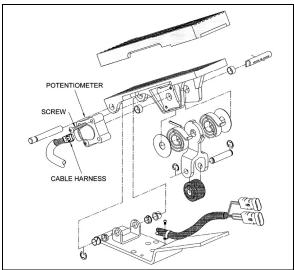


FIGURE 11: ELECTRONIC FOOT PEDAL ASSEMBLY 03035

7. SPECIFICATIONS

Primary Fuel Filter (Fuel/Water Separator) With Volvo D13 Engine

Part number	21380475
Filter torque	½-¾ turn after gasket contact
Secondary Fuel Filter With Volvo D13 Engine	
Part number	20972293
Filter torque	3 ₄ -1 turn after gasket contact
Fuel tank Capacity	
Standard (All vehicles)	208 US gallons (787 liters)
Air Cleaner	
Make	Nelson

Section 03: FUEL SYSTEM

Service Part No	7182 8N
Prevost number (element cartridge)	530197
Air Cleaner Restriction Indicator	
Make	Donaldson
Model	RBX00-2220
Indicates	at 20" (508 mm) of water
Prevost number	530161

SECTION 04: EXHAUST AND AFTERTREATMENT SYSTEM

CONTENTS

1.	EXH	IAUST AFTERTREATMENT SYSTEM OVERVIEW	. 2
	.1 .2	MAINTENANCE	
2.	DIE	SEL PARTICULATE FILTER (DPF)	. 3
2	2.1	DIESEL PARTICULATE FILTER (DPF) REMOVAL	. 4
3.	CAT	FALYTIC CONVERTER	. 4
	3.1 3.2	REMOVAL	
4.	DIF	FUSER ASSEMBLY	. 7
	.1 .2 .3	DIFFUSER ADJUSTMENT MAINTENANCE EXHAUST GAS COLLECTION ADAPTER	. 8
5.	DIE	SEL EXHAUST FLUID (DEF) TANK AND INJECTION SYSTEM	. 9
	5.1	PUMP ASSEMBLY FILTER ELEMENT REPLACEMENT	. 9
6.	AFT	ERTREATMENT FULE INJECTOR CLEANING	11
ILI	LUS	STRATIONS	
		: EXHAUST SYSTEM	
		: FLEXIBLE COUPLING	
		: TAKING DOC AND DPF APART	
		: CATALYTIC CONVERTER	
		: DIFFUSER ASSEMBLY': DIFFUSER POSITION ADJUSTMENT	
Fig	URE 8	S: DIFFUSER POSITION ADJUSTMENT	. 8
		1: DIFFUSER POSITION ADJUSTMENT	
		1: DEF TANK AND PUMP LOCATION	
		2: DIESEL EXHAUST FLUID (DEF) TANK AND PUMP ASSEMBLY ARRANGEMENT	

1. EXHAUST AFTERTREATMENT SYSTEM OVERVIEW

The technology behind clean emissions is through the immediate aftertreatment of engine exhaust. The process for reducing NOx via called Selective aftreatment is Catalytic Reduction (SCR). It requires a catalytic converter into which is injected Diesel Exhaust Fluid (DEF). The primary component of DEF is water; the active component is urea. Urea is a nitrogen compound that turns to ammonia when heated. When a urea-and-water solution is injected into the exhaust stream and passed over a catalyst, the urea reacts with the NOx to form nitrogen and water vapor - two clean and harmless components of the air we breathe. The aftertreatment system primary function is to capture and oxidize (regenerate) the particulate matter (soot) in the engine exhaust gases and to reduce NOx. To achieve this goal, the exhaust aftertreatment system is split into two main sections: the exhaust gases first enter the Diesel Oxidation Catalyst (DOC) and Diesel Particulate Filter (DPF) assembly to capture and regenerate the soot on a regular or passive basis, then the exhaust gases flow through the catalytic converter to reduce NOx to minimum level. Through constant monitoring of the exhaust gas temperature and the system back pressure, EMS is able to manage regeneration.

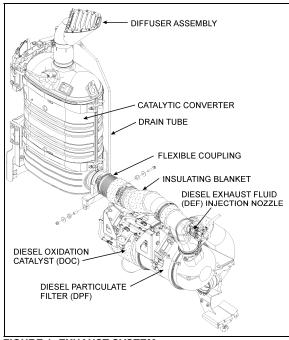


FIGURE 1: EXHAUST SYSTEM

The exhaust aftertreatment system is rubber mounted to the vehicle structure. This feature reduces the transmission of vibrations to the exhaust aftertreatment system thus resulting in extended life of the system, brackets and also noise reduction.

1.1 MAINTENANCE

Inspect the exhaust system periodically for restrictions and leaks. Figure 1 presents the major components of the exhaust system. Exhaust leaks are commonly the result of loose clamp bolts, corroded or punctured pipes. In addition to excessive noise, a leaking exhaust system could allow toxic gases to enter the vehicle. Damage to surrounding components from hot gases could result as well. Replace damaged or corroded exhaust components immediately.

Inspect the exhaust system as follows:

- At vehicle inspection intervals;
- Whenever a change is noticed in the sound of the exhaust system;
- When components close to the exhaust system get unnaturally dirty; and
- Whenever the exhaust system is damaged.

Replace damaged or corroded exhaust system components without delay.

When operating the engine in a service garage or in a closed area, the exhaust must be vented to the outside. Place the shop vent hose over the exhaust outlet pipe.



Avoid breathing exhaust gases since they contain carbon monoxide which is odorless and colorless but harmful. Carbon monoxide is a dangerous gas that can cause unconsciousness and can be lethal. If, at any time you suspect that exhaust fumes are entering the vehicle, locate and correct the cause(s) as soon as possible.

NOTE

The key to successful regeneration is high exhaust temperature for an extended period of time. For this reason, insulating blankets must remain permanently on the exhaust system.

If insulating blankets are removed from the system, the exhaust gases temperature may not be high enough to permit efficient particulate oxidation during passive regeneration, resulting in increased fuel consumption due to overuse of active or stationary regeneration.

1.2 FLEXIBLE COUPLING INSTALLATION

The flexible coupling contains a rigid interior pipe (Fig. 2). To allow appropriate flexibility once installed, be sure interior pipe is concentric to flexible part and that the flexible coupling is straight when installed. This piece of equipment handles vibration and thermal expansion.



CAUTION

Adequately support the exhaust system line. The load of the exhaust line **must not** be transferred to the turbocharger.

 


FIGURE 2: FLEXIBLE COUPLING

04022

2. DIESEL PARTICULATE FILTER (DPF)

Besides trapping soot, the DPF (Diesel Particulate Filter) also traps the ash that has been generated when additives in engine oil are burned. However, unlike soot, ash cannot be oxidized. The ash that accumulates in the filter will eventually cause an increase in exhaust back pressure. EMS will constantly monitor the ash accumulation and forecast the approximate time until DPF ash cleaning is required. This allows you the opportunity to plan for the DPF ash cleaning interval. If ash cleaning is not performed proactively, and the back pressure increases beyond the system limit, EMS will flag the amber warning light on the telltale panel. notifying the operator that an ash cleaning is required. Clean remanufactured DPF cartridge will be available through Prevost on an exchange basis. For most vehicle applications and duty cycle, this will occur after approximately 200,000-400,000 miles (320,000-640,000 km) of operation.

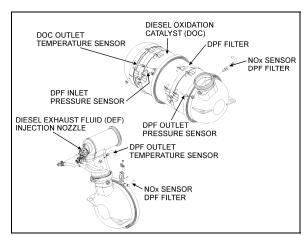


FIGURE 3: DIESEL OXIDATION CATALYST (DOC) & DIESEL PARTICULATE FILTER (DPF) ASSEMBLY04016



WARNING

HOT SURFACES

Keep yourself clear of hot Aftertreatment System surfaces, particularly during and after active or stationary regeneration. Hot surfaces can cause serious burns.

Make sure Aftertreatment System components are cold before handling.



WARNING

HOT EXHAUST

During stationary regeneration, exhaust gases temperature may get very hot at the diffuser outlet. Do not direct diffuser at combustible materials. Before initiating stationary regeneration, make sure that the diffuser outlet is clear of objects and that no one is working near the diffuser outlet. Stationary regenerations must be undertaken outdoors only.

Never initiate regeneration when exhaust gas collection system is in place.



WARNING

TOXICITY

Do not initiate a stationary regeneration in a closed area like a garage. Stationary regeneration must be undertaken outdoors only.

2.1 DIESEL PARTICULATE FILTER (DPF) REMOVAL

To remove the DPF, proceed as follows:



CAUTION

External and internal temperatures remain hot long after engine has been shutdown. Allow the Exhaust Aftertreatment System to cool before handling. Wear protective clothing and glove while servicing.

- 1. First, open the engine compartment doors;
- 2. Put insulating blanket aside;
- Disconnect pressure and temperature sensors;
- Support Diesel Oxidation Catalyst (DOC) and Diesel Particulate Filter (DPF) assembly;



CAUTION

HEAVY DEVICE

A suitable lifting or holding device is required. Properly support and attach lifting equipment to prevent the DOC and DPF assembly from falling when servicing.

- 5. Unfasten clamps holding DOC and DPF assembly;
- 6. Carefully lower DOC and DPF assembly;
- 7. To make sure components are reinstalled in the same position, mark position of DOC, DPF and clamps in relation with one another before taking apart;



CAUTION

FRAGILE - HANDLE WITH CARE

Use extreme care when handling DPF cartridge as it could be damaged or destroyed by dropping or sudden impact.

Clean remanufactured DPF cartridge will be available on an exchange basis. For this reason, it is very important to maintain the cartridge in perfect condition. Damaged cartridge may not be refunded.

8. Also replace clamps and gaskets when replacing DPF;

NOTE

When replacing the DPF cartridge, refer to the specifications on the DPF attached tag for proper replacement DPF selection.

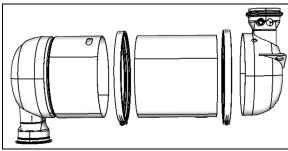


FIGURE 4: TAKING DOC AND DPF APART

- Always put DOC and DPF back together again in a vertical position to facilitate gaskets positioning;
- 10. Torque clamps to 160 Lb-in (18 Nm) by hand;



CAUTION

Always torque clamps by hand.

- With a rubber mallet, hit clamps forcefully around circumference to make sure gasket is fully seated;
- 12. Support Diesel Oxidation Catalyst (DOC) and Diesel Particulate Filter (DPF) assembly during reinstallation;
- 13. Reconnect pressure and temperature sensors:
- 14. Fasten clamps holding DOC and DPF assembly;
- 15. Put insulating blanket back.

3. CATALYTIC CONVERTER

In the first instance, the catalytic converter of the Selective Catalytic Reduction (SCR) does not need any maintenance. Unless an accident or damage occurs in the vicinity of the engine compartment; the catalytic converter will not have to be replaced.

However if the catalytic converter must be replaced, use one of the two following procedures:

3.1 REMOVAL

Procedure #1

Radiator must be removed in order to lower the catalytic converter for replacement.

- Set the starter selector switch to the OFF position.
- Shut off the heater line shut-off valves.
- Using the quick-connect drain hose, drain the engine cooling system. Refer to Section 05, COOLING under "DRAINING COOLING SYSTEM".



CAUTION

Tag hoses and cables for identification before disconnecting in order to facilitate reinstallation. Plug all openings to prevent dirt from entering the system.

 Disconnect and remove section of coolant pipe assembly mounted between the radiator outlet and the water pump inlet.

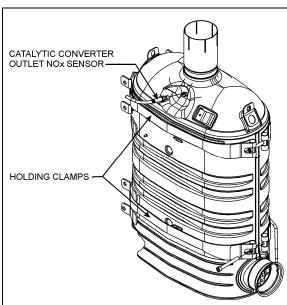


FIGURE 5: CATALYTIC CONVERTER

- Disconnect and remove a section of coolant pipe assembly mounted between the thermostat housing and the radiator inlet.
- Disconnect the electric fan-clutch connector located near the cooling fan right angle gearbox.

- Disconnect and remove the air intake duct mounted between the turbocharger outlet and the air cooler inlet.
- Open radiator door. Unfasten bolts and screws fixing radiator sealing frame.
- Remove radiator and air cooler assembly.



WARNING

Due to the heavy load of the radiator assembly, it must be adequately supported before attempting to remove it.

- Safely support catalytic converter from the top.
- Disconnect catalytic converter outlet NOx sensor.
- Remove clamps holding catalytic converter then lower.
- Remove or disconnect any piece of equipment or component that might be in the way or that might prevent removing the catalytic converter.

Procedure # 2

- Set the starter selector switch to the OFF position.
- Shut off the heater line shut-off valves.
- Remove DOC and DPF assembly (Refer to paragraph 2.1 in this Section).
- Remove pipe connecting DOC & DPF assembly to catalytic converter.
- Using the quick-connect drain hose, drain the engine cooling system. Refer to Section 05, COOLING under "DRAINING COOLING SYSTEM".



CAUTION

Tag hoses and cables for identification before disconnecting in order to facilitate reinstallation. Plug all openings to prevent dirt from entering the system.

 Disconnect and remove section of coolant pipe assembly mounted between the radiator outlet and the water pump inlet.

Section 04: EXHAUST AND AFTERTREATMENT SYSTEM


- Disconnect and remove a section of coolant pipe assembly mounted between the thermostat housing and the radiator inlet.
- Disconnect and remove a section of air intake duct mounted between the air cooler outlet and the engine.
- Remove coolant surge tank.
- Release tension from drive belt (Refer to paragraph 12.1 and 15.1 in Section 05: Cooling System).
- Cut cable ties and disconnect electrical connector from fan clutch. Remove fan drive shaft fasteners at the gear box.
- Remove radiator fan drive mechanism support.
- Safely support catalytic converter from the top.
- Disconnect catalytic converter outlet NOx sensor.
- Remove clamps holding catalytic converter then lower.
- Remove or disconnect any piece of equipment or component that might be in the way or that might prevent removing the catalytic converter.

3.2 ASSEMBLING CATALYTIC CONVERTER


Before removing

 Mark, with a vertical line the angular position of the lower (both sides) and upper clamps with regard to the clamps support located on the catalytic converter.



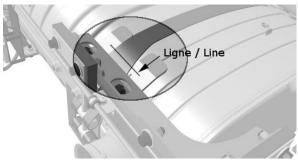


Upper

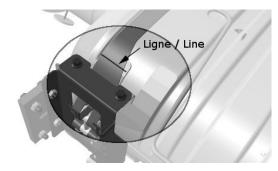


 Mark, with a vertical line the central position of the lower and upper clamps with regard to the emboss located at the bottom and at the top of the catalytic converter.

Lower

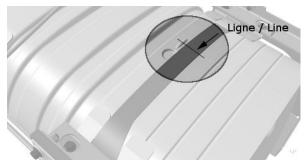


Upper

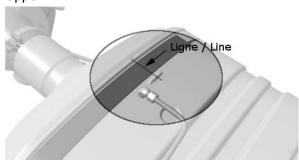


Assembling

 Position the upper clamps above the upper emboss and the lower clamps below the lower emboss of the catalytic converter.


Lower

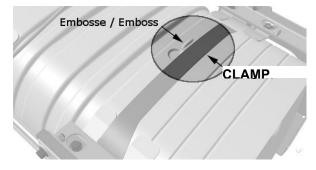

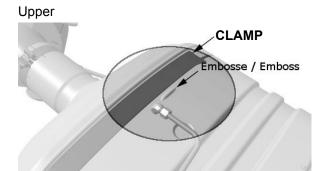


 Using the lines made earlier, line up the lower and upper clamps with regard to the emboss of the converter and afterward, line up the lines made earlier on the clamps with regard to the clamp supports on the catalytic converter.




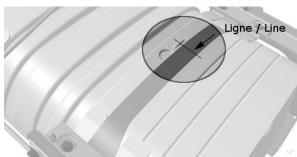


Upper

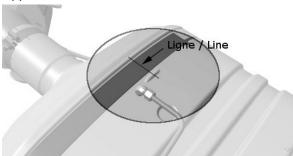


Lower

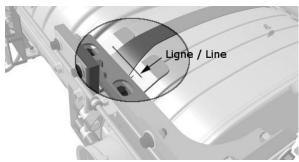

Upper

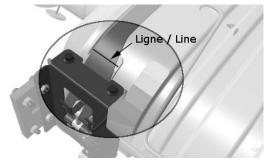

 Before tightening the parts, make sure that the catalytic converter lower support is well centered with the exhaust inlet of the catalytic converter.

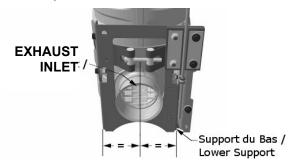

 While tightening the bolts, keep in mind to respect the alignment of the parts and keep the lower support as centered as possible with the catalytic converter exhaust inlet.

4. DIFFUSER ASSEMBLY

During stationary regeneration, exhaust gases temperature may get very hot at the DPF outlet. The diffuser decreases the exhaust gasses temperature by about half approximately, at 6 inches above the diffuser. The diffuser is an important component of the exhaust system and must remain on the vehicle at all times. Operating the vehicle without the diffuser may seriously damage the vehicle.

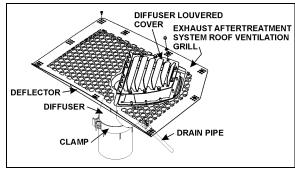


FIGURE 6: DIFFUSER ASSEMBLY

04014

4.1 DIFFUSER ADJUSTMENT

Should an adjustment of the diffuser position be necessary, first remove the exhaust aftertreatment roof ventilation grill.



CAUTION

To prevent paint damage and fiberglass overheating caused by hot exhaust gases, the diffuser louvered cover must be flush with the roof surface or may not exceed the roof surface more than ½ inch (6mm).



CAUTION

Tighten clamps properly in order to prevent any movement of the diffuser assembly. An impact wrench is necessary.

1. Loosen the clamp securing the diffuser assembly to the catalytic converter.

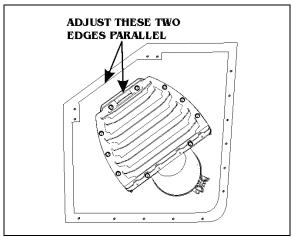


FIGURE 7: DIFFUSER POSITION ADJUSTMENT 04015 1

- For proper angular position, make sure that the two edges shown on figure 7 are parallel with each other.
- 3. Using a straightedge, adjust the diffuser assembly level. The top surface of the warning plate fixed on the diffuser louvered cover must be flush with the <u>roof surface</u> (fig.8). It may exceed about 1/4in (6mm). Place the straightedge as shown on figure 8.
- 4. Tighten the clamp securing the diffuser assembly to the catalytic converter.

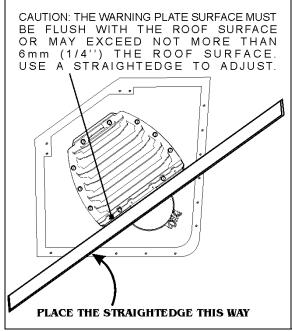


FIGURE 8: DIFFUSER POSITION ADJUSTMENT 04015_2

 Reinstall the exhaust aftertreatment system roof ventilation grill and deflector. Put a small quantity of Sika 221 on screws (fig.9).

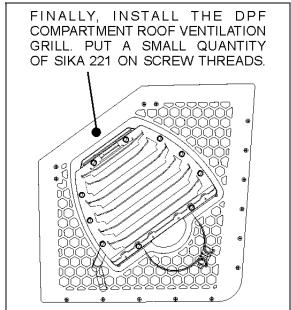


FIGURE 9: DIFFUSER POSITION ADJUSTMENT 04015 3

4.2 MAINTENANCE

At vehicle inspection intervals, inspect the diffuser assembly as follows:

Inspect diffuser grille for stress cracking;

- Check for presence of foreign matter and debris inside the diffuser housing, remove and clean if applicable;
- Check for proper functioning of the rain cap inside the diffuser housing, make sure that it moves freely;
- Make sure that the water drain tube is not clogged. Pour a cup of water into the diffuser housing and assure that all the water is drained at once at the other end of the drain tube. If tube is clogged, remove tube and blow compressed air inside, in reverse flow;
- Check that the warning plate "THIS DIFFUSER SURFACE MUST BE FLUSH WITH THE ROOF SURFACE" is still in place.

4.3 EXHAUST GAS COLLECTION ADAPTER

A diffuser adapter (Prevost #040710) is available through Prevost Parts to permit connection with current exhaust gas collecting system.



CAUTION

To prevent paint damage and fiberglass overheating caused by hot exhaust gas leaks or back drafts that other collection device may produce, always use Prevost adapter #040710.

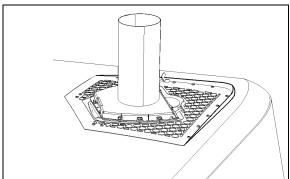


FIGURE 10: EXHAUST GAS COLLECTION ADAPTER04020

5. DIESEL EXHAUST FLUID (DEF) TANK AND INJECTION SYSTEM

The DEF tank and injection system control unit continuously vary the amount of DEF injected in response to the engine's current load conditions.

Diesel Exhaust Fluid (DEF) is stored in a 60 liters plastic tank located aft of the condenser compartment.



MAINTENANCE

Drain and clean DEF tank, also clean DEF tank filler neck filter every 175,000 miles (280 000 km) or once a year, whichever comes first.

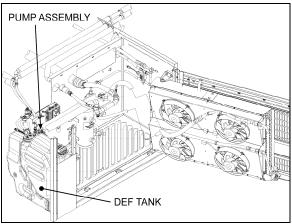


FIGURE 11: DEF TANK AND PUMP LOCATION

A pump located beside the DEF tank is used to pressurize the system and deliver the fluid.

A heating coil located inside the tank use engine coolant to keep the DEF warm during cold season.


DEF is injected into the exhaust gases through an injection nozzle located between the DPF and the catalytic converter (refer to figure 1).

In the catalytic converter, nitrogen oxides are transformed into harmless nitrogen gas and water.

The system notifies the driver when it is time to top up with DEF.

5.1 PUMP ASSEMBLY FILTER ELEMENT REPLACEMENT

• Using a 27 mm wrench, remove filter cover.

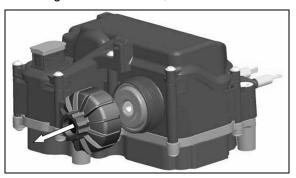




CAUTION

Contamination or damage of the sealing surface on the housing is not acceptable.

Remove the equalizing element and the filter element.

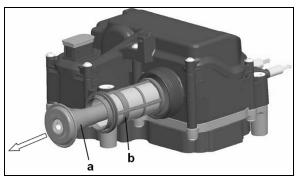






CAUTION

Protect filter area in the housing from contamination!.

Replace the filter element and the equalizing element.

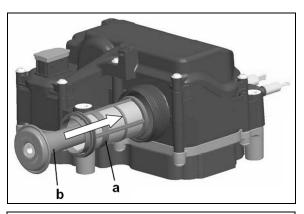




CAUTION

The sealing surfaces on the housing must be clean. No contamination or particles acceptable.

Install filter cover. Torque to 22.5 ± 2.5 Nm.

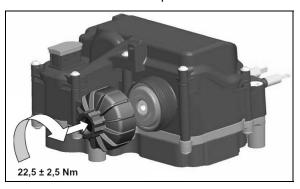



CAUTION

It must be checked if there are cracks around the area of the filter cover. No cracks in the material are allowed. If there are cracks in the housing, the entire Supply Module must be replaced! If there are cracks in the filter cover, the filter cover must be replaced.



MAINTENANCE

Replace pump assembly filter element every 150,000 miles (240 000 km) or every three years, whichever comes first.

5.2 FILLER NECK FILTER

If the DEF tank filler neck filter (Figure 12) becomes obstructed with foreign matter and debris, remove and clean filter as follows;

- 1. Remove filler neck cap.
- Release the retaining tabs and remove filler neck filter from the filler neck (Figure 1). Discard the old seal.
- 3. Clean and reinstall filter into DEF tank filler neck with new seal.

Insert until the retaining tabs snap into the filler neck.

6. AFTERTREATMENT FULE INJECTOR CLEANING

Proper functioning of the aftertreatment fuel injector a.k.a. aftertreatment hydrocarbon injector (AHI) is required in order to obtain efficient regeneration process of the DPF. Clogged aftertreatment fuel injector will result in clogged DPF.

In addition to the activation of the CHECK telltale, emission of diagnostic troubleshooting codes (DTC) by the engine ECM (MID128) will indicate malfunction of the aftertreatment system and/or aftertreatment fuel injector. DTC may be accessed through the Driver Information Display. Select DIAGNOSTICS menu then FAULT DIAGNOSTICS and ENGINE ECU submenus.

In the Driver Information Display, you can check the status of the aftertreatment system. Select AFTERTREATMENT menu then ATS STATUS. Then check the DPF soot level with the SOOT LEVEL GAUGE.



MAINTENANCE

Clean the aftertreatment fuel injector every 150 000 miles (240 000 km).

HAVE THE AFTERTREATMENT FUEL INJECTOR CLEANED AT YOUR PREVOST SERVICE CENTER.

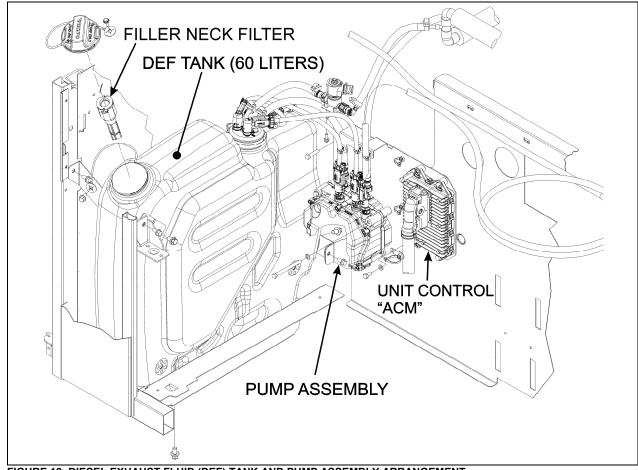


FIGURE 12: DIESEL EXHAUST FLUID (DEF) TANK AND PUMP ASSEMBLY ARRANGEMENT

SECTION 05: COOLING SYSTEM

CONTENTS

1.	DESCRIPTION	3
2.	MAINTENANCE	4
	2.1 GENERAL RECOMMENDATIONS	4
:	2.2 MTA VEHICLES EQUIPPED WITH VOLVO D13 ENGINE	4
3.	HOSES	4
;	3.1 CONSTANT-TORQUE HOSE CLAMPS ON COOLANT LINES -VOLVO D13	
	3.1.1 Installation	
	3.1.2 Maintenance	5
	3.2.1 Maintenance	
4.	THERMOSTAT OPERATION	6
	4.1 THERMOSTAT REPLACEMENT	6
	4.2 CHECKING THERMOSTAT	6
5.	COOLANT	6
	5.1 COOLANT LEVEL VERIFICATION	6
	5.2 COOLANT LEVEL SENSOR	
	5.3 THAWING COOLING SYSTEM5.4 COOLING SYSTEM RECOMMENDATIONS.	
	 5.4 COOLING SYSTEM RECOMMENDATIONS. 5.5 COOLANT RECOMMENDATIONS FOR MTA COACHES EQUIPPED WITH VOLVO D13 I 	
6.		
Ο.	DIVARIANG COOLING 3131 LW	
7.	FILLING COOLING SYSTEM	9
R	FLUSHING	q
	8.1 COOLING SYSTEM DESCALERS	
	8.2 REVERSE FLUSHING	
9.		
J .	SI IN-ON GOODANT FILTER	
10). RADIATOR	11
	10.1 MAINTENANCE	
	10.2 RADIATOR REMOVAL & INSTALLATION	
11	1. CHARGE AIR COOLER LEAKAGE	14
12	2. COOLING FAN DRIVE MECHANISM	14
	12.1 DRIVE PULLEY AND UNIVERSAL JOINT SHAFT	14
	12.2 IDLER REPLACEMENT	
13	3. VARIABLE SPEED COOLING FAN	15
	13.1 LOCKING RADIATOR FAN FOR EMERGENCY OPERATION	16
	13.1.1 Electrical Locking	
	13.1.2 Mechanical Locking	16
	13.1.2 Mechanical Locking	16 16
	13.1.2 Mechanical Locking	16 16 17

Section 05: COOLING SYSTEM

14.1		
14.2	.2 OIL CHANGE	
15.	COOLING FAN DRIVE BELT	18
15.1	.1 MOUNTING THE DRIVE BELT	18
16.	SPECIFICATIONS	19
ILLU	JSTRATIONS	
	RE 1: COOLANT SURGE TANK	
	RE 2: COOLANT FLOW TO RADIATOR (VOLVO D13)	
	RE 3: CONSTANT-TORQUE CLAMP	
	RE 4: CHARGE AIR COOLER HOSE CLAMPS	
	RE 5: VOLVO D13 THERMOSTAT HOUSING	• • • • • • • • • • • • • • • • • • • •
	RE 6: LOCATION OF HEATER LINE SHUT-OFF VALVES IN ENGINE COMPARTMENT	
	RE 7: EXTRACTING COOLANT	
	RE 8: COOLANT FILTER (VOLVO D13)	
	RE 9: RADIATOR DRAIN PLUG	
	RE 10: ACCESS PANEL (TYPICAL)	
	RE 11: RADIATOR SEALING FRAME	
	RE 12: RADIATOR HOSE CLAMPS	
	RE 13: CHARGE AIR COOLER HOSE CLAMPS	
	RE 14: UPPER SUPPORT BRACKET & TUBE PROTECTOR	
	RE 15: RADIATOR ASSEMBLY LOWER MOUNTING FASTENERS	
	RE 16: DISCONNECTING FAN DRIVE SHAFT	
	RE 17: POSITIONING FORKLIFT	
	RE 18: REMOVING FASTENERS	
	RE 19: REMOVING UPPER FAN DRIVE SUPPORT BRACKET	
	RE 20: REMOVING FAN SHROUD FROM RADIATOR	
	RE 21: COOLING FAN DRIVE MECHANISM	
	RE 22: TIGHTENING SPECIFICATION	
	RE 23: TIGHTENING SPECIFICATION (VOLVO D13 ENGINE)	
	RE 24: IDLER MOUNTED ON THE CAST ALUMINUM SUPPORT	
	RE 25: MECHANICAL LOCKING	
	RE 26: RADIATOR FAN MOUNTING BOLTS	
	RE 27: RIGHT ANGLE GEARBOX	
	RE 28: RIGHT ANGLE GEARBOX MOUNTING	
FIGURI	RE 29: DRIVE BELT ROUTING (VOLVO D13 ENGINE)	18

1. DESCRIPTION

A radiator and thermo-modulated fan are used to effectively dissipate the heat generated by the engine. A centrifugal-type water pump is used to circulate the engine coolant.

One full blocking-type thermostat is used in the water outlet passage to control the flow of coolant, providing fast engine warm-up and regulating coolant temperature.

The engine coolant is drawn from the lower portion of the radiator by the water pump and is forced through the transmission cooler before going through the oil cooler and into the cylinder block.

From the cylinder block, the coolant passes up through the cylinder head and, when the engine is at normal operating temperature, it goes through the thermostat housing and into the upper portion of the radiator. The coolant then passes through a series of tubes where its heat is dissipated by air streams created by the revolving fan and the motion of the vehicle.

Upon starting a cold engine or when the coolant is below normal operating temperature, the closed thermostat directs coolant flow from the thermostat housing through the by-pass tube to the water pump. Coolant is recirculated through the engine to aid engine warm up.

When the thermostat opening temperature is reached, coolant flow is divided between the radiator inlet and the by-pass tube. When the thermostat is completely open, all of the coolant flow is to the radiator inlet.

The cooling system is filled through a pressure & filler cap on the surge tank (Fig. 1), the cap is also used to maintain pressure within the system. When system exceeds normal pressure rating (14 psi - 96.53 kPa), the cap releases air and if necessary, coolant through the overflow tube (Fig. 1). The thermostat is located in the housing bolted to the engine on the L.H. side.

The engine cooling system also provides hot coolant fluid for the vehicle heating system. Refer to section 22, ""HEATING AND AIR CONDITIONING" in this manual for information relating to heating system water circulation.

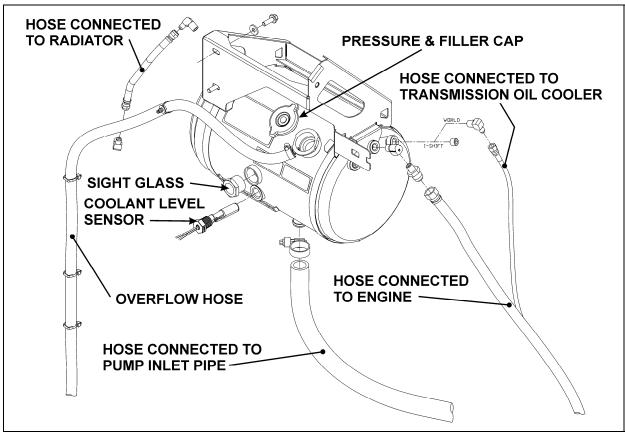


FIGURE 1: COOLANT SURGE TANK 05132

2. MAINTENANCE

2.1 GENERAL RECOMMENDATIONS

A systematic routine inspection of cooling system components is essential to ensure maximum engine and heating system efficiency.

- Check coolant level in the surge tank daily, and correct if required. Test antifreeze strength.
- Check belts for proper tension; adjust as necessary and replace any frayed or badly worn belts.
- Check radiator cores for leaks and make sure the cores are not clogged with dirt or insects. To avoid damaging the fins, clean cores with a low-pressure air hose. Steam clean if required.
- Inspect the water pump operation. A leaky pump sucks in air, increasing corrosion.
- Repair all leaks promptly. Unrepaired leaks can lead to trouble. Inspect and tighten radiator mounts periodically. Test and replace thermostat regularly.

NOTE

In order to ensure the integrity of the system, it is recommended that a periodic cooling system pressure check be made. Pressurize the cooling system to 103-138 kPa (15-20 psi) using Radiator and Cooling System Tester, J24460-1. Do not exceed 138 kPa (20 psi).

Any measurable drop in pressure may indicate a leak. Whenever the oil pan is removed, the cooling system should be pressure checked as a means of identifying any incipient coolant leaks. Make sure the cause of the internal leak has been corrected before flushing the contaminated system.

Leaks at the thermostat housing hose connections may be caused by deformation of connections or by rough surfaces on the castings of the hose mounting surfaces. It is recommended that "Dow Corning RTV-102 Compound" or any equivalent product be applied on cast surfaces prior to hose installation.



CAUTION

Castings should be clean and free of oil and grease before applying compound. No other sealer should be used with RTV-102 compound.

2.2 MTA VEHICLES EQUIPPED WITH VOLVO D13 ENGINE

NOTE

For additional information concerning Volvo D13 engine components or engine-related components, consult Volvo Trucks Canada or Volvo Trucks North America Web Site under: Parts & Service. On Volvo web site, you will find detailed service procedures for parts replacement, repair and maintenance.



MAINTENANCE

Drain, flush, thoroughly clean and refill the system with Fleet Charge 50/50 Fully Formulated Coolant every two years or every 250,000 miles (400 000 km), whichever comes first. Change the coolant filter every 50,000 miles (80 000 km. When using Fleet Charge 50/50, use a filter that contains Supplemental Coolant Additives (SCA).

3. HOSES

Rotten, swollen, and worn out hoses or loose connections are frequent causes of cooling system problems.

Serious overheating is often caused by an old hose collapsing or from rotten rubber shedding from hoses and clogging the coolant passages.

Connections should be inspected periodically and hose clamps tightened. Replace any hose found to be cracked or swollen.

When installing a new hose, clean pipe connections and apply a thin layer of a non-hardening sealing compound. Replace worn out clamps or clamps that pinch hoses.

3.1 CONSTANT-TORQUE HOSE CLAMPS ON COOLANT LINES -VOLVO D13

All hose clamps of 1 3/8" ID and over, used on the heating and cooling systems, are of the "Constant-torque" type. These clamps are worm-driven, made of stainless steel, and supplied with a series of Belleville spring washers. They also feature an extended integral liner that covers the band slots to protect soft/silicone hoses from damage, and help maintain consistent sealing pressure.

This type of clamp is designed to automatically adjust its diameter to compensate for the normal expansion/contraction of a hose and metal connection that occurs during vehicle operation and shutdown. The constant-torque clamp virtually eliminates coolant losses due to "Cold flow" leakage and greatly minimizes clamp maintenance.

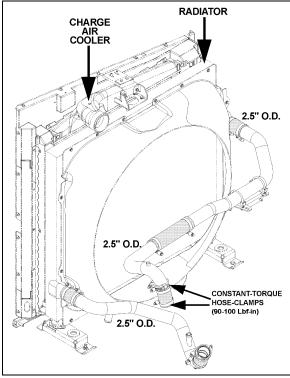


FIGURE 2: COOLANT FLOW TO RADIATOR (VOLVO D13)

3.1.1 Installation

A torque wrench should be used for proper installation. The recommended torque is 90 to 100 lbf-in. (10 to 11 Nm). The Belleville spring washer stacks should be nearly collapsed flat and the screw tip should extend ½" (6 mm) beyond the housing (Fig. 3).



CAUTION

The hose clamps will break if over-torqued. Do not over-tighten, especially during cold weather when hose has contracted.

 


FIGURE 3: CONSTANT-TORQUE CLAMP

05037

3.1.2 Maintenance

The constant-torque clamps contain a "Visual torque check" feature. When the tip of the screw is extending ¼" (6 mm) out of the housing, the clamp is properly installed and maintains a leak-proof connection. Since the constant-torque clamp automatically adjusts to keep a consistent sealing pressure, there is no need to re-torque hose clamps on a regular basis. During vehicle operation and shutdown, the screw tip will adjust according to the temperature and pressure changes.

Checking for proper torque should be done at room temperature.

3.2 CONSTANT-TORQUE HOSE CLAMPS ON CHARGE AIR COOLER (CAC)

If for any reason such as an accident, hose clamps need to be changed; install and tighten hose clamps to 10±1 lbf-ft (dry) (Fig. 4).



CAUTION

The hose clamps will break if over-tighten. Do not over-tighten, especially during cold weather when hose has contracted.

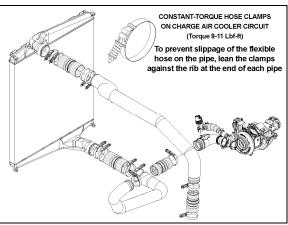


FIGURE 4: CHARGE AIR COOLER HOSE CLAMPS

3.2.1 Maintenance

Since the constant-torque clamp automatically adjusts to keep a consistent sealing pressure, there is no need to retorque hose clamps on a regular basis. During vehicle operation and shutdown, the screw tip will adjust according to the temperature and pressure changes.

Checking for proper torque should be done at room temperature.

4. THERMOSTAT OPERATION

4.1 THERMOSTAT REPLACEMENT

- 1. Drain the cooling system.
- Remove the bolts, the thermostat housing and the thermostat. Carefully clean the thermostat seat and all cylinder head-tothermostat housing mating surfaces.

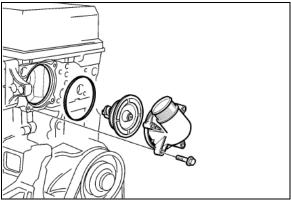


FIGURE 5: VOLVO D13 THERMOSTAT HOUSING

- 3. Install the new thermostat. Make sure that the rubber seal remains properly seated.
- Position the thermostat housing to the cylinder head, install the bolts and torquetighten to 24 ± 4 Nm (18 ±3 ft-lb).
- 5. Install the rubber radiator hose to the thermostat housing. Position the clamp and tighten to secure.
- 6. Fill the system with the recommended coolant.
- 7. Start the engine, check for leaks and proper operation. After shutdown, replenish fluids as necessary.

 
4.2 CHECKING THERMOSTAT

 
A function check must be carried out before installing a new thermostat.

NOTE

Check to be sure that the thermostat closes fully. This can be done by holding it up to the light to check that there is no visible gap at the opening point. If the thermostat does not close properly, replace it.

 Warm up water in a receptacle to 75°C (167°F) and immerse the thermostat in the water. Use a piece of wire attached to the thermostat.





- 2. After at least 30 seconds, check that the thermostat is still closed.
- 3. Now warm the water to 100°C (212°F). After at least 30 seconds at the boiling point, check that the thermostat has opened at least 7mm (9/32"). If the thermostat has not opened, it must be replaced. A good thermostat starts to close at 95°C (203°F) and is fully closed at approximately 85°C (185°F).

5. COOLANT

5.1 COOLANT LEVEL VERIFICATION

Coolant level is correct when cold coolant is visible through the surge tank sight glass (Fig. 1). If coolant level is low, fill cooling system.

5.2 COOLANT LEVEL SENSOR

This warning device consists of a fluid level probe mounted on the surge tank. The probe sends a signal to the engine control module to indicate coolant level. If the coolant level drops below the probe, the "Check Engine" light flashes and a diagnostic code is registered (see section 01" ENGINE").



CAUTION

Do not run engine with the "Check Engine" light flashing.

The level probe is mounted on the front of the surge tank.

5.3 THAWING COOLING SYSTEM

If the cooling system becomes frozen solid, place the coach in a warm area until the ice is completely thawed.



CAUTION

Under no circumstances should the engine be operated when the cooling system is frozen, as it will result in engine overheating due to insufficient coolant.

Once thawed, check engine, radiator and related components for damage caused by expansion of frozen coolant fluid.

5.4 COOLING SYSTEM RECOMMENDATIONS

Always maintain cooling system at the proper coolant level. Check daily.

The cooling system must be pressurized to prevent localized boiling of coolant. The system must be kept clean and leak-free. The filler and pressure caps must be checked periodically for proper operation.

The coolant provides a medium for heat transfer and controls the internal temperature of the engine during operation. In an engine having proper coolant flow, some of the combustion heat is conveyed through the cylinder walls and the cylinder head into the coolant. Without adequate coolant, normal heat transfer cannot take place within the engine, and engine temperature rapidly rises. Coolant must therefore be carefully selected and properly maintained.

Select and maintain coolant in order to meet the following basic requirements:

- Provide for adequate heat transfer.
- Provide protection from cavitation damage.
- Provide a corrosion and erosion resistant environment within the cooling system.
- Prevent formation of scale or sludge deposits in the cooling system.
- Be compatible with the cooling system hose and seal materials.
- Provide adequate freeze protection during cold weather operation.

When freeze protection is required, a mixture of suitable water and antifreeze containing adequate inhibitors will provide a satisfactory coolant fluid.

Freeze protection down to:	Boiling up protection to:	% of antifreeze in mixture
-10°F (-25°C)	259°F (126°C)	40%
-34°F (-38°C) -62°F (-46°C)	265°F (129°C) 270°F (132°C)	50% 60%

5.5 COOLANT RECOMMENDATIONS FOR MTA COACHES EQUIPPED WITH VOLVO D13 ENGINE

Fleet Charge Fully formulated Coolant mixture consisting of 50/50 antifreeze solution should be used year-round to provide freeze and boil-over protection as well as providing a stable environment for seals and hoses.

When topping up coolant, use the same coolant mixture type as the mixture already in the cooling system. Do not mix two different types of coolant.

Do not use antifreeze formulated for automobile gasoline engines, these have a very high silicate content that will clog the radiator and leave unwanted deposits in the engine.

Recommended coolants for MTA X3-45 coaches equipped with Volvo D13 engine:

Prevost #685352 (pre-diluted 50/50 mixture);

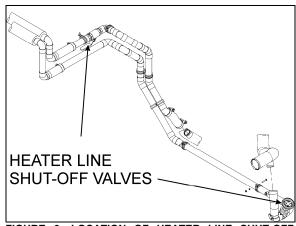


FIGURE 6: LOCATION OF HEATER LINE SHUT-OFF VALVES IN ENGINE COMPARTMENT 05105

6. DRAINING COOLING SYSTEM

Use the following procedures to drain the cooling system partially or completely.

To drain engine and related components:

 Stop engine and allow engine to cool. Close both heater line shutoff valves.

On X3- 45 coaches, the valves are located in the engine compartment. One is located under the radiator fan drive mechanism support; another valve is on the L.H. side of the engine compartment in front of the radiator (Fig. 6).

NOTE

Refer to section 22 under "Preheating System" for information about preheater access and heater line shutoff valve.



WARNING

Before proceeding with the following steps, make sure the coolant has cooled down. The sudden release of pressure from a heated cooling system can result in loss of coolant and possible personal injury (scalding) from the hot liquid.

- 2. Close the shut-off valve on the coolant filter mounting head and remove filter (perform only if filter as to be replaced).
- Open the shut-off valve on the coolant filter mounting head and drain the coolant into a suitable container. Close the shut-off valve.
- 4. Unscrew the surge tank pressure cap counterclockwise, ½ turn to let air enter the system and permit the coolant to drain completely from system.
- 5. Connect coolant extractor (Fig. 7). Use coolant extractor to drain the coolant from the engine. An alternate method is to drain the coolant into a suitable container using the drain hose.



DANGER

Coolant is toxic; risk of poisoning. Do not drink coolant. Use proper hand protection when handling. Keep coolant out of reach of children and animals. Failure to follow these precautions can cause serious illness or death.

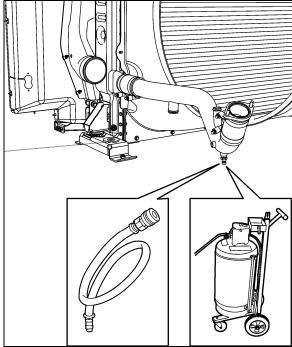


FIGURE 7: EXTRACTING COOLANT

05093

- 6. Open the radiator drain cock.
- 7. Remove the transmission oil cooler. Drain, flush and inspect. Refer to Section 7, "TRANSMISSION" for oil cooler maintenance or preventive replacement.



CAUTION

Drain water pump completely before extended storage to avoid possible water pump damage.

If freezing weather is anticipated and the engine is not protected with antifreeze, drain the cooling system completely when vehicle is not in use. Trapped water in the cylinder block, radiator or other components may freeze and expand resulting in damages. Leave the drain plugs open until the cooling system can be filled with coolant fluid. Do not run engine with cooling system empty.

To drain the entire system, do the previous steps while maintaining the shut-off valves in the open position; then follow the procedure under "Draining Heating System" in Section 22.

7. FILLING COOLING SYSTEM

If only the engine and related components were drained, maintain the two heater line shutoff valves in their closed position, then proceed as follows:

- 1. Close radiator drain cock.
- Open the shut-off valve on the coolant filter mounting head.
- Refill cooling system from the surge tank filler cap inlet with Fleet Charge Fully Formulated universal formula antifreeze of the required concentration using the coolant extractor.

NOTE

Make sure the purge lines are properly connected and not obstructed. The purge lines (thermostat housing dome, radiator top tank, transmission oil cooler or delivery line) are required to ensure complete engine fill and proper purging of air in the system.

NOTE.

The coolant level should remain within two inches of the surge tank filler neck.

 Install the filler and pressure cap, then start the engine and run it at fast idle until reaching normal operating temperature. Check for leaks.

NOTE.

If for any reason, the coolant level drops below the surge tank level probe, the Check Engine warning light will illuminate.

- 5. Stop engine and allow cooling.
- 6. Open the two heater line shutoff valves, check the coolant level in the surge tank, and then add as required.



CAUTION

Never pour cold coolant into a hot engine. The sudden change in temperature may crack the cylinder head or block.

If the entire system has been drained, redo the previous steps while maintaining the two heater line shutoff valves in the "Open" position. With engine running, activate the driver's and central heating systems to permit coolant circulation. Complete the procedure by bleeding the heater cores as explained in Section 22, under "Bleeding Heating System".

8. FLUSHING

If the cooling system is contaminated, flush the cooling system as follows:

- 1. Drain the coolant from the engine.
- 2. Refill with clean water.



CAUTION

If the engine is hot, fill slowly to prevent rapid cooling and distortion of the engine castings.

- 3. To thoroughly circulate the water, start and run the engine for 15 minutes after the thermostats have opened.
- 4. Fully drain system.
- 5. Refill with clean water and operate for 15 minutes after the thermostats have opened.
- 6. Stop engine and allow cooling.
- 7. Fully drain system.

Vehicles with coolant filters:

Fill with a 50/50-antifreeze/water solution. Replace coolant filter as per the Lubrication and Servicing Schedule in section 24 if required.

Dispose of spent fluids in an environmentally responsible manner according to regulations in effect in your area.

COOLING SYSTEM CAPACITY (approximation)

Includes heating system: 24 US gal (91 liters)

8.1 COOLING SYSTEM DESCALERS

If the engine overheats and the fan belt tension, coolant level and thermostat operation have been found to be satisfactory, it may be necessary to de-scale and flush the entire cooling system.

Remove scale formation by using a reputable and safe de-scaling solvent. Immediately after using the de-scaling solvent, neutralize with a neutralizing agent. It is important that product directions be thoroughly read and followed.

After using the solvent and neutralizer, fully drain the system, and then reverse flush the engine and radiator (see "Reverse Flushing" in this section) before filling the system with coolant solution.

8.2 REVERSE FLUSHING

After the engine and radiator have been thoroughly de-scaled, they should be reverse-flushed. The water pump should be removed and the radiator and engine reverse-flushed separately to prevent dirt and scale deposits from clogging the radiator tubes or being forced through the pump. Reverse flushing is accomplished by hot water, under pressure, being forced through the cooling system in a direction opposite to the normal flow of coolant, loosening and forcing deposits out.

The radiator is reverse flushed as follows:

- Remove the radiator inlet and outlet hoses and replace existing radiator cap with a new one.
- 2. Attach a hose to the top of the radiator to lead water away from the engine.
- 3. Attach a hose at the bottom of the radiator and insert a flushing gun in the hose.
- 4. Connect the water hose of the gun to the water outlet and the air hose to the compressed air outlet.
- Turn on the water and when the radiator is full, turn on the air in short blasts, allowing the radiator to fill between blasts.

NOTE

Apply air gradually. Do not exert more than 138 kPa (20 psi) air pressure. Too great a pressure may rupture a radiator tube.

6. Continue flushing until only clean water is expelled from the radiator.

The cylinder block and cylinder head water passages are reverse flushed as follows:

- Remove the thermostats and the water pump.
- 2. Attach a hose to the water inlet of oil cooler housing to drain water away from engine.
- 3. Attach a hose to the water outlet at the top of the cylinder head (thermostat housing) and insert the flushing gun in the hose.
- 4. Turn on the water until the jackets are filled, and then turn on the air in short blasts. Allow jackets to fill with water between air blasts.
- 5. Continue flushing until the water from the engine runs clean.

If scale deposits in the radiator cannot be removed by chemical cleaners or reverse flushing as outlined above, it may be necessary to remove the upper tank and rod out the individual radiator tubes with flat steel rods. Circulate the water through the radiator core from the bottom to the top during this operation.

9. SPIN-ON COOLANT FILTER

The engine cooling system filter is used to filter out impurities such as scale or sand from the coolant and it also eliminates the process of adding inhibitors to the antifreeze/water solution. The filter is mounted onto the cooling fan drive mechanism aluminum casting (Fig. 8).

To replace a filter:

 Close the filter shutoff cock on the filter mounting head and unscrew the old filter from mounting.



WARNING

Failure to relieve cooling system pressure may result in personal injury.

- 2. Remove and discard the filter. Recover the coolant remaining in the filter with a suitable container.
- 3. Clean the filter adapter with a clean, lint-free cloth.
- 4. Coat surface of gasket with clean antifreeze, tighten 2/3 to 1 turn after gasket makes contact with head.
- 5. Open the filter shutoff cock.
- 6. Start engine and check for leaks.



CAUTION

Do not exceed recommended service intervals.

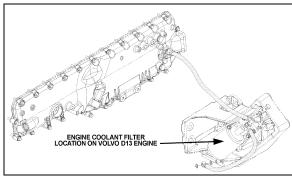


FIGURE 8: COOLANT FILTER (VOLVO D13)

05145



MAINTENANCE

VOLVO D13 ENGINE

Replace the coolant filter cartridge after 50,000 miles (80 000 km) to prevent external rust damage to the filter walls. Use a coolant filter containing Supplemental Coolant Additives (SCA).

Coolant filter cartridge (Volvo D13): #21388476

10. RADIATOR

The radiator is mounted on the L.H. side of engine compartment. It is designed to reduce the temperature of the coolant under all operating conditions. It is essential that the radiator core be kept clean and free from corrosion and scale at all times.

10.1 MAINTENANCE



MAINTENANCE

Inspect the exterior of the radiator core every 25,000 miles (40 000 km) or once a year, whichever comes first. Clean with a quality grease solvent, such as a mineral spirits and dry with compressed air. Do not use fuel oil, kerosene, gasoline, or any caustic material. It may be necessary to clean the radiator more frequently if the vehicle is operated in extremely dusty or dirty areas. Refer to coolant system flushing and reverse flushing in this section for maintenance of radiator interior.

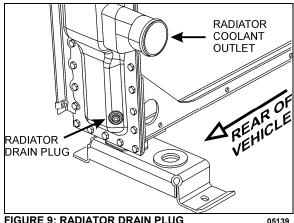


FIGURE 9: RADIATOR DRAIN PLUG

10.2 RADIATOR REMOVAL & INSTALLATION

- 1. Apply the parking brake and shift the transmission to neutral. Shut off all electrical loads. Turn the ignition switch to the OFF
- 2. Open engine compartment doors.
- 3. Set starter selector switch to the OFF position.
- 4. Connect coolant extractor (Fig. 7). Use coolant extractor to drain the coolant from the engine. An alternate method is to drain the coolant into a suitable container using the drain hose.
- 5. Raise L.H. side hinged rear fender.
- 6. Remove tag axle L.H. side wheel.



DANGER

Coolant is toxic; risk of poisoning. Do not drink coolant. Use proper hand protection when handling. Keep coolant out of reach of children and animals. Failure to follow these precautions can cause serious illness or death.

Unfasten 4 cap screws and remove access panel located behind tag axle L.H. side wheel (refer to figure 10).

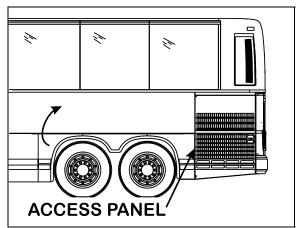


FIGURE 10: ACCESS PANEL (TYPICAL)

- 8. Open radiator door to access radiator assembly. Unfasten upper arm assembly.
- 9. Remove radiator sealing frame.

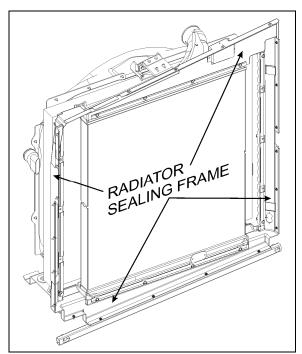


FIGURE 11: RADIATOR SEALING FRAME

10. Remove clamps and then break hoses from the front coolant and charge air pipes (Fig. 12 & 13).

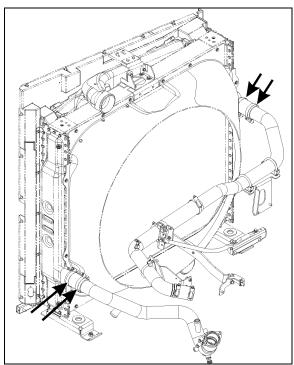


FIGURE 12: RADIATOR HOSE CLAMPS

11. Remove rear coolant and charge air hose clamps then break hoses loose (Fig. 12 & 13).

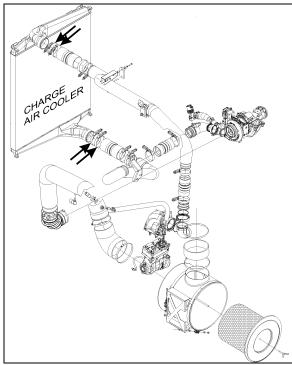


FIGURE 13: CHARGE AIR COOLER HOSE CLAMPS

12. Remove the upper radiator assembly support bracket (Fig. 14).

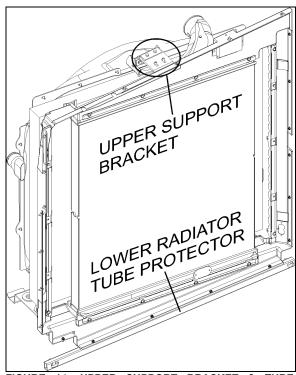


FIGURE 14: UPPER SUPPORT BRACKET & TUBE PROTECTOR

13. Remove the lower radiator assembly tube protector from the lower section (Fig. 14).

14. Remove all lower radiator assembly mounting fasteners.

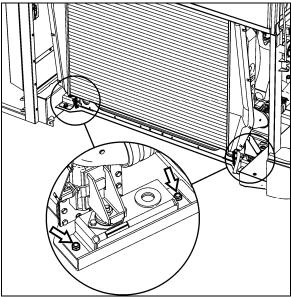


FIGURE 15: RADIATOR ASSEMBLY LOWER MOUNTING FASTENERS

15. Cut cable tie and disconnect electrical connector from fan clutch. Remove fan drive shaft fasteners at the gear box.

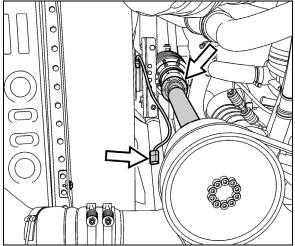


FIGURE 16: DISCONNECTING FAN DRIVE SHAFT

 Position a forklift under the radiator assembly that is capable of safely lifting the radiator.

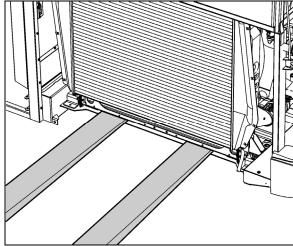


FIGURE 17: POSITIONING FORKLIFT

- 17. With assistance, slide radiator assembly out and onto the forklift. Transfer radiator assembly to a secure location.
- 18. Separate charge air cooler from radiator.
- 19. Lay radiator face down. Remove the fasteners that connect lower radiator mounts to radiator.

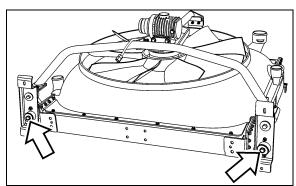


FIGURE 18: REMOVING FASTENERS

20. Remove upper fan drive support bracket from the upper section of the radiator.

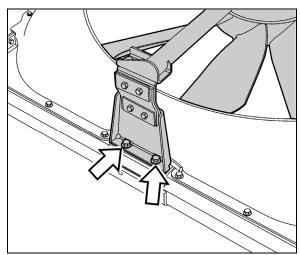


FIGURE 19: REMOVING UPPER FAN DRIVE SUPPORT BRACKET

- 21. With assistance, remove fan drive and drive frame from radiator.
- 22. Remove fan shroud from radiator.

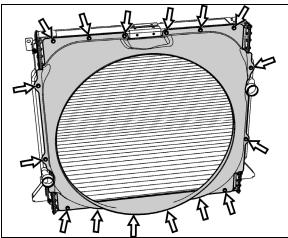


FIGURE 20: REMOVING FAN SHROUD FROM RADIATOR

23. Reverse removal procedure to reinstall radiator assembly.

11. CHARGE AIR COOLER LEAKAGE

Spec for CAC acceptable leakage:

"The CAC is considered acceptable if it can hold 30 psi (206 kpa) gauge pressure with less than 5 psi (34.5 kpa) loss in 15 seconds after turning off the hand valve."

NOTE

This spec does not apply if there is any evidence that the leak was caused by a foreign object impact.

12. COOLING FAN DRIVE MECHANISM

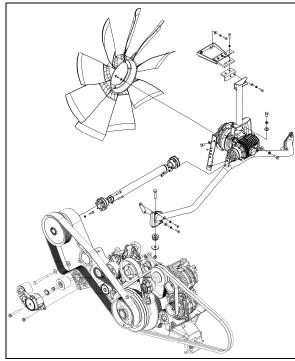


FIGURE 21: COOLING FAN DRIVE MECHANISM

12.1 DRIVE PULLEY AND UNIVERSAL JOINT SHAFT

To disconnect the universal shaft, proceed as follow:




WARNING

Turn the ignition switch to the OFF position and set starter selector switch to the OFF position to prevent accidental starting of the engine.

- Unwrap the drive belt from around the pulley (see paragraph MOUNTING THE DRIVE BELT).
- 2. Dismount the drive pulley. Gain access to the 6 mounting bolts from behind the pulley, through the opening in the cast aluminum support (Fig. 22).
- 3. Unscrew and remove the universal joint shaft mounting bolts (6) at the right angle gearbox.
- 4. Slowly, move the shaft toward the rear of the vehicle.
- 5. Finally, dismount the universal joint shaft from the drive pulley (6 bolts).

Installation of the universal joint shaft is the same as removal, but in reverse order.

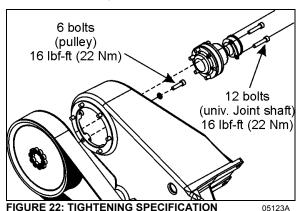

12.2 IDLER REPLACEMENT

If an idler is defective, replace as follow:



WARNING

Turn the ignition switch to the OFF position and set starter selector switch to the OFF position to prevent accidental starting of the engine.

- 1. Remove the protective cap (replace with a new one).
- 2. Unscrew the idler mounting bolt.
- 3. Replace idler with a new one.

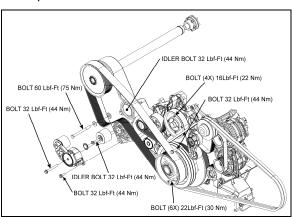


FIGURE 23: TIGHTENING SPECIFICATION (VOLVO D13 ENGINE)



CAUTION

When installing the idler, make sure it rests perfectly against the bearing surface on the cast aluminum support. If not, the drive belt may slip of the idler. See following figure.

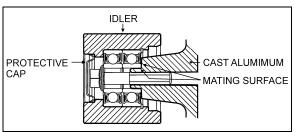


FIGURE 24: IDLER MOUNTED ON THE CAST ALUMINUM SUPPORT

- 4. Bolt the new idler on the cast aluminum support. Tighten to 32 lbf-ft (44 Nm).
- 5. Place a new protective cap.

13. VARIABLE SPEED COOLING FAN

The cooling fan clutch has two thermostatically controlled speeds, plus a neutral (clutch disengaged). The engine control module controls the speed by comparing data from engine coolant temperature, charge temperature, Allison transmission oil temperature (if applicable) and small A/C High side pressure to a set of calibration data. The fan drive clutch is electromagnetic; the engine control module sends an electric current to regulate speed by activating one magnetic coil for the first speed and two magnetic coils for the second speed.

The settings are:

	Engine coolant temp.	Air intake temp.	Allison trans. oil temp.
temperature rising	208°F: fan	194°F: fan	230°F: fan
	engages in	engages in	engages in
	HIGH	HIGH	HIGH
	SPEED	SPEED	SPEED
	203°F: fan	176°F: fan	216°F: fan
	engages in	engages in	engages in
	LOW	LOW	LOW
	SPEED	SPEED	SPEED
temperature dropping	203°F: fan HIGH SPEED disengages	189°F: fan HIGH SPEED disengages	225°F: fan HIGH SPEED disengages
	198°F: fan	170°F: fan	210°F: fan
	LOW	LOW	LOW
	SPEED	SPEED	SPEED
	disengages	disengages	disengages



WARNING

DO NOT work near the fan with the engine running or the ignition switch in the ON position. The engine fan can engage at any time without warning. Anyone near the fan when it turns on could be seriously injured.

13.1 LOCKING RADIATOR FAN FOR EMERGENCY OPERATION

13.1.1 Electrical Locking

If the cooling fan clutch does not function due to an electrical control system malfunction and the engine is overheating, execute the following procedure:

- 1. Turn the ignition switch to the ON position.
- 2. Activate the dashboard Telltale Light Test switch 3 times within 4 seconds.
- 3. In the engine compartment, set the starter selector switch to REAR START and then start the engine from the rear.



WARNING

Potential Accident Risk. Always use extreme caution when working in the vicinity of hot, rotating or moving parts.

While in this mode, the rear start push-button can be used to manually engage the fan clutch. The multiplex system knows when the engine is already running, and it will not activate the starter.

4. Press the push-button one time to engage the clutch to 1st speed, press a second time to engage to 2nd speed, press a third time to stop the fan, press once again to return to 1st speed.

NOTE


If the fan clutch does not engage using this procedure then the clutch is faulty or the wiring between the multiplex module and the clutch is faulty. Mechanically lock the fan as described hereafter in section 13.1.2.

13.1.2 Mechanical Locking

Once mechanically locked, the fan is rigidly connected to the drive mechanism and will rotate continuously, with no considerations for the cooling needs. This is an emergency situation and the vehicle shall not be operated in that situation for an extended period.

In case of a magnetic clutch malfunction:

- Turn the ignition switch to the OFF position and set starter selector switch to the OFF position to prevent accidental starting of the engine.
- 2. Disconnect the fan clutch electrical connector.
- 3. Unscrew and remove the 4 spare bolts screwed to the angle on the fan gearbox mounting support.
- 4. Turn the fan blades in order to position the locking plate bores over the rotor's threaded sockets.
- 5. Screw in and tighten the spare bolts (Fig. 25).
- Using the automatic belt tensioner, release tension on the drive belt in order to be able to rotate the fan clutch drive mechanism by hand.
- 7. Rotate the shaft to get access to the second locking plate and rotor threaded sockets.
- 8. Screw in and tighten the spare bolts.

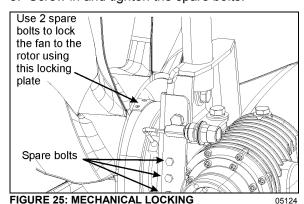

13.2 MAINTENANCE

- 1. Clean the fan and related parts with clean fuel oil and dry them with compressed air. Do not clean with steam or high-pressure jet.
- 2. Check the fan blades for cracks or other damage. Replace the fan if the blades are cracked or deformed.
- 3. Remove any rust or rough spots in the grooves of the fan pulley. If the grooves are

- damaged or severely worn, replace the pulley.
- 4. Do not restrict fan rotation during engine operation for any reason.
- 5. Do not operate fan-driving mechanism with a damaged fan assembly. Replace a damaged fan as soon as the fault is noted.
- Immediately investigate and correct any operator complaint involving driving mechanism or cooling system performance.
- When questions arise, obtain answers before proceeding. Assistance is available through the Prevost After-Sales Service Support serving your area.

13.3 INSPECTION



DANGER

Set the starter selector switch in engine compartment to the "Off" position to prevent accidental starting of the engine.

- Check security of fasteners securing fan blade assembly to fan clutch.
- Visually inspect fan driving mechanism, fan blade assembly, shroud, radiator, and surrounding area for evidence of contact between rotating and non-rotating parts.
- Check drive belt for fraying, cracking, and proper tension.
- Turn fan through at least 360° of rotation. It should turn smoothly with no resistance.

13.4 FAN REMOVAL / INSTALLATION

The fan is bolted to the magnetic clutch. To remove the fan:

 Unscrew and remove the mounting bolts and washers.

To reinstall the fan:

- If the fan is still in the radiator fan shroud, place 2 of the mounting bolts on the opposite side of the clutch, in reverse direction, in order to use them as guide pins to position the fan.
- Once properly positioned, screw the 4 remaining bolts back in and tighten properly (16 lbf-ft; 22 Nm).

 Finally, take the 2 bolts that were used as guide pins and screw them back in on the proper side of the clutch and tighten properly.

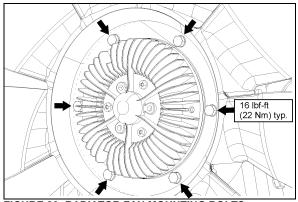


FIGURE 26: RADIATOR FAN MOUNTING BOLTS

14. FAN RIGHT ANGLE GEARBOX

The radiator fan is belt driven from the engine crankshaft pulley through a drive belt, a universal joint shaft, a right angle gear and clutch assembly.

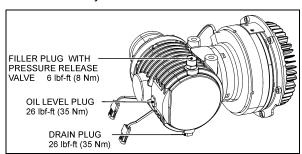


FIGURE 27: RIGHT ANGLE GEARBOX

05118

14.1 MAINTENANCE



MAINTENANCE

Change the right angle gearbox oil every 56,000 miles (90,000-km). Replace seals at every oil change.

Use **Linnig approved synthetic oil**. Refer to Maintenance Manual Section 24.

14.2 OIL CHANGE

- 1. Stop engine and make sure that all engine safety precautions have been observed.
- 2. Turn the ignition switch and set starter selector switch to the OFF position to prevent accidental starting of the engine.

- 3. Remove the drain plug located underneath the right angle gearbox case and allow the oil to drain into a suitable container.
- 4. Replace the seal and screw the drain plug back in (torque: 26 lbf-ft).
- 5. Unscrew and remove the side filler plug.
- 6. Unscrew and remove the top filler plug.
- Add gear lubricant. The oil level is correct once the top of the oil has reached the bottom of the side filling point.
- 8. Replace the seals and screw side and top filler plug back in (torque: 26 lbf-ft).
- 9. Clean gear case carefully.
- 10.Start the engine and allow running a few minutes. Stop the engine and check for leaks.



WARNING

Note that warranty may be voided if proper maintenance at oil change intervals is not respected.

14.3 REMOVAL / INSTALLATION

To remove the right angle gearbox, proceed as follow:

- 1. Turn the ignition switch and set starter selector switch to the OFF position to prevent accidental starting of the engine.
- 2. Disconnect the fan clutch electrical connector.
- 3. Dismount the fan and lean it against the radiator (refer to previous paragraph).
- 4. Disconnect the universal joint shaft.

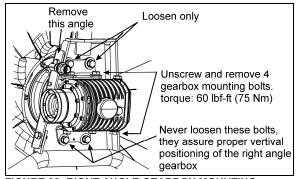


FIGURE 28: RIGHT ANGLE GEARBOX MOUNTING 05126

5. Dismount the angle (see fig. 28).

- Loosen the gearbox support bracket top holts
- Unscrew and remove 4 gearbox mounting bolts.
- 8. Slide the gearbox out of the support assembly.

Installation procedure is the same as removal but in reverse order. Tighten the 4 mounting bolts as specified.

15. COOLING FAN DRIVE BELT

15.1 MOUNTING THE DRIVE BELT

To install the cooling fan drive belt, proceed as follow:



WARNING

Turn the ignition switch and set starter selector switch to the OFF position to prevent accidental starting of the engine.



WARNING

Potential Accident Risk. Always use extreme caution when working in the vicinity of hot, rotating or moving parts.

 Wrap the new drive belt around the fan drive mechanism pulley, the idlers and the automatic tensioner idler as shown on figure 29.

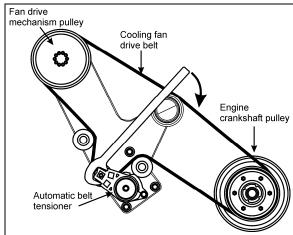


FIGURE 29: DRIVE BELT ROUTING (VOLVO D13 ENGINE)

- Using the special tool included with your vehicle (see inside the Warning Reflectors box located in the first curb-side baggage bay), rotate the automatic tensioner in clockwise direction to relieve tension on the belt and hold the tensioner in that position (Fig. 29).
- 3. Finally, place the drive belt around the engine crankshaft pulley.
- 4. Release the tensioner slowly and let it return to its natural position.

COOLING FAN DRIVE BELT

With Volvo D13 engine

Type: 14PK2526

Prevost number: 5060097

16. SPECIFICATIONS

Cooling System Capacity (Approx	rimation)
Includes heating system	
Thermostat - Volvo D13 Engine	
Number used	1
Cooling Fan Drive Belt - Volvo D1	3 Engine
Type	Poly-Rib 14PK2526
Qty	1
Prevost number	
Coolant - Volvo D13 Engine	
TypePrevost Number	Fleet Charge 50/50 Fully Formulated Antifreeze
Coolant Filter Cartridge - Volvo D	13 Engine
Number used	1
	Spin-on filter containing Supplemental Coolant Additives (SCA)
Prevost number	21388476

SECTION 06: ELECTRICAL

CONTENTS

1.	GENERAL DESCRIPTION	06-5
	.1 Wiring Diagrams	06-5
	1.1.1 Wiring Diagram Keys	06-5
	1.1.2 Using Wiring Diagrams	
	1.1.3 Testing Circuits	
	.2 WIRE SIZES AND COLORS	
	.3 Spare Wires	
	.4 CLEANING CONNECTORS	
	.5 CIRCUIT BREAKERS	
	.6 RELAYS	
2.	XL2 COACHES ELECTRICAL COMPARTMENTS AND JUNCTION BOXES	06-9
	2.1 Maintenance	06-9
	2.2 Booster Block	
	2.3 Battery Safety Switch	
	2.4 Batteries	
	2.5 CIRCUIT BREAKERS	
	2.6 FRONT SERVICE COMPARTMENT	
•	2.6.1 L.H. Side of Front Baggage Compartment (Vehicle Equipped With Video System).	
	2.6. Figure Compartment (Rear Junction Box)	
3.	,	
	3.1 MAINTENANCE	
	3.2 BOOSTER BLOCK	
	3.3 BATTERY SAFETY SWITCH	
	8.4 BATTERIES	
	3.5 CIRCUIT BREAKERS	
	8.6 FRONT SERVICE COMPARTMENT	
	3.7 ENGINE COMPARTMENT (REAR JUNCTION BOX)	
4.	BATTERIES	06-17
	-1 BATTERY REMOVAL AND INSTALLATION	06-18
	4.1.1 XL2-45 Coach	06-18
	4.1.2 XL2-40, XL2-45E and XL2 45 Bus Shells	
	-2 Battery Rating	
	8.3 BATTERY TESTING	06-19
	4.3.1 Visual Inspection	
	4.3.2 Removing Surface Charge	
	4.3.3 Load Test	
	4.3.4 Testing Battery Cables	
	4.4 Battery Charging	
	4.4.1 Battery Charging Guide	
	4.4.2 Emergency Jump Starting With Auxiliary (Booster) Battery	06-22
	4.5 CLEANING AND INSPECTION	
	1.6 COMMON CAUSES OF BATTERY FAILURE	
	7.7 TROUBLESHOOTING	
	ELECTRICAL SYSTEM MONITOR	
6.		
(5.1 TWIN BOSCH ALTERNATORS INSTALLATION	06-25

Section 06: ELECTRICAL

7.	DELCO ALTERNATOR	06-25
8.	CHARGING SYSTEM TROUBLESHOOTING	06-29
	8.1 ALTERNATOR OR VOLTAGE REGULATOR	06-29
	8.2 ALTERNATOR DIAGNOSIS	
	8.2.1 Diode Checks	06-29
	8.2.2 Field Winding Check	
	8.2.3 Stator Winding Check	
	8.3 DIODE REPLACEMENT	
	8.3.1 Diode Replacement (in Support)	
	8.3.2 Diode Replacement (in End Frame)	
	8.4 FIELD REMOVAL	
	8.5 FIELD INSTALLATION	
(8.6 Stator Replacement	
	8.6.1 Removal	
	8.6.3 Installation	
	8.7 DIODE END COVER INSTALLATION	
	8.8 ALTERNATOR REMOVAL (DELCO)	
,	8.8.1 Disassembly of Alternator	
	8.8.2 Alternator Cleaning and Inspection	
	8.8.3 Bearing or Rotor Replacement	
	8.8.4 Alternator Reassembly	
	8.8.5 Output check	
	8.9 ALTERNATOR DRIVE BELT	
	8.9.1 Adjustment	
9.	VOLTAGE REGULATOR (DELCO)	06-36
9	9.1 TROUBLESHOOTING PROCEDURES	
	9.1.1 Undercharged Battery	
	9.1.2 Overcharged Battery	
,	9.2 REGULATOR CHECKS	
!	9.3 ADJUSTING VOLTAGE	06-40
10). BATTERY EQUALIZER	06-40
11	I. STARTER	06-40
12	2. ENGINE BLOCK HEATER	06-40
	12.1 MAINTENANCE	
13		
	13.1 HEADLIGHTS	
	13.1.1 Headlight Beam Toggle Switch	
	13.1.2 Maintenance	
	13.1.3 Headlight Adjustment	
	13.1.4 Sealed-Beam Unit	
	13.1.5 Front Turn Signal	
	13.1.6 Optional Xenon Headlamp	
	13.2 Stop, Tail, Directional, Back-Up, and Hazard Warning Lights	
	13.2.2 Center Stoplights and Cyclops Light Removal and Replacement	
	13.3 LICENSE PLATE LIGHT	
	13.4 CLEARANCE, IDENTIFICATION AND MARKER LIGHTS	
	13.4.1 Marker Light Removal and Replacement	

, , , , , , , , , , , , , , , , , , ,	cement06-47
13.5 DOCKING AND CORNERING LIGHTS	
13.5.1 Lamp Removal and Replacement	
13.6 FOG LIGHTS	
13.6.1 Bulb Removal and Replacement	06-48
14. INTERIOR LIGHTING EQUIPEMENT	06-49
14.1 CONTROL PANEL LIGHTING	
14.1.1 Switch Lighting	
14.1.2 Telltale Light Replacement	
14.1.3 Gauge Light Bulb Replacement	
14.2 STEPWELL LIGHTS (COACHES ONLY)	
14.2.1 Bulb Removal and Replacement	
14.3 LAVATORY NIGHT-LIGHT	
14.3.1 Bulb Removal and Replacement	
14.4 DRIVER'S AREA LIGHTS	
14.4.1 Bulb Removal and Replacement	
14.5 Passenger Section Lighting	
14.5.1 Fluorescent Tube Replacement	
14.5.2 Removal and Replacement of In-Station Fluorescent T	
14.5.3 Removal and Replacement of Reading Lamp Bulb	
14.6 ENGINE COMPARTMENT LIGHTING	
14.7 LAVATORY LIGHT	
15. LIGHT BULB DATA	06-52
16. SPECIFICATIONS	06-54
ILLUSTRATIONS	
ILLUSTRATIONS FIGURE 1: WIRE IDENTIFICATION	06-6
ILLUSTRATIONS FIGURE 1: WIRE IDENTIFICATION	
ILLUSTRATIONS FIGURE 1: WIRE IDENTIFICATION	06-6 06-8 06-9
ILLUSTRATIONS FIGURE 1: WIRE IDENTIFICATION	
FIGURE 1: WIRE IDENTIFICATION	
FIGURE 1: WIRE IDENTIFICATION	
FIGURE 1: WIRE IDENTIFICATION	
FIGURE 1: WIRE IDENTIFICATION	
FIGURE 1: WIRE IDENTIFICATION	
FIGURE 1: WIRE IDENTIFICATION	
FIGURE 1: WIRE IDENTIFICATION	
FIGURE 1: WIRE IDENTIFICATION	
FIGURE 1: WIRE IDENTIFICATION	06-6
FIGURE 1: WIRE IDENTIFICATION	
ILLUSTRATIONS FIGURE 1: WIRE IDENTIFICATION	
FIGURE 1: WIRE IDENTIFICATION	
ILLUSTRATIONS FIGURE 1: WIRE IDENTIFICATION	
ILLUSTRATIONS FIGURE 1: WIRE IDENTIFICATION	

Section 06: ELECTRICAL

FIGURE 26: LOAD TEST	06-20
FIGURE 27: ALLIGATOR CLAMPS AND BATTERY	06-21
FIGURE 28: TWIN BOSCH ALTERNATORS INSTALLATION	06-26
FIGURE 29: ALTERNATORS AND ACCESSORIES MOUNTING TORQUES	06-26
FIGURE 30: 50DN DELCO ALTERNATOR SECTIONAL VIEW	06-27
FIGURE 31: ALTERNATOR WIRING DIAGRAM (DELCO)	06-27
FIGURE 32: CONNECTIONS FOR CHECKING ALTERNATOR OUTPUT	06-28
FIGURE 33: VIEW OF RECTIFIER END FRAME WITH COVER REMOVED	06-30
FIGURE 34: DIODE TESTING	06-30
FIGURE 35: DIODE TESTING	06-31
FIGURE 36: STATOR WINDING TEST	06-31
FIGURE 37: ALTERNATOR (HOSES AND WIRES)	06-34
FIGURE 38: ALTERNATOR RETAINING BOLTS AND WASHERS	06-34
FIGURE 39: ALTERNATOR DRIVE BELT	
FIGURE 40: VOLTAGE REGULATOR	06-37
FIGURE 41: TYPICAL WIRING DIAGRAM OF A NEGATIVE GROUND SYSTEM	06-37
FIGURE 42: REGULATOR VOLTAGE SETTING	06-38
FIGURE 43: ADJUSTING REGULATOR VOLTAGE SETTING	06-38
FIGURE 44: REGULATOR VOLTAGE TEST (UNDERCHARGED BATTERY)	06-38
FIGURE 45: CHECKING TRANSISTOR TR1	06-39
FIGURE 46: CHECKING TRANSISTOR TR2	06-40
FIGURE 47: ELECTRIC HEATER PLUG LOCATION	06-40
FIGURE 48: HEADLIGHT ASSEMBLY	06-41
FIGURE 49: OPENING HEADLIGHT ASSEMBLY	06-41
FIGURE 50: HEADLIGHT ASSEMBLY REAR VIEW	06-41
FIGURE 51: SUPPORT RAIL INSTALLATION	06-42
FIGURE 52: INSTALLATION OF JIGS	06-42
FIGURE 53: INSTALLATION OF HOOPY 100 ALIGNER	
FIGURE 54: ADJUSTING HOOPY 100 LEVEL	06-42
FIGURE 55: SPIRIT LEVEL	
FIGURE 56: INSTALLING CALIBRATION FIXTURES	06-43
FIGURE 57: ALIGNMENT OF HEADLIGHT AIMING SCREEN	
FIGURE 58: HIGH-INTENSITY ZONE (SHADED AREA) OF A PROPERLY AIMED UPPER BEAM ON THE AIMING	
7.6 m (25FT) IN FRONT OF VEHICLE	06-44
FIGURE 59: HIGH-INTENSITY ZONE (SHADED AREA) OF A PROPERLY AIMED LOWER BEAM ON THE AIMIN	G SCREEN
7.6 m (25ft) in front of vehicle	06-44
FIGURE 60: AIM INSPECTION LIMITS FOR UPPER-BEAM HEADLIGHTS	06-45
FIGURE 61: AIM INSPECTION LIMITS FOR LOWER-BEAM HEADLIGHTS	
FIGURE 62: XENON HEADLAMP LOCATION	
FIGURE 63: VARIOUS LIGHTS LOCATION	06-48
FIGURE 64: SWITCH	
FIGURE 65: PARCEL RACK LIGHTING	06-51
FIGURE 66: ENGINE COMPARTMENT LIGHT	06.51

1. GENERAL DESCRIPTION

This vehicle uses a dual voltage system to obtain two different voltages (12 and 24 volts) for various electrical controls and accessories. The main power source incorporates four maintenance-free "Delco" model 1150 batteries connected in parallel-series. All batteries are kept uniformly charged by means of a 100 amp battery equalizer (standard), giving a maximum possible output supply of 100 amps on the 12 volt system. Both the 12 and 24 volt systems are controlled through individual main battery relays. One or two 24 volt self-rectified alternators are belt driven from the engine, and can be reached through the engine compartment door.

1.1 WIRING DIAGRAMS

A master wiring diagram of the electric circuits, covering standard and optional accessories and systems, is located in the technical publications box. Usually, a separate wiring diagram page is provided for each major function or system. In some cases, more than one circuit may appear on one wiring diagram page; when this occurs, each circuit covered in this page is listed in the wiring diagram index. Moreover, a circuit may appear on several pages; in such case, the number(s) at the extremity of the diagram title will indicate the sheet reference number. Refer to the "Wiring Diagram Index" to ensure that the correct diagram is being used to trace the circuit in question.

1.1.1 Wiring Diagram Keys

Various symbols are used on the wiring diagrams to depict different types of electrical components. It is essential to become familiar with these symbols in order to understand the diagrams. The major symbols shown on the diagrams are identified under "Wiring Diagram keys" (page **K** of wiring diagrams).

1.1.2 Using Wiring Diagrams

Two methods are used to "work" with electric wiring diagrams.

Situation: You have identified the defective part (breaker, diode, relay, etc.), and you wish to locate its corresponding circuit.

Problem: Circuit breaker #56 is released (open circuit) and you don't know which circuit is affected.

a) Refer to wiring diagram index, and look for "Circuit breaker code", pages **F**.

- b) At item CB #56, in the first column, you will find the page on which to find the corresponding diagram, in the second column the breaker ampere rating, and in the third column, the Prévost number. The other columns give you the location and the function of the breaker.
- Refer to page 4, keeping in mind the function of the breaker, i.e. emergency exit lights.
- d) When you have located "emergency exit lights", follow the wiring until you come across CB #56 and its circuit.

Situation: You have a problem with a specific system and you want to find the corresponding diagram.

Problem: The last three (3) speakers on the R.H. side of vehicle are inoperative and you must trace the electric circuit.

- a) Refer to wiring diagram index and look for "Sound system".
- You will find on page 26 the components as well as the electric wiring, thus providing you with a complete understanding of this circuit.

1.1.3 Testing Circuits

A careful study of the wiring diagrams should be made to determine the source and flow of current through each circuit. When a circuit is thoroughly understood, a point-to-point check can be made with the aid of the applicable wiring diagrams. Any circuit can be tested for continuity or short circuits with a multimeter or a suitable voltmeter.

All electrical connections must always be kept clean and adequately tight. Loose or corroded connections can result in discharged batteries, difficult starting, dim lights and improper functioning of other electric circuits. Inspect all wiring connections at regular intervals. Make sure knurled nuts on all amphenol-type plugs are securely tightened. Knurled nuts on the plastic amphenol-type connectors will click into a detent when properly tightened. Line connectors, who have the side locking tabs, must have the locks latched in place to ensure a proper electrical connection.

1.2 WIRE SIZES AND COLORS

Each wire in the electrical system has a specific size as designated on the wiring diagram. When replacing a wire, the correct size must be used. Never replace a wire with one of a smaller size.

The vehicle electrical sy stem is provided with different voltages. The insulation on each wire is distinctly colored in order to determine visually the wiring voltage and to assist in making connectors. The wires are color coded as follows:

Red	24 volt system
Yellow	12 volt system
Black	grounded wire
Blue	110 V ac system (live)
White	110 V ac system (neutral)
Green	110 V ac system (ground)
Orange	speakers (+)
Brown	speakers (-)
Grey	spare wire

NOTE

Wires are identified at each 2-4 inch (5-10 cm) intervals by a printed number.

Each wire on a diagram is patterned to assist in tracing and testing circuits. The wire number identifies the voltage rating, the wire identification number and the basic wire gauge as illustrated in figure 1.

24-23	1A-16
VOLTAGE READING	WIRE GAUGE (AWG)
WIRE IDEN	I TIFICATION

FIGURE 1: WIRE IDENTIFICATION

06048

1.3 SPARE WIRES

When the vehicle leaves the factory, and even in the case of a fully-equipped vehicle, an important number of unconnected spare wires are routed between the junction boxes. Consequently, for any connection of an additional accessory, refer to page D "Spare wires" in master wiring diagram to determine the number, the gauge and location of these wires.

NOTE

Spare wires are identified by a wire identification number and by the letters "SP", to designate "spare".

1.4 CLEANING CONNECTORS

When the pins and sockets of connectors become dirty, clean them with a good quality solvent containing HFC 134A refrigerant as its active ingredient. HFC 134A has two qualities that recommend it. First, it does not conduct electricity and therefore, will not cause shorting

between connector pins and sockets. Second, it evaporates quickly, eliminating the possibility of condensation within the connectors.

Always shake out or gently blow out any excess HFC 134A before assembling a connector to its mating connector or hardware. HFC 134A trapped in the connector can affect the connector seal.

△ WARNING △

HFC 134A is toxic. HFC 134A bases compounds should always be used in a well-ventilated area, never in a confined space. Use outdoor whenever possible.

1.5 CIRCUIT BREAKERS

Most electric circuits are protected by circuit breakers of the "Manual Reset" type. The main circuit breakers, as well as those protecting the A/C system, are located in the engine compartment, on R.H. side of the vehicle or in the main power depending on type of vehicle. The remaining breakers are located in the evaporator compartment, inside the A/C junction box.

CIRCUIT BREAKERS				
CB1	A/C Full Air	24 volts	200 amps	
CB2	Hot Wire	12 volts	40 amps	
CB3	Rear Junction Box	12 volts	70 amps	
CB4	Front Junction Box	12 volts	90 amps	
CB5	Hot Wire	24 volts	30 amps	
CB6	Rear Junction Box	24 volts	90 amps	
CB7	Front Junction Box	24 volts	90 amps	
CB8	Condenser Fan Motor L.H.	24 volts	40 amps	
СВ9	Evaporator Fan Motor	24 volts	120 amps	
CB1 1	Condenser Fan Motor R.H.	24 volts	40 amps	

The smaller circuit breakers are accessible in the front service compartment and rear junction box. This type of circuit breaker deenergizes the circuit without disconnecting any wire. Simply press down the red tab on breaker to open the circuit, repair defective circuit, and afterwards depress black button in center of breaker to close the circuit.

1.6 RELAYS

Relays are used to automatically energize or deenergize a circuit from a remote location. The relay draws a very low current to energize its coil. Once the coil is energized, it develops a magnetic field that pulls a switch arm closed or

open, to either energize or deenergize a given component. As the control current required for the coil is very low, the relay allows a remote station to control a hi gh energy circuit without running great lengths of costly high capacity cable, and also eliminates the need for high amperage switches and heavy connectors. Many systems on this v ehicle are provided with control relays, which are all, located in or on the junction boxes, figure 2.

NOTE

Each relay is identified with "12V" or "24V" printed on its casing in order to identify the coil operating voltage.


\triangle CAUTION \triangle

The magnetic relays for the starting m otor, evaporator and both condenser motors and condenser speed controls should have the 5/16" stud nuts torqued to 50 ± 5 lbf-in $(5,5 \pm 0,5 \text{ Nm})$.

	Configuration on base	Key printed on casing	Key used on wiring diageam	Example
Cubic relay (Steel or plastic casing) Type: S.P.D.T.	87 ss 875 s5 30	# 986 987ap87	Suppressor diode Coil (+) (-) 86 87A Bat. 0 877	R #5

NOTE: This relay is provided with an internal suppressor diode; never reverse wiring terminals #85 and 86 at base as a direct short circuit will result.

The relay coils connected to the alternator "relay terminal" should never be provided with a suppressor diode as the output current at this terminal is not rectified, thus rendering relay inoperative.

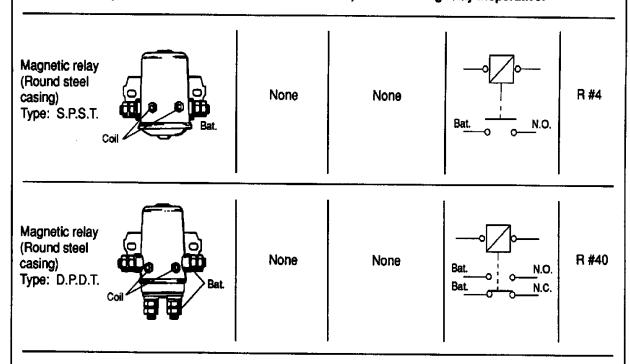

LEGEND

D.P.D.T.

Dal.	Battery
N.O.	Normally Open
N.C.	Normally Closed
S.P.D.T.	Single Pole Double Throw
S.P.S.T.	Single Pole Single Throw

Double Pole Double Throw

FIGURE 2: TYPES OF RELAYS

06541

2. XL2 COACHES ELECTRICAL COMPARTMENTS AND JUNCTION BOXES

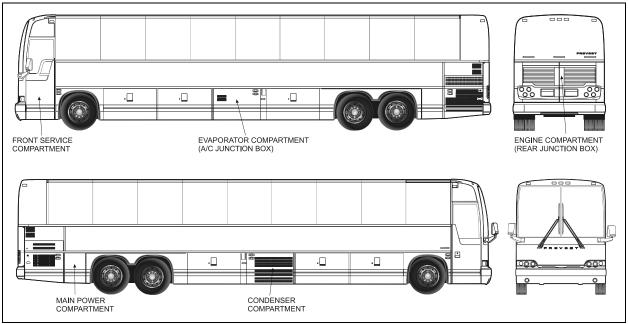


FIGURE 3: ELECTRICAL COMPARTMENT (XL2-45 COACH)

2.1 MAINTENANCE

A Cortec VCI-238 corrosion inhibitor has been sprayed in all electrical compartments to protect components from corrosion. The life expectancy of this product is five years, so it is recommended to reapply it every five years. It is also recommended to spray it on new components when added or replaced.

\triangle WARNING \triangle

Use VIC-238 in a well ventilated area. Do not smoke. Avoid prolonged contact w ith skin and breathing of spray mist. Harmful or fatal if swallowed. Do not induce vomiting. Call physician immediately.

2.2 BOOSTER BLOCK

On XL2-45 coaches, booster block is located in the main power compartment (Fig. 4).

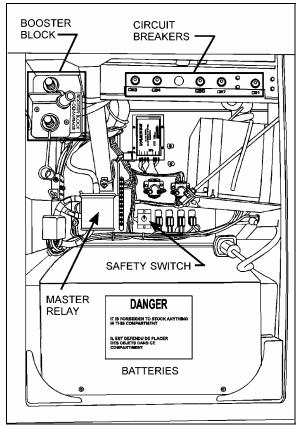


FIGURE 4: MAIN POWER COMPARTMENT (XL2-45) 06316

2.3 BATTERY SAFETY SWITCH

This switch disconnects both the 12 and volts. This toggle switch is located in the main power compartment (XL2-45).

\triangle CAUTION \triangle

During repair or maintenance periods, set battery safety switch to the "OFF" position in order to av oid personal injury. This ensures that power is cut off even if master key switch is set to the "ON" position by mistake. When master key switch is set to the "OFF" position, electrical supply from the batteries is automatically cut off.

NOTE

When battery safety switch or master key switch is set to the "OFF" position, the electrical supply from the batteries is cut off, with the exception of the Fire Detection System, the Engine & Transmission Electronic Controls, the Auxiliary Heating System, the Battery Equalizers and the Digital Clock.

2.4 BATTERIES

The batteries are located in the main power compartment on the XL2-45 coach.

Electric Circuit Protection

Two types of cutoff mechanisms are installed to protect the vehicle's electrical system; fuses and manually-resettable circuit breakers. If an electrical device is inoperative, check the corresponding cutoff mechanism.

\triangle CAUTION \triangle

Never replace a fuse with a higher rated one because it will cause severe damage to the electric system.

2.5 CIRCUIT BREAKERS

Most of the manually-resettable circuit breakers are located in the: A/C junction box, rear junction box, front service compartment, and in the main power compartment. An identification decal is affixed on the inside face of each door. XL2-45 coaches are equipped with eight (8) main breakers; they are installed in the main power compartment and in the A/C junction box in the evaporator compartment, they can be identified as follows (Fig. 4, 5, 6 and 7):

- 1. A/C full air (CB1) 200 A 24 volts;
- 2. Front junction box (CB7) 90 A 24 volts;
- Rear junction box (CB6)
 90 A 24 volts;
- 4. Direct (CB4) 90 A 12 volts;
- 5. Rear junction box (CB3) 70 A 12 volts;
- 6. Condenser fan motor L.H. (CB8) 40 A 24 volts;
- 7. Evaporator fan motor (CB9) 120 A 24 volts;
- 8. Condenser fan motor R.H. (CB11)40 A 24 volts.

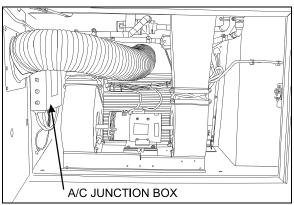


FIGURE 5: LOCA TION OF A /C JUNCTION BOX IN EVAPORATOR COMPARTMENT 22244B

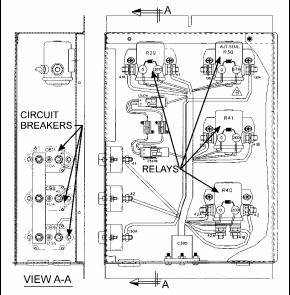


FIGURE 6: A/C JUNCTION BOX

06317

2.6 FRONT SERVICE COMPARTMENT

The front service compartment is located on L.H. side of vehicle, under the driver's window. It contains the following components (Fig. 7 and 8):

- relays;
- breakers:
- alternator module
- diodes:
- World Transmission ECU;
- Electronic control unit for ABS.

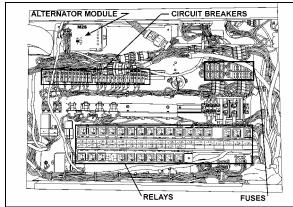


FIGURE 7: TOP SECTION OF FRONT SERVICE COMPARTMENT

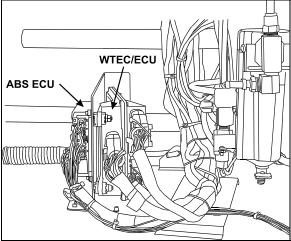


FIGURE 8: BOTTOM SECTION OF FRONT SERVICE COMPARTMENT 06394

DDR connector

To enhance troubleshooting and to allow interrogation of the ECU for valuable service information, a DDR (diagnostic data reader) can be used. To use it, plug the appropriate connector (not furnished by the manufacturer) in the terminal located in the rear junction box or the connector located on L.H. console (refer to fig. 9 and 11). You can also use your pushbutton shifter to perform certain maintenance operations (see Section 01, Engine, under paragraph "4. DDEC V Diagnostic codes").

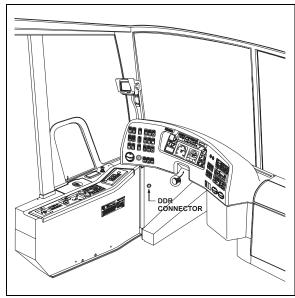


FIGURE 9: DDR CONNECTOR LOCA TION IN DRIVER'S AREA 18558

2.6.1 L.H. Side of Front Baggage Compartment (Vehicle Equipped With Video System)

This compartment may contain the following components:

- protective screen (with video system);
- video inverter (with video system);
- Electronic system monitor.

Battery Equalizers

On XL2-45 coach the battery equalizers are located in the main power compartment (Fig. 4).

2.7 ENGINE COMPARTMENT (REAR JUNCTION BOX)

The rear junction box is located in the engine compartment. Switches are located on R.H. side of rear junction box (Fig.10):

- engine compartment light switch;
- starter selector switch:
- Rear start (push button switch).

Section 06: ELECTRICAL

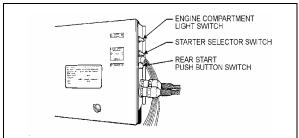


FIGURE 10: REAR JUNCTION BOX SWITCHES 01017

The rear junction box contains the following components (Fig. 11):

- relays;
- breakers;
- diodes;
- time delay relay;
- DDR connector.

 


FIGURE 11: REAR JUNCTION BOX

3. XL2 MOTORHOMES ELECTRICAL COMPARTMENTS AND JUNCTION BOXES

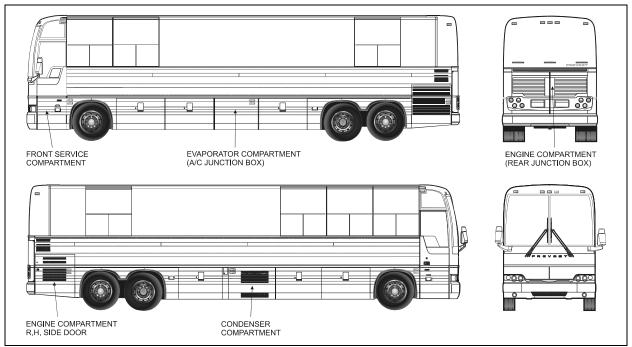


FIGURE 12: ELECTRICAL COMPARTMENTS (XL2-40 BUS SHELLS)

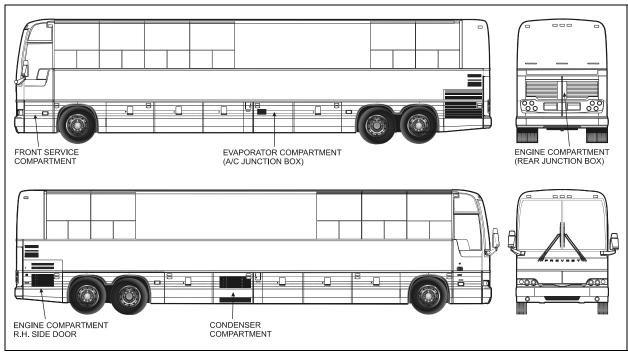


FIGURE 13: ELECTRICAL COMPARTMENTS (XL2-45E BUS SHELLS)

06545

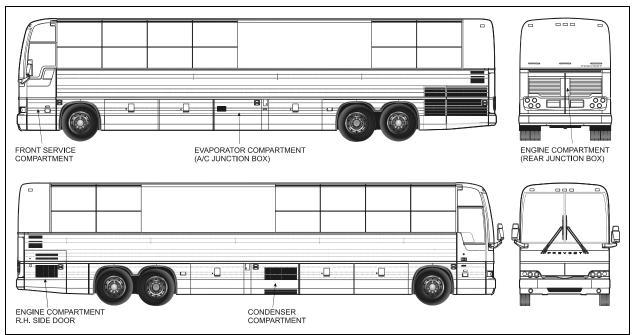


FIGURE 14: ELECTRICAL COMPARTMENTS (XL2-45 BUS SHELLS)

06542

3.1 MAINTENANCE

A Cortec VCI-238 corrosion inhibitor has been sprayed in all electrical compartments to protect components from corrosion. The life expectancy of this product is five years, so it is recommended to reapply it every five years. It is also recommended to spray it on new components when added or replaced.

△ WARNING △

Use VIC-238 in a well ventilated area. Do not smoke. Avoid prolonged contact w ith skin and breathing of spray mist. Harmful or fatal if swallowed. Do not induce vomiting. Call physician immediately.

3.2 BOOSTER BLOCK

On all XL2 MTH, booster block is located on the breaker panel in the engine compartment on the R.H. side and is accessible through engine R.H. side door (Fig. 15).

3.3 BATTERY SAFETY SWITCH

This switch disconnects both the 12 and 24 volts. This toggle switch is located on the breaker panel in the engine compartment on the R.H. side and is accessible through engine R.H. side door (Fig. 15).

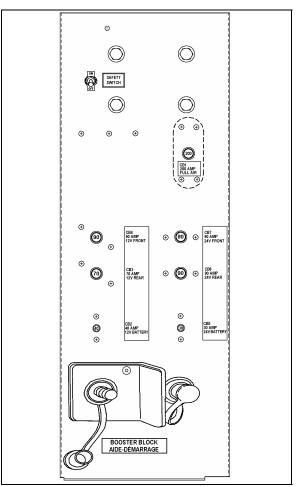


FIGURE 15: BREAKER PANEL

06508

\triangle CAUTION \triangle

During repair or maintenance periods, set battery safety switch to the "OFF" position in order to av oid personal injury. This ensures that power is cut off even if master key switch is set to the "ON" position by mistake. When master key switch is set to the "OFF" position, electrical supply from the batteries is automatically cut off.

NOTE

When battery safety switch or master key switch is set to the "OFF" position, the electrical supply from the batteries is cut off, with the exception of the Fire Detection System, the Engine & Transmission Electronic Controls, the Auxiliary Heating System, the Battery Equalizers and the Digital Clock.

3.4 BATTERIES

The batteries are located in the engine compartment R.H. side (Fig. 16). The battery arrangement may differ between vehicle types due to available space.

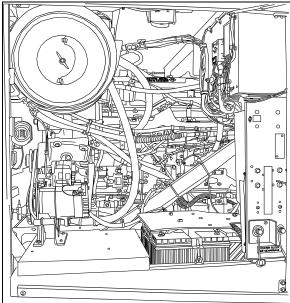


FIGURE 16: ENGINE COMPARTMENT R.H. SIDE

Electric Circuit Protection

Two types of cutoff mechanisms are installed to protect the vehicle's electrical system; fuses and manually-resettable circuit breakers. If an electrical device is inoperative, check the corresponding cutoff mechanism.

\triangle CAUTION \triangle

Never replace a fuse with a higher rated one because it will cause severe damage to the electric system.

3.5 CIRCUIT BREAKERS

Most of the manually-resettable circuit breakers are located in the: A/C junction box, rear junction box, front service compartment and in the engine compartment R.H. si de. An identification decal is affixed on the inside face of each door.

MTH XL2-40, XL2-45E and XL2-45 may be equipped with ten (10) main breakers; six (6) of which are standard and four (4) are supplied only on vehicles equipped with central A/C system. CB2 to CB7 breakers are standard and CB1, CB8, CB9 and CB11 breakers are optional.

On all vehicles, breakers CB1 to CB7 are installed on breaker panel in engine compartment R.H. side (Fig. 15 & 16). They are accessible through engine R.H. side door and can be identified as follows:

1.	A/C full air (CB1)	200 A - 24 volts;
2.	Front junction box (CB7)	90 A - 24 volts;
3.	Rear junction box (CB6)	90 A - 24 volts;
4.	Direct (CB4)	90 A - 12 volts;
5.	Rear junction box (CB3)	70 A - 12 volts;
6.	Battery CB2)	40 A - 12 volts;
7.	Battery (CB5)	30 A - 24 volts;

On all vehicles equipped with central A/C, breakers CB8, CB9 and CB11 are installed in the A/C junction box in the evaporator compartment (Fig. 17 and 18), and are identified as follows:

- 1. Condenser fan motor L.H. (CB8) 40 A 24 volts;
- 2. Evaporator fan motor (CB9) 120 A 24 volts;
- 3. Condenser fan motor R.H. (CB11)40 A 24 volts.

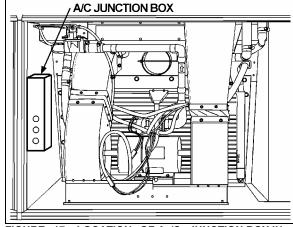


FIGURE 17: LOCATION OF A /C JUNCTION BOX IN EVAPORATOR COMPARTMENT 22178

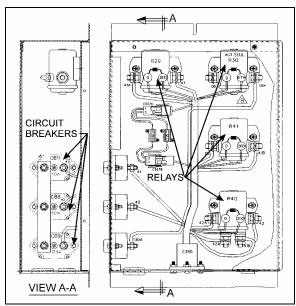



FIGURE 18: A/C JUNCTION BOX

06317

3.6 FRONT SERVICE COMPARTMENT

The front service compartment is located on L.H. side of vehicle, under the driver's window. It contains the following components (Fig. 19 and 20):

- relays;
- breakers;
- alternator module
- diodes:
- World Transmission ECU;
- Electronic control unit for ABS.

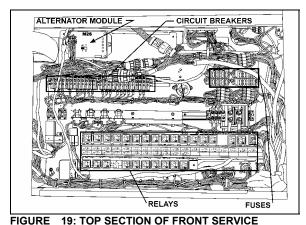

COMPARTMENT

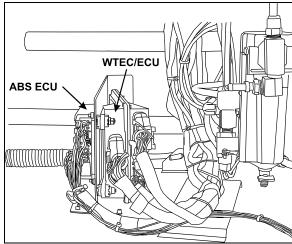


FIGURE 20: BOTTOM SECTION OF FRONT SERVICE COMPARTMENT 06394

DDR connector

To enhance troubleshooting and to allow interrogation of the ECU for valuable service information, a DDR (diagnostic data reader) can be used. To use it, plug the appropriate connector (not furnished by the manufacturer) in the terminal located in the rear junction box or the connector located on L.H. console (refer to fig. 21 and 23). You can also use your pushbutton shifter to perform certain maintenance operations (see Section 01, Engine, under paragraph "4. DDEC V Diagnostic codes").

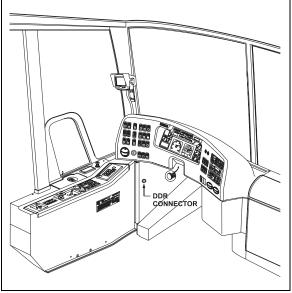


FIGURE 21: DDR CONNECTOR LOCA TION IN DRIVER'S AREA 18558

06319

3.7 ENGINE COMPARTMENT (REAR JUNCTION BOX)

The rear junction box is located in the engine compartment. Switches are located on R.H. side of rear junction box (Fig.22):

- engine compartment light switch;
- starter selector switch:
- Rear start (push button switch).

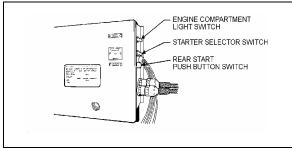


FIGURE 22: REAR JUNCTION BOX SWITCHES 0

The rear junction box contains the following components (Fig. 23):

- relays;
- breakers;
- diodes;
- time delay relay;
- DDR connector.

 


FIGURE 23: REAR JUNCTION BOX

4. BATTERIES

The vehicle is provided with four (4) maintenance-free 12 volt heavy-duty batteries connected in series-parallel (Fig. 24). The top-mounted negative and positive terminals are tightly sealed to prevent leaks. Water never needs to be added to this type of battery. There are no filler caps in the cover. The battery is sealed, except for small v ent holes in the cover. The vents must not be restricted as they allow small amounts of gases produced in the battery to escape. The special chemical composition inside the battery reduces gassing to a very small amount at normal charging voltages. Besides reducing gassing, the special chemistry greatly reduces the possibility of overcharge damage.

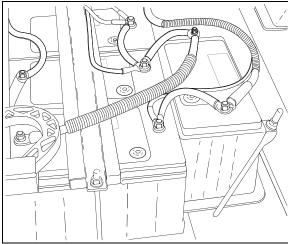


FIGURE 24: BATTERIES (TYPICAL)

06343

The vents require keeping the battery in an upright position to prevent electrolyte leakage. Tipping the battery beyond a 45 or angle in any direction can allow a small amount of electrolyte to leak out of the vent holes.

\triangle WARNING \triangle

DO NOT tip battery by more than 45 ° when carrying or installing the battery.

NOTE.

Evidence of electrolyte leakage does not necessarily mean the battery is defective.

With special cables properly attached to batteries, the metal surfaces that carry the current are completely sealed from the atmosphere. This prevent s terminal oxidation and corrosion that may cause starting and charging problems. If new cables are required, sealed terminal cable replacements should be used to retain the reliability of the original maintenance-free connections.

△ WARNING △

All lead-acid batteries generate hy drogen gas, which is highly flammable. If ignited by a spark or flame, the gas may explode violently, causing spraying of acid, fragmentation of the battery, which may result in severe personal injuries. Wear safety glasses and do not smoke when working near batteries. In case of contact with acid, flush immediately with water.

The battery has four (4) major functions:

1. Providing a source of current for starting the engine;

06318

- 2. Stabilizing the voltage in the electrical system;
- 3. Supplying current for a limited time, when electrical demands of the equipment exceed the power output of the alternator;
- Providing a limited source of power for connected accessories, when the engine is not running.

4.1 BATTERY REMOVAL AND INSTALLATION

4.1.1 XL2-45 Coach

The batteries are located in the main power compartment.

 Remove the two screws at the bottom of the plastic protective cover, and then unscrew the two quarter turn nuts to remove the protective cover (Fig. 4)

△ WARNING △

To prevent possible electric shocks or sparking, the battery master switch should be in the "Off" position before disconnecting cables from the batteries (see paragraph "2.3 Battery master switch").

- 2. Remove the supports, and unscrew terminal nuts of each defective battery.
- 3. Remove battery cables from the batteries.
- 4. Remove batteries.
- 5. Installation is the reverse of removal.

NOTE

When the battery cables have been removed from the batteries, wrap the battery terminals and cable ends with electric tape to prevent accidental grounding. The ground cables should always be disconnected first and replaced last.

NOTE

In replacing batteries, only batteries of the same specification should be used. Refer to "Specifications" at the end of this section for further details.

\triangle CAUTION \triangle

Ensure that connections are not reversed when reinstalling batteries, since damage to electrical system components will result.

When reinstalling batteries, battery connections must be tightened to 13-15 lbf-ft (18-20) Nm) and the nut on top of sliding tray to 45-55 lbf-in (5-6 Nm). A torque wrench is required to ensure an accurate tightening torque.

△ WARNING △

To prevent possible electric shock or sparking, the battery master switch must be set to the "Off" position before tightening an electrical connection.

NOTE

A protective silicone free, coating should be applied on all terminals that have been disconnected. We recommend the use of Cortec VCI-238 (Prévost #682460) on all electrical connections.

4.1.2 XL2-40, XL2-45E and XL2 45 Bus Shells

The batteries are located in the engine compartment R.H. side (Fig. 16).

- Remove the tree (3) plastic protective cover retaining bolts. Remove the plastic protective cover.
- 2. Remove the support retaining bolt.

A WARNING A

To prevent possible electric shocks or sparking, the 12 and 24 v olts battery master switch should be in the "Off" position before disconnecting cables from the batteries (see paragraph "3.3 Battery Master Switch").

- Remove the support (if necessary, remove battery cables). To remove battery cables, unscrew terminal nuts and remove cables.
- Remove battery cables from defective batteries.

NOTE

When the battery cables have been removed from the batteries, wrap the battery terminals and cable ends with electric tape to prevent accidental grounding. The ground cables should always be disconnected first and replaced last.

- 5. Remove defective batteries.
- 6. Installation is the reverse of removal.

NOTE

In replacing batteries, only batteries of the same specification should be used. Refer to "Specifications" at the end of this section for further details.

riangle Caution riangle

Ensure that connections are not when reinstalling batteries, since damage to electrical system components will result.

When reinstalling batteries, battery connections must be tightened to 13-15 lbf-ft (18-20) Nm) and the nut on top of sliding tray to 45-55 lbf-in (5-6 Nm). A torque wrench is required to ensure an accurate tightening torque.

🛆 WARNING 🛆

To prevent possible electric shock sparking, the battery master switch must be set to the "Off" position before tightening an electrical connection.

NOTE

A protective silicone free, coating should be applied on all terminals that have been disconnected. We recommend the use of Cortec VCI-238 (Prévost #682460) on all electrical connections.

4.2 **BATTERY RATING**

Each of the 12 volt batteries used on the vehicle has the following rating:

- Reserve capacity: 195 minutes
- Cold cranking (amps): 950 @ 0°F (-18°C)
- Cold cranking (amps): 745 @ -20°F (-29°C)
- Weight (filled): 59 lb (26,7 kg)

The reserve capacity is defined as the number of minutes a new, fully charged battery at 80°F (26,6°C) can be discharged at 25 amperes and maintain a minimum of 1.75 volts per cell (10.5 volts total for one 12 volts battery). This rating can be used as a basis for determining how long a vehicle might run after an alternator failure. The cold cranking rating is defined as the minimum discharge current a battery will deliver in amperes for 30 seconds at 0 °F (-18°C) while maintaining a minimum of 1.2 volts per cell (7.2 volts total for one 12 volts battery). This rating can be used as a basis for comparing starting performance.

BATTERY TESTING 4.3

The maintenance-free battery has a strong ability to withstand the damaging effects of overcharge. The test indicator in the cover used only to determine if the battery can be tested in case of a cranking problem.

The test indicator in the battery cover is to be used with accepted diagnostic procedures only. It must not be used to determine if the battery is good or bad, charged or discharged. The test indicator is a built-in hydrometer in one cell that provides visual information for battery testing (Fig. 25).

It is important when observing the test indicator, that the battery be relatively level and has clean indicator top to see the correct indication. Some lighting may be required in poorly lit areas. Under normal operation, two indications can be observed.

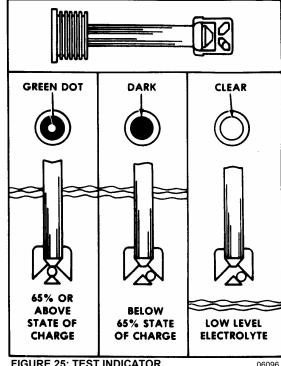


FIGURE 25: TEST INDICATOR

Green Dot Visible

Any green appearance is interpreted as a "green dot", and the battery is ready for testing. On rare occasions, following prolonged cranking, the green dot may still be visible when the battery is obviously discharged. Should this occur, charge the battery as described under Procedure" in "Battery Charging" later in this section.

Dark - Green Dot Not Visible

If there is difficulty cranking the engine, the battery should be tested as described section. On rare occasions, the test indicator may turn light yellow. In this case, the integral charging system should be checked. Normally, the battery is capable of further however, if difficult start has been reported, replace the battery. DO NOT CHARGE, TEST, OR JUMP-START.

4.3.1 Visual Inspection

- Check the outside of the battery for a broken or cracked cover or case that could permit loss of electrolyte. If obvious physical damage is noted, replace the battery.
- Check for loose terminal posts, cable connections, damaged cables, and for evidence of corrosion. Correct conditions as required before proceeding with tests.

4.3.2 Removing Surface Charge


Disconnect cables from the battery and attach alligator clamps to the contact lead pad on the battery as shown in figure 27. Connect a 300 ampere load across the terminal for 15 seconds to remove surface charge from the battery.

4.3.3 Load Test

This test is one means of checking the battery to determine its ability to function as required in the vehicle.

To make this test, use test equipment that will withstand a heavy electrical load from the battery, such as a carbon pile resistor or other suitable means.

 Connect a voltmeter, ammeter, and a variable load resistance as illustrated in figure 26.

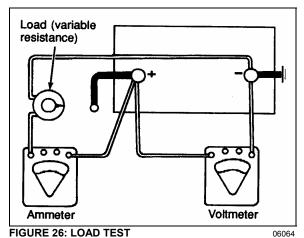

\triangle CAUTION \triangle

Observe polarity of the meters and the battery when making connections, and select the correct meter range.

- Apply a 290 amperes load to the battery for 15 seconds.
- With an ammeter reading specified load, read voltage. The voltage should be at least

9.6 volts. Disconnect the load. If the voltmeter indicates 9.6 volts or more, the battery is good. If the voltmeter reading is less than 9.6 volts, replace the battery. This voltage is to be used for battery ambient temperatures of 70°F (21°C) and above. For temperatures below 70°F (21°C), refer to the following "Voltage and Temperature Chart".

Voltage and Temperature Chart

Ambient Temperature	Minimum Voltage
70°F (21°C) and above	9.6
60°F (16°C)	9.5
50°F (10°C)	9.4
40°F (4°C)	9.3
30°F (-1°C)	9.1
20°F (-7°C)	8.9
10°F (-12°C)	8.7
0°F (-18°C)	8.5

NOTE

The accuracy of this test procedure is dependent upon close adherence to the proper load, time and temperature specifications.

4.3.4 Testing Battery Cables

Check all cable ring terminals and connections to determine if they are in good condition. Excessive resistance, generally caused by poor connections, produces an abnormal voltage drop which may lower voltage at the starter to such a low value that normal operation of the starter will not be obtained. An abnormal voltage drop can be detected with a low-reading voltmeter as follows:

△ WARNING △

To prevent the engine from starting, the DDEC engine circuits, w hich are protected by breakers (CB-19, CB-20 and CB-21) located in the rear junction box, must be deenergized during these tests; afterward, depress black button to close circuit.

 Check voltage drop between grounded (negative) battery terminal and vehicle frame by placing one prod of the voltmeter on the battery terminal and the other on a good ground (unpainted surface) on the vehicle. With the starter cranking the engine at a temperature of 70°F (21°C), voltage reading should be less than 0.3 volt. If the voltage reading exceeds 0.3 volt, there is excessive resistance in this circuit. Check voltage drop between the positive battery terminal and the starter positive terminal stud while the motor is operated. If the reading is more than 2.5 volts, there is excessive resistance in this circuit.

NOTE

If it is necessary to extend the voltmeter lead for this test, use a #16 (AWG) or larger wire.

3. Check voltage drop between the starter housing and a good ground on the vehicle. The reading should be less than 0.2 volt.

\triangle WARNING \triangle

Any procedure other than the following could cause personal injury or damages to the charging system resulting from battery explosion or electrical burns.

Wear adequate eye protection w hen working on or near the batteries. Ensure that metal tools or jumper cables do not contact the positive battery terminal (or a metal surface in contact w ith it) as a short circuit will result. Do not attempt to jump start a vehicle suspected of having a frozen battery because the battery may rupture or explode. Both the booster and discharged batteries must be treated carefully when using jumper cables. Follow exactly the procedure outlined later in this section, being careful not to cause sparks.

4.4 BATTERY CHARGING

\triangle WARNING \triangle

During charging of the batteries, an explosive gas mixture forms in each cell. Part of this gas escapes through the vent holes and may form an explosive atmosphere around the battery itself if ventilation is poor. This explosive gas may remain in or around the battery for several hours after it has been charged. Sparks or flames can ignite this gas causing an internal explosion, which may shatter the battery.

- Do not smoke near a battery which is being charged or w hich has been recently charged.
- 2. Do not break live circuits at battery terminals because a spark usually occurs at the point where a live circuit is broken. Care must alw ays be taken when connecting or disconnecting booster leads or cable clamps on chargers. Poor connections are a common cause of electric arcs, w hich cause explosions.

 The electrical system on this v ehicle is negative ground. Installing the batteries with the positive terminals grounded or incorrect use of the booster battery and jumper cables will result in serious damage to the alternator, batteries and battery cables.

The batteries used on this vehicle can be charged either on or off the vehicle; however, when they are removed from the vehicle, it is recommended that an adapter kit, which is available from any "A/C DELCO" dealer, be used in charging sealed-terminal batteries. Use the booster block to charge the batteries when they are left on vehicle and make sure that the main battery disconnect switch is set to the "On" position.

The alligator clamps of the tester or charger must be placed between the terminal nuts and the lead pads of the terminal studs (Fig. 27) after the vehicle cables are detached. The alligator clamps should make firm contact with the lead pads.

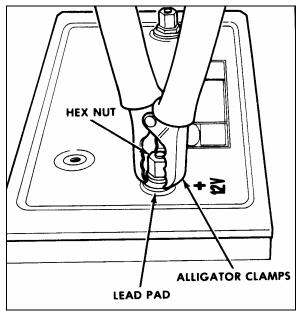


FIGURE 27: ALLIGATOR CLAMPS AND BATTERY 06065

NOTE

If this connection cannot be made because of the alligator clamp design, the load value for testing must be reduced from 290 to 260 amperes.

On rare occasions, such as those that occur following prolonged cranking, the green dot in the test indicator may still be visible when the battery is obviously discharged. Should this

occur, a boost charge of 20 amperes-hour is recommended. Under normal operating conditions, do not charge battery if the green dot is visible. The battery should never be charged if the test indicator (hydrometer) is clear or light yellow. If this occurs, replace the battery.

A charge rate between 3 and 50 amperes generally satisfactory for any maintenance-free battery as long as spewing of electrolyte does not occur or the battery does not excessively hot (over 125°F (52°C)). If spewing or violent gassing of electrolyte occurs or battery temperature exceeds 125°F (52°C), the charging rate must be reduced or temporarily stopped to allow cooling and to avoid damaging the battery. Battery temperature can be estimated by touching or feeling the battery case. The battery is sufficiently charged when the green dot in the built-in hydrometer is visible. No further charging is required. Shake or till the battery at hourly intervals during charging to mix the electrolyte and see if the green dot appears.

△ WARNING △

Always turn off the charger before connecting or disconnecting to a battery.

NOTE

The charge rate must be doubled when the batteries are charged by the booster block, because of the series-parallel circuit.

Battery charging consists of a charge current in amperes for a period of time in hours. Thus, a 25 ampere charging rate for 2 hours would be a 50 ampere-hour charge to the battery. Most batteries, whose load test values are greater than 200 amperes, will have the green dot visible after at least a 75 ampere-hour charge. In the event that the green dot does not appear, replace the battery.

4.4.1 Battery Charging Guide

Fast Charging Rate

20 amps @ 3-3/4 hours

30 amps @ 2-1/2 hours

40 amps @ 2 hours

50 amps @ 1-1/2 hours

Slow Charging Rate

5 amps @ 15 hours

10 amps @ 7-1/2 hours

The time required for a charge will vary according to the following factors:

Size of Battery

For example, a completely discharged large heavy-duty battery requires more than twice the recharging time of a completely discharged small passenger car battery.

Temperature

For example, a longer time will be needed to charge any battery at 0 °F (-18°C) than at 80 °F (27°C). When a fast charger is connected to a cold battery, the current accepted by the battery will be very low at first, and then in time, the battery will accept a higher rate as it warms.

State of Charge

For example, a completely discharged battery requires more than twice as much charge than a half-charged battery. Since the electrolyte is nearly pure water and a poor conductor in a completely discharged battery, the current accepted is very low at first. Later, as the charging current causes the electrolyte acid content to increase, the charging current will likewise increase.

Charger Capacity

For example, a charger which can supply only 5 amperes will require a much longer period of charging than a charger that can supply 30 amperes or more.

4.4.2 Emergency Jump Starting With Auxiliary (Booster) Battery.

△ WARNING △

Do not jump start vehicles equipped with maintenance-free batteries if the test indicator is light yellow.

Both booster and discharged batteries should be treated carefully when using jumper cables. A vehicle with a discharged battery may be started by using energy from a booster battery or the battery from another vehicle.

△ WARNING △

Jump starting may be dangerous and should be attempted only if the follow ing conditions are met:

The booster battery or the battery in the other vehicle must be of the same voltage as the battery in the v ehicle being started, and must be negative grounded.

If the booster battery is a sealed-type battery without filler openings or caps, its test indicator must be dark or a green dot must be visible. Do not attempt jump starting if the test indicator of the booster battery or the discharged battery has a light or bright center.

△ WARNING △

Follow the procedure exactly as outlined hereafter. Avoid making sparks.

- Wear eye protection and remove rings, watches with metal bands and other metal jewelry.
- 2. Apply parking brake and place the transmission shift lever or push-button pads in Neutral (N) position in both vehicles. Turn off lights, heater and other electrical loads. Observe the charge indicator. If the indicator in the discharged battery is illuminated, replace the battery. Do not attempt jump starting when indicator is illuminated. If the test indicator is dark and has a green dot in the center, failure to start is not due to a discharged battery and the cranking system should be checked. If charge indicator is dark but the green dot does not appear in center, proceed as follows:
- 3. Connect one end of one red jumper cable to the positive (+) terminal of the booster power source and the other end to the positive (+) post of the booster power block, located in the main power compartment or in the engine compartment R.H. side (refer to fig. 4 and 15).
- Connect one end of the remaining negative jumper cable (black) to the negative (-) terminal of the booster power source, and the other end of the black jumper cable to the negative (-) post of the booster power block.
- Make sure the clips from one cable do not inadvertently touch t he clips on the other cable. Do not lean over the battery when making connections. The ground connection must provide good electrical conductivity and current carrying capacity.
- Start the engine in the vehicle that is providing the jump start. Let the engine run for a few minutes, then start the engine in the vehicle that has the discharged batteries.
- 7. When removing the jumper cables, perform the above procedure exactly in reverse order, and replace protective caps on booster block terminals.

△ WARNING △

Any procedure other than the above could result in personal injury, property damage due to battery explosion, or damage to the charging system of the booster vehicle or of the boosted vehicle.

NOTE

Jumper cables must withstand 500 cranking amperes. If cable length is 20 feet (6m) or less, use 2/0 (AWG) gauge wires. If cable length is between 20-30 feet (6-9m), use 3/0 (AWG) wires.

4.5 CLEANING AND INSPECTION

The external condition of the battery and the battery cables should be checked periodically. The top of the battery should be kept clean and the battery hold-down clamp bolts should be kept properly tightened. For best results when cleaning the battery, wash first with a diluted solution of ammonia or soda to neutralize any acid present then wash out with clean water. The battery hold-down bolts should be kept tight enough to prevent the batteries from moving, but they should not be tight ened to the point that excessive strain is placed on the battery hold-down cover (proper tightening torque: 45-55 lbf-in (5-6 Nm).

To insure good contact, the battery cable ring terminals should be tight on the battery posts. If the posts or cable ring terminals are corroded, the cables should be disconnected and the posts and clamps cleaned separately with a soda solution and a wire brush. Install cable ring terminals on battery posts and tighten to a torque of 10-15 lbf-ft (13-20 Nm). Replace protective caps to prevent corrosion and sparks.

4.6 COMMON CAUSES OF BATTERY FAILURE

When a battery fails, the cause of failure may be related to something other than the battery. For this reason, when a battery failure occurs, do not be satisfied with merely recharging or replacing the battery. Locate and correct the cause of the failure to prevent recurrence. Some common external causes of battery failure are as follows:

- 1. A defect in charging system such as high resistance or a faulty alternator or regulator.
- 2. A malfunction within the 12 volts system (equalizer).

- 3. Overloads caused by a defective starter or excessive use of accessories.
- 4. Dirt and electrolyte on top of the batteries causing a constant drain.
- 5. Hardened battery plates, due to battery being in a low state of charge over a long period of time.
- Shorted cells, loss of active material from plates.
- Driving conditions or requirements under which the vehicle is driven for short periods of time.
- 8. A constant drain caused by a shorted circuit such as an exposed wire or water infiltration in junction boxes causing ground fault.
- 9. Extended operation of preheating system with engine not running.
- Failing to close disconnect switches during the night.

4.7 TROUBLESHOOTING

If a battery is known to be good and then has not performed satisfactorily in service for no apparent reason, the following factors may reveal the cause of trouble:

- 1. Vehicle accessories and disconnect switches inadvertently left on overnight.
- 2. Defects in the charging system, such as high wiring resistance, faulty alternator, regulator or battery equalizer.
- A vehicle electrical load exceeding the alternator (or battery equalizer) capacity, with the addition of electrical devices, such as CB radio equipment, a cellular phone or additional lighting systems.
- Defects in the electrical system, such as shorted or pinched wires.
- 5. Extended driving at a slow speed while using many accessories.
- Loose or poor battery cable-to-post connections, previous improper charging of a run-down battery, or loose hold-down clamp bolts.
- 7. High-resistance connections or defects in the cranking system.

5. ELECTRICAL SYSTEM MONITOR

This vehicle is equipped with an electronic device that monitors and detects abnormal alternator, voltage regulator, battery banks or battery equalizers conditions. The monitor is installed in the main power compartment (XL2-45) (refer to fig. 4), or in the engine compartment "Battery balance" and R.H. side (MTH). The "Battery Hi/Lo" warning lamps connected to this module are mounted in the dashboard (refer to "Operator's Manual" for location). If a malfunction should occur, the monitor sends a signal to the driver through the warning light of the malfunctioning component. If the Hi/Lo" warning light is illuminated, check the 24 volt voltmeter to determine if the battery voltage is too high or too low.

NOTE

According to the battery charging condition, it is normal that "Battery Hi/Lo" warning light illuminates upon starting the engine and stays illuminated for a few seconds. This is caused by the normal voltage drop of the battery during starting.

5.1 TELLTALE LIGHT DEFINITIONS Battery Hi/Lo

Voltmeter drops below 24 V dc

- Check alternator output.
- Check voltage regulator.
- Check battery connections.
- Check battery cells.
- Check battery equalizer connections.

Voltmeter exceeds 30 V dc

- Check alternator output.
- Check voltage regulator.
- Check battery connections.

Battery Balance

NOTE

Allow at least 15 minutes to balance batteries after any corrective measure has been taken.

- 1. Batteries out of balance (difference greater than 1.5 volts between the two battery banks).
 - Check battery equalizer connections.
 - Check equalizer cables for proper gauge.

- Check battery connections.
- 2. Demand for 12 volt power exceeding rated amperage output of battery equalizers causing batteries to go out of balance.
 - Reduce 12 volt load or install additional battery equalizer(s).

"Battery" Warning Light

This warning light is not controlled by the electronic monitor, but by the "R" terminal of the alternator using the normally-closed contact of relay R-33. If a voltage drop should occur in the charging system, the "Battery" telltale light will immediately illuminate to warn the driver. The "Battery Hi/Lo" telltale light will illuminate if voltage drops below 24 V dc.

Refer to heading "Diagnosis of Charging System Problems" later in this section, to determine weather the alternator or the voltage regulator is defective. Should the "Battery" telltale light illuminate while the 24 volt voltmeter keeps on giving a normal reading and the "Battery Hi/Lo" telltale light does not illuminate, the relay R-33 or its wiring is probably defective.

\triangle CAUTION \triangle

Relay R-33 should never be replaced with a relay provided with a suppressor diode on its coil as the output current (between 12 and 14 volts) at the alternator "R" terminal is not rectified, thus rendering the relay inoperative.

NOTE

When the "Battery" warning light illuminates, the "A/C & Heating" system shuts off in order to prevent battery discharge.

6. BOSCH ALTERNATOR

One or two 24 volt 140 amp., self regulated, belt driven, air-cooled BOSCH alternators may be used in the 24 volt electrical system (instead of the DELCO 24 volt 270 amp. alternator).

Change the brushes and voltage regulator as per "Repair and Testing Instructions for T1 Alternator 0120 69 552" every 100,000 miles (160 000 fm) or once every two years, whichever comes first.

Replace bearings as per "Repair and Testing Instructions for T1 Alternator 0120 69 552" every 200,000 miles (320 000 fm) or once every four years, whichever comes first.

NOTE

Use Polyrex EM grease (684922) when repacking the bearings. Grease comes in 14.1 oz (400gr) cartridges.

Refer to Bosh T1 Alternator Maintenance Manual Annexed at the end of this section.

6.1 TWIN BOSCH ALTERNATORS INSTALLATION

If the alternators needed to be removed, reinstall as follows. Refer to figure 28 for installation and to figure 29 for tightening specifications:

- Install alternator mounting bracket (1, figure 28) to the gear case. Use the four flanged phosphor alloy bolts on the pulley end of the bracket and the flanged nuts at the transmission end of the bracket;
- Bolt the alternators to the bracket using the three inch bolt at the top of the upper alternator (2, fig 28) and flanged bolts at the other mounting bosses (3 and 4, figure 28). Tighten the bolts in the sliding sleeves (4, figure 28) last as they will adjust to prevent breaking the alternator mounting bosses upon final tightening. Repeat for the second alternator:
- 3. On the drive shafts of both alternators, install key, pulley, spring washer and nut. Tighten to 220 Lbf-ft (300 Nm);

NOTE

Final tightening of the pulleys can be performed once the belt is installed. This will help keep the pulley from turning when tightening.

- 4. Install the snubber bracket (5, fig. 28) using three flanged bolts. Do not tighten the adjustment bolts on the snubber until after final tightening;
- Install the compressor belt idler pulley (6, fig. 28) as shown. A stud inserts into one of the mounting holes of the pulley assembly. Fasten this one using a nut and bolts for the other two.

7. DELCO ALTERNATOR

The 24 volt charging system consists of a belt driven, oil-cooled, brushless alternator, a 24 volt voltage regulator, an alternator relay and a 12 volt system that includes a 12 volt, 100 amp equalizer. The components used in this system are described under the applicable headings hereafter.

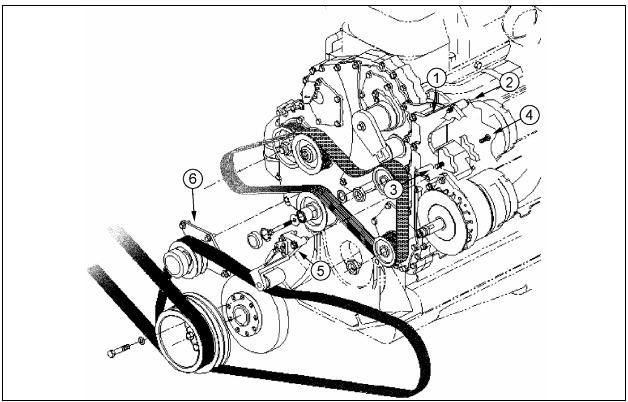


FIGURE 28: TWIN BOSCH ALTERNATORS INSTALLATION

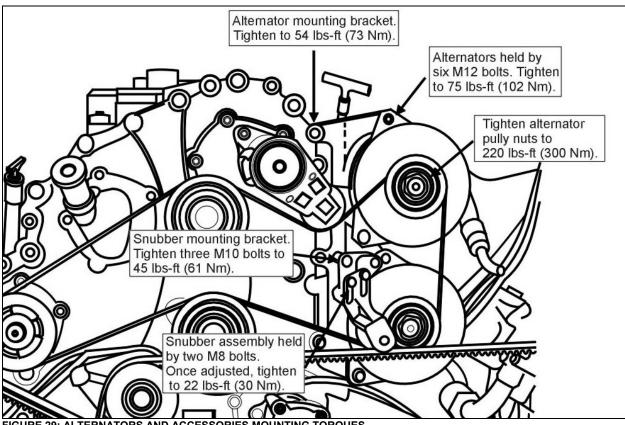


FIGURE 29: ALTERNATORS AND ACCESSORIES MOUNTING TORQUES

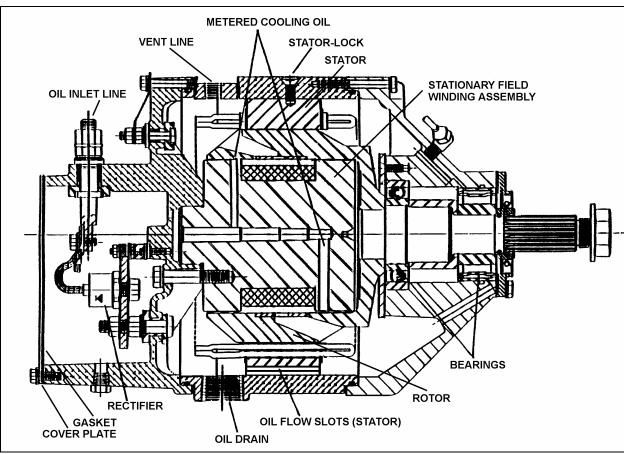


FIGURE 30: 50DN DELCO ALTERNATOR SECTIONAL VIEW

06493

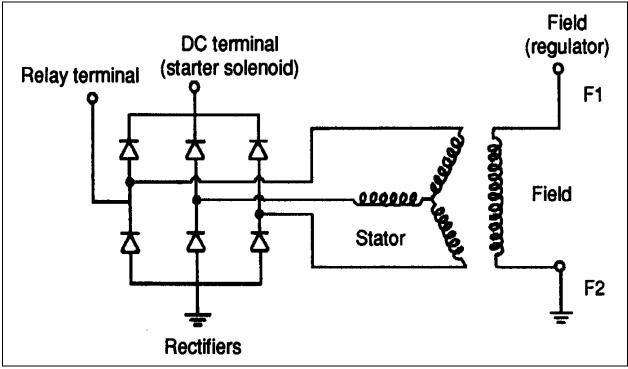


FIGURE 31: ALTERNATOR WIRING DIAGRAM (DELCO)

06067

This oil-cooled alternator is self rectifying. All current carrying members, windings, built-in diodes, and field coils are stationary. The only moving component is the rotor. The alternator is a totally-enclosed unit, cooled and lubricated by engine oil. The oil inlet is on the diode end cover. The oil drains back into the engine crankcase through the drive end frame and drive adapter housing.

This alternator should never be operated with the oil supply line disconnected. A continuous flow of engine oil through the alternator lubricates the bearings and cools the assembly. Four terminals are used on this alternator: the DC output terminal, two field terminals, and a 12 volt relay terminal. The alternator output voltage is regulated by a separate 24 volt regulator that controls the alternator field current (Fig. 30 and 31).

\triangle CAUTION \triangle

electrical sy stem is **NEGATIVE** GROUNDED. Connecting the batteries or a battery charger with the positive terminal grounded will endanger the alternator diodes and vehicle wiring by a high current flow. Burned wiring harnesses and burned "open" diodes will result. Alw avs ensure that the alternator and battery polarities are matched prior to installation. THE ALTENATOR WILL NOT REVERSE TO ACCEPT INVERSE POLARITY. Also, do not ground or short across any of the alternator or regulator terminals.


\triangle CAUTION \triangle

Since there are no brushes, slip rings, or rubbing seals, the alternator requires no periodic maintenance other than the following:

- Check alternator-to-engine mounting bolts for looseness and tighten to the proper torque.
- Check all electrical connections for tightness and corrosion. Clean and tighten connections as necessary. Be sure wiring insulation is in good condition and that all wiring is securely clipped to prev ent chafing of the insulation.
- 3. With the engine running, listen for noise and check the alternator for vibration. If the alternator is noisy or v ibrates excessively, it should be remov ed for inspection and repair.
- 4. Ensure that battery terminals are clean and tight

NOTE

The relay coils connected to the alternator "relay terminal" SHOULD NEVER BE PROVIDED WITH A SUPPRESSOR DIODE as the output current at this terminal is not rectified, thus rendering relay inoperative.

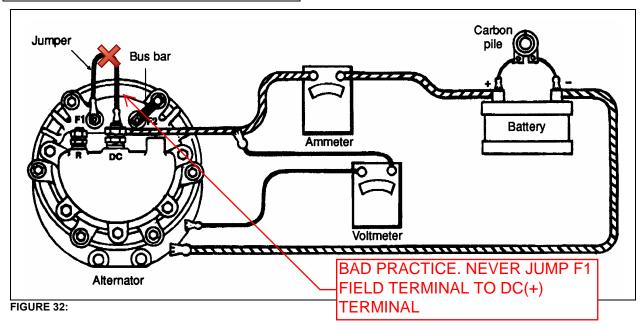


8. CHARGING SYSTEM TROUBLESHOOTING

The troubleshooting of the charging system is made easier by the use of a 12 and a 24 volt voltmeter, "Battery", "Battery balance" and "Battery Hi/Lo" telltale lights mounted in the dashboard (for location refer to the "Operator's Manual"). The definition of each warning light is explained under the "ELECTRICAL SYSTEM MONITOR"

8.1 ALTERNATOR OR VOLTAGE REGULATOR



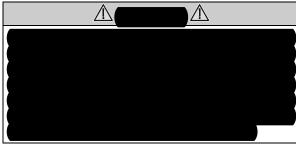



8.2 ALTERNATOR DIAGNOSIS

\triangle CAUTION \triangle

Before checking the alternator, set the battery master switch to the OFF position.

It is not necessary to disassemble completely the alternator to make elect rical checks. All electrical checks are made at the diode end of the assembly without having to remove the rotor, drive end frame or bearing. If the electrical components are not defective but bearing replacement is necessary, this can be done at the drive end without having to disassemble the diode end of the unit.

The components in the alternator that require electrical checks are the field winding, the six diodes, and the stator winding.

8.2.1 Diode Checks

Each diode may be checked for shorts and opens as follows:

- 1. Ensure the battery master switch is set to the "OFF" position.
- 2. Remove the pipe plug from underneath the end housing to drain the oil in the rectifier engine oil supply.
- 3. Remove the cap screws (7) and lock washers that attach the diode end cover to the end housing. Remove the end cover from the end housing.

NOTE

Do not operate the alternator unless this unit is completely reassembled.

- 4. Remove seal from the end housing, detach and remove "DC" and relay terminals, stud, insulating sleeves and O-rings.
- Disconnect all diode flexible leads; i.e. three from the output terminal stud and three from the diode supports. See figure 33 for more details.

Each diode may be checked for short or open circuits with an ohmmeter.

NOTE

The ohmmeter polarity may be determined by connecting its leads to the voltmeter leads. The voltmeter will read up-scale when the negative leads are connected together and the positive leads are connected together. The polarity of the voltmeter leads may be determined by connecting the leads to the identified terminals on a battery.

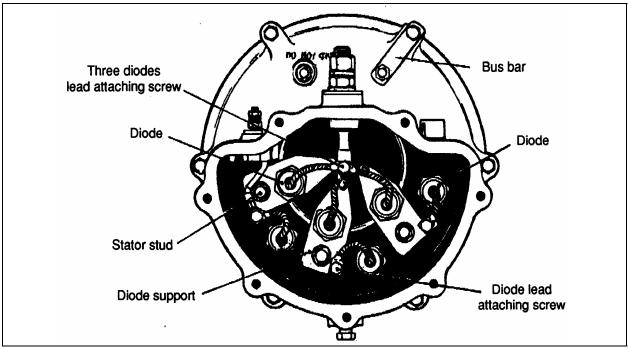


FIGURE 33: VIEW OF RECTIFIER END FRAME WITH COVER REMOVED

06069

NOTE

Use an ohmmeter with a single 1.5 volts cell. Most accurate reading will be determined when the 300 ohms value is calibrated to the center one-third of the scale. DO NOT USE high voltage, such as a 110 volts test lamp to check diodes.

To check diodes mounted in the supports for short fields, connect the positive ohmmeter lead to each diode lead and the ohmmeter negative lead to each support as shown in "A", "B", and "C" of figure 34. To check diodes mounted in the end frame for shorts, connect the ohmmeter positive lead to each diode lead and the ohmmeter negative lead to the end frame as shown in parts "D", "E", "F". The ohmmeter readings may vary considerably when checking diodes for shorts, but if the reading is 300 ohms or less, the diode is probably defective and should be replaced. A diode that reads 300 ohms or less will allow excessive reverse current from the battery. Replace defective diodes as explained later in this section.

To check the diodes mounted in the diode supports for open fields, connect the ohmmeter negative lead to each diode lead and the ohmmeter positive lead to each support as shown in parts "A", "B", and "C" of figure 35. To check the diodes mounted in end frame for shorts, connect the ohmmeter negative lead to

each diode lead and the ohmmeter positive lead to the end frame as shown in parts "D", "E" and "F". An infinite resistance reading indicates an open diode. Diodes can be replaced by following the procedure outlined under DIODE REPLACEMENT".

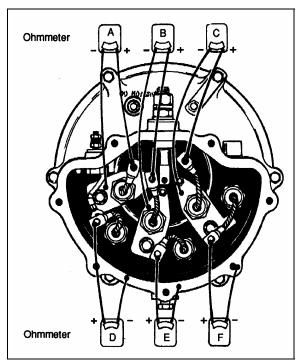


FIGURE 34: DIODE TESTING

06070

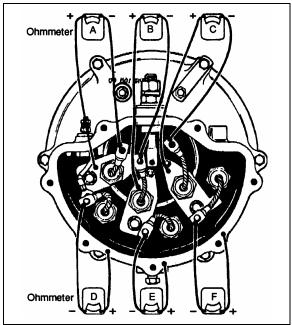


FIGURE 35: DIODE TESTING

06071

When reinstalling diodes, torque to 9-11 lbf-ft (12-15 Nm). Re-stake next to the threads in an arbor press with a 1/8 inch (3,2 mm) round punch. Press the punch with gradual pressure. Do not strike as the shock may damage the diodes.

8.2.2 Field Winding Check

The field winding may be checked for shorts and opens with an ohmmeter. To check the winding, connect the ohmmeter to field terminal and to ground. A resistance reading above normal indicates an open, and a reading less than normal indicates a short field. The normal resistance value is 3.0 to 3.3 ohms at 80 (27°C). An alternate method of checking is to place a battery of specified voltage, and an ammeter in series with the field winding. The current should register 7.2 to 8.3 amperes at 24 volts. Coil resistance is approximately 3.1 ohms. Amperage readings, other than the above, indicate an open, grounded, or shorted field. A defective field coil can be replaced by removing the end frame on which the field terminal is located and then removing the four field coil mounting screws. See FIELD REPLACEMENT" for a detailed procedure.

8.2.3 Stator Winding Check

The stator winding may be checked for open and short fields with an ohmmeter as follows:

Open Fields

Connect the ohmmeter leads to two pairs of diode supports as shown in parts "A", "B", and "C" of figure 36. Correct polarity of the leads must be observed. The ohmmeter should indicate a low resistance. If an infinite or a high resistance is measured in either one or both checks, the stator windings are open.

Ground

To check the stator windings for ground, connect an ohmmeter to the diode support and diode end frame as shown in part "C" of figure 36. The ohmmeter should indicate a very high or infinite resistance. If zero or a very low resistance is measured, the windings are grounded.

Shorts

The stator windings are difficult to check for shorts without finely calibrated laboratory test equipment due to the very low resistance values of the windings. However, if all other alternator checks are satisfactory, yet the unit fails to perform to specifications, shorted stator windings are probable.

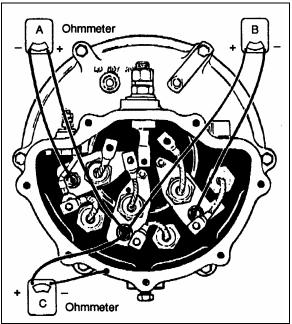


FIGURE 36: STATOR WINDING TEST

06072

8.3 DIODE REPLACEMENT

The following replacement procedures are based on the assumption that the diode end cover is still off and diode leads were disconnected as explained earlier in this section.

NOTE

When replacing a diode, make sure it is designed for a negative ground system. The diode can be identified by the symbol stamped on the diode case. The arrow must point toward the diode flexible lead.

To replace the three diodes that are mounted in the supports attached to the stator lead studs, it is necessary to remove the diode and support assembly. The two outer diode and support assemblies are identical and can be installed on either side. The center unit has a different support, with 2 inches (50,8 mm) between the mounting hole centers.

NOTE

The outer supports are provided with 2 ¼" (57,15 mm) center holes.

8.3.1 Diode Replacement (in Support)

- Remove nut with lock washer attaching the diode support to the stator lead stud.
- 2. Remove nut, lock washer, and flat washer attaching support to the small stud in the end frame.
- 3. Remove the diode and support assembly. Then remove insert from small hole in support or from small stud in the end frame.
- 4. Remove nut and flat washer from diode mounting stud, and then remove diode from the support.
- Place a new diode in the support and install a flat washer and nut on the diode mounting stud. Hold the diode with a wrench placed over flats on the diode, while tightening nut on the mounting stud to a torque of 160-180 lbf-in (18-20 Nm).
- 6. Place diode and support assembly over the stator lead stud and the small mounting stud. Place insert over small stud inside the hole in the support. Install flat washer, lock washer, and nut on the small stud, and tighten to a torque of 22-25 lbf-in (2-3 Nm). Install nut with lock washer on stator lead stud and tighten firmly.

8.3.2 Diode Replacement (in End Frame)

To remove diode, use a thin 1 inch open end wrench on flats of the diode case to unscrew diode from the end frame. Thread the new diode into the end frame and tighten to a torque of

160-180 lbf-in (18-20 Nm). If no other parts are to be replaced, refer to "DIODE" END COVER INSTALLATION" in this section.

8.4 FIELD REMOVAL

- 1. Remove three diode and support assemblies from the end frame to provide access to the lower field to end frame bolts (2).
- Remove nut with lock washer and flat washer from three stator lead studs.
- Remove the six bolts and lock washers attaching the diode end frame to the stator frame.
- Separate the end frame from the stator frame, and remove the end frame and field assembly from the rotor while pushing the stator lead studs out of the end frame.
- Remove nut, lock washer, flat washer, and insulating washer which secure the field lead terminal stud in the end frame. Push the stud out of the end frame.
- 6. Remove field terminal stud insulating bushing and seal from the end frame. Remove insulating sleeve from the field terminal stud.
- 7. Remove the four bolts and lock washers attaching the field to the end frame.
- 8. To separate the field from the end frame, install four 3/8-24 x 3 inch bolts in place of the 3/8-24 x 2 inch bolts removed in step 7. Thread bolts in to even heights. Support the end frame in an arbor press. Then, using a suitable press plate to exert pressure on all four bolt heads, press the field out of the end frame.

8.5 FIELD INSTALLATION

- Position the field assembly on the end frame. Insert four 3/8-24 x 3 inch bolts through the end frame and thread into the field to keep holes aligned.
- 2. Support the end frame on an arbor press bed so that the diodes will not be damaged, and press the field into the end frame. Press in until shoulder on field coil bottoms against the end frame.
- 3. Remove the four guide bolts. Install four 3/8-24 x 2 inch bolts, using new lock washers to attach the field to the end frame. Tighten bolts securely.

- 4. Place insulating sleeve in inner side of the field terminal stud hole in the end frame, and insert the terminal stud through the sleeve. Place two O-rings and insulating bushing over the terminal stud and push into hole in the end frame. Install insulating washer, flat washer, toothed lock washer, and nut on terminal stud. Tighten firmly.
- 5. Install each stator lead stud in the end frame as follows: Place insulating washer over the stud and insert the stud through the end frame. Place the insulating bushing over the stud and position in end frame hole. Install flat washer, lock washer, and nut on the stud. Tighten firmly.
- Install three diode and support assemblies on the end frame as previously directed under "DIODE REPLACEMENT".
- Install a new seal in notch around end of the stator frame. Insert field into the rotor and position the end frame against the stator frame. Attach end frame to the stator frame with six bolts and lock washers. Tighten bolts firmly.
- 8. If no other parts require replacement, refer to "DIODE END COVER INSTALLATION" in this section to complete the assembly.

8.6 STATOR REPLACEMENT

If tests performed under "Stator Winding Checks" earlier in this section indicated an open circuit or short in the stator, the stator and frame assembly must be replaced.

8.6.1 Removal

- Remove diode end frame and field assembly as previously directed in steps 1 through 4 under "Field Removal".
- Remove the six bolts and lock washers attaching the stator frame to the drive end frame.
- Separate the stator frame from the drive end frame and remove the stator frame from the end frame and rotor.

8.6.2 Soldering Stator Terminal Leads

- 1. Using a wire brush, thoroughly clean the wire and terminal.
- 2. Silver solder the stat or lead to the terminal using a torch.

- Thoroughly clean the silver solder connection with a wire brush.
- Using a high grade energized rosin flux, coat the silver soldered connection with a 80-20 tin-lead solder or pure tin solder to prevent deterioration of the silver solder by engine oil.

NOTE

The silver solder will provide the required mechanical strength, which will not be affected by temperature. The tin-lead solder will protect the silver solder connection from deterioration by engine oil.

8.6.3 Installation

- Position new seal in notch around the drive end of the stator frame.
- Position the stator and frame assembly over the rotor against the drive end frame. Attach the stator frame to the drive end frame with six bolts and lock washers. Tighten bolts firmly.
- Install diode end frame and field assembly as directed in steps 5, 6 and 7 under "installation".
- 4. Install rectifier end cover as directed later.

8.7 DIODE END COVER INSTALLATION

- Make sure all diodes are properly installed and securely tightened. Leads from diodes threaded into the end frame must be securely attached to the diode supports. The relay terminal lead must also be attached to the left diode support.
- Connect leads from the three diodes mounted in supports to the output terminal stud. Tighten the attachment screw firmly. Place insulating bushing over relay terminal stud.
- 3. Place a new seal in the diode end frame.
- With the end cover in place against the end frame, install the cap screws and lock washers. Tighten the cap screws evenly and firmly.
- Make sure the drain plug is installed in bottom of the end cover and securely tightened.

8.8 ALTERNATOR REMOVAL (DELCO)

- 1. Place "Starter Selector Switch" in engine compartment to the "OFF" position.
- Place the battery master switch to the "OFF" position.
- Remove alternator drive belt (see "ALTERNATOR DRIVE BELT").

NOTE

When reinstalling drive belt, it is important to set the belt tension correctly. (Refer to the appropriate heading later in this section).

4. Scratch off protective sealer from electrical connections (relay, field and positive terminals). Refer to figure 37.

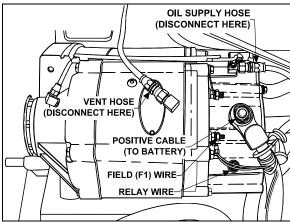


FIGURE 37: ALTERNATOR (HOSES AND WIRES) 06

NOTE

After reconnecting electrical wires, it is important to cover terminals with protective sealer (Prévost #680745).

- Disconnect wire #25 from the relay terminal, wire #107 from the field "F1" terminal and disconnect battery cable from the positive "+" terminal on the diode end cover. Tag wires removed to ease identification at time of installation. Refer to figure 37.
- Disconnect oil supply line and vent hose from top of alternator (Fig. 37) and tape lines to prevent entry of foreign matter. Disconnect oil drain hose from bottom of alternator (Fig. 38) and tape line to prevent entry of foreign matter.
- 7. Remove the four bolts and lock washers fixing the alternator (refer to fig. 38).

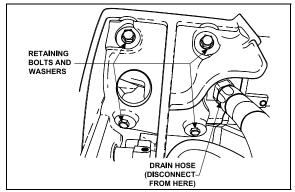


FIGURE 38: A LTERNATOR RETAINING BOLTS AND WASHERS 06350

\triangle WARNING \triangle

Alternator weights approximately 154 lbs (70 kg). Another person is required to take the alternator out of the engine compartment.

8.8.1 Disassembly of Alternator

After diode, field and stator winding checks, the alternator can be disassembled to repair a faulty component, such as field or stator, or to proceed with bearing or rotor replacement. Perform the following steps to disassemble the alternator:

- Remove nuts and washers from "DC" terminal on diode end frame.
- 2. Separate the diode cover plate from the diode end frame by removing the mounting screws.
- Remove the washer, nut and lock washer attaching the diode supports to the end frame, the three screws connecting the diode leads to the diode supports, and the three nuts which attach the stator studs to the diode supports.
- 4. Separate the diode support assemblies from the diode end frame, and the three nuts that connect the studs to the diode end frame.
- Mark the position of the drive end frame and diode frame with respect to the stator assembly so that the parts can be reassembled in the same position.
- Detach the diode end frame and field assembly from the stator assembly by removing the attachment screws.
- 7. Separate the field assembly from the diode end frame by removing the four attachment screws.

- 8. Separate the rotor assembly and drive end frame from the stator assembly by removing the attaching screws.
- Remove the shaft nut and washer, and the pulley. Press the rotor shaft out of the drive end frame.
- 10. Remove the retainer plate and pull the bearings from the drive end frame.
- 8.8.2 Alternator Cleaning and Inspection Whenever the alternator is disassembled, it should be cleaned and inspected.

Cleaning

If sludge has accumulated on the stator, a light mineral oil should be used to clean it.

Inspection

When the alternator has been disassembled to the extent that the stator is exposed, the stator should be checked for the following:

- a) Adequate varnish.
- b) Proper spacing of conductors so that "near shorts" do not exist.
- c) Proper phase lead placement.
- d) Strong conductor and cross-over welds
- 8.8.3 Bearing or Rotor Replacement

Whenever the rotor and drive end frame are disassembled for any reason, the single-row ball bearing must be replaced with a new one due to the probability of damage during disassembly.

Removal and Disassembly

- 1. If the pulley was not removed from the rotor shaft at time of alternator removal, remove the nut and flat washer from the shaft and pull the pulley off the shaft.
- Remove the six bolts and lock washers attaching the drive end frame to the stator frame. Separate the drive end frame from the stator frame. Remove the drive end frame and support assembly.
- 3. Support the drive end frame in an arbor press so that the rotor can be pressed down out of the end frame. Using a suitable adapter against the end of the rotor shaft that will pass through the inner race of the double-row ball bearing, press the rotor down out of the end frame and bearings. Since the single-row bearing outer race is held in the end frame by the retainer plate,

- and the inner race is a press fit on to the rotor shaft, the bearing will probably be damaged when the shaft is pressed out and need to be replaced with a new part.
- Remove the six screws attaching the bearing retainer plate to the drive end frame. Remove the retainer plate, the single-row bearing and the bearing spacer from the end frame.
- 5. Support the drive end frame in an arbor press with the double-row bearing down, so that the bearing can be pressed down out of the end frame. Using a suitable driver that will exert a force on the bearing outer race, press the bearing out of the end frame.
- 6. Remove the rubber bearing clamp from groove in the end frame.

Assembly and Installation

- Install a new single-row ball bearing into inner side of the drive end frame. Install the bearing retainer plate and attach with six screws. Stake screws in place after tightening.
- Position the rubber bearing clamp in the groove in bearing bore of the drive end frame. Lubricate the clamp to permit the bearing to be pressed in without dislodging or damaging the clamp.
- 3. Position the rotor in an arbor press with the shaft end up. Install the drive end frame and single-row bearing assembly over the rotor shaft. Using a driver over the rotor shaft, which will exert a force on the bearing inner race, press the bearing onto the shaft until it bottoms against the rotor.
- 4. Install bearing spacer over the rotor shaft. Position the double-row bearing over the rotor shaft at end frame bore. Using an adapter that will exert a force on both the inner and outer races of the bearing, press the bearing onto the shaft and into the end frame until the inner race bottoms against the bearing spacer.
- Place a new seal around the drive end of the stator frame.
- Insert the rotor between the stator and field, and position the drive end frame against the stator frame. Attach the end frame to the stator frame with six bolts and lock washers. Tighten the bolts to a torque of 5 to 5.4 lbf-ft (6-7 Nm).

$oldsymbol{\Lambda}$ CAUTION $oldsymbol{\Lambda}$

When replacing the alternator on the vehicle, ensure that an alternator w ith the proper drive ratio is used. Installation of an alternator with any other drive ratio will result in severe and costly damage to the alternator and engine.

8.8.4 Alternator Reassembly

Reassembly is the reverse of disassembly.

NOTE

When tightening the outside nut on the "DC" output terminal, torque the nut to 30-35 lbf-ft (41-47 Nm). The lower nut should be supported while doing so.

When reinstalling diodes, tighten to a torque of 9-11 lbf-ft (12-15 Nm).

8.8.5 Output check

When removed from the engine, the alternator may be checked without circulating oil on a test bench, providing the output is limited to 100 amperes or less. The alternator may be bench tested without circul ating oil at outputs exceeding 100 amperes, as long as the period of operation is limited to less than 15 seconds.

\triangle CAUTION \triangle

Operating the alternator at outputs greater than 100 amperes w ithout adequate oil circulation for periods exceeding 15 seconds, will cause the alternator to overheat, resulting in damage to the winding and diodes.

If the alternator is to be operated at an output greater than 100 amperes for longer than 15 seconds, circulating oil must be provided. SAE 30 engine oil must be applied to the connection on the diode end cover at a pressure of 35 psi and at a temperature of 60 °F to 220 °F (16 °C to 104 °C). This will provide an oil flow of about one gallon per minute.

To check the alternator on a test bench, make electrical connections as shown in figure 32. Make sure the negative battery terminal is connected to the alternator frame.

8.9 ALTERNATOR DRIVE BELT

Removal

- 1. Insert a ¾" socket drive into the tensioning arm opening (Fig. 39).
- 2. Twist the tensioning arm to slacken belt.

3. Remove belt.


Installation

Installation of the alternator drive belt is the reverse of removal.

8.9.1 Adjustment

Correct belt tension is required to maximize belt life. The tensioning arm maintains proper belt tension, no adjustment is required.

Check for wear and proper tension every 6,250 miles (10 000 km) or twice a year, whichever comes first.

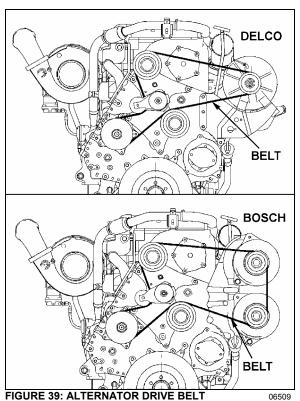

9. VOLTAGE REGULATOR (DELCO)

The 24 volt regulator used with Delco alternator is located in the engine compartment R.H. side (MTH).

The transistor regulator illustrated in figure 40 is an assembly mainly consisting of diodes, capacitors, resistors and transistors. These components are mounted on a printed circuit panel board to form a completely static unit containing no moving parts. Regulators of this type have only four terminals which are identified "GND." (ground), "FLD" (field) "BAT" (battery) and "IGN" (ignition).

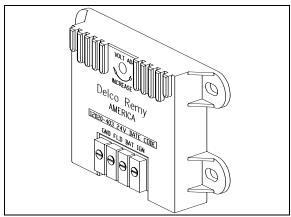


FIGURE 40: VOLTAGE REGULATOR

06408

The regulator components work together to limit the alternator voltage to the preset value by controlling the alternator field current. This is the only function that the regulator performs in the charging system.

The voltage at which the alternator operates is determined by the regulator adjustment. Once adjusted, the alternator voltage remains constant. The regulator is unaffected by length of service, changes in temperature, or changes in alternator output and speed.

A typical wiring diagram of a negative ground system is illustrated in figure 41. This diagram shows only the basic charging system components. It does not show any components such as the control relays. Refer to "Charging system" wiring diagram, in "Wiring diagrams" for the electric circuits and connections.

Voltage regulator maintenance

The voltage regulator is a service-free electronic unit. When it fails, it should be replaced. The following procedure must be used:

riangle CAUTION riangle

Set the battery master switch to the "OFF" position.

- Open the engine compartment R.H. side door in order to get access to the voltage regulator;
- Unscrew the electrical cable connectors;
- Unscrew the voltage regulator unit;
- Install a new voltage regulator by reversing the procedure.

NOTE

For information about BOSCH alternator and voltage regulator, refer to technical publication "Repair and Testing Instructions for T1 Alternator 0120 689 552".

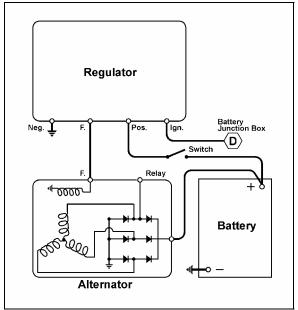


FIGURE 41: TYPICAL WIRING DIAGRAM OF A NEGATIVE GROUND SYSTEM 06415

9.1 TROUBLESHOOTING PROCEDURES

Trouble in the electrical system will usually be indicated by one of two conditions: an undercharged or an overcharged battery. Either condition can result from an improper voltage regulator setting:

Checking Battery Voltage

The absence of gas production during the continuous appearance of the green dot in the battery's built-in hydromet er indicates that the voltage setting is satisfactory. Check the following conditions:

Checking Voltage Regulator Setting

- 1. To check the voltage setting, connect a voltmeter across the "POS" and "NEG" terminals on the regulator, and an ammeter to the "C" terminal on the alternator. Refer to figure 42.
- Operate the engine at approximately 1000 rpm (about 2300 alternator rpm), with accessories on, to obtain an alternator output of 20-200 amperes.
- 3. Note the voltage setting. It should be steady at 27.5 volts.
- 4. If not, the desired setting can be obtained by removing the plug from the voltage regulator cover and slightly turning the adjusting screw inside the regulator. Turn the adjusting screw clockwise to increase the voltage setting or counterclockwise to decrease it. See figure 43 for details.


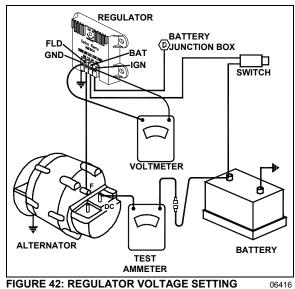


FIGURE 42: REGULATOR VOLTAGE SETTING

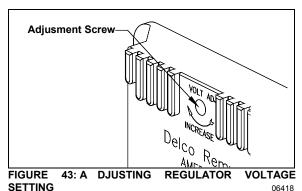

NOTE


If regulator voltage cannot be adjusted to the specified setting, remove the regulator and repair or replace it as necessary.

Undercharged Battery 9.1.1

If the voltage setting is steady and reasonably close to the specified value and the battery is undercharged, raise the setting by 0.3 volt, then check for an improved battery condition over a minimum service period of 48 hours. If the voltage cannot be adjusted to the desired value. the alternator should be checked as follows:

- Stop alternator, turn off all accessories and disconnect battery ground cable.
- 2. Disconnect all leads from the regulator and from the alternator field. Do not allow leads to touch ground.
- 3. Connect a voltmeter and an ammeter in the circuit at the alternator "DC" terminal.

4. Connect a jumper lead from the alternator "DC" terminal to the alternator field terminal.

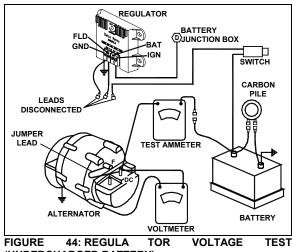

(UNDERCHARGED BATTERY)

06417

- Connect a carbon pile resistor load across the battery. Turn to the "Off" position.
- See figure 44 for wiring connections.
- 7. Reconnect battery ground cable
- Turn on all vehicle accessories.
- Operate alternator and adjust carbon pile resistor load as required to check for rated output as given in Delco-Remy Service Bulletin 1G-187 or 1G-188.
- 10. Check the alternator field winding as follows: Disconnect the lead from the field terminal and connect an ohmmeter from the field terminal to ground. A resistance reading above normal indicates an open field, and a resistance reading less than indicates a shorted or grounded field. The normal resistance can be calculated by dividing the voltage by the field current published in Delco-Remy Service Bulletin 1G-186, 1G-187, or 1G-188. The normal resistance value should be at or near midscale on the ohmmeter for accuracy. An alternate method of checking is to connect a battery of specified voltage and an ammeter in series with the field winding, and compare readings with published specifications in Delco-Remv Service Bulletin 1G-186. 1G-187, or 1G-188. An alternator defective if it does not produce rated output or if field windings are faulty. If the alternator provides rated output, and field windings check satisfactorily, the regulator should be checked as covered under "Regulator Checks".

9.1.2 Overcharged Battery

If the voltage setting as checked above is steady and reasonably close to the specified value, lower the setting by 0.3 volt and check for an improved battery condition over a minimum service period of 48 hours. If the voltage cannot be adjusted to the desired value. proceed as follows: where the alternator field is arounded internally in the alternator as shown in figure 41 a shorted or grounded field or a defective regulator can cause an overcharged battery. The field winding can be checked as covered in paragraph "Undercharged Battery". If the field winding is found to be correct, the alternator is not defective, and the regulator should be checked as covered under "Regulator Checks".

9.2 REGULATOR CHECKS

Separate the cover from the base, and remove the panel assembly from the cover. Carefully note the location of all washers and lock washers.

The component parts are keyed to figure Before making electrical checks, visually inspect the components and make sure all soldered connections are secure. Various electrical checks with an ohmmeter can be made to determine which components are defective. The ohmmeter **must** be accurate, and should be a scale-type meter with a 1.5 or 3 volt cell. Most digital ohmmeters cannot be used to check However, some digital semiconductors. ohmmeters are specially designed to test semiconductors and can be used to test components in the regulator. Consult the ohmmeter's manufacturer for specifications concerning the capabilities of the ohmmeter. It is important that all of the following checks be made. If a defective part is found, replace it before proceeding with the remaining checks. Be sure to make all the checks since more than one component may be defective.

A defective regulator can be repaired according to the following methods:

- A) By changing the printed circuit board in the regulator. Unscrew the retaining screws on the printed circuit and remove it. Install a new printed circuit board. This method is the most commonly used.
- B) By removing any retaining screws involved and unsoldering the connections. When resoldering, limit solder time to a minimum as excessive heat may damage the printed circuit board and component parts. However good soldered connections are essential for satisfactory operation. A resin core 63% tin

37% lead solder with a 360 °F (182°C) melting point is recommended along with a soldering iron rated at 50 watts or less. Use extreme care to avoid overheating. Before checking the printed circuit board, remove transistor TR1, which must be checked separately. Connect the ohmmeter as shown in figure 45, and then reverse the ohmmeter leads to obtain two readings on the same component. Use the middle scale on scale-type meters on which the 300 ohm value should be within or nearly within, the middle third of scale.

Capacitors C1 and C2 = The ohmmeter should read high and low on each capacitor. If not, replace capacitor.

Diodes D1, D2 and D3 = Each diode should give one high and one low reading. If not, replace diode.

Resistor R2 = Turn voltage adjustment screw (identified in figure 43) with ohmmeter connecting each way. Reading should change as slotted screw is turned. If not, replace R2.

Transistor TR1 = See figure 45. Use the low scale. Each of the three checks should read low and high. If not, replace TR1.

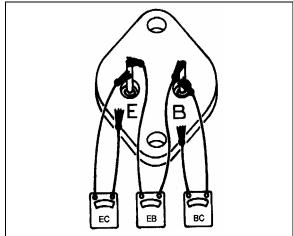


FIGURE 45: CHECKING TRANSISTOR TR1

06081

Transistor TR2 = Change the ohmmeter to use the low scale. EB should read low and high. BC should read low and high. EC should both read high. If not, replace TR2. See figure 46.

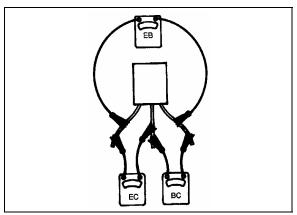


FIGURE 46: CHECKING TRANSISTOR TR2

06081

9.3 ADJUSTING VOLTAGE

After repair, the regulator must be adjusted to the desired voltage setting. Follow the procedure under "Checking Voltage Regulator Setting". Slowly turn the adjusting screw full range and observe the voltmeter to ensure that the voltage is being controlled, then, while still turning, slowly adjust to the desired setting.

10. BATTERY EQUALIZER

VoltMaster Battery Equalizer Owner's Manual (100 amps) is annexed at the end of this section.

Refer to "Electrical Compartments and Junction Box" in this section, for location.

11. STARTER

Refer to Mitsubishi Electric Corporation (MELCO) Service bulletin ME003-P annexed at the end of this section for information and maintenance instruction on MELCO 105P70 starter.

\triangle CAUTION \triangle

Prior to the installation of the Mitsubishi starter, the Fly wheel Ring Gear must be examined for excess we are or damage. Service Bulletin A1-M1N-1729EN included at the end of Section 06 shows acceptable levels of wear, and illustrates the proper measuring procedure. Maximum wear is 0.5mm. Ring Gears with more than 0.5mm of wear or damage must be replaced before installing the new starter to prevent engagement and/or disengagement problems. Failure to do so will render the Warranty null and void.

\triangle CAUTION \triangle

Do not engage starter for more than 15 seconds at a time. If engine does not start within 15 seconds, release ignition key and let starter cool for one minute before attempting to restart.

12. ENGINE BLOCK HEATER

The vehicle may be equipped with an engine immersion-type electric block heater to assist cold weather starting. The heater male electric plug is easily accessible through the engine compartment R.H. side door (Fig. 47). To use it, connect the female plug of an electrical extension cord to the heater plug. The extension cord must be plugged into a 110-120 V AC power source only. The engine block heater should be used whenever the vehicle is parked for an extended period of time in cold weather and a suitable power source is available.

12.1 MAINTENANCE

This heater is non-serviceable except for the cord, and if faulty, must be replaced as a unit.

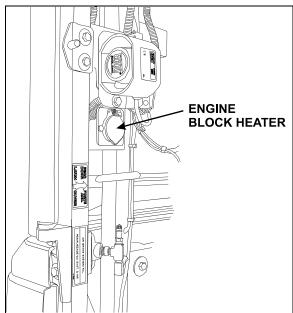


FIGURE 47: ELECTRIC HEATER PLUG LOCATION 18354

13. EXTERIOR LIGHTING

The circuit for exterior lights, as well as their control switches, relays and circuit breakers are shown on the applicable wiring diagrams. Wiring diagrams are located in the technical publication box.

13.1 HEADLIGHTS

Each headlight assembly consists of two headlamp module 90 mm (3½ inch) equipped with a 12-volt halogen bulb and one 100 mm (4 inch) 12-volt LED turn/signal lamp. Outer lamps have a double function (both low and high beam). Inner lamps are used for high beam or daytime running light. The inner or outer lamp uses the same single filament halogen bulb part number.

NOTE

If vehicle is equipped with optional Xenon headlamps, refer to paragraph 13.1.6.

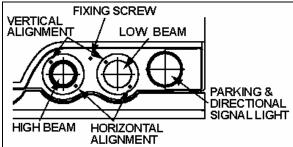


FIGURE 48: HEADLIGHT ASSEMBLY

06546

13.1.1 Headlight Beam Toggle Switch

The multifunction lever located on the steering column is used to select proper lighting. High beams or low beams can be selected by pulling the lever rearward. A high beam indicator on the central dashboard panel is illuminated when the high beam circuit is energized.

NOTE

Pulling the lever rearward while the lights are off will flash the headlights.

13.1.2 Maintenance

Clean headlights with soap and water and a good glass cleaner whenever dirty. For maximum illumination, headlight connections must be coated with a dielectric grease to prevent oxidation and proper voltage must be maintained. Low battery voltage, loose or dirty contacts in wiring system and poor ground contribute to a decrease in voltage. Check wiring and connections regularly and keep battery properly charged. When a headlight burns out, a new bulb must be installed. Headlights must be properly aimed to provide maximum allowable road illumination. When using mechanical aiming devices. follow manufacturer's instructions.

Headlight aim should be checked after installing a new bulb. Aiming can be performed without opening headlight assembly. Horizontal and vertical aiming of each module is provided by two adjusting screws that pivot the module in the housing for proper alignment (fig. 48). There is no adjustment for focus since the module is set for proper focus during manufacturing assembly.

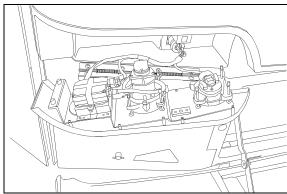


FIGURE 49: OPENING HEADLIGHT ASSEMBLY

06547

NOTE

Make sure headlight assembly is properly positioned into its housing before securing using fixing screw.

\triangle CAUTION \triangle

Use a soft cloth to clean the parking and front turn signal lamp.

13.1.3 Headlight Adjustment

The following is a general procedure for headlight adjustment using mechanical equipment, such as a "Hoopy 100" Aligner. If your mechanical equipment is different, refer to the manufacturer's instruction manual.

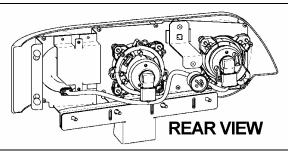


FIGURE 50: HEADLIGHT ASSEMBLY REAR VIEW 06548

Setting aligner according to slope

1. Park vehicle on a level floor.

2. Set the support rail (Prévost #29261) down (Fig. 51). Using shims, adjust its level to stabilize it.

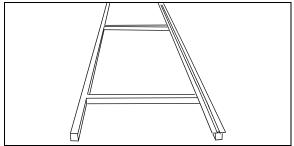


FIGURE 51: SUPPORT RAIL INSTALLATION

06501

3. Install jigs #29263 and #29262 onto the support rail. Position the support rail so that both stops are centered between the two beams (Fig. 52). Mark the position for future reference.

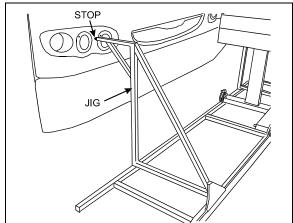


FIGURE 52: INSTALLATION OF JIGS

06499

NOTE

The stops will position the support rail between 16-24 inches of vehicle.

- 4. Remove the jigs.
- 5. Install "Hoopy 100" Aligner onto support rail (Fig. 53).
- 6. Using an Allen key on the front wheel, level Hoopy 100 aligner until spirit level bubble is centered (Fig. 54 and 55).
- 7. Install a calibration fixture in the axis of front axle wheel and one in the axis of rear axle wheel (Fig. 56).
- 8. Adjust mirrors so that lines are perfectly aligned.
- 9. Record reading.

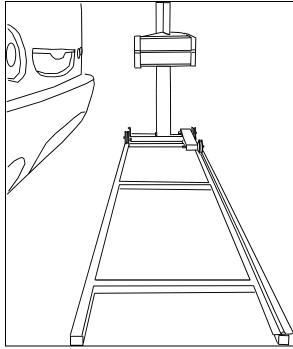


FIGURE 53: INSTALLATION OF HOOPY 100 ALIGNER

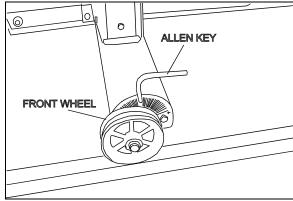


FIGURE 54: ADJUSTING HOOPY 100 LEVEL

06498

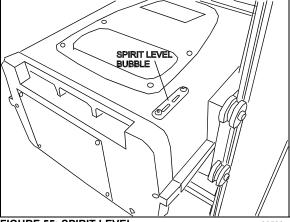


FIGURE 55: SPIRIT LEVEL

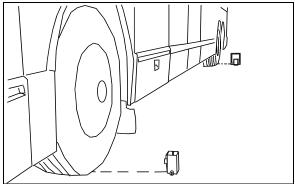


FIGURE 56: INSTALLING CALIBRATION FIXTURES 06497

NOTE

The floor level reading must be added to the aligner reading to ensure a precise alignment.

 Transfer positive (+) or negative (-) reading of calibration fixtures to the front wheel of Hoopy 100 aligner. Add this reading to Hoopy 100 aligner level reading.

* eg – level: 0.2, mirrors: 0.1 = 0.3

* eg – level: -0.2, mirrors: 0.1 = 0.1

NOTE

If vehicle remains stationary during the headlight alignment procedure, it is not necessary to check floor slope each time.

Headlight Alignment

\triangle CAUTION \triangle

This mechanical equipment must be calibrated by metrology before initial set-up or after major overhaul. Calibration must be performed annually.

- Set the support rail (Prévost #29261) down (Fig. 51). Using shims, adjust its level to stabilize it. Use previous reference marks to ensure proper positioning.
- 2. Make sure that headlight assembly screw is properly fastened (Fig. 48).

NOTE

Make sure that the vehicle is at proper height (suspension) and that air pressure is above 90 psi.

3. Install "Hoopy 100" Aligner onto support rail (Fig. 53). Turn aligner ON.

riangle CAUTION riangle

Vehicle must be parked at the same location each time. If location is changed for any reason, floor slope alignment and aligner leveling must be redone. Refer to "Setting aligner according to slope".

NOTE

If aligner indicates LOW BATT, battery must be charged for 12 hours.

Low Beam Adjustment

- 1. Turn ON low beam lights.
- Press ALIGN TO LAMP and move aligner in front of first beam.

NOTE

If beam is offset, a LOW CANDLES message will appear. Using vertical and horizontal alignment screws, adjust beam as needed (fig. 48).

- Adjust aligner height (move aligner sideways if needed) so that XX appears in the aligner sight. Lock aligner side handle.
- 4. Open Hoopy 100 aligner door.
- Press AIM LAMP down; press a second time so that LOW ADJUST appears in the sight. Arrows indicate in which direction to adjust the beam using the vertical and horizontal adjustment screws. Perform this adjustment until XX appears in the sight.
- 6. Aligner will reset after 5 minutes.
- 7. Repeat for other low beam light.

High Beam Adjustment

- 1. Turn ON high beam lights.
- Press ALIGN TO LAMP and move aligner in front of first beam.
- Adjust aligner height (move aligner sideways if needed) so that XX appears in the aligner sight. Lock aligner side handle.
- 4. Open Hoopy 100 aligner door.
- 5. Press AIM LAMP down; press a second time so that HIGH ADJUST appears in the sight. Arrows indicate in which direction to adjust the beam using the vertical and horizontal adjustment screws. Perform this adjustment until XX appears in the sight.
- 6. Aligner will reset after 5 minutes.
- 7. Repeat for other high beam light.
- 8. Store equipment away in a safe place.

If proper mechanical equipment is not available, perform adjustments as described hereafter:

- 1. Headlight aiming and inspection can be accomplished by visual means. This is done on a screen located at a distance of 25 feet (7.6 m) of the headlights. It should be of adequate size with a matte-white surface well shaded from extraneous light properly adjusted to the floor area on which the vehicle stands. Provisions should be made for moving the screen or its vertical centerline so that it can be aligned with the vehicle axis. In addition to the centerline, the screen should be provided with four laterally adjustable vertical tapes and two vertically adjustable horizontal tapes.
- The four movable vertical tapes should be located on the screen at the left and right limits called for in the specification with reference to centerlines ahead of each headlight assembly.
- 3. The headlight centerlines shall be spaced either side of the fixed centerline on the screen by ½ the lateral distance between the light source centers of the pertinent headlights. The horizontal tapes should be located on the screen at the upper and lower limits called for in the specification with reference to the height of beam centers and the plane on which the vehicle rests, not the floor on which the screen rests (Fig. 57).
- 4. The nominal vertical aim position on lower beam headlights shall be adjusted based on the headlight mounting height, from the ground to the light source center of the headlight, according to table1.

TABLE 1 - VERTICAL BEAM AIM GUIDELINES

Headlight (centerline) Mounting Height	Nominal Vertical Aim	Aim Inspection Limits for Vertical Aim
56 to 90 cm (22 to 36 inch)	0 Vertical	10 cm (4 inch) up to 10 cm (4 inch) down
90 to 120 cm (36 to 48 inch)	5 cm (2 inch) down	5 cm (2 inch) up to 15 cm (6 inch) down
120 to 140 cm (48 to 54 inch)	6.4 cm (4 inch) down	4 cm (1.5 inch) up to 16.5 cm (6.5 inch) down

 High beam headlights are aimed so that the center of the high-intensity zone is located at the horizontal and straight ahead vertically (Fig. 58). Low beam headlights are aimed so that the top edge (the cutoff) of the high-intensity zone is at the vertical location as per Table 1 and the left edge of the high-intensity zone is at the vertical centerline of the headlight (Fig. 59).

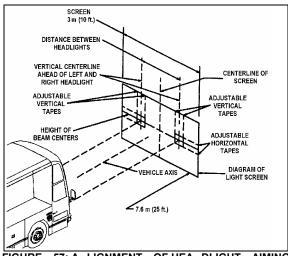


FIGURE 57: A LIGNMENT OF HEA DLIGHT AIMING SCREEN 06502

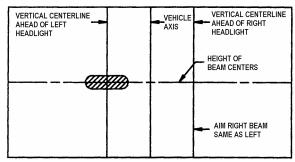


FIGURE 58: HIGH-INTENSITY ZONE (SHADED AREA) OF A PROPERLY AIMED UPPER BEAM ON THE A IMING SCREEN 7.6 M (25FT) IN FRONT OF VEHICLE 06503

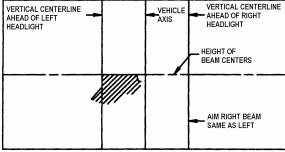


FIGURE 59: HIGH-INTENSITY ZONE (SHADED AREA) OF A PROPERLY AIMED LOWER BEAM ON THE AIMING SCREEN 7.6 M (25FT) IN FRONT OF VEHICLE 06504

7. The inspection limits for high-beam headlights shall be with the center of the high-intensity zone from 10 cm (4 in) up to 10 cm (4 in) down; and, from 10 cm (4 in) left to 10 cm (4 in) right on a screen at 7.6 m (25 ft) (Fig. 60).

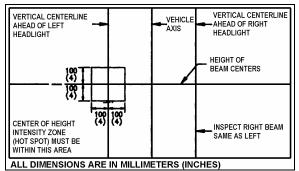


FIGURE 60: AIM INSPECTION LIMITS FOR UPPER-BEAM HEADLIGHTS 06505

8. The inspection limits in the vertical direction for low-beam headlights or the low beam of a dual-beam headlight, shall be as described in Table 1. In the horizontal direction, the left edge of the high-intensity zone shall be located from 10 cm (4 in) left to 10 cm (4 in) right of the vertical centerline of the beam. The viewing screen shall be located 7.6 m (25 ft) in front of the vehicle (Fig. 61).

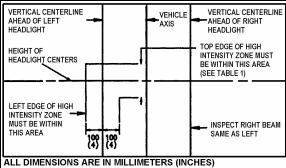


FIGURE 61: A IM INSPECTION LIMITS FOR LOWER-BEAM HEADLIGHTS 06506

13.1.4 Sealed-Beam Unit

Bulb Removal and Replacement

- Pull the release handle located inside the front service compartment to tilt down the entire bumper assembly.
- 2. Remove the headlight screw fixing the headlight assembly, then tilt headlight assembly down (Fig. 48 and 49).
- 3. Remove connector from headlight bulb.
- Remove the bulb by pushing and rotating it out of the socket.
- Install the new bulb by reversing the previous procedure.

$oldsymbol{\Lambda}$ CAUTION $oldsymbol{\Lambda}$

During this step, avoid contacting the bulb with the fingers not to alter the bulb life.

NOTE

Do not disrupt headlight adjustment screws.

Module Replacement

- Pull the release handle located inside the front service compartment to tilt down the entire bumper assembly.
- 2. Remove the headlight screw fixing the headlight assembly, then tilt headlight assembly down (Fig. 48 and 49).
- 3. Remove connector from headlight bulb.
- 4. Unfasten three metal clips attaching headlight unit to support.
- 5. Install new module and fasten metal clips.
- 6. Install wiring connector on back of new sealed beam unit.
- 7. Tilt headlight assembly up into its housing then secure using fixing screw.

NOTE.

Make sure headlight assembly is properly positioned into its housing before securing using fixing screw.

8. Perform alignment procedure.

NOTE

The headlight aim must be checked and adjusted even if it was properly adjusted before the sealed beam unit was replaced.

13.1.5 Front Turn Signal

The front turn signal is part of the front headlight assembly. The turn signal is a sealed unit (LED) located on each front corner and should be replaced as an assembly. Turn signal is visible from both front and side.

Removal and Replacement

- Pull the release handle located inside the front service compartment to tilt down the entire bumper assembly.
- 2. Remove the headlight screw fixing the headlight assembly, then tilt headlight assembly down (Fig. 48 and 49).
- 3. Partially unfasten back plate fixing screws, then remove signal lamp.
- 4. Remove socket from signal lamp.
- 5. Install wiring connector on back of new signal lamp then install signal lamp.

Fasten back plate fixing screws then tilt headlight assembly up into its housing then secure using fixing screw.

NOTE

Make sure headlight assembly is properly positioned into its housing before securing using fixing screw.

13.1.6 Optional Xenon Headlamp

The outer lamps of each headlight assembly may be equipped with the optional Xenon lamps. These lamps improve visibility and provide better lifespan.

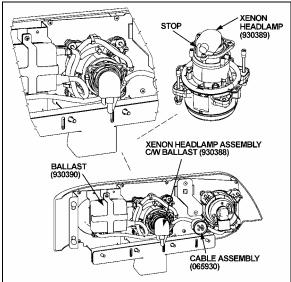


FIGURE 62: XENON HEADLAMP LOCATION

06549

Bulb Removal and Replacement

- 1. Pull the release handle located inside the front service compartment to tilt down the entire bumper assembly.
- 2. Remove the headlight screw fixing the headlight assembly, then tilt headlight assembly down (Fig. 48 and 49).
- 3. Remove main cable connector (066011).
- 4. Remove connector from headlamp bulb by turning counterclockwise.
- 5. Unscrew the three Phillips head screws, pull the retainer and bulb out.

riangle CAUTION riangle

To avoid breaking the bulb, make sure the socket is in proper position against the stop.

6. Install the new bulb by reversing the previous procedure.

\triangle CAUTION \triangle

During this step, avoid contacting the bulb with the fingers not to alter the bulb life.

NOTE

Do not disrupt headlight adjustment screws.

\triangle CAUTION \triangle

Never connect a v oltmeter or V.O.M. to measure bulb voltage as instrument will be destroyed.

Troubleshooting and Safety

When switching on the Xenon headlamp using the rocker switch, a lamp short -circuit test is performed.

Current is detected in the lamp circuit before the ignition time and ignition prevented. Connection of the "hot" lamp to the body mass also prevents ignition. In both cases, the system is cut off within < 0.2 s and can only be restarted via the rocker switch.

In general, the maximum ignition time is < 0.2 s, which period is followed by c utoff. This would happen if a lamp was defected.

Lamp missing: system is cut off after < 0.2 s.

If lamp components or cables are damaged by force (accident) so that contact with hazardous parts is possible, the current in these lines is earthed by the vehicle body and - as with a defective household appliance - switched off when 30 mA are reached within < 0.2 s. the cutoff time is shortened by a more powerful defect current.

To protect the ballast, a counter in the electronic safety system ensures that a defective lamp can only be switched off 7 times consecutively after a successful ignition, after which the device is cut off. This prevents flutter and flashing. This counter is put out of action when the lamp cutoff time repetition interval is longer than 1.3 s so that temporary non-defect disturbances that result in immediate invisible re-ignition do not cause lamp cutoff.

A warning notice on the lamp plug makes you aware of the fact that the lamp is operated in this system on a higher voltage (you should therefore switch off the lamp before working on this part).

After taking out the lamp, the contact pins are in a practically idle state (< 34 Volt) after < 0.5 seconds so that there is no immediate danger of electric shock even if the warning is disregarded.

With this safety concept there is no danger to check the ballast with a new bulb. There is a very high probability that the ballast is OK if the ballast can ignite the bulb.

One simple test to check the ballast would be to measure the Nominal current of 1.58 A after one minute for the 24V ballast.

13.2 STOP, TAIL, DIRECTIONAL, BACK-UP, AND HAZARD WARNING LIGHTS

A combination stoplight, taillight, directional signal light and back-up light assembly is mounted at the rear, on each side of the vehicle. Furthermore, when braking, two center stoplights (LED) and a cyclops light (LED) will illuminate simultaneously with the stoplights on the sides for increased safety. The L.H. and R.H. side center stop lights are also used as directional signal and marker lights.

The stop, tail, directional signal and back-up lights consist of individual LED lights mounted on the engine rear door, and each light is serviced individually as a complete unit. The back-up light uses a regular tungsten bulb. The hazard warning flashing system uses the front, side and rear directional lights simultaneously. This system is energized by a switch on the L.H. dashboard.

13.2.1 Lamp Removal and Replacement

- 1. Open engine compartment rear door.
- Remove the lamp support retaining screws (2), and then from the outside, remove the lamp and its support.
- 3. From the outside, install the new lamp with its support then fasten the retaining screws.

13.2.2 Center Stoplights and Cyclops Light Removal and Replacement

These (LED) lights are sealed unit and should be replaced as an assembly in accordance with the following procedure:

- Unscrew both "Phillips" light screws then remove the light assembly.
- Install new light assembly and secure using screws.

13.3 LICENSE PLATE LIGHT

Two LED units are mounted above the rear license plate(s) of vehicle. In case of burn out, the LED unit must be changed according to the following procedure.

- Pry out the rubber seal with a small screwdriver. Pull on the LED unit and disconnect it.
- 2. Reconnect new LED unit, place rubber seal, and press on it until it is seated in position.

13.4 CLEARANCE, IDENTIFICATION AND MARKER LIGHTS

The vehicle is equipped with marker, identification and clearance lights (LED). The clearance lights are mounted at each corner of the coach near the top and the identification lights are in the upper center of rear and front sections.

The rear clearance and identification lights are red and the front ones are amber.

The amber marker lights are mounted along the sides of vehicle.

- 13.4.1 Marker Light Removal and Replacement The side marker light is a sealed unit (LED) and should be replaced as an assembly in accordance with the following procedure:
- 1. Unscrew both "Phillips" light screws, and then remove the light assembly.
- 2. Position the new light assembly and install the "Phillips" screws.

13.4.2 Clearance and I dentification Light Removal and Replacement

The clearance and identification light are sealed units (LED) and can be replaced in accordance with the following procedure:

- 1. Unscrew both "Phillips" light screws, and then remove the light assembly.
- 2. Position the new light assembly, and then install the "Phillips" screws.

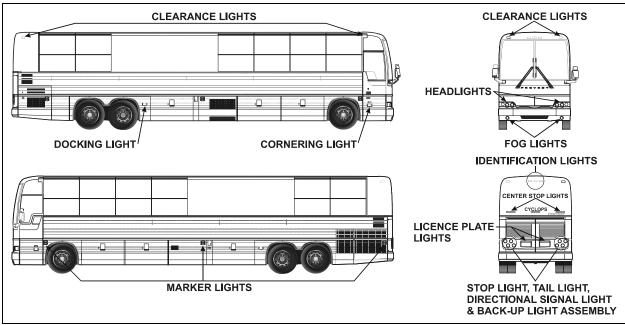


FIGURE 63: VARIOUS LIGHTS LOCATION

06544

13.5 DOCKING AND CORNERING LIGHTS

MTH vehicles are provided with two halogen sealed-beam units that serve as cornering lights. They are mounted on the vehicle as follows: one is mounted on the front L.H. side service compartment door, while the other is located on the entrance door on the R.H. side. The main function of these lights is to increase lateral visibility when turning a corner. These lights are energized simultaneously with the directional lights. A dashboard-mounted rocker switch may be actuated to cancel this system in special situations.

Two additional halogen sealed-beam units may be installed aft of the rear baggage compartment. These lights are used as docking lights and both will illuminate automatically when reverse range is selected to facilitate back-up or docking procedure. The cornering lights do not operate automatically when the reverse range is selected, but by means of a dashboard-mounted rocker switch. When the docking position is selected, the docking as well as the cornering lights illuminate.

13.5.1 Lamp Removal and Replacement

Both docking and cornering sealed-beam units can be changed in accordance with the following procedure:

 Remove the two "Phillips" screws attaching the retaining ring.

- 2. Disconnect the light unit connection.
- 3. Remove the lamp.
- 4. Position new lamp.
- 5. Connect and position the light unit.
- 6. Finally, install the retaining ring.

13.6 FOG LIGHTS

Optional halogen fog lights can be mounted on this vehicle to give the driver better visibility in foggy weather, or to improve the range of vision just ahead of the coach.

13.6.1 Bulb Removal and Replacement

- Pull on the release handle located in the front service compartment, near the door lower hinge. The bumper will lower gradually.
- Unscrew the wing nut and pivot assembly upwards.
- Unscrew the outer ring. Disconnect the light unit connection and remove the bulb.
- 4. Install the new bulb, reconnect the light unit and replace in its proper position.

\triangle CAUTION \triangle

During this step, avoid contacting the bulb with your fingers. This could alter the bulb life.

- Reinstall the outer ring, pivot the assembly downwards.
- 6. Fasten the wing nut and securely close the bumper.

14. INTERIOR LIGHTING EQUIPEMENT

14.1 CONTROL PANEL LIGHTING

The instrument gauges and switches mounted on all control panels are energized whenever the exterior light switch is pushed to the first position. A control dimmer located on the dashboard is used to vary the brightness of the panel gauges, switches and indicator lights. The gauge lights, panel light s, switch lights and indicator lights have a different bulb arrangement. Thus, the procedure to change a defective bulb can vary according to the application.

14.1.1 Switch Lighting

- 1. Slightly pull the swit ch with a defective LED away from the control panel.
- 2. Disconnect the electric cable from the switch.
- 3. To install a new switch, reverse the procedure (Fig. 64).

NOTE

Switches are lighted by the use of LED. When lighting on a switch fails, replace defective switch as a unit.

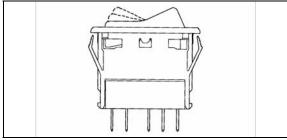


FIGURE 64: SWITCH

06321

14.1.2 Telltale Light Replacement

Telltale module is non-serviceable and must be replaced as a unit.

- 1. Unscrew and remove the top dashboard panel.
- 2. Remove the telltale back wire electric connectors.
- 3. Unscrew and remove the telltale module.
- 4. To replace the telltale module, reverse the procedure.

14.1.3 Gauge Light Bulb Replacement

- 1. For any gauge light bulb replacement, the dashboard panel must be removed in order to have access to the rear of gauges.
- 2. Remove bulb socket from the gauge, turn the defective bulb counterclockwise and pull it out of the gauge.
- 3. Push a new bulb and socket ASM and turn clockwise to lock in place.
- 4. Replace the rear dashboard housing.

14.2 STEPWELL LIGHTS (COACHES ONLY)

Two Stepwell lights are illuminated when the door opening system is activated.

14.2.1 Bulb Removal and Replacement

Proceed as follows to replace a defective bulb:

- 1. Unscrew the two Phillips-head screws retaining the lens to the wall, and remove it.
- 2. With the light lens removed, pull bulb from the lamp while applying lateral pressure.
- 3. Install the new bulb into the lamp.
- 4. Position the light lens and install it.

14.3 LAVATORY NIGHT-LIGHT

The lavatory night-light is illuminated as soon as the ignition switch is set to the "ON" position.

14.3.1 Bulb Removal and Replacement

- 1. Unscrew the two Phillips-head screws retaining the lens to the wall, and remove it.
- 2. With the light lens removed, pull bulb from the lamp while applying lateral pressure.
- Install the new bulb into the lamp.
- 4. Position the light lens and install it

14.4 DRIVER'S AREA LIGHTS

Two halogen ceiling lights are installed over the stepwell and the driver's area. These lights are frequently used for night-time operation when passengers board or leave coach.

14.4.1 Bulb Removal and Replacement

- Unsnap the lamp with a flat head screwdriver and remove it.
- 2. Pull the defective bulb out of the socket.
- 3. Install the new bulb by pushing it in position.

4. Replace the lamp by snapping it back in place.

\triangle CAUTION \triangle

Do not touch halogen bulbs with bare hands as natural oils on skin will shorten bulb life span.

14.5 PASSENGER SECTION LIGHTING

The passenger section of coach is lit by two types of fluorescent tube lamps installed on the parcel racks.

The aisle or indirect lights are located on front of parcel racks, and provide soft, indirect cabin lighting and parcel rack interior lighting. More powerful lighting for general and in-station applications is provided by fluorescent tubes located under the parcel racks, close to the windows. A dual power system is available for this lighting either from the 24 volt vehicle power supply or from a 110 volt outlet supply. In order to save batteries during extended periods of instation lighting, no curr ent is drawn from the batteries as soon as the 110 volt circuit is connected.

Moreover, adjustable reading lamps are installed under the parcel racks for passenger accommodation.

14.5.1 Fluorescent Tube Replacement

Indirect Fluorescent Light

- 1. Open the parcel rack access door, if so equipped, unscrew the two Phillips screws (one each end). Let the hinged cover down.
- 2. Remove fluorescent tube from light socket.
- 3. Install a new fluorescent tube.
- 4. Lift the hinged cover and replace the retaining screws (Fig. 58).

Parcel Rack Interior Lighting

- 1. Open the parcel rack access door, if so equipped, unscrew the two Phillips screws (one each end). Pull the hinged cover down.
- 2. Push on the bulb, turn and then, pull it from the socket.
- 3. Install a new bulb.
- 4. Lift the hinged cover and replace the two retaining screws.

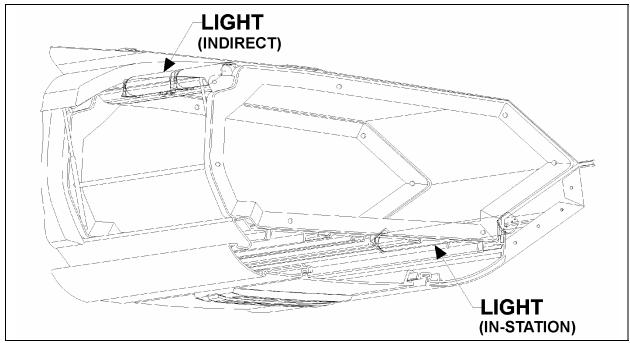


FIGURE 65: PARCEL RACK LIGHTING

06419

14.5.2 Removal and Replacement of In-Station Fluorescent Tubes

1. Start by pulling out the corner of the lens then delicately peeling it out of its seat.

riangle Caution riangle

The lens is fragile. Be v ery careful w hen removing and handling.

- Rotate and pull the fluorescent tube from its sockets.
- 3. Install a new fluorescent tube, rotating the tube to secure it in the sockets.
- 4. Replace the screen lens by first inserting one side in the seat, then push the other side in and snap it in place by running it in from one corner to the next.
- 14.5.3 Removal and Replacement of Reading Lamp Bulb
- 1. Engage the tool (#830164) over the lamp and turn one quarter turn counterclockwise. Then, remove the tool slowly.
- Pull the bulb socket off the reading lamp unit.
- 3. Push and turn bulb counterclockwise, then pull it out of the socket.

- 4. Install new bulb in the socket, then push and turn clockwise to lock bulb in position.
- 5. Push the bulb socket in the reading lamp unit.
- 6. Position the reading lamp with the tool (#830164), turn one quarter turn clockwise.

14.6 ENGINE COMPARTMENT LIGHTING

A switch located on R.H. side of rear junction box can be used to actuate the two oval engine compartment lights.

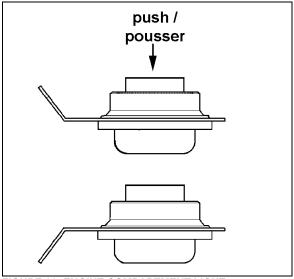


FIGURE 66: ENGINE COMPARTMENT LIGHT

Section 6: ELECTRICAL

Each light is sealed and can be replaced as follows:

- 1. Disconnect the light unit connection.
- 2. Remove the lamp.
- 3. Position new lamp.
- 4. Connect the light unit.
- 5. Make sure the retaining ring is installed properly.

14.7 LAVATORY LIGHT

The halogen lavatory light is installed on ceiling. A microswitch, mounted in the door exterior frame, is activated by the door lock mechanism upon locking to energize the circuit. This switch is readily serviced by removing the two Phillipshead screws securing the mounting plate to the door exterior frame.

Bulb removal and replacement:

- Unsnap the lamp with a flat head screwdriver and remove it.
- 2. Pull the defective bulb out of the socket.
- 3. Install the new bulb by pushing it into position.
- 4. Replace the lamp by snapping it back in place.

\triangle CAUTION \triangle

Do not touch halogen bulbs with bare hands as natural oils on skin will shorten bulb life span.

15. LIGHT BULB DATA

When replacing a light bulb, special attention must be paid to the voltage rating (refer to light bulb data hereafter).

LIGHT BULB DATA					
APPLICATION	PREVOST PART NO.	TRADE OR SAE NUMBER	WATTS OR CANDLE POWER	VOLTS	QTY
EXTERIOR LIGHTING					
Hi/Lo-beam	930291	9004	65/45 W	12	2
Lo-Beam Xenon (optional)	930388	D2S	35 W	12	2
Docking & cornering	930319	9415	37.5W	12	4
Fog	930361	Н3	55 W	12	2
License plate (sealed)	930266	TL 15206		12	2
Marker Light (red)	930340	Grote 47072-3		12	2
Marker Light (amber)	930341	Grote 47073		12	10
Identification (red)	930334	TL 25420R		12	3
Clearance (red)	930334	TL 25420R		12	4
Identification (amber)	930337	TL 25450Y		12	3
Clearance (amber)	930337	TL 25450Y		12	4
Front directional (hazard & marker)	562135	3057	32/3W	12	2
Rear directional	560589	1156	32 W	12	4
Stop	560589	1156	32 W	12	8
Back-up	560589	1156	32 W	12	4
Center stop	930330	HELLA 96208		12	2

LIGHT BULB DATA					
APPLICATION	PREVOST PART NO.	TRADE OR SAE NUMBER	WATTS OR CANDLE POWER	VOLTS	QTY
EXTERIOR LIGHTING	ITING				
Cyclops	930330	HELLA 96208		12	1
Tail	560123	67	4 W	12	4
Exterior compartment (except engine)	562278	6429	10 W	24	12
Engine compartment	930383	SEALED	25 W	12	2

LIGHT BULB DATA					
APPLICATION	PREVOST PART NO.	TRADE OR SAE NUMBER	WATTS OR CANDLE POWER	VOLTS	QTY
INTERIOR LIGHTING					
Instrument cluster lights	562838	2721 MFX		12	
Telltale panel assy.	562907				1
Step light (Coaches)	562278	6429	10 W	24	2
Lavatory	830176	Q20MR16	20 W	12	1
Parcel rack	560144	1820	1.6 W	12	AR
Driver's area	830176	Q20MR16	20 W	12	2
"EMERGENCY EXIT" decal	560601	456	2 W	24	AR
"LAVATORY OCCUPIED"	563108	168	3 W	12	1
"WATCH YOUR STEP"	561166	1820	1.6 cp	24	2
Aisle	560141	1251	3 W	24	AR
Reading	563260	303	6 W	24	AR
Fluorescent (In-Station)	830153	F32T8/SP41	32 W		AR
Destination sign fluorescent	830120	F30T8CW4	30 W		1
Fluorescent (Indirect)	830152	F13T5/CW	13 W		AR

16. SPECIFICATIONS

Battery	
Make	
Model	
Type	
Terminal type	
Volts	
Load test amperage	
Reserve capacity (minutes)	
Cold cranking (in amps)	
-At 0°F (-18°C)	950 (each battery)
Maximum dimensions (inches/mm)	` ',
-Length (including flange)	13 0/330 2
-Width	
-Height (including top posts)	
-Approximate weight (lbs/kg)	59/26,7
* Battery tester cable clamps should be between terminal nuts and lead pads of te value should be 210 amperes.	erminals. If not possible, load
Torque specifications	
Battery cable to post	10-15 Ft-lbs (13-20 Nm)
Battery cover	` ,
Electrical system monitor	
Make	
Model	
Input	
System low	
Trip level	
Prévost Number	
Alternator	
Make	
Model Number	
Series	
Type	600
Field current at 80°F (27°C)	
-Amperes	
-Volts	24
Hot output	
-Amperes	,
-Volts	28
-Approximate rpm	3000
Ground	negative
Prévost number	561723

Regulator	
Make	Delco-Remy
Model Number	
Type Voltage adjustment	
Prévost number	
Alternator	
Make	BOSCH
Model Number	0120689552
Series	T1
Hot output	
-Amperes	
-Volts	
-Approximate rpmGround	
Prevost Number	•
Battery equalizer	
Make	Vanner
Model	
Amperes	•
Prévost Number	563334
Starter	
Make	
Model Number Type	
Voltage	
Prévost Number	
No-load test	
-Volts	23.5
-Max. current draw	125 amperes
-Min. rpm	3000 rpm
Starter solenoid	
Make	
Model Number	
Pull In Voltage	10 VOILS Max.

SECTION 07: TRANSMISSION

CONTENTS

	1.	DESCRIPTION	2
3.1. MANUAL FLUID LEVEL CHECK	2.	WELDING PROCEDURES	2
3.1.1 Cold Check	3.	MAINTENANCE	3
3.1.1 Cold Check		3.1 MANUAL FLUID LEVEL CHECK	3
3.1.2 Hot Check 3.2 FLUID LEVEL CHECK USING THE PUSHBUTTON SHIFT SELECTOR. 3.4 KEEPING OIL CLEAN. 3.5 MPORTANCE OF PROPER FLUID LEVEL. 5.3.4 KEEPING OIL CLEAN. 5.5 RECOMMENDED AUTOMATIC TRANSMISSION FLUID. 5.5 RECOMMENDED AUTOMATIC TRANSMISSION FLUID. 5.6 OIL CONTAMINATION. 6.7 METAL PARTICLES. 6.7 METAL PARTICLES. 6.8 COLANT LEAKAGE. 6.9 CONTROL SYSTEM PROGNOSTICS. 6.9 CONTROL SYSTEM PROGNOSTICS. 6.0 J.10 OIL AND FILTER CHANCE INTERVAL. 10 OIL AND FILTER CHANCE INTERVAL. 11 TANSMISSION OIL COOLER REMOVAL. 12 CELEANING AND INSPECTION OF ALLISON AUTOMATIC TRANSMISSION. 13 6.1 BREATHER. 13 6.1 BREATHER. 13 7. ALLISON TRANSMISSION INSTALLATION. 14 8.1 4™ GENERATION TRANSMISSION TROUBLESHOOTING. 14 8.1 4™ GENERATION TRANSMISSION CONTROL MODULE. 8.2 DIAGNOSTIC TROUBLESHOOTING CODES (DTC) — ALLISON 4™ GENERATION CONTROLS. 8.4 DIAGNOSTIC CODES — ALLISON 4™ GENERATION CONTROLS. 8.5 DIAGNOSTIC CODE SEPONSE. 8.6 DIAGNOSTIC TROUBLESHOOTING CODES (DTC) — ALLISON 4™ GENERATION CONTROLS. 15 BL.5 DIAGNOSTIC TROUBLESHOOTING CODES (DTC) — ALLISON 4™ GENERATION CONTROLS. 15 BL.5 DIAGNOSTIC CODE RESPONSE. 8.6 DIAGNOSTIC TROUBLESHOOTING CODES (DTC) — ALLISON 4™ GENERATION CONTROLS. 15 BL.5 DIAGNOSTIC TROUBLESHOOTING CODES (DTC) — ALLISON 4™ GENERATION CONTROLS. 15 BL.5 DIAGNOSTIC CODE RESPONSE. 8.6 DIAGNOSTIC TROUBLESHOOTING CODES (DTC) LIST - ALLISON 4™ GENERATION CONTROLS. 18 PSPECIFICATIONS. 21 ILLUSTRATIONS 12 FIGURE 2: ALLISON TRANSMISSION CONTROL PAD. 16 FIGURE 5: HOT CHECK. 4 FIGURE 5: HOT CHECK. 4 FIGURE 6: ORAIN PLUG AND FILTERS. 11 FIGURE 7: VOLVO ENGINE CRANKING POSITION. 12 FIGURE 5: HOT CHECK. 4 FIGURE 5: ALLISON OIL COOLER. 12 FIGURE 9: ALIS PRESSURE REGULATOR (TYPICAL). 14 FIGURE 4: ALIS PRESSURE REGULATOR (TYPICAL). 15 FIGURE 5: ALIS PRESSURE REGULATOR (TYPICAL).			
3.3 IMPORTANCE OF PROPER FLUID LEVEL		3.1.2 Hot Check	4
3.4 KEPING OIL CLEAN. 5 3.5 RECOMMENDED AUTOMATIC TRANSMISSION FLUID. 5 3.6 OIL CONTAMINATION. 6 3.7 METAL PARTICLES. 6 3.8 COOLANT LEAKAGE. 6 3.9 CONTROL SYSTEM PROGNOSTICS 6 3.10 OIL AND FILTER CHANGE INTERVAL 10 4. ALLISON TRANSMISSION REMOVAL 11 5. TRANSMISSION OIL COOLER REMOVAL 11 5. TRANSMISSION OIL COOLER REMOVAL 12 6. CLEANING AND INSPECTION OF ALLISON AUTOMATIC TRANSMISSION. 13 6.1 BREATHER. 13 7. ALLISON TRANSMISSION INSTALLATION. 13 8. ALLISON AUTOMATIC TRANSMISSION TROUBLESHOOTING 14 8.1 4™ GENERATION TRANSMISSION CONTROL MODULE. 14 8.2 DIAGNOSTIC TROUBLESHOOTING CODES (DTC) — ALLISON 4TH GENERATION CONTROLS 15 8.3 DIAGNOSTIC CODES — ALLISON 4™ GENERATION CONTROLS 15 8.4 DIAGNOSTIC CODE DISPLAY AND CLEARING PROCEDURE — ALLISON 4™ GENERATION CONTROLS 15 8.5 DIAGNOSTIC CODE RESPONSE 16 8.6 DIAGNOSTIC CODE RESPONSE 16 8.6 DIAGNOSTIC TROUBLESHOOTING CODES (DTC) LIST - ALLISON 4™ GENERATION CONTROLS 15 8.5 DIAGNOSTIC CODE RESPONSE 16 8.6 DIAGNOSTIC TROUBLESHOOTING CODES (DTC) LIST - ALLISON 4™ GENERATION CONTROLS 15 8.7 DIAGNOSTIC CODE DISPLAY AND CLEARING PROCEDURE — ALLISON 4™ GENERATION CONTROLS 15 8.5 DIAGNOSTIC CODE RESPONSE 16 8.6 DIAGNOSTIC CODE DISPLAY AND CLEARING PROCEDURE — ALLISON 4™ GENERATION CONTROLS 15 8.7 DIAGNOSTIC CODE DISPLAY AND CLEARING PROCEDURE — ALLISON 4™ GENERATION CONTROLS 15 8.5 DIAGNOSTIC CODE DISPLAY AND CLEARING PROCEDURE — ALLISON 4™ GENERATION CONTROLS 15 8.6 DIAGNOSTIC CODE DISPLAY AND CLEARING PROCEDURE — ALLISON 4™ GENERATION CONTROLS 15 8.6 DIAGNOSTIC CODE DISPLAY AND CLEARING PROCEDURE — ALLISON 4™ GENERATION CONTROLS 15 8.6 DIAGNOSTIC TROUBLESHOOTING CODES (DTC) LIST - ALLISON 4™ GENERATION CONTROLS 15 8.6 DIAGNOSTIC CODE DISPLAY AND CLEARING PROCEDURE — ALLISON 4™ GENERATION CONTROLS 15 8.6 DIAGNOSTIC CODE DISPLAY AND CLEARING PROCEDURE — ALLISON 4™ GENERATION CONTROLS 15 8.7 DIAGNOSTIC CODE DISPLAY AND CLEARING PROCEDURE — ALLISON 4™ GENERATION CONTROLS 15 8.7 DIAGNOSTIC CODE DISPLAY AND CLEARING PROCEDURE — ALLISON 4™ GENERATION CONTROLS 15 8.7 DIAGNOSTIC CODE		3.2 Fluid Level Check Using the Pushbutton Shift Selector	4
3.5 RECOMMENDED AUTOMATIC TRANSMISSION FLUID		3.3 IMPORTANCE OF PROPER FLUID LEVEL	5
3.6 OIL CONTAMINATION			
3.7 METAL PARTICLES			
3.8 COOLANT LEAKAGE			
3.9 CONTROL SYSTEM PROGNOSTICS			
3.10 OIL AND FILTER CHANGE INTERVAL			
4. ALLISON TRANSMISSION REMOVAL			
5. TRANSMISSION OIL COOLER REMOVAL			
6. CLEANING AND INSPECTION OF ALLISON AUTOMATIC TRANSMISSION	4.	ALLISON TRANSMISSION REMOVAL	11
6. CLEANING AND INSPECTION OF ALLISON AUTOMATIC TRANSMISSION	5.	TRANSMISSION OIL COOLER REMOVAL	12
6.1 BREATHER			
7. ALLISON TRANSMISSION INSTALLATION			
8. ALLISON AUTOMATIC TRANSMISSION TROUBLESHOOTING			
8.1 4™ GENERATION TRANSMISSION CONTROL MODULE	7.	ALLISON TRANSMISSION INSTALLATION	13
8.2 DIAGNOSTIC TROUBLESHOOTING CODES (DTC) — ALLISON 4TH GENERATION CONTROLS	8.	ALLISON AUTOMATIC TRANSMISSION TROUBLESHOOTING	14
8.3 DIAGNOSTIC CODES – ALLISON 4 TH GENERATION CONTROLS		8.1 4 TH GENERATION TRANSMISSION CONTROL MODULE	14
8.3 DIAGNOSTIC CODES – ALLISON 4 TH GENERATION CONTROLS		8.2 DIAGNOSTIC TROUBLESHOOTING CODES (DTC) — ALLISON 4TH GENERATION CONTROLS	15
8.5 DIAGNOSTIC CODE RESPONSE 16 8.6 DIAGNOSTIC TROUBLESHOOTING CODES (DTC) LIST - ALLISON 4™ GENERATION CONTROLS 18 9. SPECIFICATIONS 21 ILLUSTRATIONS FIGURE 1: ALLISON TRANSMISSION 2 FIGURE 2: ALLISON TRANSMISSION CONTROL PAD 2 FIGURE 3: OIL LEVEL DIPSTICK (AUTO. TRANS.) 3 FIGURE 4: COLD CHECK 3 FIGURE 5: HOT CHECK 4 FIGURE 6: DRAIN PLUG AND FILTERS 11 FIGURE 7: VOLVO ENGINE CRANKING POSITION 12 FIGURE 8: ALLISON OIL COOLER 12 FIGURE 9: AIR PRESSURE REGULATOR (TYPICAL) 14		8.3 DIAGNOSTIC CODES – ALLISON 4 TH GENERATION CONTROLS	15
8.6 DIAGNOSTIC TROUBLESHOOTING CODES (DTC) LIST - ALLISON 4 TH GENERATION CONTROLS 18 9. SPECIFICATIONS 21 ILLUSTRATIONS FIGURE 1: ALLISON TRANSMISSION 2 FIGURE 2: ALLISON TRANSMISSION CONTROL PAD 2 FIGURE 3: OIL LEVEL DIPSTICK (AUTO. TRANS.) 3 FIGURE 4: COLD CHECK 3 FIGURE 5: HOT CHECK 4 FIGURE 6: DRAIN PLUG AND FILTERS 11 FIGURE 7: VOLVO ENGINE CRANKING POSITION 12 FIGURE 8: ALLISON OIL COOLER 12 FIGURE 9: AIR PRESSURE REGULATOR (TYPICAL) 14			
9. SPECIFICATIONS 21 ILLUSTRATIONS FIGURE 1: ALLISON TRANSMISSION 2 FIGURE 2: ALLISON TRANSMISSION CONTROL PAD 2 FIGURE 3: OIL LEVEL DIPSTICK (AUTO. TRANS.) 3 FIGURE 4: COLD CHECK 3 FIGURE 5: HOT CHECK 4 FIGURE 6: DRAIN PLUG AND FILTERS 11 FIGURE 7: VOLVO ENGINE CRANKING POSITION 12 FIGURE 8: ALLISON OIL COOLER 12 FIGURE 9: AIR PRESSURE REGULATOR (TYPICAL) 14		8.5 DIAGNOSTIC CODE RESPONSE	16
ILLUSTRATIONS 2 FIGURE 1: ALLISON TRANSMISSION 2 FIGURE 2: ALLISON TRANSMISSION CONTROL PAD 2 FIGURE 3: OIL LEVEL DIPSTICK (AUTO. TRANS.) 3 FIGURE 4: COLD CHECK 3 FIGURE 5: HOT CHECK 4 FIGURE 6: DRAIN PLUG AND FILTERS 11 FIGURE 7: VOLVO ENGINE CRANKING POSITION 12 FIGURE 8: ALLISON OIL COOLER 12 FIGURE 9: AIR PRESSURE REGULATOR (TYPICAL) 14		· ,	
FIGURE 1: ALLISON TRANSMISSION 2 FIGURE 2: ALLISON TRANSMISSION CONTROL PAD 2 FIGURE 3: OIL LEVEL DIPSTICK (AUTO. TRANS.) 3 FIGURE 4: COLD CHECK 3 FIGURE 5: HOT CHECK 4 FIGURE 6: DRAIN PLUG AND FILTERS 11 FIGURE 7: VOLVO ENGINE CRANKING POSITION 12 FIGURE 8: ALLISON OIL COOLER 12 FIGURE 9: AIR PRESSURE REGULATOR (TYPICAL) 14	9.	SPECIFICATIONS	21
FIGURE 1: ALLISON TRANSMISSION 2 FIGURE 2: ALLISON TRANSMISSION CONTROL PAD 2 FIGURE 3: OIL LEVEL DIPSTICK (AUTO. TRANS.) 3 FIGURE 4: COLD CHECK 3 FIGURE 5: HOT CHECK 4 FIGURE 6: DRAIN PLUG AND FILTERS 11 FIGURE 7: VOLVO ENGINE CRANKING POSITION 12 FIGURE 8: ALLISON OIL COOLER 12 FIGURE 9: AIR PRESSURE REGULATOR (TYPICAL) 14		LUCTRATIONS	
FIGURE 2: ALLISON TRANSMISSION CONTROL PAD 2 FIGURE 3: OIL LEVEL DIPSTICK (AUTO. TRANS.) 3 FIGURE 4: COLD CHECK 3 FIGURE 5: HOT CHECK 4 FIGURE 6: DRAIN PLUG AND FILTERS 11 FIGURE 7: VOLVO ENGINE CRANKING POSITION 12 FIGURE 8: ALLISON OIL COOLER 12 FIGURE 9: AIR PRESSURE REGULATOR (TYPICAL) 14	_	LUSTRATIONS	
FIGURE 3: OIL LEVEL DIPSTICK (AUTO. TRANS.) 3 FIGURE 4: COLD CHECK 3 FIGURE 5: HOT CHECK 4 FIGURE 6: DRAIN PLUG AND FILTERS 11 FIGURE 7: VOLVO ENGINE CRANKING POSITION 12 FIGURE 8: ALLISON OIL COOLER 12 FIGURE 9: AIR PRESSURE REGULATOR (TYPICAL) 14			
FIGURE 4: COLD CHECK 3 FIGURE 5: HOT CHECK 4 FIGURE 6: DRAIN PLUG AND FILTERS 11 FIGURE 7: VOLVO ENGINE CRANKING POSITION 12 FIGURE 8: ALLISON OIL COOLER 12 FIGURE 9: AIR PRESSURE REGULATOR (TYPICAL) 14			
FIGURE 5: HOT CHECK			
FIGURE 6: DRAIN PLUG AND FILTERS			
FIGURE 7: VOLVO ENGINE CRANKING POSITION			
FIGURE 8: ALLISON OIL COOLER			
Figure 9: AIR PRESSURE REGULATOR (TYPICAL)			
,			
		` ,	

1. DESCRIPTION

X3 Series coaches featuring Metropolitan Transportation Authority (MTA) specifications are provided with an Allison automatic transmission

ALLISON AUTOMATIC TRANSMISSION

The B500R (with retarder) Allison Transmission has 6 speeds with two top range (fifth and sixth) overdrives. Total coverage is determined by dividing the highest gear ratio by the lowest gear ratio. Total coverage expresses the transmission gear ratio versatility. Transmissions with larger total coverage number have a wider variety of available ratios.

An electronic control allows the transmission to shift at exactly the right point on the engine's fuel consumption curve for best economy. Early lockup maintains the highest possible mechanical efficiency through the closely-spaced gear steps, culminating in two overdrive ratios. This combination allows progressive shifting techniques, where engine speeds are reduced for higher efficiency and lower fuel consumption.

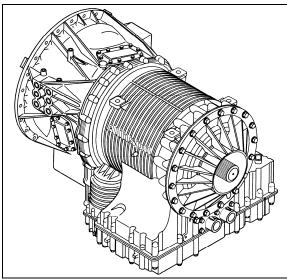


FIGURE 1: ALLISON TRANSMISSION

07120

Gear selection and torque converter modes are controlled by a microcomputer-based electronic transmission management system. It is fed information regarding throttle position, operator range selection, engine speed, turbine speed, transmission output speed and various system pressures from special electronic sensors. With this information, it computes shift points and clutch pressures to meet immediate needs. Using closed loop adaptive logic; the electronic control looks at a number of parameters during

the shift, and makes minute adjustments to match the shift to desired profile stored in its memory. It then looks at these adjustments and parameters, which allow resets the transmission to quickly compensate variations in load, terrain or environment and to adjust for clutch wear and engine power changes. A Diagnostic Data Reader can be connected to the electronic control unit to provide a self-check of all systems in the transmission. Five-digit trouble codes greatly reduce the time it takes to pinpoint potential problems. (Refer to paragraph "8. TROUBLESHOOTING" in this section).

Retarder

This auxiliary braking device for the automatic transmission is integrated into the basic envelope of the transmission and transmits its braking force directly to the propeller shaft. It requires no additional length and adds only 75 pounds (34 kg) of weight. Operation of the retarder is controlled electronically by the driver's use of the brake pedal.

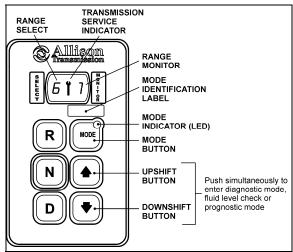


FIGURE 2: ALLISON TRANSMISSION CONTROL PAD 07142

When activated, fluid enters a cavity and provides resistance to the turning of rotor blades revolving with the output shaft. This effectively slows the vehicle to the point where the service brakes are needed only for final stopping. The retarder is fully modulated and is compatible with ABS.

2. WELDING PROCEDURES

These procedures are intended only for vehicles equipped with transmission electronic controls. When frame or other welding is required on the vehicle, precautions are to be taken to protect the electronic control components. Refer to section 00: GENERAL INFORMATION, paragraph 3:

"Precautions to be observed before welding" for complete procedure.

3. MAINTENANCE

To gain access to the dipstick, open the engine compartment rear doors; dipstick is located on the radiator side of the engine (Fig. 3).

3.1 MANUAL FLUID LEVEL CHECK



DANGER

When checking the oil level, be sure that the parking brake and/or emergency brakes are set and properly engaged, and the wheels are chocked. Unexpected and possible sudden vehicle movement may occur if these precautions are not taken.

- Special care must be taken not to touch the engine coolant tubing and/or exhaust pipe, since this could cause severe burns.
- Do not wear loose clothing and, stay away from rotating parts during procedure; personal injury could occur.

Clean all dirt from around the end of the oil filler tube before removing the dipstick. Dirt or foreign matter must not be permitted to enter the oil system since it will cause valves to stick, undue wear of transmission parts, and clogged passages. Check the oil level using the procedures in Cold Check and Hot Check. Record any abnormal level on your "Maintenance Records".

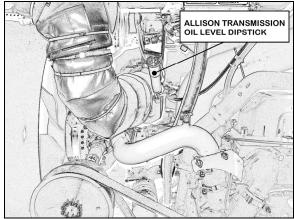


FIGURE 3: OIL LEVEL DIPSTICK (AUTO. TRANS.) 07113

Always check the oil level reading at least twice when the engine is running. Consistency is important in maintaining the accuracy of the reading. If inconsistent readings persist, check the transmission breather to ensure it is clean and free of debris.

3.1.1 Cold Check

The purpose of the **Cold Check** is to determine if the transmission has enough fluid to be operated safely until a **Hot Check** can be made.

1. If the engine has been shut down for an extended period of time, park the vehicle on a level surface and apply the parking brake.



CAUTION

The oil level rises as sump temperature increases. DO NOT fill above the "Cold Run" band if the transmission oil is below normal operating temperature. During operation, an overfull transmission can become overheated, leading to transmission damage.

- Run the engine at idle in "N" (Neutral) for about one minute.
- Shift to Drive (D) and operate the engine for 30 seconds at 1000-1500 rpm; then shift to Reverse (R) to clear the hydraulic system of air.
- 4. Move the vehicle to a level surface, put transmission in «N» (Neutral), and set the parking brake.
- 5. Finally shift to Neutral (N) and allow the engine to idle (500 800 rpm).
- While the engine is running, remove the dipstick from the tube and wipe it clean (Figs. 4 & 5). Insert the dipstick into the fill tube, pushing down until it stops.

 


FIGURE 4: COLD CHECK

07050

7. Remove the dipstick and observe the fluid level. Repeat the check procedure to verify the reading. If the fluid on the dipstick is within the COLD CHECK band, the level is satisfactory for operating the transmission until the oil is hot enough to perform a **Hot Check**. If the fluid level **is not** within this band, add or drain fluid as necessary to bring the level within the COLD CHECK band.

8. Perform a **Hot Check** at the first opportunity after the normal operating temperature of 160°F (71°C) to 200°F (93°C) is attained.



CAUTION

DO NOT operate the transmission for extended periods of time until a **Hot Check** has verified proper fluid level. Transmission damage can result from extended operation at improper fluid level conditions.



CAUTION

Obtain an accurate fluid level by imposing the following conditions:

- Engine is idling (500-800 rpm) in «N» (Neutral).
- Transmission fluid is at normal operating temperature.
- The vehicle is on a level surface.

3.1.2 Hot Check



CAUTION

The oil **must be hot** to ensure an accurate check for this procedure. The oil level rises as temperature increases.

To perform a **Hot Check**, do the following:

- The Hot Check can be performed when the transmission oil reaches the normal operating temperature (160°F to 200°F / 71°C to 93°C). The transmission oil temperature can be checked with the dashboard message center display (MCD) when selecting the Gauge Mode (refer to the "Operator's Manual" for added information).
- 2. Park the vehicle on a level surface and shift to Neutral (N). Apply the parking brake and allow the engine to idle (500 800 rpm).
- 3. Remove the dipstick from the tube and wipe it clean. Insert the dipstick into the fill tube, pushing down until it stops.
- Remove the dipstick and observe the fluid level. The safe operating level is anywhere within the HOT RUN band on the dipstick. Repeat the check procedure to verify the reading.

5. If the level **is not** within this band, add or drain fluid as necessary to bring the level within the HOT RUN band. (Fig. 5).

 


FIGURE 5: HOT CHECK

07049

6. Be sure fluid level checks are consistent. Check level more than once and if readings are not consistent, check to be sure the transmission breather is clean and not clogged. If readings are still not consistent, contact your nearest Allison dealer or distributor.

NOTE

The Cold Check is more appropriate for verifying the oil level after the first fill-up. In case of conflict, the Hot Check has priority over the Cold Check; the fluid level check using the pushbutton shift selector has priority over the Hot Check.

3.2 FLUID LEVEL CHECK USING THE PUSHBUTTON SHIFT SELECTOR

Oil level codes are obtained as follows:

- Park vehicle on a level surface, select «N» (neutral) on the pushbutton shift selector and apply parking brake.
- Press simultaneously the ♠ (Up) and ♥ (Down) arrow buttons once.
- 3. Oil level codes are displayed in 2 minutes (e.g. display will flash and 8, 7, 6, 5, ...; countdown will occur during the 2 minutes) once the following parameters are met:
- Waiting time, vehicle must be stationary for at least 2 minutes to allow the oil to settle;
- Engine at idle;
- Oil at normal operating temperature, between 140°F (60°C) and 220°F (104°C);
- Transmission in «N» (Neutral);
- Transmission output shaft stopped;
- Oil level sensor present and working.

After 2 minutes, the display will flash one of the codes shown below:

CODE	CAUSE OF CODE	
0 L0 K	Oil level is correct	
O LL O 1	Oil Level is LOw 1 quart	
O LL O 2	Oil Level is LOw 2 quart	
O LL O 3	Oil Level is LOw 3 quarts	
O LL O 4	Oil Level is LOw 4 or more quarts	
O LH I 1	Oil Level is HIgh 1 quart	
O LH I 2	Oil Level is HIgh 2 quarts	
O LH I 3	Oil Level is High 3 or more quarts	
O L – (fc)	Oil Level is invalid. Source of invalid reading is defined by a two-character fault code (fc)	

NOTE

Note that the quantities LO 4 and HI 3 are the largest values displayed and that the actual variation in oil level may exceed these numbers.

NOTE

Failure to meet one of the above parameters will stop the two minute countdown. One of the codes shown hereafter will indicate the cause of the countdown interruption. Once all parameters are met, the countdown will continue from where it left off.

If the fluid level check cannot be completed, an Invalid for Display fault is reported. This condition is reflected by the display of "OL", followed by "—", followed by one or two additional characters. The displayed characters define the cause of the fault, which may be either a system malfunction or an improper condition for conducting the check.

CODE	CAUSE OF CODE	
OL0X	Waiting period is not complete	
OLEL	Engine speed (rpm) too low	
OLEH	Engine speed (rpm) too high	
OLSN	N (neutral) must be selected	
OLTL	Sump oil temperature too low	
OLTH	Sump oil temperature too high	
OLSH	Output shaft rotation	
OLFL	Sensor failure	

To exit the Oil Level Display Mode, press any range button: "R", "N" or "D" at any time.

3.3 IMPORTANCE OF PROPER FLUID LEVEL

It is important that the proper fluid level be maintained at all times because the transmission fluid cools, lubricates, and transmits hydraulic power. If the fluid level is too low, the converter and clutches do not receive an adequate supply of fluid. If fluid level is too high, the fluid can aerate, causing the transmission to shift erratically or overheat.

3.4 KEEPING OIL CLEAN

Oil must be handled in clean containers, fillers, etc., to prevent foreign material from entering the transmission. Place the dipstick on a clean surface area while filling the transmission.



CAUTION

Containers or fillers that have been used to handle antifreeze or engine coolant must NEVER be used for handling transmission fluid. Antifreeze and coolant solutions contain ethylene glycol that, if introduced into the transmission, can cause the clutch plates to fail.

3.5 RECOMMENDED AUTOMATIC TRANSMISSION FLUID

Hydraulic fluids used in the transmission are important influences on transmission performance, reliability and durability. **Castrol TranSynd™ Synthetic Fluid** and **DEXRON-III**® fluids are recommended for on-highway applications.

• TranSynd™ is a full synthetic transmission fluid developed by Allison Transmission and Castrol Ltd. This fluid meets Allison specifications for Severe Duty and Extended Drain Intervals. TranSynd™ is fully qualified to the Allison TES295 specifications and is available through Prevost Parts.

NOTE

The prognostics package requires the use of TranSynd™ or an Allison approved TES-295 licensed fluid in the transmission and Allison High Capacity filters. If any other fluids or filters are used, Prognostic mode **must be disabled**. Prognostic information will not be accurate with any other fluids or filters and could result in missed maintenance activities resulting in transmission damage.

 To be sure a fluid is qualified for use in Allison transmission, check for the **DEXRON-III®** license number on the container or consult the lubricant manufacturer. Consult your Allison Transmission dealer or distributor before using other fluid types.

Customers may use TranSynd™/TES 295 equivalent and extend drain intervals. Equivalent TranSynd™ fluid must meet or exceed TES 295 requirements. Customers may choose from a wide variety of approved Dexron-III® fluids.

Customers may choose from a wide variety of approved non-TES 295 like Dexron-III® or approved Schedule 1 TES-389 fluids.

The Transmission Fluid Operating Temperature Requirements table lists the minimum fluid temperatures at which the transmission may be safely operated without preheating. Preheat with auxiliary heating equipment or by running the equipment or vehicle with the transmission in «N» (Neutral) for a minimum of 20 minutes before attempting range operation.

Transmission Fluid Operating Temperature Requirements

	Minimum operating temperature		
Fluid type	Celsius Fahrenheit		
TranSynd™	-30	-22	
DEXRON-III®	-25	-13	



CAUTION

Disregarding minimum fluid temperature limits can result in transmission malfunction or reduced transmission life.

NOTE

The use of an arctic preheat kit is recommended at temperatures below -25°F (-32°C). If a preheat kit is not available, the TCM will restrict full operation until the sump temperature is increased.

3.6 OIL CONTAMINATION

At each oil change, examine the drained oil for evidence of dirt or water. A nominal amount of condensation will emulsify during operation of the transmission. However, if there is evidence of water; check the cooler (heat exchanger) for other signs of leakage. This, however, may also indicate leakage from the engine oil system.

3.7 METAL PARTICLES

Metal particles in the oil (except for minute particles normally trapped in the oil filter) indicate damage has occurred in the transmission. When these particles are found in the sump, the transmission must be disassembled and closely inspected to find the source. Metal contamination will require complete disassembly of the transmission and cleaning of all internal and external circuits, coolers, and all other areas where the particles could lodge.



CAUTION

If excessive metal contamination has occurred, replacement of the oil cooler and replacement of all bearings within the transmission is recommended.

3.8 COOLANT LEAKAGE

If engine coolant leaks into the transmission oil system, immediate action must be taken to prevent malfunction and possible serious damage. The transmission must be completely disassembled, inspected, and cleaned. All traces of the coolant contamination must be removed. Friction clutch plates contaminated with ethylene glycol must be replaced.

3.9 CONTROL SYSTEM PROGNOSTICS

The transmission control system includes the provision for the user to monitor various transmission operating parameters. Transmission operating parameters monitored by the prognostics feature are:

- Oil Life Monitor
- Filter Life Monitor
- Transmission Health Monitor

NOTE

The prognostics package requires the use of TranSynd™ or an Allison approved TES-295 licensed fluid in the transmission and Allison High Capacity filters. If any other fluids or filters are used, Prognostic mode **must be disabled**. Prognostic information will not be accurate with any other fluids or filters and could result in missed maintenance activities resulting in transmission damage.

Refer to TES 295 Approved Fluids list, found under the Service/Fluids heading on the home page of the Allison Transmission web site.

www.allisontransmission.com

When a specified threshold is detected for any of the serviceable conditions, the TRANSMISSION SERVICE indicator is illuminated to alert the operator. Failure to attend to the service condition and reset the TRANSMISSION SERVICE indicator within a defined operating period will result in illumination of the CHECK TRANS light on the dashboard telltale panel, indicating the increased probability that the service condition will develop into a more serious condition.

To access the Prognostic Mode functions, simultaneously press the ♠ (Up) and ♥ (Down) arrow buttons repeatedly. See the reference table at the end of this section.

Oil Life Monitor

The display message denotes the calculated remaining life of the transmission fluid. This value is based on the established life for the required baseline fluid, and then is continuously adjusted for cumulative effects of such operating parameters as operating time, retarder operation, output shaft revolutions and shift frequency.

Display: The display is a two-digit number, denoting percentage of the fluid life which remains. New fluid is displayed as 99%.

The TRANSMISSION SERVICE indicator will be illuminated, denoting a required change of transmission fluid, when the remaining fluid life reaches approximately 1–2 %. The indicator will be lit steadily upon each initialization of the TCM, and will remain on steady for approximately 1–2 minutes after the first selection of "D" (drive) range each time, until service is performed and the indicator is reset.

Failure to perform maintenance and reset the TRANSMISSION SERVICE indicator within a defined period will result in the illumination of the CHECK TRANS light on the dashboard telltale panel and diagnostic code P0897 Transmission Fluid at Limit will be set.

Reset: The TRANSMISSION SERVICE indicator can be reset by a message over the SAE J1939 communication interface, with the Allison DOC™ for PC diagnostic program, or by depressing and holding the MODE button for ten (10) seconds while the Oil Life Monitor function is displayed. It may also be reset by selecting N-D-N-D-N-R-N on the shift selector, pausing briefly (less than 3 seconds) between each

selector movement, with the ignition on and the engine not running.



CAUTION

Required calendar-based oil & filter change intervals (based on month) still apply because Oil Life Monitor function cannot measure time while ignition power is OFF.

If the Oil Life Monitor function has not indicated the need for a fluid change before 60 month (five years) have passed, it will be necessary to change the fluid and filters per calendar requirements and reset the system.

Filter Life Monitor

The display message denotes operating status of the transmission main fluid filter, based on the measured pressure drop across the filter. The feature is not functional at transmission sump temperatures below 40 °C (105 °F). Both the main and lube filters **must be** changed when the TRANSMISSION SERVICE indicator shows the main filter should be changed.

Display: An acceptable filter life status is displayed as "OK". An unacceptable filter life status is displayed as "LO".

Once the programmed threshold for maximum filter pressure drop has been observed and verified. P088A the diagnostic code Transmission Filter At/Over Limit will be recorded to indicate that the filter has reached the end of its designed life. At the next initialization of the TCM, the TRANSMISSION SERVICE indicator **I** will flash for approximately 1–2 minutes after the first selection of "D" (drive) range. Thereafter, the indicator will illuminate and flash upon each TCM initialization, continuing to flash for 1-2 minutes after the first selection of a drive range each time, until service is performed and the indicator is reset.

Failure to perform maintenance and reset the monitor after a calibration-defined number of warnings will result in the illumination of the CHECK TRANS light on the dashboard telltale panel and diagnostic code P088B will be recorded to indicate a highly deteriorated filter.

Reset: The feature will reset automatically when the main fluid filter has been changed and the pressure drop across the filter no longer exceeds the threshold value. A manual reset

can be performed by depressing and holding the MODE button for ten (10) seconds while the Filter Life Monitor function is displayed. It may also be reset by selecting N-R-N-R-N-D-N on the shift selector, pausing briefly (less than 3 seconds) between each selector movement, with the ignition on and the engine not running.

Transmission Health Monitor

The display message denotes clutch life status, as determined by monitored changes and the calculated running clearance of the transmission clutches C1, C2, C3, C4 & C5.

Display: An acceptable clutch life status is displayed as "OK". An unacceptable clutch life status is displayed as "LO". The specific clutch(es) for which the function indicates "LO" cannot be identified with the shift selector. Allison DOCTM for PC-Service Tool displays clutch condition as OK or NOT OK for each clutch, C1 through C5.

The TRANSMISSION SERVICE indicator will be illuminated, indicating the need for clutch maintenance, when the remaining clutch life reaches approximately 10%, or if the running clearance exceeds a maximum value which may indicate a non-wear-related issue. Thereafter, the indicator will be lit upon each initialization of the TCM, and will remain on steady during all vehicle operation until service is performed and the indicator is reset.

Failure to perform maintenance and reset the monitor after a number of warnings will result in the illumination of the CHECK TRANS light on the dashboard telltale panel and diagnostic code P2789 Clutch Adaptive learning at Limit will be set

Reset: The feature will reset automatically upon elimination of the clutch clearance condition which initiated it. The indicator can also be manually reset using the Allison DOC™ for PC diagnostics program if necessary.

The following table illustrates how to access Oil Level Check, Prognostics & Diagnostic Troubleshooting Codes functions on the Allison pushbutton shift selector.

♠ (up) & ♥ (down) arrow buttons pressed simultaneously	Description	SELECT	MONITOR
1 st press	Allison transmission oil level check		"_"
	Other codes will be displayed		
2 nd press	Oil Life Monitor	"0"	"М"
	Oil life remaining will range from 99% down to 00%	Some number from 9 to 0	Some number from 9 to 0
3 rd press	Filter Life Monitor	" F"	"М"
	Present life of filter is OK	"0"	" K"
	Present life of filter is low	" L"	" O"
4 th press	Transmission Health Monitor	"0"	" K"
	Shows "OK" until remaining life of one or more of the clutch(es) wear enough so that the programming changes	"0"	" K"
	One or more of the clutches C1 through C5 have worn enough to change the program	" L"	" O"
5 th press	Display of diagnostic codes	" d "	" 1"
	Other codes will be displayed		

TABLE 1

Recommended Fluid and Filter Change Intervals Using Dexron-III / Non-TranSynd TM /Non-TES 295/Mixture Severe ³ All vehicles equipped with a retarder and not using High-Capacity Filters			
Fluid Filters			
	Main	Internal	Lube/ Auxiliary
12,000 Miles (20 000 km) 6 Months/ 500 Hrs	12,000 Miles (20 000 km) 6 Months/ 500 Hrs	Overhaul	12,000 Miles (20 000 km) 6 Months/ 500 Hrs

TABLE 2

Recommended Fluid and Filter Change Intervals ¹ Using 100% TranSynd TM /TES 295 Approved Fluid ² Severe ³ All vehicles equipped with a retarder and not using High-Capacity Filters					
Fluid	Main	Internal	Lube/ Auxiliary		
50,000 Miles	50,000 Miles	Overhaul	50,000 Miles		
(80 000 km)	(80 000 km)		(80 000 km)		
24 Months/	24 Months/		24 Months/		
2000 Hrs	2000 Hrs		2000 Hrs		

TABLE 3

Recommended Fluid and Filter Change Intervals¹ Using 100% TranSynd™/TES 295 Approved Fluid²						
Severe ³ All vehicles equipped with a retarder and using High-Capacity Filters						
	Filters					
Fluid	Main	Internal	Lube/ Auxiliary			
150,000 Miles (240 000 km) 48 Months/ 6000 Hrs	75,000 Miles (120 000 km) 36 Months/ 3000 Hrs	Overhaul	75,000 Miles (120 000 km) 36 Months/ 3000 Hrs			

2 inch Control Module (1.75 approximately) – Requires High-Capacity Filter kit Allison P/N 571709

¹ Extended TrandSynd™/TES 295 fluid and filter change intervals are only allowed with Allison High-Capacity filters.

² Less than 100% concentration of TranSynd™/TES 295 approved fluid is considered a mixture and should utilize non-TES 295 change intervals. If the customer replaces non-TranSynd™/non-TES 295 fluid with TranSynd™/TES 295 equivalent, the change interval recommendations of non-TranSynd™/non-TES 295/mixture must be followed. Upon the next oil change, if the customer reinstall TranSynd™/TES 295 equivalent, the fluid & filter change recommendation outlined in 100% TES 295 approved fluids must be followed.

³ Severe vocation= All retarder, On/Off highway, transit and intercity coaches with duty cycle greater than one (1) stop per mile.

3.10 OIL AND FILTER CHANGE INTERVAL

 Oil and Filter Change interval With Prognostics Mode Disabled

Allison transmissions are factory fill with **Castrol TranSynd**TM fluid. Oil change must be performed with the vehicle on a flat and level surface and with parking brake applied. Oil and oil filter change frequency is determined by the severity of service and operating conditions of the transmission and by the filter equipment installed. See "TABLE 1, TABLE 2 or TABLE 3" for oil and filter change intervals. More frequent changes may be required when operations are subject to high levels of contamination or overheating. Filters must be changed at or before recommended intervals.

IMPORTANT NOTE

Allison Transmission recommends that customers use fluid analysis as the primary method for determining fluid change intervals. Many customers have a systematical annual transmission fluid change while, in many cases, fluid analysis could demonstrate that the transmission fluid is still in good condition and a fluid change is not required. In the absence of a fluid analysis program, the fluid change interval listed in TABLE 1, TABLE 2 & TABLE 3 should be used.

IMPORTANT NOTE

Your transmission is equipped with **High Capacity filters**. High Capacity filters allow for increased fluid and filter change intervals in transmissions utilizing TES 295 approved fluid/TranSynd™. High Capacity filters eliminate the requirement of the initial 5000 miles (8000km) main filter change.

Former Gold Series filter kits are completely cancelled and serviced with current High Capacity filter kits. However, if you are using stocked Gold Series filter kits with TES 295 approved fluid/TranSynd™, use TABLE 2 for oil and filter change intervals.

 Oil And Filter Change Interval With Prognostics Mode Enabled

Oil Life Monitor and Filter Life Monitor of the Prognostics mode provide indicators of required maintenance actions. They are designed to maximize fluid and filter utilization. Prognostics enabled requires the use of 100% TranSynd™ or an Allison approved TES-295 transmission fluid and Allison High Capacity

filters. If any other fluids or filters are used, Prognostic mode **must be disabled**. Prognostic information will not be accurate with any other fluids or filters and could result in missed maintenance activities resulting in transmission damage.

IMPORTANT NOTE

The following schedule is to be used with Prognostics enabled.

100% concentration of TES-295 Allison approved fluids and Allison High Capacity Filters is **required**. Less than 100% concentration of TES-295 Allison approved fluids are considered a mixture and shall not be used with Prognostics mode or this change schedule. Utilization of previous Non-TES 295 fluid/filter change intervals (Table 1) is required.

	Severe Vocation		
FLUIDS Prognostics enabled	Change fluid when indicated by TRANSMISSION SERVICE indicator or 60 month (five years) whichever occurs first. In addition, change filters with fluid.		
FILTERS Prognostics enabled	Change filters (Main & Lube) when indicated by TRANSMISSION SERVICE indicator between fluid change or 60 month (five years) whichever occurs first.		

Changing The Transmission Oil And Oil Filters

The procedure for changing the transmission oil and oil filters is as follows:

Drain

 The transmission should be at an operating temperature of 160°F (71°C) to 200°F (93°C) when the oil is drained. This will ensure quicker and more complete fluid drainage.

NOTE

Remove transmission protective panel located underneath transmission for easier access.

- Remove the drain plug from under the transmission (Fig. 6) and allow the oil to drain into a suitable container. Check the condition of the oil as described previously.
- To replace the integral filters, remove twelve bolts (6 on each cover), two filter covers, two O-rings, two square cut seals and the two filters from the bottom of the control module (Fig. 6).

4. To install filters, pre-lube and install the two Orings, the two square cut seals followed by the filters (lube the O-ring in filter cartridge only) into the filter compartment. Index each filter/cover assembly to holes in channel plate/sump. Push the cover assembly in by hand to seat the seals.



CAUTION

Do not use bolts to draw the cover to sump. This can damage the cover, seal, or sump.

- 5. Install twelve bolts and both covers, and then tighten to 38-45 lbf-ft (51-61 Nm).
- 6. Inspect the drain plug and O-ring. Replace if necessary. Reinstall the drain plug and tighten to 18-24 lbf-ft (25-32 Nm).
- 7. Reinstall transmission protective panel

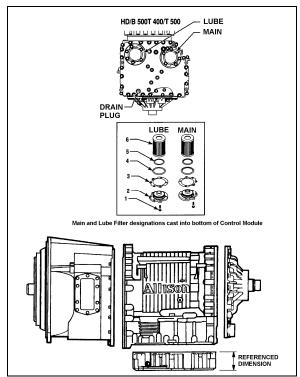


FIGURE 6: DRAIN PLUG AND FILTERS

07074

Fluid loss with filter change only

When changing main and lube filters at recommended intervals, approximate fluid loss for each filter as follows:

Main filter = 2 quarts (1.9 liters) Lube filter = 8 quarts (7.6 liters)

Refilling Transmission

The amount of refill fluid is less than the amount used for the initial fill. Fluid remains in the external circuits and transmission cavities after draining the transmission.

NOTE

Quantities listed above are approximations and do not include external oil cooler lines.

Using the oil level dipstick filler tube, refill with 24 US qts (23 liters) [28 US qts (26.5 liters) if equipped with retarder] and check the oil level using the **Fluid Level Check Using Pushbutton Shift Selector** procedure in this section.

4. ALLISON TRANSMISSION REMOVAL

The following procedure deals with the removal of the Allison transmission without removing the power plant cradle from vehicle. The methods used to support the transmission and engine depend upon conditions and available equipment.

- Select transmission's "NEUTRAL" position, apply parking brake, then set battery master switch to the "OFF" position.
- 2. Jack up vehicle, then place safety supports underneath body.



CAUTION

Only the recommended jacking points must be used as outlined in Section 18, "BODY".

NOTE

For more clearance between the tag axle and transmission, the tag axle may be unloaded and jacked up or retracted (if applicable).

- 3. Remove engine splash guards and protective panels surrounding transmission.
- Remove cross member from under transmission.
- Remove the transmission drain plug and allow oil to drain. Inspect the drain plug washer and replace it if necessary. Reinstall the drain plug and tighten to 33-41 lbf-ft (45-56 Nm) (see "3.10 OIL AND FILTER CHANGE" in this section.



WARNING

It is better to drain oil when it is still warm. Avoid contact with oil since it can be very hot and cause personal injury.

- 6. Remove transmission dipstick and filler tube.
- Disconnect propeller shaft from transmission and remove its safety guard. Refer to Section 09, "PROPELLER SHAFT".
- 8. Disconnect the two oil cooler hoses from transmission. Cover hose ends and fittings to prevent fluid contamination.



WARNING

A significant amount of oil may drain from oil lines when they are disconnected.

- Disconnect all sensors on L.H. side of the transmission.
- 10. Disconnect main wiring harness.
- 11.Disconnect the air supply line (steel-braided hose) from retarder control valve (if applicable).
- 12. Remove any locking tie, clamp and bracket that may interfere with the removal of transmission.
- 13. Support transmission using a suitable transmission jack.

NOTE

Remove starter motor located on engine L.H. side. Removing the starter motor will allow access to unfasten the 12 converter-to-flexible plate attaching screws. Remove the plug located below starter motor and install cranking tool (88800014). Cranking the engine to gain access to the attaching screws may be done by turning the cranking tool using a suitable adapter (fig. 7).



CAUTION

Do not rotate alternator shaft clockwise to avoid removing tension on belt.

14. Remove the 12 screws retaining the torque converter housing to the flywheel housing.

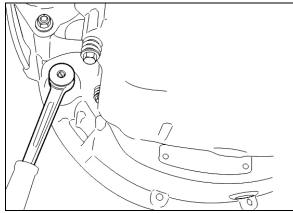


FIGURE 7: VOLVO ENGINE CRANKING POSITION



CAUTION

Make sure transmission-to-engine alignment is maintained when removing screws to avoid damaging torque converter housing.

- 15. Slowly pull transmission straight out to clear the engine.
- 16. Remove the transmission.

5. TRANSMISSION OIL COOLER REMOVAL

Stop engine and allow engine to cool. Close both heater line shutoff valves (refer to Section 05 "Cooling").

- 1. To drain the cooling system, proceed as per Section 05 "Cooling", paragraph 5: Draining. If the cooling system is contaminated, flush system as per Section 05 "Cooling", paragraph 7: Flushing.
- 2. Remove the rear L.H. side tag axle wheel, then remove the rear L.H. side fender panel.
- 3. Disconnect the transmission hoses from oil cooler. Cover hose ends and fittings to prevent fluid contamination.

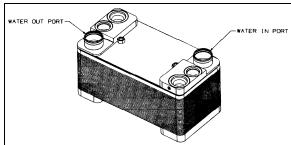


FIGURE 8: ALLISON OIL COOLER



WARNING

A significant amount of oil may drain from oil lines when they are disconnected.

- 4. Unfasten the constant-torque hose clamps and remove the two hoses.
- Unscrew the holding bolts and nuts and remove the oil cooler from engine compartment.

6. CLEANING AND INSPECTION OF ALLISON AUTOMATIC TRANSMISSION

The exterior of the transmission should be cleaned and inspected at regular intervals. The length of service and severity of operating conditions will determine the frequency of such inspections. Inspect the transmission for:

- Loose bolts (transmission and mounting components);
- 2. Oil leaks (correct immediately);
- 3. Loose, dirty, or improperly adjusted throttle sensor linkage;
- 4. Damaged or loose oil lines;
- Worn or frayed electrical harnesses, improper routing;
- Worn or out of phase drive line U-joint and slip fittings.



CAUTION

DO NOT pressure wash the transmission electrical connectors. Water and detergent will cause the contacts to corrode or become faulty.

6.1 BREATHER

The breather is located on the engine, flywheel side near the valve cover. It serves to prevent pressure build-up within the transmission and must be cleaned to keep the passage opened. The prevalence of dust and dirt will determine the frequency at which the breather requires cleaning. Use care when cleaning the engine. Spraying steam, water or cleaning solution directly at the breather can force the water or solution into the transmission. Always use care when removing the hose connector from transmission to prevent the entry of foreign matter.

7. ALLISON TRANSMISSION INSTALLATION

NOTE

For more clearance between the tag axle and transmission, the tag axle may be unloaded and jacked up, or retracted (if applicable).

- 1. With the starter motor removed, align one of the 12 attaching screw holes in the flexible plate with the access opening.
- 2. Place the transmission on a transmission jack.
- Install a headless guide bolt into one of the 12 threaded holes for flexible plate attaching screws in the flywheel.
- Lubricate the flywheel center pilot boss with molybdenum disulfide grease (Molycote G, or equivalent).
- Raise transmission and position the flywheel pilot boss into the flexible plate adapter. Align the guide bolt previously installed in the flywheel with the flexible plate hole facing the access opening in the flywheel housing.



DANGER

Severe damages and/or personal injury can occur if transmission is not adequately supported.

 Seat the transmission against the engine flywheel housing. NO FORCE IS REQUIRED. If interference is encountered, move the transmission away from engine, then investigate the cause.



CAUTION

The torque converter housing must be seated against the flywheel housing prior to tightening any screws. DO NOT USE SCREWS TO SEAT THE HOUSING.

- Start all torque converter housing screws, and then tighten four of them gradually and in a criss-cross sequence around the housing. Tighten the 12 remaining screws. Recommended torque is between 42-50 lbf-ft (57-68 Nm).
- 7. Remove the guide bolt through the access opening in the flywheel housing. Replace it with a self-locking screw, finger-tighten then

start the remaining screws; tighten to 17-21 lbf-ft (23-28 Nm).

NOTE

Remove the plug located below starter motor and install cranking tool (88800014). Crank the engine to gain access to the threaded holes by turning the cranking tool using a suitable adapter (Refer to fig. 7).

Reinstall starter motor and connect cables.

Reinstall access plug below starter motor.

- 8. Remove jack from under transmission.
- 9. Connect all sensors.
- 10. Connect the main wiring harness.
- Connect the air supply line (steel-braided hose) to the retarder control valve (if applicable).
- 12. Connect the two transmission oil cooler hoses as they were previously.
- 13. Reinstall clamps and brackets, and replace locking ties previously removed during removal procedure.
- 14. Install propeller shaft and its safety guard. Refer to Section 09, "PROPELLER SHAFT".
- 15. Install transmission dipstick and filler tube.
- 16. Install cross member under transmission.
- 17. Install engine splash guards.
- 18. Adjust the retarder pressure to 85 ± 3 psi with the air pressure regulator. For more information refer to Section 12, "BRAKE AND AIR SYSTEM", under heading "AIR PRESSURE REGULATOR". The air pressure regulator is located in the engine compartment, on engine cradle R.H. side (Fig. 9).
- 19. Make sure that the drain plug is in place, and then remove the transmission dipstick and pour approximately 24 US quarts (23 L) of automatic transmission fluid through the filler tube. Check and adjust oil level.



CAUTION

Do not overfill the transmission. Overfilling can cause oil aeration (milky appearance) and overheating. If overfilling occurs, drain oil as required to bring it to the proper level.

 


FIGURE 9: AIR PRESSURE REGULATOR (TYPICAL) 07130

8. ALLISON AUTOMATIC TRANSMISSION TROUBLESHOOTING

For complete information about Allison transmission troubleshooting, refer to "Allison 4th Generation Controls – Troubleshooting Manual: 3000 and 4000 Product families (TS3989)".

8.1 4TH GENERATION TRANSMISSION CONTROL MODULE

The Allison transmission has a new Transmission Control Module (TCM) which involves specific diagnostic incident codes. The TCM unit is located on the coach rear electrical panel.

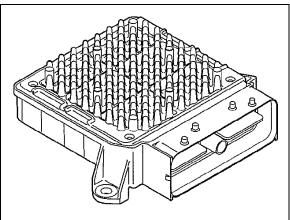


FIGURE 10: TRANSMISSION CONTROL MODULE

07140

TCM Replacement

The TCM is a non-serviceable electronic device. When it fails, it must be replaced using the following procedure:

- Open the engine compartment R.H. side door then remove the rear electrical panel cover in order to get access to the TCM;
- Remove the electrical cable connectors;
- Unscrew the TCM unit;
- Replace by reversing the procedure.



CAUTION

Place the battery master switch to the "OFF" position.

8.2 DIAGNOSTIC TROUBLESHOOTING CODES (DTC) — ALLISON 4TH GENERATION CONTROLS

Diagnostic (DTC) codes are numerical indications relating to a malfunction in transmission operation. These codes are logged in a list in the TCM memory with the most severe or most recent code listed first. A maximum of five codes (numbered d1 to d5) may be listed in memory at one time. As codes are added, the oldest inactive code is dropped from the list. If all codes are active, the code with the lowest priority that is not included on the severity list is dropped from the list.

Diagnostic codes (DTC) and code information may be accessed through the pushbutton shift selector or using an Allison DOC^{TM} diagnostic tool.

The TCM separately stores the active and inactive codes. An active code is any code that is current in the TCM decision-making process. Inactive codes are codes that are retained in the TCM memory and will not necessary affect the TCM decision-making process. Inactive codes are useful in determining if a problem is:

- · Isolated:
- Intermittent;
- · Result from a previous malfunction.



The TCM may automatically delete a code from memory if it has not recurred. If the MODE INDICATOR (LED) is not illuminated, the displayed code is not active. An illuminated MODE INDICATOR (LED) during normal operation signifies secondary shift mode operation.

8.3 DIAGNOSTIC CODES – ALLISON 4TH GENERATION CONTROLS

When the diagnostic mode is entered, the first code (position d1) is displayed as follows:


Example: Code P0722

Displayed as: d1...P...07...22

The code list position is the first item displayed, followed by the DTC. Each item is displayed for about one second. The display cycles continuously until the next code list position is accessed by pressing the **MODE** button. The following example shows how DTC P0722 is displayed on the pushbutton shift selector.

SE	d	1	MO
SELEC		Р	MONITO
¥	0	7	OR
	2	2	

- d1 (code list position) The position which a code occupies in the list. Positions are displayed as « d1 » through « d5 » (code list position 1 through code list position 5).
- P0722 (DTC) The diagnostic troubleshooting code number referring to the general condition or area of fault detected by the TCM.

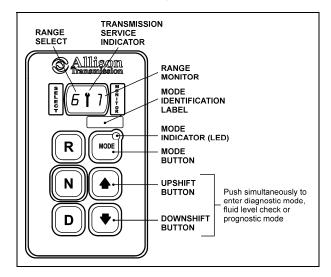

8.4 DIAGNOSTIC CODE DISPLAY AND CLEARING PROCEDURE – ALLISON 4TH GENERATION CONTROLS

Diagnostic codes can be read and cleared by two methods:

- Using an Allison DOC™ diagnostic tool. For specific instructions on how to use an Allison DOC™ diagnostic tool, refer to the User Guide.
- Using the pushbutton shift selector.

To begin the diagnostic process:

1. Bring the vehicle to a stop at a safe location.

2. Apply the parking brake.

To display stored codes:

Simultaneously press the ♠ (Up) and ♥
 (Down) arrow buttons twice to access the Diagnostic Display Mode.

NOTE

To access the Oil Level Display Mode, simultaneously press the ♠ (Up) and ♥ (Down) arrow buttons once. Consult paragraph: "ALLISON TRANSMISSION OIL LEVEL CHECK USING THE PUSHBUTTON SHIFT SELECTOR" at the end of this section.

- 2. Observe the digital display for code (d1).
- 3. Press the MODE button to see the next code (d2) repeat for subsequent codes (d3, d4 & d5).

NOTE

Be sure to record all codes displayed before they are cleared. This is essential for troubleshooting.

NOTE

The Diagnostic Display Mode can be entered for viewing codes at any speed. Codes can only be cleared when the output speed = 0 and no output speed sensor failure is active

Active indicators (MODE INDICATOR LED) and inactive codes can be cleared manually, while in the diagnostic display mode, after the condition causing the code is identified.

To clear active indicators and inactive codes:

- While in Diagnostic Display Mode, press and hold the MODE button for 10 seconds to clear both active indicators and inactive codes.
- 2. Begin operating as normal. Have the transmission checked at the earliest opportunity by an Allison Transmission distributor or dealer.

NOTE

All active indicators are cleared at TCM power down.

Some codes will clear their active indicator when the condition causing the code is no longer detected by the TCM.

The Diagnostic Display Mode can be exited by any of the following methods:

- Press simultaneously the ♠ (Up) and ♥
 (Down) arrow buttons at the same time on the pushbutton shift selector.
- Press any range button «D», «N» or «R» on the pushbutton shift selector (the shift will be commanded if it is not inhibited by an active code).
- Wait until the calibrated time (approximately 10 minutes) has passed. The system will automatically return to the normal operating mode.
- Turn off power to the TCM (shut off the engine using the ignition switch).

NOTE

If clearing a code while locked in a "D" (Drive) or "R" (Reverse) position (fail-to-range), the transmission will still be in "D" (Drive) or "R" (Reverse) when the clearing procedure is completed. "N" (Neutral) must be manually selected.

8.5 DIAGNOSTIC CODE RESPONSE

The following responses are used in the "Diagnostic Troubleshooting Code List and Inhibited Operation Description" table to command safe operation when diagnostic codes are sent.

DNS - Do Not Shift Response

Release lock up clutch and inhibit lock up operation.

Inhibit all shifts.

Turn ON the CHECK TRANS light.

Display the range attained.

Ignore any range selection inputs from the shift selector.

DNA - Do Not Adapt Response

The TCM stops adaptive shift control while the code is active.

SOL OFF - SOLenoid OFF Response

All solenoids are commanded *OFF* (turning solenoids "A" and "B" off electrically cause them to be on hydraulically).

RPR - Return to Previous Range Response

When the speed sensor ratio or C3 pressure switch test associated with a shift not successful, the TCM commands the same range as commanded before the shift.

NNC - Neutral No Clutches Response

When certain speed sensor ratio or C3 pressure switch tests are not successful, the TCM commands a neutral condition with no clutches applied.

8.6 DIAGNOSTIC TROUBLESHOOTING CODES (DTC) LIST - ALLISON 4TH GENERATION CONTROLS

C1312 Retarder Request Sensor Failed Low No May inhibit retarder operation if not using J1939 datalink P0122 Pedal Position Sensor Low Voltage P0123 Pedal Position Sensor Low Voltage P0124 Pedal Position Sensor High Voltage P0125 Pedal Position Sensor High Voltage P0126 Pedal Position Sensor High Voltage P0127 Transmission Fluid Over Temperature P0128 Transmission Fluid Over Temperature P0129 System Voltage Performance P0129 System Voltage Performance P0129 System Voltage Performance P0120 TCM Vehicle Options (Trans ID) Error P0200 TCM Vehicle Options (Trans ID) Error P0201 TCM Vehicle Options (Trans ID) Error P0201 TCM Vehicle Options (Trans ID) Error P0202 TCM Not Programmed P0203 TCM Processor P0204 Torque Control Data Mismatch - ECM/TCM P0205 Auto Configuration Throttle Input Not Present P0206 Auto Configuration Throttle Input Not Present P0206 Actuator Supply Voltage 1 (HSD1) Low P0206 Actuator Supply Voltage 1 (HSD1) Low P0207 Transmission Control System Electrical (TransID) P0208 TCM Internal Temperature Sensor Circuit Low P0209 TCM Internal Temperature Sensor Circuit High P0200 Transmission Control System Electrical (TransID) P0201 Transmission Fluid Level Sensor Circuit High Input P0202 Transmission Fluid Level Sensor Circuit High Input P0203 Transmission Fluid Level Sensor Circuit High Input P0204 Transmission Fluid Level Sensor Circuit High Input P0207 Transmission Fluid Temperature Sensor Circuit High Input P0207 Transmission Fluid Temperature Sensor Circuit High Input P0209 Transmission Fluid Temperature Sensor Circuit High Input P0200 Transmission Fluid Temperature Sensor Circuit High Input P0200 Transmission Fluid Temperature Sensor Circuit High Input P0201 Transmission Fluid Temperature Sensor Circuit High Input P0202 Transmission Fluid Temperature Sensor Circuit High Input P0203 Transmission Fluid Temperature Sensor Circuit High Input P0206 Transmission Fluid Temperature Sensor Circuit High Input P0207 Transmission Fluid Temperature Sensor Circuit High In	DTC	Description	CHECK TRANS Light	Inhibited Operation Description
Pol Secretaria Request Sensor Parlet High Pol using J1939 datalink We default throttle values. Freezes shift adapts. Pol Sedal Position Sensor Low Voltage Pol Sedal Position Sensor High Voltage Pol Sedal Michael Sensor High Voltage Pol Sedal Position Sensor High Voltage Pol Sedal System Voltage Performance Pol Sedal System Voltage Performance Pol Sedal System Voltage Low Pol Sedal System Voltage High Pol Sedal Tom Not Programmed Pol Sedal Tom Not Programmed Pol Sedal Tom Not Programmed Pol Sedal Tom Version Sensor	C1312	Retarder Request Sensor Failed Low		
Pedal Position Sensor Low Voltage Potal Position Sensor High Voltage Potal System Voltage Performance Potal System Voltage Performance Potal System Voltage Low Potal TCM Not Programmed Potal TCM Not Programmed Potal TCM Vehicle Options (Trans ID) Error Potal Torque Control Data Mismatch - ECM/TCM Potal Torque Control Torque Control Torque	C1313	Retarder Request Sensor Failed High	No	
P0123 Pedal Position Sensor High Voltage P0218 Transmission Fluid Over Temperature P0218 Transmission Fluid Over Temperature P0229 System Voltage Performance P0220 System Voltage Low P0230 TCM Not Programmed P0330 System Voltage High P0402 TCM Not Programmed P0503 System Voltage High P0504 TCM Vehicle Options (Trans ID) Error P0505 System Voltage High P0505 TCM Vehicle Options (Trans ID) Error P0506 TCM Vehicle Options (Trans ID) Error P0507 Torque Control Data Mismatch - ECM/TCM P0508 All solenoids off P0509 Torque Control Data Mismatch - ECM/TCM P0509 Torque Control Data Mismatch - ECM/TCM P0509 Auto Configuration Throttle Input Not Present P0509 Auto Configuration Throttle Input Not Present P0509 Actuator Supply Voltage 1 (HSD1) Low P0509 Actuator Supply Voltage 1 (HSD1) High P0509 TCM Internal Temperature Sensor Circuit Range / Perform P0509 TCM Internal Temperature Sensor Circuit High P0700 Transmission Control System Performance P0701 Transmission Control System Performance P0702 Transmission Range Sensor Circuit High Input P0703 Transmission Fluid Level Sensor Circuit — Low Input P0704 Transmission Fluid Level Sensor Circuit — Low Input P0707 Transmission Fluid Level Sensor Circuit — Low Input P0708 Transmission Fluid Level Sensor Circuit — Low Input P0709 Transmission Fluid Temperature Sensor Circuit High Input P0709 Transmission Fluid Temperature Sensor Circuit High Input P0700 Transmission Fluid Temperature Sensor Circuit High Input P0701 Transmission Fluid Level Sensor Circuit — Low Input P0702 Transmission Fluid Temperature Sensor Circuit High Input P0703 Transmission Fluid Temperature Sensor Circuit High Input P0704 Transmission Fluid Temperature Sensor Circuit High Input P0705 Transmission Fluid Temperature Sensor Circuit High Input P0706 Transmission Fluid Temperature Sensor Circuit High Input P0707 Transmission Fluid Temperature Sensor Circuit High Input P0708 Use default sump temp P0719 Turbine Speed Sensor Circuit Performance P0710 Turbine Speed Sensor Circuit Performance P0717 Turbine Speed S	P0122	Pedal Position Sensor Low Voltage	No	
P0218 Transmission Fluid Over Temperature No fourth range. TCC is inhibited. Freezes shift adapts.	P0123	Pedal Position Sensor High Voltage	No	
P0562 System Voltage Low P0563 System Voltage High P0563 System Voltage High P0563 TCM Not Programmed Yes Lock in Neutral P0564 TCM Vehicle Options (Trans ID) Error Yes Use TID A calibration P0565 TCM Processor No All solenoids off Allows operation only in reverse and second range. P0564 Torque Control Data Mismatch - ECM/TCM Yes SOL OFF (hydraulic default) P0565 Actuator Supply Voltage 1 (HSD1) Low Yes DNS, SOL OFF (hydraulic default) P0565 Actuator Supply Voltage 1 (HSD1) Low Yes DNS, SOL OFF (hydraulic default) P0567 P0568 TCM Internal Temperature Sensor Circuit Low P0569 TCM Internal Temperature Sensor Circuit Low P0570 Transmission Control System Electrical (TransID) Yes Use TID A calibration No Neutral to Drive shifts for refuse packer. TCM inhibits retarder operation if a TPS code is also active. P05700 Transmission Fluid Level Sensor Circuit — Low Input No None P05701 Transmission Fluid Level Sensor Circuit — Low Input No None P05701 Transmission Fluid Level Sensor Circuit — Low Input No None P05701 Transmission Fluid Level Sensor Circuit — Low Input No None P05701 Transmission Fluid Level Sensor Circuit — Low Input No None P05701 Transmission Fluid Level Sensor Circuit — Low Input No None P05710 Transmission Fluid Temperature Sensor Circuit Low Input Yes Use default sump temp P05711 Transmission Fluid Temperature Sensor Circuit Low Input Yes Use default sump temp P05713 Transmission Fluid Temperature Sensor Circuit Low Input Yes Use default sump temp P05714 Turbine Speed Sensor Circuit Performance Yes DNS, Lock in current range P05717 Turbine Speed Sensor Circuit No Signal Yes DNS, Lock in current range P05717 Turbine Speed Sensor Circuit No Signal Yes DNS, Lock in current range P05717 Turbine Speed Sensor Circuit No Signal Yes DNS, Lock in current range P05717 P05712 P05715 P05715 P05715 P05715 P05715 P05715 P057	P0218	Transmission Fluid Over Temperature	No	fourth range. TCC is inhibited.
P0563 System Voltage High P0602 TCM Not Programmed Yes Lock in Neutral P0610 TCM Vehicle Options (Trans ID) Error Yes Use TID A calibration Vehicle Options (Trans ID) Error Yes Use TID A calibration All solenoids off Norque Control Data Mismatch - ECM/TCM Yes Alloso operation only in reverse and second range. P0634 TCM Internal Temperature Too High Yes SOL OFF (hydraulic default) Vehicle Options (Total Internal Temperature Too High Yes Use default throttle values Vehicle Options (Total Internal Temperature Temperature Temperature Temperature Temperature Sensor Circuit Range / Perform P0658 Actuator Supply Voltage 1 (HSD1) Low Yes DNS, SOL OFF (hydraulic default) P0659 Actuator Supply Voltage 1 (HSD1) High Yes DNS, SOL OFF (hydraulic default) P0667 TCM Internal Temperature Sensor Circuit Range / Perform P0668 TCM Internal Temperature Sensor Circuit High P0701 Transmission Control System Performance P0702 Transmission Control System Performance P0703 Brake Switch Circuit Malfunction No Neutral to Drive shifts for refuse packer. TCM inhibits retarder operation if a TPS code is also active. P0706 Transmission Range Sensor Circuit High Input Yes Ignore defective strip selector inputs P0707 Transmission Fluid Level Sensor Circuit — Low Input No None P0708 Transmission Fluid Temperature Sensor Circuit — Yes Use default sump temp P0711 Transmission Fluid Temperature Sensor Circuit Low Input Yes Use default sump temp P0712 Transmission Fluid Temperature Sensor Circuit Low Input Yes Use default sump temp P0713 Transmission Fluid Temperature Sensor Circuit High Input Yes Use default sump temp P0716 Turbine Speed Sensor Circuit Performance Yes DNS, Lock in current range P0717 Turbine Speed Sensor Circuit No Signal Yes DNS, Lock in current range P0717 Turbine Speed Sensor Circuit No Signal Yes DNS, Lock in current range P0717 P17060 P0717 P0717 P0718 P0718	P0561	System Voltage Performance		
P0602 TCM Not Programmed Yes Lock in Neutral	P0562	System Voltage Low		
P0610 TCM Vehicle Options (Trans ID) Error P0613 TCM Processor No All solenoids off P0614 Torque Control Data Mismatch - ECM/TCM P0634 TCM Internal Temperature Too High P0635 Auto Configuration Throttle Input Not Present P0636 Auto Configuration Engine Coolant Temp Input Not P1637 Auto Configuration Engine Coolant Temp Input Not P1638 Actuator Supply Voltage 1 (HSD1) Low P1639 Actuator Supply Voltage 1 (HSD1) High P0650 Actuator Supply Voltage 1 (HSD1) High P0667 Poefform P1668 TCM Internal Temperature Sensor Circuit Range / P0669 TCM Internal Temperature Sensor Circuit High P0701 Transmission Control System Performance P0702 Transmission Control System Electrical (TransID) P0703 Brake Switch Circuit Malfunction P0704 Transmission Range Sensor Circuit High Input P0705 Transmission Fluid Level Sensor Circuit Low Input P0706 Transmission Fluid Level Sensor Circuit P0707 Transmission Fluid Temperature Sensor Circuit P0708 Transmission Fluid Temperature Sensor Circuit P0709 Transmission Fluid Temperature Sensor Circuit P0700 Transmission Fluid Temperature Sensor Circuit P0701 Transmission Fluid Temperature Sensor Circuit P0702 Transmission Fluid Temperature Sensor Circuit P0703 Transmission Fluid Temperature Sensor Circuit P0704 Transmission Fluid Temperature Sensor Circuit P0705 Transmission Fluid Temperature Sensor Circuit P0706 Transmission Fluid Temperature Sensor Circuit P0707 Transmission Fluid Temperature Sensor Circuit P0708 Transmission Fluid Temperature Sensor Circuit P0709 Transmission Fluid Temperature Sensor Circuit P0709 Transmission Fluid Temperature Sensor Circuit P0709 Transmission Fluid Temperature Sensor Circuit Low Input P0709 Transmission Fluid Temperature Sensor Circuit High Input P07	P0563	System Voltage High		
P0613 TCM Processor	P0602	TCM Not Programmed	Yes	Lock in Neutral
P0614 Torque Control Data Mismatch - ECM/TCM P0634 TCM Internal Temperature Too High P0635 Auto Configuration Throttle Input Not Present P0636 Present P0636 Actuator Supply Voltage 1 (HSD1) Low P0659 Actuator Supply Voltage 1 (HSD1) High P0667 Preform P0668 TCM Internal Temperature Sensor Circuit High P0701 Transmission Control System Electrical (TransID) P0703 Brake Switch Circuit Malfunction P0704 Transmission Fluid Temperature Sensor Circuit Low Input P0705 Transmission Fluid Temperature Sensor Circuit High Input P0706 Transmission Fluid Temperature Sensor Circuit High Input P0707 Transmission Fluid Temperature Sensor Circuit High Input P0708 Transmission Fluid Temperature Sensor Circuit High Input P0709 Transmission Fluid Level Sensor Circuit High Input P0700 Transmission Fluid Temperature Sensor Circuit High Input P0701 Transmission Fluid Temperature Sensor Circuit High Input P0701 Transmission Fluid Temperature Sensor Circuit High Input P0701 Transmission Fluid Temperature Sensor Circuit High Input P0702 Transmission Fluid Temperature Sensor Circuit High Input P0703 Transmission Fluid Temperature Sensor Circuit High Input P0704 Transmission Fluid Temperature Sensor Circuit High Input P0705 Transmission Fluid Temperature Sensor Circuit High Input P0706 Transmission Fluid Temperature Sensor Circuit High Input P0707 Transmission Fluid Temperature Sensor Circuit High Input P0708 Transmission Fluid Temperature Sensor Circuit High Input P0709 Transmission Fluid Temperature Sensor Circuit High Input P0710 Transmission Fluid Temperature Sensor Circuit High Input P0711 Transmission Fluid Temperature Sensor Circuit High Input P0712 Transmission Fluid Temperature Sensor Circuit High Input P0713 Transmission Fluid Temperature Sensor Circuit High Input P0714 Turbine Speed Sensor Circuit No Signal P0715 Turbine Speed Sensor Circuit No Signal	P0610	TCM Vehicle Options (Trans ID) Error	Yes	Use TID A calibration
PO614 Torque Collitol Data Mishach - ECWITCM Fes Second range.	P0613	TCM Processor	No	All solenoids off
P063E Auto Configuration Throttle Input Not Present Yes Use default throttle values P063F Auto Configuration Engine Coolant Temp Input Not Present No None P0658 Actuator Supply Voltage 1 (HSD1) Low Yes DNS, SOL OFF (hydraulic default) P0659 Actuator Supply Voltage 1 (HSD1) High Yes DNS, SOL OFF (hydraulic default) P0667 TCM Internal Temperature Sensor Circuit Range / Perform DNS, SOL OFF (hydraulic default) P0668 TCM Internal Temperature Sensor Circuit Low DNS, SOL OFF (hydraulic default) P0669 TCM Internal Temperature Sensor Circuit High DNS, SOL OFF (hydraulic default) P0669 TCM Internal Temperature Sensor Circuit High DNS, SOL OFF (hydraulic default) P0669 TCM Internal Temperature Sensor Circuit High DNS, SOL OFF (hydraulic default) P0700 Transmission Control System Electrical (TransID) Yes Use TID A calibration P0703 Brake Switch Circuit Malfunction No Neutral to Drive shifts for refuse packer. TCM inhibits retarder operation if a TPS code is also active. P0708 Transmission Fluid Level Sensor Circuit High Input Yes Ignore defective strip selector inputs P0700 </td <td>P0614</td> <td>Torque Control Data Mismatch - ECM/TCM</td> <td>Yes</td> <td></td>	P0614	Torque Control Data Mismatch - ECM/TCM	Yes	
P063F Auto Configuration Engine Coolant Temp Input Not Present P063B Actuator Supply Voltage 1 (HSD1) Low P0659 Actuator Supply Voltage 1 (HSD1) High P0667 TCM Internal Temperature Sensor Circuit Range / Perform P0668 TCM Internal Temperature Sensor Circuit Low P0669 TCM Internal Temperature Sensor Circuit High P0701 Transmission Control System Performance P0702 Transmission Control System Electrical (TransID) P0703 Brake Switch Circuit Malfunction P0704 Transmission Range Sensor Circuit High Input P0705 Transmission Range Sensor Circuit High Input P0706 Transmission Fluid Level Sensor Circuit – Low Input P0707 Transmission Fluid Temperature Sensor Circuit P0708 Transmission Fluid Temperature Sensor Circuit P0709 Transmission Fluid Temperature Sensor Circuit P0700 Transmission Fluid Temperature Sensor Circuit P0701 Transmission Fluid Temperature Sensor Circuit P0702 Transmission Fluid Temperature Sensor Circuit P0703 Transmission Fluid Temperature Sensor Circuit Low Input P0704 Transmission Fluid Temperature Sensor Circuit Low Input P0705 Transmission Fluid Temperature Sensor Circuit Low Input P0706 Transmission Fluid Temperature Sensor Circuit Low Input P0707 Transmission Fluid Temperature Sensor Circuit Low Input P0708 Transmission Fluid Temperature Sensor Circuit High Input P0705 Transmission Fluid Temperature Sensor Circuit High Input P0706 Transmission Fluid Temperature Sensor Circuit Low Input P0707 Transmission Fluid Temperature Sensor Circuit High Input P0708 Transmission Fluid Temperature Sensor Circuit High Input P0709 Transmission Fluid Temperature Sensor Circuit High Input P0710 Transmission Fluid Temperature Sensor Circuit High Input P0711 Transmission Fluid Temperature Sensor Circuit High Input P0712 Transmission Fluid Temperature Sensor Circuit High Input P0715 Turbine Speed Sensor Circuit Performance P0717 Turbine Speed Sensor Circuit No Signal	P0634	TCM Internal Temperature Too High	Yes	SOL OFF (hydraulic default)
Present Pre	P063E	Auto Configuration Throttle Input Not Present	Yes	Use default throttle values
P0659 Actuator Supply Voltage 1 (HSD1) High Yes DNS, SOL OFF (hydraulic default)	P063F		No	None
P0667 TCM Internal Temperature Sensor Circuit Range / Perform P0668 TCM Internal Temperature Sensor Circuit Low P0669 TCM Internal Temperature Sensor Circuit High P0701 Transmission Control System Performance P0702 Transmission Control System Electrical (TransID) P0703 Brake Switch Circuit Malfunction P0704 Transmission Range Sensor Circuit High Input P0705 Transmission Range Sensor Circuit High Input P0706 Transmission Fluid Level Sensor Circuit – Low Input P0707 Transmission Fluid Temperature Sensor Circuit P0711 Transmission Fluid Temperature Sensor Circuit Low Input P0712 Transmission Fluid Temperature Sensor Circuit Low Input P0713 Transmission Fluid Temperature Sensor Circuit High Input P0714 Transmission Fluid Temperature Sensor Circuit Low Input P0715 Transmission Fluid Temperature Sensor Circuit High Input P0716 Turbine Speed Sensor Circuit No Signal P08 Use DNS, Lock in current range P08 DNS, Lock in current range P08 DNS, Lock in current range	P0658	Actuator Supply Voltage 1 (HSD1) Low	Yes	DNS, SOL OFF (hydraulic default)
Perform Po668 TCM Internal Temperature Sensor Circuit Low Po669 TCM Internal Temperature Sensor Circuit High Po701 Transmission Control System Performance Po702 Transmission Control System Electrical (TransID) Po703 Brake Switch Circuit Malfunction Po704 Transmission Range Sensor Circuit High Input Po705 Transmission Fluid Level Sensor Circuit – Low Input Po706 Transmission Fluid Level Sensor Circuit – High Input Po707 Transmission Fluid Temperature Sensor Circuit Po711 Transmission Fluid Temperature Sensor Circuit Low Input Po712 Transmission Fluid Temperature Sensor Circuit Low Input Po713 Transmission Fluid Temperature Sensor Circuit High Input Po714 Transmission Fluid Temperature Sensor Circuit Low Input Po715 Transmission Fluid Temperature Sensor Circuit High Input Po716 Turbine Speed Sensor Circuit Performance Po717 Turbine Speed Sensor Circuit No Signal PONS, Lock in current range	P0659	Actuator Supply Voltage 1 (HSD1) High	Yes	DNS, SOL OFF (hydraulic default)
P0701 Transmission Control System Performance P0702 Transmission Control System Electrical (TransID) P0703 Brake Switch Circuit Malfunction P0708 Transmission Range Sensor Circuit High Input P0700 Transmission Fluid Level Sensor Circuit – Low Input P0700 Transmission Fluid Temperature Sensor Circuit P0711 Transmission Fluid Temperature Sensor Circuit Low Input P0712 Transmission Fluid Temperature Sensor Circuit High Input P0713 Transmission Fluid Temperature Sensor Circuit High Input P0714 Transmission Fluid Temperature Sensor Circuit Low Input P0715 Transmission Fluid Temperature Sensor Circuit Low Input P0716 Turbine Speed Sensor Circuit Performance P0717 Turbine Speed Sensor Circuit Performance P0718 Turbine Speed Sensor Circuit Performance P0719 Turbine Speed Sensor Circuit Performance P0710 Turbine Speed Sensor Circuit Performance P0711 Turbine Speed Sensor Circuit Performance P0712 Turbine Speed Sensor Circuit Performance P0713 Turbine Speed Sensor Circuit Performance P0714 Turbine Speed Sensor Circuit No Signal P0715 DNS, Lock in current range	P0667			
P0701 Transmission Control System Performance P0702 Transmission Control System Electrical (TransID) P0703 Brake Switch Circuit Malfunction P0708 Transmission Range Sensor Circuit High Input P0700 Transmission Fluid Level Sensor Circuit – Low Input P0700 Transmission Fluid Level Sensor Circuit – High Input P0701 Transmission Fluid Temperature Sensor Circuit P0712 Transmission Fluid Temperature Sensor Circuit Low Input P0713 Transmission Fluid Temperature Sensor Circuit High Input P0714 Transmission Fluid Temperature Sensor Circuit Low Input P0715 Transmission Fluid Temperature Sensor Circuit Low Input P0716 Turbine Speed Sensor Circuit Performance P0717 Turbine Speed Sensor Circuit No Signal P0718 Use default sump temp P0719 DNS, Lock in current range P0710 Turbine Speed Sensor Circuit No Signal P0711 Turbine Speed Sensor Circuit No Signal	P0668	TCM Internal Temperature Sensor Circuit Low		
P0702 Transmission Control System Electrical (TransID) Brake Switch Circuit Malfunction P0703 Brake Switch Circuit Malfunction P0704 Transmission Range Sensor Circuit High Input P0705 P0705 Transmission Fluid Level Sensor Circuit – Low Input P0706 P0706 Transmission Fluid Level Sensor Circuit – High Input P0707 P0707 P0708 Transmission Fluid Level Sensor Circuit – Low Input P0708 Transmission Fluid Level Sensor Circuit – High Input P0709 P0709 Transmission Fluid Temperature Sensor Circuit P0710 P0711 Transmission Fluid Temperature Sensor Circuit P0712 Transmission Fluid Temperature Sensor Circuit Low Input P0713 Transmission Fluid Temperature Sensor Circuit High Input P0714 Turbine Speed Sensor Circuit Performance P0715 Turbine Speed Sensor Circuit No Signal Yes DNS, Lock in current range P0717 Turbine Speed Sensor Circuit No Signal	P0669	TCM Internal Temperature Sensor Circuit High		
P0703 Brake Switch Circuit Malfunction No No Neutral to Drive shifts for refuse packer. TCM inhibits retarder operation if a TPS code is also active. P0708 Transmission Range Sensor Circuit High Input P070C Transmission Fluid Level Sensor Circuit – Low Input P070D Transmission Fluid Level Sensor Circuit – High Input P0711 Transmission Fluid Temperature Sensor Circuit Performance P0712 Transmission Fluid Temperature Sensor Circuit Low Input P0713 Transmission Fluid Temperature Sensor Circuit High Input P0716 Turbine Speed Sensor Circuit Performance P0717 Turbine Speed Sensor Circuit No Signal No Neutral to Drive shifts for refuse packer. TCM inhibits retarder operation if a TPS code is also active. No None Pose Ignore defective strip selector inputs No None Pose Gefault sump temp Use default sump temp Use default sump temp P0713 Transmission Fluid Temperature Sensor Circuit High Input Yes DNS, Lock in current range P0717 Turbine Speed Sensor Circuit No Signal Yes DNS, Lock in current range	P0701	Transmission Control System Performance		
P0703Brake Switch Circuit MalfunctionNopacker. TCM inhibits retarder operation if a TPS code is also active.P0708Transmission Range Sensor Circuit High InputYesIgnore defective strip selector inputsP070CTransmission Fluid Level Sensor Circuit – Low InputNoNoneP070DTransmission Fluid Level Sensor Circuit – High InputNoNoneP0711Transmission Fluid Temperature Sensor Circuit PerformanceYesUse default sump tempP0712Transmission Fluid Temperature Sensor Circuit Low InputYesUse default sump tempP0713Transmission Fluid Temperature Sensor Circuit High InputYesUse default sump tempP0716Turbine Speed Sensor Circuit PerformanceYesDNS, Lock in current rangeP0717Turbine Speed Sensor Circuit No SignalYesDNS, Lock in current range	P0702	Transmission Control System Electrical (TransID)	Yes	Use TID A calibration
P070C Transmission Fluid Level Sensor Circuit – Low Input No None P070D Transmission Fluid Level Sensor Circuit – High Input No None P0711 Transmission Fluid Temperature Sensor Circuit Performance P0712 Transmission Fluid Temperature Sensor Circuit Low Input P0713 Transmission Fluid Temperature Sensor Circuit High Input P0716 Turbine Speed Sensor Circuit Performance P0717 Turbine Speed Sensor Circuit No Signal No None Yes Use default sump temp Use default sump temp Ves DNS, Lock in current range DNS, Lock in current range	P0703	Brake Switch Circuit Malfunction	No	packer. TCM inhibits retarder operation if a TPS code is also
P070D Transmission Fluid Level Sensor Circuit – High Input P0711 Transmission Fluid Temperature Sensor Circuit Performance P0712 Transmission Fluid Temperature Sensor Circuit Low Input P0713 Transmission Fluid Temperature Sensor Circuit High Input P0716 Turbine Speed Sensor Circuit Performance P0717 Turbine Speed Sensor Circuit No Signal No None Use default sump temp Use default sump temp Ves Use default sump temp Possible Sensor Circuit Performance Yes DNS, Lock in current range DNS, Lock in current range	P0708	Transmission Range Sensor Circuit High Input	Yes	Ignore defective strip selector inputs
P0711 Transmission Fluid Temperature Sensor Circuit Performance Yes Use default sump temp P0712 Transmission Fluid Temperature Sensor Circuit Low Input Yes Use default sump temp P0713 Transmission Fluid Temperature Sensor Circuit High Input Yes Use default sump temp P0716 Turbine Speed Sensor Circuit Performance Yes DNS, Lock in current range P0717 Turbine Speed Sensor Circuit No Signal Yes DNS, Lock in current range	P070C	Transmission Fluid Level Sensor Circuit – Low Input	No	None
P0711 Performance P0712 Transmission Fluid Temperature Sensor Circuit Low Input P0713 Transmission Fluid Temperature Sensor Circuit High Input P0716 Turbine Speed Sensor Circuit Performance P0717 Turbine Speed Sensor Circuit No Signal P0718 Use default sump temp Yes DNS, Lock in current range DNS, Lock in current range	P070D	Transmission Fluid Level Sensor Circuit – High Input	No	None
P0713 Transmission Fluid Temperature Sensor Circuit High Input Yes Use default sump temp P0716 Turbine Speed Sensor Circuit Performance Yes DNS, Lock in current range P0717 Turbine Speed Sensor Circuit No Signal Yes DNS, Lock in current range	P0711		Yes	Use default sump temp
P0716 Turbine Speed Sensor Circuit Performance P0717 Turbine Speed Sensor Circuit No Signal Yes DNS, Lock in current range Yes DNS, Lock in current range	P0712	Transmission Fluid Temperature Sensor Circuit Low Input	Yes	Use default sump temp
P0717 Turbine Speed Sensor Circuit No Signal Yes DNS, Lock in current range	P0713	Transmission Fluid Temperature Sensor Circuit High Input	Yes	Use default sump temp
	P0716	Turbine Speed Sensor Circuit Performance	Yes	DNS, Lock in current range
P0719 Brake Switch ABS Input Low No TCM assumes ABS is OFF	P0717	Turbine Speed Sensor Circuit No Signal	Yes	DNS, Lock in current range
	P0719	Brake Switch ABS Input Low	No	TCM assumes ABS is OFF

DTC	Description	CHECK TRANS Light	Inhibited Operation Description
P071A	RELS Input Failed On	Yes	Inhibit RELS operation
P071D	General Purpose Input Fault	Yes	None
P0720	Output Speed Sensor Circuit		
P0721	Output Speed Sensor Circuit Performance	Yes	DNS, Lock in current range
P0722	Output Speed Sensor Circuit No Signal	Yes	DNS, Lock in current range
P0726	Engine Speed Sensor Circuit Performance	No	Default to turbine speed
P0727	Engine Speed Sensor Circuit No Signal	No	Default to turbine speed
P0729	Incorrect 6 th Gear Ratio	Yes	DNS, Attempt 5 th , then 3 rd
P0730	Incorrect Neutral Gear ratio		
P0731	Incorrect 1 st Gear ratio	Yes	DNS, Attempt 2 nd , then 5 th
P0732	Incorrect 2 nd Gear ratio	Yes	DNS, Attempt 3 rd , then 5 th
P0733	Incorrect 3 rd Gear ratio	Yes	DNS, Attempt 4 th , then 6 th
P0734	Incorrect 4 th Gear ratio	Yes	DNS, Attempt 5 th , then 3 rd
P0735	Incorrect 5 th Gear ratio	Yes	DNS, Attempt 6 th , then 3 rd , then 2 nd
P0736	Incorrect Reverse Gear ratio	Yes	DNS, Lock in Neutral
P0741	Torque Converter Clutch System Stuck Off	Yes	None
P0776	Pressure Control Solenoid 2 Stuck Off	Yes	DNS, RPR
P0777	Pressure Control Solenoid 2 Stuck On	Yes	DNS, RPR
P0796	Pressure Control Solenoid 3 Stuck Off	Yes	DNS, RPR
P0797	Pressure Control Solenoid 3 Stuck On	Yes	DNS, RPR
P0842	Transmission Pressure Switch 1 Circuit Low	Yes	DNS, Lock in current range
P0843	Transmission Pressure Switch 1 Circuit High	Yes	DNS, Lock in current range
P0847	Transmission Pressure Switch 2 Circuit Low		
P0848	Transmission Pressure Switch 2 Circuit High		
P088A	Transmission Fluid Filter Deteriorated		
P088B	Transmission Fluid Filter Very Deteriorated		
P0880	TCM Power Input Signal	No	None
P0881	TCM Power Input Signal Performance	No	None
P0882	TCM Power Input Signal Low	Yes	DNS, SOL OFF (hydraulic default)
P0883	TCM Power Input Signal High	No	None
P0894	Transmission Component Slipping	Yes	DNS, Lock in first
P0960	Pressure Control Solenoid Main Mod Control Circuit Open	Yes	None
P0961	Pressure Control Solenoid (PCS) MM System Performance		
P0962	Pressure Control Solenoid Main Mod Control Circuit Low	Yes	DNS, SOL OFF (hydraulic default)
P0963	Pressure Control Solenoid Main Mod Control Circuit High	Yes	None
P0964	Pressure Control Solenoid 2 (PCS2) Control Circuit Open	Yes	DNS, SOL OFF (hydraulic default)
P0965	Pressure Control Solenoid (PCS) 2 System Performance		
P0966	Pressure Control Solenoid 2 (PCS2) Control Circuit Low	Yes	DNS, SOL OFF (hydraulic default)
P0967	Pressure Control Solenoid 2 (PCS2) Control Circuit High	Yes	DNS, SOL OFF (hydraulic default)
P0968	Pressure Control Solenoid 3 (PCS3) Control Circuit Open	Yes	DNS, SOL OFF (hydraulic default)
P0969	Pressure Control Solenoid (PCS) 3 System Performance		
P0970	Pressure Control Solenoid 3 (PCS3) Control Circuit Low	Yes	DNS, SOL OFF (hydraulic default)
<u> </u>		!	

DTC	Description	CHECK TRANS Light	Inhibited Operation Description
P0971	Pressure Control Solenoid 3 (PCS3) Control Circuit High	Yes	DNS, SOL OFF (hydraulic default)
P0973	Shift Solenoid 1 (SS1) Control Circuit Low	Yes	DNS, SOL OFF (hydraulic default)
P0974	Shift Solenoid 1 (SS1) Control Circuit High	Yes	DNS, SOL OFF (hydraulic default)
P0975	Shift Solenoid 2 (SS2) Control Circuit Open	Yes	7-speed: Allow 2 through 6, N, R
P0976	Shift Solenoid 2 (SS2) Control Circuit Low	Yes	7-speed: Allow 2 through 6, N, R Inhibit TCC operation
P0977	Shift Solenoid 2 (SS2) Control Circuit High	Yes	7-speed: Allow 2 through 6, N, R
P0989	Retarder Pressure Sensor Failed Low	No	None
P0990	Retarder Pressure Sensor Failed High	No	None
P1739	Incorrect Low Gear Ratio	Yes	Command 2 nd and allow shifts 2 through 6, N, R
P1891	Throttle Position Sensor PWM Signal Low Input	No	Use default throttle values
P1892	Throttle Position Sensor PWM Signal High Input	No	Use default throttle values
P2184	Engine Coolant Temperature Sensor Circuit Low Input	No	Use default engine coolant values
P2185	Engine Coolant Temperature Sensor Circuit High Input	No	Use default engine coolant values
P2637	Torque Management Feedback Signal (SEM)	Yes	Inhibit SEM
P2641	Torque Management Feedback Signal (LRTP)	Yes	Inhibit LRTP
P2670	Actuator Supply Voltage 2 (HSD2) Low	Yes	DNS, SOL OFF (hydraulic default)
P2671	Actuator Supply Voltage 2 (HSD2) High	Yes	DNS, SOL OFF (hydraulic default)
P2685	Actuator Supply Voltage 3 (HSD3) Low	Yes	DNS, SOL OFF (hydraulic default)
P2686	Actuator Supply Voltage 3 (HSD3) High	Yes	DNS, SOL OFF (hydraulic default)
P2714	Pressure Control Solenoid 4 (PCS4) Stuck Off	Yes	DNS, RPR
P2715	Pressure Control Solenoid 4 (PCS4) Stuck On	Yes	DNS, SOL OFF (hydraulic default)
P2718	Pressure Control Solenoid 4 (PCS4) Control Circuit Open	Yes	DNS, SOL OFF (hydraulic default)
P2719	Pressure Control Solenoid (PCS) 4 System Performance		
P2720	Pressure Control Solenoid 4 (PCS4) Control Circuit Low	Yes	DNS, SOL OFF (hydraulic default)
P2721	Pressure Control Solenoid 4 (PCS4) Control Circuit High	Yes	DNS, SOL OFF (hydraulic default)
P2723	Pressure Control Solenoid 1 (PCS1) Stuck Off	Yes	DNS, RPR
P2724	Pressure Control Solenoid 1 (PCS1) Stuck On	Yes	DNS, RPR
P2727	Pressure Control Solenoid 1 (PCS1) Control Circuit Open	Yes	DNS, SOL OFF (hydraulic default)
P2728	Pressure Control Solenoid (PCS) 1 System Performance		
P2729	Pressure Control Solenoid 1 (PCS1) Control Circuit Low	Yes	DNS, SOL OFF (hydraulic default)
P2730	Pressure Control Solenoid 1 (PCS1) Control Circuit High	Yes	DNS, SOL OFF (hydraulic default)
P2736	Pressure Control Solenoid 5 (PCS5) Control Circuit Open	Yes	Inhibit retarder operation
P2737	Pressure Control Solenoid (PCS) 5 System Performance		
P2738	Pressure Control Solenoid 5 (PCS5) Control Circuit Low	Yes	Allow 2 through 6, N, R. Inhibit retarder and TCC operation
P2739	Pressure Control Solenoid 5 (PCS5) Control Circuit High	Yes	Inhibit retarder operation
P2740	Retarder Oil Temperature Hot	No	None
P2742	Retarder Oil Temperature Sensor Circuit – Low Input	No	Use default retarder temp values
P2743	Retarder Oil Temperature Sensor Circuit – High Input	No	Use default retarder temp values
P2761	TCC PCS Control Circuit Open	Yes	Inhibit TCC operation

9. SPECIFICATIONS

ALLISON AUTOMATIC TRANSMISSION WITH RETARDER

X3-45 Coaches Gross input power (maximum) Gross input torque (maximum) Rated input speed (minimum-maximum)	1525 Lbf-ft- (2068 Nm)
Mounting: Engine	SAE #1 flywheel housing, flex disk drive
Torque converter: Type Stall torque ratio Lockup clutch with torsional damper	TC 551-1.8
Gearing: Type	Patented, constant mesh, helical, planetary
Ratio: First Second Third Fourth Fifth Sixth Reverse Ratio coverage: 6 speed	
* Gear ratios do not include torque converter multiplication	on.
Oil System: Oil type Capacity (excluding external circuits) Oil change Oil change (with retarder)	
Oil Filters: Make Type Prevost Part Number (2-filter replacement kit)	Disposable cartridge

SECTION 09: PROPELLER SHAFT

CONTENTS

1.	PROPELLER SHAFT	2
1	.1 Description	2
2.	REMOVAL, DISASSEMBLY, REASSEMBLY AND INSTALLATION	2
3.	CLEANING, INSPECTION AND LUBRICATION	
_	3.1 CLEANING AND INSPECTION	2 2
4.	EXPLANATION OF COMMON DAMAGES	4
5.	TROUBLESHOOTING	4
6.	SPECIFICATIONS	4
ILL	LUSTRATIONS	
Fig	URE 1: PROPELLER SHAFT ASSEMBLY	3

1. PROPELLER SHAFT

1.1 DESCRIPTION

The propeller shaft transmits power from the transmission to the differential (Fig. 1). Refer to paragraph "6. SPECIFICATIONS" at the end of this section for propeller shaft length. The propeller shaft is "Dana Spicer Life Series SPL250" type with tubular shafts. It is provided with two heavyduty universal joints (Fig. 1).

The propeller shaft has a half round end yoke at each end. The slip yoke is connected to the differential by a half round end yoke with two needle bearings.

The other extremity (tube yoke assembly) is connected to the transmission by a half round end yoke with two needle bearings (Allison transmission) or a flange yoke and companion flange with two needle bearings (I-Shift Transmission).

Furthermore, a slip joint on the propeller shaft compensates for variations in distance between the transmission and the differential, or between the output retarder and differential.

The rise and fall of the drive axle bring about these variations as the vehicle passes over uneven surfaces. The slip joint also eases removal of the transmission or the drive axle.

2. REMOVAL, DISASSEMBLY, REASSEMBLY AND INSTALLATION

Refer to "SPICER LIFE SERIES DRIVESHAFTS Service Manual" annexed to this section.

Where applicable:

- Remove or install propeller shaft safety quard.
- Screw bolts to the specified torque (Fig. 1).

3. CLEANING, INSPECTION AND LUBRICATION

3.1 CLEANING AND INSPECTION

Thoroughly clean grease from bearings, journal, lubricating grease fittings and other parts. Needle bearing assemblies may be soaked in a cleaning solution to soften hard grease particles.

It is extremely important that bearing assemblies be absolutely clean and blown out with compressed air, since small particles of dirt or grit can cause rapid bearing wear. Do not attempt to disassemble needle bearings.

Bearing journal areas should be inspected for roughness or grooving. If light honing does not remove roughness, the entire bearing assembly should be replaced. Excessive wear of the needle bearing is indicated if the needles drop out of the retainer, or if marks are present on the journal bearing surface. In such case, replace bearing assembly. Finally, inspect yokes for cracks, wear or distortion.

NOTE

Repair kits are available for overhaul of the propeller shaft assembly. Refer to Parts Manual, Section 9.

3.2 LUBRICATION




MAINTENANCE

Lubricate propeller shaft universal joints periodically, every 25,000 miles (40 000 km) or every 3 months, whichever comes first.

Apply grease gun pressure to the lube fitting. Use a good quality lithium-base grease such as: NLGI No.2 E.P. Grease (suitable for most temperatures). Refer to "Spicer Life Series Driveshafts Service Manual", under heading, "Lubrication Procedures – Universal Joints".

NOTE

Do not assume that bearing cavities have been filled with new grease unless it has expelled around all seals.

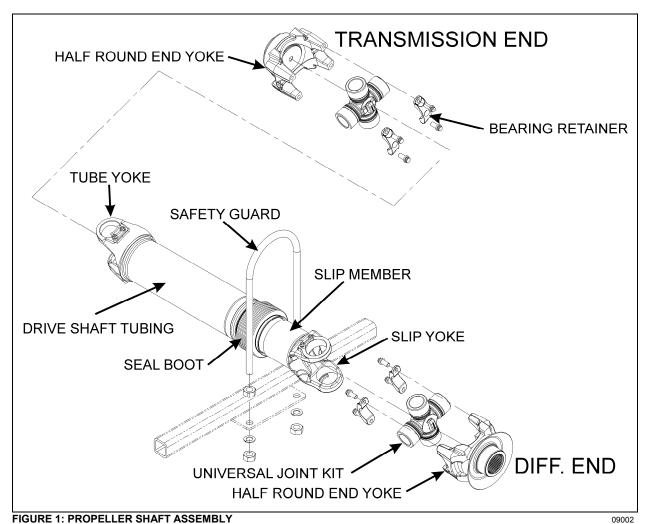

THOUSE THE NOT ELECT OF THE PROPERTY OF THE PR

4. EXPLANATION OF COMMON DAMAGES

- **1. Cracks:** Stress lines due to metal fatigue. Severe and numerous cracks will weaken the metal until it breaks.
- **2. Galling:** Scraping off of metal or metal displacement due to friction between surfaces. This is commonly found on trunnion ends.
- **3. Spalling (surface fatigue):** Breaking off of chips, scales, or flakes of metal due to fatigue rather than wear. It is usually found on splines and U-joint bearings.
- **4. Pitting:** Small pits or craters in metal surfaces due to corrosion. If excessive, pitting can lead to surface wear and eventual failure.

- **5. Brinelling:** Surface wear failure due to the wearing of grooves in metal. It is often caused by improper installation procedures. Do not confuse the polishing of a surface (false brinelling), where no structural damage occurs, with actual brinelling.
- **6. Structural Overloading:** Failure caused by a load greater than the component can stand. A structural overload may cause propeller shaft tubing to twist under strain or it may cause cracks or breaks in U-joints and spline plugs.

5. TROUBLESHOOTING

Refer to "Spicer Life Series Driveshafts Service Manual".

6. SPECIFICATIONS

PROPELLER SHAFT

ALL VEHICLES EQUIPPED WITH ALLISON WORLD TRANSMISSION

Make	Hayes-Dana Inc.
Series	SPL250
Prevost number	50000
Length	485 mm

SECTION 11: REAR AXLES

CONTENTS

1.	DRI	VE AXLE	. 2
		Description	
		DRIVE AXLE LUBRICATION	
		MAINTENANCE	
	1.3.1		
	1.3.2		. 3
	1.3.3		
	1.4	REMOVAL AND REINSTALLATION	. 3
		DISASSEMBLY AND REASSEMBLY	
		GEAR SET IDENTIFICATION	
		ADJUSTMENTS	
		FASTENER TORQUE CHART	
		TIRE MATCHING	
		DRIVE AXLE ALIGNMENT	
	1.10	.1 Procedure	. 5
		AXLE SHAFT SEALING METHOD	
2.	TAG	6 AXLE	.7
	2.1	UNLOADING TAG AXLE	7
		RETRACTING TAG AXLE	
		RETRACTING TAG AXLE FOR REPAIR PURPOSES	
		GREASE LUBRICATED WHEEL BEARINGS	
		REMOVAL AND INSTALLATION	
	2.5.		
	2.5.2		
	2.5.3		. 9
		TAG AXLE ALIGNMENT	
_			
3.	SPE	CIFICATIONS1	IU
IL	LUS1	TRATIONS	
_			_
		: DRIVE AXLE	
		: DIFFERENTIAL ASSEMBLY	
		: DIFFERENTIAL HOUSING BOWL	
		: JACKING POINTS ON FRAME (TYPICAL)	
		: JACKING POINTS ON DRIVE AXLE	
		FRONT & DRIVE AXLE ALIGNMENT	
		: TAG AXLE ALIGNMENT	
		: AXLE SHAFT INSTALLATION: : TORQUE SPECIFICATION	
		0: JACKING POINTS ON TAG AXLE	
		1: INSTALLING EXTRACTOR TOOL	
r-1	GUKE I	I. INSTALLING EXTRACTOR TOOL	. ฮ

1. DRIVE AXLE

1.1 DESCRIPTION

The Meritor drive axle is equipped with a single reduction standard carrier mounted in front of the axle housing. The carrier consists of a hypoid drive pinion, a ring gear set and gears in the differential assembly.

 


FIGURE 1: DRIVE AXLE

11019

A straight roller bearing (spigot) is mounted on the head of the drive pinion. All other bearings in the carrier are tapered roller bearings. When the carrier operates, there is a normal differential action between the wheels all the time.

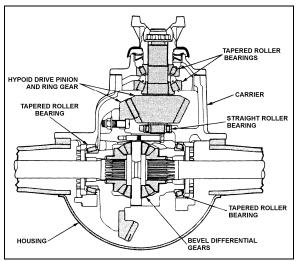


FIGURE 2: DIFFERENTIAL ASSEMBLY

11024

Several speed ratios are available for the drive axle. These ratios depend upon the motor and transmission. Also, special applications may suggest slightly different gear ratios.

1.2 DRIVE AXLE LUBRICATION

Use Multigrade gear oil 85W140 meeting MIL-PRF-2105-E, tested and approved to SAE J2360. If temperature drops below 10°F (-12°C), 80W90 should be used, and below -15°F (-26°C), 75W90 should be used. Additional lubrication information is covered in the Meritor Technical Bulletin "Approved Rear Drive Axle Lubricants" annexed to this section.

In extreme conditions, or for better performance, fill with synthetic gear oil.



MAINTENANCE

Check oil level and add (if necessary) every 5,000 miles (8 000 km) or once a month, whichever comes first (Fig. 3).



MAINTENANCE

Change differential oil and clean the breathers, magnetic fill and drain plugs, every 25,000 miles (40 000 km) or once a year, whichever comes first.

If using full synthetic gear oil, change differential oil and clean the breathers, magnetic fill and drain plugs, every 100,000 miles (160 000 km) or every two years, whichever comes first.

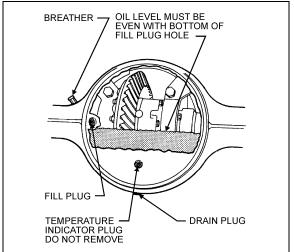


FIGURE 3: DIFFERENTIAL HOUSING BOWL

11007

1.3 MAINTENANCE

Proper vehicle operation begins with preventive maintenance, such as good differential use. The most common types of drive axle carrier failures are spinout, shock, fatigue, overheating and lubrication. Avoid neglecting these points since they would be the first steps to improper maintenance, expensive repairs, and excessive downtime.

Inspect the pinion oil seal, axle shaft flange and carrier housing gaskets for evidence of lubricant leakage. Tighten the bolts and nuts, or replace the gaskets and seals to correct leaks.

Maintenance of the axle mountings consists primarily in a regular and systematic inspection of the air suspension units and radius rods, as directed in Section 16, "Suspension".

1.3.1 Checking and Adjusting the Oil Level



DANGER

Before servicing, park safely over a repair pit; apply parking brake, stop engine and set battery master switch to the "OFF" position.

 Make sure the vehicle is parked on a level surface.



WARNING

Check the oil level when the axle is at room temperature. When hot, the oil temperature may be 190°F (88°C) or more and can cause burns. Also, a correct reading is not obtained when the axle is warm or hot.

- 2. Make sure the axle is "cold" or at room temperature.
- 3. Clean the area around the fill plug. Remove the fill plug from the differential axle housing bowl (Fig. 4).
- 4. The oil level must be even with the bottom of the hole of the fill plug.
 - a. If oil flows from the hole when the plug is loosened, the oil level is high. Drain the oil to the correct level.
 - b. If the oil level is below the bottom of the hole of the fill plug, add the specified oil.
- 5. Install and tighten the fill plug to 35-50 lbf-ft (48-67 Nm).
- 1.3.2 Draining and Replacing the Oil



DANGER

Before servicing, park safely over a repair pit, apply parking brake, stop engine and set battery master switch to the "OFF" position.

1. Make sure the vehicle is parked on a level surface. Put a large container under the axle's drain plug.

NOTE

Drain the oil when the axle is warm.

- 2. Remove the drain plug from the bottom of the axle. Drain and discard the oil in an environment friendly manner.
- 3. Install and tighten the drain plug to 35-50 lbf-ft (48-67 Nm).
- 4. Clean the area around the fill plug. Remove the fill plug from the differential housing bowl.
- 5. Add the specified oil until the oil level is even with the bottom of the hole of the fill plug. Allow the oil to flow through the axle and check the oil level again (lube capacity 41 pints [13,3 liters]).



CAUTION

The differential overheats when the oil temperature rises above 250°F (120°C).

- 6. Install and tighten the fill plug to 35-50 lbf-ft (48-67 Nm).
- 1.3.3 Speed Sensors (Anti-Lock Brake system, ABS)

For removing and installing the drive axle speed sensors (for anti-lock brake systems, ABS), refer to Section 12: "Brake and Air System" and to Rockwell WABCO Maintenance Manual: "Anti-Lock Brake Systems For Trucks, Tractors and Buses", annexed at the end of section 12.

1.4 REMOVAL AND REINSTALLATION

The following procedure deals with the removal of the drive axle assembly and its attachments as a unit. The method used to support the axle during removal and disassembly depends upon local conditions and available equipment.

 Raise vehicle by its jacking points on the body (fig. 4 or see Section 18, "Body" under heading "Vehicle Jacking Points"). Place jack stands under frame. Remove drive axle wheels (if required, refer to Section 13, "Wheels, Hubs And Tires".

 


FIGURE 4: JACKING POINTS ON FRAME (TYPICAL) 18618

- Exhaust compressed air from the air supply system by opening the drain cock on each air reservoir.
- 3. Disconnect the propeller shaft as directed in Section 9, "Propeller Shaft", in this manual.
- 4. On both sides of the vehicle, unscrew fasteners retaining front wheel housing plastic guards, and remove them from vehicle.
- Disconnect both height control valve links from air spring mounting plate brackets then move the arm down to exhaust air suspension.
- Remove cable ties securing the ABS cables (if vehicle is so equipped) to service brake chamber hoses. Disconnect the ABS cable plugs from the drive axle wheel hubs.

NOTE

When removing drive axle, if unfastening cable ties is necessary for ease of operation, remember to replace them afterwards.

7. Disconnect the brake chamber hoses.

NOTE

Position the hoses so they will not be damaged when removing the axle.

8. Install jacks under the axle jacking points to support the axle weight (refer to figure 5).

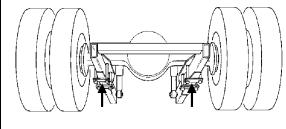


FIGURE 5: JACKING POINTS ON DRIVE AXLE

- Remove the four shock absorbers as outlined in Section 16, "Suspension" under heading "Shock Absorber Removal".
- 10. Remove the sway bar.
- 11. Remove the lower and upper longitudinal radius rod supports from vehicle sub-frame as outlined in Section 16, "Suspension", under heading "Radius Rod Removal".
- 12. Remove the transversal radius rod support from the vehicle sub-frame.

- 13. Remove the two retaining nuts from each of the four air bellows lower mounting supports.
- 14. Use the jacks to lower axle. Carefully pull away the jacks axle assembly from underneath vehicle.
- 15. Reverse removal procedure to reinstall drive axle

NOTE

Refer to Section 16, "Suspension" for suspension components' proper tightening torques.

NOTE

Refer to section 13 "Wheels, Hubs And Tires" for correct wheel bearing adjustment procedure.

1.5 DISASSEMBLY AND REASSEMBLY

Disassembly and re-assembly procedures are covered under applicable headings in Meritor's "MAINTENANCE MANUAL, NO. 5", annexed to this section.

1.6 GEAR SET IDENTIFICATION

Gear set identification is covered under applicable heading in Meritor's "MAINTENANCE MANUAL NO. 5", annexed to this section.

1.7 ADJUSTMENTS

Adjustments are covered under applicable headings in Meritor's "MAINTENANCE MANUAL NO. 5", annexed to this section.

1.8 FASTENER TORQUE CHART

A differential fastener torque chart is provided in Meritor's "MAINTENANCE MANUAL NO. 5", annexed to this section.

1.9 TIRE MATCHING

Drive axle tire matching is covered under the applicable heading in Section 13, "Wheels, Hubs And Tires" in this manual.

1.10 DRIVE AXLE ALIGNMENT

NOTE.

For drive axle alignment specifications, refer to paragraph 3: "Specifications" in this section.

The drive axle alignment consists in aligning the axle according to the frame. The axle must be perpendicular to the frame. The alignment is achieved with the use of shims inserted between the lower longitudinal radius rod supports and the frame.

Drive axle alignment is factory set and is not subject to any change, except if the vehicle has been damaged by an accident or if there are requirements for replacement.

If the axle has been removed for repairs or servicing and if all the parts are reinstalled exactly in the same place, the axle alignment is not necessary. However, if the suspension supports have been replaced or altered, proceed with the following instructions to verify or adjust the drive axle alignment.

NOTE

When drive axle alignment is modified, tag axle alignment must be re-verified.

1.10.1 Procedure

 Park vehicle on a level surface, then chock front vehicle wheels.

- Using two jacking points (which are at least 30 inches [76 cm] apart) on drive axle, raise the vehicle sufficiently so that wheels can turn freely at about ½ inch from ground. Secure in this position with safety stands, and release parking brake.
- 3. Install wheel mount sensors on front end and drive axle wheels (fig. 6).

NOTE

See reference numbers on wheel mount sensors (fig. 7).

NOTE

Select axle specifications in the appropriate chart.

DRIVE AXLE ALIGNMENT

• With the system installed as in figure 7, adjust drive axle according to specifications' chart below.

DRIVE AXLE ALL VEHICLES				
Alignment / value	Minimum value	Nominal value	Maximum value	
Thrust angle (deg.)	-0.04	0	0.04	
Total Toe (deg.)	0.18 Toe-in	0	0.18 Toe-out	

TAG AXLE ALIGNMENT

Remove and reinstall all wheel mount sensors on the drive and tag axles (fig. 7);

NOTE

For an accurate alignment, the tag axle must be aligned with the drive axle.

NOTE

Reinstall wheel mount sensors as shown in figure 7.

Adjust tag axle according to specifications' chart below in reference with drive axle.

TAG AXLE ALL VEHICLES				
Alignment / value	Minimum value	Nominal value	Maximum value	
Parallelism (deg.)	-0.02	0	0.02	
Total Toe (deg.)	0.18 Toe-in	0	0.18 Toe-out	

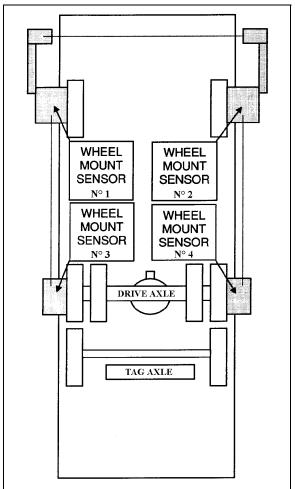


FIGURE 6: FRONT & DRIVE AXLE ALIGNMENT 11025

NOTE

Refer to Section 16, "Suspension", for proper torque tightening of the longitudinal radius rod support nuts.

NOTE

When the drive alignment is changed, the tag alignment must also be adjusted.

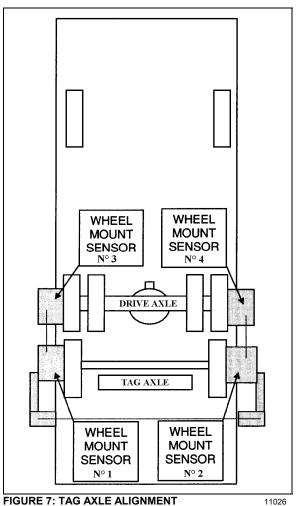


FIGURE 7: TAG AXLE ALIGNMENT

1.11 AXLE SHAFT SEALING METHOD

The following method is to be used to ensure that axle shaft installation is fluid-tight:

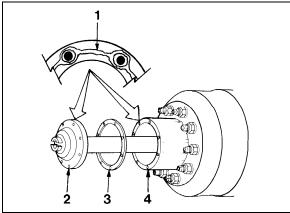


FIGURE 8: AXLE SHAFT INSTALLATION

11003

1	Silicone sealant*
2	Axle shaft
3	Gasket
4	Wheel hub

- Clean the mounting surfaces of both the axle shaft flange and wheel hub where silicone sealant will be applied. Remove all old silicone sealant, oil, grease, dirt and moisture. Dry both surfaces.
- Apply a continuous thin bead of silicone sealant* (Prévost P/N 680053) on the mounting surfaces and around the edge of all fastener holes of both the axle shaft flange and wheel hub.
- * GENERAL ELECTRIC Silicone Rubber Adhesive Sealant RTV 103 Black.



WARNING

Carefully read cautions and instructions on the tube of silicone sealant and its packing.

- Assemble components immediately to permit the silicone sealant to compress evenly between parts.
 - a. Place a new gasket and then install the axle shaft into the wheel hub and differential carrier. The gasket and flange of the axle shaft must fit flat against the wheel hub.
 - Install the tapered dowels at each stud and into the flange of the axle shaft. Use a punch or drift and hammer if needed.
 - Install the lock washers and nuts on the studs. Tighten nuts to the correct torque value.

NOTE

Torque values are for fasteners that have a light application of oil on the threads (refer to Meritor Maintenance Manual).

9/16-18 plain nut: 110 - 165 lbf-ft (149 -224 Nm)

5/8-18 plain nut: 150 - 230 lbf-ft (203 - 312 Nm)

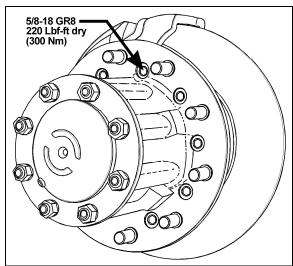


FIGURE 9: TORQUE SPECIFICATION

2. TAG AXLE

The tag axle is located behind the drive axle. It carries a single wheel and tire on each side.

2.1 UNLOADING TAG AXLE

To reduce the turning radius, the air springs pressure will be automatically reduced by 75% when the coach is moving at speed lower than 5 mph (8 km/h) and with more than $1\frac{1}{2}$ turn from the steering.

2.2 RETRACTING TAG AXLE

The standard tag axle retraction system is controlled by a valve located on the left lateral console and enables unloading and raising the tag axle (refer to the "OPERATOR'S MANUAL" for location of controls). This system has been designed for the following purposes:

- 1. Shortening of wheelbase, thus allowing tighter turning in tight maneuvering areas such as parking lots or when making a sharp turn.
- Transferring extra weight and additional traction to the drive wheels on slippery surfaces.

The tag axle service brakes operate only when the axle is in normal driving (loaded) position.



CAUTION

Do not use tag axle in raised position for an extended period. Raising tag axle increases load on the drive axle, suspension and tires.

Do not drive vehicle with tag axle raised when speed is exceeding 12mph (20 km/h).

In order to prevent damage to the suspension, always raise the tag axle before lifting the coach.

2.3 RETRACTING TAG AXLE FOR REPAIR PURPOSES

- Connect an external air pressure line to the emergency fill valve in the engine compartment.
- Lift the axle by pushing the lever forward.



WARNING

Install a protective cover to prevent unfortunate lever operation while work is being carried out under the vehicle.

Raise the vehicle using the lifts.



WARNING

Lift manufacturers recommend lowering the vehicle to the ground or installing some safety stands before activating the suspension to prevent the lifts from becoming unstable.

 For added safety, install nylon slings over tag axle shock absorbers.

2.4 GREASE LUBRICATED WHEEL BEARINGS

The unitized hub bearings used on the NDS range of axles, are non-serviceable items. Bearings are pre-adjusted, lubricated and have seals fitted as part of the manufacturing process. The bearings are greased for life and there is no need or facility for re-lubrication



MAINTENANCE

Front and tag axle hub bearings need to be checked at intervals of 30,000 miles (48 000 km) or twice a year whichever comes first.

NOTE

For more information on front and tag axle wheel hub, refer to "DANA SPICER Maintenance Manual Model NDS and Maintenance Manual NDS Axles" annexed at the end of this Section.

2.5 REMOVAL AND INSTALLATION

2.5.1 Removing Tag Axle Only

The following procedure deals with the removal of the tag axle while keeping the air springs installed. The method used to support the axle and suspension components during removal and disassembly depends upon local conditions and available equipment.

- Connect an external air pressure line to the emergency fill valve in the engine compartment.
- Lift the axle by pushing the lever forward.



WARNING

Install a protective cover to prevent unfortunate lever operation while work is being carried out under the vehicle.

- Disconnect tag axle air springs pneumatic hoses and install valves or plugs.
- Raise the vehicle using the lifts.
- Dismount tag axle components.
- Before reinstalling air spring hoses, make sure there is no pressure left inside by opening the valves or unloading tag axle.

2.5.2 Removing Tag Axle Along With Suspension Components

The following procedure deals with the removal of the tag axle assembly along with the suspension components. The method used to support the axle and suspension components during removal and disassembly depends upon local conditions and available equipment.

 Raise vehicle by its jacking points on the body (fig. 5 or see Section 18, "Body" under heading: "Vehicle Jacking Points"). Place jack under frame. Remove drive axle wheels (if required, refer to Section 13, "Wheels, Hubs And Tires").

- Exhaust compressed air from the air supply system by opening the drain cock on each air reservoir and deplete air bags by moving leveling valve arm down.
- 3. Install jacks under tag axle jacking points to support the axle weight (refer to figure 10).

 


FIGURE 10: JACKING POINTS ON TAG AXLE

- 11029
- 4. Disconnect tag axle lifting chain collars from lower longitudinal radius rods.
- 5. Remove the propeller shaft as directed in Section 9, "Propeller Shaft", in this manual.
- Disconnect the tag axle brake chamber hoses.



CAUTION

Position the hoses so they will not be damaged when removing axle.

- 7. Disconnect hose from the air spring upper mounting plate.
- Remove the two shock absorbers as outlined in Section 16, "Suspension", under "Shock Absorber Removal".
- Disconnect the lower longitudinal radius rods as outlined in Section 16, "Suspension", under "Radius Rod Removal".
- 10. Disconnect the transversal radius rod.
- 11. Disconnect the upper longitudinal radius rod.
- 12 Remove the air bellows retaining nuts from each of the two upper mounting plates.
- 13. Use the jacks to move the axle forward to clear the axle off the transmission. Lower the axle.



CAUTION

On vehicles equipped with an output retarder and an automatic transmission, move tag assembly very carefully. Pay special attention to the U-shaped section, as the transmission end components may be easily damaged through a false maneuver.

14. Reverse removal procedure to reinstall tag axle.

NOTE

Refer to Section 16, "Suspension", for proper torque tightening of suspension components.

NOTE

Refer to section 13 "Wheels, Hubs And Tires" for correct wheel bearing adjustment procedure.

2.5.3 Removing Transversal radius Rod

Unfasten bolts and nuts fixing transversal radius rod ball joint to rear underframe.

Install extractor tool G32952 onto transversal rod.

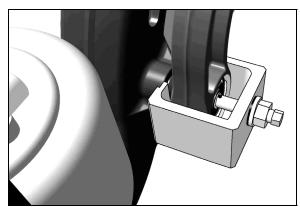


FIGURE 11: INSTALLING EXTRACTOR TOOL



CAUTION

It is strongly suggested to use the extractor tool in order to remove transversal radius rod.

Partially unscrew ball joint fixing bolt. Tighten extractor threaded rod.

Supporting the transversal radius rod at all times, gradually extract transversal radius rod from tag axle.

2.6 TAG AXLE ALIGNMENT

The tag axle alignment consists in aligning the tag axle parallel to the drive axle position. Before aligning the tag axle, proceed with the drive axle alignment (paragraph 1.10). Tag axle alignment is achieved with the use of shims inserted between the lower longitudinal radius rod supports and axle. Tag axle alignment is factory set and is not subject to any change, except if

vehicle has been damaged by an accident or if there are requirements for parts replacement.



CAUTION

If this setting is altered significantly, it will cause excessive tire wear.

NOTE

It may be necessary to adjust the axle TOE as well as its alignment. In this case, insert shims (7 min. - P/N 121203 or 15 min. - P/N 121240) in between mounting plate and spindle, as required.

If axle has been removed for repair or servicing and if all parts are reinstalled exactly in their previous locations, axle alignment is not necessary. However, if the suspension supports have been replaced or have changed position, proceed with the following instructions to verify or adjust the tag axle alignment.

3. SPECIFICATIONS

Drive Axle

Make	Meritor
Drive track	
Gear type	Hypoid
Axle type	· · · · · · · · · · · · · · · · · · ·
Lube capacity	

Drive axle ratio

World Transmission

3.91:1

NOTE

The drive axle alignment consists in aligning the axle with reference to the frame. The axle must be perpendicular to the frame.

Tag Axle

Make	Prévost
Rear track	
Axle type	Forged

NOTE

The tag axle alignment consists in aligning the tag axle parallel to the drive axle.

SECTION 12: BRAKE AND AIR SYSTEM

CONTENTS

1.	AIR SYSTEM	4
2.	BRAKES	
3.	AIR RESERVOIRS	
3.1	MAINTENANCE	
	1.2 Primary Air Tank	
	1.3 Accessory Air Tank	5
	1.4 Secondary Air Tank	
	1.5 Kneeling Air Tank	
3.2		
4.	AIR SYSTEM EMERGENCY FILL VALVES	
5.	ACCESSORY AIR FILTER	6
5.1	FILTER ELEMENT REPLACEMENT	
5.2	CLEANING	
6.	AIR GAUGES (PRIMARY, SECONDARY AND ACCESSORY)	
7.	AIR FILTER/DRYER	6
7.1	AIR FILTER/DRYER PURGE TANK	
8.	HALDEX CONSEP ® CONDENSER / SEPARATOR	
8.1	Maintenance	7
9.	AIR LINES	
9.1	COPPER PIPING	
9.1	FLEXIBLE HOSES	
9.3	Nylon Tubing	
9.4	AIR LINE OPERATING TEST	
9.5 9.6	AIR LINE LEAKAGE TEST	
10.	PRESSURE REGULATING VALVES	
10.1 10.2	MAINTENANCE PRESSURE SETTING PROCEDURE	
	AIR COMPRESSOR	
11.1	EMERGENCY/PARKING BRAKE CONTROL VALVE (PP-1)	
12.		
13.	EMERGENCY / PARKING BRAKES OVERRULE CONTROL VALVE (RD-3)	10
14.	FLIP-FLOP CONTROL VALVE (TW-1)	11
15.	DUAL BRAKE APPLICATION VALVE (E-10P)	11
15.1	Brake Pedal Adjustment	11
1:	5.1.1 Maintenance	11

Section 12: BRAKE AND AIR SYSTEM

16.	STOPLIGHT SWITCHES	11
17.	PARKING BRAKE ALARM SWITCH	12
18.	BRAKE RELAY VALVE (R-12 & R-14)	12
19.	QUICK RELEASE VALVES (QR-1)	12
20.	SPRING BRAKE VALVE (SR-7)	12
21.	PRESSURE PROTECTION VALVE (PR-4)	13
22.	LOW PRESSURE INDICATOR (LP-3)	13
23.	SHUTTLE-TYPE DOUBLE CHECK VALVE (DC-4)	13
24.	EMERGENCY BI-FOLD ENTRANCE DOOR OPENING VALVES	14
25.	AIR SYSTEM TROUBLESHOOTING	
26.	BRAKE OPERATION	14
27.	AIR BRAKES	14
_	7.1.1 Type A – Vehicles Equipped With a Rubber Bushing That is Axially Ribbed 7.1.2 Type B – Vehicles Equipped With a Wear Indicator	15 15 15
28.	SAFE SERVICE PROCEDURES	
29.	AIR BRAKE TROUBLESHOOTING	17
30.	BRAKE AIR CHAMBER	19
30. 30. 30. 30.	2 EMERGENCY/PARKING BRAKE MANUAL RELEASE	19 20
31.	ANTI-LOCK BRAKING SYSTEM (ABS)	21
3 3		21 21 22
32.	FITTING TIGHTENING TORQUES	23
22	SPECIFICATIONS	•

ILLUSTRATIONS

FIGURE 1: I-BEAM FRONT SUSPENSION AIR RESERVOIRS LOCATION	4
FIGURE 2: REAR VALVE LOCATION (TYPICAL)	5
FIGURE 3: FRONT SERVICE COMPARTMENT	5
Figure 4: Accessory air filter	6
Figure 5: HALDEX AIR FILTER DRYER	
FIGURE 6: HALDEX CONSEP CONDENSER/SEPARATOR	7
FIGURE 7: AIR PRESSURE REGULATING VALVE	9
FIGURE 8: AIR PRESSURE REGULATOR	9
FIGURE 9: AIR COMPRESSOR LOCATION	9
Figure 10: pp-1	10
Figure 11: rd-3	11
Figure 12: tw-1	11
FIGURE 13: BRAKE PEDAL ADJUSTMENT	11
Figure 14: delco switch	11
FIGURE 15: BENDIX SWITCH	12
Figure 16: R-12	12
Figure 17: R-14	12
Figure 18: Qr-1	12
Figure 19: sr-7	13
Figure 20: pr-4	13
Figure 21: Lp-3	13
Figure 22: DC-4	13
FIGURE 23: THREE-WAY VALVE	14
Figure 24: Brake pad check	15
FIGURE 25: BRAKE PAD WEAR INSPECTION	15
FIGURE 26: RUNNING CLEARANCE	16
Figure 27: Torque specification	16
Figure 28: Torque specification	16
FIGURE 29: FRONT AXLE BRAKE AIR CHAMBER	19
FIGURE 30: DRIVE AXLE BRAKE AIR CHAMBER	19
FIGURE 31: ABS ECU LOCATION	22
FIGURE 32: ABS MODULATOR VALVE	22
FIGURE 33: ABS SENSOR LOCATION	23
FIGURE 34: SPRING CLIP	23
FIGURE 35: HOSE FITTINGS	23
FIGURE 36: HOSE FITTING	24
FIGURE 37: HOSE FITTING	24
FIGURE 38: HOSE FITTING	24

1. AIR SYSTEM

The basic air system consists of an air compressor, reservoirs, valves, filters and interconnecting lines and hoses. It provides a means for braking; operating controls and accessories, and suspension (refer to Section 16, "Suspension", for complete information on suspension description and maintenance). An air system schematic diagram is annexed in the technical publications box provided with the vehicle for better understanding of the system.

2. BRAKES

This vehicle uses both the service brake and emergency/parking brake. The service brake air system is divided into two independent circuits to isolate front brakes from rear brakes, thus providing safe braking in the event that one circuit fails. Front axle brakes operate from the secondary air system, while brakes on both the drive axle and tag axle operate from the primary air system.

NOTE

The tag axle service brake operates only when the axle is in normal ride position (loaded and down).

Furthermore, the brake application or release, which is speed up by a pneumatic relay valve (R-12), will start with the rear axles and will be followed by the front axle, thus providing uniform braking on a slippery road. The vehicle is also equipped with an Anti-Lock Braking System (ABS), which is detailed later in this section.

The drive axle is provided with spring-loaded emergency/parking brakes, which are applied automatically whenever the control valve supply pressure drops below 40 psi (275 kPa).

3. AIR RESERVOIRS

The air coming from the air dryer is first forwarded to the wet air tank, then to the primary (for the primary brake system), secondary (for the secondary brake system), and accessory (for the pneumatic accessories) air tanks (Fig. 1).

Two additional air reservoirs are installed on the vehicle: the kneeling air tank and the parking brakes overrule air tank.

3.1 MAINTENANCE

Ensure that the wet (main) air tank is purged during pre-starting inspection. In addition, it is good practice to purge this reservoir at the end of every working day. The remaining reservoirs must be purged at every 12,500 miles (or 20 000 km) or once every year, whichever comes first.

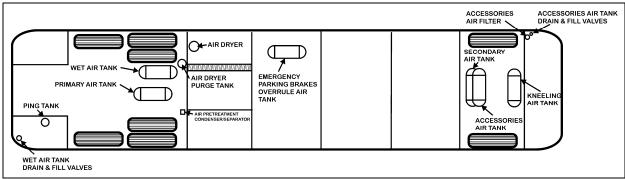


FIGURE 1: I-BEAM FRONT SUSPENSION AIR RESERVOIRS LOCATION

12213

3.1.1 Wet (Main) Air Tank

This reservoir, located above the L.H. wheel of drive axle in the rear wheelhousing, is provided with a bottom drain valve. A recommended purge using the bottom drain valve should be done every 12,500 miles (20 000 km), or once a year, whichever comes first.

3.1.2 Primary Air Tank

This reservoir is located above the R.H. wheel of the drive axle and is provided with a bottom drain valve (Fig. 1). It is recommended to purge the primary air tank every 12,500 miles (20 000 km) or once a year, whichever comes first.

3.1.3 Accessory Air Tank

The accessory air tank is installed close to the front axle and is provided with a bottom drain valve (Fig. 1).

Purge the reservoir by its drain valve every 12,500 miles (20 000 km) or once a year, whichever comes first.

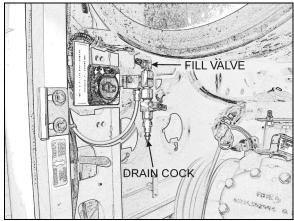


FIGURE 2: REAR VALVE LOCATION (TYPICAL)

12211

3.1.4 Secondary Air Tank

This tank is located in the front wheelhousing, behind the steering axle (Fig. 1). It is provided with a bottom drain valve.

Purge this reservoir every 12,500 miles (20 000 km) or once a year, whichever comes first.

3.1.5 Kneeling Air Tank

The kneeling air tank is located in the front wheelhousing (Fig. 1), and is provided with a bottom drain valve.

3.1.6 Parking Brakes Overrule Air Tank

The parking brakes overrule air tank is installed at the ceiling of the rear baggage compartment, on the L.H. side, and is provided with a bottom drain valve and drain tube.

3.2 PING TANK

The ping tank is located in the engine compartment; it is accessible through the engine compartment R.H. side door. It is used to dissipate heat and to reduce noise produced by the air compressor cycling on and off.

4. AIR SYSTEM EMERGENCY FILL VALVES

All vehicles come equipped with two emergency fill valves that enable system pressurization by an external source such as an air compressor. The rear valve is located in the engine compartment and is accessible from engine R.H. side door (Fig 2). It is positioned close to the door opening.



CAUTION

Maximum allowable air pressure is 125 psi (860 kPa). Air filled through these two points will pass through the standard air filtering system provided by Prevost. Do not fill system by any point on the system.

The front valve is located in the front service compartment close to R.H. side of door frame (Fig. 3).

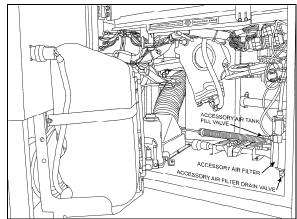


FIGURE 3: FRONT SERVICE COMPARTMENT

12210

These two air system emergency fill valves are fitted with the same valve stems as standard tires, and can be filled by any standard external air supply line.

The rear air system emergency fill valve will supply air for all systems (brakes, suspension and accessories) while the front fill valve will supply air for accessories only.

5. ACCESSORY AIR FILTER

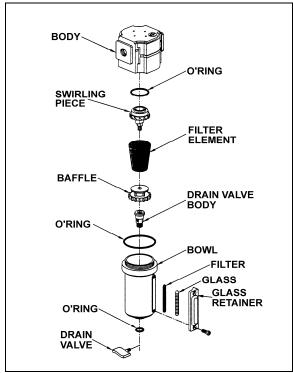


FIGURE 4: ACCESSORY AIR FILTER

1208

This filter is located inside the front service compartment (Fig. 3). Its main function consists in filtering the air supplied to the accessory air system, when connected to an external supply line. Ensure filter is purged whenever supplying the system with an external air line and at least every 12,500 miles (20 000 km). To purge, open drain valve (Fig. 4), let the moisture come out, then close the drain valve.

5.1 FILTER ELEMENT REPLACEMENT

Replace filter element whichever of the following occurs first: every 100,000 miles (160 000 km), every two years, or whenever differential pressure exceeds 15 psi (105 kPa) between filter inlet and outlet ports. Check condition of all three O'rings for damage. Replace when necessary (Fig. 4).

5.2 CLEANING

Clean filter body and bowl with a warm water and soap solution. Rinse thoroughly with clean water. Blow dry with compressed air making sure the air stream is moisture free and clean. Pay particular attention to the internal passages. Inspect all parts for damage and replace if necessary.

6. AIR GAUGES (PRIMARY, SECONDARY AND ACCESSORY)

The air pressure gauges, located on the dashboard (see "Operator's Manual"), are connected to the DC-4 double check valve, located on the pneumatic accessory panel in the front service compartment.

The latter is connected to the air lines running from the primary and secondary air tanks, as shown on the pneumatic system diagram provided in the technical publications box. The accessory air gauge is connected to the accessory air tank using the drain valve connector. The vehicle should never be set in motion until the buzzer alarm and warning lights turn off, i.e. when air pressure registers at least 66 psi (455 kPa). Moreover, if pressure drops below 66 psi (455 kPa), the "Low air pressure" warning lights will turn on, and the "Low air pressure" buzzer will sound. Stop the vehicle immediately, determine and correct the cause(s) of pressure loss. Check the gauges regularly with an accurate test gauge. Replace the gauge with a new unit if there is a difference of 4 psi (27 kPa) or more in the reading.

7. AIR FILTER/DRYER

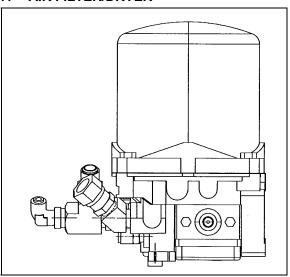


FIGURE 5: HALDEX AIR FILTER DRYER

12194

The air filter/dryer is either located in the rear wheelhousing, above the drive axle or aft of the evaporator compartment, inside the engine coolant heater compartment (Fig. 1 & 5). Its purpose is to remove moisture that could damage the air system before the air enters the system reservoir. The air filter/dryer also filters the air to remove dirt, compressor oil, and other contaminants that can damage the system.

Change cartridge every 100,000 miles (160 000 km) or once every two years, whichever comes first. The air dryer may be purged for maintenance purposes using the remote drain valve located in the engine compartment and accessible through the engine compartment R.H. side door. The valve is positioned close to the L.H. side of door opening (Fig. 2). The air filter/dryer has a built-in governor to maintain the system between 108 psig and 123 psig.

Maintenance and repair information is supplied in the maintenance information annexed to this section.

7.1 AIR FILTER/DRYER PURGE TANK

A tank is supplied to purge the air filter/dryer to remove moisture and contaminants.

8. HALDEX CONSEP ® CONDENSER / SEPARATOR

The Consep ® Air Pretreatment Condenser/ Separator is located in front of rear wheel-housing (Fig. 1 & 6). Within the vehicle's air brake system, the Haldex Consep condenses, separates and removes 90% of the oils, liquids and other contaminants, while treating up to 30 SCFM. It reduces corrosion and possible failure of air brake system components caused by contamination and significantly increases the air dryer desiccant life.

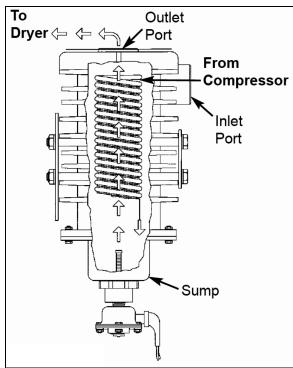


FIGURE 6: HALDEX CONSEP CONDENSER/SEPARATOR

8.1 MAINTENANCE

Mounted between the air compressor and the air dryer, the compact Consep requires little maintenance during its long service life. An automatic drain valve installed on the Consep saves time while ensuring that liquids are removed regularly for optimum performance. The drain valve's integrated filter prevents damage from large debris, while a built-in heater prevents freeze up.

The CONSEP must be inspected periodically for proper operation. The interval between inspections is determined by the type of service (every 6 months for City Transit). High compressor duty cycles and high temperatures can cause a buildup of carbon in the condenser, drain valve and filter. This contamination must be removed for proper operation.

Installation, Maintenance and Inspection information is supplied in the maintenance information annexed to this section under reference number L31167.

9. AIR LINES

Copper piping, nylon-reinforced tubing, and flexible hoses are used to connect the units in the pneumatic system, including air brake system, suspension system and accessory systems such as the entrance door, fresh air damper cylinder, air horns, etc. Furthermore, the nylon tubing is color coded to ease identification. Refer to the following table for the complete color identification code. Service instructions for each type of air line are also provided under the applicable headings.

Color	Circuit
Red	Secondary
Green	Primary and Delivery
Yellow	Parking Brake
Blue	Suspension
Black	Accessory

9.1 COPPER PIPING

A heat dissipation copper piping assembly is used to dissipate the heat coming from the compressor before it enters the air filter/dryer. Connections should be checked for leakage at least every 6,250 miles (10 000 km) or twice a year, whichever comes first. Tighten or replace when necessary. When replacing copper piping,

the parts must be free of burrs, copper cuttings, and dirt. Blow out piping with compressed air. Any such particles will destroy sealing seats in air control units. Also, new piping must be the same size as the old one.

9.2 FLEXIBLE HOSES

A flexible hose is used normally where it is impractical to use copper or nylon tubing due to constant flexing during operation, such as brake chamber hoses. Hose connections should be tested for leakage at least every 6,250 miles (10 000 km) or twice a year, whichever comes first and tightened or replaced if necessary. Any hose which is chafed, worn or kinked should be replaced.

Teflon-braided stainless steel hoses used in the engine compartment must be replaced only with similar hoses.

9.3 NYLON TUBING

Nylon tubing is used for air lines in areas where usage of this material is suitable. Nylon tubing is flexible, durable, and weather resistant. When replacing an air line, use nylon tubing only where it has been used previously.

Nylon air lines must never be routed in areas where temperature could exceed 200°F (93°C).



CAUTION

Nylon air lines should be used to replace existing nylon lines only, and must comply with the color identification code to ease pneumatic system troubleshooting.

9.4 AIR LINE OPERATING TEST

If any trouble symptom such as slow brake application or slow brake release indicates a restricted or clogged air line, disconnect the suspected tube or hose at both ends and blow through it to clear the passage.

Inspect tubing and hose for partial restriction that may be caused by dents or kinks. If such a condition is found, the tubing or hose should be replaced.

9.5 AIR LINE LEAKAGE TEST

With air system fully charged and the brakes applied, coat all tubing and hose connections with a soapy solution to check for air leakage. No leakage is permitted. Leakage can

sometimes be corrected by tightening the connection. If this fails to correct the leakage, new fittings, nylon tubing, copper tubing, teflon-braided stainless steel and flexible hoses must be installed as applicable.

9.6 MAINTENANCE

Inspect all lines for cuts, swelling, kinks or other damage or deterioration. Check for lines being pinched by other components. Retaining clips and ties must be in place.

Any support or bracket should be in good condition and mounted firmly in position. Hose spring guards should be in usable condition and not distorted. Particular attention should be given to long lines. Any supporting component (clips, ties, grommets, etc.) must be secured to prevent against unnecessary vibration and eventual loosening of connection. Any detected leak should be repaired. Be sure nylon lines are not near areas of intense heat. Check for any missing grommets or loose material where chafing or cutting may occur. Replace with new material as required. In general, lines should be securely located in position and free from any binding condition which would hinder air flow.

10. PRESSURE REGULATING VALVES

There is one pressure regulator for the belt tensioners, and another one installed on vehicles equipped with the World transmission output retarder.

The belt tensioner pressure regulating valve is located in the engine compartment above the engine air filter and is used to limit the air pressure in belt tensioners to 45 ± 2 psi $(310 \pm 15 \text{ kPa})$ (Fig. 7).

The other regulator is located in the engine compartment, on the engine cradle R.H. side (accessible through the engine R.H. side door). It is used for transmission retarder and should be adjusted to 85 ± 3 psi $(586 \pm 20 \text{ kPa})$.

	Air Pressure (psi)	Air Pressure (kPa)	
Belt Tensioner	45	310	
Retarder	85	586	

10.1 MAINTENANCE

Every 100,000 miles (160 000 km) or once every two years, whichever comes first, disassemble the regulating valve and wash all metal parts in

a cleaning solvent (Fig. 7). Examine the diaphragm; if cracked, worn or damaged, replace with a new one. If the valve is excessively grooved or pitted, it should be replaced. Replace any other part that appears worn or damaged. After reassembly, adjust to the specified pressure setting and check for air leakage.


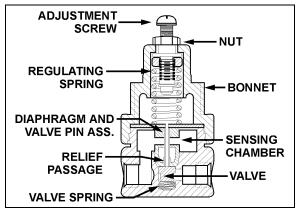


FIGURE 7: AIR PRESSURE REGULATING VALVE 12141A

10.2 PRESSURE SETTING PROCEDURE

Remove the dust cap from the pressure check valve (Fig. 8). Attach a pressure gauge at this port and check the pressure reading. If the pressure reading is incorrect, adjust as follows:

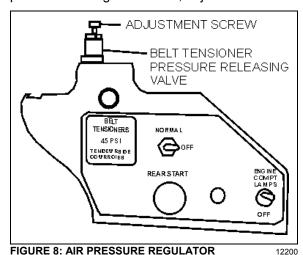

1. Loosen the locking nut, turn the adjustment screw counterclockwise to decrease pressure by approximately 10 psi (70 kPa) below the required pressure.

2. Turn the adjustment screw clockwise to increase the pressure slowly until the required pressure setting is reached. Tighten the locking nut.

3. Remove pressure gauge and replace dust cap on the air pressure check valve.

11. AIR COMPRESSOR

The Wabco System Saver 636 Twin Cylinder air compressor is located on the alternator side of the engine, at the flywheel end (Fig. 9). Its function is to provide and maintain air under pressure to operate devices in brake and air systems.

The compressor is driven by the ring gear, and is water cooled. Engine coolant is fed to the compressor through a flexible hose tapped into the block water jacket and connected to the rear of the compressor. Coolant returns from the top of the compressor (governor side) through a flexible hose to the engine pump.

The air is taken from the air intake manifold and entered in the top of the compressor. The compressed air is pushed into the discharge line located on side of the compressor, which sends air to the air dryer. Lubricating oil is supplied to the compressor by a line from the cylinder block oil gallery connected to the air compressor. Lubricating oil returns to the engine crankcase through the air compressor drive assembly.

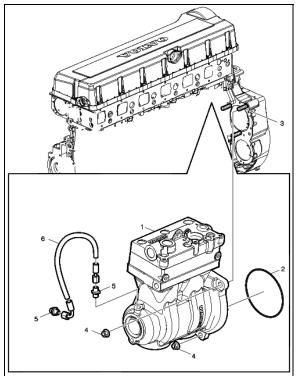


FIGURE 9: AIR COMPRESSOR LOCATION

03061

Maintenance and repair information on the Wabco 636 Twin Cylinder air compressor is supplied in the applicable booklet annexed at the end of this section.

Item	Description	Notes
1	Air Compressor	Wabco 636
2	O'Ring	
3	Stud (3)	M12
4	Flange Nut (3)	Torque to 15lb-ft (20 Nm)
5	Nipple (2)	
6	Hose Assembly	

11.1 COMPRESSOR REMOVAL AND INSTALLATION

- 1. Exhaust compressed air from air system by opening the drain valve of each air tank.
- 2. Drain the engine cooling system. See Section 5: "Cooling System".
- Access the compressor by the engine R.H. side compartment. Identify and disconnect all air, coolant and oil lines from the compressor assembly.
- 4. Remove the three compressor flange mounting nuts.
- Slide air compressor rearward to disengage the hub from coupling. Remove the air compressor.

Remove and retain the oil supply tube that runs between the compressor and the engine

Reverse removal procedure for installation.

12. EMERGENCY/PARKING BRAKE CONTROL VALVE (PP-1)

A push-pull control valve mounted on the L.H. lateral console is provided for parking brake application or release. The spring brakes are self-actuated whenever the control valve supply pressure drops below 40 psi (275 kPa). In the UP position, brakes are ON. In the DOWN position, brakes are RELEASED. A protective case around the knob prevents accidentally releasing the brakes.

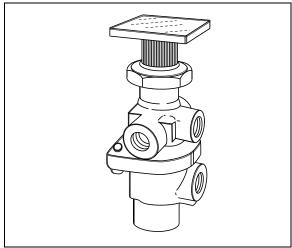


FIGURE 10: PP-1

12142

Maintenance and repair information on this valve is supplied in the applicable booklet annexed to this section under reference number SD-03-3611.

Remove the valve the following way:

- 1. Drain the air system.
- 2. Access this valve by tearing out the finishing panel, which holds the controls in place (Fig. 10).
- 3. Disconnect the air tubes.
- 4. Remove the retaining screws.
- 5. Service or replace the valve.
- 6. Installation is the reverse of removal.

13. EMERGENCY / PARKING BRAKES OVERRULE CONTROL VALVE (RD-3)

A RD-3 control valve is used with the parking brake overrule system. In the case of self-application of spring brakes due to a pressure drop, the brakes can be released by holding down this control valve. Maintenance and repair information on this valve is supplied in the applicable booklet annexed to this section under reference number SD-03-3611.

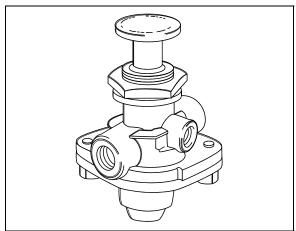


FIGURE 11: RD-3

14. FLIP-FLOP CONTROL VALVE (TW-1)

A flip-flop control valve mounted on the L.H. lateral console is provided to unload tag axle air springs and to lift tag axle. It is a manually operated "on-off" valve. Maintenance and repair information on this valve is supplied in the applicable booklet annexed to this section under reference number SD-03-3602.

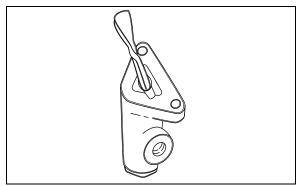


FIGURE 12: TW-1 12138

15. DUAL BRAKE APPLICATION VALVE (E-10P)

The E-10P dual brake valve is a floor mounted, foot-operated type brake valve with two separate supply and delivery circuits. This valve is located in the front service compartment (Fig. 13).

15.1 BRAKE PEDAL ADJUSTMENT

After brake pedal replacement or repair, adjust the pedal to its proper position according to the following procedure:

 Replace the linkage, loosen threaded rod lock nuts and screw or unscrew the threaded adjustment rod in order to obtain a 45° brake pedal inclination (Fig. 13).

2. Tighten threaded rod lock nuts.

15.1.1 Maintenance

Maintenance and repair information on the E-10P dual brake application valve is supplied in the applicable booklet annexed to this section under reference number SD-03-830.

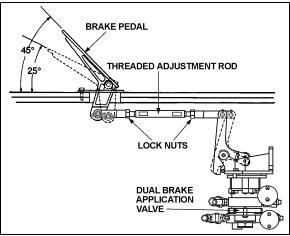


FIGURE 13: BRAKE PEDAL ADJUSTMENT

12208

16. STOPLIGHT SWITCHES

Two electro-pneumatic stoplight switches are mounted on the dual brake application valve (E-12). The upper one is used for the primary air circuit while the lower one is used for the secondary air circuit. Both switches are connected in parallel and have the same purpose, i.e. completing the electrical circuit and lighting the stoplights when a brake application is made. The upper switch (AC Delco) is designed to close its contact between 2 psi and 4 psi (14 kPa to 28 kPa) (Fig. 14), while the lower one (Bendix, SL-5) closes its contact at 4 psi (28 kPa) (Fig. 15). The switches are not serviceable items; if found defective, the complete unit must be replaced.

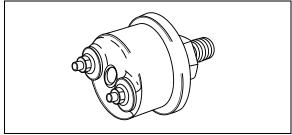


FIGURE 14: DELCO SWITCH

12139

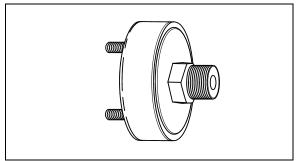


FIGURE 15: BENDIX SWITCH

12140

17. PARKING BRAKE ALARM SWITCH

Refer to the appropriate annexed booklet (Bendix, SL-5 Stop Light Switch; reference no. SD-06-2501).

The parking brake alarm uses the same switch as the stoplights. It is mounted on the spring brake valve and operates in conjunction with a NC relay to sound a warning alarm by completing the electrical circuit when the ignition switch is turned OFF with parking brake released.

18. BRAKE RELAY VALVE (R-12 & R-14)

The primary air system includes three brake relay valves being supplied by the dual brake valve, and which function is to speed up the application and release of the service brakes.

One Wabco R-14 valve located in the rear underframe supplies the drive axle service brake air line, while the other two R-12 valves supply independently both the tag axle right and left service brake air line and act as interlock valves. These valves are accessible from under the vehicle at the level of the tag axle. Maintenance and repair information on these valves is supplied in the applicable booklet annexed to this section under reference number SD-03-1064.

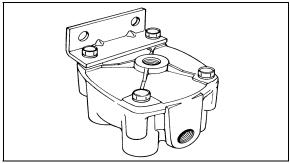


FIGURE 16: R-12

12074

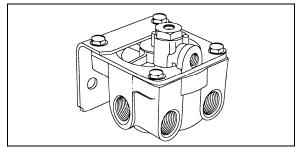


FIGURE 17: R-14

12207

19. QUICK RELEASE VALVES (QR-1)

The quick release valve is located on the front axle service brakes air line and permit rapid exhaust of air pressure from brakes, thus decreasing the brake release time.

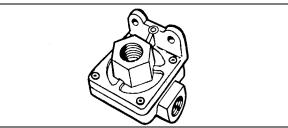


FIGURE 18: QR-1

1207

Maintenance and repair information on this valve is supplied in the applicable booklet annexed to this section under reference number SD-03-901.

20. SPRING BRAKE VALVE (SR-7)

The spring brake valve is located in the rear underframe. The SR-7 Modulating Valve is used in conjunction with a dual air brake system and spring brake actuator and performs the following functions:

- Provides a rapid application of the spring brake actuator when parking.
- Modulates the spring brake actuator application using the dual brake valve should a primary failure occur in the service brake system.
- Prevents compounding of service and spring forces.

Maintenance and repair information on the spring brake valve is supplied in the applicable booklet annexed to this section under reference number SD-03-9043.

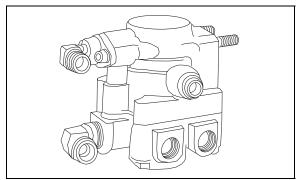


FIGURE 19: SR-7

12206

21. PRESSURE PROTECTION VALVE (PR-4)

Maintenance and repair information on the pressure protection valve is supplied in the applicable booklet annexed to this section under reference number SD-03-2010.

The air system includes two pressure protection valves (Fig. 20). One valve is installed on the manifold block, and insures at all times a minimum pressure of 70 psi (482 kPa) in the suspension air system in the event that a pressure drop occurs in either the suspension air system or accessory air system. This valve is located in the front service compartment beside the air filter.

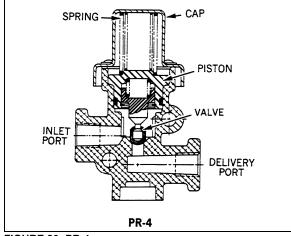


FIGURE 20: PR-4

12174

The other valve is installed on the accessory air tank, and insures a minimum pressure of 70 psi (482 kPa) in the accessory air system in the event that a pressure drop occurs in either the suspension air system or braking air system (refer to Fig. 1 for accessory air tank location).

22. LOW PRESSURE INDICATOR (LP-3)

Maintenance and repair information on the low pressure indicators is supplied in the applicable booklet annexed to this section under reference number SD-06-1600.

The air system includes two low pressure switches (Fig. 21), both located on the pneumatic accessory panel in the front service compartment. One serves for the parking brake signal, its pressure setting is 66 ± 6 psi (455 ± 40 kPa). The remaining pressure switch monitors the parking brake telltale panel indicator; its pressure setting is 30 psi (205 kPa).

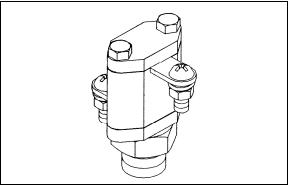


FIGURE 21: LP-3

12214

23. SHUTTLE-TYPE DOUBLE CHECK VALVE (DC-4)

Maintenance and repair information on the shuttle-type double check valve is supplied in the applicable booklet annexed to this section under reference number SD-03-2202.

The double check valve is located on the pneumatic accessory panel in the front service compartment. In the event of a pressure drop in either the primary or secondary system, this unit will protect the emergency /parking brake control valve and the intact portion of the air system from pressure loss.



FIGURE 22: DC-4

12134

24. EMERGENCY BI-FOLD ENTRANCE DOOR OPENING VALVES

Two emergency door opening three-way valves are installed on the coach. One is in the front service compartment, readily accessible. The other one is below the R.H. dashboard panel. When used, the valve releases pressure in the entrance door locking cylinders, thus allowing the door to be manually opened.

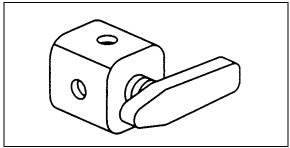


FIGURE 23: THREE-WAY VALVE

12186

25. AIR SYSTEM TROUBLESHOOTING

The following list has been designed to help in troubleshooting some of the most common problems in the air system and main causes. For air brakes troubleshooting, refer to "Air Brakes Troubleshooting" in this section. For more troubleshooting information, refer to the manufacturer's brochures annexed to this section.

Air pressure doesn't rise to, or doesn't maintain, a normal setting:

- Defective air gauge (registering incorrectly).
- Excessive leaking in air system.
- Reservoir drain cock open.
- Governor poorly adjusted or defective.
- Defective compressor.
- Worn compressor or excessive wear on piston and/or ring.
- Air pressure rises to normal setting too slowly.

Excessive leaking in air system:

- Clogged engine air cleaner.
- Worn compressor or excessive wear on piston and/or ring.
- Engine speed too low.

Air pressure rises above a normal setting:

- Defective air gauge (registering incorrectly).
- Governor poorly adjusted or defective.
- Restriction in line between governor and compressor unloading mechanism.

Air pressure drops quickly when engine is stopped:

- Leaks in compressor discharge valve.
- Leaks in governor.
- Leaks in air lines.
- Leaks in air system valves.

26. BRAKE OPERATION

The vehicle braking system uses both service and parking air-operated brakes. The air system is divided into two independent circuits to isolate the front axle brakes and the rear axle brakes (drive and tag), thus providing safe brake operation in the event that one circuit of the system fails. The primary circuit is connected to the drive and tag axle brakes, while the secondary circuit is connected to the front axle brakes. The tag axle service brakes operate only when the axle is in the normal driving (loaded) position. The spring-type emergency brakes are mounted on the drive axle, and will apply automatically if primary system pressure falls below 40 psi (276 kPa).

Furthermore, brake application or release, which is speed up by a pneumatic relay valve (R-12), will start with the rear axles and be followed by the front axle, thus providing uniform braking on a slippery surface. The vehicle is also equipped with an Anti-lock Brake System (ABS), detailed later in this section.

Brake and air system maintenance consists of periodic inspections. Check all parts for damage and brake adjustment (refer to subsequent headings in this section for more details). Ensure all fasteners are tight (refer to "Specifications" for recommended tightening torques).

27. AIR BRAKES

DISC BRAKES

Knorr-Bremse SN7000 disc brakes are used on all axles. The front and drive axle discs are actuated by 24 square inch effective area air brake chambers, while on tag axle, the brake


chambers have a 14 or 16 square inch effective area for service. The *Knorr-Bremse SN7000* brakes are supplied with automatic clearance (slack) adjusters as standard equipment for easier adjustment. For more information on disc brake components and scheduled maintenance, refer to Knorr-Bremse Service Manual at the end of this section.

27.1 CHECKING DISC BRAKE PADS

Brake pads have to be checked on a regular basis depending on the vehicle operation. The remaining thickness of the pads should never be less than 3/32 in (2 mm). When replacing brake pads, all four pads on an axle have to be changed at the same time. There is no inner or outer pad, since all pads are the same. Once removed, worn pads should be replaced in their original position.

27.1.1 Type A – Vehicles Equipped With a Rubber Bushing That is Axially Ribbed

The condition of the Pads can be visually determined, without removing the road wheel, by viewing the position of the wear marking "G" (change-over from the ribbed area to the flat area). New Condition (see "X") Shown by the position of the wear marking 'G' on the Rubber Bush (6a). The wear limit (see "Z") Shown by the new position of the wear marking "G" on the Rubber Bush (6a). This condition requires a check of the brake pad thickness and the brake disc with the wheel removed. If necessary change the Pads and/or the Disc - see Vehicle Manufacturer's recommendations.

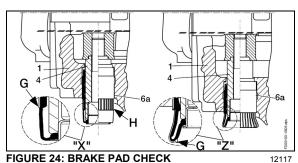

27.1.2 Type B – Vehicles Equipped With a Wear Indicator

The condition of the Pads can be visually determined without removing the road wheel by viewing the position of the caliper compared to the tip of the wear indicator (A).

If the side of the caliper lines up with the tip of the wear indicator, the brake pad thickness and the brake disc must be checked with the wheel removed. If necessary change the Pads (refer to Knorr-Bremse Service Manual at the end of this section) and/or the Disc - see Vehicle Manufacturer's recommendations.



FIGURE 25: BRAKE PAD WEAR INSPECTION

12119

27.2 CALIPER RUNNING CLEARANCE

The Knorr/Bendix air disc brake is designed to move freely, with minimal force. By pushing and pulling the caliper in an axial direction by hand (see arrow A in Figure 26), a movement of 0.6 - 1.1 mm must be possible.

If, even using a high level of hand pressure (no tools), the caliper is not moveable, the caliper guidance must be further examined.

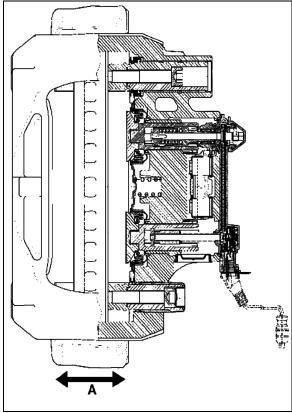


FIGURE 26: RUNNING CLEARANCE

12116

12145

27.3 TORQUE SPECIFICATIONS

For proper caliper maintenance, refer to the following figures.

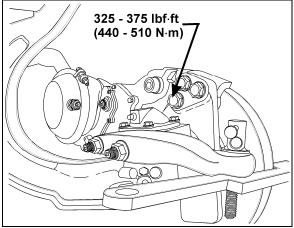


FIGURE 27: TORQUE SPECIFICATION

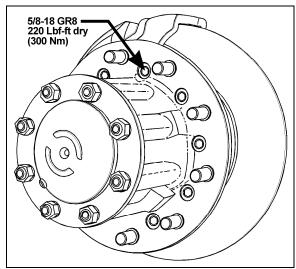


FIGURE 28: TORQUE SPECIFICATION

11030

28. SAFE SERVICE PROCEDURES

Most recently manufactured brake linings no longer contain asbestos fibers. Instead of asbestos, these linings contain a variety of ingredients, including glass fibers, mineral wool, aramid fibers, ceramic fibers, and carbon fibers. At present, OSHA (Occupational Safety and Health Administration) does not specifically regulate these non-asbestos fibers, except as nuisance dust. Medical experts do not agree about the potential long-term risks from working and inhaling non-asbestos Nonetheless some experts think that long-term exposure to some non-asbestos fibers could cause diseases of the lung, including pneumoconiosis, fibrosis, and cancer. Therefore, lining suppliers recommend that workers use caution to avoid creating and breathing dust when working on brakes that contain non-asbestos fibers.



WARNING

Whenever possible, work on brakes in a separate area away from other operations.

Always wear a respirator approved by NIOSH (National Institute of Occupational Safety and Health) or MSHA (Mine Safety and Health Administration) during all brake service procedures. Wear the respirator from removal of the wheels through assembly.



WARNING

NEVER use compressed air or dry brushing to clean brake parts or assemblies. OSHA recommends that you use cylinders that enclose the brake. These cylinders have vacuums with high efficiency (HEPA (Health and Environment Protection Agency)) filters and workmans' arm sleeves. But, if such equipment is not available, carefully clean parts and assemblies in the open air.

Clean brake parts and assemblies in the open air. During disassembly, carefully place all parts on the floor to avoid getting dust into the air. Use an industrial vacuum cleaner with a HEPA filter system to clean dust from the brake drums, backing plates and other brake parts. After using the vacuum, remove any remaining dust with a rag soaked in water and wrung until nearly dry.

If you must grind or machine brake linings, take additional precautions because contact with fiber dust is higher during these operations. In addition to wearing an approved respirator, do such work in an area with exhaust ventilation.

When cleaning the work area, NEVER use compressed air or dry sweeping to clean the work area. Use an industrial vacuum with a HEPA filter and rags soaked in water and wrung until nearly dry. Dispose of used rags with care to avoid getting dust into the air. Use an approved respirator when emptying vacuum cleaners and handling used rags.

Wash your hands before eating, drinking or smoking. Do not wear your work clothes home. Vacuum your work clothes after use and then launder them separately, without shaking, to prevent fiber dust from getting into the air.

Material safety data sheets on this product, as required by OSHA, are available from Rockwell and Knorr-Bremse.

29. AIR BRAKE TROUBLESHOOTING

The following tests and check lists have been designed to identify the cause(s) of a sluggish performance and/or leaks in the system. These tests require very little time to perform, and give you a general idea of the system condition. Each test is provided with a corresponding check list

which will guide you to the most common causes of problems.

Before performing any test, check all air lines for kinks or dents, and hoses for signs of wear, drying out or overheating.



WARNING

When working on or around a brake system and its related components, the following precautions should be observed:

Always block vehicle wheels. Stop engine when working under a vehicle. Keep hands away from chamber push rods and slack adjusters as they may apply when system pressure drops.

Never connect or disconnect a hose or line containing air pressure. It may whip as air escapes. Never remove a component or pipe plug unless you are sure all system pressure has been depleted.

Never exceed recommended air pressure and always wear safety glasses when working with air pressure. Never look into air jets or direct them at anyone.

Never attempt to disassemble a component until you have read and understood the recommended procedures. Some components contain powerful springs and injury can result if not properly disassembled. Use only proper tools and observe all precautions pertaining to the use of those tools.

Always clean connecting piping and/or fittings, and coat pipe threads with Teflon pipe sealant before installing any air brake system component.

Pressure Build-Up / Low Pressure Warning / Cutoff Point / Air Filter/Dryer Built-in Governor Cutout

CONDITION: Vehicle leveled, parking brake applied.

- 1. Completely drain wet, primary and secondary air reservoirs only.
- 2. Start engine and run at fast idle. Low pressure warning lights should be "On".
- 3. Start checking pressure at 50 psi (344 kPa).
- 4. Low pressure warning lights and buzzer should go off at or above 60 psi (415 kPa).

- 5. At 85 psi (586 kPa), run engine at full rpm, then check that build up time to 100 psi (690 kPa) is 30 seconds or less.
- Air filter/dryer built-in governor cut-out. Cuts out at the correct pressure of 123 psi ±3 (847±21 kPa).
- 7. Air filter/dryer built-in governor cut-in. Cuts in around 110 psi (758 kPa).

For common corrections, refer to the following check list:

High or Low Warning Cutoff Point

• Perform a telltale light and gauge test. Replace entire cluster if found defective.

High or Low Air Filter/Dryer Built-in Governor Cutout Point

• Perform a telltale light and gauge test. Replace entire cluster if found defective.

OR

 Repair or replace air filter/dryer as necessary after checking that compressor unloader mechanism operates correctly.

More than 30 seconds to build-up pressure from 85 to 100 psi (585 - 690 kPa) at full engine RPM

- Perform a telltale light and gauge test.
 Replace entire cluster if found defective.
- Check compressor strainer or inlet line. If restricted, clean or replace element or faulty line.
- Check compressor head or discharge line for carbonization or restriction. Clean or replace as necessary.
- If discharge valves leak, pull head and correct or replace cylinder head.
- If drive is slipping, replace gear.
- If inlet valves are stuck, open or leaking severely, replace unloader kit, inlet valves and/or seats as necessary.
- If drain cock is found open, close it.
- Listen for air leaks and repair.
- Redo list to check all items repaired or replaced.

Air Supply Reservoir Leakage

CONDITION: Full pressure, engine stopped, parking brake applied

- Allow at least 1 minute for pressure to stabilize.
- 2. Stop engine, then check air pressure gauge for 2 minutes. Note any pressure drop.
- 3. Pressure should not drop by more than 3 psi (20 kPa) per minute.

For common corrections, refer to the following check list:

Excessive air loss:

- With the primary air system at normal operating pressure (95 - 125 psi (655 - 860 kPa)), coat all air line connections and pneumatic components with a water and soap solution. Bubbles will indicate an air leak, and none should be permissible. Repair or replace defective parts.
- Listen for leaks and correct as required.
- Redo test to check all items repaired or replaced.

Brake System Air Leakage

CONDITION: Full pressure, engine stopped, parking brake released.

- 1. Apply service (foot) brakes, allow at least 1 minute for pressure to stabilize.
- Hold down foot valve for 2 minutes while observing air pressure gauge on the dashboard.
- 3. Pressure drop should not be more than 4 psi (27 kPa) per minute.

For common corrections, refer to the following check list.

Excessive leakage on brake service side:

- With the primary air system at normal operating pressure (95 125 psi (655 860 kPa)) and foot brake applied, coat all air line connections and brake pneumatic components with a water and soap solution. Bubbles will indicate an air leak, and none should be permissible. Repair or replace defective parts.
- Listen for leaks and correct as required.
- Redo test to check all items repaired or replaced.

IMPORTANT NOTE

To maintain your vehicle's air disc brakes at their original performance standard, we strongly recommend use of only genuine, approved service replacement parts on Bendix and Knorr-Bremse air disc brake systems.

If non-approved friction materials or replacement components are used, neither Prévost Car nor Bendix Spicer Foundation Brake LLC will accept any air disc brake-related warranty returns or claims.

For more information on this policy, refer to Bendix-Prévost product notification annexed at the end of Section 12 of Maintenance Manual.

30. BRAKE AIR CHAMBER

If this vehicle is equipped with *Knorr-Bremse SN7000* disc brakes on all axles, it also uses "Knorr-Bremse" brake chambers. The drive axle chambers consist of two separate air chambers, each having its own diaphragm and push rod. They are used as a service brake chamber, an emergency brake in case of air pressure loss and a spring-applied parking brake. Refer to figures 29 and 30.

The front and tag axle brake air chambers are used only for service brake duty (Fig. 29).

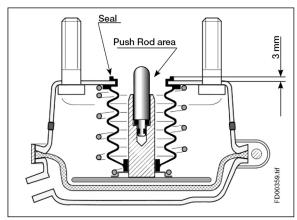


FIGURE 29: FRONT AXLE BRAKE AIR CHAMBER 121

30.1 MAINTENANCE

Every 6,250 Miles (10 000 km) or twice a year, whichever comes first depending on type of operation:

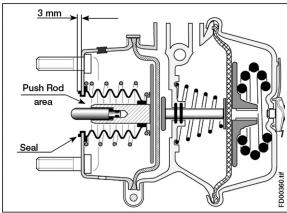


FIGURE 30: DRIVE AXLE BRAKE AIR CHAMBER

Check all hoses and lines. They should be secure and in good condition.

Every 100,000 Miles (160 000 km) or once a year, whichever comes first depending on type of operation:

- 1. Disassemble and clean all parts.
- Install new diaphragm or any other part if worn or deteriorated.

NOTE

When the diaphragm, spring, or both are replaced, they should be replaced in the corresponding chamber on the same axle.

- 3. Perform an airtighteness test:
- a) Make and hold a full brake application.
- b) Coat clamping ring(s) with a soapy solution. If leakage is detected, tighten clamping ring only enough to stop leakage. Do not overtighten as this can distort sealing surface or clamping ring. Coat area around push rod hole (loosen boot if necessary). No leakage is permitted. If leakage is detected, the diaphragm must be replaced.

30.2 EMERGENCY/PARKING BRAKE MANUAL RELEASE



DANGER

Never stand in the axis line of the spring brake chambers, especially when caging the spring.

Drive Axle

1. Block the wheels to prevent the vehicle from moving.

- Remove the release stud tool from its storage place on drive axle brake air chamber.
- 3. Remove the access plug from the end of the spring chamber and then insert the release stud through the opening. Turn the release stud ¼ turn (clockwise) to anchor it into the spring plate. Install the flat washer and nut, then turn the nut clockwise to cage the spring. Repeat on the opposite side.



DANGER

Make sure the release stud is properly anchored in spring plate receptacle prior to caging the spring.

 To manually reset the emergency/parking brake, turn the nut counterclockwise. Reinstall access plugs on the spring chambers, and release stud tools in their storage places.

30.3 BRAKE CHAMBER REMOVAL



WARNING

To prevent personal injuries, brakes should be inoperative prior to working on any of their components.

To prevent personal injuries, brake chambers should be made inoperative by releasing spring tension prior to disposal.

- 1. Block the wheels to prevent the vehicle from moving.
- 2. Safely support vehicle at the recommended body jacking points.
- 3. To gain access to a given brake air chamber, the corresponding wheel can be removed (refer to Section 13: "Wheels, Hubs and Tires").
- Exhaust compressed air from system by opening the drain valve of each reservoir.
- 5. For the drive axle brake chambers, manually release spring brakes (refer to "Emergency/Parking Brake, Manual Release" procedure in this section).
- 6. Disconnect air line(s) from brake chamber.
- 7. Remove the cotter pin connecting brake chamber and slack adjuster (drive axle).

8. Unbolt and remove the brake chamber from vehicle.

30.4 BRAKE CHAMBER INSTALLATION

Reverse removal procedure and then check brake adjustment.



CAUTION

Always clean air lines and fittings, and coat pipe threads with teflon pipe sealant before reconnecting air lines.

30.5 BRAKE CHAMBER DISASSEMBLY



DANGER

Spring brake chambers, on drive and tag axles contain an extremely high compressive force spring, which can possibly cause serious injury if special precautions are not taken when working around this area.

To avoid such injury, the following recommendations must be applied:

- Prévost recommends the installation of a new spring brake chamber if it is found to be defective.
- Spring brake chamber maintenance and/or repair must be performed by trained and qualified personnel only.
- Before manually releasing spring brakes, visually check spring brake for cracks and/or corrosion.
- On "MGM" brake chambers (drive axle), make sure the release stud is properly anchored in spring plate receptacle prior to caging the spring.
- Never stand in the axis line of the spring brake chambers, especially when caging the spring.



WARNING

To prevent personal injuries, brakes should be inoperative prior to working on any of their components.

- 1. Block the wheels to prevent the vehicle from moving.
- 2. Safely support vehicle at the recommended body jacking points.

NOTE

To gain access to a given brake air chamber, the corresponding wheel can be removed (refer to Section 13: "Wheels, Hubs and Tires").

- 3. Exhaust compressed air from air system by opening the drain valve of each reservoir.
- For the drive axle brake chambers, manually release spring brakes (refer to "Emergency/Parking Brake Manual Release" procedure in this section).
- Remove clamp ring, remove and discard the existing diaphragm. Install the new diaphragm squarely on body.
- Reverse the procedure for assembly. Tap clamp ring to ensure proper seating. Check for proper operation before placing vehicle in service.

31. ANTI-LOCK BRAKING SYSTEM (ABS)

This device has been designed to ensure stability and permit steering control of vehicle during hard braking, and to minimize its stopping distance whatever the road conditions are. On slippery roads and generally in emergency situations, over-braking frequently induces wheel lock. The anti-lock braking system provides maximum braking performance while maintaining adequate steering control on slippery roads.

The ABS continuously monitors wheel behavior during braking. Sensors on each wheel of front and drive axles (tag axle is slave to drive axle) transmit data to a four channel electronic processor which senses when any wheel is about to lock. Modulator valves quickly adjust the brake pressure (up to 5 times per second) to prevent wheel locking. Each wheel is therefore controlled according to the grip available between its tire and the road.

With this device, the vehicle is brought to a halt in the shortest possible time, while remaining stable and under the driver's control.

Since the braking system has dual circuits, the ABS is also provided with a secondary system should a fault develop in the ABS. Anti-lock systems are a parallel system which does not hinder brake functioning in case of failure. Braking system functions in normal, non

anti-lock controlled operation during ABS system failure.

The ABS system consists of two diagonally related circuits, only the half of the system which has sustained damage or other fault is switched off (i.e. wheels return to normal non-ABS braking). The other diagonal half remains under full ABS control.

NOTE

ABS is active on service brake, transmission retarder, Jake brake, but is inactive on emergency/parking brake.

NOTE

The ABS system is inoperative at speeds under 4 mph (6 Km/h). Illumination of ABS telltale indicator at these speeds is normal.



CAUTION

Disconnect the ECU or pull the ABS fuse before towing vehicle.

31.1 TROUBLESHOOTING AND TESTING

For troubleshooting and testing of the vehicle's anti-lock braking system, refer to Meritor Wabco Maintenance Manual MM-0112: "Anti-Lock Braking System (ABS) for Trucks, Tractors and Buses", at the end of this section. Use dashboard Message Center Display (MCD) Diagnostic Mode for troubleshooting and repair.

31.2 ABS COMPONENTS

The main components of the ABS system are listed hereafter. Refer to each component for its specific function in the system and for proper maintenance.

31.2.1 Electronic Control Unit (ECU)

This control unit is located in the front electrical compartment, (refer to figure 31 for location). According to the data transmitted by the sensors (number of pulses/sec is proportional to the speed of each wheel), the electronic control unit determines which wheel is accelerating or decelerating. It then establishes a reference speed (average speed) from each wheel data, and compares the speed of each wheel with this reference speed to determine which wheel is accelerating or decelerating.

As soon as wheel deceleration or wheel slip threshold values are exceeded, the electronic control unit signals a solenoid control valve to limit the excessive brake pressure produced by the driver in the appropriate brake chamber.

Maintenance

No specific maintenance is required. The ECU is not serviceable. When found to be defective, replace.

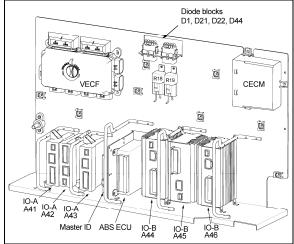


FIGURE 31: ABS ECU LOCATION

06617



CAUTION

In order to protect the ABS electronic control unit from voltage surges, always disconnect before performing any welding procedure on vehicle.

31.2.2 ABS Modulator Valve

This ABS system is equipped with four or five modulator valves, located between the brake chamber and the relay valve or quick release valve (Fig. 32). Note that on the basic ABS system, there is only one solenoid valve controlling the drive and tag axle wheels on the same side (tag axle is slave to drive axle).

This is an "On/Off" type valve, i.e., at brake application, the valve exhausts air from the brake chamber when the electronic unit senses that the corresponding wheel speed is decreasing in relation to the other wheels.

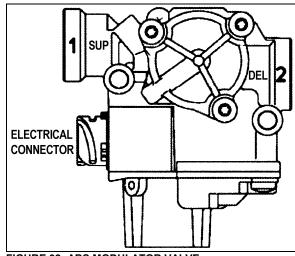


FIGURE 32: ABS MODULATOR VALVE

1222

Maintenance

Refer to Bendix Service Data sheet SD-13-4870 located at the end of this section.

31.2.3 Sensors

The sensors are mounted on the front, drive and tag axle (if applicable) wheel hubs (Fig. 33). The inductive sensors consist essentially of a permanent magnet with a round pole pin and a coil. The rotation of the toothed wheel alters the magnetic flux picked up by the coil, producing an alternating voltage, the frequency of which is proportional to wheel speed. When wheel speed decreases, magnetic flux decreases proportionately. Consequently, the electronic control unit will command the solenoid control valve to decrease the pressure at the corresponding brake chamber.

Maintenance

No specific maintenance is required for sensors, except if the sensors have to be removed for axle servicing. In such a case, sensors should be lubricated with special grease (Prévost #680460) before reinstallation. Refer to paragraph "Sensor Installation" for details.

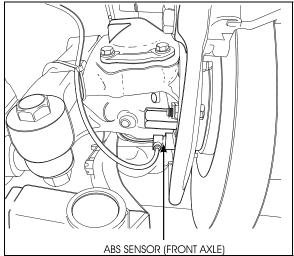


FIGURE 33: ABS SENSOR LOCATION

12153

NOTE

The resistance value, when sensors are checked as a unit, must be equal to 1,75 k ohms. To check the sensors for proper output voltage after the sensors and toothed wheels have been assembled to the axle, connect a suitable AC voltmeter across the output terminals. With the hubs rotating at 30 rpm, the output voltages should read from 50 to 1999 mV to be acceptable.

Sensor Installation

The following procedure deals with sensor installation on the axle wheel hubs. Read procedure carefully before reinstalling a sensor, as its installation must comply with operational tolerances and specifications.

1. Apply recommended lubricant (Prévost #680460) to spring clip and sensor.



CAUTION

Use only this type of grease on the sensors.

- Insert spring clip in the holder on hub. Make sure the spring clip tabs are on the inboard side of the vehicle. Push in until the clip stops.
- Push the sensor completely inside the spring clip until it is in contact with the tooth wheel. Ensure mounting is rigid, as it is an important criterion for adequate sensor operation.

NOTE

This installation should be of the "press fit" type.

31.2.4 Spring clip

The spring clip retains the sensor in its mounting bracket close to the toothed pulse wheel. The gap between the sensor end and teeth is set automatically by pushing the sensor in the clip hard up against the tooth wheel, and the latter knocks back the sensor to its adjusted position (Fig. 34).

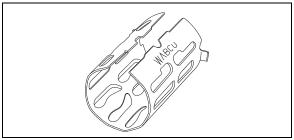


FIGURE 34: SPRING CLIP

12161

Maintenance

The spring clip requires no specific maintenance.

32. FITTING TIGHTENING TORQUES

45° Flare and Inverted Flare: Tighten assembly with a wrench until a solid feeling is encountered. From that point, tighten 1/6 turn (Fig. 35).

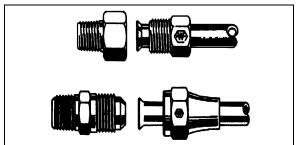


FIGURE 35: HOSE FITTINGS 12053

Compression: Tighten nut by hand (Fig. 36). From that point, tighten using a wrench the number of turns indicated in the chart hereafter.

Fitting size	Pipe diameter (inches)	Number of additional turns required following hand tightening
2	1/8	1 ¼
3	3/16	1 ¼
4	1/4	1 ¼
5	5/16	1 3/4
6	3/8	2 1/4
8	1/2	2 1/4
10	5/8	2 1/4
12	3/4	2 1/4
16	1	2 1/4

 


FIGURE 36: HOSE FITTING

1205

NTA-Type Plastic Tubing: Hand tighten nut (Fig. 37). From that point, tighten using a wrench the number of turns indicated in the following chart.

Tubing diameter (inches)	Number of additional turns required following hand tightening
1/4	3
3/8 to 1/2	4
5/8 to 3/4	3 ½

 


FIGURE 37: HOSE FITTING

12055

AB-Type Copper Piping: Hand tighten nut (Fig. 38). From that point, tighten with a wrench the number of turns indicated in the following chart.

Piping diameter (inches)	Number of additional turns required following hand tightening
1/4, 3/8, 1/2	2
5/8, 3/4	3



FIGURE 38: HOSE FITTING

1205

Pipe Tightening: All connections must be hand tightened. From that point, tighten a minimum of $2\frac{1}{2}$ additional turns.

NOTE

Use Locktite (Prévost number 680098) pipe sealant to seal pipe thread.

33. SPECIFICATIONS

Air Compressor

Make	
ModelCapacity (at 1250 rpm)	
Prévost number	
Air Dryer	
Make	Haldex
Model	
Prévost number	
Desiccant cartridge Prévost number	3097369
Flip-Flop Control Valve	
Make	Bendix Westinghouse

TypePrévost number 640136	On-Of
Emergency/Parking Brake Control Valve	
Make Model	
Automatic release pressurePrévost number	40 psi (275 kPa) nomina
Dual Brake Application Valve	
Make	Bendix Westinghouse
Model	
Prévost number	641856
Stoplight Switches	
Make	
Model	
Contact close (ascending pressure) Prévost number	
Brake Relay Valves	
Make	Bendix Westinghouse
Model	
Supplier number	
Prévost number	
Brake Relay Valve	
Make	
Model	
Prévost number	
Quick Release Valve	
Make	
Model	
Prévost number	
Spring Brake Valve	
Make	
ModelPrévost number	
Pressure Protection Valve	Pandiy Waatinghaya
Make Model	
Nominal closing pressure	
Prévost number	
Shuttle-Type Double Check Valve	
Make	Bendix Westinghouse
Model	
Prévost number	641015
Low Pressure Indicators	
Make	
Model	
Contact close Prévost number	
1 16 10 10 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	

Section 12: BRAKE AND AIR SYSTEM

Air Pressure Regulator	
Make	
Adjustable output range	
Recommended pressure setting	
Air Filter Element	
Make	Norgren
Туре	•
Prévost number	641338
Front Wheel Brake Chambers	
Make	
Type	
Prévost number (R.H.)	
Drive Axle Brake Chambers	Vnor Droma
MakeType	
Prévost number	
Piggy Back (On Drive Brakes)	
Make	Knorr-Bremse
Type	
Prévost number	641433
Tag Axle Brake Chambers	
Make	
Type	
Prévost number	642087
Tag Axle Brake Chambers	
Make Type	
Prévost number	
Brake Lining (All Axles) Make	Knorr Promoo
Prévost number	
Prévost number	
ABS ANTILOCK BRAKING SYSTEM	
ABS MODULATOR VALVE	
Make	Bendix
Voltage Prévost number	
	072011
Sensor Prévost number	640005
	042085
Sensor (90°)	
Prévost number	642084

SECTION 13: WHEELS, HUBS & TIRES


CONTENTS

1. W	VHEELS	2
2. W	VHEEL MAINTENANCE	2
2.1	INSPECTION	2
2.2		
2.3		
3. D	OUAL WHEELS	3
3.1	OUTER WHEEL REMOVAL	3
3.2		
3.3		
3.4		
3.5	INSPECTION	3
4. W	VHEEL STRAIGHTNESS TEST	4
5. W	VHEEL STUDS	4
5.1	DRIVE AXLE WHEEL STUDS	4
5.2		
6. H	IUB MOUNTED WHEELS	5
6.1	CARE OF WHEELS	6
7. FI	RONT AND TAG AXLE WHEEL HUBS	6
7.1	HUB BEARING INSPECTION	6
7.2	HUB BEARING REMOVAL	7
7.3	HUB BEARING INSTALLATION	7
8. D	ORIVE AXLE WHEEL HUBS	7
8.1		
8.2	DISASSEMBLY AND REPAIR	8
9. TI	TRE MAINTENANCE	8
9.1	Inflation Pressure	9
9.2		
9.3		_
9.4		
10.	SPECIFICATIONS	11
11 1 119	ISTRATIONS	
	RE1: ALUM/STEEL WHEEL ARRANGEMENT	
	RE 2: TIGHTENING SEQUENCE	
	RE 4: DRIVE AXLE WHEELS	
	RE 5: SINGLE WHEELS	
	RE 6: FRONT & TAG AXLE WHEEL HUB	
	RE 7 : FRONT & TAG AXLE HUB AND ROTOR ASSEMBLY	
FIGURE	RE 8: TIRE INFLATION	9
FIGURE	RE 9: TIRE LIFE / INFLATION PRESSURE	10

1. WHEELS

The vehicle is equipped with hub-mounted wheels as standard equipment, all studs and nuts have right-hand threads Steel wheels are installed on the vehicle and are mounted with radial tubeless tires.

All wheel dimensions are 22.50 X 9.0 inches (571.5 X 228.6 mm) for 315/80 R 22.5 tires except inner drive wheels which are always 22.50 X 8.25 inches (571.5 X 209.6 mm) for 315/80 R 22.5 tires.

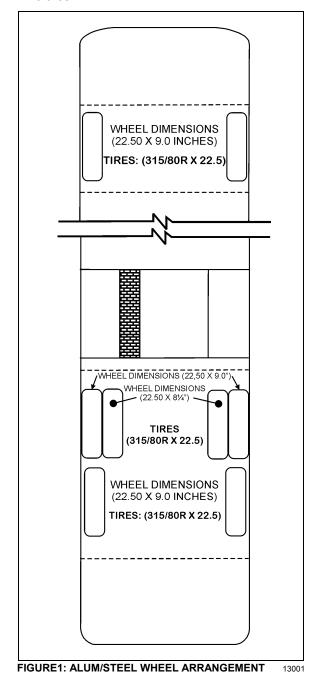

2. WHEEL MAINTENANCE

Wheel maintenance consists of periodic inspections. Check all parts for damage and make sure that wheel nuts are tightened to the proper torque. In the case of a new vehicle, or after a wheel installation, stud nuts should be tightened every 100 miles (160-km) for the first 500 miles (800-km) to allow setting in of clamping surfaces.

Wheel studs and nuts must be kept free from grease and oil. No lubricant whatsoever should be used. Cleanliness of the wheel and its rotor mating surfaces is important for proper wheel mounting.

However, for hub mounted wheels, it is recommended to add some rust protection lubricant on the pilot diameter of the hub (to facilitate future removal).

It is also important that wheel stud nuts be tightened alternately on opposite sides of the wheel. Refer to Figure 2 for the suggested tightening sequence.

2.1 INSPECTION

Tighten stud nuts progressively as shown in Figure 2. The final tightening should be done with a torque wrench. Tighten stud nuts to 450 - 500 lbf-ft (610 - 680 Nm) for steel wheels.

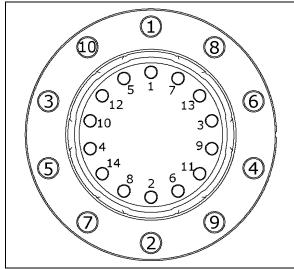


FIGURE 2: TIGHTENING SEQUENCE

2.2 SINGLE WHEEL REMOVAL

- 1. Stop engine and apply parking brake.
- 2. Loosen wheel nuts about one turn (do not remove the nuts). This is not necessary if equipped with hydraulic powered gun.

- Raise the vehicle by its jacking points on the body. See Section 18, "Body", under heading "Vehicle Jacking Points";
- 4. Unscrew wheel hex stud nuts and remove the wheel;



CAUTION

Always mark position of the wheel on the axle prior to removal in order to replace wheel at the same location, thus avoiding a new wheel balancing.

2.3 SINGLE WHEEL INSTALLATION

- Mount the wheel over studs, being careful not to damage stud threads;
- Screw in the hex stud nuts (refer to Figure 2 for sequence) so that wheel will position itself concentrically with hub. This is important, otherwise wheel may be eccentric with hub and will not run straight. In this initial step, slightly tighten the nuts to correctly position the wheel;
- 3. Tighten stud nuts progressively as shown in Figure 2. The final tightening should be done with a torque wrench. Tighten stud nuts to 450 500 lbf-ft (610 680 Nm) for all steel wheel.



CAUTION

Insufficient mounting-torque can result in damage to parts. Excessive mounting torque can cause studs to break and the wheel to crack in stud hole area.

3. DUAL WHEELS

3.1 OUTER WHEEL REMOVAL

Same as described in "Single Wheel Removal" procedure described previously.

3.2 INNER WHEEL REMOVAL

- 1. Remove outer wheel;
- 2. Remove inner wheel.

3.3 INNER WHEEL INSTALLATION

Mount the wheel over studs, being careful not to damage stud threads;

3.4 OUTER WHEEL INSTALLATION

With inner and outer wheels installed, tighten the stud nuts progressively as shown in Figure 2. The final tightening should be done with a torque wrench. Tighten stud nuts to 450 - 500 lbf-ft (610 - 680 Nm) for all steel wheel.



CAUTION

Insufficient mounting-torque can result in damage to parts. Excessive mounting torque can cause studs to break and the wheel to crack in stud hole area.

NOTE

On dual wheel assemblies, position the wheels with the tire valves 180° apart in order to have access to both the inner and outer valves.

3.5 INSPECTION

- 1. Loosen a hex stud nut three turns (Fig. 4);
- 2. Retighten the hex stud nut to 450 500 lbf-ft (610 680 Nm).

Repeat for each of the 10 "hex stud nuts" according to the tightening sequence in figure 2.



CAUTION

The actual length of thread engagement present in an assembled wheel can not always be determined by visual inspection of measurement of a tightened assembly. The relationship of the wheel cap nut seat to the end of the stud may vary. If there is any doubt that enough thread engagement is present, the number of engaged threads may be counted. Tighten all nuts in the regular manner, then loosen one to hand-tightness. The number of turns to disengage a 1-1/8-inch nut should be at least five full turns.

At least seven full turns should be required to disengage a ¾-inch nut or a M22 nut. Ideally, when torqued to the proper load, the stud should be flush with the face of the nut. The face of the nut may be recessed in nuts that are taller for improved wrenching. With most of the nuts in present use, a few unengaged threads at the outer end will cause no problem provided at least 5-7 full turns are required to disengage the nut depending on thread size.

4. WHEEL STRAIGHTNESS TEST

- Slightly raise axle to be checked and place a safety support underneath;
- 2. Check wheel lateral run-out. Install a dial gauge as shown in figure 3, then rotate the wheel by hand one full turn. As the wheel turns, note any variation on the dial gauge;

CAUTION

Damage to the dial gauge could occur if it strikes a wheel balancing weight.

3. If the variation in lateral run-out exceeds 0.0625 inch (1,6 mm), the wheel must be replaced.

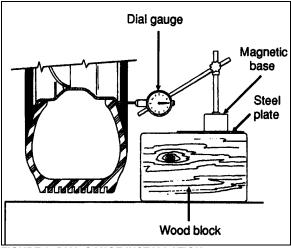


FIGURE 3: DIAL GAUGE INSTALLATION

13008

If doubt exists whether wheel or hub is distorted, hub may be checked as follows:

- Replace the existing wheel with a wheel known to be correct;
- Check wheel lateral run-out as outlined in step 2;
- If, within specifications, the hub is correct but the suspected wheel must be replaced.

5. WHEEL STUDS

Stripped threads may be the result of excessive torquing or may have been damaged during wheel installation when placing the wheel over the studs. A stud having damaged threads must be replaced. Broken studs are a direct result of operating with loose stud nuts or improperly seated wheels. When a broken stud is replaced, the adjacent studs, on each side of the broken

one must also be replaced since they could have been subjected to excessive strain and may be fatigued.

When installing wheel studs to hubs, check nuts retaining the wheel stud to wheel hub and replace if they are deformed, damaged or severely corroded. Install nut (and washer where applicable) to new stud. Torque to 450 - 500 Ft-lbs (610 - 680 Nm).

5.1 DRIVE AXLE WHEEL STUDS

Hub-mounted wheels are mounted with M22 x 1.5 studs and an M22 flange nut.

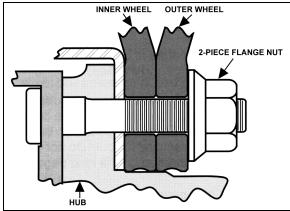


FIGURE 4: DRIVE AXLE WHEELS

5.2 FRONT AND TAG AXLE WHEEL STUDS

Wheel is hub mounted on front and tag axle (M22 x 1.5 thread).

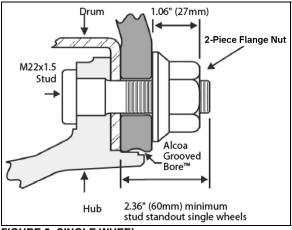


FIGURE 5: SINGLE WHEEL

13025

NOTE

Wheel studs and nuts must be kept free from grease and oil. No lubricant whatsoever should be used.

6. HUB MOUNTED WHEELS

Wheel surfaces in contact with hubs, nuts or other wheels should be kept free of all rust, grease and paint (except for initial "E" coat protection, applied to stop rusting and to facilitate wheel removal). The reason for this is to assure that all faces are clamped together without buildup of any coating. The threads of the wheel studs and the wheel nuts should be clean and undamaged.

NOTE

When painting wheels, make sure to mask all surfaces identified above.

Using a calibrated torque wrench, tighten wheel nuts to 450 - 500 lbf-ft (610 - 680 Nm) of torque. Do not use power tools or long bars for tightening. Tighten wheel nuts alternately as shown in figure 2.

NOTE

Tightening should not be done immediately after prolonged braking or when wheel ends are hot.

Check wheel nut torque at every 100 miles (160 km) for 500 miles (800 km) after fitting wheels. Let cool before checking. If any relaxation of the initial 450 - 500 lbf-ft (610 - 680 Nm) of torque has occurred, retighten. Relaxation of initial torque may occur because of the "bedding down" of the hub and wheel surfaces.

NOTE

Torque relaxation occurs when wheel ends are hot but should revert to original setting when cool. Retightening when hot will produce a higher torque reading than recommended.

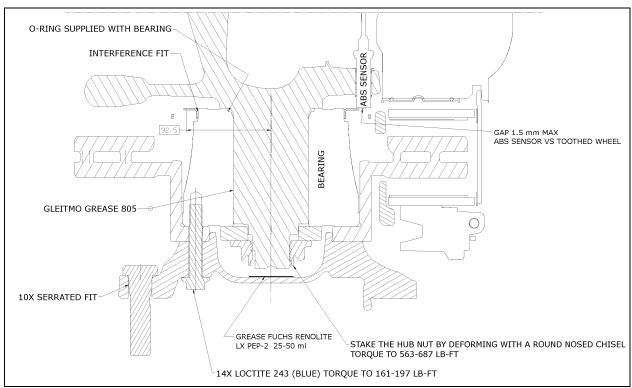


FIGURE 6: FRONT & TAG AXLE WHEEL HUB

6.1 CARE OF WHEELS

Check for cracks in wheels, especially around the fixing holes, studs, nuts and washers. If in doubt, renew.

Do not simply retighten very loose wheel fixings or wheels that are continually becoming loose. Find out why they are loose and whether any damage has been caused.

Use trained personnel and keep records of all attention to wheels and fixings, including which parts were renewed and when.

7. FRONT AND TAG AXLE WHEEL HUBS

The unitized hub bearings used on the NDS range of axles, are non-serviceable items. Bearings are pre-adjusted, lubricated and have seals fitted as part of the manufacturing process. The bearings are greased for life and there is no need or facility for re-lubrication

7.1 HUB BEARING INSPECTION



MAINTENANCE

An inspection should be made at intervals of 30,000 miles (48 000 km) or twice a year whichever comes first.

- Apply parking brake, raise wheels off the ground and support axle on stands.
- When the wheels are raised, they should revolve quite freely without roughness.
- Place magnetic base of a dial indicator on brake caliper and position dial indicator stem against a convenient marked spot on face of hub flange.
- With dial indicator in position pull hard but steadily on hub flange and oscillate at same time until a steady reading is achieved.
- Without releasing the pressure, turn bearing so that dial indicator stem contacts marked spot and note reading on indicator.
- Push bearing flange hard and oscillate as before until a steady reading is achieved.
- Without releasing the pressure, turn bearing so that indicator stem again contacts the marked spot and note new reading on indicator.
- The difference between readings is the amount of mounted end play in bearing unit.
- The mounted end play figure should not exceed 0.050 mm (0.002") for a new bearing and 0.20 mm (0.008") for a bearing which has been in service.

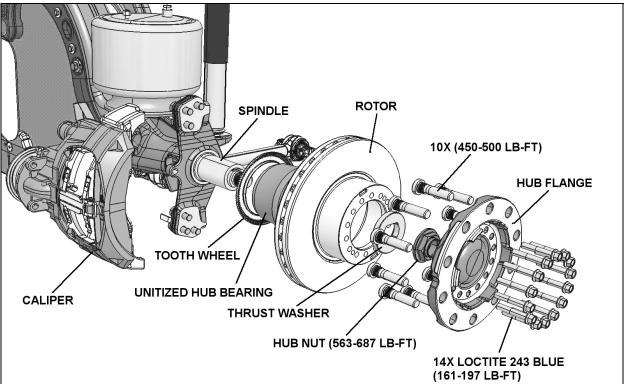


FIGURE 7: FRONT & TAG AXLE HUB AND ROTOR ASSEMBLY

NOTE

If original bearing unit is re-fitted, and end-float is measured at 1 mm, with hub not fully tightened to correct torque [563-687 lb-ft (763-931 Nm)], then the retaining clip within the unit is damaged and a new unit must be fitted.

NOTE

For more information on front and tag axle wheel hub, refer to "DANA SPICER Maintenance Manual Model NDS and Maintenance Manual NDS Axles" annexed at the end of Section 11.

7.2 HUB BEARING REMOVAL

- Stop engine and apply parking brake.
- Loosen wheel nuts about one turn (do not remove the nuts). This is not necessary if equipped with hydraulic powered gun.
- Raise the vehicle by its jacking points on the body. See Section 18, "Body", under heading "Vehicle Jacking Points".
- Unscrew wheel hex stud nuts (10) and remove the wheel.
- Unscrew hub flange hex cap screws (14).
- Remove hub flange and rotor.
- Unscrew hub nut.
- Remove hub nut and thrust washer.
- Remove unitized hub bearing by hand or use a puller if necessary.

7.3 HUB BEARING INSTALLATION

- Clean spindle using EFX degreaser (Prevost #685313).
- Lubricate part of spindle where bearing will be located, use Gleitmo 805 grease (Prevost #685274).
- Slide unitized hub bearing over spindle and position using insertion tool #32950.
- Clean thrust washer and hub nut using EFX degreaser.
- Install thrust washer and hub nut then torque hub nut to [563-687 lb-ft (763-931 Nm)].
- Stake the hub nut by deforming with a round nosed chisel.

- Clean hub bearing, rotor and hub flange clamping surfaces using EFX degreaser.
- Install rotor onto hub bearing.
- Add some grease (25-50 ml) (Fuchs Renolite LX PEP-2) (Prevost #685325) into the bottom of the hub flange cap. Mount hub flange onto rotor.
- Apply some Loctite 243 blue onto cap screw threads then secure hub flange and rotor to unitized hub bearing using cap screws (14). Torque to [161-197 Lb-Ft (218-267 Nm)] (Refer to figure 3 for tightening sequence).
- Mount the wheel over studs, being careful not to damage stud threads.
- Screw in the hex stud nuts (refer to Figure 2 for sequence) so that wheel will position itself concentrically with hub. This is important, otherwise wheel may be eccentric with hub and will not run straight. In this initial step, slightly tighten the nuts to correctly position the wheel.
- Tighten stud nuts progressively as shown in Figure 2. The final tightening should be done with a torque wrench. Tighten stud nuts to [450 - 500 lbf-ft (610 - 680 Nm)] for all steel wheel.

8. DRIVE AXLE WHEEL HUBS

Drive wheels use a single oil-seal assembly. They are lubricated from the oil supply in the differential housing. Bearings are tapered rollers, adjustable to compensate wear. Maintain differential oil level with general-purpose gear lubricant (refer to Section 24 "Lubrication" for proper oil grade selection) to ensure adequate oil supply to wheel bearings at all times.

8.1 BEARING ADJUSTMENT

To adjust drive wheel bearings:

- Raise vehicle until both dual wheels can be turned freely (approximately 6 inches from the ground). Position jack stands under drive axle, then lower vehicle approximately 2 inches in order to avoid entire weight of the axle being supported by the suspension air bellows and the shock absorber pins.
- Remove axle shaft as indicated in "Meritor -Maintenance Manual No. 5" under heading "Single Reduction Differential Carriers" annexed to "Section 11" of this manual.

Remove gaskets. Unscrew lock nut and remove adjusting nut lock ring.

- 3. To adjust, tighten adjusting nut until the wheel binds. Rotate the wheel while tightening so that all surfaces are in proper contact. Back off adjusting nut approximately, ¼ to 1/3 turn to assure 0.001/0.007" (0.0254/0.1778 mm) endplay and to ensure that wheel turns freely. Replace the lock ring, and adjust nut dowel pin in one of the holes. The ring may be turned over if necessary to allow more accurate bearing adjustment.
- Tighten lock nut and check bearing adjustment. Replace the axle shaft using a new gasket.

8.2 DISASSEMBLY AND REPAIR

- Jack vehicle as per "Bearing Adjustment" and remove axle shaft as indicated in "Meritor - Maintenance Manual No. 5" entitled "Single Reduction Differential Carriers" annexed to Section 11 of this manual.
- 2. Remove wheels and tires.



CAUTION

To replace wheel at the same location, always mark position of the wheel on the axle before removal, thus avoiding a new wheel balancing.

- Remove lock nut, lock ring and adjusting nut from axle housing to prevent the outer bearing from falling out. Remove outer bearing cone and roller assembly.
- 4. Remove screws attaching inner oil seal retainer to hub, and remove inner oil seal assembly. Remove inner bearing cone and roller assembly. Bearing cups can be separated from the hub using a hammer and a long brass drift.
- Thoroughly clean all parts. Bearing cone and roller assemblies can be cleaned in a suitable cleaning solvent using a stiff brush to remove old lubricant.
- 6. In case that excessive wear, deterioration, cracking or pitting is present on the bearing cups, rollers or cones, the bearings should be replaced. Seals should be replaced each time they are removed from the hub. To install new oil seal, use a suitable adapter

- and drive the seal into the retainer bore until it bottoms
- 7. When installing wheel on spindle, center the wheel hub with spindle to avoid damaging the seal with the end of the spindle. Push wheel straight over the spindle until inside diameter of seal press fits on wiper ring. Fill hub cavity with general-purpose gear lubricant (refer to Section 24 "Lubrication" for proper oil grade selection). Lubricate, then install outer bearing cone. Adjust bearing and lock.
- Assemble axle flange to axle using a new gasket. Apply sealant in stud area. After both wheels have been assembled according to above procedure, fill the differential with the recommended lubricant to the proper factory recommended level.

NOTE

During regular inspection, do not forget to check lubricant level in differential. Clean thoroughly or replace vent as required.

9. TIRE MAINTENANCE

The most critical factor in tire maintenance is proper inflation (Fig. 8). No tire is impervious to loss of air pressure. To avoid the hazards of under inflation, always maintain tires at their recommended inflation pressure. Improper inflation decreases tire life.

An under inflated tire builds up heat that can cause sudden tire destruction, resulting in improper vehicle handling and possible loss of vehicle control. At least once a week, before driving (when tires are cold), check inflation pressure on all the tires, including the spare tire. This is especially important in cases when different drivers operate the vehicle.



WARNING

Failure to maintain correct tire inflation pressure may result in sudden tire destruction, improper vehicle handling, and will cause rapid and irregular tire wear. Inflation pressure should be checked weekly and always before long distance trips.

9.1 INFLATION PRESSURE

The condition and pressure of the tires can greatly affect both useful tire life and road safety.

At regular intervals, verify the tire pressures. Use an accurate tire pressure gauge when checking inflation pressures. Never exceed the maximum inflation pressure specified on each tire.

NOTE

Inflation pressure should be checked when tires are cold. Cold tire inflation pressure can be measured when a vehicle has not been driven for at least 3 hours or less than 1 mile (1.6 km). Driving, even for a short distance, causes tires to heat up and air pressure to increase. Check inflation pressure on all tires (including the spare tire) using an accurate tire gauge.


NOTE

 
The recommended tire inflation pressures are given in the applicable documents supplied with the vehicle. In addition, cold tire inflation pressures are listed on the Department of Transport's certification plate, affixed on the panel behind the driver's seat. For special tire selection, a "PRÉVOST COACH SPECIAL SPECIFICATION" chart is supplied with the vehicle and is affixed on the left wall near the driver's seat. Remember, tire inflation pressure must be adjusted according to vehicle loading - see table in "Coach Final Record"



CAUTION

Never bleed air from hot tires as tires will then be under inflated. Use an accurate tire gauge to check pressures (Do not kick tires as an inflation check. This is an unreliable method).

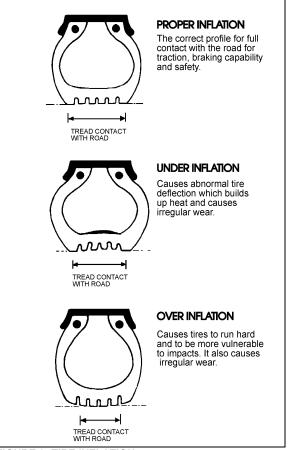



13009



CAUTION

These tire pressures are established in accordance with the maximum allowable load on each axle. A lower pressure is recommended if the axle load is less than the above specifications. Weigh vehicle fully loaded and pressurize according to tire manufacturer's recommendations. For other tire and wheel specifications, see Prévost tire pressure tabulation in "Coach Final Record".



WARNING

Incorrect tire pressures cause increased tire wear and adversely affect road holding of the vehicle, which may lead to loss of vehicle control.

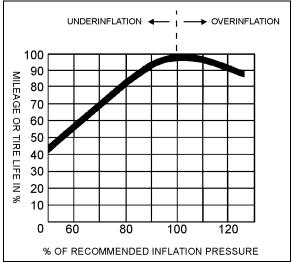


FIGURE 9: TIRE LIFE / INFLATION PRESSURE

1301



WARNING

Recommended tire inflation pressures and maximum allowable loads apply to speeds up to 65 mph (105 km/hr). Do not drive vehicle at a higher speed than 65 mph (105 km/h) or above the posted speed limit.



WARNING

All tires on the same axle should always be inflated to the same pressure. There should not be a difference in pressure between right and left tires on the same axle.

A 5-psi (35-kPa) underinflation in one front tire can not only reduce vehicle maneuverability, but will create steering hazards which can lead to an accident.

9.2 TIRE MATCHING

Unmatched tires on drive axle will cause tire wear and scuffing, as well as possible damage to the drive unit. Consequently, we recommend that tires be matched within 1/8" (3 mm) of the same rolling radius.

NOTE

It is recommended that all tires on coach be of the same type.

9.3 WHEEL BALANCING

Before balancing, wheels must be clean and free from all foreign matter. The tires should be in good condition and properly mounted. An unbalanced wheel can be due to a bent wheel or improper mounting. Before removing the wheel from the vehicle, check for swaying movement and if necessary, check the wheel lateral runout as outlined under heading "Wheel Straightness Check".



WARNING

When balancing wheel and tire assemblies, it is strongly recommended to closely follow instructions covering the operation of wheel balancer.



CAUTION

A maximum of 16-oz (450 g) of balancing weight is recommended. If more weight is necessary, check and correct the cause.

9.4 TIRE ROTATION

Radial tires should be rotated only when necessary. If the tires are wearing evenly, there is no need to rotate. If irregular wear becomes apparent or if the wear rate on the tires is perceptively different (from axle to axle), then tires should be rotated in such a manner as to alleviate the condition.

NOTE

There is no restriction on criss-cross rotation.

10. SPECIFICATIONS

STEEL WHEELS (except inner drive axle)

Wheel size	9.0" X 22.5"
Wheel nut torque	450 - 500 lbf-ft (610 - 680 Nm)
Tire size	315/80 R 22.5
STEEL WHEELS (inner drive axle)	
Wheel size	8.25" X 22.5"
Wheel nut torque	450 - 500 lbf-ft (610 - 680 Nm)
Tire size	315/80 R 22.5

RECOMMENDED TIRE INFLATION PRESSURE AT MAXIMUM LOAD (cold)

NOTE

Vehicle is delivered with the specific inflation pressure certification plate according to the tire selection.



WARNING

Special tire selection may lower maximum allowable speed limit, even below posted speed limit. For maximum safety, check with tire manufacturer.



WARNING

Recommended tire inflation pressures and maximum allowable loads apply to speeds up to 65 mph (105 km/hr). Do not drive vehicle at a higher speed than 65 mph (105 km/h) or above the posted speed limit.

SECTION 14: STEERING

CONTENTS

1.	ST	TEERING SYSTEM DESCRIPTION	3
2.	PC	OWER STEERING GEAR	4
2	2.1 2.2 2.3	DESCRIPTION POWER STEERING GEAR REMOVAL	5
3.	BL	LEEDING POWER STEERING HYDRAULIC SYSTEM	5
4.	НҮ	/DRAULIC PRESSURE TEST	5
5.	TR	ROUBLESHOOTING	5
6.	PC	OWER STEERING HYDRAULIC PUMP	5
_	6.1 6.2	DESCRIPTIONREMOVAL AND INSTALLATION	
7.	ST	TEERING COLUMN	6
7	' .1	REMOVAL	6
8.	ST	EERING WHEEL	7
8	3.1 3.2 3.3	REMOVAL INSTALLATION CLOCKSPRING REPLACEMENT	8
	_	JRNING ANGLE ADJUSTMENT	
10.	;	STEERING LINKAGE ADJUSTMENT	9
11.	ı	PITMAN ARM	9
	1.1	Removal	
	1.2		
	1.4		
12.	ı	MAINTENANCE	10
1	2.1	Power Steering Reservoir And Filter	11
		2.1.1 Oil Level Check Procedure	
		2.1.2 Filter Replacement	
	2.2	,	
13.		DRIVING TIPS	
	•		12
14.	-	TORQUE SPECIFICATIONS	13
4 E		SDECIEIC ATIONS	4.4

Section 14: STEERING

ILLUSTRATIONS

FIGURE 1: I-BEAM AXLE STEERING SYSTEM SETUP	3
FIGURE 2: POWER STEERING GEAR	4
FIGURE 3: FRONT SERVICE COMPARTMENT	
FIGURE 4: FUEL PUMP REMOVAL	
FIGURE 5: FUEL PUMP DRIVE AXLE	6
FIGURE 6: POWER STEERING PUMP REMOVAL	6
FIGURE 7: STEERING COLUMN	6
FIGURE 8: STEERING COLUMN COVERS	7
FIGURE 9: REMOVING THE HORN PAD	7
FIGURE 10: STEERING HARNESS & HORN WIRE	7
FIGURE 11: LOCKING THE CLOCKSPRING IN PLACE	
FIGURE 12: CLOCKSPRING INSTALLATION	8
FIGURE 13: PROPER CLOCKSPRING POSITION	8
FIGURE 14: PITMAN ARM ADJUSTMENT	9
FIGURE 15: FIXING NUT PUNCH MARK	10
FIGURE 16: TAG AXLE UNLOADING SWITCH ADJUSTMENT	
FIGURE 17: HYDRAULIC FLUID RESERVOIR LOCATION	11
FIGURE 18: POWER STEERING FLUID RESERVOIR	
FIGURE 19: STEERING STABILIZER (DAMPER)	12
FIGURE 20: DRAG LINK COMPONENTS	13
FIGURE 21: TIE ROD END	13
FIGURE 22: FRONT AXLE COMPONENTS	13

1. STEERING SYSTEM DESCRIPTION

The steering system consists of the steering wheel and column assembly, a vane-type hydraulic pump, reservoir, filter, interconnecting system lines and hoses, integral power steering gear, linkage and steering damper (Fig. 1). The steering linkage includes the pitman arm, drag link, steering arm, tie rod arms and tie rod.

Hydraulic components are added to transmit, increase and regulate steering control forces.

These elements are:

- Steering stabilizer (damper);
- 2. A vane type hydraulic pump; and
- 3. Hydraulic reservoir and hoses.

The steering stabilizer reduces road shocks and vibrations in the system. The steering gearbox is self powered and provides movement with power assistance to the left wheel.

Steering stability and tire wear are influenced by wheels, hubs, tires, air suspension, brakes, front suspension and front end alignment which are all covered in their respective sections in this manual.

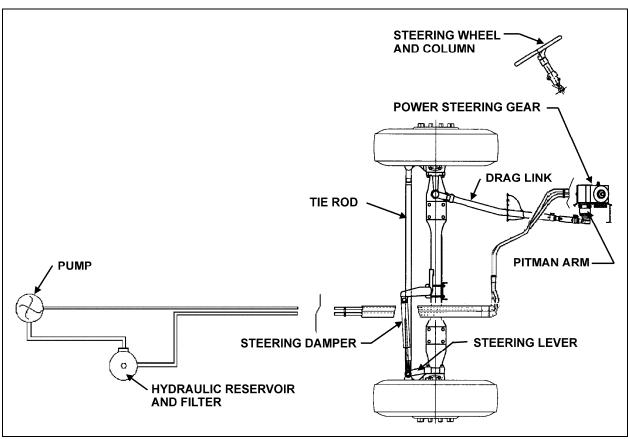


FIGURE 1: I-BEAM AXLE STEERING SYSTEM SETUP

14041

2. POWER STEERING GEAR

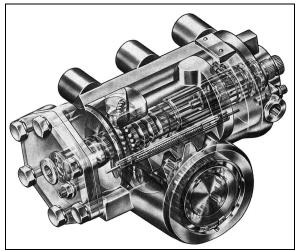


FIGURE 2: POWER STEERING GEAR

14035

2.1 DESCRIPTION

The power steering gear is located in the lower part of front service compartment (Figs. 2 & 3). The housing of the ZF-Servocom contains a control valve, working cylinder and a complete mechanical steering gear. The pressure oil for the steering is delivered by a motor-driven oil pump which is supplied with oil from an oil tank.

The housing is designed as a cylinder for the piston, which converts the rotation of the steering shaft and the worm into an axial movement and transfers this to the steering worm sector shaft. The serration of the sector shaft is straight-cut with a high surface quality in such a way that it is only possible to set a unique setting without play on installation in the straight-ahead driving area by means of the two eccentrically designed lateral housing covers.

The piston and worm are connected via a ball chain. When the worm is turned, the balls are collected by a circulating pipe at one end of the chain and fed in again at the other end, thus producing an endless ball chain.

The control valve consists of the valve slide in a needle bearing in the worm, with six control grooves on the circumference and the control sleeve on the worm, which also has six control grooves. The valve slide, designed with steering shaft connection, turns together with the worm as the steering wheel is turned.

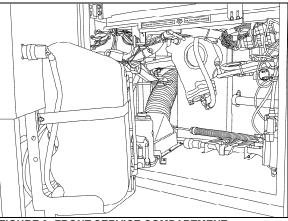


FIGURE 3: FRONT SERVICE COMPARTMENT

18611

A torsion bar, which is pinned with the valve slide and the worm, keeps the control valve in the neutral position as long as no opposing force is applied to the steering wheel. The steering housing contains a pressure relief valve, which limits the discharge pressure of the oil pump to the maximum value required. A replenishing valve can also be used, through which oil is sucked from the return if steering is not hydraulically boosted.

Compared with constant ratio, steering versions with variable ratio are more directly designed in the center area than outside the center area. The resulting smaller steering corrections benefit steering behavior in straight-ahead driving. At the same time, the indirect transmission means that there is a higher hydraulic torque available at the steering arm in parking movement. If the hydraulic assistance fails, the operating forces on the steering wheel are correspondingly lower in this area. This is achieved through a piston/steering worm sector shaft serration with differing modulus and angle of pressure.

Upon transfer of a torque from the steering shaft to the worm, or vice versa, the torsion bar is deformed in the elastic area so that there is torsion between the valve slide and the control sleeve. When the steering wheel is released, the torsion bar ensures that the valve is returned to the neutral position.

Refer to the "ZF-SERVOCOM Repair Manual" and "ZF-SERVOCOM Operating, Servicing /Maintenance and Inspection Instructions" annexed to this section for the functional aspects and maintenance procedure of the steering gear.

2.2 POWER STEERING GEAR REMOVAL



WARNING

The steering gearbox weighs approximately 100 lbs (45 kg) dry. Exercise caution when handling.

- Put a container into place, then disconnect both the inlet and outlet hoses from the power steering gear. Cover fittings to prevent fluid contamination.
- 2. Mark both the pitman arm and sector shaft with a line, then remove pitman arm. Refer to "11.1 Pitman Arm Removal" procedure.
- 3. Mark both the steering shaft universal joint yoke and steering gear input shaft with a line, then disconnect universal joint.
- 4. Unscrew and remove the power steering gear.

2.3 POWER STEERING GEAR INSTALLATION

Reverse "Power Steering Gear Removal" procedure paying particular attention to the following:

- 1. Tighten fasteners as recommended under paragraph 14: "Torque Specifications".
- 2. Bleed air from the system as per step 3, next.

3. BLEEDING POWER STEERING HYDRAULIC SYSTEM

To bleed the power steering hydraulic system, refer to the "ZF-SERVOCOM Repair Manual" annexed to this section, under heading "Setting And Functional Test".

4. HYDRAULIC PRESSURE TEST

Perform a pressure test as outlined in the "ZF-SERVOCOM Repair Manual" annexed to this section under heading "Setting And Functional Test".

5. TROUBLESHOOTING

Perform troubleshooting of the steering gear as outlined in the "ZF-SERVOCOM Repair Manual", the "ZF-SERVOCOM Operating, Servicing /Maintenance and Inspection Instructions.

6. POWER STEERING HYDRAULIC PUMP

6.1 DESCRIPTION

The power steering pump is a gear driven hydraulic unit which supplies hydraulic pressure for the operation of the steering gear. The pump is mounted on the engine, at the flywheel end and is also used for driving the fuel pump.

6.2 REMOVAL AND INSTALLATION

The pump is accessible through the engine compartment R.H. access door.

To remove the pump, proceed as follows:

- You must first remove the fuel feed pump.
- Clean around the fuel pump and fuel lines.
 Position a container to catch any fuel that might drain from the pump or lines.
- Remove the fuel pump.

NOTE

Only unfasten the bolts marked with arrows.

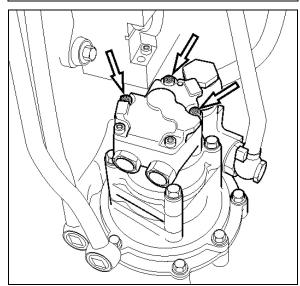


FIGURE 4: FUEL PUMP REMOVAL



CAUTION

Ensure to clean around the head of the bolts. Debris will prevent the tool from fitting properly and cause damage to the fasteners.

 Check that the adapter and fuel pump drive axle are not damaged.

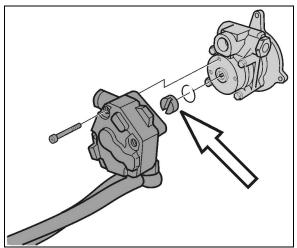


FIGURE 5: FUEL PUMP DRIVE AXLE

- Set the fuel pump aside.
- Clean around the power steering pump and loosen the steering lines. Position a container to catch any hydraulic fluid that might drain from the pump or lines.
- Unfasten the power steering pump bolts.

NOTE

Only unfasten the bolts marked with arrows.

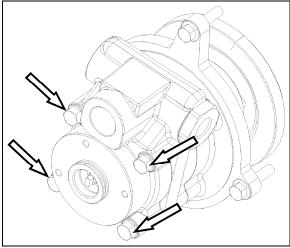


FIGURE 6: POWER STEERING PUMP REMOVAL

• Install the new power steering pump. Torque-tighten bolts to specification.

NOTE

Use a new gasket.

 Connect the hydraulic lines to the power steering pump. • Install the fuel pump. Torque-tighten bolts to specification.

NOTE

Use a new sealing ring. Check that the fuel pump drive axle sits correctly in the power steering pump.

Start the engine and let run for 5 minutes.
 Make sure that there are no leaks.

7. STEERING COLUMN

7.1 REMOVAL

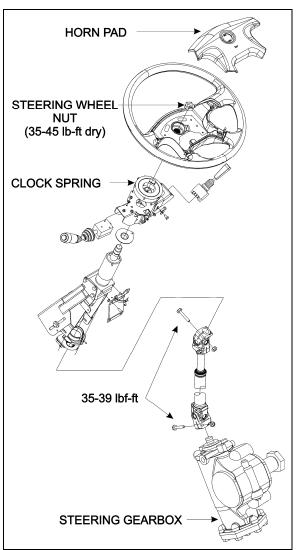


FIGURE 7: STEERING COLUMN

To disassemble the steering column from system, refer to figure 7 & 8. The steering column has no lubrication points. The lower steering column U-joint is easily accessible through the front

service compartment. The upper steering column U-joint and the steering slip joint are accessible from the front driver's area. To access these joints, proceed as follows:

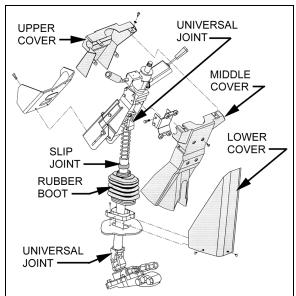


FIGURE 8: STEERING COLUMN COVERS

- 14040
- From the front driver's compartment area, remove the three plastic fasteners on steering column lower cover. Remove the lower cover (Fig. 8).
- 2. Unscrew the four retaining screws on steering column middle cover.
- Unscrew the four retaining screws fixing steering column upper cover to middle cover. Remove the steering column middle and upper covers.
- 4. Position the steering wheel in order to gain access to the joints.

8. STEERING WHEEL

8.1 REMOVAL

NOTE

Before undertaking the steering wheel removal, assure that the front wheels are pointing straight ahead, aligned with the vehicle.

- 1. Set the battery master switch located on the rear electrical panel to the "OFF" position.
- 2. Pull the horn pad straight up gently to detach it from the steering wheel (Fig. 9).

3. Disconnect the horn wire (white) connected to the horn pad and the steering wheel harness 4-pin connector.

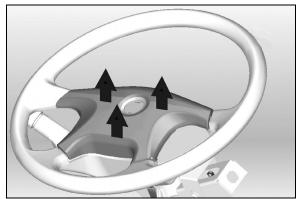


FIGURE 9: REMOVING THE HORN PAD

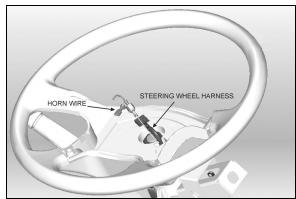


FIGURE 10: STEERING HARNESS & HORN WIRE

- 4. Unscrew the steering wheel nut. To simplify installation and ensure steering wheel alignment, mark the relationship of the spline shaft to the steering wheel hub (if marks don't already exist or don't line up).
- 5. Using an appropriate puller, separate the steering wheel from the spline shaft.
- 6. From behind the steering wheel, pull gently on the electrical wires passing through the rectangular opening in the steering wheel to finish removal of the steering wheel.
- Once the steering wheel is removed, it is important to block any rotating movement of the clockspring in order to prevent it from loosing its neutral position. Use two pieces of masking tape to lock it in place (Fig. 11).

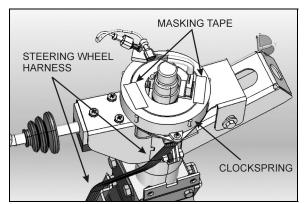


FIGURE 11: LOCKING THE CLOCKSPRING IN PLACE

NOTE

The clockspring mechanism permits a certain number of turns in each direction. At the moment of reinstalling the steering wheel, if the clockspring is not at its neutral position, the number of available turns will be reduced. That may damage the clockspring if the steering wheel is turned to its maximum amplitude.

8.2 INSTALLATION

- 1. Route the white horn wire and the 4-pin connector through the opening on the steering wheel.
- 2. Align the mark on the steering wheel hub with the mark on the spline shaft and slide the wheel onto the shaft.
- 3. Tighten wheel retaining nut to a torque of 35-45 lbf·ft.
- 4. Plug the 4-pin connector and connect the white horn wire to the center pad.
- 5. Reinstall the center pad and test for proper horn functioning.

8.3 CLOCKSPRING REPLACEMENT

- 1. Remove the steering wheel.
- 2. Remove the 2 clockspring mounting screws and then remove the clockspring. You will have to disconnect the clockspring harness connector located lower along the steering wheel column. If necessary, remove the steering column covers (Fig. 8).
- Route the new clockspring harness through the opening in the clockspring support (Fig. 12). Plug the connector at the base of the

steering wheel column and fix harness along the steering wheel column.

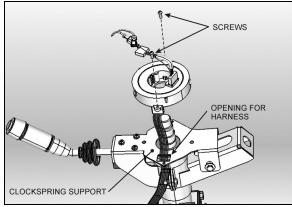


FIGURE 12: CLOCKSPRING INSTALLATION

- 4. Mount the clockspring in place with 2 screws.
- 5. Break the paper seal and rotate the center part of the clockspring about 50° clockwise (Fig. 13). This step is necessary for the installation of the steering wheel.

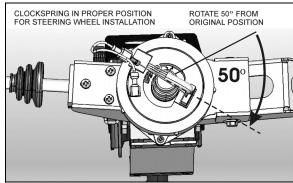


FIGURE 13: PROPER CLOCKSPRING POSITION

Reinstall the steering wheel.

9. TURNING ANGLE ADJUSTMENT

The maximum turning angle is set through two (2) steering stop screws installed on the axle center. Steering stop screws are factory adjusted to accommodate the chassis design, and therefore, do not require adjustment on new vehicles. However, these should be checked and adjusted if necessary, any time a steering system component is repaired, disassembled or adjusted. Refer to section 10 "Front Axle" under heading "6.4 "Turning Angle Adjustment".



CAUTION

To prevent the steering damper from interfering with the adjustment of turning angles, make sure its fixing bracket is at correct location on the axle (refer to "12.2 Steering Stabilizer Cylinder (Damper)).

Hydraulic Stop



CAUTION

Reduce or shut off the power steering hydraulic pressure before the boss on the axle touches the stop screw. If not, the components of the front axle will be damaged (refer to "ZF-SERVOCOM Repair Manual" and "ZF-SERVOCOM Operating, Servicing /Maintenance and Inspection Instructions" annexed to this section, under heading "Setting The Steering Limiter").



CAUTION

Never maintain the relief pressure for more than 5 seconds, since damage to the power steering pump may occur.

10. STEERING LINKAGE ADJUSTMENT

The steering linkage includes the pitman arm, drag link, steering arm, tie rod arms and tie rod.

Perform lubrication according to "DANA SPICER NDS Axles Lubrication and Maintenance" annexed to section 10 "Front Axle".



MAINTENANCE

Relay rod ends, steering tie rod ends, idler arm and bell crank are provided with grease fittings for pressure lubrication. These grease fittings should be serviced every 6,250 miles (10 000 km) or twice a year whichever comes first.

Drag link ends are provided with grease fittings. Under normal conditions, these should be serviced every 6,250 miles (10 000 km). Refer to section 24 "Lubrication".

Steering linkage pivot points should be checked each time they are lubricated. Looseness can be

visually detected while rotating the steering wheel in both directions. Replace defective parts.



CAUTION

Front wheel alignment should be checked and adjusted if necessary, any time a component of the steering system is repaired, disassembled or adjusted. Refer to section 10 "Front Axle" under heading 6. "Front Wheel Alignment".

11. PITMAN ARM

11.1 REMOVAL

- Remove cotter pin, nut and washers from drag link ball stud at pitman arm.
- 2. Disconnect drag link from pitman arm, using jaw style pullers (pressure screw type).



WARNING

Always wear approved eye protection when operating pullers.



CAUTION

Do not drive (hammer in) pitman arm on or off pitman shaft as this can damage the steering gear.



CAUTION

Heating of components to aid in disassembly is not allowed because it has a detrimental effect on axle components and steering linkages.

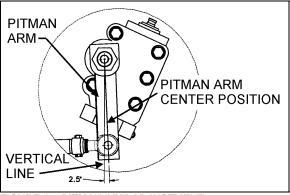


FIGURE 14: PITMAN ARM ADJUSTMENT

14037

- 3. Using a cold chisel, undo punch mark that locks fixing nut to the pitman arm.
- 4. Remove pitman arm fixing nut.
- Check the radial position of the pitman arm in relation to the sector shaft prior to removal of pitman arm.
- 8. Add reference marks to the arm and shaft if necessary to ensure correct alignment at reassembly.
- 7. You must use a puller to remove pitman arm.


11.2 INSTALLATION

- 1. Position pitman arm on sector gear shaft with reference marks aligned.
- 2. Install fixing nut (Prévost #661050). Tighten nut to 470-570 lbf-ft (637-773 Nm).

NOTE

Use a new nut if the previously removed nut was punched.

3. Lock nut with sector shaft using a punch mark into the groove (Refer to figure 15).

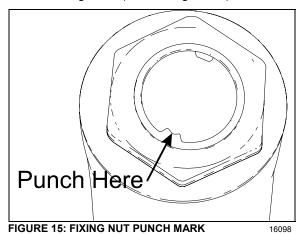

4. Connect drag link to pitman arm while ensuring that rubber stabilizer is in place on the rod end. Install washers. Tighten nut to 160-215 lbf-ft (220-290 Nm). Afterwards, install a new cotter pin.



CAUTION

Input shaft marks must be aligned before adjusting pitman arm.

11.3 ADJUSTMENT

- Disconnect the drag link from pitman arm. Center steering wheel by dividing the total number of steering wheel turns in two. Scribe a reference mark on steering gearbox at the center previously determined.
- 2. Using a protractor, check the angle of the pitman arm (refer to Fig. 14 for details).
- The pitman arm should be adjusted to an angle of 2.5° in relation with the vertical axis (towards front of vehicle). If not, unscrew and remove fixing nut. Remove the pitman arm according to the procedure outlined under previous heading "Pitman arm removal". Adjust to the proper angle.
- 4. When adjustment is achieved, replace fixing nut and torque to 400-450 lbf-ft (545-610 Nm).

11.4 TAG AXLE UNLOADING SWITCH ADJUSTMENT

- 1. Make sure vehicle wheels are straight and facing forward.
- 2. Line up switch lever with reference to the bracket center (Refer to figure 16).

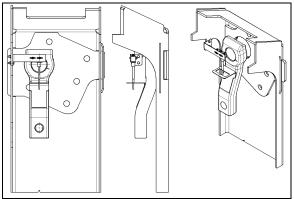


FIGURE 16: TAG AXLE UNLOADING SWITCH ADJUSTMENT 14061

12. MAINTENANCE

The power steering system requires little maintenance. However, the system should be kept clean to ensure maximum operating performance and troublefree service. Periodic inspections should also be made to check for leakage and all parts for damage or distortion. Insure all fasteners are tight (see "14. Specifications" for recommended tightening torques.

When the slightest evidence of dirt, sludge or water is discovered in the system, disconnect fluid lines at the power steering gear to drain the system. Drain and refill the system with "Dexron-IIIE or Dexron-III" automatic transmission oil.

Air in the hydraulic system will cause spongy action and noisy operation. When a hose has been disconnected or when fluid has been lost for any reason, the system must be bled. Bleed system as outlined under heading 3: "Bleeding Power Steering Hydraulic System".



CAUTION

Do not operate the pump without fluid in the power steering fluid reservoir.

If the steering linkage between the steering gear and the two front wheels is not properly adjusted, or if it is bent, twisted or worn, the steering of the vehicle will be seriously impaired. Whenever a steering linkage part is repaired, replaced or adjusted, steering geometry and front wheel alignment must be checked and necessary corrections made. Refer to section 10 "Front Axle" under heading 6: "Front Wheel Alignment".

At regular lubrication intervals, the steering linkage should be thoroughly inspected for worn or loose components.

After the vehicle has been operated continually and high mileage figures have been reached, overhaul of the various steering units will be required. General overhaul procedure normally requires removal of the entire assembly, cleaning and inspection of all parts and final assembly. Careful inspection of all parts during overhaul is very important and must not be neglected.

Lubrication fittings must all be cleaned before applying lubricant. Moreover, always be sure the equipment used in applying lubricant is clean. Every precaution should be taken to prevent entry of dirt, grit, lint or other foreign matter into lubricant containers. Replace fittings that have become broken or damaged. Lubrication intervals, as well as the recommended lubricants for the steering components, are given in the "Lubrication And Servicing Schedule" in Section 24 of this manual. The intervals given in the schedule are recommended for normal service. More frequent intervals may be required under severe operating conditions.

12.1 POWER STEERING RESERVOIR AND FILTER

The power steering reservoir is located on R.H. side of engine compartment and accessible through the engine compartment doors. (Fig. 17).

12.1.1 Oil Level Check Procedure

- 1. Stop engine. Open engine compartment doors.
- 2. Unscrew and remove the dipstick located on top of reservoir and wipe with a clean rag.
- 3. Insert dipstick in reservoir. Remove it again to check fluid level (Fig. 18).
- 4. Adjust level to "FULL" mark using proper dipstick side depending on fluid temperature, use "Dexron-IIE or Dexron-III" automatic transmission oil.
- 5. Reinsert and tighten the dipstick.
- 6. At regular intervals, fluid level should be checked in the reservoir and filter assembly.

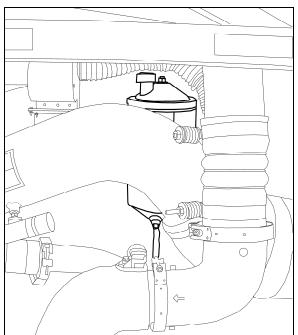


FIGURE 17: HYDRAULIC FLUID RESERVOIR LOCATION



MAINTENANCE

Replace the oil filter cartridge element in the power steering reservoir every 50,000 miles (80 000 km) or once a year, whichever comes first

12.1.2 Filter Replacement

- 1. Unscrew and remove the cover nut located on top of the power steering reservoir.
- 2. Remove the reservoir cover and the gasket.
- 3. Remove the retaining spring and finally the filter cartridge element.

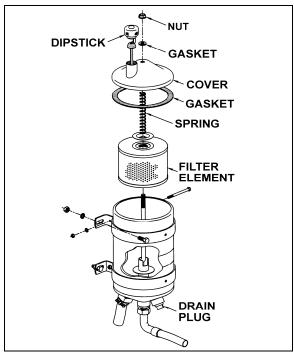


FIGURE 18: POWER STEERING FLUID RESERVOIR 14018

12.2 STEERING STABILIZER CYLINDER (DAMPER)

The steering damper is located on R.H. side, at back of front axle (Fig. 19).

The cylinder is nonadjustable and non-repairable. Check for oil leaks or lack of resistance. Disconnect the cylinder from axle, then carefully attempt to extend and collapse it manually.



MAINTENANCE

The rod end (ball joint) is provided with a grease fitting for pressure lubrication. This grease fitting should be serviced every 6,250 miles (10 000 km) or twice a year whichever comes first.

Good quality lithium-base grease NLGI No. 1 and 2 are recommended (refer to section 24 "Lubrication"). Check the ball joint for wear, and replace if necessary.

12.3 DRAG LINK



MAINTENANCE

Drag link ends are provided with grease fittings for pressure lubrication. These grease fittings should be serviced every 6,250 miles (10 000 km) or twice a year whichever comes first.

Good quality lithium-base grease NLGI No. 1 and 2 are recommended (refer to section 24 "Lubrication").

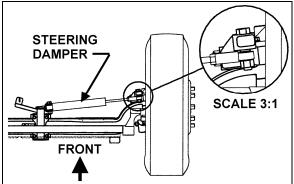


FIGURE 19: STEERING STABILIZER (DAMPER)

14043

13. DRIVING TIPS

In order to maximize power steering pump service life, do not attempt to turn the steering wheel when the vehicle is stationary, and especially when service brakes are applied (wheel locking will oppose the effect of steering geometry which tends to make the front wheels rotate in opposite directions).

Persisting in turning, or maintaining the steering wheel with an extra effort, could make the hydraulic system work at the relief pressure, and consequently, cause the hydraulic fluid to become overheated.



CAUTION

Never maintain the hydraulic system at the relief pressure for longer than 5/10 seconds to avoid damaging the power steering pump.

NOTE

Unequal or low tire pressure, oversize tires, and vehicle overloading are some of the causes that may increase steering effort.

14. TORQUE SPECIFICATIONS

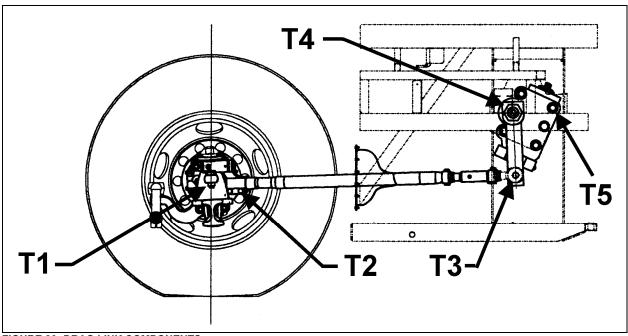


FIGURE 20: DRAG LINK COMPONENTS

14038

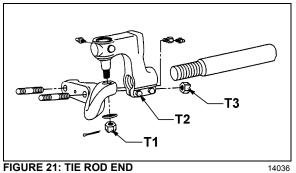


FIGURE 21: TIE ROD END

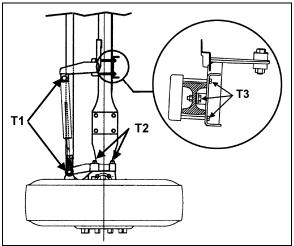


FIGURE 22: FRONT AXLE COMPONENTS

14045

DRY TORQUES				
Description Reference Lbf-ft Nm				
Drag Link End Stud Nut (on steering arm)	Fig. 20, T1	160-300	220-410	
Drag Link End Pinch Bolt Nuts	Fig. 20, T2	40-60	55-80	
Drag Link End Stud Nut (on pitman arm)	Fig. 20, T3	150-200	203-271	
Pitman Arm Fixing Nut	Fig. 20, T4	470-570	637-773	
Steering Gear Fixing Bolts (5)	Fig. 20, T5	365-405	495-550	
Tie Rod End Screw Pin Nut	Fig. 21, T1	100-175	135-240	
Tie Rod End Pinch bolt Nuts	Fig. 21 T2	65-75	90-100	
Lower Lever Stud Nuts	Fig. 21, T3	190-275	260-375	
Steering Stabilizer (damper) Fixing Nuts	Fig. 22, T1	100-120	135-165	
Steering Top Lever Nuts	Fig. 22, T2	150-200	205-275	
Steering Damper Mounting Support Nuts	Fig. 22, T3	65-70	90-95	

15. SPECIFICATIONS

Power Steering Gear

Make	
Model	8098
Prevost number	661045
F.E.W	16,600 lbs (7 545 kg)
Pressure rating	2,175 psi (150 Bar)
Gear ratio (center)	22.2 : 1
Gear ratio (extremities)	26.2 : 1
Minimum pump flow for 1.5 hwt/sec	4.22 gpm (16 lpm)

Power Steering Reservoir

Make	Nelson Muffler
Oil capacity	4 US gts (3.7 liters)
Prevost number	660982
Make	Nelson Muffler
Element filter - Supplier number	83804 E
Element filter - Prevost number	660987

Steering Stabilizer Cylinder (Damper)

Make	Arvin
Extended length	32.73±0.12"
Collapsed length	20.26±0.12"
Stroke	12.47±0.12"
Prevost number	
Dust cap - Prevost number	660980

SECTION 16: SUSPENSION

CONTENTS

1.	DESCR	PTION	5
2.	VEHICL	ES EQUIPPED WITH AN I-BEAM AXLE FRONT SUSPENSION	5
,		SPRINGS	
-	2.1.1	Inspection	
	2.1.2	Removal	
	2.1.3	Installation	
•	_	OCK ABSORBERS	
-	2.2.1	Inspection	
	2.2.2	Removal	
	2.2.3	Installation	
•	_	DIUS RODS	
-	2.3.1	Radius Rod Inspection	
	2.3.2	Radius Rod Removal	
	2.3.3	Bushing removal	
	2.3.4	Bushing installation	
	2.3.5	Radius Rod Installation	
2		AY BAR	
•	2.4.1	Removal	
	2.4.2	Installation	
_			
3.	VEHICL	ES EQUIPPED WITH AN INDEPENDENT FRONT SUSPENSION (IFS)	10
(3.1 STE	ERING LINKAGE	10
(3.2 STE	ERING LINKAGE ADJUSTMENT	13
(MAN ARM REMOVAL	
(3.4 PITI	MAN ARM INSTALLATION	14
(G LINK	14
	3.5.1	Adjustment	
(3.6 BEL	L CRANK AND IDLER ARM	
	3.6.1	Bell Crank and Idler Arm Removal	
	3.6.2	Bell crank or Idler Arm Ball Joint Disassembly	
	3.6.3	Bell Crank or Idler Arm Ball Joint Reassembly	
(AY ROD	
	3.7.1	Replacement	
(Rods	
	3.8.1	Removal	
	3.8.2	Installation	
(ERING ARMS	
	3.9.1	Removal	
	3.9.2	Installation	
		RICATION FITTINGS	
,		L JOINTS	
	3.11.1	Lower and Upper A-Arm Ball Joint	
	3.11.2	Lower A- Arm Central Ball Joint	
	3.11.3	Upper A-Arm Central Ball Joint	
(NT END ALIGNMENT	
	3.12.1	Alignment Terminology	
	3.12.2	Front End Inspection	
	3.12.3	Front Wheel Camber	
	3.12.4	Front Wheel Toe-In	
	3.12.5	Front Axle Caster	
	3.12.6	Major Damage	26

Section 16: SUSPENSION

3.13	FRONT AIR SPRINGS	26
3.1	3.1 Inspection	26
3.1	3.2 Removal	26
3.1		
	SHOCK ABSORBERS	
3.1		
3.1		
	SWAY BAR	
3.1		
3.1	5.2 Installation	29
4. RE	AR SUSPENSION	30
4.1	AIR SPRINGS	31
4.1.	.1 Inspection	31
4.1.	.2 Removal	31
4.1.		32
4.2		
4.2.		
4.2.		
4.2.		
4.3		
4.3.		
4.3	.2 Tag Axle Suspension	35
	SPENSION HEIGHT ADJUSTMENT	36
5. SU	SPENSION REIGHT ADJUSTMENT	
	IGHT CONTROL VALVE	38
6. HE	IGHT CONTROL VALVE	38
6. HE I	IGHT CONTROL VALVE	38 38
6. HE I	MAINTENANCEREMOVAL AND INSTALLATION	38 38
6. HE 6.1 6.2 7. AIR 7.1	IGHT CONTROL VALVE	38 38 38
6. HEI 6.1 6.2 7. AIR 7.1	IGHT CONTROL VALVE MAINTENANCE REMOVAL AND INSTALLATION SYSTEM AIR TANK MAINTENANCE 1 Wet Air Tank	38 38 39
6. HEI 6.1 6.2 7. AIR 7.1 7.1.	IGHT CONTROL VALVE	38 38 39 39
6. HEI 6.1 6.2 7. AIR 7.1 7.1. 7.1.	IGHT CONTROL VALVE MAINTENANCE REMOVAL AND INSTALLATION SYSTEM AIR TANK MAINTENANCE 1 Wet Air Tank 2 Primary Air Tank 3 Secondary Air Tank	38 38 39 39 39
6. HEI 6.1 6.2 7. AIR 7.1 7.1. 7.1. 7.1.	MAINTENANCE REMOVAL AND INSTALLATION AIR TANK MAINTENANCE 1 Wet Air Tank 2 Primary Air Tank 3 Secondary Air Tank 4 Accessory Air Tank	38 38 39 39 39 39
6. HEI 6.1 6.2 7. AIR 7.1 7.1. 7.1. 7.1. 7.1.	IGHT CONTROL VALVE	38383939393939
6. HEI 6.1 6.2 7. AIR 7.1 7.1. 7.1. 7.1.	MAINTENANCE REMOVAL AND INSTALLATION AIR TANK MAINTENANCE 1 Wet Air Tank 2 Primary Air Tank 3 Secondary Air Tank 4 Accessory Air Tank	38383939393939
6. HEI 6.1 6.2 7. AIR 7.1 7.1 7.1 7.1 7.1 7.2	IGHT CONTROL VALVE	38 38 39 39 39 39 40 40
6. HEI 6.1 6.2 7. AIR 7.1 7.1 7.1 7.1 7.1 7.1 7.1 7.1 8. HU	IGHT CONTROL VALVE MAINTENANCE REMOVAL AND INSTALLATION AIR TANK MAINTENANCE 1 Wet Air Tank 2 Primary Air Tank 3 Secondary Air Tank 4 Accessory Air Tank 5 Expansion Air Tank EMERGENCY FILL VALVES B UNIT AND STEERING KNUCKLE ASSEMBLY	3839393939394040
6. HEI 6.1 6.2 7. AIR 7.1 7.1 7.1 7.1 7.1 7.1 7.1 7.1 8. HU	IGHT CONTROL VALVE MAINTENANCE REMOVAL AND INSTALLATION. SYSTEM AIR TANK MAINTENANCE 1 Wet Air Tank 2 Primary Air Tank 3 Secondary Air Tank 4 Accessory Air Tank 5 Expansion Air Tank EMERGENCY FILL VALVES	3839393939394040
6. HEI 6.1 6.2 7. AIR 7.1 7.1 7.1 7.1 7.2 8. HU	IGHT CONTROL VALVE	383839393939404040
6. HEI 6.1 6.2 7. AIR 7.1 7.1 7.1 7.1 7.2 8. HU 9. "LE	MAINTENANCE REMOVAL AND INSTALLATION. AIR TANK MAINTENANCE 1 Wet Air Tank. 2 Primary Air Tank. 3 Secondary Air Tank. 4 Accessory Air Tank. 5 Expansion Air Tank EMERGENCY FILL VALVES B UNIT AND STEERING KNUCKLE ASSEMBLY PRINCIPLES OF OPERATION.	383939393940404041
6. HEI 6.1 6.2 7. AIR 7.1 7.1 7.1 7.1 7.1 7.2 8. HUI 9. "LE 9.1 9.2	MAINTENANCE REMOVAL AND INSTALLATION AIR TANK MAINTENANCE 1 Wet Air Tank 2 Primary Air Tank 3 Secondary Air Tank 4 Accessory Air Tank EMERGENCY FILL VALVES B UNIT AND STEERING KNUCKLE ASSEMBLY PRINCIPLES OF OPERATION MAINTENANCE	383839393940404141
6. HEI 6.1 6.2 7. AIR 7.1 7.1 7.1 7.1 7.1 7.2 8. HUI 9. "LE 9.1 9.2	MAINTENANCE REMOVAL AND INSTALLATION. AIR TANK MAINTENANCE 1 Wet Air Tank. 2 Primary Air Tank. 3 Secondary Air Tank. 4 Accessory Air Tank. 5 Expansion Air Tank EMERGENCY FILL VALVES B UNIT AND STEERING KNUCKLE ASSEMBLY PRINCIPLES OF OPERATION.	383839393940404141
6. HEI 6.1 6.2 7. AIR 7.1 7.1 7.1 7.1 7.1 7.2 8. HUI 9. "LE 9.1 9.2	MAINTENANCE REMOVAL AND INSTALLATION AIR TANK MAINTENANCE 1 Wet Air Tank 2 Primary Air Tank 3 Secondary Air Tank 4 Accessory Air Tank EMERGENCY FILL VALVES B UNIT AND STEERING KNUCKLE ASSEMBLY PRINCIPLES OF OPERATION MAINTENANCE	
6. HEI 6.1 6.2 7. AIR 7.1 7.1. 7.1. 7.1. 7.2 8. HU 9. "LE 9.1 9.2 10. F	IGHT CONTROL VALVE	3838393939404041414142
6. HEI 6.1 6.2 7. AIR 7.1 7.1 7.1 7.1 7.1 7.2 8. HU 9. "LE 9.1 9.2 10. F 10.1 10.2	IGHT CONTROL VALVE	38393939404041414242
6. HEI 6.1 6.2 7. AIR 7.1 7.1 7.1 7.1 7.2 8. HU 9. "LE 9.1 9.2 10. F 10.1 10.2 10.3	IGHT CONTROL VALVE	
6. HEI 6.1 6.2 7. AIR 7.1 7.1 7.1 7.1 7.1 7.2 8. HU 9. "LE 9.1 9.2 10. F 10.1 10.2 10.3 10.	IGHT CONTROL VALVE	
6. HEI 6.1 6.2 7. AIR 7.1 7.1. 7.1. 7.1. 7.2 8. HU 9. "LE 9.1 9.2 10. F 10.1 10.2 10.3 10 11. H	MAINTENANCE REMOVAL AND INSTALLATION R SYSTEM AIR TANK MAINTENANCE 1 Wet Air Tank 2 Primary Air Tank 3 Secondary Air Tank 4 Accessory Air Tank 5 Expansion Air Tank EMERGENCY FILL VALVES B UNIT AND STEERING KNUCKLE ASSEMBLY EVEL LOW" LEVELING SYSTEM PRINCIPLES OF OPERATION MAINTENANCE FRONT KNEELING SYSTEM (X3-45 COACHES ONLY) PRINCIPLE OF OPERATION MAINTENANCE BELLOWS CONTROL SOLENOID VALVES 3.1 Removal and installation. HIGH-BUOY SYSTEM (X3-45 COACHES ONLY)	
6. HEI 6.1 6.2 7. AIR 7.1 7.1. 7.1. 7.1. 7.2 8. HU 9. "LE 9.1 9.2 10. F 10.1 10.2 10.3 10 11. H 11.1	MAINTENANCE REMOVAL AND INSTALLATION R SYSTEM AIR TANK MAINTENANCE 1 Wet Air Tank 2 Primary Air Tank 3 Secondary Air Tank 4 Accessory Air Tank EMERGENCY FILL VALVES B UNIT AND STEERING KNUCKLE ASSEMBLY PRINCIPLES OF OPERATION MAINTENANCE FRONT KNEELING SYSTEM (X3-45 COACHES ONLY) PRINCIPLE OF OPERATION MAINTENANCE BELLOWS CONTROL SOLENOID VALVES 3.1 Removal and installation HIGH-BUOY SYSTEM (X3-45 COACHES ONLY) PRINCIPLES OF OPERATION	
6. HEI 6.1 6.2 7. AIR 7.1 7.1. 7.1. 7.1. 7.2 8. HU 9. "LE 9.1 9.2 10. F 10.1 10.2 10.3 10 11. H 11.1 11.2	MAINTENANCE REMOVAL AND INSTALLATION R SYSTEM AIR TANK MAINTENANCE 1 Wet Air Tank 2 Primary Air Tank 3 Secondary Air Tank 4 Accessory Air Tank 5 Expansion Air Tank EMERGENCY FILL VALVES B UNIT AND STEERING KNUCKLE ASSEMBLY EVEL LOW" LEVELING SYSTEM PRINCIPLES OF OPERATION MAINTENANCE FRONT KNEELING SYSTEM (X3-45 COACHES ONLY) PRINCIPLE OF OPERATION MAINTENANCE BELLOWS CONTROL SOLENOID VALVES 3.1 Removal and installation. HIGH-BUOY SYSTEM (X3-45 COACHES ONLY)	

11.3.1 Adjustment	43
11.3.2 Disassembly	43
11.3.3 Cleaning	43
11.3.4 Reassembly	44
12. LOW-BUOY SYSTEM (X3-45 COACHES ONLY)	44
12.1 PRINCIPLES OF OPERATION	44
12.2 MAINTENANCE	
13. TROUBLESHOOTING	44
14. TORQUE TABLE	45
15. PARTS SPECIFICATIONS	46
ILLUSTRATIONS	
ILLOGIKATIONO	
FIGURE 1: FRONT SUSPENSION COMPONENTS	
FIGURE 2: DETAILS OF FRONT SUSPENSION	Ę
FIGURE 3: AIR SPRING	
FIGURE 4: SHOCK ABSORBER	
FIGURE 5: TYPICAL SHOCK ABSORBER SETUP	
FIGURE 6: TYPICAL RADIUS ROD SETUP	
FIGURE 7: RADIUS ROD BUSHING REMOVAL	
FIGURE 9: RADIUS ROD INSTALLATION	
FIGURE 10: I-BEAM FRONT AXLE SWAY BAR	
FIGURE 11: SUSPENSION AND STEERING LINKAGE	
FIGURE 12: LOCATION OF CLAMPS	
FIGURE 13: CLAMP POSITIONING	
FIGURE 14: CLAMP POSITIONING	12
FIGURE 15: CLAMP POSITIONING	
FIGURE 16: CLAMP POSITIONING	
FIGURE 17: CLAMP POSITIONING	
FIGURE 18: CLAMP POSITIONING	
FIGURE 19: PITMAN ARM ALIGNMENT	
FIGURE 21: BELL CRANK	
FIGURE 22: BELL CRANK	
FIGURE 23: BELL CRANK AND IDLER ARM BALL JOINT	
FIGURE 24: LUBRICATION FITTINGS' LOCATION DIAGRAM	
FIGURE 25: BALL JOINTS LOCATION	20
FIGURE 26: A-ARM BALL JOINTS	
FIGURE 27: LOWER A-ARM BALL JOINTS	
FIGURE 28: UPPER A-ARM BALL JOINTS	
FIGURE 29: LOWER A-ARM CENTRAL BALL JOINT	
FIGURE 30: UPPER A-ARM CENTRAL BALL JOINT	
FIGURE 31: STEERING LINKAGE MEASURE	
FIGURE 32: FRONT END ALIGNMENT DIAGRAM	
FIGURE 34: AIR SPRING AND SHOCK ABSORBER	
FIGURE 35: SHOCK ABSORBER	

Section 16: SUSPENSION

FIGURE 36: SWAY BAR (FRONT SUSPENSION)	29
FIGURE 37: SWAY BAR (REAR SUSPENSION)	30
FIGURE 38: REAR SUSPENSION COMPONENTS	
FIGURE 39: REAR UNDERFRAME SUSPENSION	31
FIGURE 40: TAG AXLE SUSPENSION	
FIGURE 41: AIR SPRING	
FIGURE 42: SHOCK ABSORBER	
FIGURE 43: TYPICAL SHOCK ABSORBER SETUP	
FIGURE 44: TYPICAL RADIUS ROD SETUP	34
FIGURE 45: RADIUS ROD BUSHING REMOVAL	34
FIGURE 46: RADIUS ROD BUSHING INSTALLATION	35
FIGURE 47: RADIUS ROD INSTALLATION	
FIGURE 48: TYPICAL RADIUS ROD SETUP	35
FIGURE 49: BALL JOINTS	36
FIGURE 50: TYPICAL AIR SPRING CLEARANCE	
FIGURE 51: FRONT HEIGHT CONTROL VALVE	
FIGURE 52: REAR HEIGHT CONTROL VALVE	38
FIGURE 53: IFS AIR TANKS LOCATION	39
FIGURE 54: I-BEAM FRONT SUSPENSION AIR TANKS LOCATION	39
FIGURE 55: REAR VALVE LOCATION	40
FIGURE 56: FRONT VALVE LOCATION	40
FIGURE 57: REGULATING VALVE	43

DESCRIPTION

The vehicle is provided with an air suspension system. The system consists of air springs, height control valves, radius rods, sway bars, tripod and shock absorbers (Fig. 1, 2, 11, 36, 37 and 38). The system operation is fully automatic and maintains a constant vehicle height regardless of load, or load distribution.

The vehicle may also be equipped with systems such as:

- Front Kneeling (w/ Front High-Buoy);
- Front Kneeling (w/ Full High-Buoy);
- Front Kneeling (w/ Front High-Buoy) and Low-Buoy Combination;
- Front Kneeling (w/ Full High-Buoy) and Low-Buoy Combination;

VEHICLES EQUIPPED WITH AN I-BEAM AXLE FRONT SUSPENSION


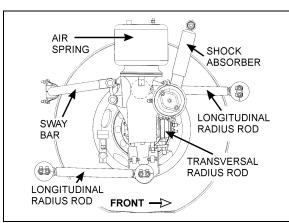


FIGURE 1: FRONT SUSPENSION COMPONENTS

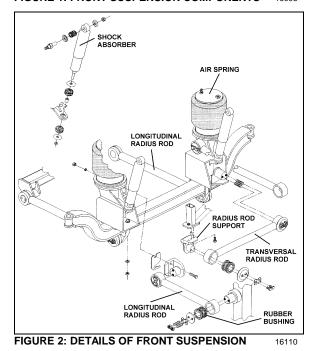

AIR SPRINGS 2.1

The air springs are made from a special compound rubber molded to the proper contour and dimensions. The entire vertical load of the vehicle is supported by these springs. The Ibeam front axle is provided with air springs that are attached to the subframe and to the axle (Fig. 3).

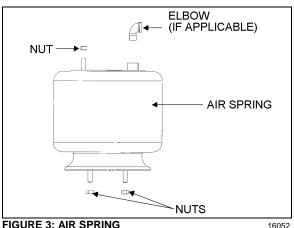


FIGURE 3: AIR SPRING

Inspection 2.1.1

- Check operation of bellows.
- Visually inspect bellows for evidence of cracks, punctures, deterioration, or chafing. Replace the bellows if any damage is evident.
- With the primary air system at normal operating pressure (95 - 125 psi (655 - 860 coat all suspension air connections and bellows mounting areas with a water and soap solution. Bubbles will indicate an air leak, and none is permissible. Repair or replace defective parts.

 $\mathcal{N}OTE$

If air spring is removed from vehicle, bellows can be lightly inflated and submerged in water to detect any leakage. If any leakage is detected, replace bellows.



WARNING

To prevent personal injury, do not apply more than 10 psi (69 kPa) of air pressure to the uninstalled air spring.

2.1.2 Removal

NOTE

Front suspension air springs can be removed without removing the entire axle assembly.

- Safely support vehicle at the recommended body jacking points. To gain access to a given air spring, the corresponding wheel can be removed as follows.
 - a) Jack vehicle until the tire clears the ground, and place safety supports underneath body.



CAUTION

Only the recommended jacking points must be used as outlined in Section 18, "Body".

- b) Support the axle with a suitable hydraulic floor jack at the recommended jacking point.
- c) Remove wheel.
- Exhaust compressed air from accessory air tank by opening drain cock under reservoir.
- 3. Disconnect the height control valve link and pull down the overtravel lever to ensure all air is exhausted from air springs.

NOTE

While performing this step, do not change the height control valve overtravel lever adjustment.

- 4. Disconnect air line from air spring, remove elbow (if applicable), and cover both the line end and fitting to prevent the entry of foreign matter.
- 5. Remove the air spring upper nut, and then the two lower nuts. Remove air spring.

2.1.3 Installation

 Compress air spring as necessary, then aligning studs with their holes, position air spring between both the lower and upper supports. Thread the lower nuts and the small upper nut a few turns.

NOTE

To facilitate air spring installation, compress it manually then put a piece of tape over the air line threaded fitting. This prevents air from getting back into the bag and keeps it compressed, thus enabling to place the bag in between the mounting plates and greatly easing installation.

- Tighten and torque the lower stud nuts, and then the upper one to 20 – 25 lbf-ft (27 – 34 Nm).
- 3. Thread the remaining upper nut (large nut) and tighten to 20 25 lbf-ft (27 34 Nm).
- 4. Install elbow (if applicable), then connect air line.
- 5. Connect the height control valve link.
- 6. Build up air pressure in system.

NOTE

To accelerate this operation, air reservoirs can be filled from an exterior air supply connected to the accessory tank fill valve or to the emergency fill valve.

- 7. Check operation of bellows, and with the primary air system at normal operating pressure (95 125 psi (655 860 kPa)), coat the air line connections and air spring mounting areas with a water and soap solution. Bubbles will indicate an air leak, and none is permissible. Repair or replace defective parts.
- 8. Reinstall wheel.
- 9. Remove the hydraulic floor jack from under the axle, then lower vehicle to ground.

2.2 SHOCK ABSORBERS

Double-action, telescoping-type shock absorbers ensure a smooth ride and enhance vehicle stability on the road. All shock absorbers are eye-type mountings. The front axle is provided with two shock absorbers (Fig. 1, 2, and 4).

Shock absorbers are non-adjustable and non-repairable. Maintenance requirements involve replacement of the rubber mounting bushings, and tightening of all shock absorber pins at the proper torque of 500 - 550 lbf-ft (680 - 750 Nm) when shock absorber replacement occurs. If a shock absorber becomes inoperative, complete unit must be replaced.

CAUTION

When a shock absorber is found defective, always replace with a new set on affected axle, except if there has been a recent replacement of one unit. The following method will help in determining if both shock absorbers on the same axle have to be replaced.

2.2.1 Inspection

Loosen lower mounting of both shocks, and then carefully attempt to raise and lower the bottom portion of each shock. Note the rate of effort for distance of travel. Replace both shocks if a definite differential rate is found.

The shock must be bench checked in an upright, vertical position. If checked in any other position, air will enter the cylinder tube and make the shock absorber appear defective.

Proceed as follows to check shock absorbers:

 With the shock absorber in a vertical position (top end up), clamp the bottom mount in a vise.



CAUTION

Do not clamp the reservoir tube or the dust tube.

- Rotate the dust tube. Notice any binding condition (may be compared with new unit). Binding condition indicates a scored rod. Units with scored rods should be replaced.
- 3. Fully extend shocks and check for leaks in the seal cover area. Shock fluid is a very thin hydraulic fluid that has a characteristic odor and dark brown tint. A slight trace of shock fluid around the seal cover area is not a cause for replacement. The shock seal is designed to permit a very slight seepage to lubricate the rod. Units that leak should be replaced.

- Visually check shock for dents that could cause the shock to bind. Also, check for a bent rod.
- Extend and collapse shock several times to determine that it has control (resistance) in both rebound and compression.
- 6. Visually inspect the shock mountings and vehicle mounting for:
 - a. Broken mounts;
 - b. Extreme bushing wear;
 - c. Shifted bushing or sleeve;
 - d. Deep cracks in bushing material (shallow surface cracks are normal);
 - e. Loose shock absorber pins;
 - f. Presence of convex washers, and their position relative to the rubber bushing.

2.2.2 Removal

- Remove nuts and washers from shock absorbers on upper and lower mounting pins, taking care to identify the inner and outer washers to ease reinstallation. Refer to figure 4 for details.
- 2. Remove the shock absorber assembly from pins.
- 3. Remove the two inner bushings from the shock absorber and discard them.

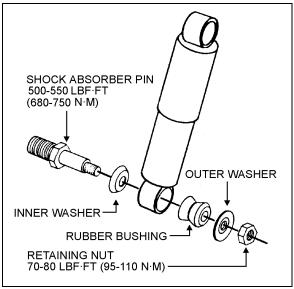


FIGURE 4: SHOCK ABSORBER

16008

2.2.3 Installation

- Ensure that the shock absorber mounting pins are tight and that the threads are not stripped.
- 2. Install new rubber mounting bushings on shock absorbers (upper and lower).
- Place the inner washers (with washer convex side facing the shock absorber rubber bushing) on each shock absorber pin (Fig. 5).
- Install the shock absorber eyes over the mounting pins, then the outer washers (with washer convex side facing the shock absorber rubber bushing) on each shock extremity.

NOTE

If shock absorber pins are removed, they must be reinstalled using "loctite" (see "Parts Specifications" in this section).

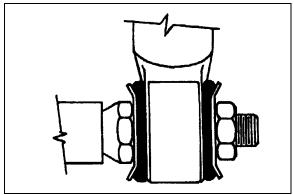


FIGURE 5: TYPICAL SHOCK ABSORBER SETUP 1600

 Place the lower and upper mounting pin stud nuts and torque to 70 - 80 lbf-ft (95 – 110 Nm).

2.3 RADIUS RODS

Radius rods are used to secure the axles in the proper transversal and longitudinal positions. Four radius rods are provided on the front axle suspension (three longitudinal and one transversal). Refer to figures 1, 2 and 6 for details. These rods transmit both braking and driving forces from the axles to the vehicle body.

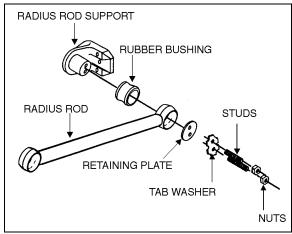


FIGURE 6: TYPICAL RADIUS ROD SETUP

16010

2.3.1 Radius Rod Inspection

The following instructions apply to all radius rods used on this vehicle:

- 1. Clean all parts thoroughly.
- Inspect radius rods for distortion and cracks. We recommend the "Magnaflux" process to detect cracks in the radius rod. Any damaged part should be replaced with a new one.

NOTE

New bushings should be used when rods are replaced.

 The radius rod bushings should be checked periodically for signs of shearing, deterioration, or damage. Any defective part should be replaced with a new one.

2.3.2 Radius Rod Removal

- 1. Flatten the tab washer which secures the two retaining nuts (or bolts), then unscrew the nuts (or bolts) at each extremity of the radius rod (Fig. 6).
- Remove the tab washer and the retaining plates and radius rod ends from anchor pins, and then remove the radius rod.

2.3.3 Bushing removal

1. Safely support the radius rod as shown in figure 7.

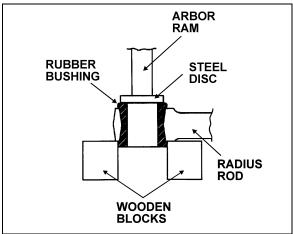


FIGURE 7: RADIUS ROD BUSHING REMOVAL

1601

- 2. Place a flat steel disc, slightly smaller than the outside diameter of the bushing (Fig. 7).
- 3. Using an arbor press or a suitable driving tool, press or drive the old bushing out of the rod and discard the bushing.



CAUTION

Make sure to prevent the steel disc from contacting the radius rod end.

2.3.4 Bushing installation

1. Lightly spray the inner and outer surfaces of radius rod bushing with water.



CAUTION

No lubricant whatsoever is to be used on the rubber bushing.

- 2. Safely support the radius rod, and place new bushing on top of the radius rod end (Fig. 8).
- 3. Place a block of wood on top of bushing and press on it manually.
- If necessary, use an arbor press or a suitable driving tool. Press or drive the bushing into the radius rod end until it extends equally on both sides of the rod.
- 5. It is also possible to proceed differently. Place radius rod bushing on a plane surface. Spray a light coat of water on the inner and outer surfaces of radius rod bushing.
- 6. Take radius rod, align the bushing. Tap radius rod on bushing until latter is positioned correctly.

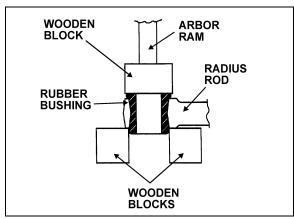


FIGURE 8: RADIUS ROD BUSHING INSTALLATION 16012

2.3.5 Radius Rod Installation

- 1. Lightly spray the radius rod support with water. Place the radius rod end over the radius rod support (Fig. 9).
- 2. Position the retaining plate. Install the tab washer and nuts (or bolts).

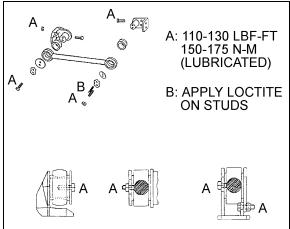


FIGURE 9: RADIUS ROD INSTALLATION

16028



CAUTION

Always use new tab washers at installation.

- 3. Tighten the nuts (or bolts) lightly, and repeat at the other end.
- Refer to heading "Suspension Height Adjustment" later in this section, and set the vehicle to normal ride height.
- 5. With the vehicle at normal ride height, apply oil on threads and tighten all radius rod anchor pin nuts or bolts to 110 130 lbf-ft (150 175 Nm).



CAUTION

It is extremely important upon reconnection of the rods that the proper clearance height between the axle and body be maintained. Otherwise, the rubber bushings in radius rod ends will become preloaded, thus reducing their life span.

2.4 SWAY BAR

A sway bar is provided on the front axle to increase vehicle stability. It controls lateral motion (swaying movement) of the vehicle (Fig. 10).

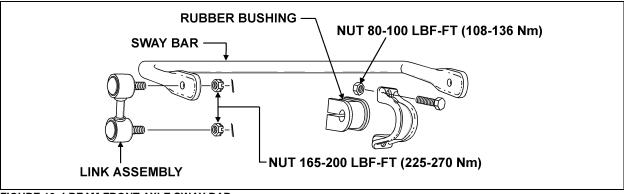


FIGURE 10: I-BEAM FRONT AXLE SWAY BAR

16099

2.4.1 Removal

- 1. Disconnect the two links from sway bar.
- 2. Safely support the sway bar. Unbolt the four bushing collars from subframe.
- 3. Remove sway bar.

NOTE

Sway bar bushings are slitted to ease their removal.

2.4.2 Installation


- Loosely install the sway bar.
- 2. Tighten the eight bushing collar nuts to 80-100 lbf-ft dry (108-136 Nm) (Fig. 10).
- 3. Install two sway bar link upper and lower nuts and tighten to 165-200 lbf-ft dry (225-270 Nm) (Fig. 10).
- 4. Install a cotter pin on each nut and bend.

3. VEHICLES EQUIPPED WITH AN INDEPENDENT FRONT SUSPENSION (IFS)

3.1 STEERING LINKAGE

Turning motion of the steering wheel is transferred by the steering gear and steering linkage to the steering arms at the right and left front wheels. The steering linkage consists of tie rods connected to the bell crank and the steering arm at the left side of the vehicle, and to the idler arm and steering arm at the right side of the vehicle. The bell crank and idler arm are connected by a relay rod. A drag link connected to the bell crank and the pitman arm, which is mounted to the steering gear, transfers the turning motion of the steering wheel to the steering arms. X3-45 VIP & XLII Bus Shells are also equipped with a hydraulic power cylinder, which provides an added source of assistance and being connected to the R.H. wheel, makes it such that the total steering forces are produced with minimal stress on mechanical linkages (Fig. 11).

Lower and upper A-arms are widely spaced. They are mounted on ball joints. Torque rods prevent rotation of the uprights around the lower and upper ball joints.

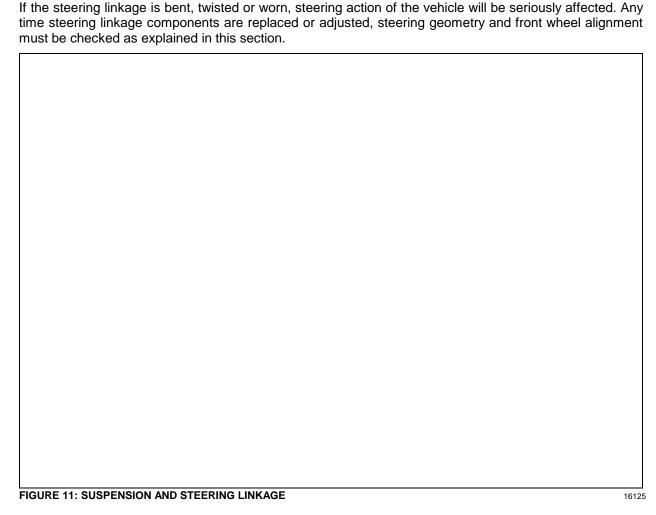

Turning Angle

The maximum turning angle is set mechanically through the two steering stop screws installed on the steering knuckle assembly. The turning angle (58° + 0° - 1°) mechanical stop is factory adjusted to accommodate the chassis design, and therefore, does not require adjustment on new vehicles.

However, turning angle should be checked and adjusted hydraulically, if necessary, any time a component of the steering system is repaired, disassembled or adjusted.

Before checking the turning angle, be sure the front end is properly aligned as described under paragraph "3.16 Front End Alignment" in this section.

To check steering maximum turning angle, proceed with the following method:

1. Check if front tires rub against the frame or if the steering gear has been serviced.

\triangle

CAUTION

If clamps are not correctly installed, they can interfere with other parts.

 For a full left and right turn, check clamps' position and for interfering parts. Refer to figures 12 to 18 for location and positioning of clamps. If readjustment is required, make the proper adjustment.

NOTE

Prior to steering limiter adjustment, verify vehicle wheel alignment, and ensure that oil level is adequate and that air bleeding is done.

3. If necessary readjust steering limiter. Refer to "ZF-SERVOCOM Repair Manual" annexed to Section 14 of Maintenance Manual, "Steering", under heading: "Setting and Functional Test".

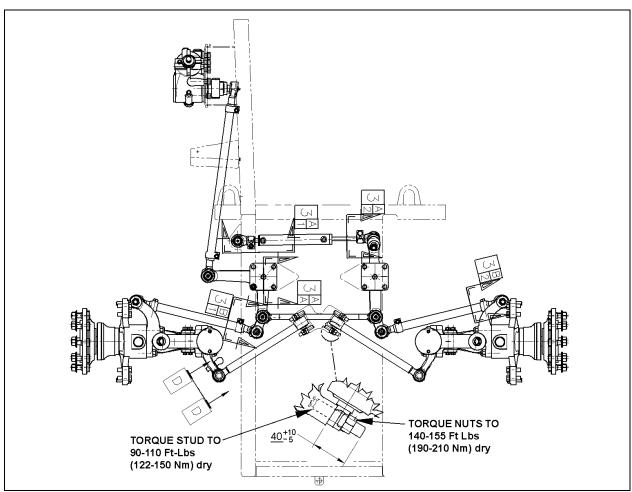
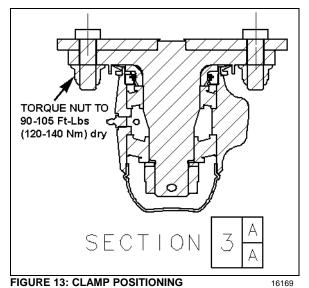


FIGURE 12: LOCATION OF CLAMPS





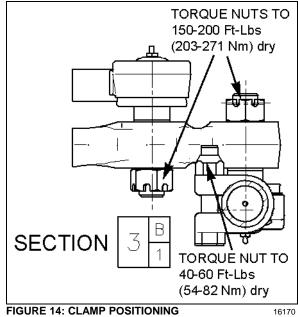


FIGURE 14: CLAMP POSITIONING

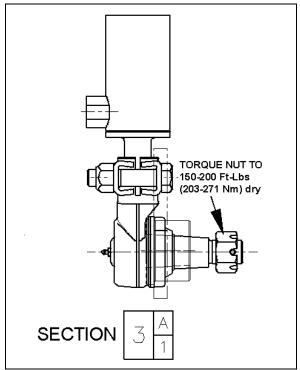


FIGURE 15: CLAMP POSITIONING

16178

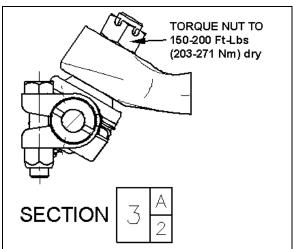


FIGURE 16: CLAMP POSITIONING

16179

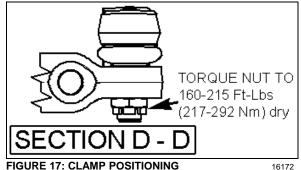


FIGURE 17: CLAMP POSITIONING

150-200 Ft-Lbs -(203-271 Nm) dry TORQUE NUT TO 40-60 Ft-Lbs (54-82 Nm) dry **SECTION** FIGURE 18: CLAMP POSITIONING 16171


3.2 STEERING LINKAGE ADJUSTMENT

NOTE

TORQUE NUT TO

Whenever a steering linkage component has been removed and replaced, check steering geometry and front end alignment as directed in this Sectiont. Check to insure that all stud nuts and mounting bolts and nuts have been tightened to proper torques listed under "14. Torque Specifications" at the end of this section.

- 1. First, align input shaft marks.
- 2. Afterwards, the pitman arm should be adjusted with reference mark aligned or to an angle of 90° in relation with the horizontal axis (Fig. 19).

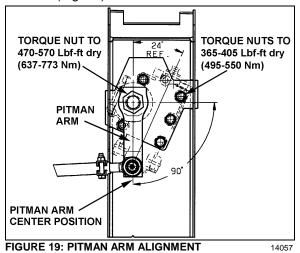

3. Locate centerline of vehicle then install relay rod in boss at steering bell crank and idler arm. Align center of relay rod with centerline of vehicle.

- 4. Install drag link to pitman arm and adjust opposite end of drag link to fit mounting stud hole in bell crank.
- 5. Install tie rods, and then adjust toe-in as per "Front End Alignment" in this Section.

3.3 PITMAN ARM REMOVAL

- 1. Remove cotter pin, nut and washer from drag link ball stud at pitman arm.
- Disconnect drag link from pitman arm, using jaw style pullers (pressure screw type).



WARNING

Always wear approved eye protection when operating pullers.



CAUTION

Do not drive pitman arm on or off pitman shaft as this can damage the steering gear.



CAUTION

Heating of components to aid in disassembly is not allowed because it has a detrimental effect on axle components and steering linkages.

- 3. Remove pitman arm fixing nut.
- 4. Check the radial position of the pitman arm in relation to the sector shaft prior to removal of pitman arm.
- Add reference marks to the arm and shaft if necessary to ensure correct alignment at reassembly.
- 6. Use a puller to remove pitman arm.

3.4 PITMAN ARM INSTALLATION

- Position pitman arm on sector gear shaft with reference marks aligned.
- Install fixing nut. Tighten nut to 470-570 lbf-ft (637-773 Nm)

NOTE

Use a new nut if the previously removed nut was punched.

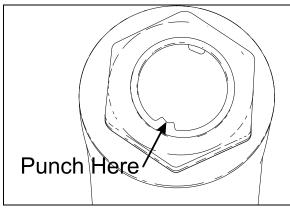


FIGURE 20: FIXING NUT PUNCH MARK

16098



CAUTION

Lock nut with sector shaft using a punch mark into the groove (Refer to figure 20).

 Connect drag link to pitman arm. Install washers. Tighten nut to 150-200 lbf-ft (203-271 Nm). Advance nut to next alignment cotter pin slot and install a new cotter pin.

3.5 DRAG LINK

Drag link assembly consists of three parts; a drag link and two end assemblies. Both end assemblies are identical and they are retained on the drag link with a clamp bolt and nut.

Stud nuts at the pitman arm and bell crank ends of the drag link must be kept tight or hole at ball stud end of drag link and hole in pitman arm may become enlarged as a result of excessive looseness. Subsequent tightening of stud nuts may draw studs too far into holes and dust cover parts may become damaged which can result in component failure.

Drag link end sockets are equipped with lubrication fittings and should be lubricated as directed in "Lubrication Fittings" in this section.

3.5.1 Adjustment

It should not be necessary to alter the length of the drag link except when a new link is installed or when removable end assembly has been replaced. If drag link adjustment is necessary, proceed as follows:

Position front wheels in straight ahead position.

- Center steering gear as previously explained in paragraph "3.2 Steering Linkage Adjustment".
- Remove cotter pin and stud from drag link at bell crank. Locate centerline of vehicle and center of relay rod. With center of relay rod aligned with centerline of vehicle, loosen clamp bolt at socket end (bell crank end) of drag link and adjust length of socket end assembly to fit in boss of bell crank.

NOTE

Do not change position of pitman arm.

- 4. Install stud nut and torque to 150-200 lbf-ft (203-271 Nm). Align nut with cotter pin slot (tighten) and install a new cotter pin.
- Torque mounting clamp bolt nut to 40-60 lbfft (55-80 Nm), then test the adjustment. Front wheels should turn from right to left extremities without noticeable binding at drag link ends.

3.6 BELL CRANK AND IDLER ARM

Bell crank and idler arm are equipped with one lubrication fitting and should be lubricated as directed in paragraph "3.10 Lubrication Fittings" of this Section.

3.6.1 Bell Crank and Idler Arm Removal

NOTE

Use a piece of wire to anchor loosen end of relay rod and tie rod in order to prevent placing an excessive load on opposite socket end.

Bell crank: Disconnect drag link, tie rod and relay rod from bell crank by removing cotter pins, stud nuts and washers from ball studs. Separate socket assemblies from the bell crank.

Idler arm: Remove cotter pins, nuts and washers from ball studs connecting relay rod and tie rod to idler arm. Separate socket assemblies from idler arm.

Remove nuts and washers from bolt attaching bell crank or idler arm mounting bracket to vehicle understructure. Remove bell crank or idler arm mounting bracket.

3.6.2 Bell crank or Idler Arm Ball Joint Disassembly

 Remove adjacent link assemblies from bell crank or idler arm as previously described.

- 2. Remove the cap (Fig.21).
- 3. Remove the cotter pin, nut and tongue washer. Remove bearings, grease seal, bearing bushing and the bell crank or idler arm from its mounting bracket stud (Fig. 21).

3.6.3 Bell Crank or Idler Arm Ball Joint Reassembly

NOTE

For bearing installation use tool Prevost # 110684.

- 1. Install bearing bushing on bell crank or idler arm mounting bracket stud.
- 2. Install bearing and grease seal in bell crank or idler arm eye (Fig. 23).

NOTE

Install grease seal according to figure 23. Grease must be able to exit the bell crank or idler arm mechanism. For grease seal installation use tool Prevost # 110683.

- 3. Install bell crank or idler arm on its mounting bracket stud (Fig. 23).
- 4. Install bearing and nut.

NOTE

Apply grease on bearing before installation.

- 5. Firmly tighten nut (Fig. 21).
- 6. Unscrew nut until bell crank or idler arm starts to turn by the application of 1 to 3 pounds load (Fig. 22).


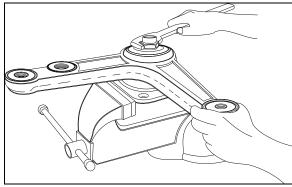


FIGURE 21: BELL CRANK

1604

7. Check for loose bearings by applying an up and down load on bell crank or idler lever (Fig. 22). The lever is not supposed to move in the vertical axis direction.

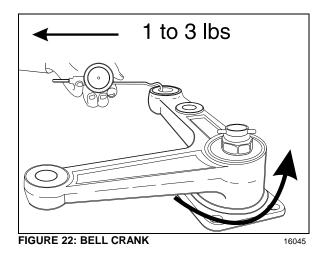

8. Align nut with cotter pin slot (tighten) and install a new cotter pin.

NOTE

Bend cotter pin around the nut (Fig. 23). Do not bend the cotter pin in the direction of the cap, because it may interfere with the cap.

- 9. Install the cap.
- Bell crank: Install drag link, tie rod and relay rod as directed herein under each specific subject.
- 11. **Idler arm:** Install tie rod and relay rod as directed herein under each specific subject.
- 12. Adjust turning angle as previously directed under paragraph "Turning Angle" and check front end alignment as specified in paragraph "3.16. Front End Alignment" of this section.

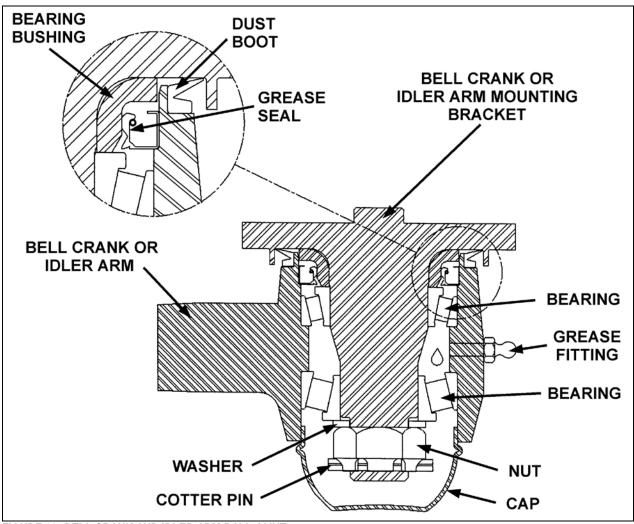


FIGURE 23: BELL CRANK AND IDLER ARM BALL JOINT

16109

3.7 RELAY ROD

Relay rod ends are equipped with lubrication fittings and should be lubricated as directed in paragraph "3.10 Lubrication Fittings" in this section.

NOTE

The relay rod is crimped in place and it is not possible to remove the ball joints.

3.7.1 Replacement

- Remove cotter pins from bell crank and idler arm end of relay rod. Loosen nuts flush with end of studs.
- Use a puller or place a sledge hammer behind the adjacent part to absorb shocks.
 Strike the studs with a brass hammer to loosen end assemblies.
- 3. Remove stud nuts and washers then remove studs.
- 4. Position relay rod studs into bell crank and idler arm then tap stud ends with a brass hammer to seat tapered surfaces.
- Install washers and stud nuts. Tighten nuts to 150-200 lbf-ft (203-271 Nm) torque. Align cotter pin slot (tighten) and install a new cotter pin.

3.8 TIE RODS

Tie rod ends are connected to the bell crank and left steering arm, and to the idler arm and right steering arm. Each tie rod assembly consists of three parts; a tube and two socket end assemblies. The tie rod ends are threaded into the tube and secured with clamp bolts. Right and left hand threads are provided to ease toe-in adjustment. Tie rod assemblies are interchangeable from the right to the left side of the vehicle.

Tie rod end sockets require no maintenance other than periodic lubrication and inspection to see that ball studs are tight. Replace socket ends when there is excessive up and down motion, lost motion or end play at ball end of stud.

- 1. Periodically check bolt nut for tightness.
- Inspect tie rod for bent condition and inspect tube for damaged threads. If tie rod is bent or threads are damaged, replace the assembly.

Lubricate tie rod end fittings as directed in paragraph "3.10 Lubrication Fittings" of this section.

3.8.1 Removal

- Remove cotter pins and stud nuts which attach tie rod socket ends to bell crank and left steering arm (or idler arm) and right steering arm.
- Remove tie rod ball stud by tapping on steering arm and bell crank or idler arm with hammer, while using a sledge hammer to absorb shocks.

NOTE

If tie rod end assemblies are damaged in any way, they must be replaced

3.8.2 Installation

- Install socket end assemblies on tie rod. Be sure both ends are threaded an equal distance into the tube.
- 2. Make sure threads on stud and in stud nut are clean and not damaged.
- Position ball studs (socket ends of tie rod) in holes in steering arm and bell crank or idler arm. Install a ball stud nut on each stud and tighten firmly.
- 4. Torque stud nuts to 150-200 lbf-ft (203-271 Nm). Align cotter pin slot (tighten) and install a new cotter pin.

NOTE

Adjust toe-in as directed in paragraph "3.15.4 Toe-In Adjustment" of this section.

5. Make sure tie rod ends are properly aligned with ball studs, then torque tie rod end clamp bolts to 40-60 lbf-ft (55-80 Nm).

NOTE

If tie rod is not properly aligned with stud, binding will result.

3.9 STEERING ARMS

The left and right wheel steering arms are secured to a steering knuckle at one end and to a tie rod at the other end.

3.9.1 Removal

- Remove wheel as directed in Section 13, "Wheel, Hubs and Tires" of the maintenance manual.
- Remove cotter pin, washer and nut from stud securing tie rod to steering arm. Remove ball stud from steering arm by tapping on arm with a hammer, placing a sledge hammer underneath steering arm to absorb shocks.
- Remove cotter pin and nut securing steering arm to steering knuckle assembly. Remove steering arm from steering knuckle.

3.9.2 Installation

- 1. Install steering arm onto steering knuckle.
- Torque steering arm to steering knuckle fixing bolts. Torque short bolt (M20 X 65) to 520-575 lbf-ft (705-780 Nm). Torque long bolt (M20 X 100) to 520-575 lbf-ft (1018-1125 Nm).
- Position tie rod ball stud in steering arm and tap with a brass hammer to seat ball stud in steering arm. Install washer and nut on stud. Torque nut to 150-200 lbf-ft (203-271 Nm). Tighten nut to nearest cotter pin slot and install a new cotter pin.
- Install wheel as directed in Section 13, "Wheel, Hubs and Tires" under paragraph "2.3 Installation" of the maintenance manual.

3.10 LUBRICATION FITTINGS

All lubrication fittings must be clean before applying lubricant. Also, always be sure equipment used in applying lubricant is clean. Every precaution should be taken to prevent entry of dirt, grit, lint or other foreign matter into lubricant containers. Replace fitting when they become broken or damaged.

Intervals of application given in the following paragraphs are recommended for normal service. More frequent intervals may be applied under severe operating conditions. In selecting proper lubricants, supplier reputation must be considered. The supplier must be responsible for product quality. The diagram (Fig. 24) shows approximate location of steering lubrication fittings.

1. **Drag Link Ends:** Lubricate at two fittings, one at each end of link, every 6,250 miles

- (10 000 km) with good quality lithium-base grease NLGI No. 2 (Shell Retinax LX or equivalent).
- Relay Rod Ends: Lubricate at two fittings, one at each end of rod, every 6,250 miles (10 000 km) with good quality lithium-base grease NLGI No. 2 (Shell Retinax LX or equivalent).
- Tie Rod Ends: Lubricate at four fittings, one at each end of both tie rods, every 6,250 miles (10 000 km) with good quality lithiumbase grease NLGI No. 2 (Shell Retinax LX or equivalent).
- Steering Knuckle Assembly: Refer to DANA SPICER MAINTENANCE MANUAL NDS AXLES Lubrication and Maintenance" annexed at the end of Section 10.
- 5. Idler Arm and Crank bell: Lubricate at two fittings, one on the idler arm and the other on the crank bell, every 6,250 miles (10 000 km) with good quality lithium-base grease NLGI No. 2 (Shell Retinax LX or equivalent). Apply grease gun pressure to the fitting until lubricant appears at the top seal.
- Upper A-Arm Central Ball Joint: Lubricate at fitting until you see some grease on the relief valve nearby, every 6,250 miles (10 000 km) with good quality lithium-base grease NLGI No. 2 (Shell Retinax LX or equivalent).

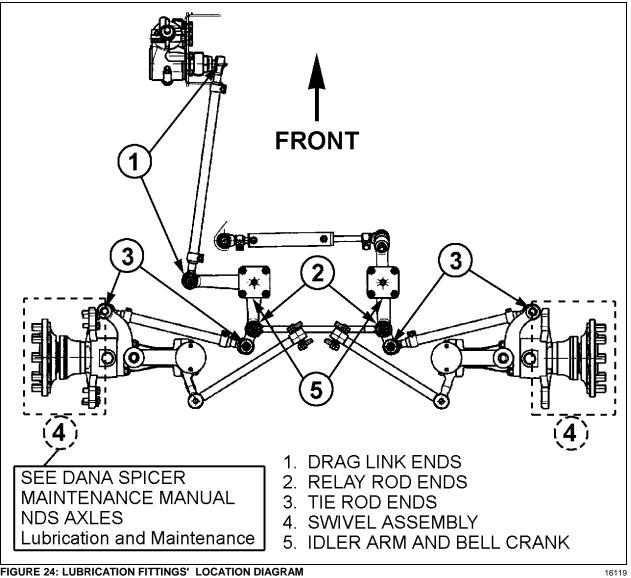


FIGURE 24: LUBRICATION FITTINGS' LOCATION DIAGRAM

3.11 BALL JOINTS

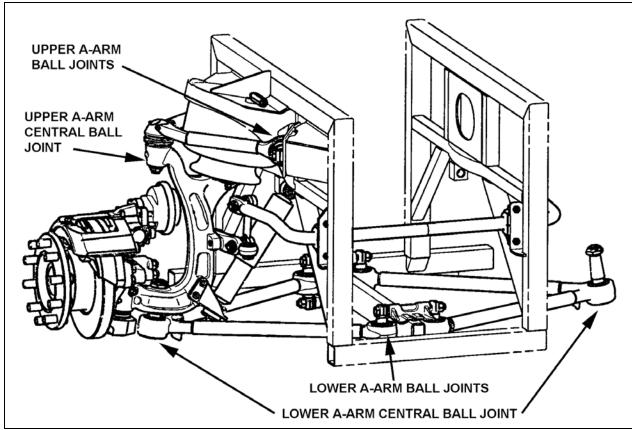


FIGURE 25: BALL JOINTS LOCATION

16137

3.11.1 Lower and Upper A-Arm Ball Joint

The assembly work may be done only by a recognized specialized workshop. Ensure that old and new parts do not get mixed up with each other. It is for this reason that all the old parts are to be scrapped immediately after a joint has been stripped down. A complete repair set must be used for each joint repaired, i.e. use of only part of a repair set is not permissible.

Inspection

Take off the load from the ball joint by lifting the front of the vehicle. Apply a load on the joint in all of the degrees of freedom in an axial, radial, etc. sense with a suitable lever tool. After the load is taken off, the joint has to spring back into its starting position. Free play is not acceptable.

Separation of rubber from ball pin or external joint shell is in accordance with "normal wear characteristics".

When the following characteristics are noted, the joint is to be changed:

- Free play;
- Radial cracking of the external sheet-metal race.

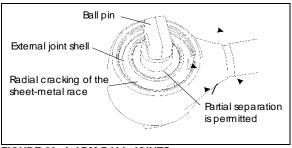


FIGURE 26: A-ARM BALL JOINTS

1617

• Stripping Down

Strip down the defective joint through removal of retaining ring, annular spacer and ball pin/bushing, assembly and thereafter clean out housing bore and locking circlips groove.

Assembly

Execute assembly of the new joint parts in the following sequence:

 Complete moistening of the contact surface between housing bore and ball pin through application of the grease.

NOTE

Apply grease, only in the case of repair kit (Prevost # 611114)).

- Insert ball pin/bushing, assembly. In case of the two-bolt type, ensure that the bolt bores are in the correct position in relation to the axis of the tube.
- 3. Place joint in receiving fixture and mount annular assembly tool on the housing. Then locate annular spacer and retaining ring in the housing using axial load with the aid of assembly matrix. If the ends of the annular spacer are not in contact with each other, the thus formed opening must be located at 180° to the opening of the retaining ring. Pay attention during assembly to ensure that the retaining ring eyelets are located at each side of the housing shaft axis (retaining ring eyelet lug points to tube), and that retaining ring is properly engaged in the groove of the housing.
- 4. When repairing defective ball pin assemblies, the necked down-bolt must regularly be replaced with a new one.

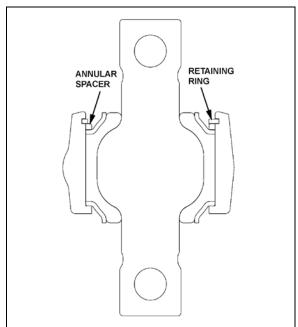


FIGURE 27: LOWER A-ARM BALL JOINTS

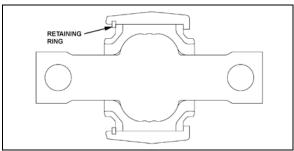


FIGURE 28: UPPER A-ARM BALL JOINTS

16115

3.11.2 Lower A- Arm Central Ball Joint

Inspection

Take off the load from the ball joint by lifting the front of the vehicle. Apply a load on the joint in all of the degrees of freedom in an axial, radial, etc. sense with a suitable lever tool. After the load is taken off, the joint has to spring back into its starting position. Free play is not acceptable. Separation of rubber from ball pin or external joint bushing shell is in accordance with "normal wear characteristics".

When the following characteristics are noted, the joint is to be changed:

- Free play;
- Radial cracking of the external bushing shell.

• Stripping Down

Strip down the defective joint through removal of retaining ring, annular spacer and ball pin/bushing, assembly and thereafter clean out housing bore and locking circlips groove.

Assembly

16114

Assemble the new component parts of the joint in the following sequence:

- Complete moistening of the contact surface between housing bore and ball pin through application of the grease.
- 2. Place joint in receiving fixture and mount annular assembly tool on the housing. Then locate annular spacer and retaining ring in the housing using axial load with the aid of assembly matrix. If the ends of the annular spacer are not in contact with each other, the thus formed opening must be located at 180° to the opening of the retaining ring. Pay attention during assembly to ensure that the retaining ring eyelets are located at each side of the housing shaft axis (retaining ring eyelet lug points to tube), and that retaining ring is properly engaged in the groove of the housing.

 Faultlessly apply grease by mechanical means to bracket-outer core and ball-inner cone. Insert bracket outer cone in fixture with distance ring and then use press tool to apply pressure to press mount with ball-inner cone.

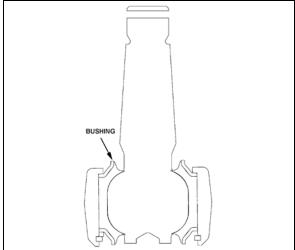


FIGURE 29: LOWER A-ARM CENTRAL BALL JOINT 16113

3.11.3 Upper A-Arm Central Ball Joint

Visual Inspection

Check the condition of the sealing boot, in particular:

Check if the retainer ring, which secures the sealing boot at the conical section of the ball stud, is still present.

Check if grease is present on the external surface of the sealing boots. Escaped fluid and accumulations of grease on the sealing boot may be the result of the sealing boot's rupturing. In this case, the ball joint must be systematically replaced.

Play Measurement

- 1. Raise the vehicle and support through axle jacking points.
- 2. Using a caliper, measure dimension A on figure 30.
- 3. With a lever tool, exert sufficient force under the upper A-arm as to separate the upper Aarm from the upright in order to have the ball joint to its maximum extent. Remeasure dimension A. If the difference between the two dimensions is greater than 0.060" (1.5 mm), then the ball joint should be replaced.

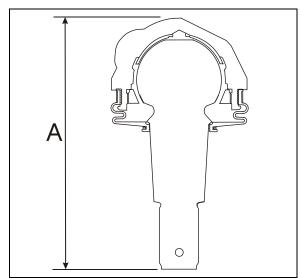


FIGURE 30: UPPER A-ARM CENTRAL BALL JOINT 1611

3.12 FRONT END ALIGNMENT

Proper front end alignment must be maintained to insure ease of steering and provide satisfactory tire life. When making front end alignment inspections, the vehicle must be level and empty with the full weight of the vehicle on the wheels.

Front end alignment inspections fall into two groups: regular service inspections performed at periodic intervals, and inspections to determine the extent of damage after a collision or severe service.

Regular service inspections concern toe-in, camber and caster.


Any variation from the specified alignment will indicate either a need for adjustment or a more thorough inspection to determine if parts replacement is required.



WARNING

During alignment, both camber and caster among other angles are adjusted. When adjusting these we install or remove shims from the lower "A" arms of the IFS. After performing alignment, make sure that the following is done:

- Installing a new lock nut after all shims are finalized.
- > Torque replaced nuts as per figure 34.
- ➤ Installing a longer bolt if less the 2 threads are remaining after the nut.
- Using a Torque mark on the nut for future visual inspection.

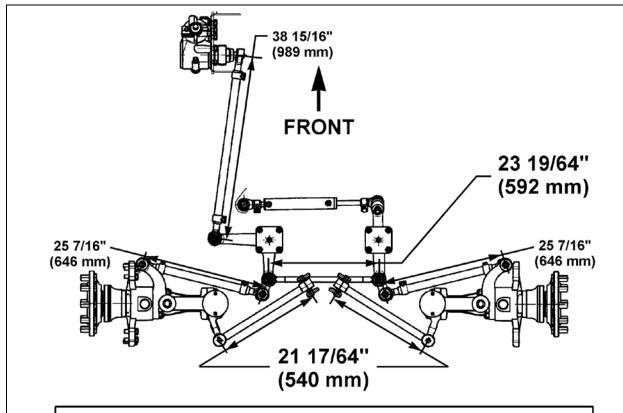

NOTE: 23 19/64" (592 mm) AND 21 17/64" (540 mm) MUST BE RESPECTED, THEY ARE NOT ADJUSTABLE. OTHER LENGTH ARE ADJUSTABLE, THEY ARE GIVEN ONLY FOR PRELIMINARY ADJUSTMENT. ALL LENGTHS ARE MEASURE FROM CENTER TO CENTER END OF ROD.

FIGURE 31: STEERING LINKAGE MEASURE

16130

3.12.1 Alignment Terminology

Wheel Camber

The amount the wheels are inclined from the vertical plane (A, Fig. 32).

Wheel Toe-In

The distance the front wheels are closer together at the front than at the rear of the tires (D minus E, Fig. 32).

Steering Knuckle Pin Inclination

The inclination of the steering knuckle pin from vertical toward the center of the vehicle at the top and outward at the bottom (B, Fig. 32).

Front Axle Caster

The inclination of the steering knuckle pin from vertical in the fore and aft direction (C, Fig. 32).

3.12.2 Front End Inspection

Before checking front end alignment, make the following inspection:

- Check that the vehicle is at normal ride height (see paragraph "5. Suspension Height Adjustment").
- 2. Check the tires for proper inflation.
- 3. Check wheel installation and run-out.
- 4. Check wheel bearing adjustment.
- Check tie rods and drag link ends for looseness.
- 6. Check steering knuckle pins for looseness.
- 7. Check if the length of the torque rod is 21 17/64" (540 mm) (Fig. 31). Check if the length of the relay rod is 23 19/64" (592 mm).

3.12.3 Front Wheel Camber

Positive camber is the outward inclination of the wheels at the top, negative or reverse camber is the inward inclination of the wheels at the top. Camber variations may be caused by wear at the wheel bearings, wheel spindle bushings, or bent suspension parts.

Check camber, with an accurate gauge. If camber is incorrect, check suspension parts for wear and replace worn parts. If wear is not perceptible, suspension parts may be bent or lower suspension arm may be improperly shimmed.

Check steering knuckle pin inclination. If steering knuckle pin inclination is incorrect, readjust the camber and check steering knuckle pin inclination again.

NOTE

Camber is more important than steering knuckle pin inclination, so adjust camber and verify steering knuckle pin inclination.

Shim the lower suspension arm to adjust camber. If the steering knuckle pin inclination is incorrect, the wheel steering knuckle pin assembly may be bent and therefore should be replaced.

Excessive positive camber results in irregular wear of the tires at the outer shoulders. Negative or reverse camber causes wear at the inner shoulders.

NOTE

Shim only the lower suspension arm to adjust the front wheel camber.



CAUTION

Once the perfect shim combination is achieved, always install new "Stover" nuts because the self looking effect is lost after tightening and loosening of the nut. It is recommended to punch marks to detect loosening of the nuts during future visual inspections.

3.12.4 Front Wheel Toe-In

Toe-in is measured from the center of the tire treads. Measurements at the front and rear of the tires must be made at the same height from the floor. Incorrect toe-in results in excessive tire wear and steering instability with a tendency to wander.

Toe-In Check

- Check the camber adjustment and adjust if necessary.
- Hoist the front of the vehicle and spin the wheels marking the centerline of the tire treads.
- 3. Place the wheels in the straight ahead position and lower the vehicle to rest on the floor.
- Roll the vehicle ahead several feet. This removes any slack caused by looseness in the wheel bearings or steering connections.
- 5. Check the distance between the tire centerlines at the front and rear of the front tires. These two measurements must be made at the same height above the floor. The front measurement must be 3/32 ±1/32 of an inch less than the rear measurement.

• Toe-In Adjustment

- 1. Loosen the tie rod clamp bolts.
- Using a pipe wrench, turn the tie rod tubes to obtain the toe-in measurement specified in step 5 under paragraph "Toe-in Check" of this section.
- 3. Tighten the tie rod clamp bolts and recheck toe-in.
- 4. Check that the angular relationship of the pitman arm to the steering gear is as shown in figure 19.

NOTE

Use only tie rods to adjust toe-in.

3.12.5 Front Axle Caster

Positive caster is the inclination of the top of the steering knuckle pins toward the rear of the vehicle. Negative or reverse caster is the inclination of the steering knuckle pins toward the front of the vehicle. This vehicle is designed with positive caster. The purpose of caster is to provide steering stability by keeping the wheels in a straight ahead position.

Caster variations may be caused by bent upper suspension arm, lower suspension arm, or steering knuckle pin housing. Caster should be adjusted with shims. Precision instruments should be used to measure caster. Shim bell crank and idler arm to adjust caster.

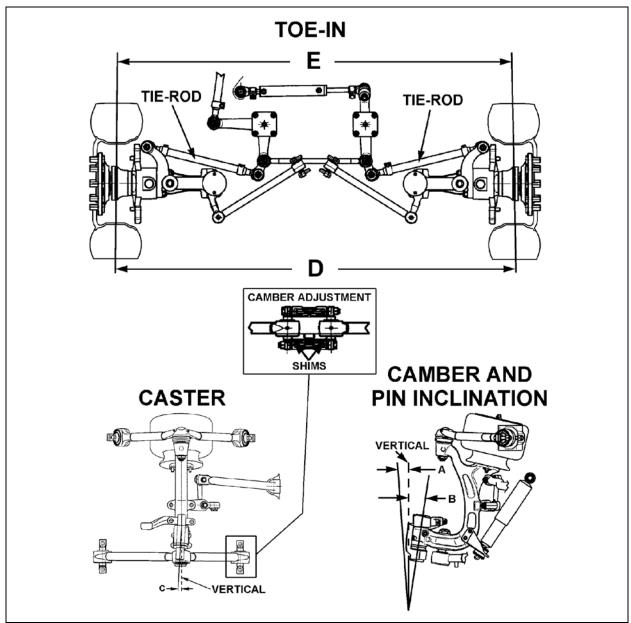


FIGURE 32: FRONT END ALIGNMENT DIAGRAM

16134

X3-45 COACHES ALIGNMENT SPECS (See Figure 32)							
		Minimal	Nominal	Maximal			
А	WHEEL CAMBER	0.0	0.35				
В	STEERING KNUCKLE PIN INCLINATION	8° (not adjustable)					
С	CASTER	2.35	2.6	2.85			
D-E	TOTAL TOE	0.06	0.08	0.10			

X3-45 VIP & XLII BUS SHELLS ALIGNMENT SPECS (See Figure 32)									
		Minimal		Nominal		Maximal			
Load		Non- converted	Converted	Non- converted	Converted	Non- converted	Converted		
Α	WHEEL CAMBER	0.2	-0.150	0.35	0.0	0.55	0.200		
В	STEERING KNUCKLE PIN INCLINATION	8° (not adjustable)							
С	CASTER	2.55		2.8		3.05			
D-E	TOE-IN	0.08		0.10		0.12			

Variations from the specified caster will affect steering stability, cause wandering, wheel shimmy, and produce poor returnability after turns.

3.12.6 Major Damage

If the suspension has sustained major damage, it may be necessary to shim the bell crank and the idler arm to avoid the bump steer or roll steer. Moreover refer to paragraph "3.12: Front End Alignment".

3.13 FRONT AIR SPRINGS

Two "rolling lobe" type air springs are used with the independent front suspension, one at each wheel. These air springs are special and use the complete piston as an extra reservoir to lower the spring stiffness. Front air springs are attached to the subframe and to uprights.

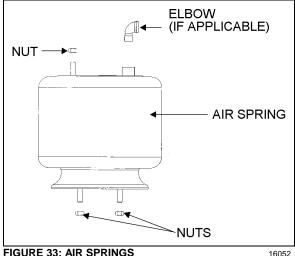


FIGURE 33: AIR SPRINGS

3.13.1 Inspection

- 1. Check operation of bellows.
- 2. Visually inspect bellows for evidence of cracks, punctures, deterioration, or chafing, Replace the bellows if damage is evident.
- With the primary air system at normal operating pressure (95 - 125 psi (655 - 860 kPa)), coat all suspension air line connections and bellow mounting areas with a water and soap solution. Bubbles will indicate an air leak, and none is permissible. Repair or replace defective parts.

NOTE

If air spring is removed from vehicle, bellows can be lightly inflated and submerged in water to detect any leakage. If leakage is detected, replace bellows.



WARNING

To prevent personal injury, do not apply more than 10 psi (69 kPa) air pressure to the unmounted air spring.

3.13.2 Removal

NOTE

Front air springs can be removed without removing the entire suspension assembly.

1. Safely support vehicle at the recommended body jacking points and jack up body understructure.

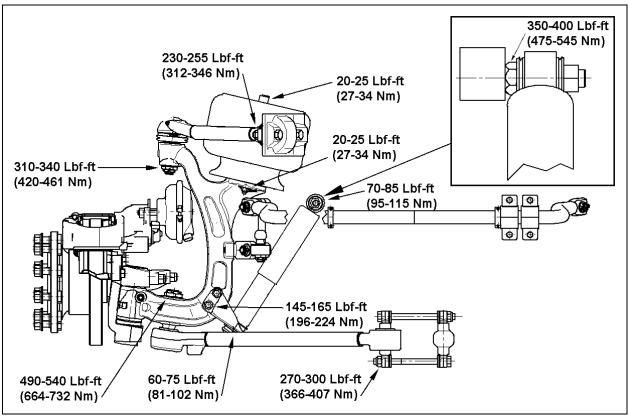


FIGURE 34: AIR SPRING AND SHOCK ABSORBER

2. To gain access to a given air spring, the corresponding wheel can be removed.



CAUTION

Only the recommended jacking points must be used as outlined in Section 18, "Body" in the maintenance manual.

- 3. Support the assembly with a suitable jack.
- 4. Exhaust compressed air from accessory air tank by opening drain cock under reservoir.
- 5. Disconnect the height control valve link and pull down the overtravel lever to ensure all air is exhausted from air springs.

NOTE

While performing this step, do not change the height control valve overtravel lever adjustment.

- Disconnect air line from air spring, remove elbow (if applicable), and cover both the line end and fitting to prevent the entry of foreign matter.
- 7. Remove the air spring upper nut, and then the two lower nuts. Remove air spring and

remove the back up plate from the top of the air spring.

3.13.3 Installation

NOTE

To facilitate air spring installation, compress it manually then put a piece of tape over the air line threaded fitting. This prevents air from getting back into the bag and keeps it compressed, thus enabling to place the bag in between the mounting plates and greatly easing installation.

- Compress air spring as necessary, then aligning studs with their holes, position air spring between both the lower and upper supports. Thread the lower nuts and the small upper nut a few turns.
- 2. Tighten and torque the lower stud nuts, and then the upper nut to 20-25 lbf-ft (27-34 Nm).
- Install elbow (if applicable), then connect air line.
- 4. Connect the height control valve link.
- 5. Build up air pressure in system.

PA1580 **27**

1611E

NOTE

To accelerate this operation, air reservoirs can be filled from an exterior air supply connected to the accessory tank fill valve or to the emergency fill valve.

- 6. Check operation of bellows and with the primary air system at normal operating pressure (95 125 psi (655 860 kPa), coat the air line connections and air spring mounting areas with a water and soap solution. Bubbles will indicate an air leak, and none is permissible. Repair or replace defective parts.
- 7. Remove the hydraulic floor jack from underneath shock absorber bracket.

3.14 SHOCK ABSORBERS

The two front shock absorbers are double-acting and telescopic type. Shock absorbers ensure a smooth ride and enhance vehicle stability on the road. Front shock absorbers have eye-type mountings on the upper side and bayonet type on lower side. Shock absorbers are non-adjustable and non-repairable.



CAUTION

When a shock absorber is found defective, always replace with a new set on affected axle, except if there has been a recent replacement of one unit. The following method will help in determining if both shock absorbers on the same axle have to be replaced.

3.14.1 Shock Absorber Removal

- 1. Remove the nut, washer and rubber joint from shock absorber mounting stud. Discard the rubber joints.
- Remove the nut and washer from shock absorber mounting pin (upper side), taking care to identify the inner and outer washers to ease reinstallation. Refer to figure 35 for details.
- 3. Remove the shock absorber from the vehicle.
- 4. Remove inner: washers, rubber joint and bushings from the shock absorber. Discard bushings and rubber joint.

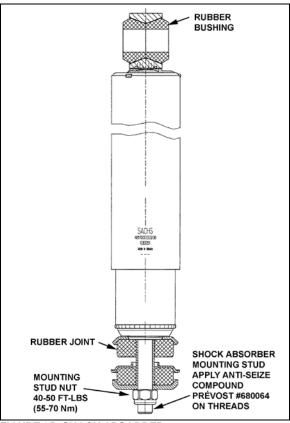


FIGURE 35: SHOCK ABSORBER

1611

3.14.2 Shock Absorber Installation

- Check that the shock absorber mounting pin torque is proper (350-400 lbf-ft (475-545 Nm)). Ensure that the stud is clean and not stripped (upper side).
- 2. Install new rubber (mounting) bushing on shock absorber (upper side).
- 3. Place the inner washer on shock absorber pin (Fig. 35).
- 4. Install washer and rubber joint on shock absorber mounting stud (lower side).
- 5. Install the shock absorber as shown in figure 34 with the mounting stud protruding through the hole in the mounting bracket and the shock absorber eyes over the mounting pins. Install the outer washer.
- Place a rubber joint and washer on the shock absorber mounting stud. Place the lower shock absorber mounting stud nut and torque to 40-50 lbf-ft (55-70 Nm).
- 7. Place the upper mounting pin stud nut and torque to 70-85 lbf-ft (95–115 Nm).

3.15 SWAY BAR

A sway bar is provided on the front and rear suspensions to increase vehicle stability. It controls lateral motion (swaying movement) of vehicle.

3.15.1 Removal

- 1. Disconnect the two links from sway bar.
- Safely support the sway bar. Unbolt bushing collars from subframe.
- 3. Remove sway bar.

NOTE

Sway bar bushings are slit to ease their removal.

3.15.2 Installation

- 1. Loosely install the sway bar.
- 2. Torque bushing collar nuts to 80-100 lbf-ft dry (108-136 Nm) on front and rear suspensions.
- 3. Torque sway bar link upper nuts to 165-200 lbf-ft dry (225-270 Nm) on front suspension and to 99-121 lbf-ft dry (134-164 Nm) on rear suspension.
- 4. Torque sway bar link lower nuts to 165-200 lbf-ft dry (225-270 Nm) on front suspension and to 80-100 lbf-ft dry (108-136 Nm) on rear suspension.

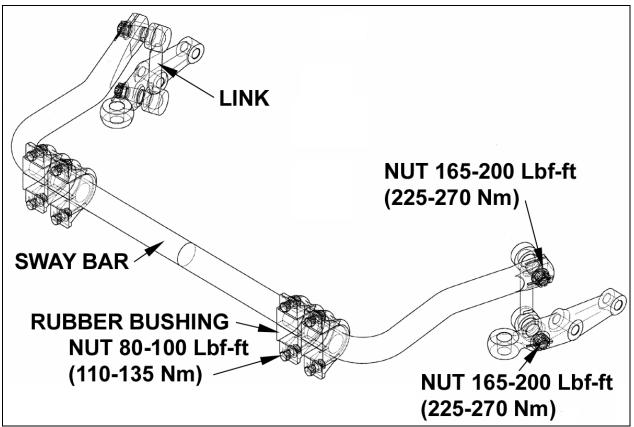


FIGURE 36: SWAY BAR (FRONT SUSPENSION)

16138B

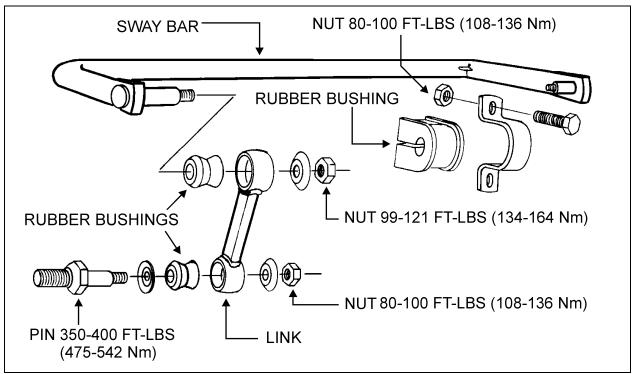


FIGURE 37: SWAY BAR (REAR SUSPENSION)

16144

4. REAR SUSPENSION

For a description of all these systems, refer to the appropriate heading in this section.

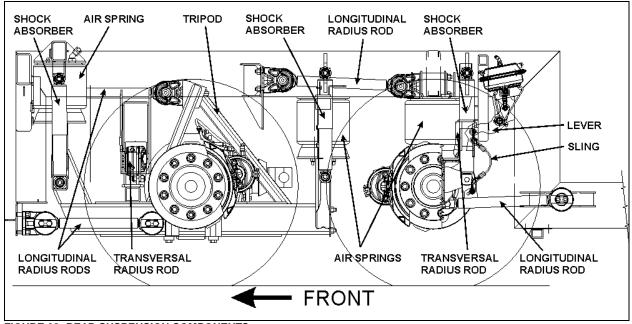


FIGURE 38: REAR SUSPENSION COMPONENTS

16167

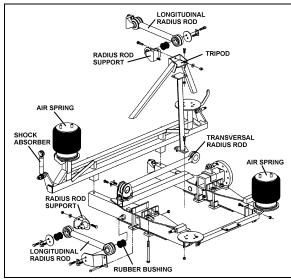


FIGURE 39: REAR UNDERFRAME SUSPENSION

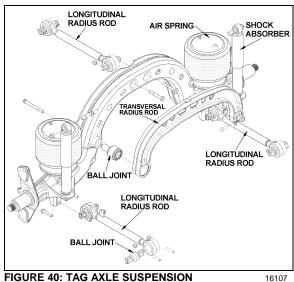


FIGURE 40: TAG AXLE SUSPENSION

4.1 **AIR SPRINGS**

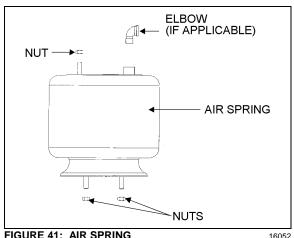


FIGURE 41: AIR SPRING

The air springs are made from a special compound rubber molded to the proper contour and dimensions. The entire vertical load of the vehicle is supported by these springs. Each of the two axles is provided with air springs that are attached to the subframe and to the axles (Fig. 41).

4.1.1 Inspection

- Check operation of bellows.
- Visually inspect bellows for evidence of cracks, punctures, deterioration, or chafing. Replace the bellows if any damage is evident.
- With the primary air system at normal operating pressure (95 - 125 psi (655 - 860 coat all suspension air line connections and bellows mounting areas with a water and soap solution. Bubbles will indicate an air leak, and none is permissible. Repair or replace defective parts.

NOTE

If air spring is removed from vehicle, bellows can be lightly inflated and submerged in water to detect any leakage. If any leakage is detected, replace bellows.



WARNING

To prevent personal injury, do not apply more than 10 psi (69 kPa) of air pressure to the uninstalled air spring.

4.1.2 Removal

NOTE

Suspension air springs (drive and tag axles) can be removed without removing the entire axle assembly.

- 1. Safely support vehicle at the recommended body jacking points. To gain access to a given air spring, the corresponding wheel can be removed as follows.
 - a) Jack vehicle until the tire clears the ground, and place safety supports underneath body.



CAUTION

Only the recommended jacking points must be used as outlined in Section 18, "Body".

- Support the axle with a suitable hydraulic floor jack at the recommended jacking point.
- c) Remove wheel.
- Exhaust compressed air from accessory air tank by opening drain cock under reservoir.
- 3. Disconnect the height control valve link and pull down the overtravel lever to ensure all air is exhausted from air springs.

NOTE

While performing this step, do not change the height control valve overtravel lever adjustment.

- Disconnect air line from air spring, remove elbow (if applicable), and cover both the line end and fitting to prevent the entry of foreign matter.
- 5. Remove the air spring upper nut, and then the two lower nuts. Remove air spring.

4.1.3 Installation

 Compress air spring as necessary, then aligning studs with their holes, position air spring between both the lower and upper supports. Thread the lower nuts and the small upper nut a few turns.

NOTE

To facilitate air spring installation, compress it manually then put a piece of tape over the air line threaded fitting. This prevents air from getting back into the bag and keeps it compressed, thus enabling to place the bag in between the mounting plates and greatly easing installation.

- Tighten and torque the lower stud nuts, and then the upper one to 20 – 25 lbf-ft (27 – 34 Nm).
- 3. Thread the remaining upper nut (large nut) and tighten to 20 25 lbf-ft (27 34 Nm).
- Install elbow (if applicable), then connect air line.
- 5. Connect the height control valve link.

6. Build up air pressure in system.

NOTE

To accelerate this operation, air reservoirs can be filled from an exterior air supply connected to the accessory tank fill valve or to the emergency fill valve.

- 7. Check operation of bellows, and with the primary air system at normal operating pressure (95 125 psi (655 860 kPa)), coat the air line connections and air spring mounting areas with a water and soap solution. Bubbles will indicate an air leak, and none is permissible. Repair or replace defective parts.
- 8. Reinstall wheel.
- 9. Remove the hydraulic floor jack from under the axle, then lower vehicle to ground.

4.2 SHOCK ABSORBERS

Double-action, telescoping-type shock absorbers ensure a smooth ride and enhance vehicle stability on the road. All shock absorbers are eye-type mountings. The tag axle is provided with two shock absorbers while the drive axle is provided with four of them (Fig. 38, 39 and 40).

Shock absorbers are non-adjustable and non-repairable. Maintenance requirements involve replacement of the rubber mounting bushings, and tightening of all shock absorber pins at the proper torque of 500 - 550 lbf-ft (680 - 750 Nm) when shock absorber replacement occurs. If a shock absorber becomes inoperative, complete unit must be replaced.



CAUTION

When a shock absorber is found defective, always replace with a new set on affected axle, except if there has been a recent replacement of one unit. The following method will help in determining if both shock absorbers on the same axle have to be replaced.

4.2.1 Inspection

Loosen lower mounting of both shocks, and then carefully attempt to raise and lower the bottom portion of each shock. Note the rate of effort for distance of travel. Replace both shocks if a definite differential rate is found.

The shock must be bench checked in an upright, vertical position. If checked in any other position, air will enter the cylinder tube and make the shock absorber appear defective.

Proceed as follows to check shock absorbers:

 With the shock absorber in a vertical position (top end up), clamp the bottom mount in a vise.



CAUTION

Do not clamp the reservoir tube or the dust tube.

- Rotate the dust tube. Notice any binding condition (may be compared with new unit).
 Binding condition indicates a scored rod. Units with scored rods should be replaced.
- 3. Fully extend shocks and check for leaks in the seal cover area. Shock fluid is a very thin hydraulic fluid that has a characteristic odor and dark brown tint. A slight trace of shock fluid around the seal cover area is not a cause for replacement. The shock seal is designed to permit a very slight seepage to lubricate the rod. Units that leak should be replaced.
- Visually check shock for dents that could cause the shock to bind. Also, check for a bent rod.
- Extend and collapse shock several times to determine that it has control (resistance) in both rebound and compression.
- 6. Visually inspect the shock mountings and vehicle mounting for:
 - a) Broken mounts;
 - b) Extreme bushing wear:
 - c) Shifted bushing or sleeve:
 - d) Deep cracks in bushing material (shallow surface cracks are normal);
 - e) Loose shock absorber pins;
 - Presence of convex washers, and their position relative to the rubber bushing.

4.2.2 Removal

- Remove nuts and washers from shock absorbers on upper and lower mounting pins, taking care to identify the inner and outer washers to ease reinstallation. Refer to figure 42 for details.
- Remove the shock absorber assembly from pins.
- Remove the two inner bushings from the shock absorber and discard them.

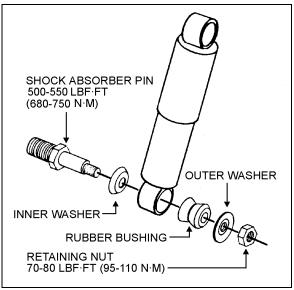


FIGURE 42: SHOCK ABSORBER

16008

4.2.3 Installation

- 1. Ensure that the shock absorber mounting pins are tight and that the threads are not stripped.
- 2. Install new rubber mounting bushings on shock absorbers (upper and lower).
- Place the inner washers (with washer convex side facing the shock absorber rubber bushing) on each shock absorber pin (Fig. 43).
- Install the shock absorber eyes over the mounting pins, then the outer washers (with washer convex side facing the shock absorber rubber bushing) on each shock extremity.

NOTE

If shock absorber pins are removed, they must be reinstalled using "loctite" (see "Parts Specifications" in this section).

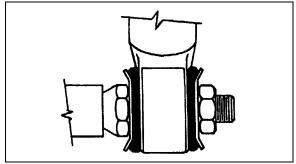


FIGURE 43: TYPICAL SHOCK ABSORBER SETUP 16009

5. Place the lower and upper mounting pin stud nuts and torque to 70 - 80 lbf-ft (95 - 110 Nm).

RADIUS RODS 4.3

Radius rods are used to secure the axles in the proper transversal and longitudinal positions. Four radius rods are provided on the drive axle suspension (three Iongitudinal and transversal) and also four on the tag axle with a layout similar to the drive axle. Refer to figures 38, 39 and 40 for details. These rods transmit both braking and driving forces from the axles to the vehicle body.

4.3.1 Rear Underframe Suspension

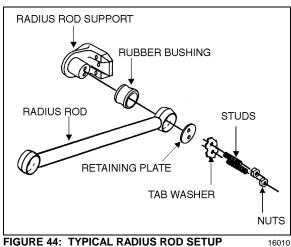


FIGURE 44: TYPICAL RADIUS ROD SETUP

Radius Rod Inspection

The following instructions apply to the radius rods used on the rear underframe suspension:

- 1. Clean all parts thoroughly.
- 2. Inspect radius rods for distortion and cracks. We recommend the "Magnaflux" process to detect cracks in the radius rod. Any

damaged part should be replaced with a new one.

NOTE

New bushings should be used when rods are replaced.

3. The radius rod bushings should be checked periodically for signs of shearing, deterioration, or damage. Any defective part should be replaced with a new one.

Radius Rod Removal

- 1. Flatten the tab washer which secures the two retaining nuts (or bolts), then unscrew the nuts (or bolts) at each extremity of the radius rod (Fig. 44).
- 2. Remove the tab washer and the retaining plates and radius rod ends from anchor pins. and then remove the radius rod.

Bushing removal

1. Safely support the radius rod as shown in figure 45.

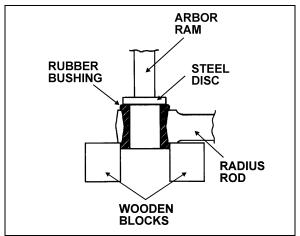


FIGURE 45: RADIUS ROD BUSHING REMOVAL

- 2. Place a flat steel disc, slightly smaller than the outside diameter of the bushing (Fig. 45).
- 3. Using an arbor press or a suitable driving tool, press or drive the old bushing out of the rod and discard the bushing.



CAUTION

Make sure to prevent the steel disc from contacting the radius rod end.

Bushing installation

1. Lightly spray the inner and outer surfaces of radius rod bushing with water.



CAUTION

No lubricant whatsoever is to be used on the rubber bushing.

- 2. Safely support the radius rod, and place new bushing on top of the radius rod end (Fig. 46).
- 3. Place a block of wood on top of bushing and press on it manually.
- If necessary, use an arbor press or a suitable driving tool. Press or drive the bushing into the radius rod end until it extends equally on both sides of the rod.
- It is also possible to proceed differently. Place radius rod bushing on a plane surface. Spray a light coat of water on the inner and outer surfaces of radius rod bushing.
- 6. Take radius rod, align the bushing. Tap radius rod on bushing until latter is positioned correctly.

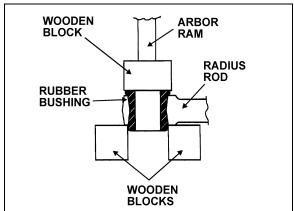


FIGURE 46: RADIUS ROD BUSHING INSTALLATION 16012

Radius Rod Installation

- Lightly spray the radius rod support with water. Place the radius rod end over the radius rod support (Fig. 47).
- 2. Position the retaining plate. Install the tab washer and nuts (or bolts).

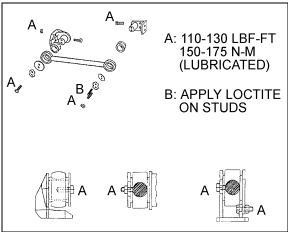


FIGURE 47: RADIUS ROD INSTALLATION

16028



CAUTION

Always use new tab washers at installation.

- 3. Tighten the nuts (or bolts) lightly, and repeat at the other end.
- 4. Refer to heading "Suspension Height Adjustment" later in this section, and set the vehicle to normal ride height.
- 5. With the vehicle at normal ride height, apply oil on threads and tighten all radius rod anchor pin nuts or bolts to 110 130 lbf-ft (150 175 Nm).



CAUTION

It is extremely important upon reconnection of the rods that the proper clearance height between the axle and body be maintained. Otherwise, the rubber bushings in radius rod ends will become preloaded, thus reducing their life span.

4.3.2 Tag Axle Suspension

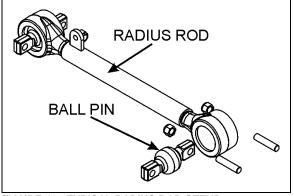


FIGURE 48: TYPICAL RADIUS ROD SETUP

16010

The assembly work may be done only by a recognized specialized workshop. Ensure that old and new parts do not get mixed up with each other. It is for this reason that all the old parts are to be scrapped immediately after a joint has been stripped down. A complete repair set must be used for each joint repaired, i.e. use of only part of a repair set is not permissible.

Radius Rod Inspection

Take off the load from the ball joint by lifting the rear of the vehicle. Apply a load on the joint in all of the degrees of freedom in an axial, radial, etc. sense with a suitable lever tool. After the load is taken off, the joint has to spring back into its starting position. <u>Free play is not acceptable</u>.

Separation of rubber from ball pin or external joint shell is in accordance with "normal wear characteristics".

When the following characteristics are noted, the joint is to be changed:

- Free play;
- Radial cracking of the external sheet-metal race.

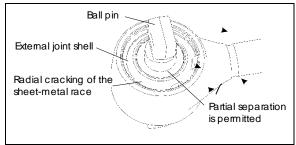


FIGURE 49: BALL JOINTS

16173

Stripping Down

Strip down the defective joint through removal of retaining ring, annular spacer and ball pin/bushing, assembly and thereafter clean out housing bore and locking circlips groove.

Radius Rod Assembly

Execute assembly of the new joint parts in the following sequence:

1. Complete moistening of the contact surface between housing bore and ball pin through application of the grease.

NOTE

Apply grease, only in the case of repair kit (Prevost # 611114)).

- Insert ball pin/bushing, assembly. In case of the two-bolt type, ensure that the bolt bores are in the correct position in relation to the axis of the tube.
- 3. Place joint in receiving fixture and mount annular assembly tool on the housing. Then locate annular spacer and retaining ring in the housing using axial load with the aid of assembly matrix. If the ends of the annular spacer are not in contact with each other, the thus formed opening must be located at 180° to the opening of the retaining ring. Pay attention during assembly to ensure that the retaining ring eyelets are located at each side of the housing shaft axis (retaining ring eyelet lug points to tube), and that retaining ring is properly engaged in the groove of the housing.

When repairing defective ball pin assemblies, the necked down-bolt must regularly be replaced with a new one.

5. SUSPENSION HEIGHT ADJUSTMENT

The flow of pressurized air from the accessory air tank to the air springs is controlled by three height control valves. The two rear valves are mounted to the subframe and connected to the rear axles through an arm and link connection. The front valve is mounted to the subframe and connected to the front air tank support. These connections allow the valves to apportion air pressure in the springs to the vehicle load, maintaining normal ride height.

Immediate response height control valves increase or decrease the air pressure in the suspension system as required. One height control valve is located at center of front sway bar, and regulates air to front suspension air springs in order to maintain the vehicle at the required height. Two are located at the drive axle, one on each inner side of rear wheelhousing.

The appropriate vehicle body height is obtained by measuring the clearance of all the air springs installed on the vehicle. The two front air springs clearance should be $11 \pm 1/4$ " (279 \pm 6 mm). Refer to figure 50 to identify the correct area to take measurement. The rear air springs clearance should be $11 \frac{1}{2} \pm \frac{1}{4}$ " (292 \pm 6 mm).

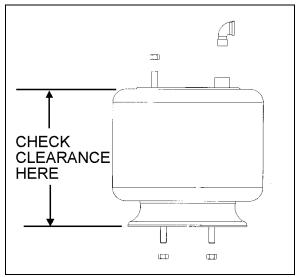


FIGURE 50: TYPICAL AIR SPRING CLEARANCE 160

At this point, it should not be necessary to make an adjustment under normal service conditions. However, if an adjustment is required, change the position of the overtravel lever in relation to the overtravel control body. The lever should be moved up to raise vehicle height, and down to lower it. Check that main air pressure is at normal operating pressure and raise the vehicle to the specified height.



CAUTION

Always adjust on "fill cycle". If it is necessary to lower vehicle height, release sufficient air to be well below height, and adjust to height or fill cycle.

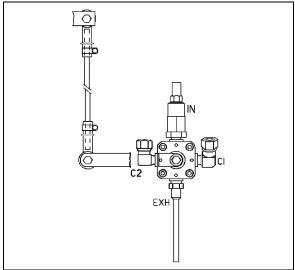


FIGURE 51: FRONT HEIGHT CONTROL VALVE

The normal ride height is obtained by adjusting air spring clearance of both front and rear suspension as follows:

Front air spring clearance

 With the vehicle at normal operating air pressure [100 - 125 psi (689 - 860 kPa)], measure air spring clearance. This clearance should be 11 ± ¼" (279 ± 6 mm).

NOTE

The measurement should be taken from underneath the upper air spring support on subframe to top of the lower air spring support on axle (refer to figure 46 for more details). If adjustment is required, begin with the drive axle.

2. Loosen the clamp on the height control valve rubber coupling and bring it up or down (Fig. 51).

NOTE

Allow suspension to stabilize before taking reading.

When the desired height is obtained, tighten clamp.

Rear air spring clearance

 With the vehicle at normal operating air pressure [100 - 125 psi (689 - 860 kPa)], measure air spring clearance. This clearance should be 11 ½ ± ¼" (292 ± 6 mm).

NOTE

The measurement should be taken from underneath the upper air spring support on subframe to top of the lower air spring support on axle (refer to figure 46 for more details).

2. Loosen the clamp on the height control valve rubber coupling and bring it up or down (Fig. 52).

NOTE

16100

Allow suspension to stabilize before taking reading.

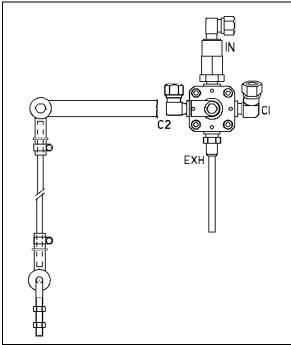


FIGURE 52: REAR HEIGHT CONTROL VALVE

16093

When the desired height is obtained, tighten clamp.

6. HEIGHT CONTROL VALVE

The height control valves automatically add air to, or release air from air springs to maintain constant suspension height regardless of load, or load distribution. Each valve adjusts independently according to the following conditions:

Loading Position

As the load increases and lowers the vehicle body, the overtravel lever commands the height control valve to add air to air springs.

Neutral Position

When vehicle body reaches the normal ride height, the height control valve overtravel lever reaches the "neutral" position and keeps both the supply and exhaust ports closed to ensure normal ride height is maintained. This condition remains static until the vehicle load is altered.

Unloading Position

As the load decreases and raises the vehicle body, the overtravel lever commands the height control valve to release air from air springs.

6.1 MAINTENANCE

The height control valve requires no periodic maintenance. Height control valve linkage operates on rubber bushings and no lubrication should be attempted at this location. Inspect the valve for loose joints, air leaks and worn bushings.

6.2 REMOVAL AND INSTALLATION

Before disconnecting a height control valve air line, securely support the vehicle by its jacking points on the body, and place safety supports underneath body. Refer to paragraph "16. Vehicle Jacking Points" in Section 18, "Body".

- Exhaust air from air system by opening all air tank drain cocks. Remove height control valves.
- Disconnect overtravel lever from link and pull down lever to exhaust remaining air from air springs.
- 3. Disconnect air supply and delivery lines from the height control valve. Cover line ends with tape to prevent entry of foreign matter.
- 4. Remove the nuts retaining the height control valve to the mounting bracket, then remove valve assembly.

Reverse removal procedure to replace height control valve. After installation, check for leakage using a soap and water solution.

7. AIR SYSTEM

The basic air system consists of an air compressor, tanks, valves, filters and interconnecting lines and hoses (refer to Section 12, "Brake and Air System" for complete information). It provides a means for braking, operating controls and accessories, and suspension. An air system schematic diagram is annexed at the end of this section for better understanding of the system.

The air coming from the air dryer is first directed to the wet air tank, then to the primary (for the primary brake system), secondary (for the secondary brake system), and accessory (for the pneumatic accessories) air tanks (Fig. 53 and 54).

In addition, an expansion air tank may be installed in series with each air spring.

7.1 AIR TANK MAINTENANCE

Ensure that the accessories air tank is purged during pre-starting inspection. A good practice is to purge this tank at the end of every driving day by the remote air tank drain valve located in the front service compartment (Fig. 56).

Moreover, purge all tanks by their bottom drain valves at specified intervals.

7.1.1 Wet Air Tank

This tank is installed above the drive axle on the L.H. side, and is provided with a bottom drain valve. It is recommended to **purge** the wet air tank by its bottom drain valve every 12,500 miles (20 000 km), or once a year, whichever comes first.

A remote valve located in engine compartment and accessible through engine R.H. side door is used to **drain** the air dryer (Fig. 55).

7.1.2 Primary Air Tank

The primary air tank is located above the drive axle on the R.H. side.

This tank is provided with a bottom drain valve (Fig. 53 and 54). It is recommended to purge the primary air tank by its bottom drain valve every 12,500 miles (20 000 km) or once a year, whichever comes first.

7.1.3 Secondary Air Tank

This tank is located in front wheelhousing, between air springs. The tank may be installed vertically depending on type of front suspension and is provided with a bottom drain valve (Fig. 53 and 54).

It is recommended to purge the tank by its bottom drain valve, every 12,500 miles (20 000 km) or once a year, whichever comes first.

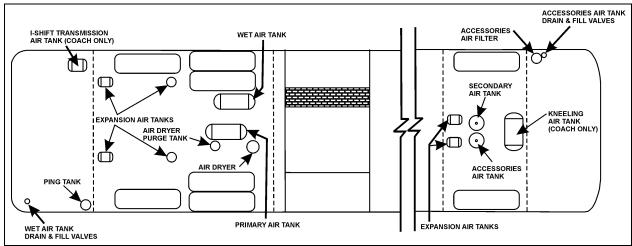


FIGURE 53: IFS AIR TANKS LOCATION

24034

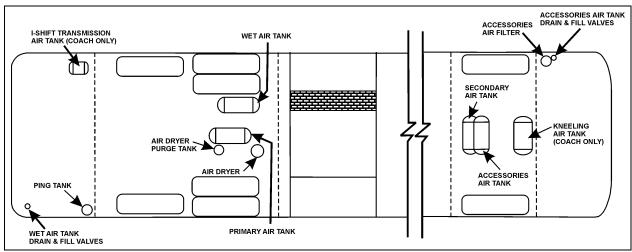


FIGURE 54: I-BEAM FRONT SUSPENSION AIR TANKS LOCATION

24035

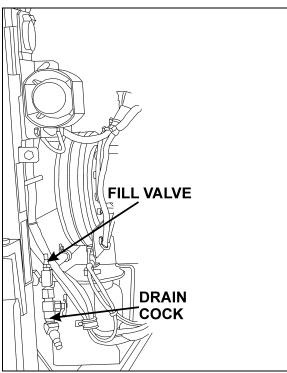


FIGURE 55: REAR VALVE LOCATION

12211

7.1.4 Accessory Air Tank

The accessory air tank is installed next to the secondary air tank. The tank may be installed vertically depending on type of front suspension and is provided with a bottom drain valve (Fig. 53 and 54).

It is recommended to purge the tank by its bottom drain valve, every 12,500 miles (20 000 km) or once a year, whichever comes first.

A remote drain valve is located in front service compartment (Fig. 56) underneath the accessory air filter. Refer to Section 12, paragraph "4. Accessory Air Filter" of the maintenance manual for daily purge procedure.

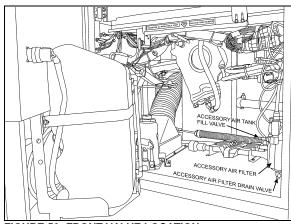


FIGURE 56: FRONT VALVE LOCATION

12210

7.1.5 Expansion Air Tank

Two expansion tanks will be installed in front wheelhousing if the IFS was chosen as an option. These air tanks are located behind secondary and accessory air tank. Also, six expansion tanks are located near rear air springs (Fig. 53 and 54). Expansion tanks are connected in series with air springs. Expansion tanks are used to lower the stiffness of the air spring. They are provided with a bottom drain valve.

It is recommended to purge them, with all other tanks, every 12,500 miles (20 000 km) or once a year, whichever comes first.

7.2 EMERGENCY FILL VALVES

The vehicle is equipped with two air system emergency fill valves to supplement the air system when air pressure is low and engine cannot be operated.

The rear valve is located in engine compartment and accessible from engine R.H. side door (Fig. 55).



CAUTION

No other point should be used to supply air system. The maximum allowable air pressure is 125 psi (860 kPa).

The front valve is located in the front service compartment close to accessory air filter (Fig. 56).

These two air valves are fitted with the same valve stems as standard tires, and can be filled by any standard external air supply line.

The rear valve will supply air for all systems (brakes, suspension and accessories) while the front valve will supply air for accessories only.



CAUTION

Air filled through these two points will pass through the standard air filtering system provided by Prevost. Do not fill air through any other points.

8. HUB UNIT AND STEERING KNUCKLE ASSEMBLY

Refer to "DANA SPICER Service Manual General Information, Maintenance Manual Model NDS and Maintenance Manual NDS Axles" annexed to Section 10 of the maintenance manual.

9. "LEVEL LOW" LEVELING SYSTEM

X3-45 VIP & XLII Bus shells are equipped with a "LEVEL-LOW" leveling system. The purpose of the "LEVEL-LOW" is to adjust the suspension in three separate points (front, rear right and rear left air springs) in order to level the vehicle body. Three height control valves, automatically control air pressure in the three separate points (air springs) and maintain a constant vehicle height regardless of load, or load distribution. The control solenoid valve supplies air to the five way three-position air control valve, which bypasses the height control valve, and opens a passage to allow the air control and exhaust valve to release/supply air from airs springs. To improve road comfort, an expansion air tank is installed in series with each air spring.

In addition to the above suspension components the system also includes: sway bar, upper and lower A-arms, rods and shock absorbers.

NOTE

Only for preliminary adjustment, refer to figure 41. Torque rod length must be fixed to 21 17/64" (540 mm) and relay rod to 23 19/64" (592 mm).



CAUTION

Parts must be replaced by ones with the same part numbers or with equivalent parts, if replacement becomes necessary. Do not use parts of lesser quality or substitute design. Torque values must be used as specified during reassembly to assure proper retention of these parts.

The purpose of the "level-low" leveling system is to adjust the suspension in three separate points (front, rear right and rear left) in order to level the vehicle body. This system can be put into service when the ignition key is turned to the "ON" position, and must be used only when the parking brake is applied. The "level-low" warning light on the dashboard indicates that the selector switch is not in the "OFF" position. Level low system controls are located on L.H. side control panel.

9.1 PRINCIPLES OF OPERATION

DOWN:

The (front/rear right/rear left) control solenoid valve supplies air to the (front/rear right/rear left) five-way three-position air control valve, which bypasses the (front/rear right/rear left) height control valve, and opens a passage to allow the air control and exhaust valve to release air from (front/rear right/rear left) air springs.

UP:

The (front/rear right/rear left) control solenoid valve supplies air to the (front/rear right/rear left) five-way three-position air control valve, which bypasses the (front/rear right/rear left) height control valve, and opens a passage to allow the air control and exhaust valve to supply air to (front/rear right/rear left) air springs.

DRIVE:

When the ignition key is turned to the "ON" position with selector knob in the "DRIVE" position, the drive control solenoid valve supplies air to all five-way three-position air control valves, each one opening a passage to allow height control valves to accomplish their function.

When the ignition key is turned to the "OFF" position and selector knob to the "DRIVE" position, the air is entrapped between air springs and five-way three-position air control valves to ensure the adjusted level will be kept.



WARNING

Never move vehicle with selector knob in any other position than the "DRIVE" position.

9.2 MAINTENANCE

Since the kneeling action is issued from both the air system and electrical system, refer to Section: 12, "Brake and Air System" and Section 06, "Electrical System".

For diagnosis and understanding of the system, refer to wiring diagrams, and to the appropriate air system schematic diagram annexed to Section 12, "Brake and Air System".

PA1580 **41**

10. FRONT KNEELING SYSTEM (X3-45 COACHES ONLY)

The kneeling system is used to lower the front of vehicle. This allows passengers to board the vehicle with greater ease. The kneeling action is achieved by exhausting air from the front air springs (bellows). This system bypasses the height control valve to provide a fast up and down movement of the front suspension. Only seven seconds are required to lower vehicle from normal level to the lowered position, and approximately the same time to raise the vehicle back to normal level. The quick response is achieved by an auxiliary air tank installed beside the secondary air reservoir (for exact position, refer to Section 12, "Brake and Air System"). This tank provides sufficient air supply to the kneelina system for some successive operations.

The system is provided with two safety features; first, a speed switch will enable the kneeling system to work only at less than 5 mph (8 km/h). Secondly, the parking brake is automatically applied, and a limit switch will keep it applied as long as the vehicle has not returned to a certain height where the driver will be able to manually remove the parking brake.

The purpose of the hi-buoy function in this system is to raise the front end of the vehicle to allow an extra ground clearance for particular situations. In driving condition, the height control valve is in operation and only the hi-buoy can be operated.

10.1 PRINCIPLE OF OPERATION

Refer to the air system schematic diagram annexed at the end of Section 12, "Brake and Air System".

DOWN (FRONT KNEELING):

Both the bellows control and bellows exhaust solenoid valves are energized, so the air control valves release air from front air springs. The height control valve is bypassed to ensure no air is forwarded to air springs while lowering the front suspension.

UP (FRONT HIGH-BUOY):

Only the bellows control solenoid valve is energized, so the air coming from the kneeling air tank is routed through air control valves, and up to front air springs.

The height control valve is bypassed until the kneeling proximity switch signals the kneeling module to cut off the bellows control solenoid valve, about 1" (25 mm) below normal ride height. The final height adjustment is achieved by the height control valve.

10.2 MAINTENANCE

Since the kneeling action is issued from both the air system and electrical system, refer to Section: 12, "Brake and Air System" and Section 06, "Electrical System".

For diagnosis and understanding of the system, refer to wiring diagrams, and to the appropriate air system schematic diagram annexed to Section 12, "Brake and Air System".

10.3 BELLOWS CONTROL SOLENOID VALVES

10.3.1 Removal and installation

- On the rear side of steering compartment, locate both the bellows control and bellows exhaust solenoid valves.
- Identify hoses and wires to ease reinstallation. Disconnect solenoid wires and the three flexible black hoses from solenoid valves.
- 3. Unscrew and remove the control solenoid valve and exhaust solenoid valve assembly. Place on a clean working place.

Reverse removal procedure to reinstall.



CAUTION

Any cable tie that has been cut during removal procedure should be replaced with a new one.

11. HIGH-BUOY SYSTEM (X3-45 COACHES ONLY)

The purpose of the rear high-buoy system is to raise the entire vehicle body about 4" (100 mm) in order to increase ground clearance to board a ferryboat, to jump a curb, etc. This system can be put into service during normal vehicle operation.

11.1 PRINCIPLES OF OPERATION

The rear high-buoy system is added over the front kneeling (with front high-buoy). The front end uses the same valves as the front kneeling

(with front high-buoy). A solenoid valve is added to send air to the double shuttle valves for the rear end. It uses the same dash switch as the kneeling (with front high-buoy).

UP:

The air coming from the control valve flows through double shuttle valves, to supply air springs. The double shuttle valves prevent height control valves from releasing air from air springs.

DOWN:

The control valve, on the dashboard, cuts off air supply, so the double shuttle valves allow height control valves to accomplish their function. Height control valves release air from air springs until suspension returns to its normal position.

11.2 MAINTENANCE

Refer to the air system schematic diagram "Opt. Front Kneeling With Rear High-Buoy Combination" annexed at the end of this Section.

11.3 HIGH-BUOY – PRESSURE REGULATING VALVE

The regulating valve is located in the front service compartment. This valve should be adjusted to 90 psi (621 kPa).

11.3.1 Adjustment

- Before turning on system air pressure, release jam nut (2, Fig. 57) then turn regulator adjustment counterclockwise until all load is removed from the regulating spring.
- 2. Turn on system pressure.
- Turn regulator adjustment clockwise until the desired outlet pressure is reached.
- 4. To avoid minor readjustment after making a change in pressure setting, always approach the desired pressure from a lower pressure. When reducing from a higher to a lower setting, first reduce the pressure at a lower pressure, and then increase it to the desired level of pressure.
- 5. Tighten jam nut (2, Fig. 57) to lock pressure setting.

11.3.2 Disassembly

- Shut off inlet pressure and reduce pressure in inlet and outlet lines to zero. Turn regulator adjustment (1, Fig. 57) counterclockwise until all load is removed from regulating spring. Regulator can be disassembled without removal from air line.
- 2. Disassemble regulator in accordance with the item numbers on the exploded view.

11.3.3 Cleaning

- 1. Clean parts with warm water and soap. Dry parts and blow out internal passages in body using clean, dry compressed air.
- 2. Inspect parts. Replace those found to be damaged.

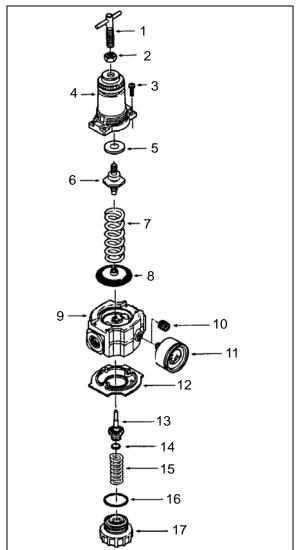


FIGURE 57: REGULATING VALVE

16035

PA1580 **43**

11.3.4 Reassembly

- Lubricate O-ring (14 and 16, Fig. 57), valve stem (13, Fig. 57), tip of adjusting screw (1, Fig. 57), and the outer circumference and both sides of the thrust washer (9, Fig. 57) with a light coat of good quality O-ring grease.
- 2. Assemble the regulator as shown on the exploded view.

Torque Table		
Item Torque in lbf-inch (Nm)		
3 (Screw) 25-35 (2.8-3.9)		
17 (Bottom plug) 20-25 (2.3-2.8)		

12. LOW-BUOY SYSTEM (X3-45 COACHES ONLY)

The purpose of the low-buoy system is to lower the whole suspension by about 4" (100 mm) in order to reduce the overall height for low clearances. This system can be put into service during normal vehicle operation.

12.1 PRINCIPLES OF OPERATION

On X3 coaches, the rear low-buoy is added over the front kneeling system. The control valve on the left console panel sends an electric signal from its pressure switch to control the front suspension as if kneeling. It also removes air from a relay valve that exhausts air supply to all leveling valves and the quick release in the rear section. Air from the rear suspension can then be depleted through the check valve-quick release assembly.

Down:

The control valve, on the L.H. control panel, cuts off air supply, so air is released from air springs. A relay valve prevents height control valves from supplying air springs.

Up:

The control valve, on the L.H. control panel, supplies air to close the passage between both the delivery and supply ports. A relay valve opens and provides air springs until the suspension reaches the normal ride height.

12.2 MAINTENANCE

Refer to the air system schematic diagram "Opt. Front Kneeling With Rear Low-Buoy Combination" annexed at the end of this Section.

13. TROUBLESHOOTING

Condition	Cause	Correction
Bellows deflate over time	 Defective check valve assembly. Defective exhaust valve assembly. 	 Replace check valve assembly. Replace exhaust valve assembly.
	 Leak in air line and/or bellows. Defective valve cover, rubber O-rings or gasket. 	3. Replace air line or bellows.4. Replace valve cover, O-rings or gasket.
Bellows raise to full height and fail to exhaust air pressure	 A clogged exhaust screen in height control valve assembly. A combination clogged exhaust screen and defective air inlet valve assembly. 	 Remove and clean screen. Clean exhaust screen and replace air inlet valve assembly.
Erratic valve action	 Dirt or foreign matter in the air valve lever chamber. Defectives valves. 	 Remove valve cover and blow out dirt. Install cover using new gasket. Overhaul height control valve assembly
Vehicle body fails to level to satisfactory ride height	Improper height control valve overtravel lever adjustment	Adjust lever as directed.

14. TORQUE TABLE

		TORQUE (DRY)		
DESCRIPTION	QTY	Lbf-ft	Nm	
Drag Link to Pitman Arm Stud Nut *	1	150-200	203-271	
Drag Link to Bell crank Stud Nut *	1	150-200	203-271	
Drag Link Socket End Clamp Bolt Nut	2	40-60	55-80	
Radius Rod Stud	2	20-40	27-54	
Radius Rod Retaining Nut or Bolt	2	110-130	150-175	
Radius Rod Support Nut	4	110-130	150-175	
Relay Rod to Bell crank Stud Nut *	1	150-200	203-271	
Relay Rod to Idler Arm Stud Nut *	1	150-200	203-271	
Tie Rod to Bell crank Stud Nut *	1	150-200	203-271	
Tie Rod to Idler Arm Stud Nut*	1	150-200	203-271	
Tie Rod to Steering Arm Stud Nut *	2	150-200	203-271	
Tie Rod End Clamp Bolt Nut	4	40-60	55-80	
Steering Arm to Steering Knuckle Bolt (M20 X 65)	2	520-575	705-780	
Steering Arm to Steering Knuckle bolt (M20 X 100)	2	520-575	705-780	
Torque Rod Stud Nut	2	160-215	217-292	
Torque Rod Mounting Bracket Stud	4	90-110	122-150	
Torque Rod Mounting Bracket Nut	4	140-155	190-210	
Idler Arm and Bell Crank Mounting Spindle Nut	8	90-105	122-142	
Jacking Point Bracket Nut	8	70-80	95-110	
Sway Bar Bushing Collar Nuts	8	80-100	108-136	
Sway Bar Link Upper and Lower Nuts (Front Suspension)	2	165-200	225-270	
Sway Bar Link Upper Nuts (Rear Suspension)	2	99-121	134-164	
Sway Bar Link Lower Nuts (Rear Suspension)	2	80-100	108-136	
Shock Absorber Pin	2	500-550	680-750	
Shock Absorber Support	4	145-165	196-224	
Shock Absorber Upper Mounting Pin Stud Nut	2	70-85	95-115	
Shock Absorber Lower Mounting Pin Nut	2	60-75	81-102	
Air Spring Lower Nut	4	20-25	27-34	
Air Spring Upper Nut	2	20-25	27-34	
Upper A-Arm Central Ball Joint (Hex Castle Nut)*	2	310-340	420-461	
Upper A-Arm Ball Joint	8	230-255	312-346	
Lower A-Arm Central Ball Joint (Hex Castle Nut)*	2	490-540	664-732	
Lower A-Arm Ball Joint	8	270-300	366-407	

^{*} Tighten nut to specified torque, then advance to next aligning cotter pin slot and install a new cotter pin.

PA1580 **45**

15. PARTS SPECIFICATIONS	Height control valve (Front only)
	MakeBarksdale
Indonondant Front Suchancian Air Springs	Quantity used1
Independent Front Suspension Air Springs	Prevost number630157
MakeGoodyear Tire and Rubber Model1400	Height control valve (Rear only)
Type Mae West	neight control valve (Near only)
Diameter	MakeBarksdale
Air Inlet1/2"- 14 NPTF	Quantity2
Prevost number630239	Prevost number630156
I-Beam Front Axle and tag axle air springs	Bellows control and exhaust solenoid valve
MakeGoodyear Tire and Rubber	assembly
Model1200	MakeNorgren
Type Mae West	MakeNorgren
Nominal diameter	Solenoid valve manifold
	Prevost number641130
Drive axle air springs	
• •	Coil
MakeGoodyear Tire and Rubber	
Model1100	Voltage24 V DC
Type Double Flare	Current draw29 amperes
Nominal diameter11.5" (292 mm)	Prevost number641144
Prevost number630104	
	Valve (3 way, 2 positions)
Independent Front suspension shock	TypeN/C
absorbers	Prevost number
MakeArvin	TypeN/O
ColorBlack	Prevost number641356
Piston Diam	1 1evost Humber
Collapsed length14.16 inches	
Extended length	Radius rod bushing
Prevost number630136	MakePrevost
1 10 1001 1101 1101 1101 1101 1101 1101 1101 1101	Prevost number630021
I-Beam Front suspension shock absorbers	1107030110111301
·	Loctite
MakeSachs	Mala
ColorBlack	MakeLoctite
TypeNUV45X230HA	Prevost number680039
Ext. Diam	
Collapsed length	Sway bar bushing (Front Suspension)
Extended length	
Prevost number630254	MakePrevost
Delay and the month of sale along the sale and	Prevost number630020
Drive and tag axle shock absorbers	Sway bar link
MakeSachs	
ColorBlack	MakeTennaco Automotive
TypeN45X225HA	Prevost number630230
Ext. Diam 75 mm	
Collapsed length15.51" (394 mm)	Shock absorber bushings
Extended length24.37" (619 mm)	onoun absorber businings
Prevost number630253	MakeMonroe
	Prevost number630062

Air regulator

Make	Norgren
Recommended pressure sett 90) psi (621 kPa)
Prevost number	641352

PA1580 **47**

SECTION 22: HEATING AND AIR CONDITIONING

CONTENTS

1. H	EATING AND AIR CONDITIONING	4
2 Δ	IR CIRCULATION WITH CENTRAL HVAC SYSTEM	2
2.1 2.2	Driver's AreaPassengers' Area	
3. C	ENTRAL HVAC SYSTEM OPERATION	5
3.1	DRIVER'S SECTION OPERATION	Ę
3.2	Passengers' Section Operation	
4 H	VAC UNIT MAINTENANCE	7
4.1 4.2	COIL CLEANING	
	Passengers' Section Air Filters	
4.3 4.4	OVERHEAD COMPARTMENT FAN AIR FILTER	
5. H	VAC SYSTEM PARTICULARITIES, TESTING AND TROUBLESHOOTING	g
5.1	HVAC SYSTEM AND TEST MODE FOR SWITCHES AND SENSORS	Ç
5.2	HVAC SYSTEM AND TEST MODE FOR ELECTRIC MOTORS	
5.3	Particularities	. 10
5.4	HVAC SYSTEM TROUBLESHOOTING	. 11
6 (ENTRAL AIR CONDITIONING SYSTEM	15
0. C		
6.1	A/C cycle	
6.2	REFRIGERANT	
	2.1 Procurement	
	2.2 Precautions in Handling Refrigerant	
	2.3 Treatment in Case of Injury	
	2.4 Precautions in Handling Refrigerant Lines	
6.3 6.4	Pumping DownAdding Refrigerant (Vapor State)	
6.5	EVACUATING SYSTEM	
	5.1 Double Sweep Evacuation Procedure	
6.6	CHARGING SYSTEM	
6.7	REFRIGERANT SYSTEM CLEAN-OUT AFTER COMPRESSOR FAILURE	
	7.1 Determining Severity of Failure	
	7.2 Clean-out after Minor Compressor Failure	
6.	7.3 Clean-out After Major Compressor Failure	
7 C	ENTRAL A/C SYSTEM COMPONENTS	20
7.1	Compressor (Central System)	
	,	
	1.2 Belt Tension Adjustment	
	1.4 Longitudinal Compressor Alignment	
	1.5 Horizontal Compressor Alignment	
	1.6 Vertical Compressor Alignment	
	1.7 Compressor Maintenance	
	1.8 Troubleshooting Guide	
7.2	Magnetic Clutch	
7.3	EVAPORATOR MOTOR	. 23
	3.1 Removal	. 23
7	3.2 Installation	. 23

Section 22: HEATING AND AIR CONDITIONING

7.4	0	
	CONDENSER	
7.4		
	4.2 Condenser Fan Motor Removal	
7.5	RECEIVER TANK	
7.6	FILTER DRYER	
	6.1 Replacement	
	5.2 Moisture Indicator	25
7.7		
	7.1 Manual Bypass	
7.7	7.2 Coil Replacement	
	7.3 Valve Disassembly	
7.7	,	
7.8	Expansion Valve	
	3.1 Passenger's Section HVAC Unit	27
7.8	3.2 Driver's HVAC Unit	
7.9	TORCH BRAZING	29
7.10	TROUBLESHOOTING	30
7.1	10.1 Expansion Valve	30
7.1	10.2 A/C	31
7.11	TEMPERATURES & PRESSURES	33
7.12	LEAK TESTING	34
	ENTRAL HEATING SYSTEM	20
3. CE		
8.1	DRAINING HEATING SYSTEM	36
8.2	FILLING HEATING SYSTEM	37
8.3	BLEEDING HEATING SYSTEM	
8.4	SOLDERING	
8.5	DRIVER'S HOT WATER PNEUMATIC VALVE ASSEMBLY	
8.6	CENTRAL HOT WATER PNEUMATIC VALVE ASSEMBLY	39
8.6 8.7	CENTRAL HOT WATER PNEUMATIC VALVE ASSEMBLY	39
8.7	WATER RECIRCULATING PUMP	40
8.7	CENTRAL HOT WATER PNEUMATIC VALVE ASSEMBLY	40
8.7	WATER RECIRCULATING PUMP	40
8.7 9. SP	WATER RECIRCULATING PUMP	40
8.7 9. SP	WATER RECIRCULATING PUMP	40
8.7 9. SP	WATER RECIRCULATING PUMP PECIFICATIONS STRATIONS	4(
8.7 9. SP LLUS FIGURE 1	WATER RECIRCULATING PUMP PECIFICATIONS STRATIONS 1: DRIVER'S AIR CIRCULATION	40 42
8.7 9. SP LLUS FIGURE 1 FIGURE 2	WATER RECIRCULATING PUMP PECIFICATIONS 1: DRIVER'S AIR CIRCULATION 2: PASSENGERS' AREA RECIRCULATION DAMPER	40 42
8.7 9. SP ILLUS FIGURE 1 FIGURE 2 FIGURE 3	WATER RECIRCULATING PUMP PECIFICATIONS 1: DRIVER'S AIR CIRCULATION	4042
8.7 9. SP LLUS Figure 1 Figure 2 Figure 3 Figure 4	WATER RECIRCULATING PUMP PECIFICATIONS 1: DRIVER'S AIR CIRCULATION	40 42
8.7 D. SP FIGURE 1 FIGURE 2 FIGURE 3 FIGURE 5 FIGURE 5	WATER RECIRCULATING PUMP PECIFICATIONS 1: DRIVER'S AIR CIRCULATION	40 42
8.7 D. SP FIGURE 1 FIGURE 2 FIGURE 4 FIGURE 5 FIGURE 6	WATER RECIRCULATING PUMP PECIFICATIONS 1: DRIVER'S AIR CIRCULATION 2: PASSENGERS' AREA RECIRCULATION DAMPER 3: CENTRAL HVAC SYSTEM AIR CIRCULATION 4: PASSENGERS OVERHEAD COMPARTMENT VENTILATION SYSTEM 5: CENTRAL HVAC SYSTEM CONTROL UNIT 6: THERMISTOR SENSOR.	40 42
8.7 SP FIGURE 1 FIGURE 2 FIGURE 3 FIGURE 5 FIGURE 6 FIGURE 7	WATER RECIRCULATING PUMP PECIFICATIONS 1: DRIVER'S AIR CIRCULATION	40 42
8.7 D. SP FIGURE 1 FIGURE 2 FIGURE 5 FIGURE 6 FIGURE 8 FIGURE 8 FIGURE 8	WATER RECIRCULATING PUMP PECIFICATIONS 1: DRIVER'S AIR CIRCULATION 2: PASSENGERS' AREA RECIRCULATION DAMPER 3: CENTRAL HVAC SYSTEM AIR CIRCULATION 4: PASSENGERS OVERHEAD COMPARTMENT VENTILATION SYSTEM 5: CENTRAL HVAC SYSTEM CONTROL UNIT 6: THERMISTOR SENSOR. 7: EVAPORATOR COMPARTMENT 8: CONDENSER COMPARTMENT 9: A/C JUNCTION BOX	404040
8.7 D. SP FIGURE 1 FIGURE 2 FIGURE 5 FIGURE 6 FIGURE 8 FIGURE 8 FIGURE 8	WATER RECIRCULATING PUMP PECIFICATIONS 1: DRIVER'S AIR CIRCULATION 2: PASSENGERS' AREA RECIRCULATION DAMPER 3: CENTRAL HVAC SYSTEM AIR CIRCULATION 4: PASSENGERS OVERHEAD COMPARTMENT VENTILATION SYSTEM 5: CENTRAL HVAC SYSTEM CONTROL UNIT 6: THERMISTOR SENSOR 7: EVAPORATOR COMPARTMENT 8: CONDENSER COMPARTMENT	404040
8.7 D. SP FIGURE 1 FIGURE 2 FIGURE 5 FIGURE 6 FIGURE 8 FIGURE 9 FIGURE 1 FIGURE 1	WATER RECIRCULATING PUMP PECIFICATIONS 1: DRIVER'S AIR CIRCULATION 2: PASSENGERS' AREA RECIRCULATION DAMPER 3: CENTRAL HVAC SYSTEM AIR CIRCULATION 4: PASSENGERS OVERHEAD COMPARTMENT VENTILATION SYSTEM 5: CENTRAL HVAC SYSTEM CONTROL UNIT 6: THERMISTOR SENSOR. 7: EVAPORATOR COMPARTMENT 8: CONDENSER COMPARTMENT 9: A/C JUNCTION BOX 10: DRIVER'S HVAC UNIT COIL ACCESS PANEL 11: EVAPORATOR COIL ACCESS PANEL 11: EVAPORATOR COIL ACCESS PANEL	40 42
8.7 D. SP FIGURE 1 FIGURE 2 FIGURE 5 FIGURE 6 FIGURE 6 FIGURE 7 FIGURE 1 FIGURE 1	WATER RECIRCULATING PUMP PECIFICATIONS 1: DRIVER'S AIR CIRCULATION 2: PASSENGERS' AREA RECIRCULATION DAMPER 3: CENTRAL HVAC SYSTEM AIR CIRCULATION 4: PASSENGERS OVERHEAD COMPARTMENT VENTILATION SYSTEM 5: CENTRAL HVAC SYSTEM CONTROL UNIT 6: THERMISTOR SENSOR 7: EVAPORATOR COMPARTMENT 8: CONDENSER COMPARTMENT 9: A/C JUNCTION BOX 10: DRIVER'S HVAC UNIT COIL ACCESS PANEL 11: EVAPORATOR COIL ACCESS PANEL 11: EVAPORATOR COIL ACCESS PANEL 12: EVAPORATOR COIL CLEANING	4(42
8.7 D. SP ILLUS FIGURE 1 FIGURE 2 FIGURE 5 FIGURE 5 FIGURE 6 FIGURE 1 FIGURE 1 FIGURE 1	WATER RECIRCULATING PUMP PECIFICATIONS 1: DRIVER'S AIR CIRCULATION	40 42
8.7 P. SP FIGURE 1 FIGURE 2 FIGURE 5 FIGURE 5 FIGURE 6 FIGURE 1 FIGURE 1 FIGURE 1 FIGURE 1	WATER RECIRCULATING PUMP PECIFICATIONS 1: DRIVER'S AIR CIRCULATION 2: PASSENGERS' AREA RECIRCULATION DAMPER 3: CENTRAL HVAC SYSTEM AIR CIRCULATION. 4: PASSENGERS OVERHEAD COMPARTMENT VENTILATION SYSTEM 5: CENTRAL HVAC SYSTEM CONTROL UNIT 6: THERMISTOR SENSOR. 7: EVAPORATOR COMPARTMENT 8: CONDENSER COMPARTMENT 9: A/C JUNCTION BOX 10: DRIVER'S HVAC UNIT COIL ACCESS PANEL 11: EVAPORATOR COIL ACCESS PANEL 11: EVAPORATOR COIL ACCESS PANEL 12: EVAPORATOR COIL CLEANING 13: CONDENSER COMPARTMENT 14: DRIVER'S SECTION ACCESS GRILL	4(42
8.7 D. SP FIGURE 1 FIGURE 2 FIGURE 5 FIGURE 5 FIGURE 6 FIGURE 1 FIGURE 1 FIGURE 1 FIGURE 1 FIGURE 1	WATER RECIRCULATING PUMP PECIFICATIONS 1: DRIVER'S AIR CIRCULATION 2: PASSENGERS' AREA RECIRCULATION DAMPER 3: CENTRAL HVAC SYSTEM AIR CIRCULATION 4: PASSENGERS OVERHEAD COMPARTMENT VENTILATION SYSTEM 5: CENTRAL HVAC SYSTEM CONTROL UNIT 6: THERMISTOR SENSOR 7: EVAPORATOR COMPARTMENT 8: CONDENSER COMPARTMENT 9: A/C JUNCTION BOX 10: DRIVER'S HVAC UNIT COIL ACCESS PANEL 11: EVAPORATOR COIL ACCESS PANEL 11: EVAPORATOR COIL ACCESS PANEL 11: EVAPORATOR COIL CLEANING 13: CONDENSER COMPARTMENT 14: DRIVER'S SECTION ACCESS GRILL 15: DRIVER'S SECTION AIR FILTERS.	4(42
8.7 9. SP FIGURE 1 FIGURE 2 FIGURE 5 FIGURE 6 FIGURE 1 FIGURE 1 FIGURE 1 FIGURE 1 FIGURE 1 FIGURE 1	WATER RECIRCULATING PUMP PECIFICATIONS 1: DRIVER'S AIR CIRCULATION 2: PASSENGERS' AREA RECIRCULATION DAMPER 3: CENTRAL HVAC SYSTEM AIR CIRCULATION 4: PASSENGERS OVERHEAD COMPARTMENT VENTILATION SYSTEM 5: CENTRAL HVAC SYSTEM CONTROL UNIT 6: THERMISTOR SENSOR. 7: EVAPORATOR COMPARTMENT 8: CONDENSER COMPARTMENT 8: CONDENSER COMPARTMENT 9: A/C JUNCTION BOX 10: DRIVER'S HVAC UNIT COIL ACCESS PANEL 11: EVAPORATOR COIL CLEANING 113: CONDENSER COMPARTMENT 14: DRIVER'S SECTION AIR FILTERS. 16: PASSENGERS' SECTION AIR FILTERS. 16: PASSENGERS' SECTION AIR FILTERS.	4(42
8.7 9. SP FIGURE 1 FIGURE 2 FIGURE 5 FIGURE 6 FIGURE 7 FIGURE 1 FIGURE 1 FIGURE 1 FIGURE 1 FIGURE 1 FIGURE 1	WATER RECIRCULATING PUMP PECIFICATIONS 1: DRIVER'S AIR CIRCULATION 2: PASSENGERS' AREA RECIRCULATION DAMPER 3: CENTRAL HVAC SYSTEM AIR CIRCULATION. 4: PASSENGERS OVERHEAD COMPARTMENT VENTILATION SYSTEM 5: CENTRAL HVAC SYSTEM CONTROL UNIT 6: THERMISTOR SENSOR 7: EVAPORATOR COMPARTMENT 8: CONDENSER COMPARTMENT 9: A/C JUNCTION BOX 10: DRIVER'S HVAC UNIT COIL ACCESS PANEL 11: EVAPORATOR COIL ACCESS PANEL (TYPICAL) 12: EVAPORATOR COIL CILANING 13: CONDENSER COMPARTMENT 14: DRIVER'S SECTION ACCESS GRILL 15: DRIVER'S SECTION AIR FILTERS 16: PASSENGERS' SECTION AIR FILTER 17: OVERHEAD COMPARTMENT FAN AIR FILTER	4(42
8.7 9. SP FIGURE 1 FIGURE 2 FIGURE 5 FIGURE 6 FIGURE 1	WATER RECIRCULATING PUMP PECIFICATIONS 1: DRIVER'S AIR CIRCULATION	4(42
8.7 9. SP FIGURE 1 FIGURE 2 FIGURE 5 FIGURE 6 FIGURE 1	WATER RECIRCULATING PUMP PECIFICATIONS 1: DRIVER'S AIR CIRCULATION 2: PASSENGERS' AREA RECIRCULATION DAMPER 3: CENTRAL HVAC SYSTEM AIR CIRCULATION. 4: PASSENGERS OVERHEAD COMPARTMENT VENTILATION SYSTEM 5: CENTRAL HVAC SYSTEM CONTROL UNIT 6: THERMISTOR SENSOR 7: EVAPORATOR COMPARTMENT 8: CONDENSER COMPARTMENT 9: A/C JUNCTION BOX 10: DRIVER'S HVAC UNIT COIL ACCESS PANEL 11: EVAPORATOR COIL ACCESS PANEL (TYPICAL) 12: EVAPORATOR COIL CILANING 13: CONDENSER COMPARTMENT 14: DRIVER'S SECTION ACCESS GRILL 15: DRIVER'S SECTION AIR FILTERS 16: PASSENGERS' SECTION AIR FILTER 17: OVERHEAD COMPARTMENT FAN AIR FILTER	4(4242
8.7 9. SP FIGURE 1 FIGURE 2 FIGURE 5 FIGURE 6 FIGURE 1 FIGURE 1	WATER RECIRCULATING PUMP PECIFICATIONS 1: DRIVER'S AIR CIRCULATION 2: PASSENGERS' AREA RECIRCULATION DAMPER 3: CENTRAL HVAC SYSTEM AIR CIRCULATION. 4: PASSENGERS OVERHEAD COMPARTMENT VENTILATION SYSTEM 5: CENTRAL HVAC SYSTEM CONTROL UNIT 6: THERMISTOR SENSOR. 7: EVAPORATOR COMPARTMENT 8: CONDENSER COMPARTMENT 9: A/C JUNCTION BOX 10: DRIVER'S HVAC UNIT COIL ACCESS PANEL 11: EVAPORATOR COIL ACCESS PANEL 11: EVAPORATOR COIL ACCESS PANEL 11: EVAPORATOR COIL CLEANING. 13: CONDENSER COMPARTMENT 14: DRIVER'S SECTION ACCESS GRILL 15: DRIVER'S SECTION AIR FILTERS. 16: PASSENGERS' SECTION AIR FILTERS. 17: OVERHEAD COMPARTMENT FAN AIR FILTER 17: OVERHEAD COMPARTMENT FAN AIR FILTER 18: REFRIGERANT CIRCUIT (CENTRAL SYSTEM) 19: DOUBLE-SWEEP EVACUATION SET-UP	

Section 22: HEATING AND AIR CONDITIONING

FIGURE 23: A/C COMPRESSOR BELT ADJUSTMENT.	21
FIGURE 24: COMPRESSOR ALIGNMENT	21
FIGURE 25: COMPRESSOR ALIGNMENT	22
FIGURE 26: EVAPORATOR COMPARTMENT	23
FIGURE 27: EVAPORATOR MOTOR ASSY FIXING BOLTS	23
FIGURE 28: EVAPORATOR MOTOR ASSEMBLY	24
FIGURE 29: CONDENSER FAN MOTOR	
FIGURE 30: A/C CONDENSER COMPARTMENT	24
FIGURE 31: DRIVER'S EVAPORATOR LIQUID SOLENOID VALVE	26
FIGURE 32: REFRIGERANT SOLENOID VALVE	27
FIGURE 33: EXPANSION VALVE	27
FIGURE 34: SUPERHEAT ADJUSTMENT INSTALLATION	28
FIGURE 35: HIGH & LOW SWING TEMPERATURE AT REMOTE BULB	28
FIGURE 36: CENTRAL HEATING SYSTEM COMPONENTS	35
FIGURE 37: CEILING OF THE SPARE WHEEL COMPARTMENT	36
FIGURE 38: DRIVER'S HVAC UNIT	36
FIGURE 39: HEATER LINE SHUT-OFF VALVES	37
FIGURE 40: EVAPORATOR COMPARTMENT	37
FIGURE 41: DRIVER'S HOT WATER PNEUMATIC VALVE ASSEMBLY	38
FIGURE 42: PNEUMATIC WATER VALVE	38
FIGURE 43: CENTRAL HOT WATER PNEUMATIC VALVE ASSEMBLY	39
FIGURE 44: PNEUMATIC WATER VALVE	40
FIGURE 45: PUMP LOCATION (CENTRAL A/C)	40

1. HEATING AND AIR CONDITIONING

The interior of the vehicle is pressurized by its Heating, Ventilation, Air Conditioning (HVAC) system. The vehicle is equipped with a Central HVAC System; air flow and controls divide the vehicle in two areas: driver's area and passengers' area. The interior of the vehicle should always be slightly pressurized to prevent dust and moisture from entering vehicle. Each section has its own fresh air, returning air and discharge air ducting. The exhaust is mainly done through the rear ventilator and through normal air-tightness losses.

2. AIR CIRCULATION WITH CENTRAL HVAC SYSTEM

2.1 DRIVER'S AREA

Fresh air is taken from a plenum underneath the front service compartment and enters the mixing box through an ON/OFF damper. Return air is taken through the base of the dashboard panel utility compartments into the mixing box. Mixed air goes through cooling and heating coils, fans and discharge ducts.

Both right and left discharge ducts defrost one half of the windshield. The driver can also divert some air flow to the console, from which he can direct air to his knees and/or upper body with adjustable HVAC air registers and to his feet with the appropriate button (see Fig. 1 and Operator's manual).

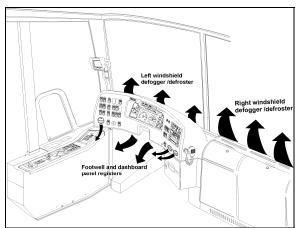


FIGURE 1: DRIVER'S AIR CIRCULATION

X3-45 coaches are also equipped with a windshield upper section de-icing system. Also, one additional air register is located in the driver's area but supplied by the passengers' air ducting system. It is installed in the stepwell for step de-icing.

2.2 PASSENGERS' AREA

Fresh air enters the vehicle on the L.H. side, through the recirculation damper located inside the evaporator compartment door (Fig. 2). The damper can be fully opened for normal operation or closed for extreme weather or highly polluted areas (Refer to the Operator's Manual for more details). The recirculation REC button is located on the HVAC control unit. Press down the button to partially close the fresh air damper. Return air is drawn from inside the vehicle through the register duct located on L.H. side of vehicle (Fig. 3).

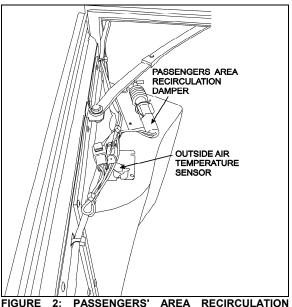


FIGURE 2: PASSENGERS' AREA RECIRCULATION DAMPER 22302

A double blower fan unit, which is activated by the evaporator motor, draws mixed air through an air filter, cooling and heating coils, then forces this air in the ventilation ducts along the walls, and finally exhausts it just below side windows.

X3-45 coaches are also equipped with an overhead compartment ventilation system, a

three-position rocker switch (0FF - 1st speed - 2nd speed) located on R.H. dashboard panel controls the speed of both fans. Return air is drawn just below the middle side windows through an air filter into the overhead compartment fan; discharge air is fed to the rotating registers through the ventilation duct (Fig. 4).

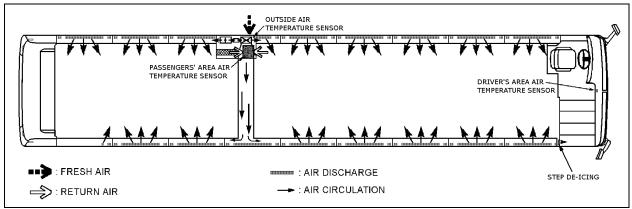


FIGURE 3: CENTRAL HVAC SYSTEM AIR CIRCULATION

22308

The overhead compartment air registers are used to control air flow for the passenger seats. One register per seat direct air flow by pointing or rotating register. Open or close register to adjust air flow.

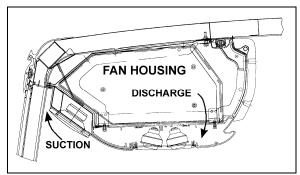


FIGURE 4: PASSENGERS OVERHEAD COMPARTMENT VENTILATION SYSTEM 22211

3. CENTRAL HVAC SYSTEM OPERATION

To operate the air conditioning system when vehicle is stationary, engine should run at fast idle. During operation of the air conditioning system, windows should be kept closed and door not left open longer than necessary. In order to prevent battery discharge, HVAC system will not operate if vehicle charging system is not working properly.

3.1 DRIVER'S SECTION OPERATION

The temperature control in the driver's area is provided directly by the L.H. portion of the HVAC control unit mounted on the R.H. dashboard panel (Fig. 5).

The driver's HVAC section piping is paralleled with the passengers HVAC section piping. Both sections use the same refrigerant and coolant, and are linked to the same condenser and compressor, even if they are individually

controlled. It requires the passengers HVAC section to engage the A/C compressor magnetic clutch. Consequently, the driver's section cannot be operated in the A/C mode alone.

NOTE

The driver's HVAC section turns on automatically at starting of the engine and uses the settings that were kept in memory before turning off of the system.

The A/C compressor starts automatically when the two following conditions are satisfied:

- 1. The outside temperature is above 32°F (0°C).
- 2. The passenger's area temperature has reached 7°F (4°C) under the set point.

Using the Up/Down type switch sets the fan speed and the speed chosen is illustrated on the window display.

NOTE

Upon starting, if the outside temperature is above 32°F (0°C) and then drops below 32°F (0°C), the compressor will keep running up to a temperature of 15°F (-9°C) to prevent condensation from forming on the windows.


NOTE

To perform a test of the driver's section windshield defroster, it is possible to run the system without running the engine.

The following 2% error chart and table can be used to troubleshoot the driver's area air temperature sensor and the outside air temperature sensor.

NOTE

The driver's area air temperature sensor is located behind the grill of the R.H. side console (Refer to fig.14).

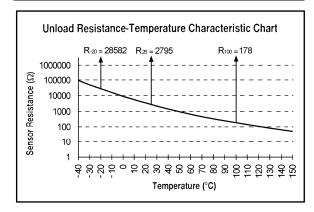

Temp °C	Temp °F	Resistance Ohms
-40	-40	100865
-35	-31	72437
-30	-22	52594
-25	-13	38583
-20	-4	28582
-15	5	21371
-10	14	16120
-5	23	12261
0	32	9399
5	41	7263
10	50	5658
15	59	4441
20	68	3511
25	77	2795
30	86	2240
35	95	1806
40	104	1465
45	113	1195
50	122	980
55	131	808
60	140	670
65	149	559
70	158	468
75	167	394
80	176	333
85	185	283
90	194	241
95	203	207
100	212	178
105	221	153
110	230	133
115	239	115
120	248	100
125	257	88
130	266	77
135	275	68
140	284	60
145	293	53
150	302	47

3.2 PASSENGERS' SECTION OPERATION

The passenger's section has a preset temperature of 68°F (20°C).

 


FIGURE 5: CENTRAL HVAC SYSTEM CONTROL UNIT

Temperature control is provided in conjunction with a thermistor sensor inside register duct, located on L.H. side of vehicle (Figs. 3 & 6).

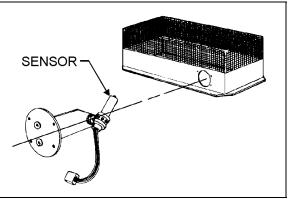


FIGURE 6: THERMISTOR SENSOR

The flow of water to the vehicle's main heater core is controlled by a pneumatic water valve which varies the cycling rate depending on selected temperature. A red LED, located on HVAC control unit, illuminates when heating mode is selected. A green LED illuminates when compressor clutch is in operation.

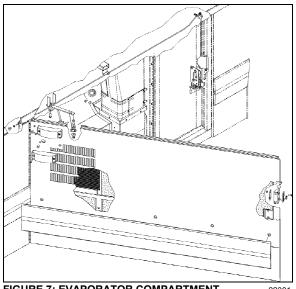


FIGURE 7: EVAPORATOR COMPARTMENT

22301

The evaporator fan motor, located in the evaporator compartment, is protected by a 90 amps, manually-resettable (CB3) circuit breaker located on the rear junction panel and is accessible from the engine compartment curbside door, on R.H. side of the vehicle (refer to Section 06, "Electrical System" in this manual for details).

The condenser coil mounted on the opposite side of the evaporator is ventilated by four axial fans. The fan motors are protected by a manually-resettable 70 amp circuit breaker (CB7) mounted on the rear junction panel and accessible from the engine compartment curbside door.

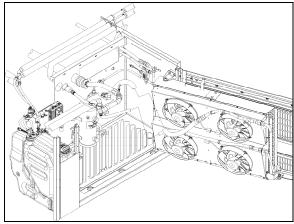


FIGURE 8: CONDENSER COMPARTMENT

22299

Furthermore, the following relays, diodes and multiplex module are located in the evaporator compartment (Fig. 9). They are mounted in the HVAC junction box located inside the evaporator compartment door.

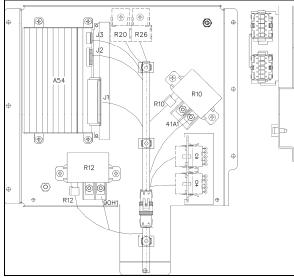


FIGURE 9: A/C JUNCTION BOX

A/C Junction Box				
	Multiplex Module			
A54	I/O-B			
	Relays			
R10	R10 Condenser Fan Sp. 2			
R12	Evaporator Fan			
R20	R20 Water Pump Relay			
	Diodes			
D9	D9 HVAC			
D11	Pass. Liq. Sol.	D17	Lugg. 5 th Compt	
D19	Lugg. 2 nd Compt	D20	Lugg. 1 st Compt	
D25	Evap. Fan	D30	Water Pump	
D73	Opt.	D80	Opt.	

4. HVAC UNIT MAINTENANCE

No special maintenance is required on the passengers and driver's HVAC units, with the exception of cleaning their respective coils and air filters, plus periodic inspection for broken drains, hoses and charging of system.



MAINTENANCE

Squeeze rubber discharge tubes located underneath the appropriate compartment to eliminate the accumulated water and dirt every three months.

4.1 COIL CLEANING

Check the external surface of the coil at regular intervals for dirt or any foreign matter.



MAINTENANCE

For the driver's HVAC unit, remove the grill and the access panels and back flush the coil every 12,500 miles (20 000 km) or once a year, whichever comes first

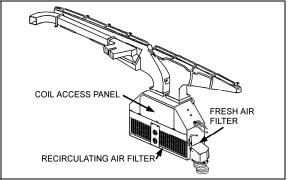


FIGURE 10: DRIVER'S HVAC UNIT COIL ACCESS PANEL



MAINTENANCE

For the passengers' section evaporator coil, remove the access panel and back flush the coil every 12,500 miles (20 000 km) or once a year, whichever comes first

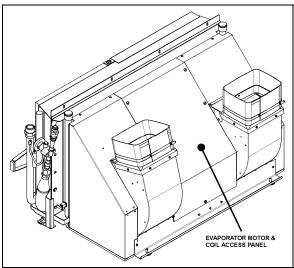


FIGURE 11: EVAPORATOR COIL ACCESS PANEL (TYPICAL) 22309

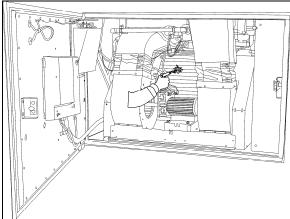


FIGURE 12: EVAPORATOR COIL CLEANING

22373



MAINTENANCE

For the condenser coil, back flush the coil (Fig. 13) every 6,250 miles (10 000 km) or twice a year, whichever comes first.



CAUTION

Use a water jet or water mixed with low air pressure to clean the coil.



CAUTION

Direct the pressure straight through the coil to prevent bending of fins and do not use extremely high pressure. Do not use hot water, steam or caustic soap.

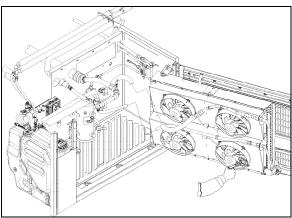


FIGURE 13: CONDENSER COMPARTMENT

22311

4.2 DRIVER'S SECTION AIR FILTERS

The driver HVAC system is located behind the dashboard's R.H. side lateral plastic panel. To gain access to the A/C filters, unscrew the R.H. lateral console's grill located at the top step of the entrance door steps. Slide out the recirculating air and fresh air filters.



MAINTENANCE

Back flush filters with water, then dry with air every 12,500 miles (20 000 km) or once a year, whichever comes first (Fig. 14 & 15).

NOTE

If the windshield is continuously fogged, check that the driver's air filter is not clogged.

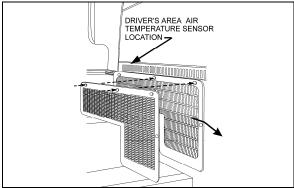


FIGURE 14: DRIVER'S SECTION ACCESS GRILL

22312

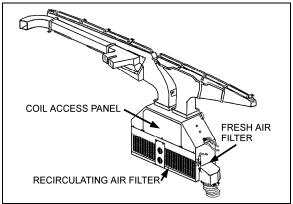


FIGURE 15: DRIVER'S SECTION AIR FILTERS

PASSENGERS' SECTION AIR FILTER 4.3

The passengers' section air filter is located in the evaporator compartment. To access the filter, open baggage compartment door located forward of the evaporator compartment (L.H. side). Open access panel by turning the three screws of panel 1/4 of a turn, unsnap both fasteners on top of filter, and slide out filter (Fig. 16).



MAINTENANCE

Back flush filter with water or soapy water, then dry with air every 12,500 miles (20 000 km) or once a year, whichever comes first.

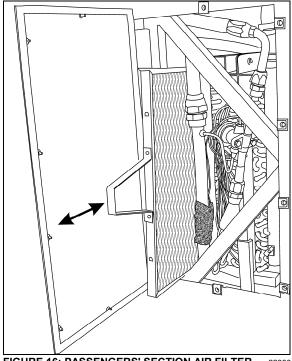


FIGURE 16: PASSENGERS' SECTION AIR FILTER

CAUTION

Do not use high pressure water jet to avoid damaging filter. Be sure not to reverse filter upon installation.

OVERHEAD COMPARTMENT FAN AIR

The air filters are accessible from inside the overhead compartments.



MAINTENANCE

Slide out filters, back flush with water then dry with air and replace. This procedure should be done every 12,500 miles (20,000 km) or once a year, whichever come first.

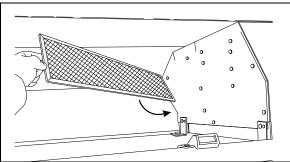


FIGURE 17: OVERHEAD COMPARTMENT FAN AIR **FILTER**

5. HVAC PARTICULARITIES, SYSTEM **TESTING AND TROUBLESHOOTING**

Before undertaking any troubleshooting on the HVAC system, study the appropriate wiring diagrams to get a complete understanding of the HVAC components circuitry, read understand section 06: ELECTRICAL of this manual under "Troubleshooting And Testing The Multiplex Vehicles" and "Test Mode For Switches And Sensors". The information included in these paragraphs is necessary for troubleshooting the HVAC system on Multiplex vehicles.

HVAC SYSTEM AND TEST MODE FOR 5.1 SWITCHES AND SENSORS

When in switch/sensor test mode (see Section 06: ELECTRICAL for complete information), the A/C compressor HI and LO pressure values are displayed one after the other instead of the outside temperature in the telltale panel LCD

display. This feature can be used when the vehicle is traveling to check the A/C compressor pressure values.

NOTE

When starting the A/C compressor wait 5 seconds before checking pressures in order to give the system a chance to build its pressure. During the first 5 seconds after startup, the compressor is active on 6 cylinders and the A/C valve is open regardless of the pressure readings.

In test mode, with the parking brake applied and the passenger set point set to a value higher than 64°F (18°C), the hot water circulating pump is not set to OFF as it would normally do when the outside temperature gets above 50°F (10°C).

This feature allows verification of the pump when inside a garage. This is also useful when working on the heating system to remove air pockets trapped in the system.

When performing an A/C cooling test and having the water pump shut off in switch/sensor test mode is required, just set the passenger set point temperature to the minimum 64°F (18°C) to shut off the pump.

5.2 HVAC SYSTEM AND TEST MODE FOR ELECTRIC MOTORS

The test mode allows testing the motors and electric contactors without the need to have the engine running (see Section 06: ELECTRICAL under "TEST MODE FOR ELECTRICAL MOTORS" for complete information).

Use this test mode for testing of the condenser motors, the A/C compressor clutch activation, left and right unloaders, evaporator motor, water pump, hot water solenoid valve and overhead compartment air register fan.

5.3 PARTICULARITIES

Conditions for engaging the 2 nd speed on the evaporator motor (cooling demand).	The 2 nd speed engages if the passenger's area temperature is 1 degree above the set point and it revert to speed 1 if the temperature gets equal or below the set point.
Conditions for hot water recirculating pump activation (heating demand).	The pump turns to OFF if the outside temperature is above 50°F (10°C), when there is less demand for heating. Note: To test a working pump, it is possible to keep it active even if the outside temperature is above 50°F (10°C). See paragraph 7.2 HVAC SYSTEM AND TEST MODE FOR ELECTRIC MOTORS.
The compressor unloaders are	2 left compressor cylinders:
working based on pressure and also on the difference between the passenger's area temperature and the set point.	Stop if: passenger's area temperature is at less than 0.4°C degree above the set point or if the compressor output is above 280 psi, or if the compressor input is below 26 psi.
temperature and the set point.	Restart if: passenger's area temperature is 0.9°C or more above the set point and the compressor pressure output is less than 220 psi and the compressor pressure input is above 34 psi.
	2 right compressor cylinders:
	Stop if: passenger's area temperature is at less than 0.2°C above the set point or if the compressor input falls below 23 psi.
	Restart if: passenger's area temperature is 0.7°C or more above the set point and the compressor input pressure is above 32 psi.
The A/C deactivation pressure is 320 psi.	In case of high pressure, the analog pressure sensor connected to the Multiplex module deactivates the compressor.
	There is also a « Pressure switch » adjusted to 350 PSI that acts to stop the compressor in the instance that the Multiplex module fails.

5.4 HVAC SYSTEM TROUBLESHOOTING

Problem/Symptom	Probable Causes	Actions
Defroster fan not functioning	Module A47 is not powered or is faulty	 Check the Diagnostics menu of the Driver Information Display (DID). Select Fault Diagnostics and Electrical System. The message "No Response ModA47, Active" indicates a power problem on the module. (A CAN network problem would show the same message but doesn't produce these symptoms). Check / reset circuit breaker CB6 Check / replace fuse F5 Check / replace relay R18 Probe gray connector on module to see if it is powered. Use the air release valves on the dashboard and in the front service
		compartment to lock / unlock the door
HVAC condenser fans not functioning in speed 1	Circuit breaker CB7 was manually tripped and not reset Seized bearing Faulty brushes or bad wiring	Check / reset circuit breaker CB7
HVAC condenser fans not functioning in speed 1	Module A54 is not powered or is faulty	1. Check the Diagnostics menu of Driver Information Display (DID). Select Fault Diagnostics and Electrical System. The message "No Response ModA54, Active" indicates a power problem on the module. (A CAN network problem would show the same message but doesn't produce this symptom).
		2. Check / reset circuit breaker CB5
		3. Check / replace fuse F67, F68
		4. Probe gray connector on module to see if it is powered.
HVAC condenser fans not functioning in speed 2	Circuit breaker CB7 was manually tripped and not reset Seized bearing Faulty brushes Bad wiring	Check / reset circuit breaker CB7
Defroster fan is functioning but no heat or cooling available in the driver's area	Module A46 is not powered or is faulty Faulty speed control Bad wiring	Check the Diagnostics menu of Driver Information Display (DID). Select Fault Diagnostics and Electrical System. The message "No Response ModA46, Active" indicates a power problem on the module. (A CAN network problem would show the same message but doesn't produce these symptoms). 2. Check / reset circuit breaker CB1
		3. Check / replace fuse F12 or F13
		Probe gray connector on module to see if it is powered.

Problem/Symptom	Probable Causes	Actions		
The A/C compressor clutch does not engage	Module A52 is not powered or is faulty	1.	Check the Diagnostics menu of Driver Information Display (DID). Select Fault Diagnostics and Electrical System. The message "No Response ModA52, Active" indicates a power problem on the module. (A CAN network problem would show the same message but doesn't produce this symptom).	
		2.	Check / reset circuit breaker CB5	
		3.	Check / replace fuse F65	
		4.	Probe gray connector on module to see if it is powered.	
Evaporator fan not	Circuit breaker CB3 tripped	1.	Check / reset circuit breaker CB3	
functioning	Module A54 is not powered or is faulty Faulty brushes	2.	Check the Diagnostics menu of Driver Information Display (DID). Select Fault Diagnostics and Electrical System. The message "No Response ModA54, Active" indicates a power problem on the module. (A CAN network problem would show the same message but doesn't produce this symptom).	
		3.	Check / reset circuit breaker CB5	
		4.	Check / replace fuse F67 , F68	
		5.	Probe gray connector on module to see if it is powered.	

6. CENTRAL AIR CONDITIONING SYSTEM

The schematic of Figure 18 shows the central A/C system and its components. The central system is equipped with a 6 cylinder, 05G Twin Port Carrier compressor with an air conditioning capacity of 7½ tons. The receiver tank and filter dryer are mounted inside the condenser compartment.

6.1 A/C CYCLE

Refrigeration may be defined as "the transfer of heat from a place where it is not wanted to a place where it is unobjectionable". Components required for a closed circuit refrigeration system are shown in Figure 18.

The air conditioning system used on X3-45 coaches is of the "Closed" type using "R-134a".

 The refrigerant flowing to the compressor is compressed to high pressure and reaches a temperature higher than the surrounding air. It is passed through the air-cooled fins and tubes of the condenser causing the hot, high pressure gas to be condensed into a liquid form.

- The liquid refrigerant flows to the receiver tank, then passes through a filter dryer where moisture, acids and dirt are removed and then through a moisture indicator which indicates if any moisture is present in the system.
- 3. By its own pressure, the liquid refrigerant flows through a thermal expansion valve where the pressure drop causes the refrigerant to vaporize in a vapor-liquid state at a low temperature pressure.
- 4. The cold low pressure refrigerant passes through the passengers and the driver's evaporator coils which absorbs heat from the air passing over the fins and tubes, and changes into gas. In this form, the refrigerant is drawn into the compressor to repeat the air conditioning cycle.
- The success of the air conditioning system depends on retaining the conditioned air within the vehicle. All windows and intake vents should be closed. An opening of approximately 8 in² (5162 mm²) could easily neutralize the total capacity of the system.

- 6. Other causes of inadequate cooling are dirty coils or filter. Dirt acts as insulation and is also serves as a restriction to the air flow.
- The refrigeration load is not constant and varies. It is also affected by outside temperature, relative humidity, passenger load, compressor speed, the number of stops, etc.
- 8. The compressor will load or unload depending on operating conditions.

6.2 REFRIGERANT

The A/C system of this vehicle has been designed to use Refrigerant 134a as a medium. Regardless of the brand, only R-134a must be used in this system. The chemical name for this refrigerant is Ethane, 1, 1, 1, 2-Tetrafluoro.



DANGER

Refrigerant in itself is nonflammable, but if it comes in contact with an open flame, it will decompose.

6.2.1 Procurement

Refrigerant is shipped and stored in 30 and 100 pound (13,6 and 45 kg) metal cylinders. Approximately 24 pounds (10,9 kg) are used in the central system.

It will be impossible to draw the entire refrigerant out of the cylinder. However, the use of warm water when charging the system will assure the extraction of a maximum amount of refrigerant from the cylinder.

6.2.2 Precautions in Handling Refrigerant

- Do not leave refrigerant cylinder uncapped.
- Do not subject cylinder to high temperatures, do not weld or steam clean near system or cylinder.
- 3. Do not fill cylinder completely.
- 4. Do not discharge vapor into an area where a flame is exposed.
- 5. Do not expose the eyes to liquid refrigerant.

All refrigerant cylinders are shipped with a heavy metal screw cap. The purpose of the cap is to protect the valve and safety plug from damage. It is a good practice to replace the cap after each use of the cylinder for the same reason. If the cylinder is exposed to the sun's radiant heat pressure increase resulting may cause release of the safety plug or the cylinder may burst.

For the same reason, the refrigerant cylinder should never be subjected to excessive temperature when charging a system. The refrigerant cylinder should be heated for charging purposes by placing it in 125°F (52°C) water. Never heat above 125°F (52°C) or use a blowtorch, radiator, or stove to heat the cylinder. Welding or steam cleaning on or near any refrigerant line or components of the A/C system could build up dangerous and damaging pressures in the system.

If a small cylinder is ever filled from a large one, never fill the cylinder completely. Space should always be allowed above the liquid for expansion. Weighing cylinders before and during the transfer will determine the fullness of the cylinders.



WARNING

One of the most important precautions when handling refrigerant consists in protecting the eyes. Any liquid refrigerant which may accidentally escape is approximately -40°F (-40°C). If refrigerant comes in contact with the eyes, serious injury could result. Always wear goggles to protect the eyes when opening refrigerant connections.

6.2.3 Treatment in Case of Injury

If liquid refrigerant comes in contact with the skin, treat the injury as if the skin was frost-bitten or frozen. If liquid refrigerant comes in contact with the eyes, consult an eye specialist or doctor immediately. Give the following first aid treatment:

- Do not rub the eyes. Splash eyes with cold water to gradually bring the temperature above the freezing point.
- Apply drops of sterile mineral oil (obtainable at any drugstore) in the eyes to reduce the possibility of infection. The mineral oil will also help in absorbing the refrigerant.

6.2.4 Precautions in Handling Refrigerant Lines

1. All metal tubing lines should be free of kinks, because of the resulting restrictions

- on the flow of refrigerant. A single kink can greatly reduced the refrigeration capacity of the entire system.
- 2. The flexible hose lines should never be allowed to come within a distance of 2-½" (6,3 cm) from the exhaust manifold.
- 3. Use only sealed lines from parts stock.
- 4. When disconnecting any fitting in the refrigeration system, the system must first be discharged of all refrigerant. However, proceed very cautiously, regardless of gauge readings. If liquid refrigerant happens to be in the line, disconnect fittings very slowly, keeping face and hands away so that no injury can occur. If pressure is noticed when fitting is loosened, allow it to bleed off very slowly.

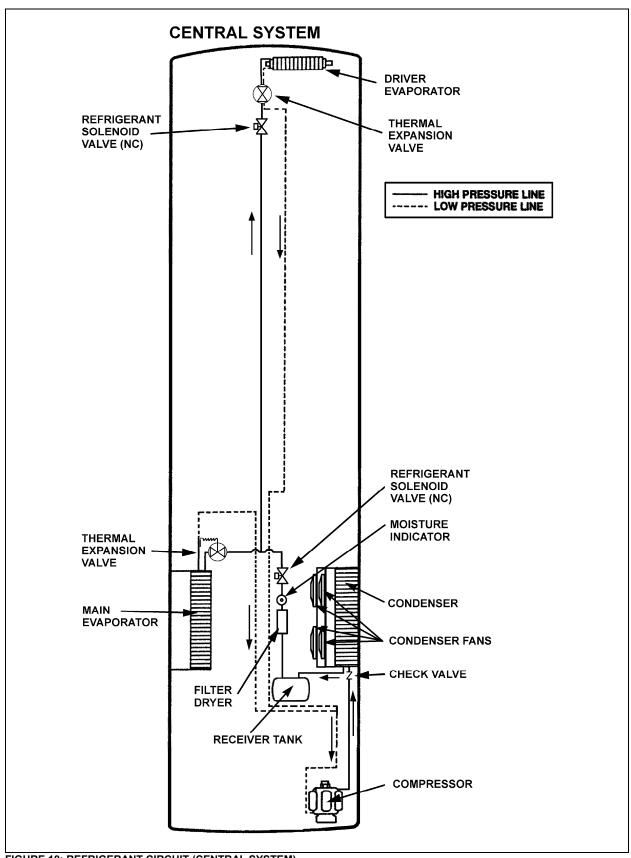


FIGURE 18: REFRIGERANT CIRCUIT (CENTRAL SYSTEM)



WARNING

Always wear safety goggles when opening refrigerant lines.

- In the event that any line is opened to the atmosphere, it should be immediately capped to prevent entrance of moisture and dirt.
- 6. The use of the proper wrenches when making connections on O-ring fittings is important. The use of improper wrenches may damage the connection. The opposing fitting should always be backed up with a wrench to prevent distortion of connection lines or components. When connecting the flexible hose connections, it is important that the swaged fitting and the flare nut, as well as the coupling to which it is attached, be held at the same time using three different wrenches to prevent turning the fitting and damaging the ground seat.
- 7. The O-rings and seats must be in perfect condition. The slightest burr or piece of dirt may cause a leak.
- 8. O-rings should be coated with refrigeration oil and installed on the line before the line is inserted into the fitting to prevent damaging the O-ring. If leaks are encountered at the couplings or connectors, no attempt should be made to correct the leaks by tightening the connections beyond the recommended torque. The O-rings are designed to seal at the specified torque and overtightening the connection does not result in a satisfactory and permanently sealed connection. The connection must be disassembled and the cause of the leak (damaged O-ring, defective lines, etc.) corrected. Use new O-ring.

6.3 PUMPING DOWN

This procedure is intended to reduce refrigerant loss, by isolating it in the compressor and the receiver tank, as well as in their connecting line, in order to carry out repairs on other sections of the air conditioning system (lines and components).

NOTE

Before attempting any repair between compressor and receiver tank, use a recovery unit to remove refrigerant from the system.



WARNING

To prevent any injury, when air conditioning system must be opened, refer to previous paragraph "PRECAUTIONS IN HANDLING REFRIGERANT".



CAUTION

The filter dryer must be changed each time a line in the system is opened.

Procedure

- Energize passengers 'section liquid solenoid valve.
- Run the system for 10 minutes, shut it OFF, then close the receiver tank outlet valve by turning it clockwise, backseat the suction service valve on the compressor, install an appropriate pressure gauge set, and turn the valve forward ¼ turn to enable a visual check of the suction pressure.
- Disconnect the "Low Pressure Switch" connector (mounted near the A/C compressor, and install a jumper wire.

NOTE

This jumper wire will allow the clutch to remain engaged after pressure drops below 15 psi (103,5 kPa).

- 4. Start the engine, press the "Driver's ON/OFF" switch then adjust (lower) temperature control + to maximum A/C.
- 5. Run the compressor until pressure reaches 1-2 psi (7-14 kPa).

NOTE

During this operation, care must be taken not to fill the receiver tank over the upper sight glass. If so, stop process immediately. Always allow refrigerant piping and units to warm up to the ambient air temperature before opening system or sweating will take place inside the lines.

Stop engine, and close compressor outlet valve by turning it clockwise until valve is properly seated.

- 7. Close compressor suction valve by turning it clockwise until it is properly seated.
- Wait until pressure gauge reaches 1 to 2 psi (7 to 14 kPa). To accelerate procedure, lightly open compressor suction valve until pressure reaches this value.

6.4 ADDING REFRIGERANT (VAPOR STATE)

Use the suction service valve on the compressor to add a small quantity of refrigerant to the system. Backseat the valve and connect a charging line from the refrigerant cylinder to the valve. Tighten connection at level of refrigerant cylinder and open tank end slightly to purge air from the charging line. Tighten the charging line at the compressor. Screw in the stem of suction valve approximately two turns. Start the engine and run at fast idle. Add sufficient refrigerant to bring the level in lower sight glass of receiver tank to mid-point. Always charge the system with the cylinder upright and the valve on top to avoid drawing liquid out of the cylinder.

6.5 EVACUATING SYSTEM

- Open both receiver valves by turning "out" (normal position).
- 2. Remove the caps from the two 90° adapters on the suction, discharge valves and connect two hoses to the vacuum.
- Place the two compressor valves, suction and discharge, in neutral position by turning each one 3 to 4 turns "in" from the "out" position.
- 4. Open the solenoid valve by energizing or manually bypass.
- 5. Start the vacuum pump. Open the large (suction) shutoff valve and close the small vacuum gauge valve.
- The pressure will drop to approximately 29 inches vacuum (14.2 psi or 97,9 kPa) (the dial gauge only gives a general idea of the absolute system pressure.
- 7. Backseat the compressor valves by turning "out" all the way.
- 8. Shut down the vacuum pump.
- 9. Remove the hoses.
- Reinstall the caps at the suction valve takeoff points.

6.5.1 Double Sweep Evacuation Procedure

- 1. Remove any remaining refrigerant from the system using a refrigerant recovery machine.
- 2. Connect the evacuation manifold, vacuum pump, hoses and micron gauge to the unit.
- 3. With the unit service valves closed (back seated) and the vacuum pump and the thermistor valves open, start the pump and draw the manifold and hoses into a very deep vacuum. Shut the vacuum pump off and see if the vacuum holds. This is to check the setup for leaks.
- 4. Midseat the system service valves.
- 5. Open the vacuum pump and the thermistor valves. Start the pump and evacuate to a system pressure of 2000 microns.
- 6. Close the vacuum pump and the thermistor valves, turn off the vacuum pump (closing the thermistor valve protect the valve from damage).
- 7. Break the vacuum with clean refrigerant (or dry nitrogen) and raise the pressure to approximately 2 PSIG. Monitor the pressure with the compound gauge.
- 8. Remove the refrigerant with the recovery machine.
- 9. Repeat steps #5 8 one time.
- After the second "sweep", change the filter dryer (if you have not yet done so) and evacuate to 500 microns.
- Evacuating the system below 500 microns on systems using the Carrier 05G compressor may risk drawing air into the system past the carbon shaft seal.
- 12. Check to insure that vacuum holds. (If the pressure continues to rise, it indicates a leak or moisture in the system).
- 13. Charge the system with the proper amount of refrigerant using recommended charging procedures.

NOTE

This method will aid in preventing unnecessary system failures by ensuring that the refrigeration system is free of contaminants.

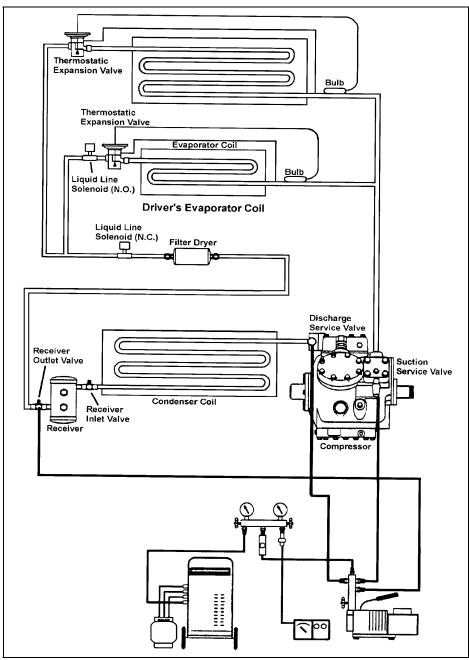


FIGURE 19: DOUBLE-SWEEP EVACUATION SET-UP

22298

6.6 CHARGING SYSTEM

When a system has been opened or if there are any questions about the air or moisture in the system, evacuate the system. Charging of an evacuated system may be accomplished by forcing liquid R-134a directly into the receiver tank. This may be accomplished by placing the refrigerant cylinder upside down on a scale with the valves at the bottom. This ensures that only liquid will enter the receiver tank.

When charging an empty system, weigh the amount of refrigerant put into the system. This will eliminate any possibility of overfilling. A nominal charge requires 24 pounds (10,9 kg).

- 1. Backseat the two compressor shutoff valves ("out").
- 2. Install the test gauges at the shutoff valves noting that the 400 psi (2758 kPa) gauge is connected to the discharge.

- 3. Turn in the two shutoff valves 3 to 4 turns.
- 4. Open the lower receiver valve by turning "out" all the way.
- 5. Backseat the upper receiver valve by turning out all the way.
- 6. Remove the cover cap from the service fitting in the top receiver valve.
- Attach a charging hose to the R-134a tank.
 Open the tank valve slightly permitting R-134a to escape thus purging the hose of air.
- 8. Connect the charging hose to the service fitting.
- 9. Open the R-134a tank valve.
- To build up pressure in the receiver tank, heat the receiver tank with a heating blanket.
- 11. Turn in the upper receiver valve several turns. The R-134a will now enter the system.
- 12. The proper charge of R-134a is 24 lbs (10.89 kg). When the scale indicates this amount of charge, backseat the receiver valve and close the R-134a tank valve.
- 13. Disconnect the charging hose. Replace the cover caps.
- 14. The system is now ready for operation.



CAUTION

The evacuation of the system must be made by authorized and qualified personnel only. Refer to local laws for R-134a recuperation.

6.7 REFRIGERANT SYSTEM CLEAN-OUT AFTER COMPRESSOR FAILURE

Although the vast majority of reciprocating refrigerant compressors manufactured today are extremely reliable, a small percentage do fail. These failures usually result in minor or extensive system contamination depending on the severity of the failure. When an open type compressor becomes damaged internally, this provokes small particles of bearings, steel, brass, copper, and aluminum and, in severe cases, carbonized oil, which could contaminate the system. To prevent repeated failures, the problem which caused the failure should be corrected, and depending upon the severity of the failure, the system should be thoroughly

cleaned out using one of the clean-out procedures mentioned.

6.7.1 Determining Severity of Failure

The severity of compressor failure can be categorized as minor or major. A failure is considered minor when the contamination is limited to the compressor with little or no system contamination. A major failure, or burnout, results in extensive system contamination as well as compressor damage. Extensive system contamination can be determined withdrawing a small sample of compressor oil and checking its color, odor and acidity. A Virginia Chemical "TKO" one step acid test kit is one of several compressor oil test kits that may be used. A high acid content would indicate a major failure or burnout. A small amount of refrigerant gas may be discharged. A characteristic burned odor would also indicate severe system contamination.

6.7.2 Clean-out after Minor Compressor Failure

- Be sure to correct the problem which caused the failure.
- 2. Change liquid line filter dryer.
- Run the unit for 2 hours on high speed cool only.
- 4. Check compressor oil level to ensure compressor is not overcharged with oil. Sometimes a significant amount of oil is pumped out of the compressor to other parts of the system when a compressor fails. This oil will return to the replacement compressor when it is started, causing an overcharge of oil in the sump of the replacement compressor. In this case, it is important that the oil level be adjusted to the proper level.
- Withdraw a sample of the compressor oil and check its color, odor, and acidity, using instructions supplied above. If the oil is contaminated, change the oil and filter dryer, and repeat the procedure until the system is clean.

6.7.3 Clean-out After Major Compressor Failure

1. Reclaim the refrigerant into a refrigerant bottle through a filter dryer to filter out contaminants.

- 2. Remove the failed compressor and repair it if possible.
- 3. Install new or repaired compressor.
- 4. Change the filter dryer.
- Circulate clean R-134a or nitrogen using a pressurized metal cylinder or a reclaiming machine to clean out many of the contaminants collected in the coil valves, TXV (Thermal Expansion Valve), solenoid valves, check valves, and any other mechanical component that may have collected contaminants.
- 6. Evacuate and charge the system normally.
- 7. Run the unit for 8 hours and monitor the pressure drop across the filter dryer. Also check the liquid line dryer for signs of restriction. If the pressure drop across the filter dryer exceeds 12 to 14 psig (82,75 to 96,5 kPa) with a 40°F (5°C) evaporator coil temperature, stop the unit and change the liquid line and suction line filter dryer. After 4 or 5 hours of operation, stop the unit and replace the filter dryer.
- 8. After 8 hours of operation, stop the unit and remove a sample of the compressor oil and check its color, odor, and acidity, using instructions supplied above. If the oil is contaminated, replace the oil and repeat step 7. If the oil is not contaminated, change the filter dryer again and replace the moisture-liquid indicator.
- 9. After approximately 7 days of operation, recheck the compressor oil for cleanliness and acidity.

7. CENTRAL A/C SYSTEM COMPONENTS

7.1 COMPRESSOR (CENTRAL SYSTEM)

7.1.1 Belt Replacement



Set the battery master switch to the "Off" position. For greater safety, set the engine starter selector switch in engine compartment to the "Off" position.

1. Open engine compartment rear doors and locate the belt tensioner pressure releasing valve (Fig. 20), mounted above the engine

- R.H. side door next to the air pressure regulator, then turn handle clockwise in order to release pressure and tension on belts.
- 2. Remove the radiator fan driving mechanism belt (Refer to Section 05: Cooling).
- 3. Slip the old A/C compressor belts off and the new ones on.
- 4. Reset belt tensioner pressure releasing valve (Fig. 20) to 45 psi (310 kPa) to apply tension on the new belts as explained in Section 12.

NOTE.

Both belts must always be replaced simultaneously to ensure an equal distribution of load on each of them.

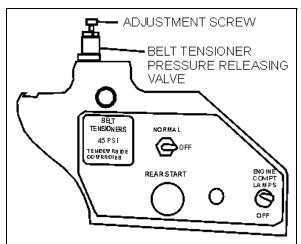


FIGURE 20: AIR PRESSURE REGULATOR

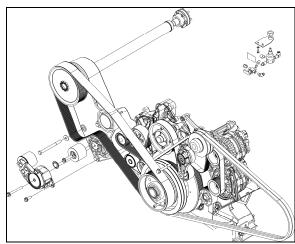


FIGURE 21: BELT ARRANGEMENT

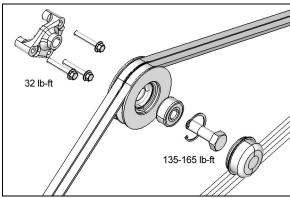


FIGURE 22: IDLER PULLEY INSTALLATION ON VOLVO D13 ENGINE

7.1.2 Belt Tension Adjustment

Belt tensioning is applied through air bellows which are adjusted by an air pressure regulating valve. The correct pressure of 45 psi (310 kPa) is set at the factory. Periodically verify the pressure at the regulating valve using a pressure gauge and correct if necessary.

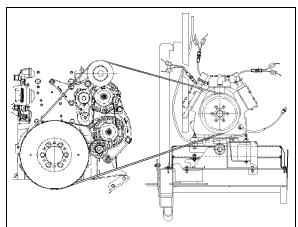


FIGURE 23: A/C COMPRESSOR BELT ADJUSTMENT22288

7.1.3 Pulley Alignment

In order to avoid skipping, disengagement and a premature wear of compressor belt, it is necessary to align compressor pulley with the crankshaft pulley. Before performing the following procedure, release air from belt tensioner bellows by means of the air pressure releasing valve. After completing these procedures reset belt tensioner air pressure regulator to 45 psi (310 kPa).

7.1.4 Longitudinal Compressor Alignment

- 1. Rest an extremity of a straight edge of approximately 46 inches (117 cm) against the upper part of the outer face of crankshaft pulley, positioning the other end close to the compressor clutch pulley (Figs. 24 & 25).
- Check the distance between each extremity
 of straight edge (1. Fig. 25) and the first
 drive belt. If they are different, loosen the
 compressor support bolts and with a
 hammer, knock support to slide it in order to
 obtain the same distance; then tighten bolts.

7.1.5 Horizontal Compressor Alignment

- Rest an extremity of the straight edge against the upper part of the outer face of compressor pulley, positioning the other end close to the crankshaft pulley.
- Check the distance between each extremity of straight edge (1, Fig. 25) and drive belt. If they are different, loosen the pillow block compressor bolts and with a hammer, knock compressor pillow block to slide it, in order to obtain the same distance; then tighten bolts.

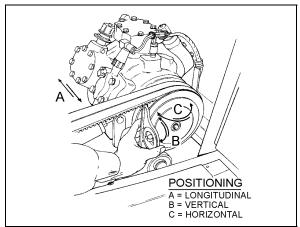


FIGURE 24: COMPRESSOR ALIGNMENT

22072

7.1.6 Vertical Compressor Alignment

Rest a short "angle and level indicator" on the outer side face of the crankshaft pulley, adjust the level indicator inclination at 0° and check if the compressor pulley is at same angle (Fig. 24). If it is not the same, shim under the appropriate pillow block in order to obtain the correct angle.

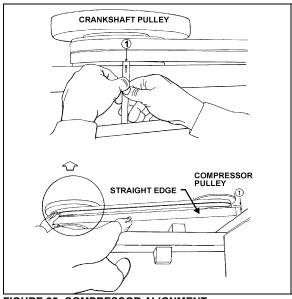


FIGURE 25: COMPRESSOR ALIGNMENT

22040

7.1.7 **Compressor Maintenance**

For the maintenance of the A/C compressor, see the Carrier Compressor "WORKSHOP MANUAL for MODEL 05G TWIN PORT COMPRESSOR" included at the end of this section.



MAINTENANCE

Check compressor oil level and add if necessary, every 6,250 miles (10 000 km) or twice a year, whichever comes first.



CAUTION

Use only Castrol SW 68 (POE) oils with refrigerant 134a.

7.1.8 Troubleshooting Guide

A preliminary check may be made by simply feeling the cylinder heads with the unit in operation at ambient temperatures of 35°F (2°C) and over. The cylinder heads are internally divided into suction and discharge valves. The lower half of the cylinder head is the suction side, and it should be relatively cool to the touch, as opposed to the hot upper discharge side. If a valve plate or head gasket is blown, or a compressor unloader is stuck open, partially compressed refrigerant vapor will be circulated between the suction and discharge sides of the head. The affected cylinder head will then have

a relatively even temperature across its surface and be neither as hot as the normal discharge temperature nor as cool as the normal suction temperature.

Blown Head Gaskets

Symptom:

- Loss of unit capacity at low temperature.
- Even cylinder head temperature.

Cause:

- Improperly torqued cylinder head bolts.
- Improperly positioned gasket at assembly.
- Warped cylinder head.
- Severe liquid refrigerant floodback.

Blown Valve Plate Gaskets

Symptom:

- Loss of unit capacity at medium and low temperatures.
- Very hot cylinder head surface.
- Higher than normal suction pressure.

Cause:

- Improperly torqued cylinder head bolts.
- Severe liquid refrigerant floodback.
- Oil slugging caused by an overcharge of oil or flood starts.
- Discharge valves not seated properly (liquid drainback during shutdown).

Broken Suction Valves

Symptom:

- Loss of unit capacity at all temperatures.
- Compressor unable to pull extremely low vacuum with suction service valve frontseated.

Cause:

- Repeated liquid refrigerant floodback.
- Flooded starts.
- Overcharge of oil.
- Discharge valves not seated properly (liquid drainback during shutdown).

Expansion valve not controlling properly.

Unloader Valve Stuck Open

Symptom:

- Loss of unit capacity at all temperatures.
- Higher than normal suction pressure.
- Even cylinder head temperature.

Cause:

- Unloader body stem bent.
- Foreign material binding unloader piston or plunger.

MAGNETIC CLUTCH 7.2

Refer to Carrier service information entitled "Housing-Mounted Electric Clutch" at the end of this section for the description and maintenance of the magnetic clutch.

7.3 **EVAPORATOR MOTOR**

The evaporator motor is installed in the evaporator compartment (L.H. side of vehicle) (Fig. 26). It is a 27.5 volt, 2 HP (1.5 kW) motor which activates a double blower fan unit.

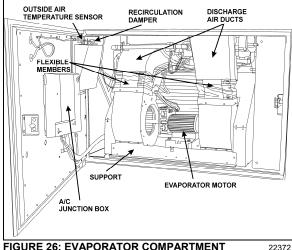


FIGURE 26: EVAPORATOR COMPARTMENT

7.3.1 Removal

- Set the battery master switch (master cutout) to the "OFF" position and trip circuit breakers CB3.
- Open the last L.H. side compartment door. Pull the black release button located on the L.H. side in order to

- unlock and open the evaporator compartment door.
- Remove the evaporator motor and coil access panel.
- Identify the L.H. side discharge duct inside compartment and remove the Phillips head screws retaining the flexible member to duct.
- Repeat step 4 for the R.H. side air duct.
- Disconnect the electrical motor speed control connections on the motor plate.
- From under the vehicle, remove the eight bolts retaining the evaporator fan motor support. Remove the complete unit from the evaporator compartment (Fig. 27 & 28).

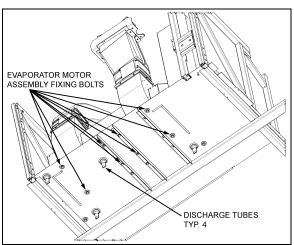


FIGURE 27: EVAPORATOR MOTOR ASSY FIXING BOLTS



CAUTION

Never support evaporator motor by its output shafts while moving it.

On a work bench, unscrew the fan square head set screws, the Phillips head screws retaining cages to support and slide out the assemblies from the evaporator motor output shaft.

7.3.2 Installation

To reinstall the evaporator motor, reverse "Evaporator Motor Removal" procedure.

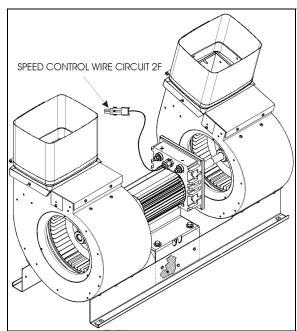


FIGURE 28: EVAPORATOR MOTOR ASSEMBLY

7.4 CONDENSER

The central A/C system condenser coil is hinge mounted on the R.H. side of the vehicle on the A/C condenser door (Fig. 30). Since condenser's purpose is to dissipate heat from the hot refrigerant, it is important to keep the cooling coils and fins clean. A clogged coil will cause high discharge pressure and insufficient cooling.

7.4.1 Condenser Fan Motors

Four brushless fan motors (Fig. 29), 28.5 V -(0.6 HP - 0.42 kW) are installed in the condenser compartment on R.H. side of vehicle in order to ventilate the condenser coil. They are mounted on a support, fastened to the door. The fans pull outside air through the condenser coil and discharge it through an opening at bottom of compartment. When temperature drops inside condenser, the pressure in the refrigerant line also drops and it is, therefore, no longer required to cool condenser. Consequently, when pressure drops to 130 psi, the motors will run at low speed and if the pressure continues to drop to 90 psi, a pressure switch stops the motors so that fans do not operate needlessly. When pressure rises to 120 psi, the pressure switch reactivates the motors. If the pressure rises to 170 psi, the motors will switch to high speed.

For details about electrical wiring, refer to "A/C and Heat system" in the master wiring diagram.

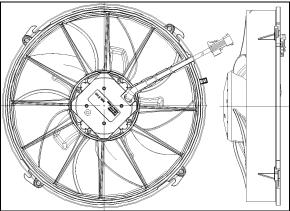


FIGURE 29: CONDENSER FAN MOTOR

7.4.2 Condenser Fan Motor Removal

- Set the battery master switch to the "Off" position.
- Disconnect wiring from terminals on motor.
 Tag each wire to aid in identification at time of reconnection.
- 3. Remove the four hexagonal head cap screws retaining the fan motor assembly to the mounting support.
- 4. Remove the motor.

7.5 RECEIVER TANK

The receiver tank is located in the condenser compartment (Fig. 30). The function of the receiver tank is to store the liquid refrigerant. During normal operation, the level of the refrigerant should be approximately at the midpoint of the lower sight glass.

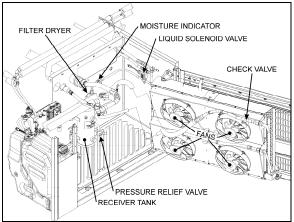


FIGURE 30: A/C CONDENSER COMPARTMENT

22323

In case of extreme pressure there will be a rise in the liquid receiver tank. A pressure relief valve will break at 450 psi (3103 kPa) and relieve the receiver tank pressure.



MAINTENANCE

Check refrigerant level and add if necessary, every 6,250 miles (10 000 km) or twice a year, whichever comes first.

The receiver tank incorporates an inlet valve on the inlet side (upper section) which allows the tank to be isolated or serviced. An outlet valve on the outlet side (lower section) permits complete isolation from the rest of the system.

7.6 FILTER DRYER

A filter dryer, also located in the condenser compartment, is installed on the liquid refrigerant line after the receiver tank. It is used to absorb moisture and foreign matter from refrigerant before it reaches the expansion valves.

The filter should be replaced if the system has been opened or after a prolonged exposure, when the moisture indicator sight glass turns to pink.

7.6.1 Replacement

The filter is of the disposable type. When replacement is required, remove and discard the complete unit and replace with a new unit of the same type according to this procedure:

 Isolate the refrigerant in the receiver tank by following the "Pumping Down" procedure explained in this section



MAINTENANCE

Check refrigerant moisture indicator every 6,250 miles (10 000 km) or twice a year, whichever comes first. Replace filter dryer unit according to moisture indicator

- 2. Change the filter dryer as a unit.
- 3. Add a small quantity of refrigerant R-134a to the low side of the system. Check for leaks. Return the system to normal operation.



CAUTION

Do not use carbon tetrachloride or similar solvents to clean parts. Do not use steam guns. Use mineral spirits or naphtha. All parts should be thoroughly cleaned. Use a stiff brush to wash dirt from grooves, holes, etc.



DANGER

Cleaning products are flammable and may explode under certain conditions. Always handle in a well ventilated area.

7.6.2 Moisture Indicator

The moisture sensitive element consists of a color changing ring which is reversible from pink to blue and vice versa as the moisture content in the refrigerant changes. Pink indicates a wet refrigerant, light violet (caution) and blue indicates a dry refrigerant.

Since temperature changes affect the solubility, color change will also vary with the refrigerant temperature. The above table shows the color change for R-134a at various moisture levels and liquid line refrigerant temperatures.

COLOR INDICATOR						
TEMPERATURE	BLUE (ppm)	LIGHT VIOLET (ppm)	PINK (ppm)			
75°F (24°C)	Below 5	5-15	Above 15			
100°F (38°C)	Below 10	10-30	Above 30			
125°F (52°C)	Below 15	15-45	Above 45			

p.p.m.= parts per million (moisture content)

A moisture level of less than 15 p.p.m. for R-134a indicated in the blue color range of the above table is generally considered dry and safe. A color indication of light blue to light violet indicates the caution range of moisture level. For positive protection, the drying of the system should be continued until the color of the element turns to deep blue.

The liquid refrigerant is readily visible through the center opening of the moisture element where the presence of bubbles indicates a shortage of refrigerant or restriction in line.

Moisture is one of the main causes of chemical instability or contamination in air conditioning systems. If moisture is present, it can corrode the valves, condenser and evaporator coils, compressor and other components causing a malfunction and eventual failure of the system. Uncontrolled moisture in the system can result in very expensive multiple component replacements if not corrected at an early stage. The moisture indicator permits an early detection of moisture in the system and when corrected by a desiccant charge, system contamination is greatly minimized.

7.7 LIQUID REFRIGERANT SOLENOID VALVE

The flow of liquid refrigerant to the driver's and main evaporators is controlled by a normally-closed solenoid valve. The driver's liquid solenoid valve is located on the ceiling of the spare wheel and tire compartment and is accessible through the reclining bumper.

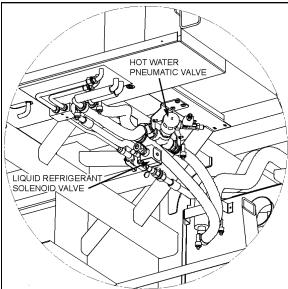


FIGURE 31: DRIVER'S EVAPORATOR LIQUID SOLENOID VALVE 22324

7.7.1 Manual Bypass

This type of solenoid valve is equipped with a manual operating stem. The 3/16" square stem located on the bonnet is exposed when the seal cap is removed. To manually open valve, turn stem ½ turn counterclockwise. To manually close valve, turn stem clockwise until tight against seat. Manual stem must be in closed position for automatic electric operation.

7.7.2 Coil Replacement

- Disconnect connector from the coil connector.
- 2. Take out the retaining screw at the top of the coil housing. The entire coil assembly can then be lifted off the enclosing tube.
- 3. Place the new coil and yoke assembly on the enclosing tube. Lay data identification plate in place.
- 4. Insert the coil retaining screw, rotate housing to proper position and tighten screw securely.
- 5. Connect connector from coil connector.

7.7.3 Valve Disassembly

- 1. Remove the coil as stated previously.
- Pump down the system as stated earlier in this section.
- 3. Remove the four socket head screws which hold the body and bonnet together (Fig. 32).
- 4. Carefully lift off the bonnet assembly (upper part of the valve) so that plunger will not fall out. The diaphragm can now be lifted out.

NOTE

The above procedure must be followed before brazing solder-type bodies into the line.



CAUTION

Be careful not to damage the machined faces while the valve is apart.

7.7.4 Valve Reassembly

- 1. Place the diaphragm in the body with the pilot port extension up.
- 2. Hold the plunger with the synthetic seat against the pilot port.
- Make sure the bonnet O-rings are in place. Lower the bonnet assembly over the plunger, making sure that the locating sleeve in the bonnet enters the mating hole in the body.
- 4. Insert the four socket head screws and tighten evenly.

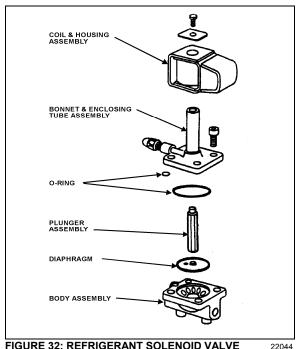


FIGURE 32: REFRIGERANT SOLENOID VALVE

- 5. Replace the coil as stated previously.
- 6. Add a small quantity of refrigerant R-134a to the low side of the system. Check for leaks. Return the system to normal operation.

7.8 **EXPANSION VALVE**

7.8.1 Passenger's Section HVAC Unit

The expansion valve for the passenger's section HVAC unit is a thermo-sensitive valve with a remote control bulb head attached to the evaporator outlet line and is accessible by the evaporator coil access door (Fig. 16 & 33). The valve regulates the flow of refrigerant liquid into the evaporator coils and is controlled by the suction gas temperature leaving the evaporator. The bulb head senses the refrigerant gas temperature as it leaves the evaporator. High temperature will cause expansion and pressure on the power head and spring. Such action causes the assembly valve to open, allowing a flow of refrigerant liquid into the evaporator.

The remote bulb and power assembly is a closed system. The pressure within the remote bulb and power assembly corresponds to the saturation pressure of the refrigerant temperature leaving the evaporator and moves the valve pin in the opening direction. Opposed to this force, on the under side of the diaphragm and acting in the closing direction, is the force exerted by the superheat spring.

As the temperature of the refrigerant gas at the evaporator outlet increases above the saturation temperature corresponding to the evaporator pressure, it becomes superheated. pressure thus generated in the remote bulb and power assembly surpasses the combined pressures of the evaporator pressure and the superheat spring, causing the valve pin to move in the opening direction. Conversely, as the temperature of the refrigerant gas leaving the evaporator decreases, the pressure in the remote bulb and power assembly also decreases and the combined evaporator and spring pressures cause the valve pin to move in the closing position.

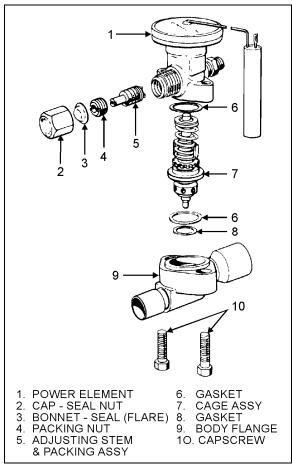


FIGURE 33: EXPANSION VALVE

As the operating superheat is raised, the evaporator capacity decreases, since more of the evaporator surface is required to produce the superheat necessary to open the valve. It is obvious, then, that it is most important to adjust the operating superheat correctly and that a minimum change in superheat to move the valve pin to full open position, is of vital importance

because it provides savings in both initial evaporator cost of operation.

Accurate and sensitive control of the refrigerant liquid flowing to the evaporator is necessary to provide maximum evaporator capacity under load conditions. The spring is adjusted to give 12 to 16° F (-11.1 to -8.8° C) of superheat at the evaporator outlet.

This ensures that the refrigerant leaving the evaporator is in a completely gaseous state when drawn into the suction side of the compressor. Liquid would damage the compressor valve, piston and heads if allowed to return in the suction line.

A vapor is said to be superheated when its temperature is higher than the saturation temperature corresponding to its pressure. The amount of the superheat is, of course, the temperature increase above the saturation temperature at the existing pressure.

As the refrigerant moves along in the evaporator, the liquid boils off into a vapor and the amount of liquid decreases until all the liquid has evaporated due to the absorption of a quantity of heat from the surrounding atmosphere equal to the latent heat of vaporization of the refrigerant. The gas continues along in the evaporator and remains at the same pressure. However, its temperature increases due to the continued absorption of heat from the surrounding atmosphere. The degree to which the gas refrigerant is superheated is related to the amount of refrigerant being fed to the evaporator and the load to which the evaporator is exposed.

Superheat Adjustment

The starting method of adjusting the superheat is to unscrew completely the main evaporator expansion valve adjusting screw, then screw in 13 turns clockwise for 134A (Fig. 34).

Afterwards, the following procedure should be followed:

- Operate coach for at least one-half hour at fast idle with temperature control set at 82°F (27,7°C), Then set temperature to minimum to keep the compressor on 6 cylinders.
- Install pressure gauge at the evaporator suction header. You may install the pressure gauge at compressor suction, but then add 3 PSI to reading.

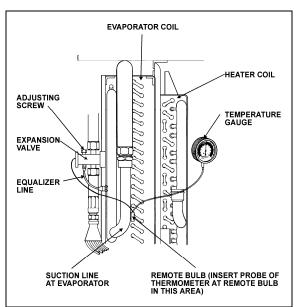


FIGURE 34: SUPERHEAT ADJUSTMENT INSTALLATION22046

- 3. Install a remote reading thermometer to the evaporator outlet line near the existing remote bulb (Fig. 34).
- 4. Apply thermostatic tape around the bulb and evaporator outlet line to get a true reading of the line temperature.
- 5. Block condenser if necessary to keep pressure over 150 psi.

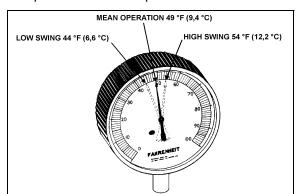


FIGURE 35: HIGH & LOW SWING TEMPERATURE AT REMOTE BULB 22047

 Check approximately 5 readings of pressure at 2-minute intervals and convert to temperature using the temperatures & pressures table (page 35). Likewise check the temperature reading at the remote bulb at the same 2-minute intervals and record the low and high swing readings of the needle (refer to Fig. 35).

Example of readings taken at fig. 35:

A/C pressure gauge converted to temperature at expansion valve fitting	Temperature on remote bulb	
40°F (4,4°C)	Low- swing 44°F (6,6°C)	High swing 54°F (12,2°C)
Formula for superheat 49°F-40°F=9°F (9,4°C-4,4°C = 5°C)	Average of low and high swing is 49°F (9,4°C)	

NOTE

The low swing of the superheat should be a minimum of 4°F (2,2°C) higher at the remote bulb and have an average of 8 to 12°F (4 to 6°C) higher range at the bulb than the fitting at the expansion valve.

NOTE

To reduce the superheat, flow of refrigerant is increased by turning adjusting screw of expansion valve lower evaporator temperature counterclockwise. To increase temperature or increase superheat, flow of refrigerant is reduced by turning adjustment screw of expansion valve clockwise.

 Regulate suction pressure to temperature reading according to temperature chart or to the R-134a temperature scale on the pressure gauge.

Example: Suction pressure 30 psi (207 kPa) converted to 32°F (0°C) on chart. If temperature reading is 40°F (4,4°C), subtract 32°F (0°C) and the result will be 8°F (4,4°C) of superheat.



CAUTION

Before proceeding to the expansion valve adjustment, check for restriction on suction side for plugged filter dryer and partially open valves. These conditions will give a high superheat.

Maintenance

1. Pump down the system as previously indicated in this section.

- 2. Disconnect the external equalizer line from the under side of the power head, and unclamp the remote control bulb from the evaporator coil outlet line.
- Remove the two cap screws holding the power assembly to the valve body flange. Lift off the power assembly and remove the cage assembly.
- 4. When reassembling, replace with the new gaskets in proper location. Make sure the two lugs on the cage assembly fit into grooves provided in the power assembly. Do not force the valves together. The cage must fit properly before tightening the body flange. Tighten bolts evenly.
- 5. Check for leaks.

Safety Instructions

- Make sure the valve is installed with the flow arrow on the valve body corresponding to the flow direction through the piping system.
- 2. Before opening any system, make sure the pressure in the system is brought to and remains at the atmospheric pressure. Failure to comply may result in system damage and/or personal injury.

7.8.2 Driver's HVAC Unit

The function and operation of the expansion valve for the driver's HVAC unit are similar to the passenger's HVAC unit but no superheat adjustment is required (see figures 19 and 33).

7.9 TORCH BRAZING

Use electrode containing 35% silver.



CAUTION

When using heat near a valve, wrap with water saturated rag to prevent overheating of vital parts.



Before welding any part of refrigeration system, make sure the area is well ventilated.

7.10 TROUBLESHOOTING

7.10.1 Expansion Valve

PROBABLE CAUSE	PROBABLE REMEDY	
LOW SUCTION PRESSURE-HIGH SUPERHEAT		
EXPANSION VALVE LIMITING FLOW:		
Gas in liquid line due to pressure drop in the line or insufficient refrigerant charge.	Locate cause of line flash and correct by use of any of the following methods. Add R-134a. Replace or clean filter dryer.	
Inlet pressure too low from excessive low condensing temperature. Resulting pressure difference across valve too small.	Increase head pressure. Verify pressure switch for fan speed control.	
Superheat adjustment too high.	Adjust superheat as outlined under "Superheat Adjustment".	
Power assembly failure or partial loss of charge.	Replace power assembly or replace valve.	
Air filter screen clogged.	Clean or replace air filter.	
Plugged lines.	Clean, repair or replace lines.	
LOW SUCTION PRESS	URE-LOW SUPERHEAT	
Uneven or inadequate evaporator loading due to poor air distribution or liquid flow.	Balance evaporator load distribution by providing correct air or liquid distribution.	
HIGH SUCTION PRESS	URE-HIGH SUPERHEAT	
Compressor discharge valve leaking.	Replace or repair valve.	
HIGH SUCTION PRESSURE-LOW SU	PERHEAT (DEFECTIVE UNLOADER)	
Valve superheat setting too low.	Adjust superheat as outlined under "Superheat Adjustment".	
Compressor discharge valves leaking.	Replace or repair discharge valve.	
Incorrect superheat adjustment.	Superheat adjustment 12 to 16°F.	
FLUCTUATING DISC	CHARGE PRESSURE	
Insufficient charge.	Add R-134a to system.	
HIGH DISCHARGE PRESSURE		
Air or non-condensable gases in condenser.	Purge and recharge system.	
Overcharge or refrigerant.	Bleed to proper charge.	
Condenser dirty.	Clean condenser.	

7.10.2 A/C

TROUBLE	041105
TROUBLE	CAUSE
Low suction pressure and frosting at dryer outlet.	Clogged filter.
Low Oil Level.	Check for oil leaks and for leaking oil seal. Do not attempt to check oil level unless system has been stabilized at least 20 minutes. See oil level verification.
Excessively cold suction line.	Loss of contact between the expansion valve bulb and the suction line or sticking of the expansion valve. Check for foreign matter and clean, repair or
	replace the valve.
Excessively cold suction line and noisy compressor.	Check superheat adjustment. Check remote bulb contact. Check expansion valve for sticking.
Compressor squeaks or squeals when running.	Check oil level. Replace oil seal.
Noisy or knocking compressor.	Check for broken internal parts. Overhaul if required.
Compressor vibrates.	Check and tighten compressor mounting bolts and belt tension.
Low refrigerant level	Check for refrigerant leaks and add refrigerant if required.
Suction pressure rises faster than 5 pounds per	Check compressor valve for breakage or
minute after shutdown.	damage.
Insufficient cooling.	Check for refrigerant leaks. Check condition of air filter and motors.
Insufficient air flow.	Dirty or iced evaporator. Dirty air filter. Blowers inactive. Clogged ducts.
No flow of refrigerant through expansion valve.	Filter dryer is clogged. Remote bulb has lost charge or expansion valve is defective.
Expansion valve hisses. Bubbles in moisture and liquid indicator.	Gas in liquid line. Add refrigerant.
Loss of capacity	Clogged filter. Obstructed or defective expansion valve.
Superheat too high.	Reset superheat adjustment. Check for clogged external equalizer line, or filter dryer.
Reduced air flow:	Dirty or iced evaporator coil. Clean or replace air
a. Dirty or clogged air filter;	filter. Check return ducts for obstructions. Check
b. Evaporator motor inoperative; or	blower motor.
c. Plugged return air ducts. Frequent starting and stopping on low pressure control switch.	Lack of refrigerant. Check for leaks. Recharge.
Compressor intermittently starts and stops.	Intermittent contact in electrical control circuit. Compressor valves not in operating position.
Non-condensable in the refrigeration system.	Leak on system, system in vacuum in low temp. Specific symptom, pressure in system will not correspond to ambient temperature on shutdown. Only non-condensable will cause this. (Example: Pressure of idle R-134a system in 80°F (26.6°C) room should be 86.4 psi (595.7 kPa). See temperature chart in this section.)

TROUBLE	CAUSE
	An evaporator just does a proper cooling job without sufficient air. Shortage of air can be caused by the following:
	* Dirty filters; or * Dirty coils.

Testing condenser pressure.

NOTE: R-134A pressure is function of the temperature variation.

Example, for an exterior temperature of 100°F.

Exterior temperature (100°F) + 30°F = 130°F. Refer to paragraph "10.11 Temperature & Pressure".

Note the corresponding pressure for a temperature of 130°F, 199.8 psi.

Read the condenser pressure, example 171.9 psi.

171.9 psi & 199.8 psi, the pressure in the condenser is inferior to the pressure corresponding to the exterior temperature, in this case the condenser pressure may be too low. Check for refrigerant leaks and add refrigerant if necessary. If the pressure corresponding to the condenser temperature is superior to the pressure corresponding to the exterior temperature, then the air cooled condenser pressure may be too high. Most frequent causes are:

Reduced air quantity. This may be due to:

- * Non-condensable in system;
- * Dirt on the coil;
- Restricted air inlet or outlet;
- * Dirty fan blades;
- * Incorrect rotation of fan;
- * Fan speed too low;
- * Fan motor going out on overload; or
- * Prevailing winds.
- * Too much refrigerant in system. Remove refrigerant if necessary.

7.11 TEMPERATURES & PRESSURES

VAPOR-PRESSURE			
TE	MPERATURE	P	PRESSURE
°F	°C	psi	kPa
-100	-73.3	27.8	191.7
-90	-67.8	26.9	185.5
-80	-62.2	25.6	176.5
-70	-56.7	23.8	164.1
-60	-51.1	21.5	148.2
-50	-45.6	18.5	127.6
-40	-40.0	14.7	101.4
-30	-34.4	9.8	67.6
-20	-29	3.8	26.2
-10	-23	1.8	12.4
0	-18	6.3	43.4
10	-12	11.6	80
20	-7	18.0	124.1
30	-1	25.6	176.5
40	4	34.5	237.9
50	10	44.9	309.6
60	16	56.9	392.3
70	21.1	70.7	487.5
80	27	86.4	595.7
90	32.2	104.2	718.5
100	38	124.3	857.0
110	43.3	146.8	1012.2
120	49	171.9	1185.3
130	54.4	199.8	1377.6
140	60	230.5	1589.3
150	65.6	264.4	1823.0
160	71	301.5	2078.8
170	76.7	342.0	2358.1
180	82.2	385.9	2660.8

VAPOR-PRESSURE			
TEMPERATURE		PRESSURE	
°F	°C	psi	kPa
190	87.8	433.6	2989.7
200	93.3	485.0	3344.1
210	98.9	540.3	3725.4

7.12 LEAK TESTING

Some methods such as nitrogen pressure, soap and electronic sniffer can be used for leak testing. However, the most common method used is a "Halide" torch consisting of an acetylene tank, a burner and a suction test hose. Proceed as follows:



The flow of acetylene to the burner causes suction in the test line. Any gas refrigerant present will be drawn through the hose and into the burner where it decomposes into free acids.

These acids come in contact with the hot copper reaction plate in the burner, causing color reaction in the flame. A small concentration is indicated by a green tint and a large concentration by an intense blue. Do not confuse this change in color with the change caused by shutting off the air supply through the hose by holding the end too close to an object.

The procedure for testing is:

- 1. Adjust flame so that the top of the cone is approximately level or within one-half inch above the plate.
- 2. Probe end of suction test tube around all joints, valves, etc. When a leak has been found at a soldered joint, this section of the system must be pumped down. Do not solder as pressure will force hot solder out. If the system is empty, it is more economical to put in just enough R-134a to produce about 15 psi (103 kPa). The pressure can be raised to about 150 psi (1034 kPa) with dry nitrogen.

NOTE

This gas is put into the suction and discharge shutoff valves at the compressor. The receiver valves must be opened. If no leaks are found, dump this mixture, evacuate the system and fill with refrigerant.

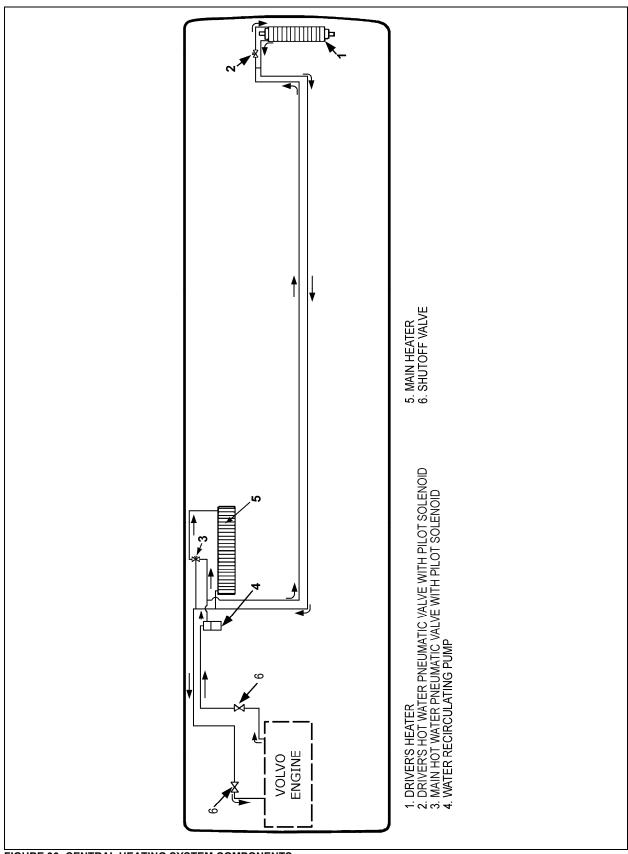


FIGURE 36: CENTRAL HEATING SYSTEM COMPONENTS

8. CENTRAL HEATING SYSTEM

As seen earlier in this section, the vehicle interior is pressurized by its Heating, Ventilation and Air Conditioning (HVAC) system. The vehicle interior should always be slightly pressurized to prevent cold and moisture from entering. Air flow and controls divide the vehicle into two areas: driver's area and passenger's area.

The schematic of figure 36 shows the central heating system with its components.

8.1 DRAINING HEATING SYSTEM

To drain the entire system, refer to Section 05, "Cooling". If only the driver's or main heater core must be drained, refer to the following instructions.

• Draining Driver's Heater Core

- Stop engine and allow engine coolant to cool.
- Locate the normally open water pneumatic valve on the ceiling of the spare wheel compartment (Fig. 37), move the pilotsolenoid valve red tab to close the valve.

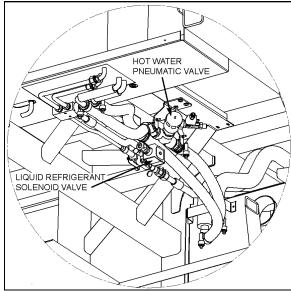


FIGURE 37: CEILING OF THE SPARE WHEEL COMPARTMENT



Before proceeding with the following steps, check that coolant has cooled down.

- Loosen hose clamp, install an appropriate container to recover coolant, and disconnect silicone hose from water solenoid valve.
- 4. From inside of vehicle, remove the two finishing panels in front of unit. Remove the three screws fixing the unit front panel. Open the manual vent located inside the HVAC unit, on the driver's side (Fig. 38) to ensure an efficient draining.

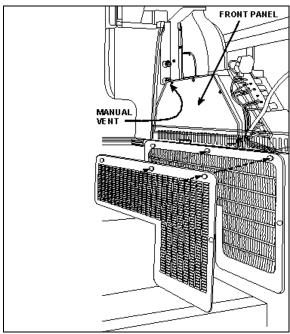


FIGURE 38: DRIVER'S HVAC UNIT

Draining Main Heater Core

- Stop engine and allow engine coolant to
 cool
- 2. Close both heater line shutoff valves.

On X Series vehicles, the valves are located in the engine compartment. One is on the L.H. side of compartment in front of the radiator and the other valve is located under the radiator fan gearbox (Fig. 39).

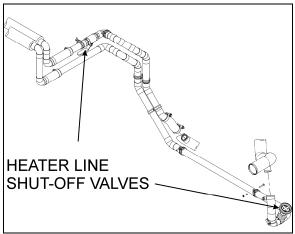


FIGURE 39: HEATER LINE SHUT-OFF VALVES

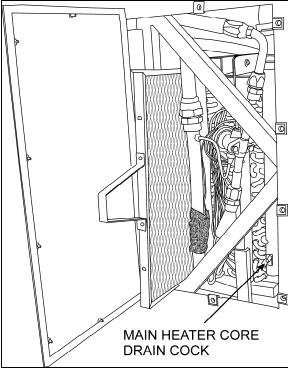


FIGURE 40: EVAPORATOR COMPARTMENT

3. The main heater core drain cock is located in the evaporator compartment. To access the valve on X3-45 coaches, open baggage compartment door located in front of the evaporator compartment (L.H. side). Open access panel by turning the three screws of panel ¼ of a turn.



WARNING

Before proceeding with the following steps, check that coolant has cooled down.

4. Open drain cock in bottom of heater core, you can unfasten a hose connection on top of heater core (Fig.40) in order to allow air to enter while draining.

8.2 FILLING HEATING SYSTEM

- Ensure that the drain hose is reconnected and the manual vent and drain cock are closed.
- 2. Open the surge tank filler cap and slowly fill the system to level of filler neck.
- 3. After initial filling, the water shut-off valves should be open and the water recirculating pump should be energized to assist in circulating coolant through the heating system. To perform this operation, start the engine, switch on the HVAC control unit, both driver and passengers' sections, and set temperature to the maximum position in order to request the heating mode in each of these sections.
- 4. When coolant level drops below the surge tank filler neck, slowly fill the system to level of filler neck.
- Once the level has been stabilized, replace cap.

8.3 BLEEDING HEATING SYSTEM

Whenever the heating system has been drained and refilled, or the system has run low on coolant and coolant has been added, it is necessary to bleed air from heating system. Locate the manual vent illustrated in Figure 38, and open momentarily until no air escapes from the line.

8.4 SOLDERING

Before soldering any part of the system, make sure the area is well ventilated. Use (stay clean) flux sparingly and apply solder (95-5 round wire 1/8 inch). After completing repairs, test for leaks.

When using heat at or near a valve, wrap with water saturated rag to prevent overheating of vital parts.

8.5 DRIVER'S HOT WATER PNEUMATIC VALVE ASSEMBLY

Description

The flow of hot water to the driver's heater core is controlled by a pneumatic NO water valve assembly. The valve, located at the ceiling of the spare wheel compartment, is designed so that the pilot solenoid valve, which is part of the assembly, opens and closes a port which directs air pressure to the actuator casing, thereby opening or closing the valve.

When the vehicle is operating with no current to the pilot solenoid valve, no air pressure is admitted to the actuator casing, the cylinder spring pushes up against the cylinder, thereby keeping the water valve open.

The driver's heater water valve requires a minimum amount of maintenance. The valve should be free of dirt sediment that might interfere with its operation. No other maintenance is needed unless a malfunction occurs.

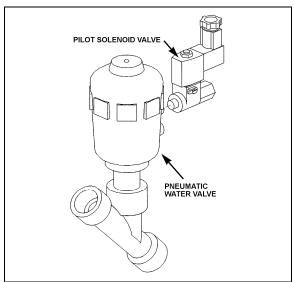


FIGURE 41: DRIVER'S HOT WATER PNEUMATIC VALVE ASSEMBLY

• Pneumatic Water Valve Disassembly

- 1. Shut off air supply pressure and electrical current to the pilot solenoid valve. Disconnect wires.
- The water valve need not be removed from the line. Unscrew nipple, the actuator casing, tube, spindle and closure member can be removed (Fig. 42).
- 3. Remove the snap ring using a pair of pliers.

You can now access all seals for replacement

Pneumatic water valve replacement seal kits:

Water Side: 871311Actuator Side: 871312

Pneumatic Water Valve Reassembly

- 1. Assemble the actuator casing, tube, nipple, spindle and closure member.
- 2. Tighten the nipple in place in the body cavity as per figure 42. Fasten pilot solenoid vale to the pneumatic water valve. Reconnect air supply pressure and electrical current to the pilot solenoid valve.
- 3. Check for proper operation.

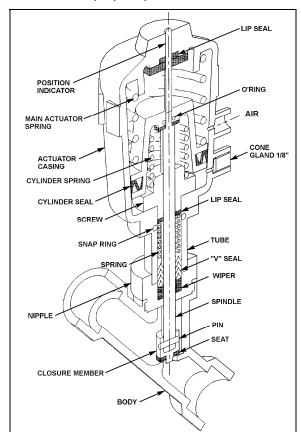


FIGURE 42: PNEUMATIC WATER VALVE

Pilot Solenoid Valve

- No maintenance is needed unless a malfunction occurs.
- 2. A pilot solenoid valve replacement seal kit is available: 871313.

Valve Troubleshooting

PROBLEM	PR	OCEDURE
Valve fails to close	1.	Check electrical supply with a voltmeter. It should agree with nameplate rating.
	2.	Check pressure at pilot solenoid valve inlet. It must be at least equal to the minimum pressure stamped on the nameplate. It should not go below minimum while valve is operating.
	1.	Check that the closure member assembly, and that main actuator and cylinder springs are free to travel.
	2.	Check that there is no restriction to the air escaping from the actuator casing.
	3.	Make sure that pilot solenoid valve operates properly.

8.6 CENTRAL HOT WATER PNEUMATIC VALVE ASSEMBLY

Description

The flow of hot water to the vehicle's central heater core is controlled by a 3-way pneumatic water valve assembly. The valve, located in the evaporator compartment, is designed so that the pilot solenoid valve, which is part of the assembly, opens and closes a port which directs air pressure to the actuator casing, thereby allowing the hot water to enter the main heater core or bypassing it.

When the vehicle is operating with no current to the pilot solenoid valve, no air pressure is admitted to the actuator casing, the cylinder spring pushes up against the cylinder, thereby allowing the hot water to enter the main heater core.

The central heater water valve requires a minimum amount of maintenance. The valve should be free of dirt sediment that might interfere with its operation. No other maintenance is needed unless a malfunction occurs.

Pneumatic Water Valve Disassembly

- Shut off air supply pressure and electrical current to the pilot solenoid valve. Disconnect wires.
- 2. The water valve need not be removed from the line. Unscrew nipple, the actuator casing, tube, spindle and closure member can be removed (Fig. 44).
- 3. Remove the snap ring using a pair of pliers.

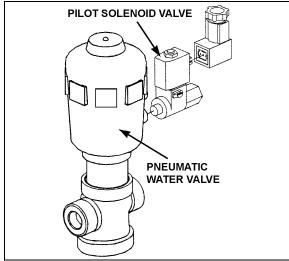


FIGURE 43: CENTRAL HOT WATER PNEUMATIC VALVE ASSEMBLY 22329

You can now access all seals for replacement

Pneumatic water valve replacement seal kits:

* Water Side: 871389* Actuator Side: 871388

Pneumatic Water Valve Reassembly

- 1. Assemble the actuator casing, tube, nipple, spindle and closure member.
- Tighten the nipple in place in the body cavity as per figure 44. Fasten pilot solenoid vale to the pneumatic water valve. Reconnect air supply pressure and electrical current to the pilot solenoid valve.
- 3. Check for proper operation.

Pilot Solenoid Valve

 No maintenance is needed unless a malfunction occurs.

2. A pilot solenoid valve replacement seal kit is available: 871390.

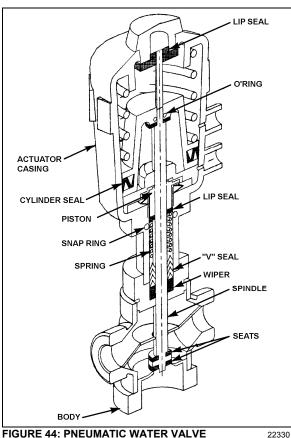


FIGURE 44: PNEUMATIC WATER VALVE

Valve Troubleshooting

PROBLEM	PROCEDURE
Valve fails to close	Check electrical supply with a voltmeter. It should agree with nameplate rating.
	2. Check pressure at pilot solenoid valve inlet. It must be at least equal to the minimum pressure stamped on the nameplate. It should not go below minimum while valve is operating.
Valve fails to open.	Check that the closure member assembly, and that main actuator and cylinder springs are free to travel.
	Check that there is no restriction to the air escaping from the actuator casing.
	3. Make sure that pilot solenoid valve operates properly.

8.7 WATER RECIRCULATING PUMP

This vehicle is provided with a Rotron[®] brushless DC sealess water circulation pump which is located in the engine coolant heater compartment (Fig. 45). The assembly consists of a centrifugal pump and an electric motor which are mounted in a compact assembly.

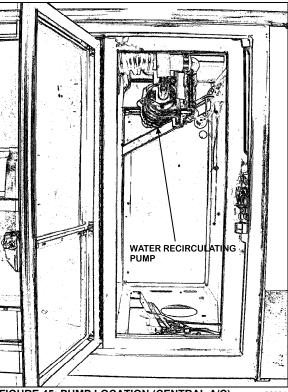


FIGURE 45: PUMP LOCATION (CENTRAL A/C)

The brushless DC sealess pump requires no periodic maintenance. The sealess design offers leak-proof protection and the capability to resist harsh environmental conditions. The pump magnetically couples to the brushless DC motor without a wet seal to wear or replace, this coupling method also enables easy motor removal without requiring system draining. The pump electronically commutated brushless DC provides virtually maintenance-free operation over time by eliminating brush maintenance and associated brush motor failure.

Disassembly of the pump will be necessary only in the case of a rotor failure or motor failure.

Removal

Stop engine and allow engine coolant time to cool.

- 2. Close shutoff valves. Refer to "05 COOLING" under heading "Draining Cooling System" for location of valves.
- 3. Disconnect the electrical wiring from the motor.



WARNING

Before proceeding with the following steps, check that coolant has cooled down.

- Disconnect water lines from pump at flange connections. Place a container to recover the residual coolant in the line.
- 5. Remove the two clamps holding the pump motor to its mounting bracket. Remove the pump with the motor as an assembly.

Installation

- Apply gasket cement to the line flanges, put the two gaskets in place, and connect water lines to the pump at the flange connections. Position the pump and motor assembly on the mounting bracket. Position the mounting clamps over the motor and secure with mounting bolts.
- 2. Connect electrical wiring to the pump motor.
- 3. Open shutoff valve. Refer to "05 COOLING" under heading "Draining Cooling System" for location of valves.
- Fill the cooling system as previously instructed in this section under "8.2 Filling Heating System", then bleed the system as previously instructed in this section under "8.3 Bleeding Heating System".

9. SPECIFICATIONS

Main evaporator motor	
Make	AMETEK ROTRON
Туре	BRUSHLESS DC MICROPROCESSOR CONTROLED
Voltage	
Current draw	
Horsepower	2
Revolution	1400 & 1700 rpm
Insulation	Class F
Motor Prevost number	563586
Condenser fan motors	
Make	EBMPAPS1
Туре	AXIAL BRUSHLESS
Voltage	24 V DC
Qty	
Prevost number	56346 ²
Evaporator air filter (Central syste	em)
Make	Permatron Corp
Туре	Polypropylene
Prevost number	874272
Driver's unit evaporator motors	
Make	MCC
Voltage	24 V DC
Quantity	1
Prevost number	871135
Driver's unit evaporator air filters	
Make	MCC
TYPE	Recirculating air 6-1/4" x 28" Washable
Prevost number	871147
Make	МСС
	Fresh air 3-5/8" X 5-1/4" Washable
Prevost number	871144
Refrigerant	
Туре	R-134a
Quantity (standard)	

Compressor (Central system)	
Make	Carrier Transicold
Capacity, option R-134a	41 CFM
Model, option R-134	05G-134A
No. of cylinders	6
Bore	
Operating speed	400 to 2200 rpm (1750 rpm. Nominal)
Minimum speed (for lubrification)	400 rpm
Nominal horsepower	15
Oil pressure at 1750 rpm	15 to 30 psi (103-207 kPa)
Oil capacity	
Weight	142 lbs (64,5 kg)
Approved oil - Castrol	SW 68 (POE)
Prevost number, option R-134a	
·	
Compressor unloader valve	
Make	
Type	
Voltage	
Watts	
Prevost number (without coil)	
Coil Prevost numbert	950096
Magnetic clutch	
Make	
Type	Housing mounted 9" dia., 2-B grooves
Voltage	24 V DC
Coil resistance at 68 °F (20 °C)	5.15 – 5.69 ohms
Prevost number	950204
Compressor V belt (Carrier)	
Make	Dayco
Model	•
Prevost number (with two BOSH Alternators)	
Condenser coil (Central system)	
Make	Carrier Transicold
Copper	
Prevost number	870729

Section 22: HEATING AND AIR CONDITIONING

Evaporator coil (Central system)	
Make	
Prevost number	871070
Receiver tank (with sight glasses)	
Make	HENRY
Maximum pressure	450 psig
Prevost number	950261
Moisture indicator	
	Henry
	950029
Driver's refrigerant liquid solenoid valve	
·	Parker
• •	24 V DC
. •	
	95-0054
,	950055
Repair kit Prevost number	950056
Hot water pneumatic valve (Central system)	
	Burkert
Type	3-WAY
Voltage	24 V DC
Prevost number	871381
Seal kit, Water Side	871389
Seal kit, Actuator Side	871388
Seal kit, Pilot Solenoid Valve	871390
Driver's hot water pneumatic valve	
Make	Burkeri
Туре	Normally open
Voltage	24 V DC
Prevost number	871252
Seal kit, Water Side	871311
Seal kit, Actuator Side	871312
Seal kit Pilot Solenoid Valve	871313

Water recirculating pump AMETEK ROTRON Voltage 24 V DC Prevost number 871327 Driver's expansion valve Prevost number, option R-134a 950221 Prevost number, option R-22 950282 Expansion valve (Central system) Alco Model TCLE 5-1/2 Prevost number 950320

SECTION 23: ACCESSORIES

CONTENTS

1. H	IUBODOMETER	2
1.1	Description	2
1.2	OPERATION	2
1.3	Removal	2
1.4	Installation	2
2. H	ORN INSTALLATION	2
2.1	ELECTRIC HORN MAINTENANCE	2
3. W	VINDSHIELD WIPERS AND WASHERS	2
3.1	GENERAL DESCRIPTION	2
3.2		
-	.2.1 Wiper Arms Positioning	
_	WINDSHIELD WIPER MOTOR	
	.3.1 Windshield Wiper Motor Replacement	
3.4		
4. A	UTOMATIC FIRE SUPPRESSION SYSTEM (AFSS)	6
4.1		
	PECIFICATIONS	
ILLU	STRATIONS	
Figure	E 1: HUBODOMETER	2
FIGURE	E 2: ELECTRIC HORN INSTALLATION	2
	E 3: R.H. DASHBOARD PANEL	
FIGURE	E 4: WINDSHIEL WASHER - WIPERS CONTROL	3
	E 5: WINSHIELD WASHER RESERVOIR	
	E 6: WINDSHIELD WIPER INSTALLATION	
	E 7: WINDSHIELD WIPER (MOTOR SIDE)	
	E 8: WINDSHIELD WIPER (DRIVER SIDE)	
	E 9: DRIVING MECHANISM (DRIVER SIDE)	
	E 10: DRIVING MECHANISM (MOTOR SIDE)	
	E 11: WIPER ARMS POSITIONING	
	E 12: FIRE EXTINGUISHER INSTALLATION	
FIGURE	E 13: NOZZLE BRACKETS IDENTIFICATION AND INSTALLATION	7

1. HUBODOMETER

1.1 DESCRIPTION

A wheel hubodometer (Fig. 1) has been installed on the R.H. side of the drive axle. It indicates the total distance in miles covered by the coach since it has left the factory, including road testing.

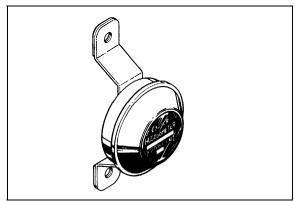


FIGURE 1: HUBODOMETER

23024

1.2 OPERATION

The hubodometer is calibrated for a specific wheel size (diameter). Wheel rotation causes a mechanism inside the hubodometer to record distance after a predetermined number of rotations. The unit should be serviced at a competent speedometer repair facility.

NOTE

Do not use paint, solvent or thinner on hubodometer face or on plastic hubcaps. Do not weld on hubodometer.

1.3 REMOVAL

To remove the unit, remove the two lock nuts and washers securing it to the wheel hub, and pull the unit off the studs.

1.4 INSTALLATION

Place the hubodometer unit over the wheel hub studs. Replace the lock washers and nuts. Torque stud nuts to 110-165 Lbf-ft·(150-225 Nm).

2. HORN INSTALLATION

The electric horn is located in a plastic box under the front stepwell and is accessible from the front body understructure. Refer to Operator's Manual for operation.

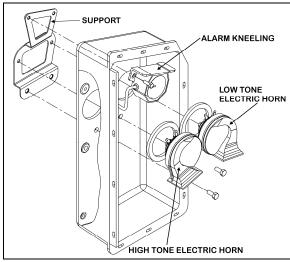


FIGURE 2: ELECTRIC HORN INSTALLATION

23420

2.1 ELECTRIC HORN MAINTENANCE

When needed, the electric horn can be serviced or replaced using the following procedure:

- 1. Raise vehicle by the jacking points;
- 2. Unplug the cable connector;
- 3. Loosen the retaining bolts;
- 4. Service or replace the defective horn;
- 5. Reinstall by reversing procedure.

3. WINDSHIELD WIPERS AND WASHERS

3.1 GENERAL DESCRIPTION

NOTE

When installing a wiper motor, arm or blade, follow recommended procedures to prevent misalignment, binding or malfunction. Check the windshield washer liquid hoses, fittings and connectors to be sure they are properly connected and seal with no restriction to the flow of washer liquid. Check that wiper arms have the proper sweep position and the washer nozzles are aimed so that spray is within the proper wiper pattern.

The windshield wipers are controlled by one electric wiper motor that is accessible for maintenance after removing the appropriate access panel beside the footwell (refer to figure 5).

The wiper/washer control button is located on the R.H. dashboard panel. Push the button to activate the windshield washer. Turn the button

to activate the wipers. The first position activates the wipers intermittently. The second position is the slow speed and the third position is for high speed wiping.

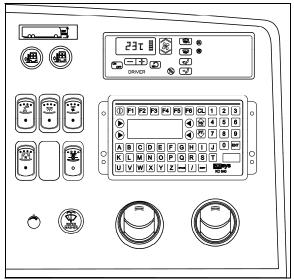


FIGURE 3: R.H. DASHBOARD PANEL



FIGURE 4: WINDSHIEL WASHER - WIPERS CONTROL23133

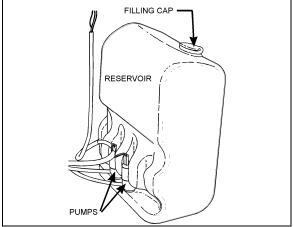


FIGURE 5: WINSHIELD WASHER RESERVOIR

23220

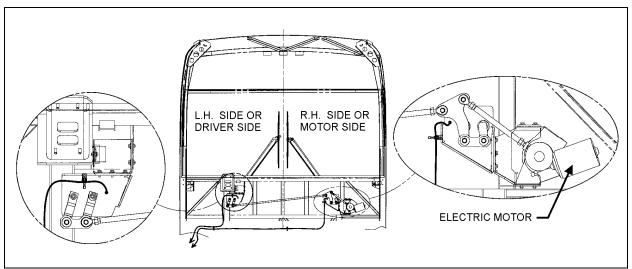


FIGURE 6: WINDSHIELD WIPER INSTALLATION

23287

The windshield washer reservoir is located in the front service compartment (Fig. 5). This unit pumps the washer liquid to the spray nozzles where it is dispersed across the windshield.

3.2 WIPER ARM

Check operation of the wipers for proper blade sweep and angle.

3.2.1 Wiper Arms Positioning

- Reinstall the wiper arms and position as shown in figure 11. Before positioning the wipers at their final position, tighten the nuts to 9 Ft-lbs (12 Nm) at first.
- 2. To find the final position of the wiper arms, lift then release the wiper arm so if falls back on the windshield.



CAUTION

Do not attempt to manually move the wiper arms to make wiper blade sweep adjustments as damage to the wiper linkage or motor may occur. If it is necessary to adjust the sweep of blades, remove the arms and make adjustment by positioning the arms using serration on the wiper arm pivot shafts.

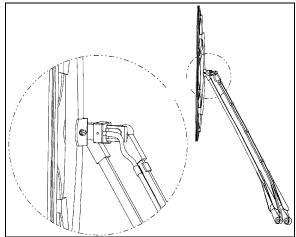


FIGURE 7: WINDSHIELD WIPER (MOTOR SIDE)

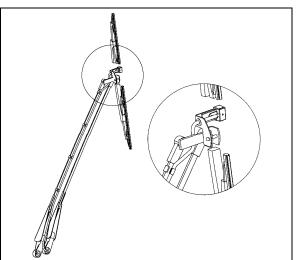


FIGURE 8: WINDSHIELD WIPER (DRIVER SIDE) 23328

- 3. When the final position is found, tighten the wiper arm nuts to 22 Ft-lbs (30 Nm). Wait 30 minutes and tighten again to 22 Ft-lbs.
- 4. Lower the protective cover.
- 5. Connect the windshield washer tubing at the base of the wiper arm.
- 6. Check the adjustment on a wet windshield.

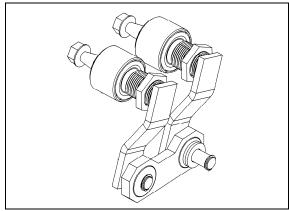


FIGURE 9: DRIVING MECHANISM (DRIVER SIDE) 23284

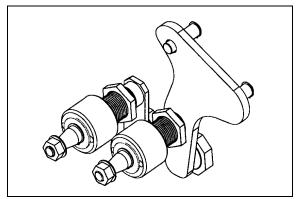


FIGURE 10: DRIVING MECHANISM (MOTOR SIDE) 23285

3.3 WINDSHIELD WIPER MOTOR

3.3.1 Windshield Wiper Motor Replacement

The windshield wiper motor is located at lower front of the vehicle, behind the defroster panel. Refer to figure 6 for motor location.



WARNING

Park vehicle safely, apply parking brake, stop engine and set battery master switch to the "OFF" position prior to working on the vehicle.

- 1. Remove the Phillips-head screws retaining the defroster panels, and remove panels.
- 2. Disconnect wiring connector from the windshield wiper motor.
- 3. Loosen clamping screw retaining the lever at the end of the motor driving shaft.
- 4. Remove the three bolts holding the motor to the steel plate.
- Remove the windshield wiper motor (Prévost #800328), reverse removal procedure to reinstall.

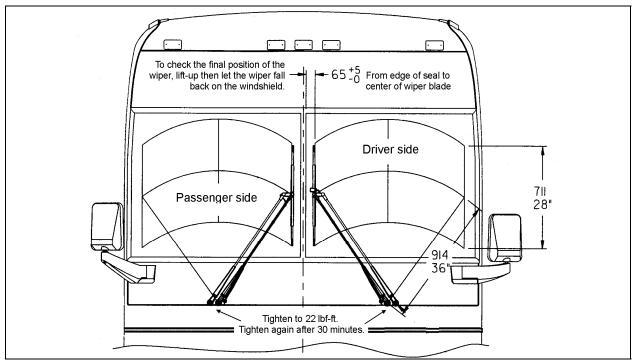


FIGURE 11: WIPER ARMS POSITIONING

23253

3.4 TROUBLESHOOTING

SYMPTOM	PROBABLE CAUSE	REMEDY
FAIL TO SPRAY WASHER FLUID	A. Reservoir empty.B. If below 32°F (0°C), improper washer fluid frozen.	A. Add proper fluid. Store coach or parts in heated area, then purge system with low-temperature solution.
	C. Contamination in tubing or nozzles.D. Tubing damage.E. Tubing bent (kinked) or off one or more connections.	 C. Remove with compressed air, if severely clogged, replace items. D. Replace section. E. Realign tubing and/or refit. Trim end to ensure proper fit or replace.
INADEQUATE SPRAYING	A. Tubing failure.	A. Replace tubing.
SLOW OPERATION	A. Improper solution.B. Jet stream improperly directed.C. Check if valve is stuck in the open position.	A. Replace with proper type solution.B. Reposition nozzles.C. Remove, clean or replace.

4. AUTOMATIC FIRE SUPPRESSION SYSTEM (AFSS)

This system is used to shut down the engine and to extinguish a fire in the engine.

The system operation is fully automatic and does not require assistance from the operator, however if required, the system can be manually activated by the operator at any time.

Refer to Prevost Operator's Manual for system operation and operational sequence (fire).

If more information is needed on the system, please refer to Kidde Dual Spectrum "Operation & Maintenance Manual annexed at the end of this section.

4.1 PERIODIC MAINTENANCE

PRE-TRIP

o Verify that the Protection Panel "SYSTEM OK" lamp is on solid green.

EVERY 3000 MILES OR MONTHLY (whichever comes first)

General

- Verify that neither the protected equipment nor the hazard has changed.
- Verify that no obvious physical damage or condition exists that might prevent system operation.

Protection Panel

 Verify that all warning lamps and the audible alarm are operational by pressing the "TEST/RESET" button.

Manual Activation Switch

o Verify that the tamper seal is intact and access to the switch is unobstructed.

Fire Detectors

- Optical
 - Verify that the status lamp on the detector face is on solid green.
 - Verify that nothing is blocking the detector's field of view.
 - Verify that the windows on the face of the detector are free of excess contamination (dirt, oil, grease, etc.) if necessary, clean using a water soaked non-abrasive towel.
- o Linear Thermal
 - Verify that there is no obvious physical damage and that the unit is free of excess contamination (dirt, oil, grease, etc) – if necessary, clean using a water soaked non-abrasive towel.
 - · Verify that mounting is secure and taught.

Electrical Harness

 Verify that electrical connectors and electrical wiring have no visible damage and all connectors are securely seated.

Extinguisher & Distribution System

- Verify that that the extinguisher pressure gauge pointer is in the green arc at room temperature.
- Verify that distribution piping and nozzles are intact and unobstructed and that nozzle blow-off caps are in place.

EVERY 18000 MILES OR SEMI-ANNUALLY (whichever comes first)

- Perform a comprehensive fire system test using a Kidde Dual Spectrum System Test Set (Optical Test Kit P/N 420871-2).
- Service the extinguisher in accordance with KDS Document 160296, "KDS Pre-Engineered Fire Suppression System: Installation, Operation and Maintenance Manual".

EVERY SIX YEARS

 Have the fire extinguisher rebuilt by a qualified fire protection equipment company familiar with Kidde Dual Spectrum equipment and in accordance with KDS Document 160296, "KDS Pre-Engineered Fire Suppression System: Installation, Operation and Maintenance Manual". Rebuilt shall include actuator, o-ring seals and dry chemical replacement.

EVERY TWELVE YEARS

 Have the Extinguisher cylinder hydrostatically tested by a qualified fire protection equipment company familiar with Kidde Dual Spectrum equipment and in accordance with KDS Document 160296, "KDS Pre-Engineered Fire Suppression System: Installation, Operation and Maintenance Manual".

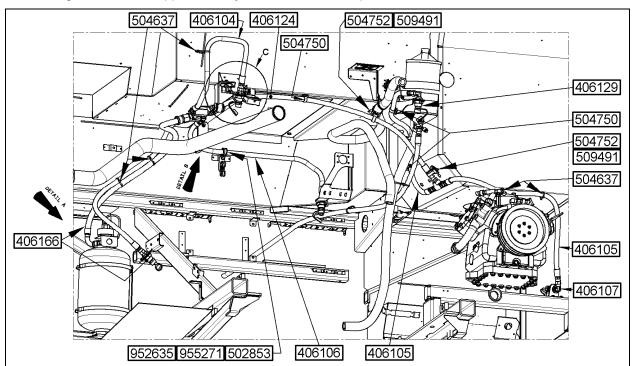


FIGURE 12: FIRE EXTINGUISHER INSTALLATION

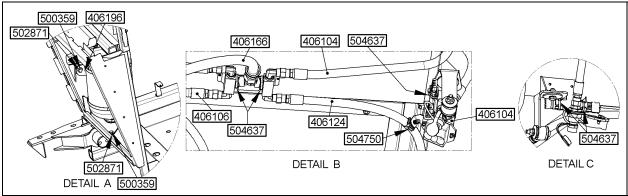


FIGURE 13: NOZZLE BRACKETS IDENTIFICATION AND INSTALLATION

5. SPECIFICATIONS

HUBODOMETER (US model: miles) Make	Stemco
Prevost number	650002
ELECTRIC HORN (HIGH) MakePrévost number	FIAMM TECHNOLOGIES INC.
ELECTRIC HORN (LOW) Make Prévost number	
WINDSHIELD WIPER MOTOR Make	BOSCH
Prévost number	800328
WIPER (BLADE) Make	BOSCH
Prévost number	800329
WIPER ARM MakePrévost number	

SECTION 24: LUBRICATION

CONTENTS

1. LUBRICATION	24-2
1.1 FIRST SERVICE ON NEW VEHICLE	24-2
1.1.1 Differential	
1.1.2 Coolant Strainer	24-2
1.1.3 Allison World Automatic Transmission	24-2
1.1.4 ZF-ASTRONICTransmission	24-2
1.1.5 Engine	24-2
2. LUBRICATION AND SERVICE SCHEDULE	24-3
2.1 ENGINE OIL CHANGE INTERVALS	24-3
2.1.1 Engine Oil Reserve Tank	
2.2 COLD WEATHER OPERATION	
2.3 FLEXIBLE HOSE MAINTENANCE	24-3
2.3.1 Pre-Starting Inspection	24-3
2.3.2 Leaks	24-4
2.3.3 Service life	24-4
2.4 Walk-Around Inspection	24-7
2.5 LUBRICATION AND SERVICING SCHEDULE	24-8
2.6 LUBRICANT AND COOLANT SPECIFICATIONS	24-8
2.7 PART NUMBER SPECIFICATIONS	24-9
ILLUSTRATIONS	
FIGURE 1: ENGINE OIL RESERVE TANK	24-3
FIGURE 2: LUBRICATION AND SERVICING POINTS ON I-BEAM FRONT SUSPENSION VEHICLES	
FIGURE 3: LURRICATION AND SERVICING POINTS ON INDEPENDENT EPONT SUSPENSION VEHICLES	24-6

1. LUBRICATION

The efficiency and life expectancy of mechanical equipment is largely dependent upon proper lubrication and servicing. All mechanical components rely on a lubricating film between moving parts to reduce friction, prevent wear and oxidation. Proper lubrication also helps cool the parts and keep dirt particles away from mating surfaces. Efficient lubrication depends upon using the right type of lubricant, at specified intervals and by filling to correct capacities. Past experience shows that many service problems can be traced to an improper lubricant or to incorrect lubrication procedures.

A comprehensive maintenance and lubrication program is important to ensure the long service life this vehicle was designed for and to avoid costly repairs and associated downtime caused by premature part failure.

A lubrication schedule is included in this section to give the location of key service points on the vehicle as well as the lubricant specifications for each component to be serviced. Specific instructions on how to check and service different components are covered in their respective sections in this maintenance manual.

The recommended lubrication intervals are based on normal operating conditions and mileage accumulation.

Shorten the intervals if your vehicle operates in more severe conditions. Severe conditions include heavy towing, high vehicle weight or operation in mountainous areas. Some parts and equipment referred to in this section may not be installed on your vehicle. Check your vehicle's "Coach Final Record" for equipment list.

Dispose of used lubricants and filters in an environmentally safe manner, according to federal and/or local recommendations.

1.1 FIRST SERVICE ON NEW VEHICLE

Perform the following maintenance procedures after the first 3,000 miles (5 000 km) of operation (unless otherwise specified). Once initial maintenance is performed, refer to

recommended intervals in the lubrication schedule.

Repeat a component's initial maintenance procedure when it has undergone a major repair.

1.1.1 Differential

No initial oil or filter change necessary. Refer to regular lubrication and servicing schedule.

1.1.2 Coolant Strainer

The coolant strainer is designed to recover the soldering residues trapped inside the coolant lines during their initial assembly; perform initial cleaning once vehicle has run approximately 3,000 miles (5 000 km), then according to the lubrication and servicing schedule.

NOTE

If additional soldering has been performed on any point of coolant piping, clean coolant system strainer as outlined for a new vehicle at 3,000 miles (5 000 km).

1.1.3 Allison World Automatic Transmission

Change main filter cartridge after first 5,000 miles (8,000 km) of initial operation, then change filters and fluid according to the lubrication and servicing schedule.

1.1.4 ZF-ASTRONICTransmission

No initial oil or filter change necessary. Refer to regular lubrication and servicing schedule.

1.1.5 Engine

Since engine break-in has been done in factory, there is no special break-in, so oil should be changed according to the lubrication and servicing schedule intervals. Since some oil consumption by engine is normal, check oil level daily with engine stopped and add to FULL mark on dipstick if necessary. Furthermore, the engine oil filter should be replaced each time the engine oil is changed.

2. LUBRICATION AND SERVICE SCHEDULE

Following this service schedule is the most economical and easiest way to ensure your vehicle performs at its best, safest and longest. Also, unscheduled maintenance will be minimized since inspection should expose potential problems before they become major ones.

2.1 ENGINE OIL CHANGE INTERVALS

The engine oil change intervals are related to the operating conditions, such as vehicle load, speed, etc., and may vary. It is recommended however, that the oil change be performed after every 12,500 miles (20 000 km).

The drain intervals may then be gradually increased or decreased with experience on a specific lubricant, considering the recommendations of the oil supplier (analysis of drained oil can be helpful), until the most practical service condition has been established.

Solvents should not be used as flushing oils. Dilution of the fresh refill oil supply can occur, which may be detrimental for the engine.

Engine oil temperature should be checked every 25,000 miles (40 000 km) to determine oil cooler efficiency. This check should be made by inserting a steel jacketed thermometer in the dipstick opening, immediately after stopping a hot, loaded engine. If the oil temperature exceeds the coolant temperature by more than 60 °F (33 °C), the oil cooler may be clogged.

For detailed oil specifications, refer to "Detroit Diesel Series 60 Service Manual" under heading "Lubricating Oil for Detroit Diesel Engines".

2.1.1 Engine Oil Reserve Tank

An oil reserve tank with a capacity of 8.4 US quarts (8,0 liters) (optional) is connected to the crankcase by a hose with a shutoff valve, allowing oil to be added to crankcase by opening valve. Comparison of oil levels in sight gauge, before and after adding oil to crankcase, shows approximately how much oil has been added.

Filling of this tank can be made by opening the rear engine doors. The tank is mounted on R.H. side of engine compartment, over the A/C compressor.

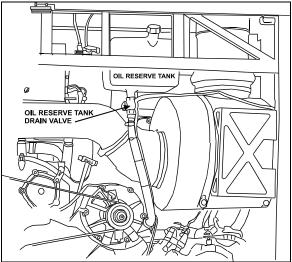


FIGURE 1: ENGINE OIL RESERVE TANK

01063

2.2 COLD WEATHER OPERATION

The proper selection of the engine oil grade will ease cold weather starting (refer to the lubrication and servicing schedule for the engine oil grade recommendation). Other practical considerations, such as the use of batteries, cables and connectors of adequate size, proper setting of voltage regulator, ether starting aid, oil and coolant heater systems, and proper fuel selection will ease cold weather starting.

2.3 FLEXIBLE HOSE MAINTENANCE

The performance of engine and equipment are greatly related to the ability of flexible hoses to supply lubricating oil, air, coolant, and fuel oil. Maintenance of hoses is an important step to ensure efficient, economical, and safe operation of the engine and related equipment.

2.3.1 Pre-Starting Inspection

Check hoses daily as part of the pre-starting inspection. Examine hose for leaks, and check all fittings, clamps, and ties carefully. Ensure that hoses are not resting on or touching shafts, couplings, heated surfaces including exhaust manifolds, any sharp edges, or other obviously

Section 24: LUBRICATION

damaging areas. Since all machinery vibrates and moves to a certain extent, clamps and ties can fatigue with time. To ensure proper support, inspect fasteners frequently and tighten or replace them as necessary.

2.3.2 Leaks

Investigate leaks immediately to determine if fittings have loosened or cracked, and also if hoses have ruptured or worn through. Take corrective action immediately. Leaks are not only potentially detrimental to machine operation, but can also result in added expenses caused by the need to replace lost fluids.

\triangle CAUTION \triangle

Personal injury and/or property damage may result from fire due to the leakage of flammable fluids, such as fuel or lube oil.

Service life

The limited service life of a hose is determined by the temperature and pressure of the gas or fluid within it, the time in service, its installation, the ambient temperatures, amount of flexing, and the vibration it is subjected to. With this in mind, it is recommended that all hoses be thoroughly inspected at least every 500 operating hours or after 15,000 miles (24 000 km). Look for surface damage or indications of damaged, twisted, worn, crimped, brittle, cracked, or leaking lines. Hoses having a worn outer surface or hoses with a damaged metal reinforcement should be considered unfit for further service.

It is also recommended that all hoses in this vehicle be replaced during major overhaul and/or after a maximum of five service years. Quality of replacement hose assemblies should always be equal to or superior to those supplied by the Original Equipment Manufacturer.

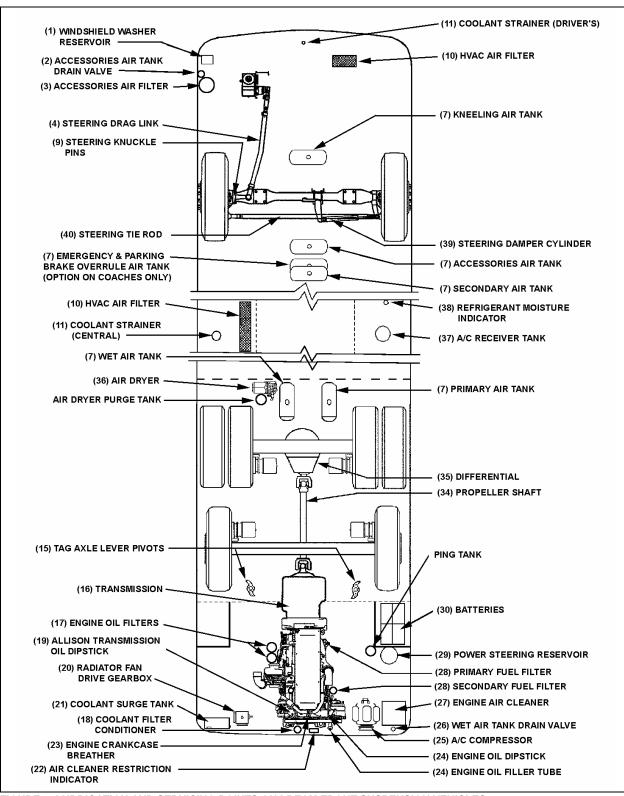


FIGURE 2: LUBRICATION AND SERVICING POINTS ON I-BEAM FRONT SUSPENSION VEHICLES

24023

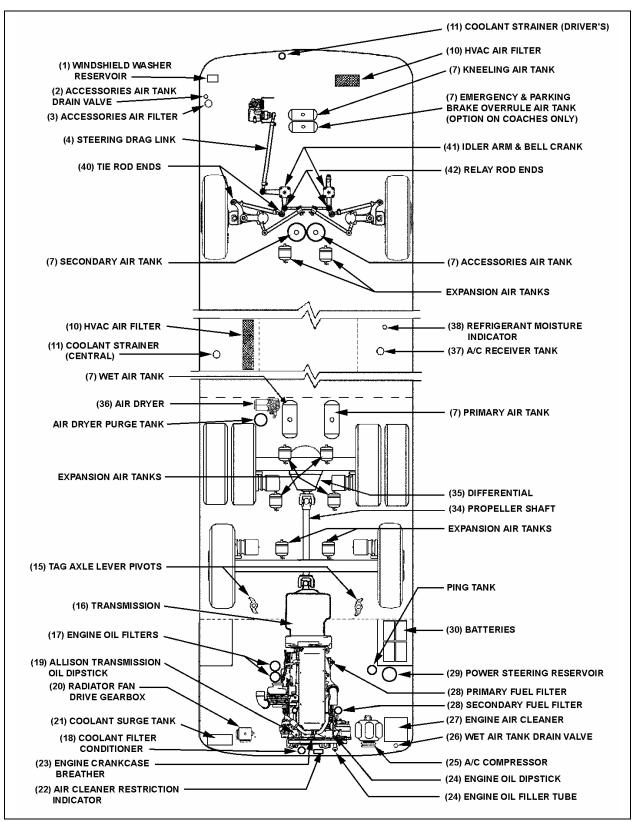


FIGURE 3: LUBRICATION AND SERVICING POINTS ON INDEPENDENT FRONT SUSPENSION VEHICLES

2.4 WALK-AROUND INSPECTION

It is good practice to make a basic visual inspection of key areas on the vehicle every day (or before every trip for private coaches) and to correct any problem found.

OUTSIDE THE VEHICLE		
ITEM*	DESCRIPTION	
	Check for leaks under vehicle and in engine compartment.	
	Check that baggage and service compartment doors close properly.	
	Inspect tires and wheels for correct tire pressure, wear or damage and for missing wheel studs and nuts.	
1	Check windshield washer fluid level and add if necessary.	
	Check condition of windshield wiper blades.	
	Verify proper operation of all road lights, signal lights, brake lights, marker lights and back- up lights; Replace light bulbs as required.	
2, 26	Drain accumulated water in accessory and wet air tanks.	

ENGINE COMPARTMENT		
ITEM*	DESCRIPTION	
24	Check engine crankcase oil level; Add if necessary.	
19	Check Allison transmission oil level (can be checked from push-button shift selector); Add if necessary.	
29	Check power steering reservoir fluid level; Add if necessary.	
21	Check coolant surge tank fluid level; Add if necessary.	
28	Drain accumulated water in primary fuel filter/water separator (if equipped). Visually check fuel filter cartridge (Fuel-Pro 382 equipped vehicles only).	
22, 27	Check air cleaner restriction indicator; Replace air cleaner when red signals locks in full view.	

	INSIDE THE VEHICLE	
ITEM*	DESCRIPTION	
	Check for proper operation of the entrance door.	
	Check that emergency exit windows and roof escape hatches can be opened, then close all windows and hatches securely.	
	Verify proper operation of windshield wiper/washer.	
	Adjust and clean mirrors as needed for adequate rear-view vision.	
	Start engine and check for proper operation of all gauges and indicator lights.	
	Check for proper operation of electric and air horns and back-up alarm.	
	Perform a brake test. Check both primary and secondary pressure gauges.	

^{*} Item numbers refer to figures 2 and 3.

Section 24: LUBRICATION

2.5 LUBRICATION AND SERVICING SCHEDULE

2.6 LUBRICANT AND COOLANT SPECIFICATIONS

ITEM*	DESCRIPTION	SPECIFICATIONS
24	Engine Oil	SAE Viscosity Grade: 15W40 API Classification: CI-4
29	Power Steering Oil	Automatic Transmission Oil (Dexron-IIE or Dexron-III)
18, 21	Engine Coolant	Low silicate, ethylene glycol coolant 50% antifreeze/water solution is normally used Antifreeze concentration should be between 30% and 67%
25	A/C Compressor Oil	Polyolester Oil, HFC 134a compatible: Castrol SW-68 (POE) or equivalent
35	Differential Oil	Multigrade gear oil meeting MIL-L-2105-D: 85W/140. If temperature drops below 10°F (-12°C), 80W90 should be used. Below -15°F (-26°C), 75W90 should be used. (In extreme conditions or for better performance, full synthetic gear oil can be used.)
20	Fan Gearbox Oil	Synthetic oil: Mobil SHC 630
19	Allison Automatic Transmission Oil	Dexron-III/VI or TranSynd
19	ZF-ASTronic Transmission Oil	Castrol Syntrans Grade SAE 75W-85 (Synthetic)
	Multi Purpose Grease	Good quality lithium-base grease: NLGI No.2 Grade is suitable for most temperatures NLGI No.1 Grade is suitable for extremely low temperatures

^{*} Item numbers refer to figures 2 and 3.

2.7 PART NUMBER SPECIFICATIONS

ITEM*	DESCRIPTION	PRÉVOST NO
17	Engine Oil Filters	#510458
29	Power Steering Reservoir Oil Filter	#660528
27	Engine Air Cleaner Filter	#530197
38	Refrigerant Filter Dryer Unit	#950262
28	Engine Primary Fuel Filter	#510137
28	Engine Primary Fuel Filter With Water Separator (Optional)	#531407
28	Engine Secondary Fuel Filter	#510128
28	Secondary "Racor" Fuel Filter	#531390
18	Engine Coolant Precharge Unit	#550629
18	Engine Coolant Filter/Conditioner	#550630
10	A/C And Heating Driver's Air Filter	#871147871144
10	A/C And Heating Cabin's Air Filter	#871051
16	Allison World (WT) Automatic Transmission Oil Filter Kit	#571709
11	Coolant Strainer	#871029
3	Accessories Air Filter	#641340
36	Air Dryer Cartridge	#641244
	Alternator drive belt, 85-1/2 in. (2 alternators)	#5060055
	Alternator drive belt, 72 in. (1 alternator, limp home)	#5060056
	Fan gearbox drive belt	#506688
	Compressor drive belt BX100	#506864
	Windshield wiper blade	#800329

^{*} Item numbers refer to figures 2 and 3.

SECTION 18: BODY

CONTENTS

1.	VEHICL	E EXTERIOR	6
2.	VEHICL	E STRUCTURE	<u>e</u>
3.	VEHICI	E EXTERIOR MAINTENANCE	c
	3.1 Col 3.2 PR	RROSION PREVENTION	9
		ON FIBERGLASS REPAIR PROCEDURE	
		PAIR USING FIBERGLASS CLOTH	
	4.2 RE	PAIR USING FIBERGLASS CLOTH PAIR USING FIBERGLASS PASTE PICAL FIBERGLASS REPAIR PROCEDURE	15
5.	СОММО	ON PAINTING PROCEDURE	17
	5.1 NEV	N PAINT CARE	17
		NT TOUCHUP	
		NTING	
	5.3.1	Safety	
	5.3.2	Surface Preparation And Paint Application	18
6.	W5 MTI	HEXTERIOR FINISHING AND BODY REPAIR	19
	6.1 Zor	NE 1	20
	6.1.1	Front Bumper	
	6.1.2	Front Crest	
	6.1.3	Headlights	
	6.1.4	Rear View Mirrors	
	6.1.5	Windshield Wipers	
	6.1.6	Windshield	
	6.1.7	Front face Body Panel	
	6.1.8	Entrance Door	
	6.1.9	Front Electrical & Service Compartment Door	
	6.1.10	Upper Lateral Window	
	6.1.11	Front Cap	
		NE 2	
	6.2.1	Upper Side Panel	
	6.2.2 6.2.3	Fixed Windows Electric Awning Windows	
	6.2.4	Electric Sliding Windows	
		NE 3	
	6.3.1	Rear Cap	
	6.3.2	Engine Compartment Doors	
	6.3.3	Rear Bumper	
		NE 4	
	6.4.1	Rear Fender	
	6.4.2	Engine Compartment R.H. Side Door	35
	6.4.3	Engine Radiator Door	
	6.4.4	R.H. Side Rear Service Compartment Door	
		NE 5	
	6.5.1	Baggage Compartment Doors	
	6.5.2	Condenser Compartment Door	
	6.5.3	Evaporator Compartment Door	39

Section 18: BODY

6.5.	.4 Fuel Filler Door	40
6.6	ZONE 6	40
6.6.	.1 Front Fender	40
6.7	ZONE 7	
6.7.	.1 Side Panel for Vehicles Not Fitted With Slide-Out	41
6.7.	.2 Side Panel for Vehicles Fitted With Slide-Out	42
6.7.	.3 Side Crest	42
6.8	ZONE 8	
6.8.		
6.9	ZONE 9	43
6.9.		
6.10	BODY PANEL AND WINDOW SPACING FOR W5 MTH NOT FITTED WITH SLIDE-OUT	44
6.11	BODY PANEL AND WINDOW SPACING FOR W5 MTH FITTED WITH SLIDE-OUT	45
7 W0	MTH EXTERIOR FINISHING AND BODY REPAIR	46
7.1	ZONE 1	
7.1.		
7.1.		
7.1.		
7.1.		
7.1.		
7.1.		
7.1.		
7.1.		
7.1.	· · · · · · · · · · · · · · · · · · ·	
7.1.		
7.1.		
7.2	ZONE 2	
7.2.		
7.2. 7.2.		
7.2. 7.3	.4 Electric Sliding Windows	
7.3 7.3.		
7.3. 7.3.		
7.3. 7.3.		
	ZONE 4	
7. 4 7.4.		
	2 Engine Compartment R.H. Side Door	56
7.4. 7.4.		56
7.5	ZONE 5	
7.5.		
7.5.	,	
7.5.	·	
7.5.	·	
7.6	ZONE 6	
7.6.		
7.7	ZONE 7	
7.7.		
7.7.		
0 14/5		
8. WE	MTH EXTERIOR FINISHING AND BODY REPAIR	
8.1	ZONE 1	
8.1.	,	
8.1.	2 Front Crest	63
8 1	3 Headlights	64

8.1.4	Rear View Mirrors	
8.1.5	Windshield Wipers	
8.1.6	Windshield	
8.1.7	Front face Body Panel	
8.1.8	Entrance Door	
8.1.9	Front Electrical & Service Compartment Door	
8.1.10	Upper Lateral Window	
8.1.11	Front Cap	
	NE 2	
8.2.1	Upper Side Panel	
8.2.2	Fixed Windows	
8.2.3	Electric Awning Windows	
8.2.4	Electric Sliding Windows	
	NE 3	
8.3.1	Rear Cap	
8.3.2	Engine Compartment Doors	
8.3.3	Rear Bumper	
_	NE 4	
8.4.1	Rear Fender	
8.4.2	Engine Compartment R.H. Side Door	
8.4.3	Engine Radiator Door	
	NE 5	
8.5.1	Baggage Compartment Doors	
8.5.2	Condenser Compartment Door	
8.5.3	Evaporator Compartment Door	
8.5.4	Fuel Filler Door	
	NE 6	
8.6.1	Front Fender	
	NE 7	
8.7.1	Smooth Side Panel	
8.7.2		
	NE 8	
8.8.1	Slide-Out Exterior Finishing Panels & Windows	
	DOY PANEL AND WINDOW SPACING FOR WE MTH FITTED WITH SLIDE-OUT	
9. VEHIC	LE JACKING POINTS	80
9.1 Hy	DRAULIC JACK	81
10. TOW	ING THE VEHICLE	81
10.1 Lie	TING AND TOWING	82
	WING WITHOUT LIFTING	
13.2		
	ATIONO	
ILLUSTR	ATIONS	
FIGURE 1: XI	.2-40 CONVERTED VEHICLE EXTERIOR VIEW (TYPICAL)	6
	2-45 CONVERTED VEHICLE EXTERIOR VIEW (TYPICAL)	
	2-45E CONVERTED VEHICLE EXTERIOR VIEW (TYPICAL)	
	BERGLASS REPAIR	
	5 MTH ZONING	
	N5 MTH FITTED WITH SLIDE-OLIT	19

Section 18: BODY

FIGURE 11: ZONE 1	
FIGURE 12: FRONT BUMPER REMOVAL	20
FIGURE 13: FRONT BUMPER RELEASE HANDLE	20
FIGURE 14: REAR VIEW MIRROR (RAMCO)	21
FIGURE 15: WINDSHIELD INSTALLATION USING ROPE	23
FIGURE 16: APPLICATION OF SIKA 221 BLACK	24
FIGURE 17: VIEW OF FRONT FACE	24
FIGURE 18: ZONE 2	26
FIGURE 19: ELECTRIC AWNING WINDOW EXPLODED VIEW (FRAME)	28
FIGURE 20: ELECTRIC AWNING WINDOW EXPLODED VIEW (SASH)	28
FIGURE 21: ELECTRIC SLIDING WINDOW EXPLODED VIEW	
FIGURE 22: REMOVING THE SASH	31
FIGURE 23: DISENGAGING THE BOTTOM OF THE SASH	
FIGURE 24: PROPER ALIGNMENT	32
FIGURE 25: POSITIONING THE LOWER LEFT CORNER OF THE SASH	
FIGURE 26: RELEASE LATCH PROPER POSITION	33
FIGURE 27: ZONE 3	33
FIGURE 28: ENGINE COMPARTMENT DOORS	
FIGURE 29: REAR BUMPER	34
FIGURE 30: ZONE 4	35
FIGURE 31: ENGINE COMPARTMENT R.H. SIDE DOOR	35
FIGURE 32: RADIATOR DOOR	
FIGURE 33: SMALL RADIATOR DOOR	
FIGURE 34: R.H. SIDE REAR SERVICE COMPARTMENT DOOR	
FIGURE 35: ZONE 5	
FIGURE 36: BAGGAGE COMPARTMENT DOOR	
FIGURE 37: BAGGAGE DOOR CATCH STRIKER	
FIGURE 38: CONDENSER DOOR	
FIGURE 39: EVAPORATOR DOOR	39
FIGURE 40: FUEL FILLER DOOR	40
FIGURE 41: ZONE 6	
FIGURE 42: ZONE 7	
FIGURE 43: ZONE 8	
FIGURE 44: ZONE 9	
FIGURE 45: BODY PANEL & WINDOW SPACING FOR W5 MTH NOT FITTED WITH SLIDE-OUT	
FIGURE 46: BODY PANEL & WINDOW SPACING FOR W5 MTH FITTED WITH SLIDE-OUT	
FIGURE 47: W0 MTH ZONING.	
FIGURE 48: ZONE 1	
FIGURE 49: FRONT BUMPER REMOVAL	
FIGURE 50: FRONT BUMPER RELEASE HANDLE	
FIGURE 51: REAR VIEW MIRROR (RAMCO)	
FIGURE 52: WINDSHIELD INSTALLATION USING ROPE	
FIGURE 53: APPLICATION OF SIKA 221 BLACK	
FIGURE 54: VIEW OF FRONT FACE	
FIGURE 55: ZONE 2	52
FIGURE 56: ZONE 3	
FIGURE 57: ENGINE COMPARTMENT DOORS	
FIGURE 58: ZONE 4	55
FIGURE 59: ENGINE COMPARTMENT R.H. SIDE DOOR	
FIGURE 60: RADIATOR DOOR	
FIGURE 61: ZONE 5	
FIGURE 62: BAGGAGE COMPARTMENT DOOR	
FIGURE 63: BAGGAGE DOOR CATCH STRIKER	
FIGURE 64: CONDENSER DOOR	
FIGURE 65: EVAPORATOR DOOR	
Elouide 66: Full Fill ED DOOD	60

FIGURE 67: ZONE 6	60
FIGURE 68: ZONE 7	61
FIGURE 69: WE MTH ZONING	62
FIGURE 70: ZONE 1	62
FIGURE 71: FRONT BUMPER RELEASE HANDLE	63
FIGURE 72: FRONT BUMPER REMOVAL	63
FIGURE 73: REAR VIEW MIRROR (RAMCO)	64
FIGURE 74: WINDSHIELD INSTALLATION USING ROPE	66
FIGURE 75: APPLICATION OF SIKA 221 BLACK	66
FIGURE 76: VIEW OF FRONT FACE	67
FIGURE 77: ZONE 2	69
FIGURE 78: ZONE 3	70
FIGURE 79: ENGINE COMPARTMENT DOORS	71
FIGURE 80: REAR BUMPER	71
FIGURE 81: ZONE 4	72
FIGURE 82: ENGINE COMPARTMENT R.H. SIDE DOOR	72
FIGURE 83: RADIATOR DOOR	73
FIGURE 84: ZONE 5	73
FIGURE 85: BAGGAGE COMPARTMENT DOOR	74
FIGURE 86: BAGGAGE DOOR CATCH STRIKER	75
FIGURE 87: CONDENSER DOOR	75
FIGURE 88: EVAPORATOR DOOR	75
FIGURE 89: FUEL FILLER DOOR	76
FIGURE 90: ZONE 6	76
FIGURE 91: ZONE 7	77
FIGURE 92: ZONE 8	78
FIGURE 93: BODY PANEL & WINDOW SPACING FOR WE MTH FITTED WITH SLIDE-OUT	79
FIGURE 94: JACKING POINTS ON FRAME	80
FIGURE 95: FRONT SUBFRAME JACKING POINTS	80
FIGURE 96: REAR SUBFRAME JACKING POINTS	80
FIGURE 97: JACKING POINTS ON IND. SUSPENSION	80
FIGURE 98: JACKING POINTS ON DRIVE AXLE	80
FIGURE 99: JACKING POINTS ON TAG AXI F	81

1. VEHICLE EXTERIOR

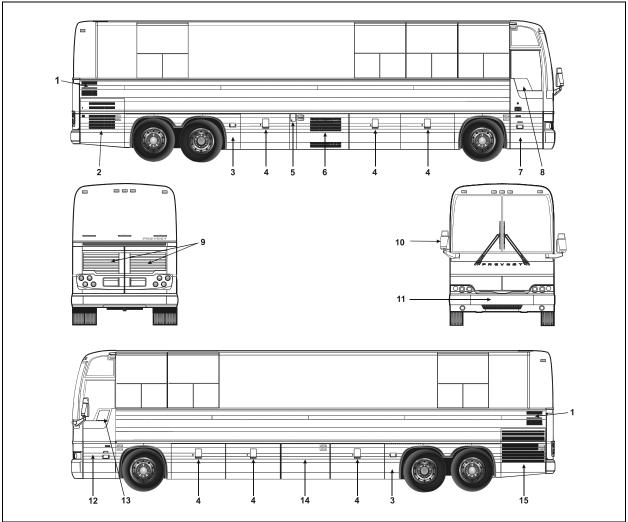


FIGURE 1: XL2-40 CONVERTED VEHICLE EXTERIOR VIEW (TYPICAL)

- 1. Engine air intake
- 2. Engine compartment R.H. side door
- 3. Hinged rear fender
- 4. Baggage compartment
- 5. Fuel filler door
- 6. Condenser compartment or Baggage compartment
- 7. Entrance door
- 8. Entrance door power window
- 9. Engine compartment rear doors
- 10. Rear-view mirror
- 11. Reclining bumper

- 12. Front electrical & service compartment
- 13. Driver's power window
- 14. Evaporator compartment or Baggage compartment
- 15. Radiator door

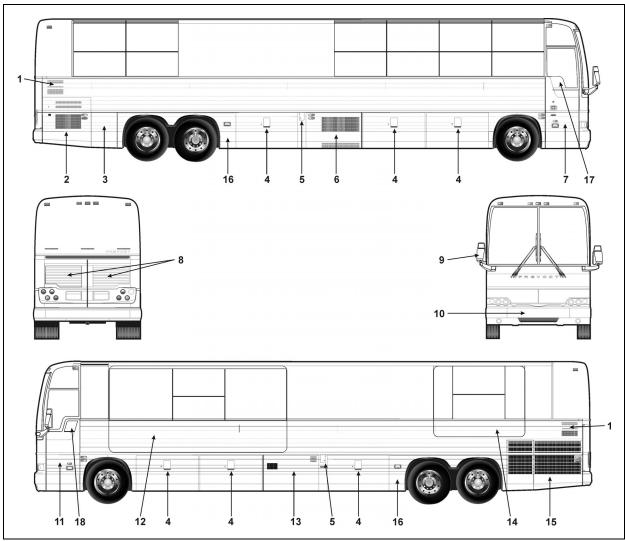


FIGURE 2: XL2-45 CONVERTED VEHICLE EXTERIOR VIEW (TYPICAL)

18362

- 1. Engine air intake
- 2. Engine compartment R.H. side door
- 3. R.H. side rear service compartment
- 4. Baggage compartment
- 5. Fuel filler door
- 6. Condenser compartment or Baggage compartment
- 7. Entrance door
- 8. Engine compartment rear doors
- 9. Rear-view mirror

- 10. Reclining bumper
- 11. Front electrical & service compartment
- 12. Front Slide-Out (Optional)
- 13. Evaporator compartment or Baggage compartment and access to Slide-out electrical panel
- 14. Rear Slide-Out (Optional)
- 15. Radiator door
- 16. Hinged rear fender
- 17. Entrance door power window
- 18. Driver's power window

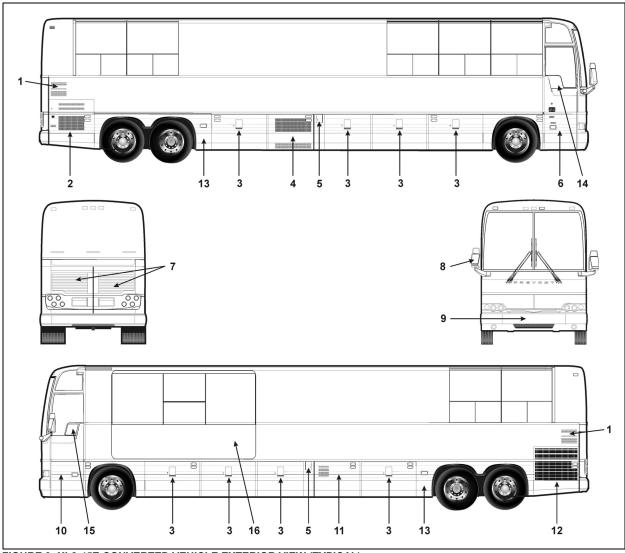


FIGURE 3: XL2-45E CONVERTED VEHICLE EXTERIOR VIEW (TYPICAL)

18369

- 1. Engine air intake
- 2. Engine compartment R.H. side door
- 3. Baggage compartment
- 4. Condenser compartment or Baggage compartment
- 5. Fuel filler door
- 6. Entrance door
- 7. Engine compartment rear doors
- 8. Rear-view mirror

- 9. Reclining bumper
- 10. Front electrical & service compartment
- 11. Evaporator compartment or Baggage compartment
- 12. Radiator door
- 13. Hinged rear fender
- 14. Entrance door power window
- 15. Driver's power window
- 16. Front Slide-Out (Optional)

2. VEHICLE STRUCTURE

The body of the XLII vehicles is an integral structure made of 14, 16 and 18 gauge welded and braced high tensile steel and stainless steel members. All stainless exterior panels are glued to anti-corrosion coated members. The complete structure is protected against corrosion prior to assembly. The front and rear caps are made of molded fiberglass. The main roof is made of high tensile aluminum panels riveted to the roof structure. The floor is made of 2 layers of ½" (13 mm) thick plywood separated by a 1/8" (3 mm) insulation to reduce power train and road noises.

Welding

Since welding is a procedure that may be carried out either as specific instructions from Prévost or by an independent decision of the owner, the following information pertaining to welding should be read before beginning any welding procedure. The prohibitions and requirements outlined below must be followed during welding procedure:

- 1. Welding must be done only by a qualified and experienced person.
- Adequate ground contacts and shields must be positioned as required to protect components from damage due to heat, contact by weld splatter, arcing, or other potentially damaging events associated with welding.
- The following precautions are to be taken to protect the electronic control components. Refer to section 00, paragraph 3: "PRECAUTIONS TO BE OBSERVED BEFORE WELDING" in this manual.
- 4. Always wear the appropriate safety equipment.
- 5. Weld in clean and well ventilated area, and always have an appropriate fire extinguisher within your reach.

3. VEHICLE EXTERIOR MAINTENANCE

Regular washing to remove dust and dirt is recommended. See "Owner's Manual" for more details on washing and cleaning your vehicle.

3.1 CORROSION PREVENTION

Preventive maintenance is a key factor in avoiding corrosion and must be considered as part of the regular service intervals. The entire underside of the vehicle is sprayed with a heavy application of asphalt base undercoating.

The operating environment the vehicle is subjected to will largely influence the amount of dirt and corrosion that will accumulate over a given period. Corrosion is one of the most costly factors of part failure and shortened part life. It is, however, an item that can be controlled when it is conscientiously looked after and the proper steps are taken in a timely manner.

Certain areas of the coach are more vulnerable to corrosion than others, and it is these areas that should be addressed. For example, the rear baggage compartment bulkhead in the rear wheelhousing area contains many key components and should be examined regularly for corrosion. Other areas include the front wheelhousing area and the engine compartment.

Road splash will affect undercarriage, condenser coil and engine compartment. These areas must be thoroughly cleaned to remove dirt accumulations from flanges, channels and ledges. These places accumulate dirt and salt and hold it in direct contact with steel and aluminum surfaces. Use an understructure high pressure spray as part of a regular wash. Damaged undercoating or paint should be promptly repaired before corrosion can start.

Frequency of wash periods depends on operating conditions. During periods of exposure to salt, daily washing as described above is recommended. If underbody parts show evidence of rust or corrosion, treat as follows:

- 1. Remove dirt, grease and oil by solvent washing.
- Remove corrosion as well as all loose coating by cleaning with a wire brush or sandblasting.



CAUTION

Sandblasting can be used for cleaning bulkheads, brackets and other structural members. It should not be used for exterior side paneling. Extreme care should be taken not to sandblast excessively.

3. Apply correct primer, paint and undercoating after removing all corrosion to prevent further damage.

3.2 PREVENTIVE MAINTENANCE SCHEDULE

NOTE

TECTYL 185 GW rust inhibitor may have been applied on your vehicle underbody as an option, if this is the case, follow this procedure thoroughly. For future application of product, refer to paragraph 3.3 in this section.

	INTERVALS				
DESCRIPTION MONTH KM S MILES		MAINTENANCE	CORRECTIVE ACTION	REFERENCE	
BODY, EXTERNAL WINDOW FRAME	6	40 000 25 000	VISUALLY INSPECT SEALING BEADS CONDITION	REPAIR OR REPLACE SEALING BEADS IF NECESSARY	
VEHICLE UNDERBODY	12	100 000 60 000	USE A LOW PRESSURE SPRAY TO CLEAN UNDER-STRUCTURE AND VISUALLY INSPECT FOR CALCIUM DEPOSIT, CORROSION OR ANY DIRT ACCUMULATED ONTO EXPOSED SURFACES. VISUALLY INSPECT SEALING BEADS CONDITION.	APPLY UNDERCOATING LOCALLY AS NECESSARY.	
			VISUALLY INSPECT IF UNDERFLOOR IS PEALING. VISUALLY INSPECT WHEELHOUSING COATING.	APPLY UNDERCOATING LOCALLY AS NECESSARY	
			MAKE SURE DISCHARGE TUBES ARE FREE FROM OBSTRUCTIONS	REMOVE ANY OBSTRUCTION OR REPLACE DEFECTIVE TUBE	
SUSPENSION AND UNDERSTRUCTURE	12	100 000 60 000	VERIFY THE CONDITION OF ALL SUSPENSION AND UNDERSTRUCTURE FASTENERS AND CLAMPS	TIGHTEN OR REPLACE DEFECTIVE OR MISSING FASTENERS	
FLOOR COVERING	3	20 000 12 500	VISUALLY INSPECT IF FLOOR COVERING IS SHOWING SIGNS OF DETERIORATION SUCH AS CUTS, BURNS, ETC. ALSO, VISUALLY INSPECT SEALANT ALONGSIDE TRACKS. INSPECT WALL PANELS FROM BOTTOM TO WINDOWS	REPAIR OR REPLACE DEFECTIVE COVERING. MAKE SURE PROPER SEALANT IS USED.	
FLOOR CLEANING			CLEAN FLOOR COVERING AS NECESSARY		



WARNING

Failure to follow this preventive maintenance schedule will result in warranty void.

3.3 RUST INHIBITOR APPLICATION

Material: Tectyl 185 GW R1KG21 Safety Rules: Use safety glasses Supplied air hood

Solvent-resistant rubber gloves

1.0 Wash both wheelhousing mechanical parts before masking.

A water-hose nozzle is recommended. Water may be hot to reduce washing time especially during winter. If parts are soiled with oil, clean using R1KG21. Avoid rubber parts.

2.0 Dry all water sprayed parts. Surface temperature and dew point must be respected before applying rust inhibitor.

Air pressure system may be used, refer to annex 1 for surface temperature and dew point.

3.0 Front wheelhousing

a) Mask all rubber joints. Braking system must also be protected (refer to arrows). Commercial aluminum foil may be used for masking.




3.1 Front wheelhousing

Front view



3.2 Front wheelhousing

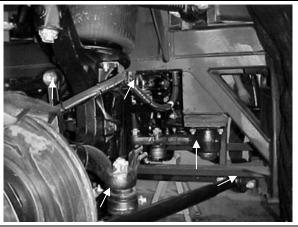

3.3 Front wheelhousing (Entire braking system) 4.0 Rear wheelhousing a) Mask all rubber joints. Braking system must also be protected (refer to arrows). Commercial aluminum foil may be used for masking (Entire braking system) 4.1 Rear wheelhousing (Entire braking system)

4.2 Rear wheelhousing (Entire braking system) . 4.3 Rear wheelhousing 5.0 Close off wheelhousing using masking paper. Prevent rust inhibitor from coming in contact with paint. To close off wheelhousing, a polythene sheet may be used. 6.0 Apply TECTYL 185 GW black rust inhibitor onto A spray gun and pumping system are required to apply the rust inhibitor. If the application is done inside a paint wheelhousing mechanical parts. room, select high speed ventilation. Minimum required thickness is 10 mils wet or 5 mils dry. 7.0 Remove all masking material 30 minutes after application.

ANNEX 1

 Check and confirm that dew point and surface temperature are in accordance with to the following criteria:

Surface temperature > 10°C

Surface temperature > or = to dew point + 3°C

NOTE

Use the following table to determine dew point.

2. Check and confirm that TECTYL temperature is between 10°C and 35°C.

DEW POINT

									Rela	ative	e Humidity (%)
	10	20	30	40	50	60	70	80	90	100)
Temp (c)											
0		-16	-11	-8	-5	-3	-1	0	1	3	
1		-15	-10	-7	-5	-3	-1	1	2	4	
2		-14	-10	-6	-4	-1	0	2	3	5	
3		-13	-9	-5	-3	-1	1	2	4	6	
4		-13	-8	-5	-2	0	2	4	5	7	
5		-11	-7	-4	-1	1	3	5	6	8	
6		-11	-8	-3	0	2	4	6	7	9	
7	-18	-10	-6	-2	0	2	5	6	8	10	
8	-17	-9	-5	-1	1	4	6	7	9	11	
9	-16	-9	-4	-1	2	4	6	9	10	12	
10	-16	-8	-3	0	3	5	7	10	11	13	
11	-15	-7	-3	1	4	6	9	10	12	14	
12	-14	-6	-1	2	5	7	10	11	13	15	
13	-14	-6	-1	2	6	8	10	12	14	16	
14	-13	-5	0	4	6	9	11	14	15	17	
15	-12	-4	1	4	7	10	12	14	16	18	
16	-11	-4	1	5	9	11	13	15	17	19	
17	-10	-3	2	6	9	12	14	16	18	20	
18	-10	-2	3	7	10	13	15	17	19	21	
19	-9	-1	4	8	11	14	16	18	20	22	
20	-9	0		5	9	12	15	17	19	21	23
21	-8	0		5	10	13	16	18	20	22	24
22	-7	1		6	11	14	16	19	21	23	25
23	-6	2		7					22		
24	-6	2		8					23		
25	-5	3		9					24		
26	-4	4							25		
27	-4	5							26		
28	-3	6							27		
29	-2 1	6 7							28		
30	-1 1	7 o							29		
31	-1 0	8 9							30		
32	0	Э		15	∠∪	23	∠0	29	31	33	ວ:

4. COMMON FIBERGLASS REPAIR PROCEDURE

All repairs to fiberglass parts consist of filling the damaged area with fiberglass cloth and resin or strand fiberglass and resin. The repair is allowed to harden, and then finishing operations may be performed. Use of the various materials is determined by the type of repair to be made. Large holes, torn sections and separate joints require the adhesive qualities of the resin and the reinforcing qualities of the fiberglass. Small dents, scratches or pits can be repaired using resin and strand fiberglass and filler mixed into paste. Instructions for either mix are explained under their respective headings in this section. For best results when making repairs, temperature should be between 70 and 75 °F (21-24 °C). Some people experience a skin reaction to resins. In such cases, wipe resin off with denatured alcohol or a good thinner. Use of protective hand cream is recommended.



WARNING

Always wear a respirator and goggles when grinding or sanding.

Extreme care must be taken if the sander is electrically operated, as dust from some resins is combustible when subjected to sparks or open flames. The proper tool for sanding resin is a low speed, air driven disc sander with a water attachment or a dry sander having a vacuum bag. Either will eliminate flying glass and resin dust.

The following additional tools and materials will assist in making repairs: hacksaw blade, assorted files, emery paper or cloth (150 or finer), scissors or tin snips, wax paper or cellophane sheets, a 3" (75 mm) paint roller, paint brush, putty knife, acetone and one or more heat lamps.

4.1 REPAIR USING FIBERGLASS CLOTH

Where necessary, sand paint away around damaged area and scrape away undercoating, if any, and wipe clean with solvent. Grind or file the damaged area to form a "V" at the broken or cracked portion. Sides of "V" should have a shallow pitch for maximum bonding area.

NOTE

Roughening the surface improves adhesion of resin.

If part is warped from original shape, use clamping equipment to straighten the surface. Preheat area to be repaired with one or two heat lamps placed 18 to 24 inches (450-610 mm) from repair.



CAUTION

Temperature should not exceed 140 °F (60 °C) during 30 minutes in order to avoid distortion.

Cut fiberglass cloth with scissors or tin snips, 1 to 3 inches (25-75 mm) larger than area to be repaired. Build area to desired height.

Mix resin and hardener following instructions on their containers. Saturate layers of fiberglass with mixture and place laminates over damaged area. Smooth out wrinkles and make sure general contour of area is maintained. Bubbles and wrinkles can be eliminated with a roller.



CAUTION

The pot life of the mix is approximately 15 minutes. Any accidental contamination to the skin, clothing, tools, etc. must be removed within this period. Use acetone to remove uncured resin.

Heat resin material again by placing heat lamps 18 to 24 inches (450-610 mm) from repaired area. Allow 12 to 15 minutes for repair to cure. After repair is cured, grind, file or sand to contour. Files other than body files may be more suitable. Featheredge and finish sanding.

If small pits or irregularities appear after making repair, correct by using a liberal amount of chopped strand or filler mixed with resin to form a paste. Refer to heading "Repair using Fiberglass Paste" in this section.

4.2 REPAIR USING FIBERGLASS PASTE

Fiberglass paste is used for repairing small dents, scratches, and pits. Paste is made by mixing resin, hardener and fiberglass strand or filler to the consistency of putty. Where it may be necessary, sand paint away around damaged area. On underside of coach, scrape away undercoating from damaged area, and wipe clean with solvent.

Preheat the area to be repaired using heat lamps. Mix desired quantities of resin and hardener according to manufacturer's

instructions. Add powdered fiberglass strand into mixture to thicken it into a putty state.

NOTE

If repair is made on a vertical surface, adding powdered filler material to mixture will reduce tendency of hot resin to flow or run.

Apply the material with a putty knife or similar object, building material up to the desired contour. For deep filling and on vertical surfaces, several layers of material may be used.

A hacksaw blade, held flat to adjacent contour and then moved in a sawing action across the repair when the resin is in a gel state, will remove excess resin from repair. Finish repair with the same procedure as when using fiberglass cloth.

4.3 TYPICAL FIBERGLASS REPAIR PROCEDURE

Remove all loose particles or damaged material using a power sander or rasp. Clean area, overlapping hole approximately 1" to 1-½" (25-40 mm) all around. Remove all dirt, grease and paint from area to ensure good bonding surface. Feather the cleaned area all around (Fig. 4).

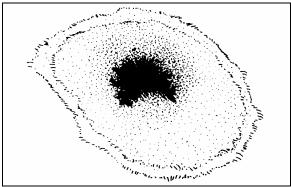


FIGURE 4: FIBERGLASS REPAIR

18089

Cut a piece of fiberglass mat slightly larger than area being repaired. Impregnate mat with general purpose polyester resin catalyzed normally. Use a clean paint brush to apply the polyester resin. Apply impregnated mat over hole and press onto surface with brush to obtain good adherence. Another coat of general purpose polyester resin can be applied at this time (Fig. 5).

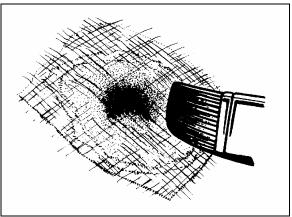


FIGURE 5: FIBERGLASS REPAIR

18090

NOTE

Remove all air between surfaces being joined. Allow area to harden and sand surface to remove any wax.

Apply another mat, followed by a cloth patch, and another mat. All layers must be thoroughly impregnated with polyester resin, brushed well and free of air. Apply more layers of mat and cloth as required until the desired strength and thickness is obtained, minimum two 1-½ oz (43 g) mats and one 9 oz (255 g) cloth (Fig. 6).

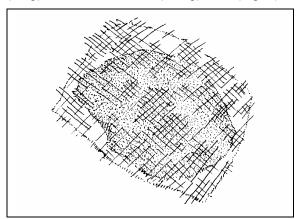


FIGURE 6: FIBERGLASS REPAIR

1809

Allow area to harden and contour the area with coarse sandpaper #100 (Fig. 7).

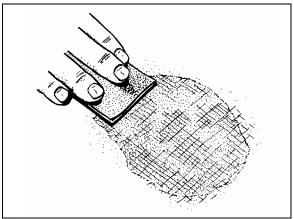


FIGURE 7: FIBERGLASS REPAIR

18092

Cover the area with a layer of resin putty and allow drying for approximately 15 to 20 minutes (Fig. 8).

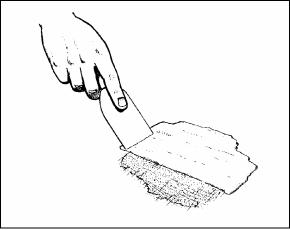


FIGURE 8: FIBERGLASS REPAIR

1809

Smooth off surface with coarse sandpaper #100 to desired shape. Further smooth surface with fine sandpaper #120 until repaired surface matches surrounding area paneling. Prime and paint the area to match surrounding paintwork.

5. COMMON PAINTING PROCEDURE

5.1 NEW PAINT CARE

Our paint supplier recommends that you follow these simple precautions the first months of your new vehicle's life.



CAUTION

Apply these recommendations after repainting vehicle.

During the first 30 days:

- Do not use a commercial bus wash. Stiff brushes or sponges could mar the finish and damage the surface. Wash the vehicle by hand only and with cool water and a very mild bus wash solution. Be careful to use only a soft cloth or sponge;
- Wash vehicle in the shade, never in direct sunlight;
- Do not "dry wipe" vehicle –always use clean water. Dry wiping could scratch the finish;
- Avoid extreme heat and cold. Park vehicle in the shade whenever possible;
- Do not park under trees which drop sap or near factories with heavy smoke fallout.
 Tree sap and industrial fallout may mar or spot a freshly painted surface;
- Trees are also likely to attract birds. Bird droppings are highly acidic and will damage a freshly painted surface. Bird droppings, tree sap and industrial fallout should be washed off as soon as possible;
- Do not spill oil, gasoline, antifreeze, transmission fluid or windshield solvent on new finish. IMMEDIATELY rinse off any such spill with clean water, DO NOT WIPE;
- Do not drive on gravel roads. Paint finish easily chips during the first 30 days;
- Do not scrape ice or snow from the surface.
 A snow scraper can act like a paint scraper if the finish is new. Brush off loose material with a soft snow brush.

During the first 90 days:

 Do not wax or polish the vehicle. This will allow the finish to dry and harden completely.

5.2 PAINT TOUCHUP

When paint touchup or partial repainting is necessary, refer to the vehicle's paint scheme for color codes and paint brand.

Prévost recommends using the original paint brand to ease color matching.

In the event you sand through to the gelcoat surface you should prime the area with Standox "Non Stop Fill Primer (ST-11000)".

If you sand through to metal surface, first prime with Standox "Etch Primer (ST-11858)" then with Standox "Non Stop Fill Primer (ST-11000)".



CAUTION

Be sure to heed all paint manufacturer's recommendations, especially concerning paint dilution and application.

5.3 PAINTING

The standard paint used on the exterior of the vehicle is Standox Basislack. It is a high gloss polyurethane enamel finish designed for exposure to extreme conditions. Other types of paint may be called for as options by owner but are not dealt with in this section.

5.3.1 Safety

Care should be exercised in storing, handling, mixing, and applying paint and chemicals listed in this manual. The topcoat, primer, solvent, catalysts, accelerators, and cleaners are highly volatile and/or toxic if not properly used. Observe all safety instructions marked on the different packaging, as well as the following:

- 1. Do not smoke in the paint room or in adjacent area exposed to residue fumes.
- 2. Wear respirators approved by the governing safety and health regulations.
- 3. Maintain adequate ventilation at all times.
- 4. Dispose of any leftover paint mix properly.
- 5. Wear rubber gloves, rubber apron, and face shield during all phases of paint and chemical handling

5.3.2 Surface Preparation And Paint Application

	Aluminum and / or Stainless Steel	Fiberglass	Comments
Surface Preparation	Sand using P-150 grit sandpaper. It is recommended to sandblast rivets and panel edges with OLIMAG 35-70 blast media.	Sand using P-180 or P-240 sandpaper.	Do not use paint remover over aluminum or fiberglass.
Cleaning	STANDOX silicone remover S	Г-11654 (68-2989)	
Priming	STANDOX Reactive Etch Primer ST-13908 * Wait 30 minutes then apply STANDOX Non-Stop Füllprimer ST-11000 (68-2973)	Füllprimer ST-11000	Refer to product Technical Data sheet for proper mixing
Basecoat	Refer to paint scheme or coach reco and paint brand. We recommend using the same pa matching.	Refer to product Technical Data sheet for proper mixing	
Clearcoat	STANDOX 2K MS Rapid Clear ST-1 Allow 16 hours for drying	Refer to product Technical Data sheet for proper mixing	

If assistance or technical information on STANDOX products is needed, please dial: 1 (800) 551-9296

6. W5 MTH EXTERIOR FINISHING AND BODY REPAIR

The following procedures explain the steps to be followed for proper repair, installation and replacement for various doors, panels and windows pertaining to W5 MTH. The paragraph divides the vehicle into zones to facilitate the search; each zone is then sub-divided into components.

Refer to the appropriate zone then component for complete procedure.

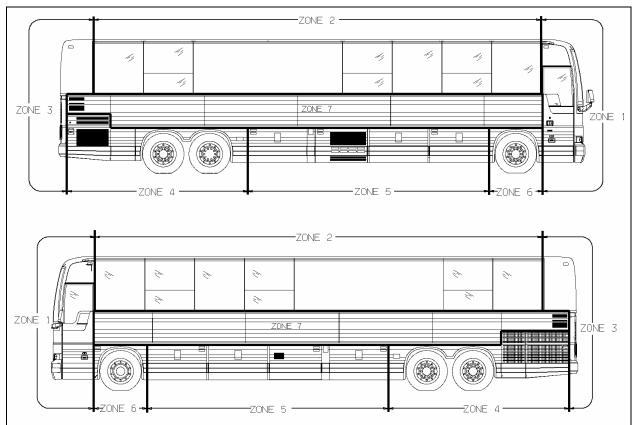


FIGURE 9: W5 MTH ZONING

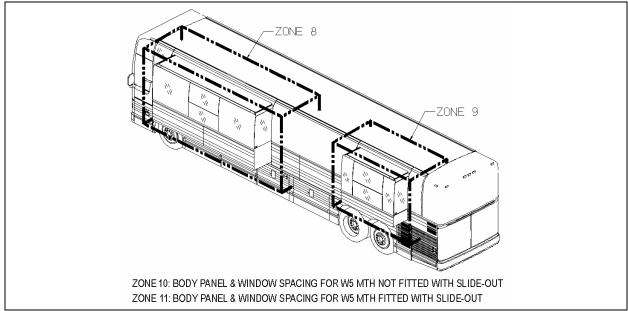


FIGURE 10: W5 MTH FITTED WITH SLIDE-OUT

6.1 ZONE 1

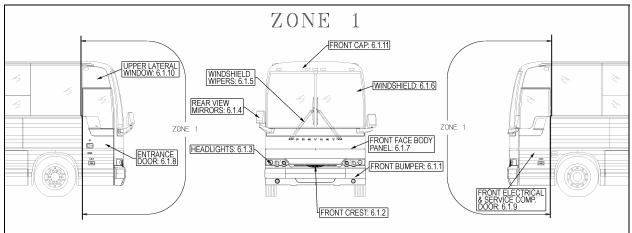


FIGURE 11: ZONE 1

6.1.1 Front Bumper

The front bumper can be tilted downward to give access to the bumper compartment. Pull the release handle located inside front service compartment to unlock. Tilt down the entire bumper assembly to access the compartment. Push the bumper back up firmly in place to lock in position.

Two people are required to remove and install the front bumper. Safely support the bumper and remove the two bolts on each bumper side to separate the bumper from the spare wheel compartment door. To install bumper, reverse the removal procedure.



WARNING

Front bumper is heavy. Use proper lifting equipment to support the bumper during the removal and installation operations to avoid personal injury.

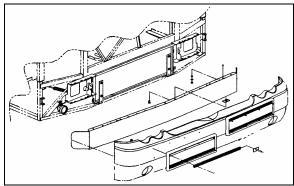


FIGURE 12: FRONT BUMPER REMOVAL



WARNING

The compartment behind the bumper is not designed for storage. Never store loose objects in this compartment since they can interfere with the steering linkage mechanism.

Use care when opening or closing the

Use care when opening or closing the reclining bumper compartment to prevent personal injury.

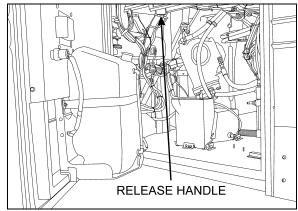


FIGURE 13: FRONT BUMPER RELEASE HANDLE


For gluing of front bumper panel refer to procedure **PR00198** included at the end of this section.

6.1.2 Front Crest


 Use a Chix cloth and anti-silicone to clean the surface where the crest will be applied.

CAUTION

Do not exceed the crest dedicated surface.

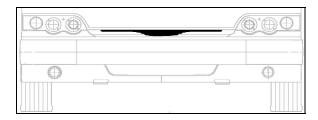

 Peel the back from the self adhesive crest side pieces.

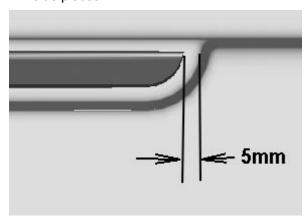

- Peel the back from the self adhesive crest center piece. Center crest and apply.
- Compress the crest three pieces using your hands.



6.1.3 Headlights

Refer to Paragraph 12.1 Headlights, included in Section 06: Electrical of the Maintenance Manual for complete information on headlights.

6.1.4 Rear View Mirrors

Your vehicle is equipped with two exterior mirrors.

The mirrors may be equipped with an optional electric heating system which serves to minimize ice and condensation on the mirror glass in extreme weather conditions. Integral thermostats are installed in both mirrors to avoid continuous heating. Use the appropriate switch on the dashboard to activate the defroster system on both mirrors simultaneously. The mirrors can easily be adjusted by using the remote controls located on the L.H. side control panel. The mirrors have easy to replace glass in case of breakage. Remote control motors can also be replaced.

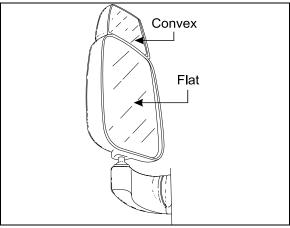


FIGURE 14: REAR VIEW MIRROR (RAMCO)

18398A

Adjustment

At the base of the mirror arm, loosen the mounting bolt to swing arm in or out.

To pivot the mirror head, loosen the setscrews on each side of the ball stub at the base of the mirror head to facilitate the adjustment.

Disassembly

At end of mirror arm, loosen the setscrews to relieve tension on the ball stem. Remove the ball stem from the arm.

Remove the four screws fastening the mirror arm base to the coach.

Assembly

Mount the mirror arm base to the coach. Insert the ball stem into the mirror arm and tighten the socket setscrews.

NOTE

Position the ball cup halves so the joint between them lies on the centerline of the arm. Ensure that the setscrews are not on the joint between the cup halves.

Replacement of Mirror Glass

Remove the broken glass.

Position new glass in mirror head and press to lock the Velcro in place.

Heated / Remote Controlled Rear View Mirrors

Heated/remote controlled external rear view mirrors may be provided to prevent the mirrors from frosting up in cold weather.

The remote controlled external rear view mirrors attach to support arms using a pivot collar secured by setscrews. Loosening the setscrews allows the whole head assembly to turn on the support arm for initial adjustment. A mounting bolt and washer hold the arm support to the mounting bracket. The arm support can be moved to position the mirror head into or away from the coach body.

The mirror heat switch is located to the left of the driver on the dashboard. This switch must be activated before the mirror heating element will energize. Once energized, the mirror heating element is kept at a sustained temperature (between 60-80°F) by a thermostat. Refer to wiring diagram annexed in the technical publication box.



CAUTION

Do not attach stick-on type convex mirror accessories to the heated mirror glass. This could impede uniform heat distribution on the mirror surface which could break the mirror.

Mirror Control

The remote control pointer knob(s) for the mirrors is (are) mounted on the L.H. side control panel. The harness to the mirror head runs through the arm support. The remote motor is mounted to the mirror head behind the mirror glass.

Turn pointer knob to the left for mirror head adjustments and to the right for convex mirror

adjustment, then push down on either of the button's (4) sides to adjust the selected mirror viewing angle.

Disassembly

At end of mirror arm, loosen the setscrews to relieve tension on the ball stud. Remove the ball stud. Remove the ball stud from the arm and gently pull the harness out until the connector is exposed.

Remove the four screws fastening the mirror arm base to the coach. Slide the harness free of the mirror arm base.

Assembly

Attach a stiff wire (snake) to the end of the harness and insert the wire through the mirror arm base and arm, gently pull the harness through the arm and disconnect the "snake". Connect the mirror head harness. Insert the harness connector back into the mirror arm. Insert the ball stud into the mirror arm and tighten the socket setscrews.

NOTE

Position the ball cup halves so the joint between them lies on the centerline of the arm. Ensure that the setscrews are not on the joint between the cup halves.

Convex & Flat Mirror Removal

The mirror glass assembly is mounted to the control mechanism or to mirror base with Velcro strips. Remove the mirror glass by gently pulling the lens to release the Velcro. Disconnect the heater grid at the two connectors.

Connect the connectors of the new mirror's grid to the harness. Install the lens by positioning the lens in the mirror frame and pressing to lock the Velcro in place.

6.1.5 Windshield Wipers

Refer to Paragraph 23.7 Windshield Wipers and Washers, included in Section 23: Accessories of the Maintenance Manual for complete information on windshield wipers.

6.1.6 Windshield

For the removal or installation of windshield, you will need:

- A rope,
- A plastic spatula to lift the rubber seal lip,

- A metal rod or screwdriver to clean the seal groove,
- A filler insertion tool,
- Goggles and protective gloves.
 - From inside of vehicle, remove center post and interior finishing panels surrounding the windshield. In this case, we are replacing the R.H. side windshield.
 - From outside of vehicle, remove filler located inside rubber seal to ease damaged windshield removal.
 - From inside of vehicle, push against the top L.H. side corner of windshield for the removal of a R.H. side windshield. If the L.H. side windshield had to be removed, you would have to push against the top R. H. side corner.

NOTE

We are referring to the L.H and R.H. side as viewed from the inside of the vehicle.

- At the same time, another person gradually lifts the rubber lip from the vehicle exterior using a plastic spatula from top to bottom.
- Remove the entire damaged windshield and broken glass if applicable.
- If applicable, using a screwdriver or metal rod, remove black butyl sealant residue from rubber seal then clean with Sika 205.

❖ Windshield Installation

NOTE

Rubber seal may have to be replaced if it was used on several windshield replacements.

- Spray rubber seal with soapy water to ease windshield insertion.
- Insert rope into rubber extrusion leaving enough length at each corner to make a loop. Spray soapy water onto rope and rubber extrusion (Fig. 15).
- Slide windshield into rubber seal groove starting with the bottom curved side edge.
 Using a plastic spatula, move the rubber seal lip aside to gradually insert the windshield into the groove.

- Spray soapy water on a regular basis to ease this operation.
- Using the same type of plastic spatula, repeat the same operation from inside of vehicle, gradually inserting the windshield into the groove.

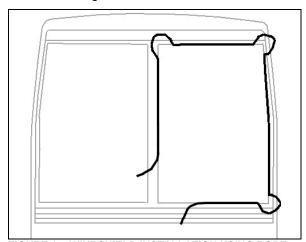


FIGURE 15: WINDSHIELD INSTALLATION USING ROPE

NOTE

Make sure windshield bottom edge is well inserted into the rubber seal groove before proceeding with the sides.

- Then, working from both sides of windshield bottom to top, gradually move the rubber seal lip aside to insert the windshield into the groove. Use also soapy water on the inside of vehicle to insert the windshield into the rubber seal groove.
- Insert the top curved corner then finish with the top of windshield.
- At the top of windshield, clean surface between fiberglass and rubber extrusion using Sika 205 (Fig. 16).
- Apply Sika 221 black between fiberglass and rubber extrusion
- Spray filler and rubber seal groove generously with soapy water.
- Using the special filler insertion tool, insert the filler into the rubber seal groove.
- Gradually insert filler into the rubber seal groove ensuring to leave a 2 inch excess length at the filler extremity.
- Every 6 inches or so, it is important to compress the filler due to its tendency to contract during drying process.

When filler insertion is almost complete, cut filler leaving ¼" of excess length to thwart filler contraction over time then insert filler into groove.

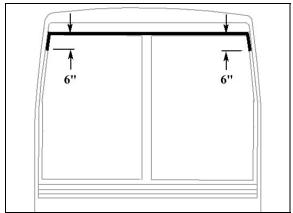


FIGURE 16: APPLICATION OF SIKA 221 BLACK

- Reinstall center post and interior finishing panels.
- Clean windshield surface of butyl residue.

6.1.7 Front face Body Panel

For removal of front face body panel and molding, you will need:

Drill with drill bits, Lever or similar tool, Olfa knife, "C"-clamp, Razor sharp window scraper.

❖ Front Face Molding Removal

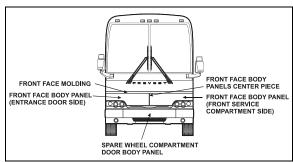


FIGURE 17: VIEW OF FRONT FACE

- First of all, pry loose the front face molding using the lever. Save molding if only the body panel needs to be changed.
- Using the Olfa knife, cut the Sika bead and the double-face self adhesive tape.
 Remove the Sika bead and self adhesive tape residue with the scraper.

Front Face Body Panel Removal

- Using a drill and a 1/8" drill bit remove the rivets fixing the vertical molding. The stainless steel molding is located on the entrance door or service door frame side depending on body panel to be removed.
- Using the Olfa knife, cut the Sika bead and the double-face self adhesive tape.
 Remove the Sika bead and self adhesive tape residue with the scraper.
- Pry loose the front face body panel using the lever.
- While somebody cuts the Sika bead and double-face self adhesive tape, another person pulls the body panel using the "C"clamp to exert tension.
- Using the window scraper, remove any Sika bead or self adhesive tape residue left on fiber glass surface.

Front Face Molding Installation

For gluing of front face molding, refer to procedure **PR00212** included at the end of this section.

Front face Body Panel Installation

For gluing of front face body panels, refer to procedure **PR470047** included at the end of this section.

6.1.8 Entrance Door

For the removal of entrance door body panel, you will need:

Pneumatic "Zip gun" type tool; Razor sharp window scraper;

- Before removing body panel, you can to ease repair uninstall entrance door from vehicle. If applicable, remove reflector, keyless system keyboard and cornering light.
- You must also remove horizontal finishing molding located underneath the window. This molding is glued and will have to be replaced because it will be damaged at removal.
- Remove interior finishing panel to access rub rail fixing bolts, then remove rub rail.
- Using the "Zip Gun", cut Sika bead located ¼ inch (7-8 mm) from each body panel edge and around cornering light.

- Separate body panel from door.
- Remove from door surface Sika bead and double-face self adhesive tape residue using a razor sharp window scraper.
- Use a Chix cloth and anti-silicone to remove any dust or residue.

For assembly, gluing or finishing joints of entrance door, refer to procedure **PR280020** included at the end of this section.

For gluing of entrance door horizontal finishing molding, refer to procedure **PR00213** included at the end of this section.

For the installation of entrance door, refer to procedure **PR280022** included at the end of this section.

6.1.9 Front Electrical & Service Compartment Door

For the removal of front electrical & service door body panel, you will need:

Pneumatic "Zip gun" type tool; Razor sharp window scraper;

- Before removing body panel, you can to ease repair uninstall front electrical & service door from vehicle. If applicable, remove reflector and cornering light.
- You must also remove horizontal finishing molding located underneath the window. This molding is glued and will have to be replaced because it will be damaged at removal.
- Remove interior finishing panel to access rub rail fixing bolts, then remove rub rail.
- Using the "Zip Gun", cut Sika bead located ¼ inch (7-8 mm) from each body panel edge and around cornering light.
- Separate body panel from door.
- Remove from door surface Sika bead and double-face self adhesive tape residue using a razor sharp window scraper.
- Use a Chix cloth and anti-silicone to remove any dust or residue.

For assembly, gluing or finishing joints of front electrical & service compartment door, refer to procedure **PR280021** included at the end of this section.

For gluing of driver's window, refer to procedure **PR290013** included at the end of this section.

For gluing of front electrical & service compartment door horizontal finishing molding, refer to procedure **PR00213** included at the end of this section.

For the installation of front electrical & service compartment door, refer to procedure **PR280022** included at the end of this section.

6.1.10 Upper Lateral Window

For the removal of driver's window or upper lateral window, you will need:

Pneumatic «Zip gun» type tool; Razor sharp window scraper; "Olfa" knife; Face shield.

- In the case of driver's window only, open front service compartment door.
- Mark the position of the driver's window for future reference.
- From inside of vehicle, cut Sika bead around window perimeter using a "Zip gun" while another person hold the window from the outside.

NOTE

Wear ear plugs during this operation.

- Then, move outside of vehicle and cut Sika bead to free window while somebody else hold the window from the inside.
- Carefully remove window from frame, ask for help if needed.
- Using a razor sharp window scraper, remove from window frame Sika bead and double-face self adhesive tape residue.
- First of all, check Sika 205 cleaner expiration date.
- Before applying Sika cleaner, fold "Chix" cloth twice for proper width.
- Apply an even coat onto the inside of window frame and allow drying for 2 minutes (maximum 2 hours).
- Discard waste according to applicable environmental regulations, use dangerous waste containers.

 Apply masking tape before applying Sika glue to protect paint and adjacent window during surface treatment.

For gluing of upper lateral window, refer to procedure **PR290016** included at the end of this section.

6.1.11 Front Cap

The fiberglass front cap does not need any maintenance except painting as needed. It is held in place with adhesive. If ever it has to be replaced, make an appointment at a Prevost service center near you. For minor damages, refer to paragraph 4 "Common Fiberglass Repair procedure" and paragraph 5 "Common Painting Procedure".

6.2 **ZONE 2**

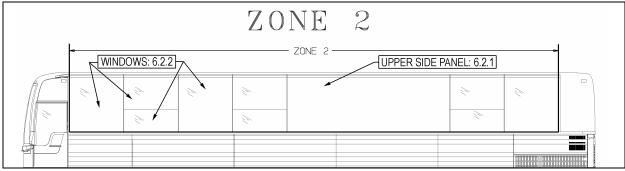


FIGURE 18: ZONE 2

6.2.1 Upper Side Panel

For structure preparation, refer to procedure **PR00035** included at the end of this section.

For installation of upper side panel neoprene foam tapes, refer to procedure **PR00036** included at the end of this section.

For installation of upper side panel, refer to procedure **PR00041** included at the end of this section.

6.2.2 Fixed Windows

Depending on the method chosen for fixed side window removal or installation, you may need:

- Drill equipped with a sharp pointed rod into which a small hole was drilled;
- * Razor sharp window scraper;
- Braided windshield wire and a pair of handles;
- * Gloves, goggles or face shield.

Fixed Window Removal

1st Method

NOTE

This method is used only in the case of a regular fixed side window. For the fixed upper portion of awning or sliding windows, you must use method number 2.

- Apply a sticky plastic film onto all of window outside surface for safety reason.
- Using a drill equipped with the special sharp pointed rod, drill through the window seal into one of the bottom corners, from a 30° angle with reference to the vehicle.
- This procedure requires accuracy and it is possible not to succeed on the first attempt. From the inside of vehicle, a second person ensures the rod passes through.
- Remove the rod; thread the wire into the small hole. Reinsert the rod and the wire into the hole far enough so that the person inside the vehicle can pull the rod using a pair of pliers.
- Attach the wire ends to the specially designed handles.
- Pull in turn from the inside and the outside of vehicle to gradually cut the Sika bead on the window perimeter.
- When you reach top corner, detach wire from the outside handle, secure it to a fish wire or rod and thread it underneath the aluminum molding behind the rivets.
- Detach wire from fish wire and continue cutting using the handle.

 Cut Sika bead until you come back to starting point, then you can remove the window by carefully pushing it out from the inside of vehicle.

2nd Method

- Apply a sticky plastic film onto all of window outside surface.
- To limit as much damage as possible, remove any interior molding in the way. Install a plastic film on the window interior surface and secure using masking tape onto all of window perimeter.

NOTE

Do not stretch plastic film and leave enough play to be able to push window out without tearing the plastic film.

- Using a ball peen hammer, hit one of the window bottom corners from the outside.
- Carefully push window out and lift it up sufficiently to separate it from the aluminum molding.
- Attach the windshield wire to a fish wire and thread it underneath the aluminum molding behind the rivets.
- Detach wire from fish wire and continue cutting using the handle.
- Make a notch at each window top corner to make sure you pass underneath the remaining pieces of glass.
- Remove the aluminum molding and clean up the frame using the window scraper.

For gluing of lateral fixed window behind driver, refer to procedure **PR00046** included at the end of this section.

For gluing of lateral fixed half-window, refer to procedure **PR00045** included at the end of this section.

For the installation of awning or sliding window, refer to procedure **PR00038** included at the end of this section.

For gluing of lateral fixed window, refer to various procedures: **PR00037** for gluing vertical and bottom rubber seals; **PR00043** for the installation of lateral fixed window and **PR00044** for making the Simson joint around fixed windows.

All these procedures are included at the end of this section.

6.2.3 Electric Awning Windows

The electric awning windows are connected directly on the batteries 24 V DC terminal block. As a result, they can be operated regardless of the state open or close of the master switch.

Window Removal

Replacement awning window does not include a new motor. If in working order, transfer the motor of the replaced window to the replacement window. If not, the motor can be bought separately. When replacing the window, keep the components in working order as spare parts.


- 1. Push the vertical latch handle downwards to release the track and then open the window using the horizontal latch handle.
- 2. Take out the screw at the lower end of the track to let free the swiveling arm roller.
- 3. Unplug connectors. Dismount the gas spring from the window.
- 4. Loosen the set screws #5 (figure 20) (rotate the arm to get to the second set screw) and disengage the swiveling arm from the motor shaft extension.
- 5. Push the glass window out ninety degrees (90°).



CAUTION

The window may fall out.

- 6. The window is free and can be unhooked.
- 7. Reverse procedure to install a new one.

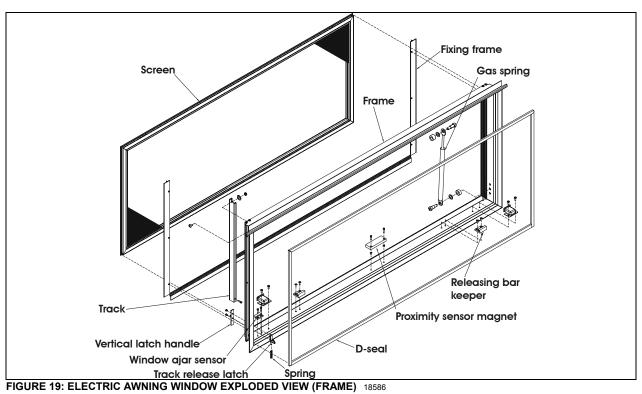

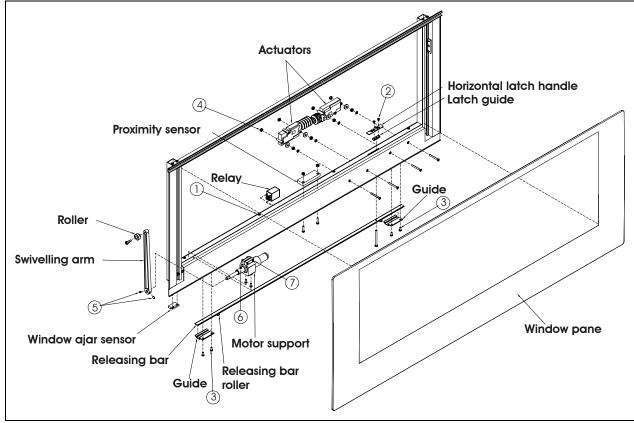


FIGURE 20: ELECTRIC AWNING WINDOW EXPLODED VIEW (SASH)

28 PA1553 18583

Actuator Replacement

- 1. Push the vertical latch handle downwards to release the track and then unlatch the window using the horizontal latch handle.
- 2. Remove actuator access cover by taking out screws #1 (8x).
- 3. Take out screws #2 (2x) and remove horizontal latch handle and guide.
- 4. Take out the guide screws #3 (4x) and remove releasing bar.
- 5. Unplug connectors from defective actuator, unscrew nuts #4 (2x) and remove the actuator.
- 6. Reverse operations for reinstallation.

Motor Replacement

- 1. Push the vertical latch handle downwards to release the track and then unlatch the window using the horizontal latch handle
- 2. Take out the screw at the lower end of the track to let free the swiveling arm roller.
- 3. Remove actuator access cover by taking out screws #1 (8x).
- Loosen the set screws #5 (rotate the arm to get to the second set screw) and disengage the swiveling arm from the motor shaft extension.
- 5. Unplug motor connector and dismount motor and support assembly.
- 6. The shaft extension is glued to the motor shaft. It has to be heated to break the binding to permit removal. Loosen set screw #6 and remove the shaft extension. Also loosen screw #7 and remove motor from the support.

Reverse operations for reinstallation.

E	LECTRIC AWNING WINDOW – CONVERTER CHECKLIST							
Check the electrical circuit	A: The latching system will not operate without power.							
& proximity sensor	Is there electrical power to the latching circuit? The horizontal latch handle, on the sill sash will be seen to move if there is power on this circuit, or it can be checked with an electrical tester. If there is no power to this circuit when the window is closed and either rocker switch are switched "ON", there is a problem with the electrical system.							
	B: The Proximity Sensor on the sash may not be switching power to the latching circuit if the magnet is not getting close enough to the switch OR the Proximity Sensor may be broken (or stuck in one position).							
	Is the proximity sensor switching when the window is closed?							
Check the release force required to operate the horizontal latch handle	A: If the pull force required to move the latch is more than 20lbs the window will not latch properly. Average pull force during testing by manufacturer is 12lbs -15lbs. What is the force required to release the handle? Check using a force gauge (same test done by manufacturer).							
Check Installation	A: If the window is too tightly installed OR if the sequence for tightening the clamping frame screws Is incorrect the window may not close properly.							
	Was the window installed correctly?							
	Was the correct sequence (see below) used when tightening the clamping frame screws?							
	2							
	B: Removing the shipping blocks before the window is installed can create major problems.							

-	
	Were the shipping blocks in place during installation?
	C: Failure to remove the shipping blocks after installation can create interference between sash and frame.
	Have the shipping blocks been removed after installation?
	D: The window is misaligned or not installed squarely.
	Is there interference with any coach parts?
	Is there proper clearance between the bottom of the outer glass and the belt-line trim / seal?
Check for missing parts or misaligned parts	A: The frame and sash are misaligned.
	Is there any interference between the sash and frame?
	Is there clearance between the sash and the rocker switch covers?
	B: Releasing bar guides are missing.
	Check that the releasing bar guides are installed. There should be 4 installed on H windows, and 3 installed on XL2 windows.

6.2.4 Electric Sliding Windows

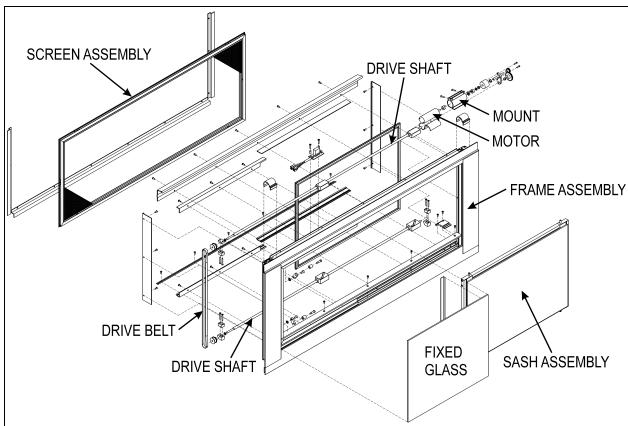


FIGURE 21: ELECTRIC SLIDING WINDOW EXPLODED VIEW

Sash Removal

- 1. Remove the Screen Assembly
- 2. Pull down on both release latches simultaneously and rotate the sash inwards approximately 10 degrees.(Figure 22)



FIGURE 22: REMOVING THE SASH

3. Lift the sash up and out to disengage the bottom of the sash from the window frame. (Figure 23)



FIGURE 23: DISENGAGING THE BOTTOM OF THE SASH

Installation

1. Align the leading edge of the slot on the lower cam follower block with the sash stop. Use the power toggle switch to obtain the correct alignment. (Figure 24)

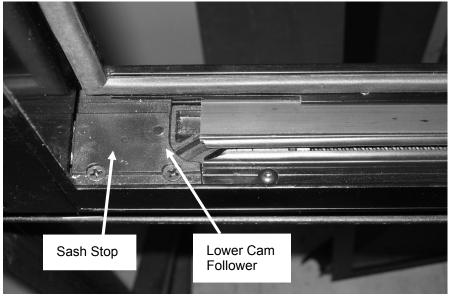


FIGURE 24: PROPER ALIGNMENT

2. Position the left hand lower corner of the sash over the front cam follower block (Figure 25)



FIGURE 25: POSITIONING THE LOWER LEFT CORNER OF THE SASH

- 3. Engage the sash pin with the leading edge of the slot of the cam follower block. Do the same at the rear of the sash.
- 4. Pull down on the release latches and rotate the sash inwards until it is parallel with the window frame.
- 5. Release the latches to engage the latch pins with the upper cam follower blocks.
- 6. Confirm that both latches are in the closed (latched) position. The upper edge of the latch opening must be aligned with upper edge of the sash opening (Figure 26)

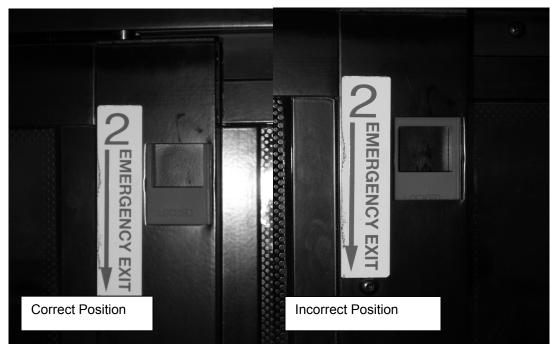


FIGURE 26: RELEASE LATCH PROPER POSITION

- 7. * Failure to confirm this step may lead to the sash becoming disengaged with the frame and could result in personal injury.
- 8. Operate the window to confirm that it opens and closes properly.

Install the screen assembly.

6.3 **ZONE 3**

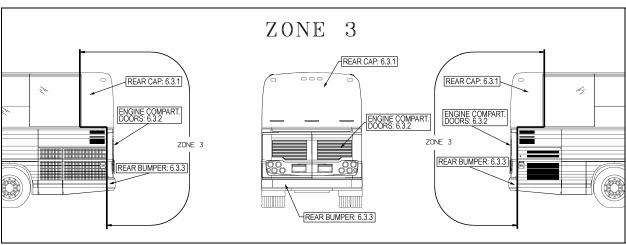


FIGURE 27: ZONE 3

6.3.1 Rear Cap

The fiberglass rear cap does not need any maintenance except painting as needed. It is held in place with adhesive. If ever it has to be replaced, make an appointment at a Prévost service center near you.

For minor damages, refer to Paragraph 4 "Common Fiberglass Repair Procedure" and Paragraph 5 "Common Painting Procedure".

6.3.2 Engine Compartment Doors

Engine Compartment Doors Adjustment

Engine compartment doors may be adjusted for proper fit by untightening hinge bolts:

- Loosen the bolts, (1, 2 Fig. 28) holding the hinge to the vehicle structure to shift the door "UP or DOWN".
- Loosening the bolts (3, Fig. 28) allows the door to be shifted "LEFT or RIGHT" and "IN or OUT".
- 3. Adjust the doors position depending on the gap needed between exterior finishing panels.
- 4. Tighten the bolts.
- 5. Check that the doors swing freely and close properly. It may be necessary to adjust the door latch to get proper fit and operation.

To adjust the latch mechanism (4, Fig. 28) and the striker pin:

- 1. Open the doors to access the striker pin.
- 2. Slightly loosen the striker pin.
- 3. Using a hammer, adjust the striker pin to center it in the door latch mechanism.
- 4. Tighten the striker pin.
- 5. Check doors fit and operation.

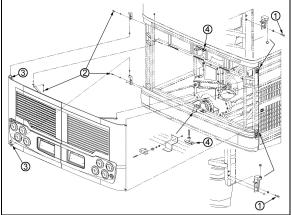


FIGURE 28: ENGINE COMPARTMENT DOORS

18633

Engine Compartment Door Body Panel Removal

For the removal of engine compartment door body panel, you will need:

Pneumatic "Zip gun" type tool; Razor sharp window scraper; A pair of locking pliers; Isopropyl alcohol.

- Remove damaged engine compartment door from vehicle.
- Install the damaged door onto an appropriate support.
- Wearing gloves, goggles and ear plugs, pry loose body panel using a "Zip gun" or lever starting from the edge opposite the curved side.
- Use the "Zip gun" to detach completely the stainless steel body panel from door frame.



CAUTION

Do not damage painted surface.

 Use a second person equipped with a pair of locking pliers to pull the body panel as you cut the Sika bead.



WARNING

Be very careful when pulling the body panel, somebody could get hurt if the body panel suddenly detach from the door surface without notice.

 Using the window scraper, remove any Sika bead or self adhesive tape residue left on the fiber glass surface.

For gluing of engine compartment doors molding, refer to procedure **PR00211** included at the end of this section.

For engine compartment door body panel installation, refer to procedure **PR280032** included at the end of this section.

6.3.3 Rear Bumper

Remove three bolts on each side holding bumper to vehicle and remove bumper.

To install bumper, reverse the procedure.

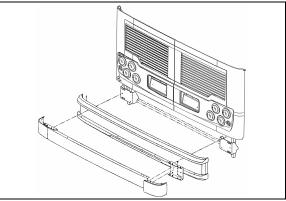


FIGURE 29: REAR BUMPER

6.4 **ZONE 4**

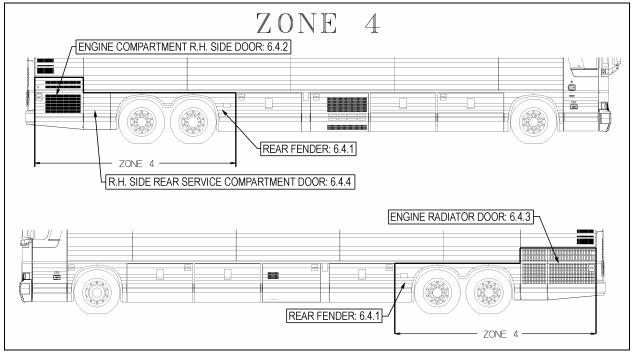


FIGURE 30: ZONE 4

6.4.1 Rear Fender

On the "XLII MTH" series vehicles, rear fenders are hinged for maintenance on brakes and suspension. Each rear fender panel has two mechanical spring loaded holding devices fixing it to the vehicle's structure. Push the spring type rod sideways to disengage the lock.

For the installation of rear fender body panel, refer to procedure **PR470046** included at the end of this section.

6.4.2 Engine Compartment R.H. Side Door

Engine compartment R. H. side door may be adjusted for proper fit by untightening hinge bolts:

- Loosen the bolts, (1, Fig. 31) holding the hinge to the vehicle structure to shift the door "IN or OUT" and "UP or DOWN".
- Loosening the bolts (2, Fig. 31) allows the door to be shifted "LEFT or RIGHT" and "UP or DOWN".
- 3. Adjust the door position depending on the gap needed between exterior finishing panels.
- 4. Tighten the bolts.

Check that the door swings freely and closes properly. It may be necessary to adjust the door latch to get proper fit and operation.

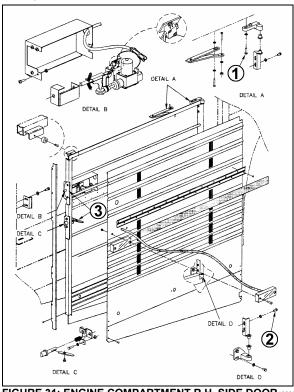


FIGURE 31: ENGINE COMPARTMENT R.H. SIDE DOOR 18635

To adjust the latch mechanism (3, Fig. 31) and the striker pin:


- 1. Open the door to access the striker pin.
- 2. Slightly loosen the striker pin.
- 3. Using a hammer, adjust the striker pin to center it in the door latch mechanism.
- 4. Tighten the striker pin.
- 5. Check door fit and operation.

For gluing of engine compartment R.H. side door finishing molding, refer to procedure **PR00210** included at the end of this section.

6.4.3 Engine Radiator Door

Radiator door may be adjusted for proper fit by untightening hinge bolts:

- Loosen the bolts, (1, Fig. 32) holding the hinge to the vehicle structure to shift the door "IN or OUT" and "UP or DOWN".
- Loosening the bolts (2, Fig. 32) allows the door to be shifted "LEFT or RIGHT" and "UP or DOWN".

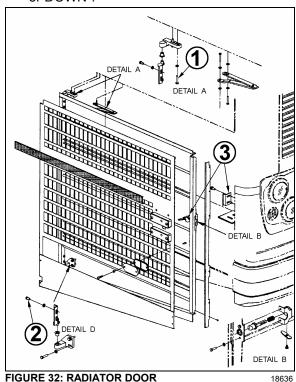

 Adjust the door position depending on the gap needed between exterior finishing panels.

Tighten the bolts.

Check that the door swings freely and closes properly. It may be necessary to adjust the door latch to get proper fit and operation.

To adjust the latch mechanism (3, Fig. 32) and the striker pin:

- 1. Open the door to access the striker pin.
- 2. Slightly loosen the striker pin.
- 3. Using a hammer, adjust the striker pin to center it in the door latch mechanism.
- 4. Tighten the striker pin.
- 5. Check door fit and operation.

Engine Small Radiator Door

Small radiator door may be adjusted for proper fit by untightening hinge bolts:

- Loosen the bolts, (1, Fig. 33) holding the hinge to the vehicle structure to shift the door "IN or OUT" and "UP or DOWN".
- Loosening the bolts (2, Fig. 33) allows the door to be shifted "LEFT or RIGHT" and "UP or DOWN".

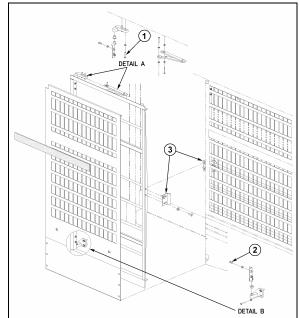


FIGURE 33: SMALL RADIATOR DOOR

- 18636
- 3. Adjust the door position depending on the gap needed between exterior finishing panels.
- 4. Tighten the bolts.
- 5. Check that the door swings freely and closes properly. It may be necessary to

adjust the door latch to get proper fit and operation.

To adjust the latch mechanism (3, Fig. 33) and the striker pin:

- Open the radiator door to access the striker pin.
- 2. Slightly loosen the striker pin.
- 3. Using a hammer, adjust the striker pin to center it in the door latch mechanism.
- 4. Tighten the striker pin.
- 5. Check door fit and operation.

For gluing of engine radiator door finishing molding, refer to procedure **PR00210** included at the end of this section.

6.4.4 R.H. Side Rear Service Compartment Door

To adjust the R. H. side rear service compartment door:

- 1. Open the compartment door.
- Loosen the screws fixing the hinge to hinge attachment or hinge to door assembly. Loosening the screws allows the compartment door assembly to be shifted "LEFT or RIGHT" and "UP or DOWN" or "IN and OUT".
- 3. Adjust compartment door assembly position at the hinge.
- 4. Tighten the screws.

- Respect the required gap between exterior finishing panels.
- Check that the door swings freely and closes properly. It may be necessary to adjust the door latch to get proper fit and operation.

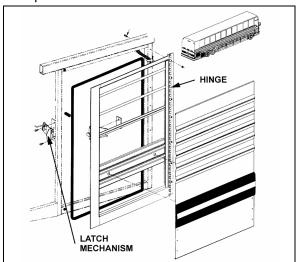


FIGURE 34: R.H. SIDE REAR SERVICE COMPARTMENT DOOR

To adjust the latch mechanism and the striker pin:

- 1. Open the door to access the striker pin.
- 2. Loosen slightly the striker pin.
- 3. Using a hammer, adjust the striker pin to center it in the door latch mechanism.
- 4. Tighten the striker pin.
- 5. Check door fit and operation.

6.5 ZONE 5

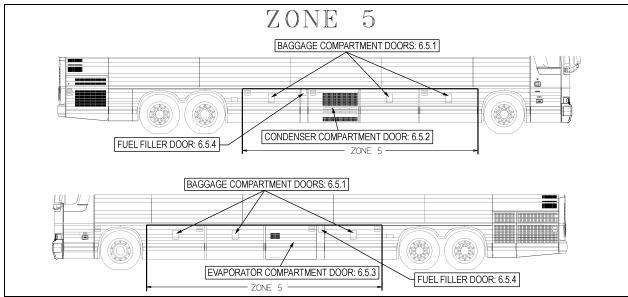


FIGURE 35: ZONE 5

6.5.1 Baggage Compartment Doors

The baggage compartment doors on the vehicle are of identical design. The doors are pantograph, vertical-lift type and are fully sealed. Each door has a flush-mounted latch handle. To open, lift latch handle, then pull door outward and up. The door is held open by 2 gas-charged cylinders. To close, leave latch handle in the open position, pull downward on door and push down on latch to secure door. The door lower arm is spring loaded to secure effort required to close the door (Fig. 36).

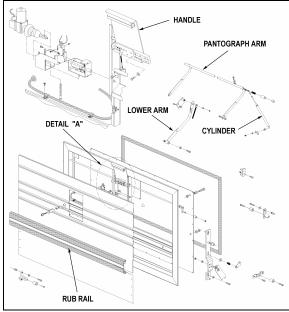


FIGURE 36: BAGGAGE COMPARTMENT DOOR

If a door does not remain in the fully open position, one or both cylinders on that door is (are) defective. To test the cylinders, first support the door in the open position with proper equipment. Disconnect the rod end of one cylinder and retract the rod. If strong resistance is felt, the cylinder is in good condition and can be reinstalled. If the rod retracts with little effort, the cylinder is defective and should be replaced at once. Use the same procedure to test the other cylinder on that door.

❖ Door Removal



CAUTION

Two people are required to remove the baggage compartment doors.

- 1. Maintain the door halfway open by placing a wooden block between one of the pantograph arms and the upper frame.
- 2. Remove cap screw, lock washer and flat washer retaining lower arm to door
- 3. Remove spring pins and lock washers fastening the pantograph arms to the door.



WARNING

Support the door properly to prevent it from falling.

- 4. Spread the pantograph arms away from the door and remove door.
- Inspect all pivot points and bushings for wear and damage. Check tension of gascharged cylinders and replace if necessary.

Pantograph Arms Removal and Installation

- 1. Disconnect rod end of gas-charged cylinders from the pantograph arms.
- 2. Loosen jam nut and cap screw locking the horizontal member of the pantograph to the pivot pin.
- 3. Slide pantograph assembly to the right and remove assembly from the vehicle.
- 4. To install, perform the removal instructions in reverse.

Door Installation

- 1. Use a wooden block to support the pantograph arms horizontally.
- 2. Support the door and insert each pantograph arm into the pivot pins on the side of the door.
- 3. Install washer and spring pin to fasten each arm to its pivot pin.
- 4. Fasten lower arm to the door with flat washer, lock washer and cap screw.
- 5. Remove wooden block and close baggage compartment door.

Door should be adjusted to leave a gap of 3/16" (5 cm) above the top edge of the door. To adjust, loosen the bolts retaining lock plate support and position the door correctly. Tighten the bolts after the adjustment.

If the baggage door locks too tightly or too loosely, the position of the catch striker is misadjusted. To adjust, loosen the catch striker retaining bolts, position the striker correctly and tighten the retaining bolts.

If the lower part of the baggage door does not close evenly with the side of the vehicle, adjust the lock plates by loosening their retaining bolts and positioning the locking plates correctly (Fig. 37).

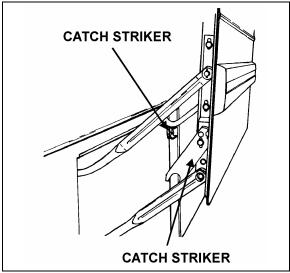


FIGURE 37: BAGGAGE DOOR CATCH STRIKER

For the removal and installation of baggage compartment door body panels, refer to procedure **PR00177** included at the end of this section.

6.5.2 Condenser Compartment Door

- 1. Open the condenser door.
- Loosen the screws fixing the hinge to hinge attachment or hinge to door assembly. Loosening the screws allows the condenser door assembly to be shifted "LEFT or RIGHT" and "UP or DOWN" or "IN and OUT".
- 3. Adjust condenser door assembly position at the hinge.
- 4. Tighten the screws.
- 5. Respect the required gap between exterior finishing panels.
- Check that the door swings freely and closes properly. It may be necessary to adjust the door latch to get proper fit and operation.

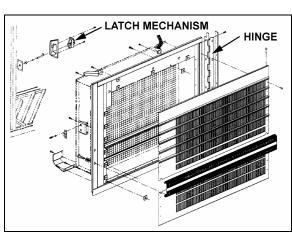


FIGURE 38: CONDENSER DOOR

For the installation of condenser compartment door body panel, refer to procedure **PR00131** included at the end of this section.

6.5.3 Evaporator Compartment Door

- 1. Open the evaporator door.
- Loosen the screws fixing the hinge to hinge attachment or hinge to door assembly. Loosening the screws allows the evaporator door assembly to be shifted "LEFT or RIGHT" and "UP or DOWN" or "IN and OUT".
- 3. Adjust evaporator door assembly position at the hinge.
- 4. Tighten the screws.
- 5. Respect the required gap between exterior finishing panels.
- 6. Check that the door swings freely and closes properly. It may be necessary to adjust the door latch to get proper fit and operation.

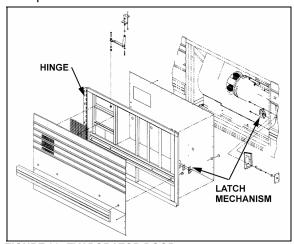


FIGURE 39: EVAPORATOR DOOR

For the installation of evaporator compartment door body panel, refer to procedure PR00133 included at the end of this section.

6.5.4 Fuel Filler Door

- Open the fuel filler door.
- Loosen the screws holding the panel to hinge assembly.
- Adjust the fuel filler door position according to distance required between exterior finishing panels.
- Tighten the nuts.

Check that the door swings freely and closes properly.

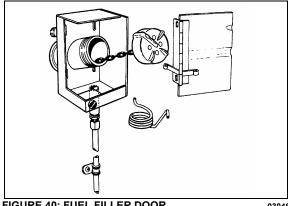


FIGURE 40: FUEL FILLER DOOR

03046

6.6 **ZONE 6**

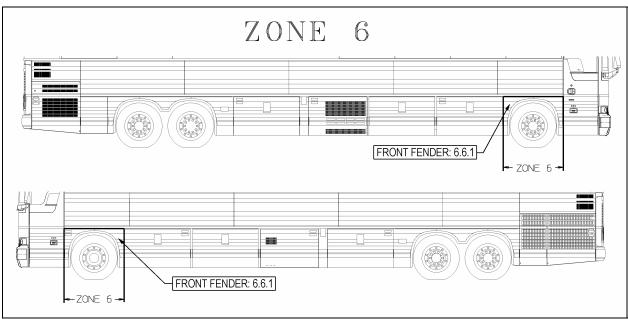


FIGURE 41: ZONE 6

6.6.1 Front Fender

Front fender may be removed using the following procedure:

Remove the nuts on the inside of the fender. Remove the fender from the vehicle. To reinstall, reverse the procedure.

For the installation of front fender body panel, refer to procedure PR470024 included at the end of this section.

6.7 ZONE 7

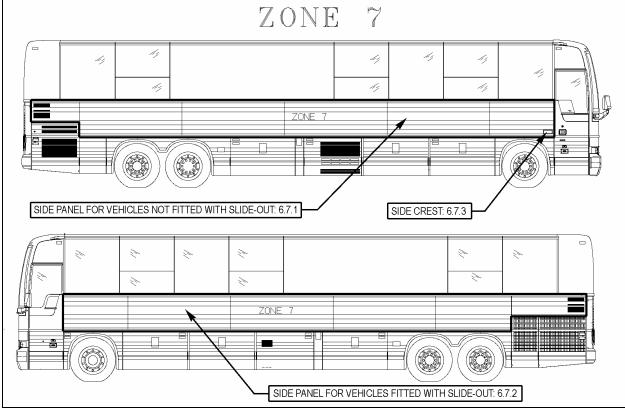


FIGURE 42: ZONE 7

6.7.1 Side Panel for Vehicles Not Fitted With Slide-Out

❖ Removal

Be careful not to damage the adjacent surfaces Remove top and bottom finishing moldings. Insert a screwdriver into snap-on finishing molding joint. You need to remove the finishing molding support Bend finishing molding enough to be able to fix a and rivets in the case of engine air intake panel. pair of locking pliers. Using the pair of locking pliers, pull the stainless steel molding and at the same time gradually cut Sika bead with a sharp knife. Insert a flat screwdriver between the side panel and the vehicle chassis, in the top left and right corners. Use the c-clamp to peel the side panel from the Ideally, the hoist or chain block must be fastened back structural panel as far as the middle and at to the floor while pulling from a 45° angle so as not the same time gradually cut Sika bead with a to damage the vehicle structure sharp knife. Do the same for the other corner. Remove as much glue as possible from the Never heat SikaFlex adhesive to remove. structure using a putty knife or pneumatic knife without damaging 206 G+P primer. Check panel horizontal supports for straightness Tolerance: 1mm towards the outside and 1.5mm using a straight edge. Take measurements with a towards the inside. ruler.

For the structure preparation before the installation of a ridged side panel, refer to procedure **PR00027** included at the end of this section.

For gluing of ridged side panels, refer to procedure **PR00028** included at the end of this section.

For sealing the side panels' upper portion, refer to procedure **PR00030** included at the end of this section.

For gluing of horizontal finishing molding, refer to procedure **PR00208** included at the end of this section.

6.7.2 Side Panel for Vehicles Fitted With Slide-Out

❖ Removal

Refer to paragraph 6.7.1 for procedure.



CAUTION

Because most junction panels are only riveted and not spot welded, be careful when removing a side panel not to damage adjacent panels.

For the slide-out junction panel preparation before the installation of a ridged side panel, refer to procedure **PR00031** included at the end of this section.

For gluing of ridged side panels on vehicles fitted with slide-out, refer to procedure **PR00029** included at the end of this section.

6.7.3 Side Crest

- Clean vehicle surface using anti-silicone where the side crest and stickers will be applied.
- Using hands apply and compress side crest.
- Apply required stickers.

6.8 **ZONE** 8

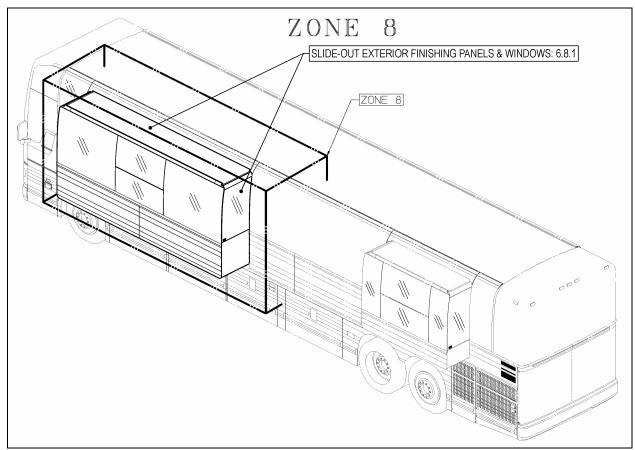


FIGURE 43: ZONE 8

6.8.1 Slide-Out Exterior Finishing Panels & Windows

Refer to Maintenance Manual, Section 26: Paragraph 16 for the procedure on slide-out exterior finishing panels & windows.

6.9 **ZONE 9**

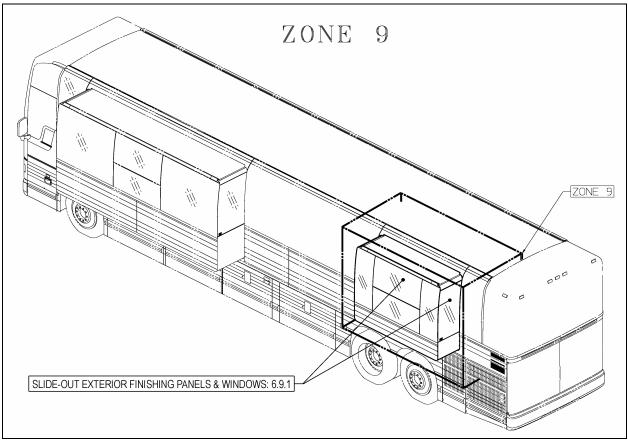


FIGURE 44: ZONE 9

6.9.1 Slide-Out Exterior Finishing Panels & Windows

Refer to Maintenance Manual, Section 26: Paragraph 16 for the procedure on slide-out exterior finishing panels & windows.

6.10 BODY PANEL AND WINDOW SPACING FOR W5 MTH NOT FITTED WITH SLIDE-OUT

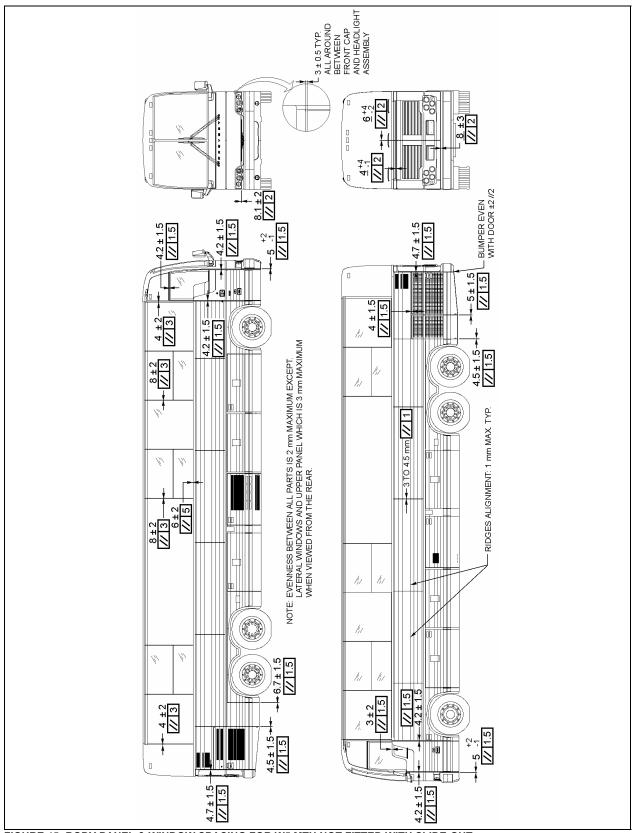


FIGURE 45: BODY PANEL & WINDOW SPACING FOR W5 MTH NOT FITTED WITH SLIDE-OUT

6.11 BODY PANEL AND WINDOW SPACING FOR W5 MTH FITTED WITH SLIDE-OUT

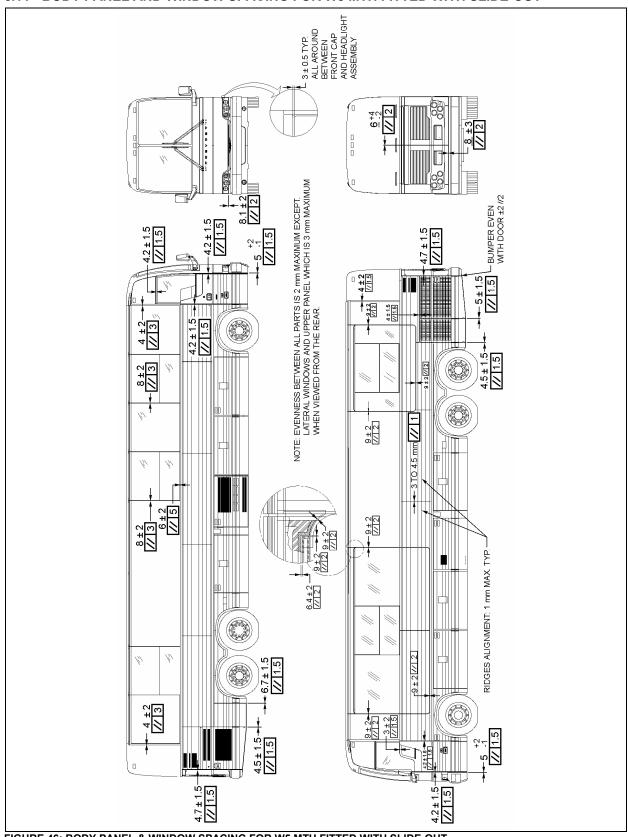


FIGURE 46: BODY PANEL & WINDOW SPACING FOR W5 MTH FITTED WITH SLIDE-OUT

7. W0 MTH EXTERIOR FINISHING AND BODY REPAIR

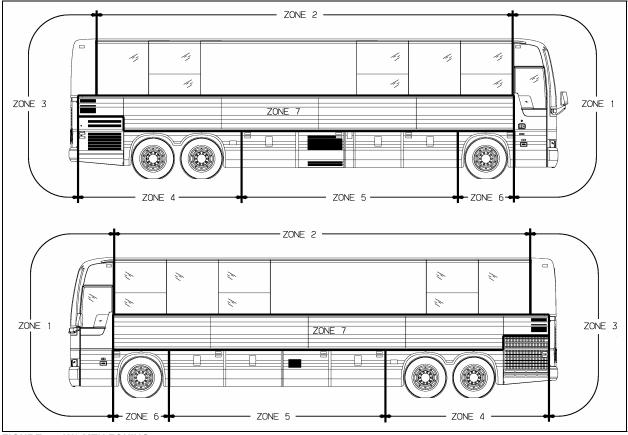


FIGURE 47: W0 MTH ZONING

7.1 **ZONE 1**

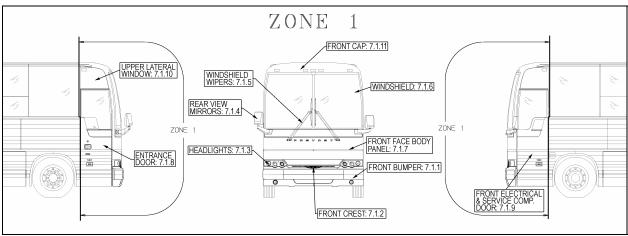


FIGURE 48: ZONE 1

7.1.1 Front Bumper

The front bumper can be tilted downward to give access to the bumper compartment. Pull the release handle located inside front service compartment to unlock. Tilt down the entire bumper assembly to access the compartment.

Push the bumper back up firmly in place to lock in position.

Two people are required to remove and install the front bumper. Safely support the bumper and remove the two bolts on each bumper side to

separate the bumper from the spare wheel compartment door. To install bumper, reverse the removal procedure.



WARNING

Front bumper is heavy. Use proper lifting equipment to support the bumper during the removal and installation operations to avoid personal injury.

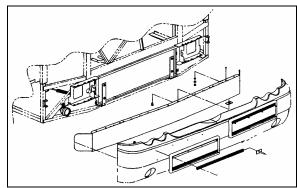


FIGURE 49: FRONT BUMPER REMOVAL



WARNING

The compartment behind the bumper is not designed for storage. Never store loose objects in this compartment since they can interfere with the steering linkage mechanism.

Use care when opening or closing the reclining bumper compartment to prevent personal injury.

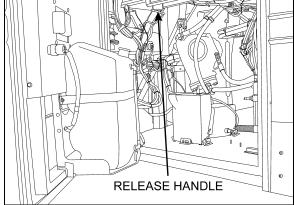


FIGURE 50: FRONT BUMPER RELEASE HANDLE 18613

For gluing of front bumper panel refer to procedure **PR00198** included at the end of this section.


7.1.2 Front Crest

 Use a Chix cloth and anti-silicone to clean the surface where the crest will be applied.




CAUTION

Do not exceed the crest dedicated surface.

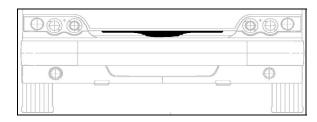

 Peel the back from the self adhesive crest side pieces.

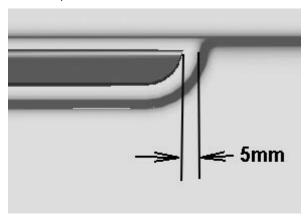

- Peel the back from the self adhesive crest center piece. Center crest and apply.
- Compress the crest three pieces using your hands.



7.1.3 Headlights

Refer to Paragraph 12.1 Headlights, included in Section 06: Electrical of the Maintenance Manual for complete information on headlights.

7.1.4 Rear View Mirrors

Your vehicle is equipped with two exterior mirrors.

The mirrors may be equipped with an optional electric heating system which serves to minimize ice and condensation on the mirror glass in extreme weather conditions. Integral thermostats are installed in both mirrors to avoid continuous heating. Use the appropriate switch on the dashboard to activate the defroster system on both mirrors simultaneously. The mirrors can easily be adjusted by using the remote controls located on the L.H. side control panel. The mirrors have easy to replace glass in case of breakage. Remote control motors can also be replaced.

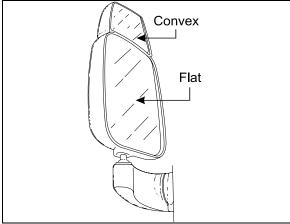


FIGURE 51: REAR VIEW MIRROR (RAMCO)

18398A

❖ Adjustment

At the base of the mirror arm, loosen the mounting bolt to swing arm in or out.

To pivot the mirror head, loosen the setscrews on each side of the ball stub at the base of the mirror head to facilitate the adjustment.

❖ Disassembly

At end of mirror arm, loosen the setscrews to relieve tension on the ball stem. Remove the ball stem from the arm.

Remove the four screws fastening the mirror arm base to the coach.

Assembly

Mount the mirror arm base to the coach. Insert the ball stem into the mirror arm and tighten the socket setscrews.

NOTE

Position the ball cup halves so the joint between them lies on the centerline of the arm. Ensure that the setscrews are not on the joint between the cup halves.

Replacement of Mirror Glass

Remove the broken glass.

Position new glass in mirror head and press to lock the Velcro in place.

Heated / Remote Controlled Rear View Mirrors

Heated/remote controlled external rear view mirrors may be provided to prevent the mirrors from frosting up in cold weather.

The remote controlled external rear view mirrors attach to support arms using a pivot collar secured by setscrews. Loosening the setscrews allows the whole head assembly to turn on the support arm for initial adjustment. A mounting bolt and washer hold the arm support to the mounting bracket. The arm support can be moved to position the mirror head into or away from the coach body.

The mirror heat switch is located to the left of the driver on the dashboard. This switch must be activated before the mirror heating element will energize. Once energized, the mirror heating element is kept at a sustained temperature (between 60-80°F) by a thermostat. Refer to wiring diagram annexed in the technical publication box.



CAUTION

Do not attach stick-on type convex mirror accessories to the heated mirror glass. This could impede uniform heat distribution on the mirror surface which could break the mirror.

Mirror Control

The remote control pointer knob(s) for the mirrors is (are) mounted on the L.H. side control panel. The harness to the mirror head runs through the arm support. The remote motor is

mounted to the mirror head behind the mirror glass.

Turn pointer knob to the left for mirror head adjustments and to the right for convex mirror adjustment, then push down on either of the button's (4) sides to adjust the selected mirror viewing angle.

Disassembly

At end of mirror arm, loosen the setscrews to relieve tension on the ball stud. Remove the ball stud. Remove the ball stud from the arm and gently pull the harness out until the connector is exposed.

Remove the four screws fastening the mirror arm base to the coach. Slide the harness free of the mirror arm base.

Assembly

Attach a stiff wire (snake) to the end of the harness and insert the wire through the mirror arm base and arm, gently pull the harness through the arm and disconnect the "snake". Connect the mirror head harness. Insert the harness connector back into the mirror arm. Insert the ball stud into the mirror arm and tighten the socket setscrews.

NOTE

Position the ball cup halves so the joint between them lies on the centerline of the arm. Ensure that the setscrews are not on the joint between the cup halves.

Convex & Flat Mirror Removal

The mirror glass assembly is mounted to the control mechanism or to mirror base with Velcro strips. Remove the mirror glass by gently pulling the lens to release the Velcro. Disconnect the heater grid at the two connectors.

Connect the connectors of the new mirror's grid to the harness. Install the lens by positioning the lens in the mirror frame and pressing to lock the Velcro in place.

7.1.5 Windshield Wipers

Refer to Paragraph 23.7 Windshield Wipers and Washers, included in Section 23: Accessories of the Maintenance Manual for complete information on windshield wipers.

7.1.6 Windshield

For the removal or installation of windshield, you will need:

- A rope,
- A plastic spatula to lift the rubber seal lip,
- A metal rod or screwdriver to clean the seal groove.
- A filler insertion tool.
- Goggles and protective gloves.
 - From inside of vehicle, remove center post and interior finishing panels surrounding the windshield. In this case, we are replacing the R.H. side windshield.
 - From outside of vehicle, remove filler located inside rubber seal to ease damaged windshield removal.
 - From inside of vehicle, push against the top L.H. side corner of windshield for the removal of a R.H. side windshield. If the L.H. side windshield had to be removed, you would have to push against the top R. H. side corner.

NOTE

We are referring to the L.H and R.H. side as viewed from the inside of the vehicle.

- At the same time, another person gradually lifts the rubber lip from the vehicle exterior using a plastic spatula from top to bottom.
- Remove the entire damaged windshield and broken glass if applicable.
- If applicable, using a screwdriver or metal rod, remove black butyl sealant residue from rubber seal then clean with Sika 205.

❖ Windshield Installation

NOTE

Rubber seal may have to be replaced if it was used on several windshield replacements.

- Spray rubber seal with soapy water to ease windshield insertion.
- Insert rope into rubber extrusion leaving enough length at each corner to make a loop. Spray soapy water onto rope and rubber extrusion (Fig. 52).

- Slide windshield into rubber seal groove starting with the bottom curved side edge. Using a plastic spatula, move the rubber seal lip aside to gradually insert the windshield into the groove.
- Spray soapy water on a regular basis to ease this operation.
- Using the same type of plastic spatula, repeat the same operation from inside of vehicle, gradually inserting the windshield into the groove.

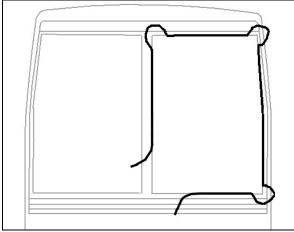


FIGURE 52: WINDSHIELD INSTALLATION USING ROPE

NOTE

Make sure windshield bottom edge is well inserted into the rubber seal groove before proceeding with the sides.

- Then, working from both sides of windshield bottom to top, gradually move the rubber seal lip aside to insert the windshield into the groove. Use also soapy water on the inside of vehicle to insert the windshield into the rubber seal groove.
- Insert the top curved corner then finish with the top of windshield.
- At the top of windshield, clean surface between fiberglass and rubber extrusion using Sika 205 (Fig. 53).
- Apply Sika 221 black between fiberglass and rubber extrusion
- Spray filler and rubber seal groove generously with soapy water.
- Using the special filler insertion tool, insert the filler into the rubber seal groove.

- Gradually insert filler into the rubber seal groove ensuring to leave a 2 inch excess length at the filler extremity.
- Every 6 inches or so, it is important to compress the filler due to its tendency to contract during drying process.
- When filler insertion is almost complete, cut filler leaving 1/4" of excess length to thwart filler contraction over time then insert filler into groove.

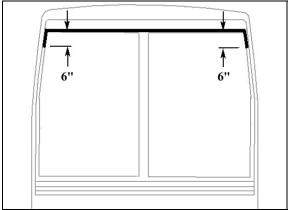


FIGURE 53: APPLICATION OF SIKA 221 BLACK

- Reinstall center post and interior finishing panels.
- Clean windshield surface of butyl residue.

7.1.7 Front face Body Panel

For removal of front face body panel and molding, you will need:

Drill with drill bits, Lever or similar tool, Olfa knife, "C"-clamp, Razor sharp window scraper.

Front Face Molding Removal

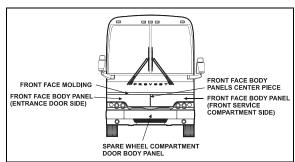


FIGURE 54: VIEW OF FRONT FACE

- First of all, pry loose the front face molding using the lever. Save molding if only the body panel needs to be changed.
- Using the Olfa knife, cut the Sika bead and the double-face self adhesive tape.
 Remove the Sika bead and self adhesive tape residue with the scraper.

Front Face Body Panel Removal

- Using a drill and a 1/8" drill bit remove the rivets fixing the vertical molding. The stainless steel molding is located on the entrance door or service door frame side depending on body panel to be removed.
- Using the Olfa knife, cut the Sika bead and the double-face self adhesive tape.
 Remove the Sika bead and self adhesive tape residue with the scraper.
- Pry loose the front face body panel using the lever.
- While somebody cuts the Sika bead and double-face self adhesive tape, another person pulls the body panel using the "C"clamp to exert tension.
- Using the window scraper, remove any Sika bead or self adhesive tape residue left on fiber glass surface.

Front Face Molding Installation

For gluing of front face molding, refer to procedure **PR00212** included at the end of this section.

Front face Body Panel Installation

For gluing of front face body panels, refer to procedure **PR470047** included at the end of this section.

7.1.8 Entrance Door

For the removal of entrance door body panel, you will need:

Pneumatic "Zip gun" type tool; Razor sharp window scraper;

- Before removing body panel, you can to ease repair uninstall entrance door from vehicle. If applicable, remove reflector, keyless system keyboard and cornering light.
- You must also remove horizontal finishing molding located underneath the window.
 This molding is glued and will have to be

- replaced because it will be damaged at removal.
- Remove interior finishing panel to access rub rail fixing bolts, then remove rub rail.
- Using the "Zip Gun", cut Sika bead located ¼ inch (7-8 mm) from each body panel edge and around cornering light.
- Separate body panel from door.
- Remove from door surface Sika bead and double-face self adhesive tape residue using a razor sharp window scraper.
- Use a Chix cloth and anti-silicone to remove any dust or residue.

For assembly, gluing or finishing joints of entrance door, refer to procedure **PR280020** included at the end of this section.

For gluing of entrance door horizontal finishing molding, refer to procedure **PR00213** included at the end of this section.

For the installation of entrance door, refer to procedure **PR280022** included at the end of this section.

7.1.9 Front Electrical & Service Compartment Door

For the removal of front electrical & service door body panel, you will need:

Pneumatic "Zip gun" type tool; Razor sharp window scraper;

- Before removing body panel, you can to ease repair uninstall front electrical & service door from vehicle. If applicable, remove reflector and cornering light.
- You must also remove horizontal finishing molding located underneath the window.
 This molding is glued and will have to be replaced because it will be damaged at removal.
- Remove interior finishing panel to access rub rail fixing bolts, then remove rub rail.
- Using the "Zip Gun", cut Sika bead located ¼ inch (7-8 mm) from each body panel edge and around cornering light.
- Separate body panel from door.
- Remove from door surface Sika bead and double-face self adhesive tape residue using a razor sharp window scraper.

 Use a Chix cloth and anti-silicone to remove any dust or residue.

For assembly, gluing or finishing joints of front electrical & service compartment door, refer to procedure **PR280021** included at the end of this section.

For gluing of driver's window, refer to procedure **PR290013** included at the end of this section.

For gluing of front electrical & service compartment door horizontal finishing molding, refer to procedure **PR00213** included at the end of this section.

For the installation of front electrical & service compartment door, refer to procedure **PR280022** included at the end of this section.

7.1.10 Upper Lateral Window

For the removal of driver's window or upper lateral window, you will need:

Pneumatic «Zip gun» type tool; Razor sharp window scraper; "Olfa" knife;

Face shield.

- In the case of driver's window only, open front service compartment door.
- Mark the position of the driver's window for future reference.
- From inside of vehicle, cut Sika bead around window perimeter using a "Zip gun" while another person hold the window from the outside.

NOTE

Wear ear plugs during this operation.


- Then, move outside of vehicle and cut Sika bead to free window while somebody else hold the window from the inside.
- Carefully remove window from frame, ask for help if needed.
- Using a razor sharp window scraper, remove from window frame Sika bead and double-face self adhesive tape residue.
- First of all, check Sika 205 cleaner expiration date.
- Before applying Sika cleaner, fold "Chix" cloth twice for proper width.
- Apply an even coat onto the inside of window frame and allow drying for 2 minutes (maximum 2 hours).
- Discard waste according to applicable environmental regulations, use dangerous waste containers.
- Apply masking tape before applying Sika glue to protect paint and adjacent window during surface treatment.

For gluing of upper lateral window, refer to procedure **PR290016** included at the end of this section.

7.1.11 Front Cap

The fiberglass front cap does not need any maintenance except painting as needed. It is held in place with adhesive. If ever it has to be replaced, make an appointment at a Prevost service center near you. For minor damages, refer to paragraph 4 "Common Fiberglass Repair procedure" and paragraph 5 "Common Painting Procedure".

7.2 **ZONE 2**

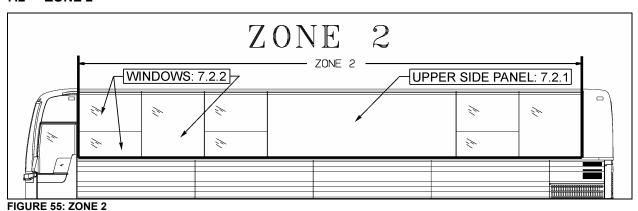

7.2.1 Upper Side Panel

For structure preparation, refer to procedure **PR00035** included at the end of this section.

For installation of upper side panel neoprene foam tapes, refer to procedure **PR00036** included at the end of this section.

For installation of upper side panel, refer to procedure **PR00041** included at the end of this section.

7.2.2 Fixed Windows

Depending on the method chosen for fixed side window removal or installation, you may need:

- Drill equipped with a sharp pointed rod into which a small hole was drilled;
- * Razor sharp window scraper;
- Braided windshield wire and a pair of handles;
- * Gloves, goggles or face shield.

Fixed Window Removal

1st Method

NOTE

This method is used only in the case of a regular fixed side window. For the fixed upper portion of awning or sliding windows, you must use method number 2.

- Apply a sticky plastic film onto all of window outside surface for safety reason.
- Using a drill equipped with the special sharp pointed rod, drill through the window seal into one of the bottom corners, from a 30° angle with reference to the vehicle.
- This procedure requires accuracy and it is possible not to succeed on the first attempt. From the inside of vehicle, a second person ensures the rod passes through.
- Remove the rod; thread the wire into the small hole. Reinsert the rod and the wire into the hole far enough so that the person inside the vehicle can pull the rod using a pair of pliers.
- Attach the wire ends to the specially designed handles.
- Pull in turn from the inside and the outside of vehicle to gradually cut the Sika bead on the window perimeter.

- When you reach top corner, detach wire from the outside handle, secure it to a fish wire or rod and thread it underneath the aluminum molding behind the rivets.
- Detach wire from fish wire and continue cutting using the handle.
- Cut Sika bead until you come back to starting point, then you can remove the window by carefully pushing it out from the inside of vehicle.

2nd Method

- Apply a sticky plastic film onto all of window outside surface.
- To limit as much damage as possible, remove any interior molding in the way. Install a plastic film on the window interior surface and secure using masking tape onto all of window perimeter.

NOTE

Do not stretch plastic film and leave enough play to be able to push window out without tearing the plastic film.

- Using a ball peen hammer, hit one of the window bottom corners from the outside.
- Carefully push window out and lift it up sufficiently to separate it from the aluminum molding.
- Attach the windshield wire to a fish wire and thread it underneath the aluminum molding behind the rivets.
- Detach wire from fish wire and continue cutting using the handle.
- Make a notch at each window top corner to make sure you pass underneath the remaining pieces of glass.
- Remove the aluminum molding and clean up the frame using the window scraper.

For gluing of lateral fixed half-window, refer to procedure **PR00045** included at the end of this section.

For the installation of awning or sliding window, refer to procedure **PR00038** included at the end of this section.

For gluing of lateral fixed window, refer to various procedures: **PR00037** for gluing vertical and bottom rubber seals; **PR00043** for the installation of lateral fixed window and **PR00044**

for making the Simson joint around fixed windows.

All these procedures are included at the end of this section.

7.2.3 Electric Awning Windows

For window or components replacement, refer to paragraph 6.2.3.

7.2.4 Electric Sliding Windows

For sash removal or replacement, refer to paragraph 6.2.4.

7.3 **ZONE 3**

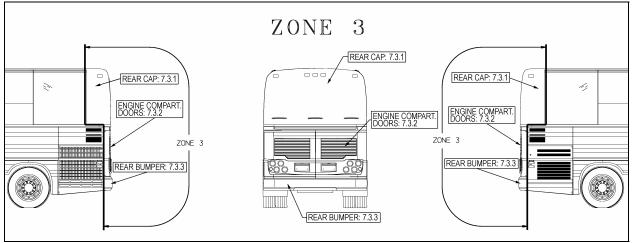


FIGURE 56: ZONE 3

7.3.1 Rear Cap

The fiberglass rear cap does not need any maintenance except painting as needed. It is held in place with adhesive. If ever it has to be replaced, make an appointment at a Prévost service center near you.

For minor damages, refer to Paragraph 4 "Common Fiberglass Repair Procedure" and Paragraph 5 "Common Painting Procedure".

7.3.2 Engine Compartment Doors

Engine Compartment Doors Adjustment

Engine compartment doors may be adjusted for proper fit by untightening hinge bolts:

- 1. Loosen the bolts, (1, 2 Fig. 57) holding the hinge to the vehicle structure to shift the door "UP or DOWN".
- Loosening the bolts (3, Fig. 57) allows the door to be shifted "LEFT or RIGHT" and "IN or OUT".
- 3. Adjust the doors position depending on the gap needed between exterior finishing panels.
- 4. Tighten the bolts.

5. Check that the doors swing freely and close properly. It may be necessary to adjust the door latch to get proper fit and operation.

To adjust the latch mechanism (4, Fig. 57) and the striker pin:

- 1. Open the doors to access the striker pin.
- 2. Slightly loosen the striker pin.
- 3. Using a hammer, adjust the striker pin to center it in the door latch mechanism.
- 4. Tighten the striker pin.
- Check doors fit and operation.

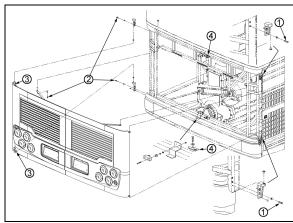


FIGURE 57: ENGINE COMPARTMENT DOORS

1863

Engine Compartment Door Body Panel Removal

For the removal of engine compartment door body panel, you will need:

Pneumatic "Zip gun" type tool; Razor sharp window scraper; A pair of locking pliers; Isopropyl alcohol.

- Remove damaged engine compartment door from vehicle.
- Install the damaged door onto ar appropriate support.
- Wearing gloves, goggles and ear plugs, pry loose body panel using a "Zip gun" or lever starting from the edge opposite the curved side.
- Use the "Zip gun" to detach completely the stainless steel body panel from door frame.



CAUTION

Do not damage painted surface.

 Use a second person equipped with a pair of locking pliers to pull the body panel as you cut the Sika bead.



WARNING

Be very careful when pulling the body panel, somebody could get hurt if the body panel suddenly detach from the door surface without notice.

 Using the window scraper, remove any Sika bead or self adhesive tape residue left on the fiber glass surface.

For gluing of engine compartment doors molding, refer to procedure **PR00211** included at the end of this section.

For engine compartment door body panel installation, refer to procedure **PR280032** included at the end of this section.

7.3.3 Rear Bumper

Remove three bolts on each side holding bumper to vehicle and remove bumper, refer to figure 21.

To install bumper, reverse the procedure.

7.4 **ZONE 4**

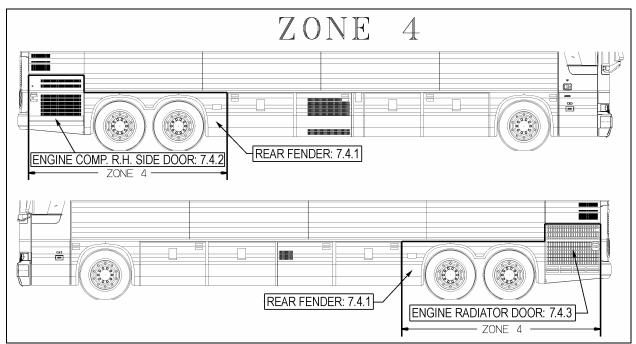


FIGURE 58: ZONE 4

7.4.1 Rear Fender

On the "XLII MTH" series vehicles, rear fenders are hinged for maintenance on brakes and suspension. Each rear fender panel has two mechanical spring loaded holding devices fixing it to the vehicle's structure. Push the spring type rod sideways to disengage the lock.

For the installation of rear fender body panel, refer to procedure **PR470046** included at the end of this section.

7.4.2 Engine Compartment R.H. Side Door

Engine compartment R. H. side door may be adjusted for proper fit by untightening hinge bolts:

- Loosen the bolts, (1, Fig. 59) holding the hinge to the vehicle structure to shift the door "IN or OUT" and "UP or DOWN".
- Loosening the bolts (2, Fig. 59) allows the door to be shifted "LEFT or RIGHT" and "UP or DOWN".
- Adjust the door position depending on the gap needed between exterior finishing panels.
- 4. Tighten the bolts.

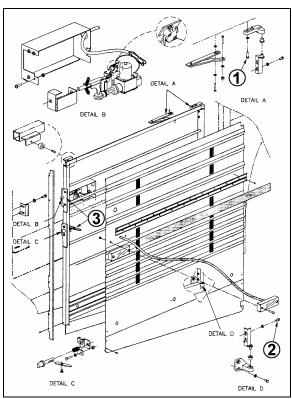


FIGURE 59: ENGINE COMPARTMENT R.H. SIDE DOOR 18635

Check that the door swings freely and closes properly. It may be necessary to adjust the door latch to get proper fit and operation.

To adjust the latch mechanism (3, Fig. 59) and the striker pin:

- 1. Open the door to access the striker pin.
- 2. Slightly loosen the striker pin.
- 3. Using a hammer, adjust the striker pin to center it in the door latch mechanism.
- 4. Tighten the striker pin.
- 5. Check door fit and operation.

For gluing of engine compartment R.H. side door finishing molding, refer to procedure **PR00210** included at the end of this section.

7.4.3 Engine Radiator Door

Radiator door may be adjusted for proper fit by untightening hinge bolts:

- Loosen the bolts, (1, Fig. 60) holding the hinge to the vehicle structure to shift the door "IN or OUT" and "UP or DOWN".
- Loosening the bolts (2, Fig. 60) allows the door to be shifted "LEFT or RIGHT" and "UP or DOWN".

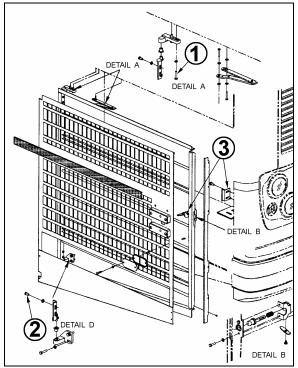


FIGURE 60: RADIATOR DOOR

186

- 3. Adjust the door position depending on the gap needed between exterior finishing panels.
- 4. Tighten the bolts.
- Check that the door swings freely and closes properly. It may be necessary to adjust the door latch to get proper fit and operation.

To adjust the latch mechanism (3, Fig. 60) and the striker pin:

- 1. Open the door to access the striker pin.
- 2. Slightly loosen the striker pin.
- 3. Using a hammer, adjust the striker pin to center it in the door latch mechanism.
- 4. Tighten the striker pin.
- 5. Check door fit and operation.

For gluing of engine radiator door finishing molding, refer to procedure **PR00210** included at the end of this section.

7.5 **ZONE 5**

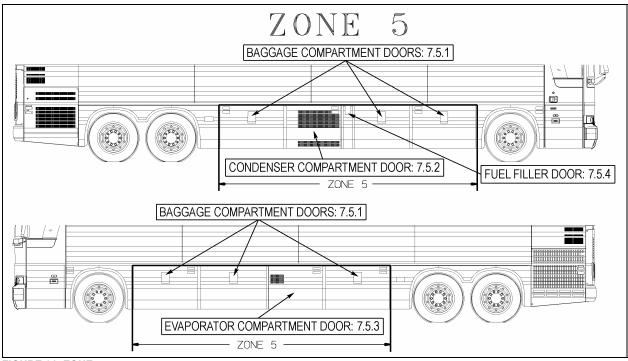


FIGURE 61: ZONE 5

7.5.1 Baggage Compartment Doors

The baggage compartment doors on the vehicle are of identical design. The doors are pantograph, vertical-lift type and are fully sealed. Each door has a flush-mounted latch handle. To open, lift latch handle, then pull door outward and up. The door is held open by 2 gas-charged cylinders. To close, leave latch handle in the open position, pull downward on door and push down on latch to secure door. The door lower arm is spring loaded to secure effort required to close the door (Fig. 62).

If a door does not remain in the fully open position, one or both cylinders on that door is (are) defective. To test the cylinders, first support the door in the open position with proper equipment. Disconnect the rod end of one cylinder and retract the rod. If strong resistance is felt, the cylinder is in good condition and can be reinstalled. If the rod retracts with little effort, the cylinder is defective and should be replaced at once. Use the same procedure to test the other cylinder on that door.

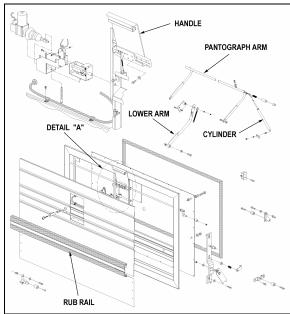


FIGURE 62: BAGGAGE COMPARTMENT DOOR

18145

Door Removal



CAUTION

Two people are required to remove the baggage compartment doors.

- 1. Maintain the door halfway open by placing a wooden block between one of the pantograph arms and the upper frame.
- 2. Remove cap screw, lock washer and flat washer retaining lower arm to door
- 3. Remove spring pins and lock washers fastening the pantograph arms to the door.



WARNING

Support the door properly to prevent it from falling.

- 4. Spread the pantograph arms away from the door and remove door.
- 5. Inspect all pivot points and bushings for wear and damage. Check tension of gascharged cylinders and replace if necessary.
- Pantograph Arms Removal and Installation
- 1. Disconnect rod end of gas-charged cylinders from the pantograph arms.


- 2. Loosen jam nut and cap screw locking the horizontal member of the pantograph to the pivot pin.
- 3. Slide pantograph assembly to the right and remove assembly from the vehicle.
- 4. To install, perform the removal instructions in reverse.

Door Installation

- 1. Use a wooden block to support the pantograph arms horizontally.
- 2. Support the door and insert each pantograph arm into the pivot pins on the side of the door.
- 3. Install washer and spring pin to fasten each arm to its pivot pin.
- 4. Fasten lower arm to the door with flat washer, lock washer and cap screw.
- 5. Remove wooden block and close baggage compartment door.

Door should be adjusted to leave a gap of 3/16" (5 cm) above the top edge of the door. To adjust, loosen the bolts retaining lock plate support and position the door correctly. Tighten the bolts after the adjustment.

If the baggage door locks too tightly or too loosely, the position of the catch striker is misadjusted. To adjust, loosen the catch striker retaining bolts, position the striker correctly and tighten the retaining bolts.

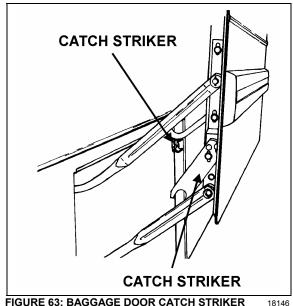

If the lower part of the baggage door does not close evenly with the side of the vehicle, adjust the lock plates by loosening their retaining bolts and positioning the locking plates correctly (Fig. 63).

For the removal and installation of baggage compartment door body panels, refer to procedure **PR00177** included at the end of this section.

7.5.2 Condenser Compartment Door

- 1. Open the condenser door.
- Loosen the screws fixing the hinge to hinge attachment or hinge to door assembly. Loosening the screws allows the condenser door assembly to be shifted "LEFT or RIGHT" and "UP or DOWN" or "IN and OUT".
- 3. Adjust condenser door assembly position at the hinge.
- 4. Tighten the screws.
- 5. Respect the required gap between exterior finishing panels.
- Check that the door swings freely and closes properly. It may be necessary to adjust the door latch to get proper fit and operation.

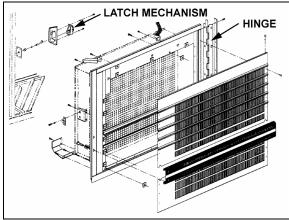


FIGURE 64: CONDENSER DOOR

For the installation of condenser compartment door body panel, refer to procedure **PR00131** included at the end of this section.

7.5.3 Evaporator Compartment Door

- 1. Open the evaporator door.
- Loosen the screws fixing the hinge to hinge attachment or hinge to door assembly.

Loosening the screws allows the evaporator door assembly to be shifted "LEFT or RIGHT" and "UP or DOWN" or "IN and OUT".

- 3. Adjust evaporator door assembly position at the hinge.
- 4. Tighten the screws.
- 5. Respect the required gap between exterior finishing panels.
- Check that the door swings freely and closes properly. It may be necessary to adjust the door latch to get proper fit and operation.

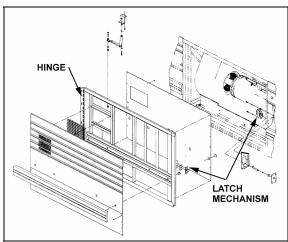


FIGURE 65: EVAPORATOR DOOR

For the installation of evaporator compartment door body panel, refer to procedure **PR00133** included at the end of this section.

7.5.4 Fuel Filler Door

- o Open the fuel filler door.
- Loosen the screws holding the panel to hinge assembly.
- Adjust the fuel filler door position according to distance required between exterior finishing panels.
- Tighten the nuts.
- Check that the door swings freely and closes properly.

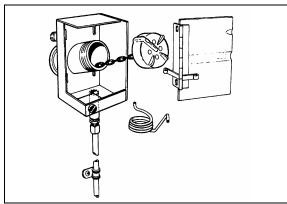


FIGURE 66: FUEL FILLER DOOR

03046

7.6 **ZONE** 6

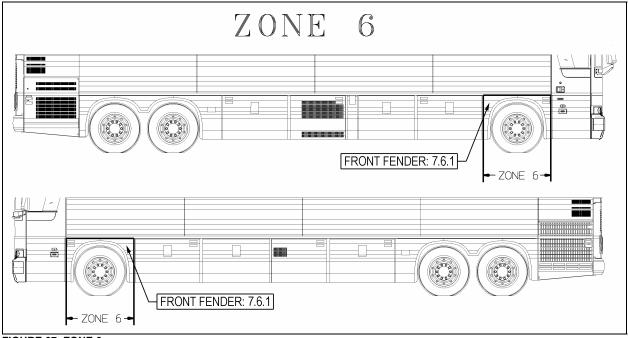


FIGURE 67: ZONE 6

7.6.1 Front Fender

Front fender may be removed using the following procedure:

Remove the nuts on the inside of the fender. Remove the fender from the vehicle. To reinstall, reverse the procedure.

For the installation of front fender body panel, refer to procedure **PR470024** included at the end of this section.

7.7 **ZONE 7**

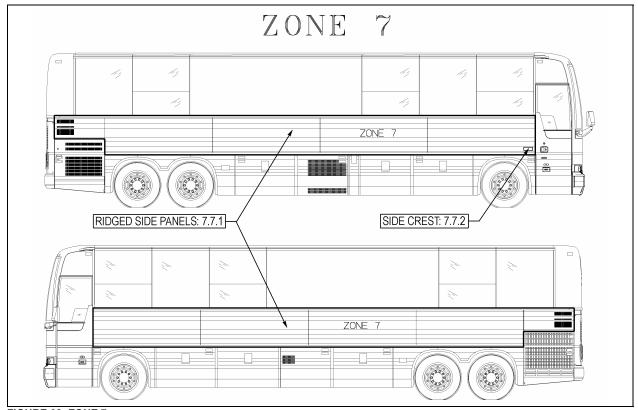


FIGURE 68: ZONE 7

7.7.1 Ridged Side Panels

Removal

Remove top and bottom finishing moldings. Insert Be careful not to damage the adjacent surfaces a screwdriver into snap-on finishing molding joint. You need to remove the finishing molding support Bend finishing molding enough to be able to fix a and rivets in the case of engine air intake panel. pair of locking pliers. Using the pair of locking pliers, pull the stainless steel molding and at the same time gradually cut Sika bead with a sharp knife. Insert a flat screwdriver between the side panel and the vehicle chassis, in the top left and right corners. Use the c-clamp to peel the side panel from the Ideally, the hoist or chain block must be fastened back structural panel as far as the middle and at to the floor while pulling from a 45° angle so as not the same time gradually cut Sika bead with a to damage the vehicle structure sharp knife. Do the same for the other corner. Never heat SikaFlex adhesive to remove. Remove as much glue as possible from the structure using a putty knife or pneumatic knife without damaging 206 G+P primer. Check panel horizontal supports for straightness Tolerance: 1mm towards the outside and 1.5mm using a straight edge. Take measurements with a towards the inside. ruler.

For the structure preparation before the installation of a ridged side panel, refer to procedure PR00027 included at the end of this section.

For gluing of ridged side panels, refer to procedure PR00028 included at the end of this section.

For sealing the side panels' upper portion, refer to procedure PR00030 included at the end of this section.

For gluing of horizontal finishing molding, refer to procedure PR00208 included at the end of this section.

7.7.2 Side Crest

- o Clean vehicle surface using anti-silicone where the side crest and stickers will be applied.
- Using hands apply and compress side crest.
- Apply required stickers.

8. WE MTH EXTERIOR FINISHING AND BODY REPAIR

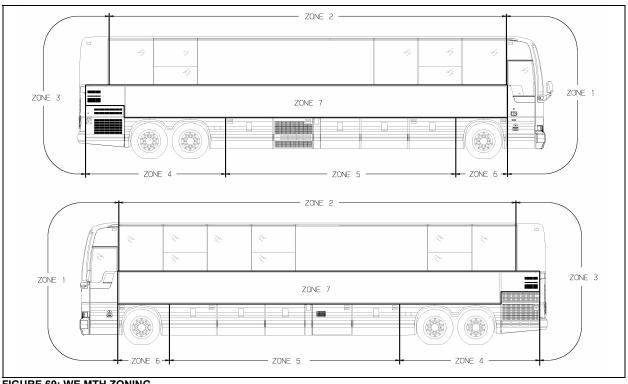


FIGURE 69: WE MTH ZONING

8.1 **ZONE 1**

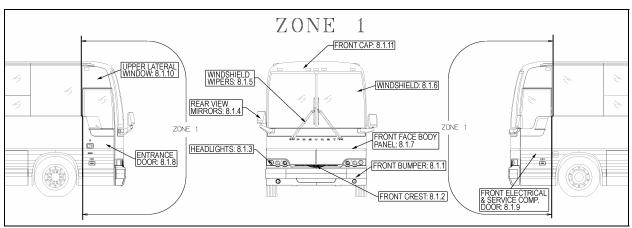


FIGURE 70: ZONE 1

8.1.1 Front Bumper

The front bumper can be tilted downward to give access to the bumper compartment. Pull the release handle located inside front service compartment to unlock. Tilt down the entire bumper assembly to access the compartment.

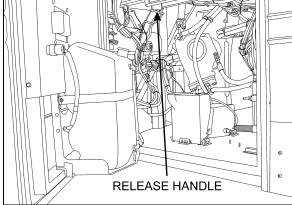


FIGURE 71: FRONT BUMPER RELEASE HANDLE 180

Push the bumper back up firmly in place to lock in position.

Two people are required to remove and install the front bumper. Safely support the bumper and remove the two bolts on each bumper side to separate the bumper from the spare wheel compartment door. To install bumper, reverse the removal procedure.



WARNING

Front bumper is heavy. Use proper lifting equipment to support the bumper during the removal and installation operations to avoid personal injury.

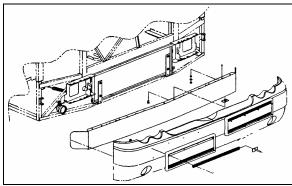


FIGURE 72: FRONT BUMPER REMOVAL



WARNING

The compartment behind the bumper is not designed for storage. Never store loose objects in this compartment since they can interfere with the steering linkage mechanism.

Use care when opening or closing the reclining bumper compartment to prevent personal injury.

For gluing of front bumper panel refer to procedure **PR00198** included at the end of this section.


8.1.2 Front Crest

 Use a Chix cloth and anti-silicone to clean the surface where the crest will be applied.




CAUTION

Do not exceed the crest dedicated surface.

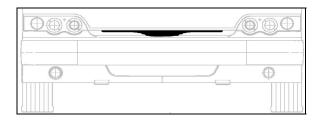

 Peel the back from the self adhesive crest side pieces.

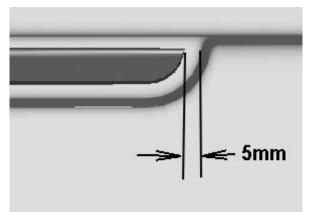

- Peel the back from the self adhesive crest center piece. Center crest and apply.
- Compress the crest three pieces using your hands.



8.1.3 Headlights

Refer to Paragraph 12.1 Headlights, included in Section 06: Electrical of the Maintenance Manual for complete information on headlights.

8.1.4 Rear View Mirrors

Your vehicle is equipped with two exterior mirrors.

The mirrors may be equipped with an optional electric heating system which serves to minimize ice and condensation on the mirror glass in extreme weather conditions. Integral thermostats are installed in both mirrors to avoid continuous heating. Use the appropriate switch on the dashboard to activate the defroster system on both mirrors simultaneously. The mirrors can easily be adjusted by using the remote controls located on the L.H. side control panel. The mirrors have easy to replace glass in case of breakage. Remote control motors can also be replaced.

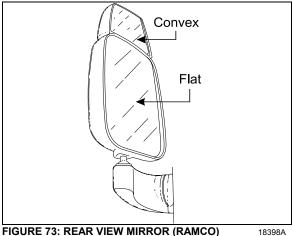


FIGURE 73: REAR VIEW MIRROR (RAMCO)

❖ Adjustment

At the base of the mirror arm, loosen the mounting bolt to swing arm in or out.

To pivot the mirror head, loosen the setscrews on each side of the ball stub at the base of the mirror head to facilitate the adjustment.

Disassembly

At end of mirror arm, loosen the setscrews to relieve tension on the ball stem. Remove the ball stem from the arm.

Remove the four screws fastening the mirror arm base to the coach.

Assembly

Mount the mirror arm base to the coach. Insert the ball stem into the mirror arm and tighten the socket setscrews.

NOTE

Position the ball cup halves so the joint between them lies on the centerline of the arm. Ensure that the setscrews are not on the joint between the cup halves.

Replacement of Mirror Glass

Remove the broken glass.

Position new glass in mirror head and press to lock the Velcro in place.

Heated / Remote Controlled Rear View **Mirrors**

Heated/remote controlled external rear view mirrors may be provided to prevent the mirrors from frosting up in cold weather.

The remote controlled external rear view mirrors attach to support arms using a pivot collar secured by setscrews. Loosening the setscrews allows the whole head assembly to turn on the support arm for initial adjustment. A mounting bolt and washer hold the arm support to the mounting bracket. The arm support can be moved to position the mirror head into or away from the coach body.

The mirror heat switch is located to the left of the driver on the dashboard. This switch must be activated before the mirror heating element will energize. Once energized, the mirror heating element is kept at a sustained temperature (between 60-80°F) by a thermostat. Refer to wiring diagram annexed in the technical publication box.



CAUTION

Do not attach stick-on type convex mirror accessories to the heated mirror glass. This could impede uniform heat distribution on the mirror surface which could break the mirror.

Mirror Control

The remote control pointer knob(s) for the mirrors is (are) mounted on the L.H. side control panel. The harness to the mirror head runs through the arm support. The remote motor is mounted to the mirror head behind the mirror glass.

Turn pointer knob to the left for mirror head adjustments and to the right for convex mirror adjustment, then push down on either of the button's (4) sides to adjust the selected mirror viewing angle.

Disassembly

At end of mirror arm, loosen the setscrews to relieve tension on the ball stud. Remove the ball stud. Remove the ball stud from the arm and gently pull the harness out until the connector is exposed.

Remove the four screws fastening the mirror arm base to the coach. Slide the harness free of the mirror arm base.

Assembly

Attach a stiff wire (snake) to the end of the harness and insert the wire through the mirror arm base and arm, gently pull the harness through the arm and disconnect the "snake". Connect the mirror head harness. Insert the harness connector back into the mirror arm. Insert the ball stud into the mirror arm and tighten the socket setscrews.

NOTE

Position the ball cup halves so the joint between them lies on the centerline of the arm. Ensure that the setscrews are not on the joint between the cup halves.

Convex & Flat Mirror Removal

The mirror glass assembly is mounted to the control mechanism or to mirror base with Velcro strips. Remove the mirror glass by gently pulling

the lens to release the Velcro. Disconnect the heater grid at the two connectors.

Connect the connectors of the new mirror's grid to the harness. Install the lens by positioning the lens in the mirror frame and pressing to lock the Velcro in place.

8.1.5 Windshield Wipers

Refer to Paragraph 23.7 Windshield Wipers and Washers, included in Section 23: Accessories of the Maintenance Manual for complete information on windshield wipers.

8.1.6 Windshield

For the removal or installation of windshield, you will need:

- A rope,
- A plastic spatula to lift the rubber seal lip,
- A metal rod or screwdriver to clean the seal groove,
- A filler insertion tool,
- Goggles and protective gloves.
 - From inside of vehicle, remove center post and interior finishing panels surrounding the windshield. In this case, we are replacing the R.H. side windshield.
 - From outside of vehicle, remove filler located inside rubber seal to ease damaged windshield removal.
 - From inside of vehicle, push against the top L.H. side corner of windshield for the removal of a R.H. side windshield. If the L.H. side windshield had to be removed, you would have to push against the top R. H. side corner.

NOTE

We are referring to the L.H and R.H. side as viewed from the inside of the vehicle.

- At the same time, another person gradually lifts the rubber lip from the vehicle exterior using a plastic spatula from top to bottom.
- Remove the entire damaged windshield and broken glass if applicable.
- If applicable, using a screwdriver or metal rod, remove black butyl sealant residue from rubber seal then clean with Sika 205.

Windshield Installation

NOTE

Rubber seal may have to be replaced if it was used on several windshield replacements.

- Spray rubber seal with soapy water to ease windshield insertion.
- Insert rope into rubber extrusion leaving enough length at each corner to make a loop. Spray soapy water onto rope and rubber extrusion (Fig. 74).
- Slide windshield into rubber seal groove starting with the bottom curved side edge.
 Using a plastic spatula, move the rubber seal lip aside to gradually insert the windshield into the groove.
- Spray soapy water on a regular basis to ease this operation.
- Using the same type of plastic spatula, repeat the same operation from inside of vehicle, gradually inserting the windshield into the groove.

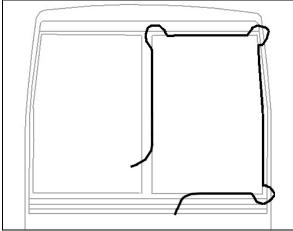


FIGURE 74: WINDSHIELD INSTALLATION USING ROPE

NOTE

Make sure windshield bottom edge is well inserted into the rubber seal groove before proceeding with the sides.

- Then, working from both sides of windshield bottom to top, gradually move the rubber seal lip aside to insert the windshield into the groove. Use also soapy water on the inside of vehicle to insert the windshield into the rubber seal groove.
- Insert the top curved corner then finish with the top of windshield.

- At the top of windshield, clean surface between fiberglass and rubber extrusion using Sika 205 (Fig.75).
- Apply Sika 221 black between fiberglass and rubber extrusion
- Spray filler and rubber seal groove generously with soapy water.
- Using the special filler insertion tool, insert the filler into the rubber seal groove.
- Gradually insert filler into the rubber seal groove ensuring to leave a 2 inch excess length at the filler extremity.
- Every 6 inches or so, it is important to compress the filler due to its tendency to contract during drying process.
- When filler insertion is almost complete, cut filler leaving ¼" of excess length to thwart filler contraction over time then insert filler into groove.

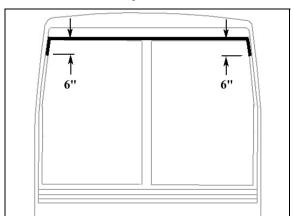


FIGURE 75: APPLICATION 0F SIKA 221 BLACK

- Reinstall center post and interior finishing panels.
- Clean windshield surface of butyl residue.

8.1.7 Front face Body Panel

For removal of front face body panel and molding, you will need:

Drill with drill bits,

Lever or similar tool,

Olfa knife,

"C"-clamp,

Razor sharp window scraper.

Front Face Molding Removal

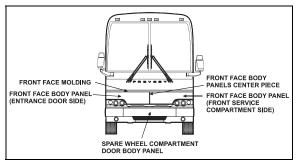


FIGURE 76: VIEW OF FRONT FACE

- First of all, pry loose the front face molding using the lever. Save molding if only the body panel needs to be changed.
- Using the Olfa knife, cut the Sika bead and the double-face self adhesive tape.
 Remove the Sika bead and self adhesive tape residue with the scraper.

Front Face Body Panel Removal

- Using a drill and a 1/8" drill bit remove the rivets fixing the vertical molding. The stainless steel molding is located on the entrance door or service door frame side depending on body panel to be removed.
- Using the Olfa knife, cut the Sika bead and the double-face self adhesive tape.
 Remove the Sika bead and self adhesive tape residue with the scraper.
- Pry loose the front face body panel using the lever.
- While somebody cuts the Sika bead and double-face self adhesive tape, another person pulls the body panel using the "C"clamp to exert tension.
- Using the window scraper, remove any Sika bead or self adhesive tape residue left on fiber glass surface.

Front Face Molding Installation

For gluing of front face molding, refer to procedure **PR00212** included at the end of this section.

Front face Body Panel Installation

For gluing of front face body panels, refer to procedure **PR470047** included at the end of this section.

8.1.8 Entrance Door

For the removal of entrance door body panel, you will need:

Pneumatic "Zip gun" type tool; Razor sharp window scraper;

- Before removing body panel, you can to ease repair uninstall entrance door from vehicle. If applicable, remove reflector, keyless system keyboard and cornering light.
- You must also remove horizontal finishing molding located underneath the window.
 This molding is glued and will have to be replaced because it will be damaged at removal.
- Remove interior finishing panel to access rub rail fixing bolts, then remove rub rail.
- Using the "Zip Gun", cut Sika bead located ¼ inch (7-8 mm) from each body panel edge and around cornering light.
- Separate body panel from door.
- Remove from door surface Sika bead and double-face self adhesive tape residue using a razor sharp window scraper.
- Use a Chix cloth and anti-silicone to remove any dust or residue.

For assembly, gluing or finishing joints of entrance door, refer to procedure **PR280020** included at the end of this section.

For gluing of entrance door horizontal finishing molding, refer to procedure **PR00213** included at the end of this section.

For the installation of entrance door, refer to procedure **PR280022** included at the end of this section.

8.1.9 Front Electrical & Service Compartment Door

For the removal of front electrical & service door body panel, you will need:

Pneumatic "Zip gun" type tool; Razor sharp window scraper;

- Before removing body panel, you can to ease repair uninstall front electrical & service door from vehicle. If applicable, remove reflector and cornering light.
- You must also remove horizontal finishing molding located underneath the window.

This molding is glued and will have to be replaced because it will be damaged at removal.

- Remove interior finishing panel to access rub rail fixing bolts, then remove rub rail.
- Using the "Zip Gun", cut Sika bead located ¼ inch (7-8 mm) from each body panel edge and around cornering light.
- Separate body panel from door.
- Remove from door surface Sika bead and double-face self adhesive tape residue using a razor sharp window scraper.
- Use a Chix cloth and anti-silicone to remove any dust or residue.

For assembly, gluing or finishing joints of front electrical & service compartment door, refer to procedure **PR280021** included at the end of this section.

For gluing of driver's window, refer to procedure **PR290013** included at the end of this section.

For gluing of front electrical & service compartment door horizontal finishing molding, refer to procedure **PR00213** included at the end of this section.

For the installation of front electrical & service compartment door, refer to procedure **PR280022** included at the end of this section.

8.1.10 Upper Lateral Window

For the removal of driver's window or upper lateral window, you will need:

Pneumatic «Zip gun» type tool; Razor sharp window scraper; "Olfa" knife; Face shield.

- In the case of driver's window only, open front service compartment door.
- Mark the position of the driver's window for future reference.
- From inside of vehicle, cut Sika bead around window perimeter using a "Zip gun" while another person hold the window from the outside.

NOTE

Wear ear plugs during this operation.

- Then, move outside of vehicle and cut Sika bead to free window while somebody else hold the window from the inside.
- Carefully remove window from frame, ask for help if needed.
- Using a razor sharp window scraper, remove from window frame Sika bead and double-face self adhesive tape residue.
- First of all, check Sika 205 cleaner expiration date.
- Before applying Sika cleaner, fold "Chix" cloth twice for proper width.
- Apply an even coat onto the inside of window frame and allow drying for 2 minutes (maximum 2 hours).
- Discard waste according to applicable environmental regulations, use dangerous waste containers.
- Apply masking tape before applying Sika glue to protect paint and adjacent window during surface treatment.

For gluing of upper lateral window, refer to procedure **PR290016** included at the end of this section.

8.1.11 Front Cap

The fiberglass front cap does not need any maintenance except painting as needed. It is held in place with adhesive. If ever it has to be replaced, make an appointment at a Prevost service center near you. For minor damages, refer to paragraph 4 "Common Fiberglass Repair procedure" and paragraph 5 "Common Painting Procedure".

8.2 **ZONE 2**

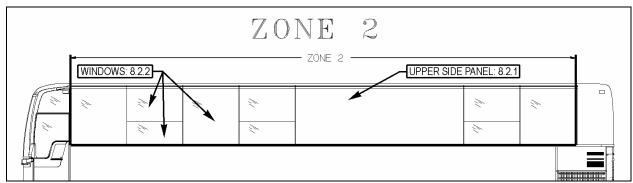


FIGURE 77: ZONE 2

8.2.1 Upper Side Panel

For structure preparation, refer to procedure **PR00035** included at the end of this section.

For installation of upper side panel neoprene foam tapes, refer to procedure **PR00036** included at the end of this section.

For installation of upper side panel, refer to procedure **PR00041** included at the end of this section.

8.2.2 Fixed Windows

Depending on the method chosen for fixed side window removal or installation, you may need:

- Drill equipped with a sharp pointed rod into which a small hole was drilled;
- Razor sharp window scraper;
- * Braided windshield wire and a pair of handles:
- * Gloves, goggles or face shield.

Fixed Window Removal

1st Method

NOTE

This method is used only in the case of a regular fixed side window. For the fixed upper portion of awning or sliding windows, you must use method number 2.

- Apply a sticky plastic film onto all of window outside surface for safety reason.
- Using a drill equipped with the special sharp pointed rod, drill through the window seal into one of the bottom corners, from a 30° angle with reference to the vehicle.

- This procedure requires accuracy and it is possible not to succeed on the first attempt. From the inside of vehicle, a second person ensures the rod passes through.
- Remove the rod; thread the wire into the small hole. Reinsert the rod and the wire into the hole far enough so that the person inside the vehicle can pull the rod using a pair of pliers.
- Attach the wire ends to the specially designed handles.
- Pull in turn from the inside and the outside of vehicle to gradually cut the Sika bead on the window perimeter.
- When you reach top corner, detach wire from the outside handle, secure it to a fish wire or rod and thread it underneath the aluminum molding behind the rivets.
- Detach wire from fish wire and continue cutting using the handle.
- Cut Sika bead until you come back to starting point, then you can remove the window by carefully pushing it out from the inside of vehicle.

2nd Method

- Apply a sticky plastic film onto all of window outside surface.
- To limit as much damage as possible, remove any interior molding in the way. Install a plastic film on the window interior surface and secure using masking tape onto all of window perimeter.

NOTE

Do not stretch plastic film and leave enough play to be able to push window out without tearing the plastic film.

- Using a ball peen hammer, hit one of the window bottom corners from the outside.
- Carefully push window out and lift it up sufficiently to separate it from the aluminum molding.
- Attach the windshield wire to a fish wire and thread it underneath the aluminum molding behind the rivets.
- Detach wire from fish wire and continue cutting using the handle.
- Make a notch at each window top corner to make sure you pass underneath the remaining pieces of glass.
- Remove the aluminum molding and clean up the frame using the window scraper.

For gluing of lateral fixed half-window, refer to procedure **PR00045** included at the end of this section.

For the installation of awning or sliding window, refer to procedure **PR00038** included at the end of this section.

For gluing of lateral fixed window, refer to various procedures: **PR00037** for gluing vertical and bottom rubber seals; **PR00043** for the installation of lateral fixed window and **PR00044** for making the Simson joint around fixed windows.

All these procedures are included at the end of this section.

8.2.3 Electric Awning Windows

For window or components replacement, refer to paragraph 6.2.3.

8.2.4 Electric Sliding Windows

For sash removal or replacement, refer to paragraph 6.2.4.

8.3 **ZONE 3**

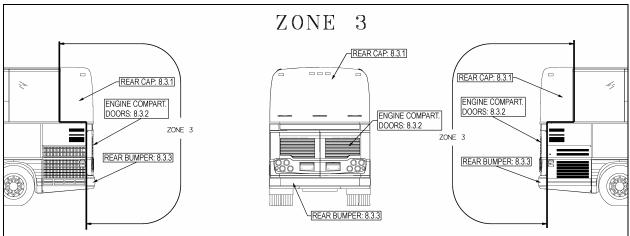


FIGURE 78: ZONE 3

8.3.1 Rear Cap

The fiberglass rear cap does not need any maintenance except painting as needed. It is held in place with adhesive. If ever it has to be replaced, make an appointment at a Prévost service center near you.

For minor damages, refer to Paragraph 4 "Common Fiberglass Repair Procedure" and Paragraph 5 "Common Painting Procedure".

8.3.2 Engine Compartment Doors

Engine Compartment Doors Adjustment

Engine compartment doors may be adjusted for proper fit by untightening hinge bolts:

- 1. Loosen the bolts, (1, 2 Fig. 79) holding the hinge to the vehicle structure to shift the door "UP or DOWN".
- Loosening the bolts (3, Fig. 79) allows the door to be shifted "LEFT or RIGHT" and "IN or OUT".
- 3. Adjust the doors position depending on the gap needed between exterior finishing panels.

- 4. Tighten the bolts.
- 5. Check that the doors swing freely and close properly. It may be necessary to adjust the door latch to get proper fit and operation.

To adjust the latch mechanism (4, Fig. 79) and the striker pin:

- 1. Open the doors to access the striker pin.
- 2. Slightly loosen the striker pin.
- 3. Using a hammer, adjust the striker pin to center it in the door latch mechanism.
- 4. Tighten the striker pin.
- 5. Check doors fit and operation.

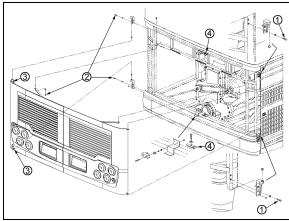


FIGURE 79: ENGINE COMPARTMENT DOORS

COMPARIMENT DOORS

Engine Compartment Door Body Panel Removal

For the removal of engine compartment door body panel, you will need:

Pneumatic "Zip gun" type tool; Razor sharp window scraper; A pair of locking pliers; Isopropyl alcohol.

- Remove damaged engine compartment door from vehicle.
- Install the damaged door onto an appropriate support.
- Wearing gloves, goggles and ear plugs, pry loose body panel using a "Zip gun" or lever starting from the edge opposite the curved side.
- Use the "Zip gun" to detach completely the stainless steel body panel from door frame.

CAUTION

Do not damage painted surface.

 Use a second person equipped with a pair of locking pliers to pull the body panel as you cut the Sika bead.



WARNING

Be very careful when pulling the body panel, somebody could get hurt if the body panel suddenly detach from the door surface without notice.

 Using the window scraper, remove any Sika bead or self adhesive tape residue left on the fiber glass surface.

For gluing of engine compartment doors molding, refer to procedure **PR00211** included at the end of this section.

For engine compartment door body panel installation, refer to procedure **PR280032** included at the end of this section.

8.3.3 Rear Bumper

Remove three bolts on each side holding bumper to vehicle and remove bumper.

To install bumper, reverse the procedure.

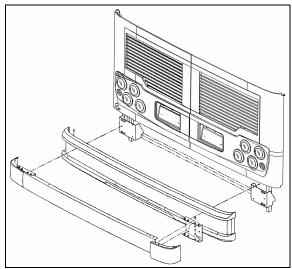


FIGURE 80: REAR BUMPER

8.4 **ZONE 4**

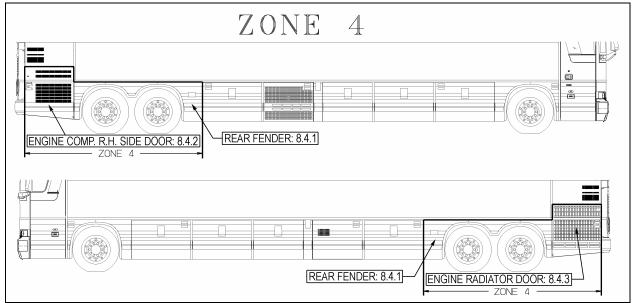


FIGURE 81: ZONE 4

8.4.1 Rear Fender

On the "XLII MTH" series vehicles, rear fenders are hinged for maintenance on brakes and suspension. Each rear fender panel has two mechanical spring loaded holding devices fixing it to the vehicle's structure. Push the spring type rod sideways to disengage the lock.

For the installation of rear fender body panel, refer to procedure **PR470046** included at the end of this section.

8.4.2 Engine Compartment R.H. Side Door

Engine compartment R. H. side door may be adjusted for proper fit by untightening hinge bolts:

- Loosen the bolts, (1, Fig. 82) holding the hinge to the vehicle structure to shift the door "IN or OUT" and "UP or DOWN".
- Loosening the bolts (2, Fig. 82) allows the door to be shifted "LEFT or RIGHT" and "UP or DOWN".
- 3. Adjust the door position depending on the gap needed between exterior finishing panels.
- 4. Tighten the bolts.
- 5. Check that the door swings freely and closes properly. It may be necessary to adjust the door latch to get proper fit and operation.

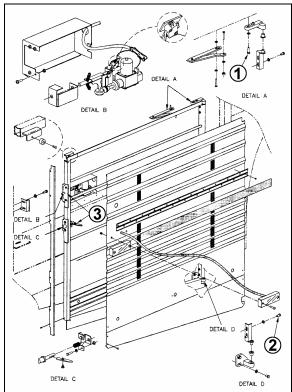


FIGURE 82: ENGINE COMPARTMENT R.H. SIDE DOOR 18635

To adjust the latch mechanism (3, Fig. 82) and the striker pin:

- 1. Open the door to access the striker pin.
- 2. Slightly loosen the striker pin.

- 3. Using a hammer, adjust the striker pin to center it in the door latch mechanism.
- 4. Tighten the striker pin.
- 5. Check door fit and operation.

For gluing of engine compartment R.H. side door finishing molding, refer to procedure PR00210 included at the end of this section.

8.4.3 **Engine Radiator Door**

Radiator door may be adjusted for proper fit by untightening hinge bolts:

- 1. Loosen the bolts, (1, Fig. 83) holding the hinge to the vehicle structure to shift the door "IN or OUT" and "UP or DOWN".
- 2. Loosening the bolts (2, Fig. 83) allows the door to be shifted "LEFT or RIGHT" and "UP or DOWN".
- 3. Adjust the door position depending on the gap needed between exterior finishing panels.
- 4. Tighten the bolts.
- 5. Check that the door swings freely and closes properly. It may be necessary to adjust the door latch to get proper fit and operation.

To adjust the latch mechanism (3, Fig. 83) and the striker pin:

1. Open the door to access the striker pin.

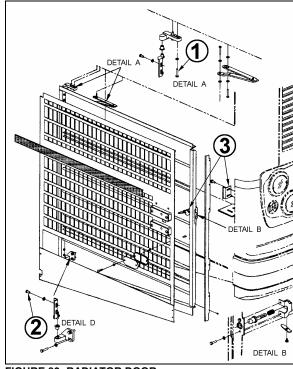


FIGURE 83: RADIATOR DOOR

- Slightly loosen the striker pin.
- 3. Using a hammer, adjust the striker pin to center it in the door latch mechanism.
- 4. Tighten the striker pin.
- 5. Check door fit and operation.

For gluing of engine radiator door finishing molding, refer to procedure PR00210 included at the end of this section.

8.5 **ZONE 5**

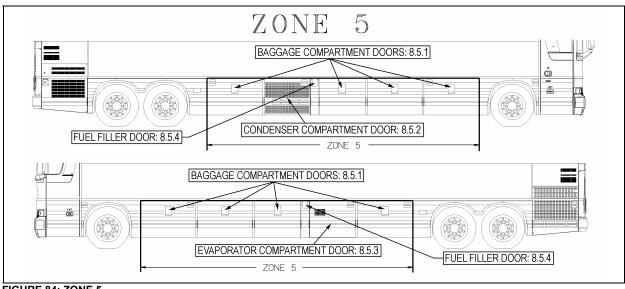


FIGURE 84: ZONE 5

8.5.1 **Baggage Compartment Doors**

The baggage compartment doors on the vehicle are of identical design. The doors are pantograph, vertical-lift type and are fully sealed. Each door has a flush-mounted latch handle. To open, lift latch handle, then pull door outward and up. The door is held open by 2 gas-charged cylinders. To close, leave latch handle in the open position, pull downward on door and push down on latch to secure door. The door lower arm is spring loaded to secure effort required to close the door (Fig. 85).

If a door does not remain in the fully open position, one or both cylinders on that door is (are) defective. To test the cylinders, first support the door in the open position with proper equipment. Disconnect the rod end of one cylinder and retract the rod. If strong resistance is felt, the cylinder is in good condition and can be reinstalled. If the rod retracts with little effort, the cylinder is defective and should be replaced at once. Use the same procedure to test the other cylinder on that door.

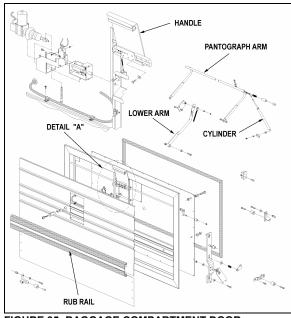


FIGURE 85: BAGGAGE COMPARTMENT DOOR

Door Removal



CAUTION

Two people are required to remove the baggage compartment doors.

- 1. Maintain the door halfway open by placing a wooden block between one of the pantograph arms and the upper frame.
- 2. Remove cap screw, lock washer and flat washer retaining lower arm to door
- 3. Remove spring pins and lock washers fastening the pantograph arms to the door.



WARNING

Support the door properly to prevent it from falling.

- 4. Spread the pantograph arms away from the door and remove door.
- 5. Inspect all pivot points and bushings for wear and damage. Check tension of gascharged cylinders and replace if necessary.

❖ Pantograph **Arms** Removal and Installation

- 1. Disconnect rod end of gas-charged cylinders from the pantograph arms.
- 2. Loosen jam nut and cap screw locking the horizontal member of the pantograph to the pivot pin.
- 3. Slide pantograph assembly to the right and remove assembly from the vehicle.
- To install, perform the removal instructions in reverse.

Door Installation

- Use a wooden block to support the pantograph arms horizontally.
- 2. Support the door and insert each pantograph arm into the pivot pins on the side of the door.
- 3. Install washer and spring pin to fasten each arm to its pivot pin.
- 4. Fasten lower arm to the door with flat washer, lock washer and cap screw.
- Remove wooden block and close baggage compartment door.

Door should be adjusted to leave a gap of 3/16" (5 cm) above the top edge of the door. To adjust, loosen the bolts retaining lock plate support and position the door correctly. Tighten the bolts after the adjustment.

If the baggage door locks too tightly or too loosely, the position of the catch striker is misadjusted. To adjust, loosen the catch striker retaining bolts, position the striker correctly and tighten the retaining bolts.

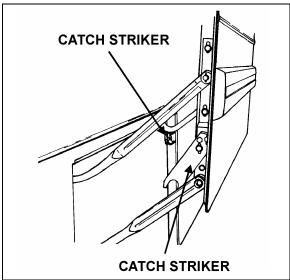


FIGURE 86: BAGGAGE DOOR CATCH STRIKER

1814

If the lower part of the baggage door does not close evenly with the side of the vehicle, adjust the lock plates by loosening their retaining bolts and positioning the locking plates correctly (Fig. 86).

For the removal and installation of baggage compartment door body panels, refer to procedure **PR00177** included at the end of this section.

8.5.2 Condenser Compartment Door

- 1. Open the condenser door.
- Loosen the screws fixing the hinge to hinge attachment or hinge to door assembly. Loosening the screws allows the condenser door assembly to be shifted "LEFT or RIGHT" and "UP or DOWN" or "IN and OUT".
- 3. Adjust condenser door assembly position at the hinge.
- 4. Tighten the screws.
- 5. Respect the required gap between exterior finishing panels.
- Check that the door swings freely and closes properly. It may be necessary to adjust the door latch to get proper fit and operation.

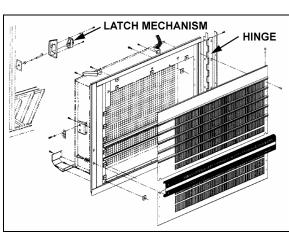


FIGURE 87: CONDENSER DOOR

For the installation of condenser compartment door body panel, refer to procedure **PR00131** included at the end of this section.

8.5.3 Evaporator Compartment Door

- 1. Open the evaporator door.
- Loosen the screws fixing the hinge to hinge attachment or hinge to door assembly. Loosening the screws allows the evaporator door assembly to be shifted "LEFT or RIGHT" and "UP or DOWN" or "IN and OUT".
- 3. Adjust evaporator door assembly position at the hinge.
- 4. Tighten the screws.
- 5. Respect the required gap between exterior finishing panels.
- 6. Check that the door swings freely and closes properly. It may be necessary to adjust the door latch to get proper fit and operation.

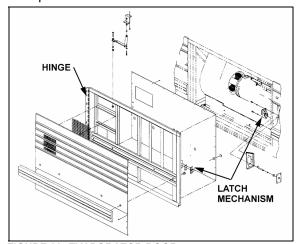


FIGURE 88: EVAPORATOR DOOR

For the installation of evaporator compartment door body panel, refer to procedure PR00133 included at the end of this section.

8.5.4 Fuel Filler Door

- Open the fuel filler door.
- Loosen the screws holding the panel to hinge assembly.
- o Adjust the fuel filler door position according to distance required between exterior finishing panels.
- Tighten the nuts.

Check that the door swings freely and closes properly.

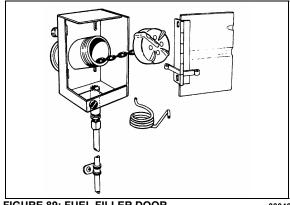


FIGURE 89: FUEL FILLER DOOR

03046

ZONE 6 8.6

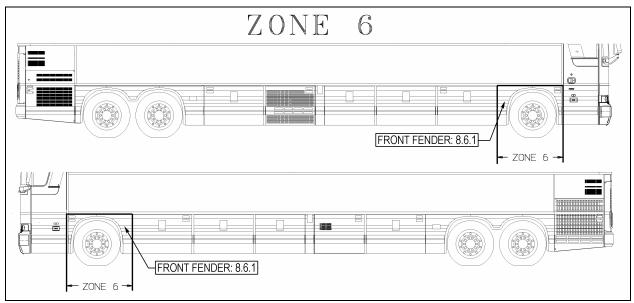


FIGURE 90: ZONE 6

8.6.1 Front Fender

Front fender may be removed using the following procedure:

Remove the nuts on the inside of the fender. Remove the fender from the vehicle. To reinstall, reverse the procedure.

For the installation of front fender body panel, refer to procedure PR470024 included at the end of this section.

8.7 **ZONE** 7

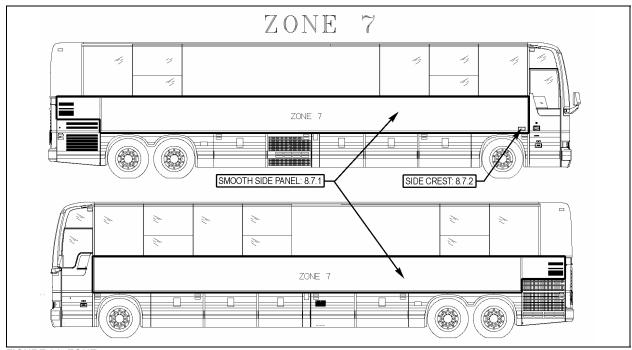


FIGURE 91: ZONE 7

8.7.1 Smooth Side Panel

❖ Removal

A)	Remove finishing molding. Insert a screwdriver into snap-on finishing molding joint. Bend finishing molding enough to be able to fix a pair of locking pliers. Using the pair of locking pliers, pull the stainless steel molding and at the same time gradually cut Sika bead with a sharp knife.	Be careful not to damage the adjacent surfaces.
B)	Using a hammer and punch, drive out rivet shanks from top and bottom and from front and rear finishing molding supports. Use a #11 titanium drill bit to remove rivet heads.	
C)	Grind tig weld spots at each end of side panel.	
D)	Safely support or temporary fix side panel.	Warning: Panel weights over 200 pounds
E)	Insert a flat screwdriver between the side panel and the vehicle chassis, in the top left and right corners. Make sure to separate side panel from structure.	Be careful not to damage the adjacent surfaces.
F)	Use the c-clamp to separate the side panel from the back structural panel and at the same time gradually cut Sika bead with a sharp knife.	Ideally, the hoist or chain block must be fastened to the floor while pulling from a 45° angle so as not to damage the vehicle structure
G)	Remove as much glue as possible from the structure using a putty knife or pneumatic knife without damaging 206 G+P primer.	Never heat SikaFlex adhesive to remove.
H)	Check panel horizontal supports for straightness using a straight edge. Take measurements with a ruler.	Tolerance: 1 mm towards the outside and 1.5 mm towards the inside.

Installation Procedures

SMOOTH SIDE PANEL – STRUCTURE PREPARATION	PR00072
SMOOTH SIDE PANEL - INSTALLATION	PR00073
ENGINE AIR INTAKE PANEL - GLUING	PR00074
SMOOTH SIDE PANEL - FINISHING JOINT	PR00075
SMOOTH SIDE PANEL – GLUING MOLDINGS	PR00214
SMOOTH SIDE PANEL – REAR MOLDING GLUING	PR00215
SMOOTH SIDE PANEL – PROTECTION OF UNPRIMED TIG WELDING SPOTS	PR00216
SMOOTH SIDE PANEL – GLUING SLIDE-OUT VERTICAL MOLDING	PR00217
SMOOTH SIDE PANEL – CUTTING HORIZONTAL FINISHING MOLDING AT SLIDE-OUT LEVEL	PR00220

8.7.2 Side Crest

- Clean vehicle surface using anti-silicone where the side crest and stickers will be applied.
- o Using hands apply and compress side crest.
- Apply required stickers.

8.8 **ZONE** 8

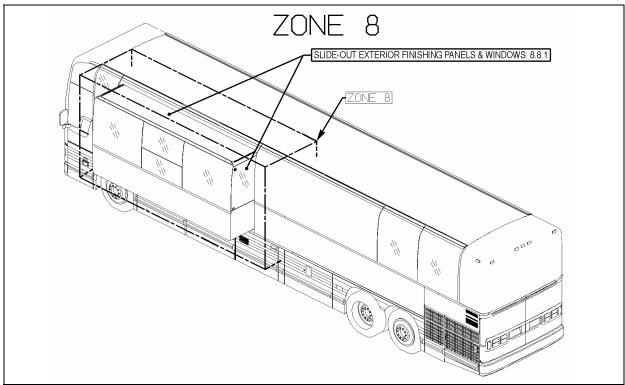


FIGURE 92: ZONE 8

8.8.1 Slide-Out Exterior Finishing Panels & Windows

Refer to Maintenance Manual, Section 26: Paragraph 16 for the procedure on slide-out exterior finishing panels & windows.

8.9 BODY PANEL AND WINDOW SPACING FOR WE MTH FITTED WITH SLIDE-OUT

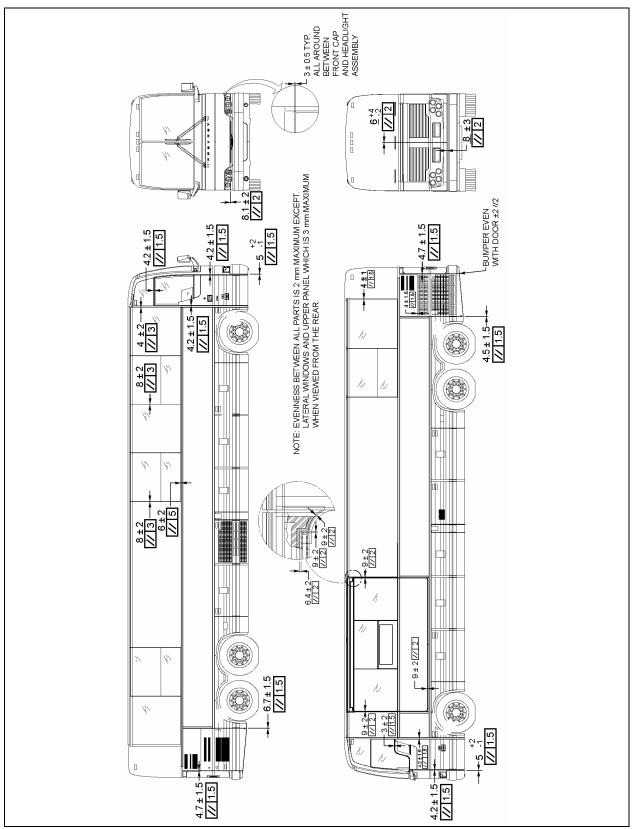


FIGURE 93: BODY PANEL & WINDOW SPACING FOR WE MTH FITTED WITH SLIDE-OUT

9. VEHICLE JACKING POINTS

The vehicle can be lifted by applying pressure under body jacking points or front and drive axle jacking points. When it is necessary to lift the vehicle, care should be taken to ensure that the pressure is applied only on the specified areas. Equipment for lifting the front of the vehicle must have a combined lifting capacity of at least 20,000 lb. (9 100 kg). Equipment for lifting the rear of the vehicle must have a combined lifting capacity of at least 40,000 lb. (18 200 kg).



WARNING

DO NOT tow or jack vehicle with people on board.



WARNING

When it is necessary to raise the vehicle, care should be taken to ensure that pressure is applied only at the points indicated in figures 94 to 99.



WARNING

Extra lift capacity may be required if luggage or any other type of load (e.g. conversion equipment) are onboard the vehicle.



CAUTION

The suspension of the vehicle must be in the normal ride position before jacking. The "Level Low" system on a motorcoach must be in the "DRIVE" position prior to turning the ignition key "OFF".

Twelve jacking points are located on the vehicle: three are located on each side of the frame and two are located under each axle. Refer to the following illustrations for the location of jacking points.



FIGURE 94: JACKING POINTS ON FRAME

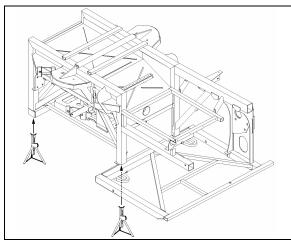


FIGURE 95: FRONT SUBFRAME JACKING POINTS 18592

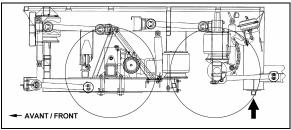


FIGURE 96: REAR SUBFRAME JACKING POINTS

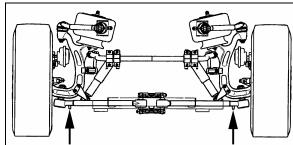


FIGURE 97: JACKING POINTS ON IND. SUSPENSION 16095

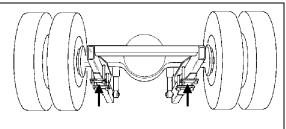


FIGURE 98: JACKING POINTS ON DRIVE AXLE OEH3B762



CAUTION

Always unload or retract the tag axle before jacking the vehicle from the front and drive axle jacking points to prevent damage to suspension components.

 


FIGURE 99: JACKING POINTS ON TAG AXLE

OFH3B764



WARNING

The jacking points on the tag axle must be used for raising the tag axle only.

Several kinds of hydraulic jacks can be used. Only jack at the specified jacking points. Jack must support the following capacities:

Front axle: 20,000 lb. (9 100 kg); Drive axle: 40,000 lb. (18 200 kg).

9.1 HYDRAULIC JACK

<u>To raise</u>: turn release valve clockwise. Insert handle in socket and raise vehicle by pumping.

<u>To lower</u>: remove handle and turn the release valve slowly counterclockwise.

Always keep ram and extension screw retracted when jack is not in use.

<u>Service</u>: Check oil level when jack fails to raise to full height. Lower ram completely with release valve open and jack in upright position, remove filler plug and refill to level of filler hole with hydraulic jack oil. <u>Never use brake fluid</u>.



DANGER

Jack is intended for lifting only. Do not get under the vehicle or load for any reason unless it is properly supported with safety stands and securely blocked.



DANGER

Do not overload jack above rated capacity. Prevent "side loading", make sure load is centered on ram. Do not push or tilt load off jack.

10. TOWING THE VEHICLE

The vehicle can be transported on a low bed semi-trailer of adequate gross axle weight

capacity. When transporting a vehicle, apply parking brake and shut down the engine. Block all wheels and secure vehicle with tie-downs. Check that overall height will clear obstacles on the route to follow, and obtain required permits.

The vehicle can also be towed by lifting the front axle or by towing from the front with all wheels on the ground. These two methods are described below under their respective headings. Whatever the method used, the vehicle should be towed by truck operators authorized and experienced in towing highway coaches.

Observe normal precautions including, but not limited to, the ones listed below when towing the vehicle:

- Make sure the parking brake is released before towing.
- Do not allow passengers to ride onboard the towed vehicle.
- Tow the vehicle at a safe speed as dictated by road and weather conditions.
- Accelerate and decelerate slowly and cautiously.

To prevent damage to the vehicle, use the two tow eyes located under the back bumper and/or fixed to the vehicle's frame between the front axle and the front bumper. Use only a solid link tow bar and a safety chain to tow the vehicle. If required, connect an auxiliary air supply to the vehicle so brakes can be operated while towing.



WARNING

During a towing operation, the driver should be alone inside the vehicle.



CAUTION

To prevent damage to the drive train components, disconnect axle shafts or driveshaft before towing. Do not attempt to push or pull-start a vehicle equipped with an automatic transmission.

NOTE

Make sure axle shafts or driveshaft are installed correctly after towing. Tighten axle shaft and driveshaft nuts to the correct torque settings. Do not invert shafts

10.1 LIFTING AND TOWING

The towed vehicle must be lifted from under the front axle only. The tow truck must be equipped with the proper lifting equipment to reach under the front axle since no other lifting points are recommended. Lifting and towing from any other point are unauthorized as it may cause serious damage to the structure. Do not unload or raise the tag axle when lifting and towing to prevent overloading the drive axle.

 Remove both drive axle shafts to prevent damage to the transmission. Plug axle tube to prevent oil loss. Refer to Rockwell's "Maintenance manual no.5" annexed at the end of Section 11, Rear axle, in this manual for correct procedure.



CAUTION

Transmission lubrication is inadequate when towing. The drive axle shafts must be removed to avoid serious damage to the transmission.

- Operate the engine when towing to maintain brake system air pressure. If the engine cannot be operated, connect an external air pressure line from the tow truck to the emergency fill valve in the engine compartment.
- The emergency fill valve in the front service compartment does not supply air pressure to the brake system. The air pressure must be a minimum of 75 psi (520 kPa), and the line should be attached to the air line with a clip-on chuck.



WARNING

Do not tow the vehicle without external air pressure applied to the emergency fill valve if the engine does not operate. Without brake system air pressure, the brakes may apply automatically if system air drops below 40 psi (275 kPa). If failure prevents releasing the parking brakes with air pressure, disengage the parking brakes mechanically.

- 4. Lift the vehicle from under the front axle, and adequately secure the underside to the tow vehicle lifting attachment with chains.
- 5. Observe safety precautions when towing.

10.2 TOWING WITHOUT LIFTING



WARNING

When towing vehicle without lifting, use only a tow truck with a solid link tow bar and related equipment. All other means of towing are unauthorized. Tow only from the front of the vehicle.

 Remove both drive axle shafts to prevent damage to the transmission. Plug axle tube to prevent oil loss. Refer to Rockwell's "Maintenance manual no.5" annexed at the end of Section 11, Rear axle, in this manual for correct procedure.



CAUTION

Transmission lubrication is inadequate when towing. The drive axle shafts must be removed to avoid serious damage to the transmission.

2. Operate the engine when towing to maintain brake system air pressure. If the engine cannot be operated, connect an external air pressure line from the tow truck to the emergency fill valve in the engine compartment. The emergency fill valve in the front service compartment does not supply air pressure to the brake system. The air pressure must be a minimum of 75 psi (520 kPa), and the line should be attached to the air line with a clip-on chuck.



WARNING

Do not tow the vehicle without external air pressure applied to the emergency fill valve if the engine does not operate. Without brake system air pressure, the brakes may apply automatically if system air drops below 40 psi (275 kPa). If failure prevents releasing the parking brakes with air pressure, disengage the parking brakes mechanically.

- 3. Position the tow truck so that the tow bar contacts the front bumper of the vehicle.
- 4. Attach the tow truck chains only in the tow eyes of the vehicle under the bumper and take up all the slack.
- 5. Attach safety chains as applicable.
- 6. Observe safety precautions when towing.

SECTION 26: XLII SLIDE-OUT

CONTENTS

1	SL	IDE-OU	Т	5
	1.1	INNER S 1.1.1	TOPPER	
			Adjustment	
	12		"STOPPER	
		1.2.1	Maintenance	
		1.2.2	Adjustment	6
	1.3	EXTERIO	DR EXTRUSION	6
2	SE	CURITY	′ PIN	7
			NANCEINDER REPLACEMENT	
3	RC	OF REI	NFORCING ROD	7
4	R/	CK		8
			NANCE	
			SLIDE-OUT RACK REPLACEMENT	
_			LIDE-OUT RACK REPLACEMENT	
Э				
			AND KEYLESS BUSHING POSITIONING	
	5.3	REAR S	LIDE-OUT SHAFT PINION REPLACEMENT	10
	5.4	KEYLES 5.4.1	S BUSHINGInstallation	
_				
6			MOTOR	
			NANCEEMENT	
7			EDUCTION GEARBOX	
-			VANCE	
			X REPLACEMENT	
8	JA	w cou	PLING	14
			NANCE	
			EMENT & ADJUSTMENT	
			BEARING	
1(COLLAR	
	_		LLATION	
1	1 LIN	NEAR B	EARING	15
			FENANCE	
			ACEMENT & ADJUSTMENT	
			Procedure	
12	2 RA	\IL		16

Section 26: XLII SLIDE-OUT

13 ACETAL PLASTIC BLOCKS	17
13.1 REMOVAL / INSTALLATION	
14 SUIDE-OUT PNEUMATIC SYSTEM	18
14.3 SEAL	20
14.3.1 Maintenance	21
14.3.2 Seal assembly removal	21
14.3.3 Seal assembly installation	21
14.3.4 Slide-out 2" inside retraction	22
15 SLIDE-OUT ELECTRICAL SYSTEM	22
15.1 ELECTRICAL INTERCONNECTION WITH PRE	VOST VEHICLE23
	23
· ·	24
	RCUITS24
·	
•	24
15.5.1 Maintenance and adjustment	
16 SLIDE-OUT EXTERIOR FINISHING PANELS	S & WINDOWS26
	29
	31
	33
	34
16.11.1 Slide-out face	35
16.11.2 Slide-out side	
16.11.3 Slide-out bottom	36
16.11.4 Top of Slide-out	36
17 WELDING PRECAUTION	36
18 SLIDE-OUT MANUAL OVERRIDE PROCED	URES36
18.1 PRELIMINARY CONDITIONS FOR MANUAL C	OVERRIDE PROCEDURE37
18.1.1 Manual retracting procedure – Fro	ont and rear slide-out37
18 1.2 Manual extending procedure – Fro	ont and rear slide-out

19 SLII	DE-OUT MAXIMUM LOAD	39
20 COI	NVERSION CHECKLIST	40
20.1	ERROR CONDITION OR MISSING OPERATION CONDITION.	41
20.2	TROUBLESHOOTING - OPERATING CONDITIONS & CONTROL	41
20.3		
20.4	SLIDE-OUT FAULT MESSAGE ON MESSAGE CENTER DISPLAY (MCD)	46
LIST	OF ILLUSTRATIONS	
	E 1 : FRONT SLIDE-OUT	
FIGUR	E 2 : REAR SLIDE-OUT	5
	E 3 : SIDE INNER STOPPER ADJUSTMENT	
	E 4: UPPER INNER STOPPERS ADJUSTMENT	
	E 5: LOWER "IN LIMIT" STOPPER	
	E 6: UPPER "IN LIMIT" STOPPER	
FIGUR	E 7 : EXTERIOR EXTRUSION	6
	E 8: SECURITY PIN AIR CYLINDER REMOVAL	
	E 9 : FRONT SLIDE-OUT ROOF REINFORCING ROD	
FIGUR	E 10 : RACK	8
	E 11: PINION AND KEYLESS BUSHING POSITIONING	
	E 12: PINION AND KEYLESS BUSHING AS SEEN FROM EVAPORATOR COMPARTMENT	_
	E 13: MECHANICAL COMPONENTS (TYPICAL)	
	E 14 : KEYLESS BUSHING TIGHTENING	_
FIGUR	E 15 : TORQUE WRENCH FORMULA	10
	E 16 : KEYLESS BUSHING INSTALLATION INSTRUCTION	
	E 17: ELECTRIC MOTOR AND SPEED REDUCTION GEARBOX E 18: DRIVE MOTOR/GEARBOX ASSEMBLY MOUNTING BOLTS	
	E 19: CLAMPING HUB POSITION ON GEARBOX SHAFTE 20: JAW COUPLING	
	E 21: SLIDE-OUT LEVEL ADJUSTEMENT	
	E 22 : SLIDE-OUT LEVEL ADJUSTEMENT	
	E 23: TILT ADJUSTMENT	
	E 24 : RAIL POSITIONING	
	E 25: ACETAL PLASTIC BLOCKS	
	E 26: REMOVE THE UPPER ACETAL PLASTIC BLOCKS WITH A PICKING TOOL	
	E 27: LOWER ACETAL PLASTIC BLOCK INSERTION	
	E 28 : FRONT SERVICE COMPARTMENT	
	E 29: PNEUMATIC COMPONENT PANEL	
	E 30 : SEAL ASSEMBLY	
	E 31: REAR SLIDE-OUT INFLATABLE SEAL AIR INLET	
	E 32: SLIDE-OUT 2" INSIDE – UPPER PART	
	E 33 : DASHBOARD SLIDE-OUT TELLTALE LIGHT	
	E 34: MAIN BREAKER IN ENGINE R.H. SIDE ACCESS COMPARTMENT	
	E 35 : SLIDE-OUT CONTROL PANEL	_
	E 36 : VEC CIRCUIT BREAKERS & FUSES	
	E 37 : FRONT SLIDE-OUT SENSORS	
	E 38: REAR SLIDE-OUT SENSORS	
	E 39 : MAGNETS ON SLIDE-OUT UNDERBODY	
	E 40 : SLIDE-OUT PANELS AND WINDOWS	
FIGUR	E 41 : SIDE PANEL INSTALLATION - DOUBLE FACE ADHESIVE TAPE APPLICATION ON	THF
	IDE-OUT STRUCTURE	
	E 42 : SIDE PANEL INSTALLATION – SIKA 206 G+P APPLICATION	
	E 43 : SIDE PANEL INSTALLATION – SIKA TACK+BOOSTER APPLICATION	
	E 40 : SIDE PANEL INSTALLATION - SINVERZON - BOOSTERALT EIGATION	

Section 26: XLII SLIDE-OUT

FIGURE 45 : TOP AND BOTTOM PANEL INSTALLATION - DOUBLE FACE ADHESIVE	
APPLICATION	28
FIGURE 46 TOP AND BOTTOM PANEL INSTALLATION - SIKA 206 G+P APPLICATION	
FIGURE 47: TOP AND BOTTOM PANEL INSTALLATION - SIKA TACK+BOOSTER APPLICATION	I29
FIGURE 48 : TOP PANEL INSTALLATION	
FIGURE 49: BOTTOM PANEL INSTALLATION	29
FIGURE 50: FACE FIXED WINDOWS - RUBBER SEAL INSTALLATION	30
FIGURE 51: FACE FIXED WINDOWS - RUBBER SEAL INSTALLATION	30
FIGURE 52: FACE FIXED WINDOWS - 3/16 X 1/2 DOUBLE FACE ADHESIVE TAPE INSTALLATION	ON.30
FIGURE 53: SIDE FIXED WINDOW - 1/4 X 1/2 DOUBLE FACE ADHESIVE TAPE INSTALLATION	30
FIGURE 54: FACE FIXED WINDOW AND HALF-WINDOW - SIKA AKTIVATOR	30
FIGURE 55: SIDE FIXED WINDOW - SIKA AKTIVATOR	30
FIGURE 56: FACE FIXED WINDOW INSTALLATION - SIKA TACK+BOOSTER	
FIGURE 57: FACE FIXED HALF-WINDOW INSTALLATION - SIKA TACK+BOOSTER	31
FIGURE 58: SIDE FIXED WINDOW - SIKA TACK + BOOSTER	31
FIGURE 59: FACE FIXED WINDOW INSTALLATION	
FIGURE 60 : SIDE FIXED WINDOW	
FIGURE 61: AWNING WINDOW - RUBBER BUMPER INSTALLATION	
FIGURE 62: SIDE BUMPERS	32
FIGURE 63: MASKING TAPE APPLICATION	32
FIGURE 64: SIKA 255 APPLICATION	32
FIGURE 65 : AWNING WINDOW - SIKA AKTIVATOR	
FIGURE 66: AWNING WINDOW – SIKA 255 APPLICATION	
FIGURE 67 : CORRECT TIGHTENING SEQUENCE	
FIGURE 68 : SMOOTH DOWN THE JOINT	
FIGURE 69: AWNING WINDOW - SEAL THE UPPER CORNERS	33
FIGURE 70: AWNING WINDOW - SEAL THE CHINK	
FIGURE 71 : SLIDING WINDOW - SIKA AKTIVATOR	
FIGURE 72: SLIDING WINDOW - SIKA AKTIVATOR	
FIGURE 73: AWNING WINDOW – SIKA 252 APPLICATION	
FIGURE 74 : CORRECT TIGHTENING SEQUENCE	
FIGURE 75 : SLIDING WINDOW - SEAL THE UPPER CORNERS	
FIGURE 76: SEAL	34
FIGURE 77	
FIGURE 78	
FIGURE 79	
FIGURE 80	
FIGURE 81	
FIGURE 82	
FIGURE 83	36
FIGURE 84	36
FIGURE 85	
FIGURE 86	
FIGURE 87: COMPARTMENTS LOCATION	37
FIGURE 88: VEC CIRCUIT BREAKERS ON SLIDE-OUT CONTROL PANEL	
FIGURE 89: MAIN SLIDE-OUT BREAKER IN ENGINE R.H. SIDE ACCESS COMPARTMENT	37
FIGURE 90: SLIDE-OUT CONTROL PANEL	
FIGURE 91: INFLATABLE SEAL RELIEVING SHUT-OFF VALVE	
FIGURE 92: SLIDE-OUT MOTOR ROTATION	
FIGURE 93: INFLATABLE SEAL PRESSURE GAGE	
FIGURE 94: SLIDE-OUT MOTOR ROTATION	
FIGURE 95 : FRONT SUDE-OUT DEFLECTION	30

1 SLIDE-OUT

1.1 INNER STOPPER

The front slide-out is equipped with six inner stoppers laid out in the following way: two stoppers on the top horizontal member of the slide-out, and two stoppers on each vertical upright, while the rear slide-out is equipped with only three stoppers (figure 1 and figure 2). The upper inner stoppers are used to provide a support to position perpendicularly the slide-out with the vehicle structure.

The side inner stoppers are used to block the extension of the slide-out. They act as ultimate physical limits but take note that when the "out limit" sensors are properly adjusted, the slide-out extension stops before the side inner stoppers reach the side structure keys (figure 1 & 2).

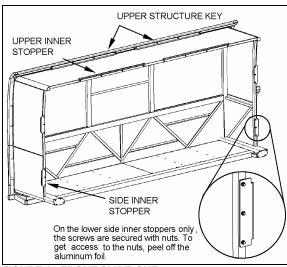


FIGURE 1: FRONT SLIDE-OUT

1.1.1 Maintenance

Check that the inner stopper screws are tight and that no damage or deformation has taken place for both the side and the upper stoppers.

1.1.2 Adjustment

- 1. Adjust the side inner stoppers at 1/8" from the vehicle side structure keys, and tighten the screws. Make sure there is a minimum gap of 2mm (0.079") between the side inner stopper and the side window pane (figure 3). Use shim as required.
- Adjust the upper structure key and the upper inner stoppers according to FIGURE 4 with the seal deflated. When inflating, the seal presses the roof structure upward and at

that moment, the upper inner stopper comes into contact with the upper structure key

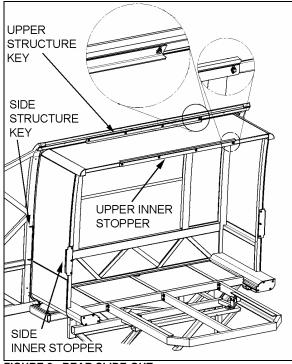


FIGURE 2 : REAR SLIDE-OUT

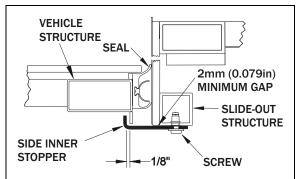


FIGURE 3: SIDE INNER STOPPER ADJUSTMENT

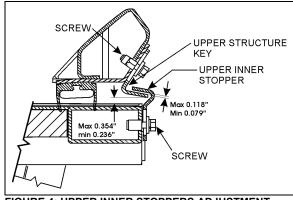


FIGURE 4: UPPER INNER STOPPERS ADJUSTMENT

1.2 "IN LIMIT" STOPPER

Each slide-out has four "in limit" stoppers. Two "in limit" stoppers are mounted on the exterior extrusion at the top of the slide-out (FIGURE 6) and two other "in limit" stoppers are mounted under the slide-out, next to the rail (Figure 5). These stoppers are use to position the outer face of the slide-out flush with the vehicle body when retracted.

1.2.1 Maintenance

Check that the "in limit" stoppers are clean and that there is no foreign matter accumulated between the stopper and their bearing surface. Check that the screws and set screws (where applicable) locking the stoppers in proper position are tight.

1.2.2 Adjustment

NOTE

To properly adjust the "in limit" stoppers, the slide-out system must be turned off to prevent the "in limit" sensors from stopping the slide-out movement before having the "in limit" stoppers contacting their bearing surface.

- 1. Extend the slide-out partially.
- 2. Set the ignition switch to the OFF position.
- 3. To adjust the lower "in limit" stoppers, loosen the set screw and then rotate the stopper CW or CCW to move it back or forward depending on the required adjustment. To adjust the upper plastic "in limit" stoppers, add or remove shims as required between the stopper and the extrusion.
- 4. Using the manual override procedure (section 18), move the slide-out up to its full "in" position.
- Using a straight edge, check if the outer face of the slide-out is flush with the vehicle body with the stoppers contacting their bearing surface. Readjust the stoppers if necessary.
- 6. Readjust the "in limit" sensor.

NOTE

To make sure that the lower "in limit" stoppers are contacting their bearing surface (the acetal plastic blocks) when the slide-out is closed, put white paint on the "in limit" stopper before and check if the acetal plastic blocks are marked with paint.

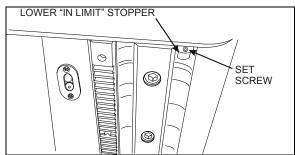


FIGURE 5: LOWER "IN LIMIT" STOPPER

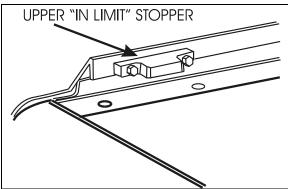


FIGURE 6: UPPER "IN LIMIT" STOPPER

1.3 EXTERIOR EXTRUSION

The exterior extrusion function is to provide a leaning surface for the inflatable seal. When inflating, the seal leans against the extrusion and presses the roof structure upward until it rests on the inner side of the extrusion.

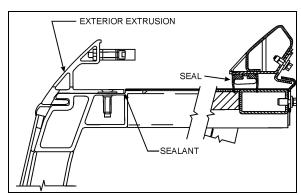


FIGURE 7: EXTERIOR EXTRUSION

Maintenance

Inspect the exterior extrusion for any deformation or deterioration. Check that the screws are tight. Inspect the sealant condition on screw head and between the extrusion and the vehicle structure, and also at both ends of the extrusion. If needed, clean old sealant and replace with Sika 221 sealant or equivalent product.

2 SECURITY PIN

During normal ride, the slide-out cannot extend by itself because the 740:1 ratio speed reduction worm gear type gearbox system is not reversible, the output shafts are self-locking. The security pin purpose is to lock the slide-out in retracted position if an accident occurs. It is built to stand a great lateral acceleration of the slide-out.

The system consists of a stainless steel pin connected to a single action/spring return pneumatic cylinder (FIGURE 8). The pin engages in the slide-out receptacle with releasing of the parking brake. A knocking sound may be heard at this moment. An O-ring is located at the base of the pin housing to reduce knocking when the pin retracts. The lower hole on the pin housing permits water to drain. The upper hole permits to insert a small screwdriver to prevent the pin from rotating when the air cylinder has to be removed.

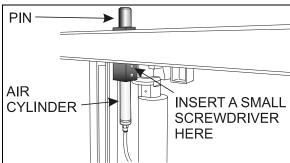


FIGURE 8: SECURITY PIN AIR CYLINDER REMOVAL

2.1 MAINTENANCE

Inspect air cylinder and fitting for air leaks. Periodically, check that the pin retracts and engages in the receptacle as it should when the parking brake is applied or released. To do slide-out, the slide-out must be in its full "IN" position with the engine running. If the pin produces excessive knocking when it engages with releasing of the parking brake, reduce air cylinder speed by adjusting the air flow regulator on the pneumatic control panel (FIGURE 29, item 11).

2.2 AIR CYLINDER REPLACEMENT

- 1. Assure the parking brake is applied.
- 2. Disconnect the cylinder air tubing from the 2nd baggage compartment (front slide-out) or under the bed structure (rear slide-out).

- 3. Using a wrench at its lower end, unscrew the air cylinder from the pin housing.
- 4. Insert a small screwdriver through the pin and housing to prevent rotation of the pin an then, unscrew the cylinder rod from the pin.
- 5. Transfer the fitting on the new cylinder. Place Teflon on threads.
- Cylinder installation is like removal but in reverse order.

3 ROOF REINFORCING ROD



CAUTION

The front slide-out roof reinforcing rod may have to be adjusted after a load variation inside the vehicle or on the top of the vehicle.



CAUTION

Always lock the turnbuckle using the jam nut to prevent loosening.

The roof reinforcing rod is located on the upper horizontal member of the front slide-out opening and is welded on the roof arches (figure 9).

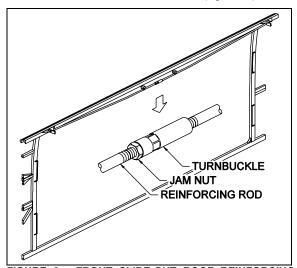


FIGURE 9 : FRONT SLIDE-OUT ROOF REINFORCING ROD

This rod allows an adjustment between the slideout horizontal member and the roof. When screwing the turnbuckle, the roof is moved upward, and vice versa. Use this rod to adjust the horizontal member parallel to the slide-out. A

member not parallel with the slide-out may cause the inflatable seal to leave the wiper seal or may reduce the inflatable seal and wiper seal efficiency.

4 RACK

Slide-out movement is made by a system of racks and pinions. There are two racks on each slide-out.

4.1 MAINTENANCE

Once a year, check the racks for broken or worn tooth, especially the front slide-out racks. Also, check the rack fastening hole teeth that are weaker and might break (figure 10). Replace the racks if excessive wear is present. Clean racks from sand or other debris. Check that the racks are properly secured. Check the backlash between the gear and the rack. Excessive backlash indicates rack wear.

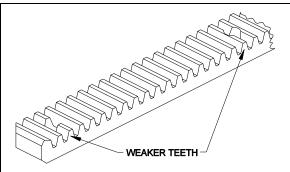


FIGURE 10: RACK

4.2 FRONT SLIDE-OUT RACK REPLACEMENT

- Remove the slide-out from the vehicle (removal must be performed according to the Slide-Out Removal Procedure. Ask to your Prevost service representative).
- 2. From under the slide-out, unscrew all the rack screws and remove the rack.
- Install a new rack. Tighten the screws to a maximum torque of 2 ft-lbs. Use Loctite™ 242 or equivalent product on threads.
- 4. Reinstall the front slide-out inside the vehicle.

CAUTION

The counterboring required for recessed screw heads reduce plastic thickness. Do not torque higher than specified.

4.3 REAR SLIDE-OUT RACK REPLACEMENT

- Using the slide-out handheld control or the manual override procedure (section 18, if using the manual override procedure, do not forget to deflate the inflatable seal completely), extend the slide-out about one foot
- 2. From outside, unscrew and remove only the first two screws of the rack to be changed.
- 3. Using the manual override procedure (section 18) only, retract the slide-out to its fully closed position.
- 4. Loosen the pinion keyless bushing of the rack to be changed.
- 5. From under the slide-out, unscrew all the rack screws and remove the rack.
- 6. Install a new rack between the slide out structural rack seat and the pinion. Tighten the screws to a maximum torque of 2 ft-lbs. Use Loctite™ 242 or equivalent product.



CAUTION

The counterboring required for recessed screw heads reduce plastic thickness. Do not torque higher than specified.

- 7. Tighten the pinion keyless bushing as described in section 5.4.
- 8. Using the slide-out manual override procedure only, extend the slide-out about one foot.
- Tighten the two remaining crews to a <u>maximum torque of 2 ft-lbs</u>. Use Loctite[™] 242 or equivalent product.
- 10. Using the slide-out handheld control switch or the manual override procedure, retract the slide-out to its fully closed position.
- 11. Re-inflate the air seal at 10 psi.

5 PINION



CAUTION

Make sure all keyless bushings are tightened to 125 lb-ft before moving the slide-out. Refer to section 5.4 for torque wrench settings. A lower torque value may cause the bushing to slip on the shaft, and a higher torque value may break the bushing.

5.1 PINION AND KEYLESS BUSHING POSITIONING

For proper functioning, respect the positioning shown on the following figure.

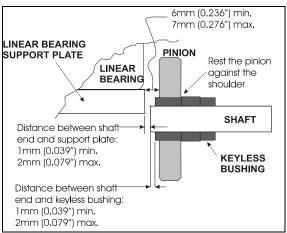


FIGURE 11: PINION AND KEYLESS BUSHING POSITIONING

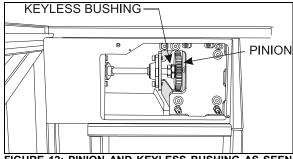


FIGURE 12: PINION AND KEYLESS BUSHING AS SEEN FROM EVAPORATOR COMPARTMENT

5.2 FRONT SLIDE-OUT SHAFT PINION REPLACEMENT



CAUTION

Before reinstalling the pinion, clean the following surfaces with alcohol to prevent slippage.

- Pinion bore;
- Keyless bushing I.D. and O.D.;
- Shaft.

Before proceeding with the front slide-out shaft pinion replacement, check the following conditions:

- The locking collars located on the side of the pinion being replaced are disengaged;
- The drive motor/gearbox assembly is removed (see section 7.2);

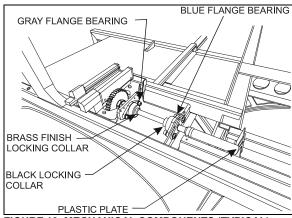


FIGURE 13: MECHANICAL COMPONENTS (TYPICAL)

 Loosen the keyless bushing (see section 5.4) of the pinion to be replaced. Slide the pinion and its bushing out of the shaft. Check the keyless bushing condition and replace if needed.

NOTE

If necessary, loosen the blue and gray flange bearing to move the pinion away from the rack.

- 2. Assemble new pinion on the keyless bushing and then slide on the shaft. Do not tighten the bushing at this moment.
- Properly position the shaft end in relation to the linear bearing support plate (see FIGURE 11) and then tighten the locking collars to maintain the shaft in that position.
- 4. Position pinion and keyless bushing as shown on FIGURE 11 and tighten the keyless bushing as described in section 5.4.
- 5. Reinstall the drive motor/gearbox assembly.



CAUTION

Make sure the keyless bushing is tightened to 125 lb-ft before moving the slide-out. Refer to section 5.4.1 for torque wrench settings.

5.3 REAR SLIDE-OUT SHAFT PINION REPLACEMENT

The procedure is similar to the front slide-out shaft pinion replacement. Gain access to the mechanism from under the bed structure. Refer to section 5.2.

5.4 KEYLESS BUSHING

The keyless bushings need a specific tightening torque value to ensure proper pinion transmitting torque. They also need specific tools to be tightened.

To tighten or loosen the keyless bushing, use those specific tools:

- crowfoot wrench 1 ½";
- torque wrench;
- combination wrench 1 3/4";
- pipe wrench;
- drive extension 5";
- socket 1 ½".

5.4.1 Installation

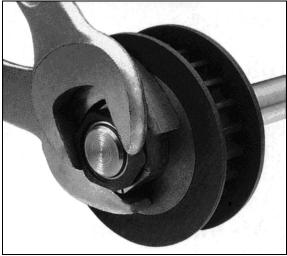


FIGURE 14: KEYLESS BUSHING TIGHTENING

To tighten the keyless bushing, use a special open-end wrench to retain the yellow part and another wrench to tighten the black part. Figure 20 shows how to tighten the keyless bushing. When tightening, make sure the pinion does not move or rotate.

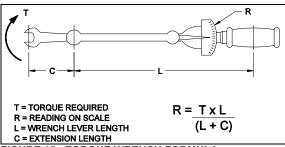


FIGURE 15: TORQUE WRENCH FORMULA




CAUTION

Make sure all keyless bushings are tightened to 125 lb-ft before moving the slide-out. A lower torque value may cause the bushing to slip on the shaft, and a higher torque value may break the bushing. The torque may need to be recalculated depending of the wrench size. Refer to figure 15 for wrench size compensation.

Take note that when the keyless bushing nut is tightened, the pinion moves about 1/16" to 3/32" toward the slide-out center.

NOTE

On the front slide-out, the driver side keyless bushing is not accessible for tightening or removal unless you remove the front left wheel. If the slide-out has been removed, this keyless bushing should be tightened before reinstalling the slide-out.

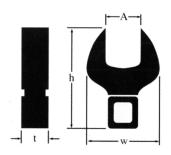

Style C Installation Nut

WRENCHES FOR INSTALLATION

Fenner Drives offers a complete line of high-quality crowfoot wrenches for installation and to provide counter-torque. These wrenches are much narrower than earlier designs and are specifically for use with Trantorque GT units. It is recommended that both wrenches be used when installing a Trantorque GT unit.

1/2" SQUARE DRIVE

Shaft	Part	Wrench Style	Dimensions (inches)			
Size	Number		A	h	w	t
13/16 to 1	6202990024	С	1-1/2	3.44	2.75	0.75

INSTALLATION INSTRUCTIONS

A Trantorque GT Keyless Bushing offers flexible and easy installation while providing exceptional holding power. To ensure a Trantorque GT unit performs as specified, it must be installed properly.

Warning: Use no lubricants in this installation.

- 1. Shaft and component bore must be within ± 0.003 "(± 0.08 mm) [± 0.0015 "(± 0.04 mm)Mini Series] of stated bore diameter and must have a surface finish of 32-125 Ra (roughness average). If the surface finish is outside these specified values, consult Fenner Drives.
- 2. Both shaft and component bore must be completely free of paint, grease, oil, and dirt. If necessary, clean the surfaces with a non-petroleum based solvent, such as isopropyl alcohol.

Warning: Do not lubricate the Trantorque GT bushing or shaft. The use of any lubricant on the contact surfaces could result in bushing failure and will void all warranties.

- 3. Insert the Trantorque GT unit into the component to be mounted, making sure the mating hub is flush against the shoulder at the hex flats.
- 4. Position the assembly at the desired location on the shaft and hand-tighten the nut (clockwise) until the assembly becomes snug on the shaft.

Warning: Do not hammer or use any type of impact to force the Trantorque GT assembly along the shaft.


Warning: The shaft must fully engage the shaft gripping area (Figure 1) of the Trantorque GT unit. Figure 2 illustrates minimum shaft engagement.


5. Using a torque wrench, tighten the nut to the proper installation torque. See table for torque value. (Note: Fenner Drives has available crowfoot wrenches for square drives in sizes from 1/2" to 3-1/2".) The hex flats on the outer ring are provided for counter-torque, eliminating the need to hold the component or shaft while applying installation torque.

Note: At full installation torque, the assembly will have moved approximately ± 0.075 "(± 1.9 mm)[± 0.045 "(± 1.1 mm)Mini Series] axially along the shaft away from the nut. If axial position is critical it may be necessary to loosen the nut and reposition the assembly.

Warning: Over-tightening the nut could damage the Trantorque GT unit and/or the mounted component.

Do not use an impact wrench in the installation.

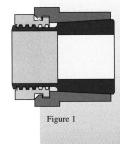

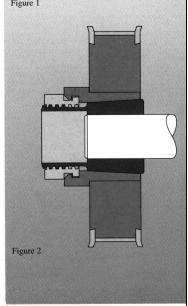

Installation Torque on Nut

	Inch Pound	System	Metric Sy	stem
	Shaft Size	In. Lbs.	Shaft size	N-m
	3/16-1/4	125	5-6mm	14.1
S	5/16-3/8	150	7–9mm	17.0
MINI SERIES	7/16-1/2	175	10-12mm	19.8
$\Sigma \Xi$	9/16-5/8	200	14-16mm	22.6
0)	3/4	700	17mm	80.0
	5/8-3/4	1200	15-19mm	136
\mathbb{Z}^{∞}	13/16-1	1500	20-25mm	170
EE	1-1/16-1-1/4	2000	28-32mm	225
ZX	1-5/16-1-1/2	2300	34-38mm	260
STANDARD SERIES	1-9/16-1-3/4	2800	40-42mm	316
S	1-13/16-2	4900	45-50mm	554
EJ 00	2-1/16-2-1/4	5300	55mm	600
豆営	2-5/16-2-1/2	5600	60mm	635
LARGE	2-9/16-2-3/4	6000	65-70mm	680
S	2-13/16-3	6600	75mm	750

FIGURE 16: KEYLESS BUSHING INSTALLATION INSTRUCTION

6 ELECTRIC MOTOR

The power is supplied by a 24V 1/3 HP electric motor coupled with a speed reduction gearbox. Opposite to the gearbox, the motor is equipped with a 3/8 hexagonal socket shaft extension permitting to move the slide-out without using the handheld control. This is very useful when moving the slide-out very slowly is required like during the inner stoppers adjustment, the tilt adjustment or the 2" inside retraction. See section 18 for the manual override procedures.



CAUTION

When moving the slide-out with a cordless power drill as described in the manual override procedure, be careful as the slide-out approaches its opened or closed position, in order not to overload the mechanism.

6.1 MAINTENANCE

Inspect the electrical connections and their watertightness. Check that the mounting bolts are tight (FIGURE 18).

6.2 REPLACEMENT

- 1. The slide-out must be retracted.
- 2. Unplug the electric cable connector.

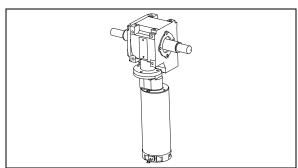


FIGURE 17: ELECTRIC MOTOR AND SPEED REDUCTION GEARBOX

- Remove the motor from the gearbox.
- Fasten the new motor to the gearbox using screws.
- 5. Re-connect the electric cable connector.

7 SPEED REDUCTION GEARBOX

The speed reduction gearbox used is a helical worm gear type. This gearbox has a 2-stage 740:1 ratio and the output shafts are self-locking. Keys on output shafts are glued into keyseats.

7.1 MAINTENANCE

Inspect the gearbox to check if there is any leakage or backlash in the box. Replace the gearbox if excessive wear is present. Check that all bolts are tight.

The gearbox is lubricated for life and the oil should not have to be changed.

7.2 GEARBOX REPLACEMENT

- The slide-out must be retracted.
- 2. Disengage the shafts jaw couplings (refer to section 8: JAW COUPLING).
- Remove the 4 cap screws securing the drive motor/gearbox assembly and dismount the assembly (see FIGURE 18).
- 4. Remove the gearbox from the motor and install the new one.
- Reinstall the drive motor/gearbox assembly on the vehicle mounting bracket. Tighten mounting bolts to a torque of 18 lbf-ft in a criss-cross patern.



CAUTION

To prevent damaging threads, use your fingers to drive the bolts into the aluminum gearbox housing mounting holes.

6. Reinstall the jaw couplings.

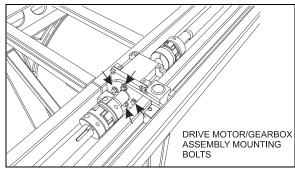


FIGURE 18: DRIVE MOTOR/GEARBOX ASSEMBLY MOUNTING BOLTS

8 JAW COUPLING

8.1 MAINTENANCE

Inspect the jaw couplings to check if there is backlash between the key and the keyway. Also, check the spider condition. Check that the clamping screws are tight.

8.2 REPLACEMENT & ADJUSTMENT

- 1. The slide-out must be retracted.
- Disengage the jaw coupling: loosen the clamping screw on each clamping hub. If required, rotate the motor shaft extension as described in the manual override procedure (section 18) to get to the clamping screws.
- 3. Separate both clamping hubs.

NOTE

It may be necessary to loosen the blue flange bearings to move the shaft out of the way.

- Clean and degrease the hub bore and the shaft.
- 5. Push the new clamping hubs onto the shaft (pinion side).
- Install a clamping hub on one of the gearbox shaft (opposite side of gearbox mounting bolts) flush with the shaft extremity (FIGURE 19). Tighten the clamping screw to a torque of 18 lbf-ft.
- 7. Install the second clamping hub on the gearbox shaft. Position the clamping hubs so that they are flush with the shafts extremity (see FIGURE 19).

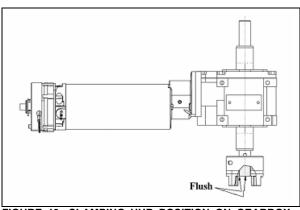


FIGURE 19: CLAMPING HUB POSITION ON GEARBOX SHAFT

- 8. Reconnect the clamping hubs with the spider. Leave a gap of 20mm (0.787inch) between each clamping hubs as shown on FIGURE 20. Use the motor hexagonal socket output shaft to align the keyways.
- Tighten clamping screws to a torque of 18 lbf-ft.

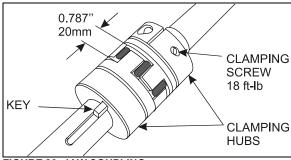


FIGURE 20: JAW COUPLING

9 FLANGE BEARING

There are two different types of flange bearing on the slide-out mechanism (FIGURE 13). Their purpose is to maintain the shaft in position while permitting rotation. The gray flange bearings are fixed to the linear bearing support plate and are not adjustable. The blue flange bearings are fixed to a support with oblong holes permitting to raise or lower the flange bearing as the linear bearing support plate level is being adjusted.

The flange bearings are pre-lubricated and no subsequent lubrication is required due to the very low extending and retracting speed of the slide-out system.

10 LOCKING COLLAR

The locking collar locks the shaft and the flange bearing together using friction. Once locked, it permits no axial translation of the shaft and prevents rotation of the shaft into the flange bearing bore.

10.1 INSTALLATION

Slide the locking collar along the shaft up to the flange bearing (FIGURE 13). Turn the locking collar clockwise while maintaining it pressed against the flange bearing. Knock the collar with a punch to lock it in place, there is a cavity on the collar made for that purpose. Tighten the set screw.

To remove, loosen the set screw and release the locking collar using channellock pliers or a small pipe wrench.

11 LINEAR BEARING

11.1 MAINTENANCE

Make every effort not to allow dust and foreign objects to enter inside the linear bearing.

The linear bearings are pre-lubricated and no subsequent lubrication is required due to the very low demanding use of the slide-out system.

11.2 REPLACEMENT & ADJUSTMENT

- Remove the slide-out from the vehicle (removal must be performed according to the Slide-Out Removal Procedure. Ask to your Prevost service representative).
- 2. Disconnect the jaw coupling on the side of the linear bearing being replaced (refer to section 8).
- 3. Dismount the blue flange bearing.
- 4. From the mechanism access panel, remove the retaining screws A, B, C & D (see figure 22).
- Now, you have access to the linear bearing mounting bolts if you turn its support up side down. Dismount the linear bearing and install the new one.
- 6. Tighten the mounting bolts in a criss-cross pattern to a torque of 60 ft-lb.
- 7. Reinstall the support plate, retaining screws, blue flange bearing and reengage the jaw coupling. Refer to the specific procedures.

11.3 LEVEL & TILT ADJUSTMENT

Leveling of the slide-out is done by changing the linear bearing support plate height using the leveling screws 1, 2, 3, 4 (figure 22). When proper level is attained, the retaining screws A, B, C & D maintain the support plate seated on the leveling screws. Also, the retaining screws prevent the slide-out from tipping inside the vehicle when it is retracted.

The slide-out is slightly tilted. When retracting, the <u>upper "in limit" stoppers touch first</u> the vehicle structure, followed by the lower "in limit" stoppers. Tilt adjustment is done by changing

the linear bearing support plate inclination using the leveling screws 1 & 2 as pivot and 3 to adjust the angle (figure 22).

11.3.1 Procedure

NOTE

For the **front slide-out**, the front linear bearing leveling screws are accessible from the access panel located over the front wheel while the rear linear bearing leveling screws are accessible from the access panel in the evaporator compartment. For the **rear slide-out**, access the linear bearing from under the bed structure or the radiator compartment.



WARNING

The slide-out must be retracted when the level and tilt adjustment is performed.

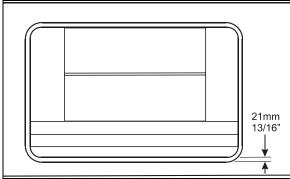


FIGURE 21: SLIDE-OUT LEVEL ADJUSTEMENT

Before proceeding with the level and tilt adjustment, check the following conditions:

- The slide-out is retracted;
- The 2 lower "in limit" stoppers are perfectly adjusted, that means that the lower edge of the slide-out outer panel is flush with the vehicle body when retracted;
- The 2 upper "in limit" stoppers are removed from the slide-out (see section1.2).
- 1. Loosen the blue flange bearings mounting screws (FIGURE 13).
- 2. For front slide-out only, loosen the two plastic plates mounting screws along the shafts (FIGURE 13).
- 3. With the lower edge of the slide-out outer panel flush with the vehicle body, adjust the

slide-out level. The distance between the top of the horizontal member under the slide-out and the slide-out under panel must be 21mm (13/16" approximately).



WARNING

Never unscrew completely retaining screw A, B, C, D or the slide-out may tip inside.

To raise the linear bearing support plate, turn levelling screw 1 & 2 clockwise. Slightly and gradually, loosen the retaining screws A & B as the support plate elevates, but keep the retaining screws tighten.

To lower the linear bearing support plate, turn screw 1 & 2 counterclockwise. As the support plate goes down, maintain the retaining screw A & B tighten.

- 4. Loosen retaining screws C & D. Unscrew leveling screw 4. Now, the support plate should be resting on levelling screw 1, 2 & 3.
- 5. Using levelling screw 3, adjust the tilt in order to have the top of the slide-out recessed between 5mm and 10mm (7/32" and 3/8") (see FIGURE 23).
- 6. When proper tilt is attained, tighten leveling screw 4 so that it comes into contact with the support plate.
- 7. Loosen slightly levelling screw 3 and then tighten it so it is perfectly in contact with the support plate. Make sure screws 1, 2, 3 & 4 are in contact with the support plate.
- 8. Loosen retaining screw A & B.
- Using a crisscross pattern, tighten progressively (3 rounds) the retaining screw A, B, C & D to a torque of 50 ft-lb.
- 10. Assure that the levelling screw 1, 2, 3 & 4 are firmly leaning on the support plate and then firmly tighten the jam nuts.
- 11. Verify that the tilt is still properly adjusted (between 7/32" and 3/8").

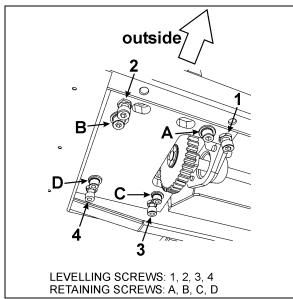


FIGURE 22 : SLIDE-OUT LEVELING

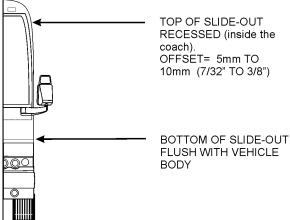


FIGURE 23: TILT ADJUSTMENT

12 RAIL

Rail and linear bearing system provide precise frictionless linear movement together with high load carrying capacity and high stiffness. These standardized equipments are fully interchangeable.

To prevent corrosion, an electrolytic black film treatment is performed to the rail. Do not strike the rail with metal tools, this could damage the treatment.

After the rail is mounted to the slide-out base, a cap is used to cover the bolt hole to prevent foreign matters from clogging up the hole or from entering into the ball slide. The cap for the bolt hole is made of synthetic resin which is superb in its resistance to oil and wear.

12.1 MAINTENANCE

Check that all the caps for the bolt hole are present. Missing caps must be replaced. To insert a cap into the rail bolt hole, use a flat tool. Pound the cap gradually until its height becomes flush with the rail top face.

Clean accumulated dirt from the rails with a soft cloth.

12.2 REPLACEMENT

- Remove the slide-out from the vehicle (removal must be performed according to the Slide-Out Removal Procedure. Ask to your Prevost service representative).
- 2. Remove the bolt hole cap covers. To do so, pierce a hole in the center and hook them out. They will not be reusable.
- 3. Remove the rail mounting bolts.
- 4. Wipe off the rust preventive oil applied to the new rail. Remove burrs and small bumps on the slide-out mounting face with an oilstone.
- 5. Carefully place the rail on the bed on its mounting face.

NOTE

The rail is bolted to a flat bar on which weldnuts are mounted. The flat bar is inserted in the slide-out lower body extrusion and can be removed through the end cap (FIGURE 24).

- 6. Adjust the flat bar position to align the weldnuts with the rail mounting holes.
- 7. Temporarily tighten the bolts.
- 8. Adjust the rail position with as per FIGURE 24. For each rail, make sure the gap is the same both side of the rail.
- For final tightening of the bolts, tighten on either end of the rail and then start to the other end. Tighten to a torque of 95 ft-lbf. Use blue Loctite ™ on threads.
- 10. Cap the bolt holes.

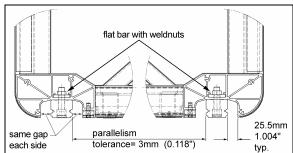


FIGURE 24: RAIL POSITIONING

13 ACETAL PLASTIC BLOCKS

Three different acetal plastic blocks are installed next to each linear bearing to prevent dirt and foreign matter from entering inside the vehicle. They also serve as bearing surface for:

- 1. The inflatable seal each side of the rail.
- 2. The "in limit" stoppers.

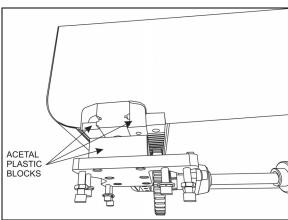


FIGURE 25: ACETAL PLASTIC BLOCKS

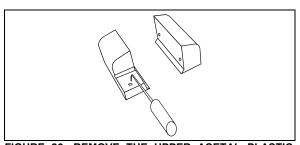


FIGURE 26: REMOVE THE UPPER ACETAL PLASTIC BLOCKS WITH A PICKING TOOL

13.1 REMOVAL / INSTALLATION

- 1. Gain access to the linear bearing support plate.
- 2. From under the support plate, remove the acetal plastic block mounting screws (see the oblong holes on figure 22).

- Remove the 2 upper acetal plastic blocks.
 They have holes so they can be removed with a picking tool (FIGURE 26) from outside the vehicle. If the acetal plastic blocks are too hard to reach, slightly extend the slide-out, the movement of the slide-out should bring them out.
- 4. To remove the lower acetal plastic block, gain access to the compartment under it. Slide the acetal plastic block toward the center of the slide-out. Proceed the same way to reinstall it.
- Reinstalling the upper acetal plastic blocks. Fold the wiper seal toward the outside with a flat tool to ease installation (FIGURE 27). Tighten the mounting screws to a torque of 7 ft-lb. Leave no gap between the blocks and the rail.

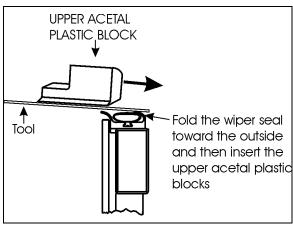


FIGURE 27: LOWER ACETAL PLASTIC BLOCK INSERTION

14 SLIDE-OUT PNEUMATIC SYSTEM

The slide-out is controlled by a pneumatic and electrical system. Mainly, the pneumatic system consists of electrically operated valves that control slide-out components and safety operations.

14.1 DESCRIPTION

AIR PRESSURE INLET VALVE

The slide-out air pressure comes from the air pressure inlet valve on the pneumatic panel in the front service compartment (figure 28).

INFLATABLE SEAL VALVE

The inflation and the deflation of a seal are done using a 5-port 2-position manifold valve with two solenoids. One solenoid is used for inflating of the seal and the other for deflating of the seal. When one of the solenoids is activated (seal deflating valve for example), the valve will keep its state even if the solenoid is deactivated. The inflating valve solenoid is activated to re-inflate the seal when the slide-out reaches its inner or outer limit. The inflatable seal pressure is set to 10 psi and in full "IN" or full "OUT" position, this pressure is continuously applied to the seal as long as the accessory air tank (which supply the slide-out) is not empty.

VACUUM GENERATOR

A vacuum generator using Venturi principle is controlled by a 5-port 2-position manifold valve and is used to evacuate the air faster from the seal and to ensure that the seal surface does not stay in contact with the slide-out.

The vacuum generator valve is activated simultaneously with seal deflating valve solenoid for 10 seconds. A pressure transducer will detect a seal, vacuum valve or generator failure if -5 psig is not reached after the 10 seconds delay. In that situation, an error code will be stored in the MCD (message center display). In normal operating condition, -5 psig is a necessary condition to consider the seal as deflated.

NOTE

When air pressure is relieved using the shutoff valve, the normal extending and retracting operation cycle is disabled, because the pressure transducer reads 0 psig and that is higher than -5 psig (vacuum). For that reason the slide-out cannot be moved with the handheld control.

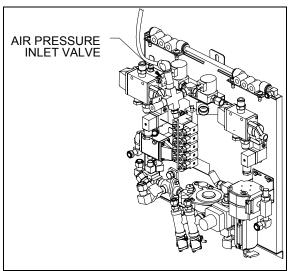


FIGURE 28: FRONT SERVICE COMPARTMENT

14.2 MAINTENANCE

COMPRESSED AIR LINE

Inspect all compressed air line tubing for cut, swelling, kink or other damage or deterioration. Inspect the pneumatic fittings and components for any leak. The slide-out air supply is connected to the accessory air tank and the maintenance is specified in the "brake and air system" section from the Prevost maintenance manual.

INFLATABLE SEAL CIRCUIT

The efficiency of the seal could be affected by impurities, such as white powder in the pneumatic control valve. It is recommended to inspect the inflatable seal control components once a year to prevent malfunction. In this case, remove the seal valves and clean the interior valve components using a compressed air nozzle. Do the same thing with the vacuum generators.

The inflatable seal pressure must be set from 7 to 10 psi maximum. It is recommended to check the inflatable seal pressure once a month to ensure sealing efficiency and prevent any infiltration from outside.

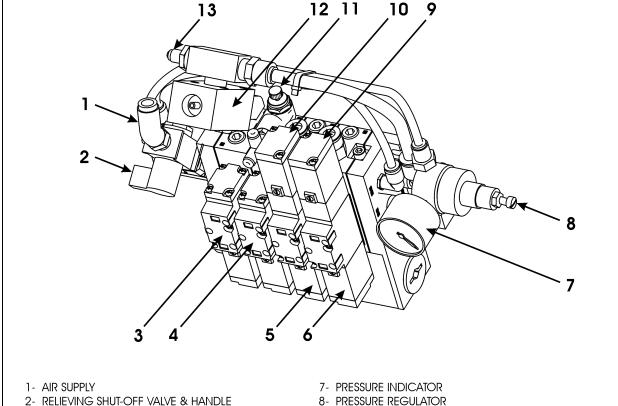


FIGURE 29: PNEUMATIC COMPONENT PANEL

3- SEAL VACUUM VALVE

4- SECURITY PIN VALVE

14.3 SEAL

NOTE

Refer to the Prevost parts manual for descriptions of the sealant and adhesives used.

5- FRONT SLIDE-OUT SEAL VALVE, DEFLATION SOLENOID

6- REAR SLIDE-OUT SEAL VALVE, DEFLATION SOLENOID

The slide-out sealing device is used to prevent any type of infiltration that may occur between the structure body and the slide-out itself. It is composed of an inflatable seal which is used as a primary sealing device for both retracted and extended slide-out position and a wiper seal as a secondary sealing device which is used to wipe water out and to ensure sealing during slide-out movement.

- 8- PRESSURE REGULATOR
- 9- REAR SLIDE-OUT SEAL VALVE, INFLATION SOLENOID
- 10- FRONT SLIDE-OUT SEAL VALVE, INFLATION SOLENOID
- 11- SECURITY PIN AIR FLOW REGULATOR
- 12- VACUUM GENERATOR
- 13- PRESSURE TRANSDUCER

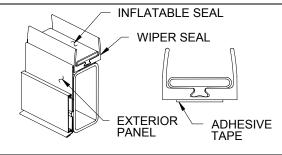


FIGURE 30 : SEAL ASSEMBLY

The seal deflation is done each time the slideout moves. The deflating valve solenoid is activated before and during the slide-out movement. When the slide-out reaches its retracted or extended position, the deflating solenoid is deactivated before activation of the inflating solenoid to re-inflate the seal.

 


FIGURE 31: REAR SLIDE-OUT INFLATABLE SEAL AIR INLET



CAUTION

Make sure the inflatable seal is deflated when manually moving the slide-out during service maintenance. Deflate both inflatable seals completely by turning the relief shut-off valve handle clockwise (see FIGURE 29).



CAUTION

Check before using any cleaning or adhesive product on seal, panel or glass to prevent alteration or damage.

14.3.1 Maintenance

The inflatable seal pressure must be set to 10 psi maximum with the pressure regulator. It is recommended to check the inflatable seal pressure once a month to ensure sealing efficiency and prevent any infiltration from outside. Check both seals for air leaks or cracks. Check the sealant between the inflatable seal and the exterior panels and glasses. Add sealant if necessary.

14.3.2 Seal assembly removal



DANGER

Always wear the appropriate safety equipment. Maintain adequate ventilation at all time.

- 1. Retract the slide-out 2" inside the vehicle (section 14.3.4).
- 2. Unplug the tubing from the inflatable seal air inlet (FIGURE 31). Keep the bushing.
- Unstick and remove the wiper seal from the structure.
- Scrape remaining tape from the structure. Remove old sealant that was between the wiper seal and the exterior panels and glasses.

14.3.3 Seal assembly installation

NOTE

This procedure is to install the inflatable seal assembly on the structure.



CAUTION

Always apply product in the same direction to prevent dirt from being brought back.



CAUTION

Check before using any cleaning or adhesive product on seal, panel or glass to prevent alteration or damage.

NOTE

Refer to the slide-out parts manual for descriptions of primer, cleaner, sealant and adhesives used.

NOTE

Refer to the product specification for drying time.

- 1. Retract the slide-out 2" inside the vehicle (section 14.3.4).
- Clean the part of the structure that will receive the inflatable seal and also the back of the exterior panel and glasses with a chix cloth and thinner. Use another cloth to dry the surfaces. Wait at least 2 minutes for drying.
- 3. Rub the structure and also the back of the exterior panel and glasses with a Scotch Brite (or equivalent product).
- Clean another times the structure and the back of the exterior panel and glasses with a chix cloth and thinner. Use another cloth to dry the surfaces. Wait at least 2 minutes for drying.
- Clean the structure and the back of the exterior panel and glasses with appropriate cleaner. Wait until the product is dry before proceeding.
- Seal the gap between the structure and the exterior panels and the gap between the glasses and the fiberglass panels with appropriate sealant. Make sure not to put

- sealant on the structure surface where the inflatable seal will be placed. Wait until the product is dry before proceeding.
- 7. Install the inflatable seal on the structure, placing it as close as possible from the exterior side of the structure. Position the air inlet first. Then remove locally the inflatable seal adhesive tape protection, and press the upper corners on the structure and hold them in place for 90 to 120 seconds. Install the lower corners next, then the straight section. Press the straight inflatable seal sections on the structure for at least 15 seconds. Use a small roller to ensure a good adhesive contact on the structure.
- 8. Seal the gap between the inflatable seal and the exterior panels and the gap between the glasses and the fiberglass panels with appropriate sealant. Wait until the product is dry before proceeding. Remove excess sealant with appropriate cleaner.
- 9. Replace the bushing and plug the pneumatic tubing on the inflatable seal air inlet (FIGURE 31).

14.3.4 Slide-out 2" inside retraction

- 1. For both sides of the slide-out, remove the 2 upper acetal plastic blocks shown on FIGURE 26 (refer to section 13).
- 2. Manually deflate the seal completely by turning the relieving shut-off valve clockwise (FIGURE 29). Make sure the pressure indicator reading is "0 psi".
- Turn the ignition to the off position. Using the manual override procedure (section 18), extend the slide-out a few inches so the exterior extrusion screws located on the top of the slide-out are accessible from outside (figure 7).
- Using a knife cut the sealant between the extrusion and the roof (figure 7). Unscrew and remove the central exterior extrusion screws and the two end extrusion screws.



CAUTION

Do not use the slide-out handheld control to move the slide-out 2" inside the vehicle, because the limits are not recognized over the closed position. The slide-out will not stop and damage may occur.

5. Using the manual override procedure, move the slide-out 2" inside the vehicle, so the seal is accessible from outside (FIGURE 32).

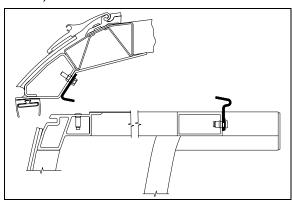


FIGURE 32: SLIDE-OUT 2" INSIDE – UPPER PART

- Once completed, use the manual override procedure to extend the slide-out to reinstall the exterior extrusion. Apply appropriate sealant on the exterior extrusion screws and between the extrusion, the roof and the edges to prevent water infiltration (FIGURE 32).
- 7. Reinstall the acetal plastics blocks.
- 8. Using the manual override procedure, retract the slide-out to its closed position.
- Finally, the seal can be re-inflated by turning the shut-off valve handle counterclockwise. Check the pressure gage on the inflatable seal regulator to see if the pressure is increasing to 10 psi.

15 SLIDE-OUT ELECTRICAL SYSTEM



DANGER

Never modify the slide-out electrical wiring without the Prevost Car approval. Any modifications may cause an unexpected slide-out action and could result in personal injuries.

The multiplexed slide-out electrical system is mainly composed of the Master ID module, the CECM module, the VEC module and two I/O-B modules.

Each slide-out has its own I/O-B module and two power relays. The I/O-B modules analyze the input signal conditions and activate outputs like the pneumatic valves, the retracting or extending

programmed sequence, etc. The power relays are used to supply power coming from the I/O-B module to the electric motor and to change polarity to reverse motor rotation.

The I/O-B modules input signals are:

- Handheld control switch IN;
- Handheld control switch OUT;

Also, the following input signals are required for a safe operation of the slide-out:

- Pressure transducer;
- Parking brake;
- "in limit" sensor;
- "out limit" sensor;

The I/O-B modules output signals are:

- · Handheld control green indicator light;
- Power relay current reversing;
- Seal valve inflating solenoid;
- Seal valve deflating solenoid;
- Vacuum generator valve solenoid;
- Security pin valve solenoid;
- Electric motor, first power output 15 amps;
- Electric motor, second power output 15 amps;

The CECM module output signals are:

- Dashboard telltale light;
- Transmission inhibit;



DANGER

Before working on the slide-out electrical system, turn the ignition key to the "OFF" position.

15.1 ELECTRICAL INTERCONNECTION WITH PREVOST VEHICLE

The slide-out power supply comes from the 24-volts circuit breaker (FIGURE 34) in the engine R.H. side access compartment. The other interconnections are located on the pneumatic panel and the electrical panel in the front service compartment. All the interconnections are shown on the electrical diagrams of your vehicle.

A blinking signal is added on the dashboard telltale panel (figure 33) to indicate that an error condition or a missing operation condition is present on a slide-out. The slide-out telltale light also illuminates to indicate that at least one of the slide-outs is extended.

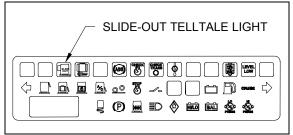


FIGURE 33 : DASHBOARD SLIDE-OUT TELLTALE LIGHT

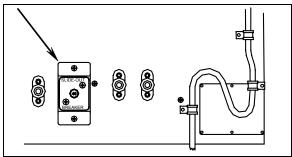


FIGURE 34: MAIN BREAKER IN ENGINE R.H. SIDE ACCESS COMPARTMENT

15.2 SLIDE-OUT BREAKERS / FUSES

The main breaker (for both slide-outs) is located in the engine R.H. side access compartment. All other slide-out breakers and hardware fuses are located inside the VEC, on the slide-out electrical component panel located in the third baggage compartment on the driver side (figure 35 and figure 36).

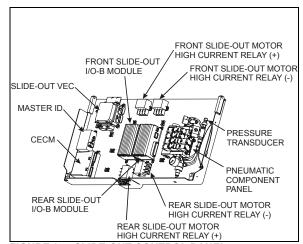


FIGURE 35 : SLIDE-OUT CONTROL PANEL

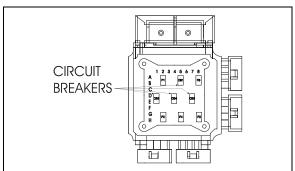


FIGURE 36: VEC CIRCUIT BREAKERS & FUSES

15.2.1 Multiplex fuses

The multiplex module outputs are protected in current by an internal "soft-fuse". Each output is programmed to specific maximum amperage. When an output is shorted, the current gets above the limit and the soft-fuse intervenes to turn the output OFF. The output stays OFF until the "soft-fuse" is reset.

Turn the ignition key to the OFF position and turn to the ON position again. This resets all "soft-fuses".



CAUTION

Never put grease, Cortec VCI-238 or other product on the multiplex modules connector terminals.

15.3 PROBING VOLTAGE ON THE MULTIPLEX CIRCUITS

Multiplex modules are supplied by 24 volts.

Inactive Multiplex output = Residual voltage of 18% to 33% of supply voltage.

Inactive Multiplex input = Residual voltage of 50% of supply voltage.

NOTE

For a 24V module: an active voltage would be 24V or 0V but not in between. If you measure the intermediate tensions (ex. 12V, 4V, or 8V) this must be interpreted as if the input or the output is inactive.

15.4 MODULE REPLACEMENT

I/O-B and CECM multiplex modules can be replaced and reprogrammed without having to connect a computer to the vehicle.

15.4.1 I/O-B replacement

- Turn the ignition key to OFF.
- Replace the module (disconnect the green connector first, then the grey one and finish with the black connector. To disconnect the black connector, slide downwards the red latch).
- Turn the ignition key to the ON position.
 This engages the automatic reprogramming,
- The slide-out telltale light will turn on and stay on until the reprogramming is complete. Once completed, the slide-out telltale light will turn off or stay on (not blinking) if at least, one slide-out is extended.
- Check the SYSTEM DIAGNOSTIC menu of the message center display (MCD). Select FAULT DIAGNOSTIC and ELECTRICAL SYSTEM. Verify the fault message to be certain the module is reprogrammed. If the module is not reprogrammed, the message « Axx Not Responding » appears where Axx is the module number (A56 or A57).

15.4.2 CECM module replacement

- Turn the ignition key to OFF.
- Replace the module.
- Turn the ignition key to the ON position. This engages the program transfer from the Master ID to the CECM module (the back-up program is inside the Master ID. The Master ID will identify the CECM as being new and will send the correct program to it). The slide-out telltale light will turn on and stay on for a while, and then will turn off. Wait until the slide-out telltale starts blinking each second. At this point, the MasterID module has finished loading the program in the CECM.
- Turn the ignition key to the OFF position and then turn it back to the ON position. This engages I/O's modules automatic reprogramming.
- The slide-out telltale light will turn on.
 Once completed, the slide-out telltale light
 will turn off or stay on (not blinking) if at
 least, one slide-out is extended.

 Check the SYSTEM DIAGNOSTIC menu of the message center display (MCD). Select FAULT DIAGNOSTIC and ELECTRICAL SYSTEM. You should read "no errors". If an active error appears for a module, this one was not reprogrammed. In this case, repeat the procedure.

15.5 SLIDE-OUT LIMIT SENSORS

Two Hall-Effect sensors are used on each slideout to define end limit positions. The "in limit" and "out limit" sensor detect two pairs of permanent magnets fixed on the slide-out underbody.

15.5.1 Maintenance and adjustment

The rear slide-out sensors are accessible from inside of the vehicle, under the bed structure while the front slide-out sensors can be reached from the 3rd baggage compartment access panel. To remove the sensors, unsnap them from the mounting bracket.

To adjust the "in limit" sensors:

Prior to adjust the "in limit" sensors, assure that the "in limit" stoppers are perfectly adjusted (see section 1.2.2).

- 1. Retract the slide-out to its full "IN" position with the "in limit" stoppers in contact with their bearing surface.
- 2. Loosen the "in limit" sensor mounting bracket screws and move back the sensor completely (toward the inside of the vehicle).
- Bring slowly the sensor toward the outside of the vehicle until the light emitting diode (LED) turns on. When it does, move it 0.079" (2mm) further in the same direction and tighten the mounting bracket screws.
- 4. Check if the "in limit" sensor is properly adjusted. At the moment when the slide-out stops during normal retraction, the "in limit" stoppers must contact their bearing surface (lower acetal plastic block). Put white paint on the "in limit" stopper before and check if the acetal plastic blocks are marked with paint.

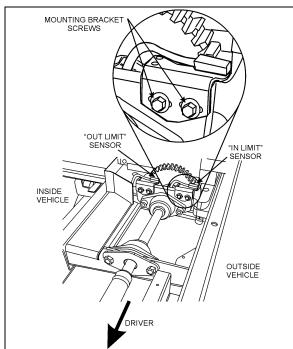


FIGURE 37: FRONT SLIDE-OUT SENSORS

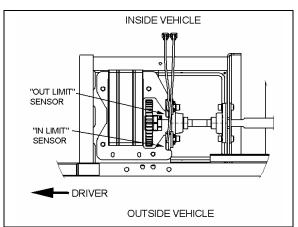


FIGURE 38: REAR SLIDE-OUT SENSORS

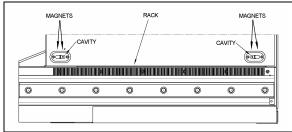


FIGURE 39: MAGNETS ON SLIDE-OUT UNDERBODY

To adjust the "out limit" sensors:

Prior to adjust the "out limit" sensors, assure that the inner stoppers are perfectly adjusted (see section 1.1).

- The slide-out is slightly tilted except when it is in its full "IN" or "OUT" position. Extend the slide-out near its full "OUT" position. When the slide-out straitens up and that it is perpendicular with the vehicle body, stop the slide-out.
- 2. Loosen the "out limit" sensor mounting bracket screws and move back the sensor completely (toward the inside of the vehicle).
- Bring slowly the sensor toward the outside of the vehicle until the light emitting diode (LED) turns on. When it does, tighten the mounting bracket screws.

NOTE

When the "out limit" sensors are properly adjusted, the slide-out extension stops before the side inner stoppers reach the vehicle structure.

16 SLIDE-OUT EXTERIOR FINISHING PANELS & WINDOWS

NOTE

The removal and installation procedures are all based on standard service methods described in section 18: BOBY. Refer to this manual for procedures, tools, cleaner, adhesives and other product needed.

16.1 FACE PANEL REMOVAL

Use the same procedure as described in section 18: BODY for MTH side panel removal, and:

- Keep the slide-out retracted;
- Make sure not to damage the finishing molding supports to be able to re-use them;
- Remove the old adhesive on the finishing molding supports and clean them before re-using;
- Check where adhesive, sealant and double face adhesive tape are on the structure and the panel back side, in order to be able to stick the new panel in the same way;
- Check the tape width and use same width tape when installing new panels.

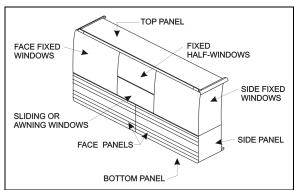


FIGURE 40 : SLIDE-OUT PANELS AND WINDOWS

16.2 FACE PANEL INSTALLATION

For surface cleaning, and preparation, panel installation and products needed, use the same procedure as the MTH side panel installation described in section 18: BODY.

- Keep the slide-out retracted for panel alignment;
- Make sure to apply sealant between the face panels and the side panels, and also between face panels and bottom and top panels. Apply sealant both inside and outside the slide-out panels.

16.3 SIDE PANELS REMOVAL

NOTE

The side panels are made of aluminum, or of stainless steel in option.



CAUTION

Be careful not to damage the adjacent surfaces.

- Remove the slide-out (according to the Slide-Out Removal Procedure. Ask to your Prevost service representative).
- 2. Remove the side fixed windows from the slide-out first, as described in section 16.7.
- 3. Insert a flat screwdriver between the panel and the slide-out structure, in the top left and right corners of the panel, and unstick the panel from the structure.
- 4. Use C-clamp to peel the panel from the slide-out structure.
- 5. Check where adhesive, sealant and double face adhesive tape are on the structure and

the panel back side, in order to be able to stick the new panel in the same way.

6. Check the tape width and use same width tape when installing new panels.



CAUTION

Make sure the heat gun nozzle tip is at least 4" from surface.

7. Use a heat gun and putty knife to remove the dried off adhesive and tape residue from the structure.



DANGER

Because of the adhesive toxicity, never use a buffer or other sanding method to remove it.

16.4 SIDE PANELS INSTALLATION

NOTE

The side panels are made of aluminum, or of stainless steel in option. Use rivet of same material as the panels.

For surface cleaning and preparation, panel installation and products needed, refer to the MTH side panel installation procedure described in section 18: BODY.

- 1. Protect adjacent surfaces with appropriate material:
- 2. Refer to figure 41 for 1/16x1/4 double face adhesive tape location on structure;
- Apply Sika 206 G+P on the side panel as shown in figure 42;
- Apply Sika Tack+Booster (triangular bead: 9mm width X 6mm high) as shown in Figure 43 and glue panel in place as shown in FIGURE 44;
- 5. Exert pressure and let dry for at least 90 minutes;
- Smooth down the joint and remove glue in excess;
- 7. After drying, apply Sika 252 as a finishing joint;
- 8. Smooth down the joint.
- 9. Refer to section 16.11 for the finishing joint application procedure.

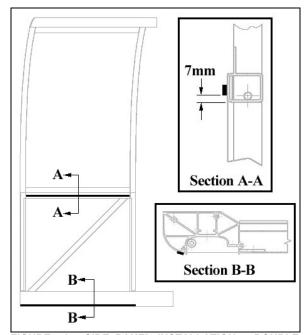


FIGURE 41: SIDE PANEL INSTALLATION - DOUBLE FACE ADHESIVE TAPE APPLICATION ON THE SLIDE-OUT STRUCTURE

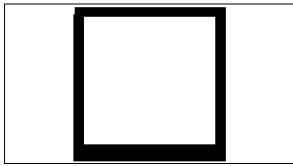


FIGURE 42: SIDE PANEL INSTALLATION - SIKA 206 G+P APPLICATION

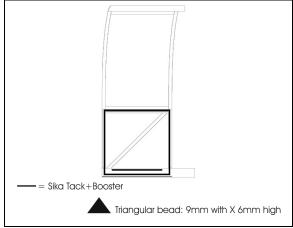


FIGURE 43 : SIDE PANEL INSTALLATION - SIKA TACK+BOOSTER APPLICATION

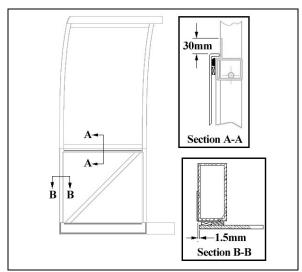


FIGURE 44: SIDE PANEL INSTALLATION

16.5 TOP AND BOTTOM PANEL REMOVAL

NOTE

The top and bottom panels are made of aluminum sheets.

- Remove the slide-out (according to the Slide-Out Removal Procedure. Ask to your Prevost service representative).
- 2. Insert a flat screwdriver between the panel and the slide-out structure, and unstick the panel from the structure.
- 3. Use C-clamp to peel the panel from the slide-out structure.
- 4. Check where adhesive, sealant and double face adhesive tape are on the structure and the panel back side, in order to be able to stick the new panel in the same way.
- 5. Check the tape width and use same width tape when installing new panels.
- 6. Use a heat gun and putty knife to remove the dried off adhesive and tape residue from the structure.



16.6 TOP AND BOTTOM PANEL INSTALLATION

NOTE

The top and bottom panels are made of aluminum sheets and need aluminum rivet.

For surface cleaning, preparation, panel installation and products needed, refer to the MTH side panel installation procedure described in section 18: BODY.

- Protect adjacent surfaces with appropriate material.
- 2. Refer to FIGURE 45 for 1/16x1/4 double face adhesive tape location on structure;
- 3. Apply Sika 206 G+P on panel as shown in FIGURE 46;
- 4. Apply Sika Tack+Booster (triangular bead: 9mm width X 6mm high) has shown in FIGURE 47 and glue panel in place as shown in figure 48 & figure 49;
- 5. Exert pressure and let dry for at least 90 minutes;
- Smooth down the joint and remove glue in excess;
- 7. After drying, apply Sika 252 as a finishing joint;
- 8. Smooth down the joint.
- 9. Refer to section 16.11 for the finishing joint application procedure.

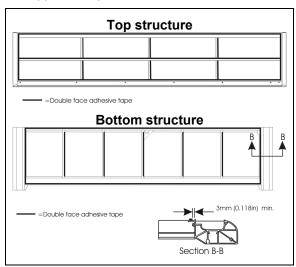


FIGURE 45: TOP AND BOTTOM PANEL INSTALLATION - DOUBLE FACE ADHESIVE TAPE APPLICATION

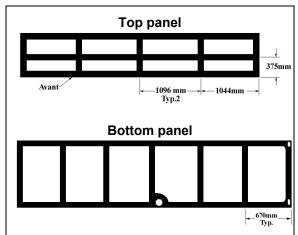


FIGURE 46 TOP AND BOTTOM PANEL INSTALLATION - SIKA 206 G+P APPLICATION

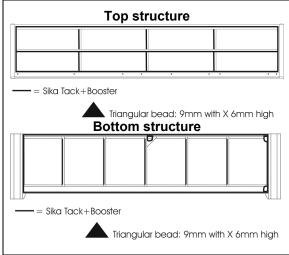


FIGURE 47: TOP AND BOTTOM PANEL INSTALLATION - SIKA TACK+BOOSTER APPLICATION

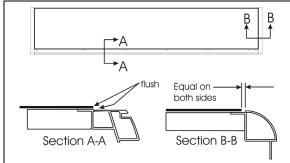


FIGURE 48: TOP PANEL INSTALLATION

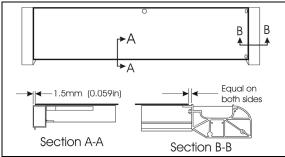


FIGURE 49: BOTTOM PANEL INSTALLATION

NOTE

The removal and installation procedures are based on standard service methods described in section 18: BODY. Refer to these procedures for tools and adhesives specifications.



DANGER

Always wear safety equipment when working with glass and chemical adhesives.

16.7 WINDOWS REMOVAL

- 1. Remove the slide-out.
- 2. If needed, remove the exterior extrusion as described in section 1.3.



CAUTION

Be careful not to damage the adjacent surfaces.

- With a knife or a wire, cut the sealant and the adhesive between the windows and the structure. Make sure not to damage the rubber seal between the windows.
- 4. With a helper, remove the window from the slide-out.

16.8 FIXED WINDOWS INSTALLATION

Refer to procedures described in section 18: BODY of the maintenance manual for details.

- Clean and prepare the windows and the slide-out structure surfaces with appropriate cleaner, abrasives and primers.
- 2. If necessary, install the rubber seals as per FIGURE 50 & FIGURE 51. Press the seal against the structure with a roller.

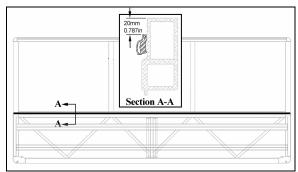


FIGURE 50 : FACE FIXED WINDOWS - RUBBER SEAL INSTALLATION

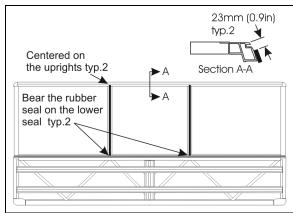


FIGURE 51 : FACE FIXED WINDOWS - RUBBER SEAL INSTALLATION

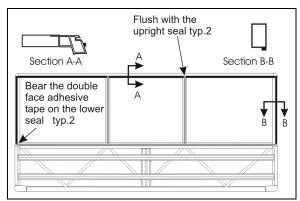


FIGURE 52 : FACE FIXED WINDOWS – 3/16 X 1/2 DOUBLE FACE ADHESIVE TAPE INSTALLATION

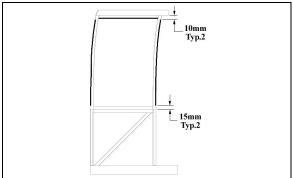


FIGURE 53: SIDE FIXED WINDOW - 1/4 X 1/2 DOUBLE FACE ADHESIVE TAPE INSTALLATION

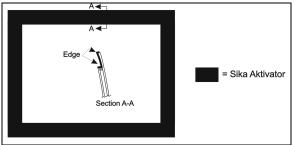


FIGURE 54 : FACE FIXED WINDOW AND HALF-WINDOW – SIKA AKTIVATOR

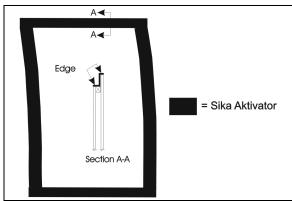


FIGURE 55: SIDE FIXED WINDOW - SIKA AKTIVATOR

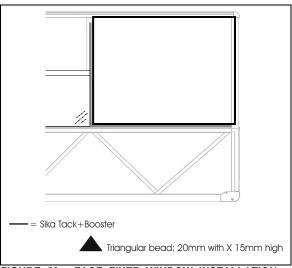


FIGURE 56: FACE FIXED WINDOW INSTALLATION - SIKA TACK+BOOSTER

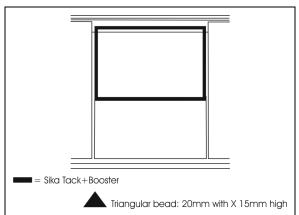


FIGURE 57: FACE FIXED HALF-WINDOW INSTALLATION – SIKA TACK+BOOSTER

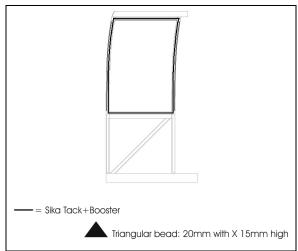


FIGURE 58 : SIDE FIXED WINDOW - SIKA TACK + BOOSTER

- Apply appropriate double face self adhesive tape on the slide-out structure (sees FIGURE 52 for face fixed windows or FIGURE 53 for side fixed window).
- Clean window with appropriate window cleaner.
- 5. Apply Sika Aktivator on the window pane as per FIGURE 54 or FIGURE 55.
- 6. Apply Sika Tack+Booster as per FIGURE 56 FIGURE 57 or FIGURE 58 (triangular bead: 20mm width X 15mm high).
- 7. Install the windows on the slide-out structure (see FIGURE 59 or FIGURE 60).
- 8. Press the jigs on the windows and wait for the adhesive to dry (90 minutes minimum).
- 9. After drying, apply Sika 221 as a finishing joint. Clean excess with Sika 208.

10. Refer to section 16.11 for the finishing joint application procedure.

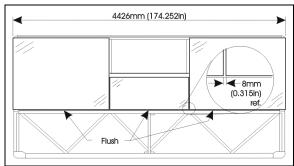


FIGURE 59: FACE FIXED WINDOW INSTALLATION

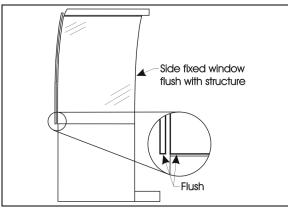


FIGURE 60 : SIDE FIXED WINDOW

16.9 AWNING WINDOW INSTALLATION

- Clean and prepare the windows and the slide-out structure surfaces with appropriate cleaner, abrasives and primers.
- Glue on the structure horizontal member, 4 rubber bumpers (#5061020), placing them 2 by 2 to have a total thickness of 1/16" (FIGURE 61).

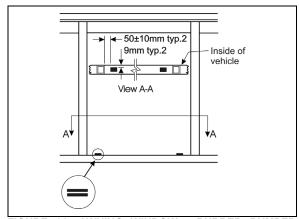


FIGURE 61: AWNING WINDOW - RUBBER BUMPER INSTALLATION

3. Glue 4 rubber bumpers (#790610) on the awning window frame as per FIGURE 62.

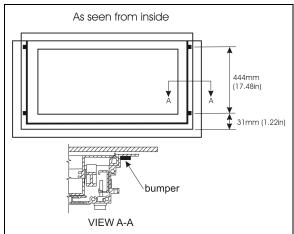


FIGURE 62: SIDE BUMPERS

4. Place masking tape on the inside of the frame as per FIGURE 63.

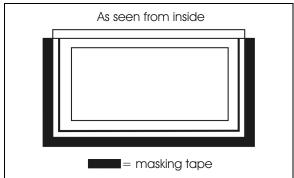


FIGURE 63: MASKING TAPE APPLICATION

5. Apply Sika 255 in the upper and lower frame corner as per FIGURE 64.

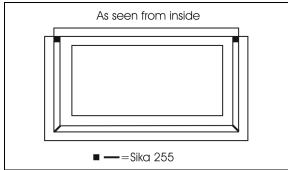


FIGURE 64: SIKA 255 APPLICATION

- 6. Apply Sika Aktivator as per FIGURE 65.
- 7. Apply Sika 255 as per FIGURE 66 (triangular bead: 10mm width X 10mm high).

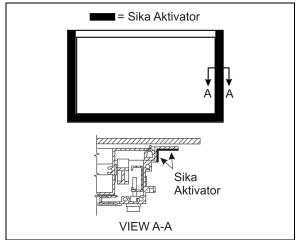


FIGURE 65: AWNING WINDOW - SIKA AKTIVATOR

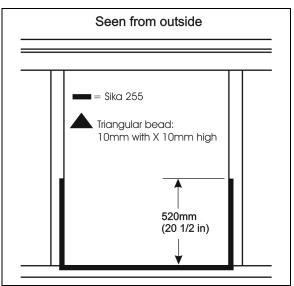


FIGURE 66: AWNING WINDOW - SIKA 255 APPLICATION

- Install the awning window centered in the opening. Press the window slightly. The awning window must be kept closed.
- While a helper is pressing on the window from outside, install the awning window clamping frame and tighten screws according to the sequence shown in FIGURE 67.

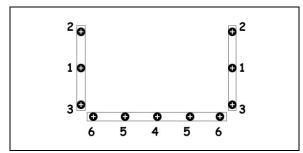


FIGURE 67: CORRECT TIGHTENING SEQUENCE

10. Open the awning window manually and smooth down the joint (FIGURE 68) and remove glue in excess with Sika 208.

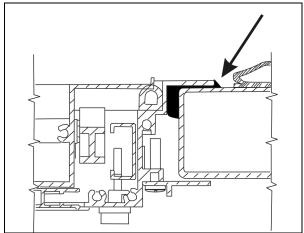


FIGURE 68: SMOOTH DOWN THE JOINT

- 11. Using Sika 252 or 255, seal the upper corner of the awning window, both side (FIGURE 69).
- 12. Using Sika 252 or 255, seal the chink between the structure vertical member and the awning window, both side (FIGURE 70).



FIGURE 69: AWNING WINDOW - SEAL THE UPPER CORNERS



FIGURE 70: AWNING WINDOW - SEAL THE CHINK

16.10 SLIDING WINDOW INSTALLATION

- Clean and prepare the windows and the slide-out structure surfaces with appropriate cleaner, abrasives and primers. Clean surfaces with anti-silicone.
- 2. Apply Sika Aktivator on sliding window as per FIGURE 71.
- 3. Apply Sika Aktivator on the structure as per FIGURE 72.
- 4. Apply Sika 252 as per FIGURE 73 (triangular bead: 20mm width X 10mm high).
- Install the sliding window centered in the opening. Press the window slightly. The window must be kept closed.
- 6. While a helper is pressing on the window from outside, install the awning window clamping frame and tighten screws according to the sequence shown in FIGURE 74.
- 7. Remove glue in excess with Sika 208.
- 8. Using Sika 252 or 255, seal the inside upper corner of the sliding window, both side (FIGURE 75).
- 9. Using Sika 252 or 255, seal the chink between the structure vertical rubber seal and the sliding window, both side (FIGURE 76).

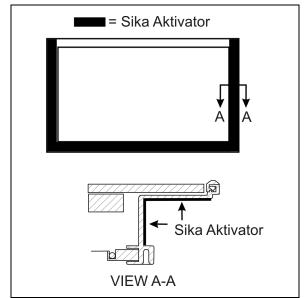


FIGURE 71: SLIDING WINDOW - SIKA AKTIVATOR



FIGURE 72: SLIDING WINDOW - SIKA AKTIVATOR

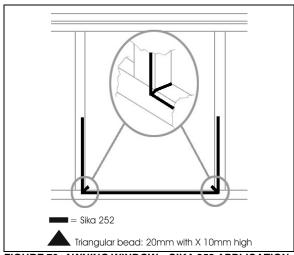


FIGURE 73: AWNING WINDOW – SIKA 252 APPLICATION

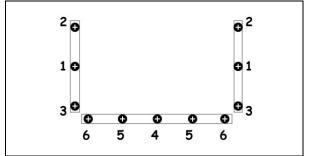


FIGURE 74: CORRECT TIGHTENING SEQUENCE



FIGURE 75 : SLIDING WINDOW - SEAL THE UPPER CORNERS



FIGURE 76: SEAL

16.11 FINISHING JOINT


The following procedure applies to section 16.11.1 up to 16.11.4.

For surface cleaning and preparation, tools, cleaner, adhesives and other product needed, refer to the MTH side panel installation procedure described in section 18: BODY.

- 1. Place masking tape to protect surfaces from smudge.
- 2. Apply Sika 221.


3. Using soapy water, smooth down the joint with your finger (wear vinyl gloves).


16.11.1 Slide-out face

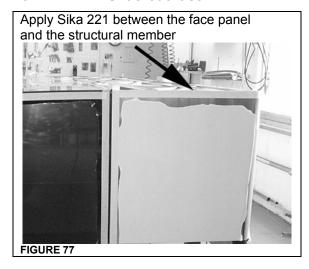



16.11.2 Slide-out side

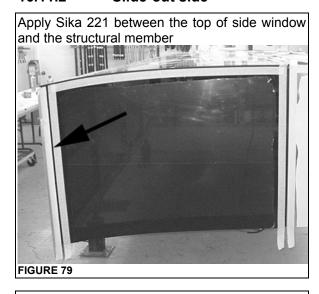

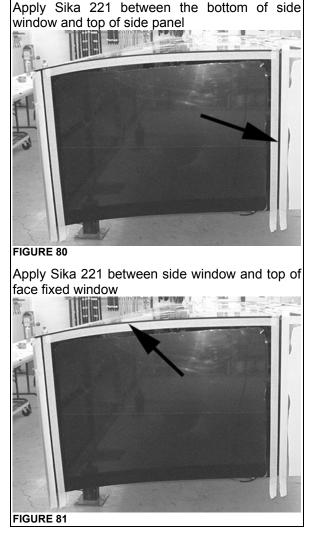

16.11.3 Slide-out bottom

Apply Sika 221 between bottom edge of side panel and structural member FIGURE 82

Apply Sika 221 between edge of bottom panel and structural member


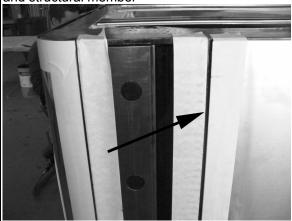


FIGURE 83


Apply Sika 221 between the bottom panel and the magnets



Apply Sika 221 around the security pin cavity

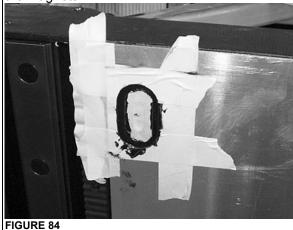

16.11.4 Top of Slide-out

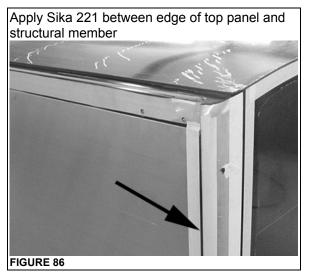

17 WELDING PRECAUTION



CAUTION

Prior to arc welding on the vehicle, refer to the Welding Precautions Procedure Prior To Welding" in section 00 GENERAL of this manual to avoid serious damage to the vehicle components.

18 SLIDE-OUT MANUAL OVERRIDE PROCEDURES

In case of power retracting system failure, it is possible to use the manual override procedure to retract or extend the slide-out.

The manual override procedures consist in rotating the slide-out motor shaft extension using a cordless power drill with a 3/8" hexagonal bit. However, it is very important to follow all the instructions very carefully to assure that the inflatable seal or the retraction mechanisms are not damaged.

18.1 PRELIMINARY CONDITIONS FOR MANUAL OVERRIDE PROCEDURE

Before using the slide-out manual override procedures, make sure that the problem cannot be solved by one of the following simple checks:

- Make sure that none of the breakers are tripped (the breakers are located inside the VEC on the slide-out control panel (FIGURE 88) and the main slide-out breaker is located in the engine R.H. side access compartment (FIGURE 89)).
- Make sure the barking brake is applied and that transmission is in the "NEUTRAL" position.
- Make sure the voltage is high enough by running the engine at fast idle or having the battery charger connected.



CAUTION

Before extending or retracting the slide-out, always open a window to avoid movement restriction and to prevent the motor from stopping in overcurrent because of a vacuum or pressure build up inside the vehicle.

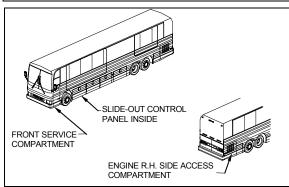


FIGURE 87: COMPARTMENTS LOCATION

 


FIGURE 88: VEC CIRCUIT BREAKERS ON SLIDE-OUT CONTROL PANEL

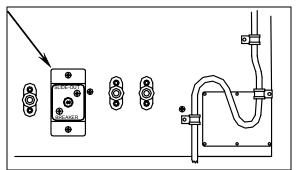


FIGURE 89: MAIN SLIDE-OUT BREAKER IN ENGINE R.H. SIDE ACCESS COMPARTMENT

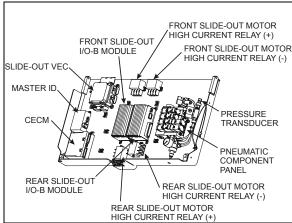


FIGURE 90: SLIDE-OUT CONTROL PANEL

18.1.1 Manual retracting procedure - Front and rear slide-out

- Turn the ignition switch to the "OFF" position, and remove the ignition key for more safety.
- Deflate the inflatable seal by using the relieving shut-off valve located on the pneumatic component panel (FIGURE 91).
- 3. Turn the handle clockwise to deflate the seal. Make sure the pressure indicator reading is "0 psi".



CAUTION

The pressure in the inflatable seal must be completely relieved to prevent any damage to the seal.

NOTE

When air pressure is relieved using the shutoff valve, the normal extending and retracting operation cycle is disabled, for that reason the slide-out cannot be moved using the handheld control.

- 4. To move the slide-out, use a cordless power drill with a 3/8" hexagonal bit on the shaft extension of the slide-out motor.
- 5. Rotate the slide-out motor shaft extension with the power drill until the slide-out comes to its closed position (FIGURE 92).
- Once the slide-out room is lined up to its closed position, remove the tool from the motor.

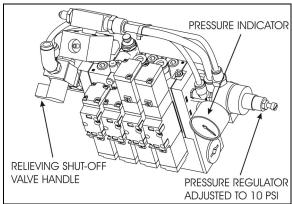


FIGURE 91: INFLATABLE SEAL RELIEVING SHUT-OFF VALVE

NOTE

The **front slide-out motor** is located inside the 2nd baggage compartment while the **rear slide-out motor** is accessible from inside the vehicle, under the bed structure.

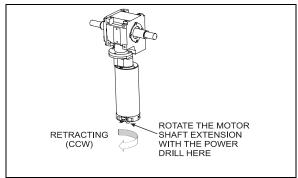


FIGURE 92: SLIDE-OUT MOTOR ROTATION



CAUTION

Slow down on the closing speed as the slideout approaches its closed position. As soon as the "in limit" stoppers come in contact with their bearing surface, stop immediately the power drill rotating movement. Not doing so could overload the drive mechanism and cause damage to the reduction gearbox. 4. Finally, the inflatable seal can be re-inflated by turning the shut-off valve handle counterclockwise. Check the pressure gage on the inflatable seal regulator to see if the pressure is increasing to 10 psi (FIGURE 93).

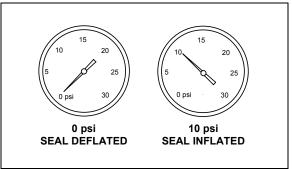


FIGURE 93: INFLATABLE SEAL PRESSURE GAGE

NOTE

The slide-out control system inhibits transmission range selection to prevent the vehicle from moving if the slide-out is not in its full "IN" position.

18.1.2 Manual extending procedure – Front and rear slide-out

- 1. Apply barking brake to disengage the security pin from the receptacle.
- Turn the ignition switch to the "OFF" position, and remove the ignition key for more safety.
- 3. Deflate the inflatable seal by using the relieving shut-off valve located on the pneumatic component panel (FIGURE 91). Turn the handle clockwise to deflate the seal. Make sure the pressure indicator reading is "0 psi".



CAUTION

The pressure in the inflatable seal must be completely relieved to prevent any damage to the seal.

NOTE

When air pressure is relieved using the shutoff valve, the normal extending and retracting operation cycle is disabled, for that reason the slide-out cannot be moved with the handheld control.

- 4. To move the slide-out, use a cordless power drill with a 3/8" hexagonal bit on the shaft extension of the slide-out motor.
- 5. Rotate the slide-out motor shaft extension with the power drill until the slide-out comes to its opened position (FIGURE 94).
- 6. Once the slide-out is lined up to its opened position, remove the tool from the motor.

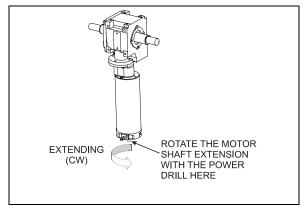


FIGURE 94: SLIDE-OUT MOTOR ROTATION

NOTE

The **front slide-out motor** is located inside the 2nd baggage compartment while the **rear slide-out motor** is accessible from inside the vehicle, under the bed structure.



CAUTION

Slow down on the closing speed as the slideout approaches its extended position. As soon as the "out limit" stoppers come in contact with their bearing surface, stop immediately the power drill rotating movement. Not doing so could overload the drive mechanism and cause damage to the reduction gearbox.

7. Finally, the inflatable seal can be re-inflated by turning the shut-off valve handle counterclockwise. Check the pressure gage on the inflatable seal regulator to see if the pressure is increasing to 10 psi (FIGURE 94).

NOTE

The slide-out control system inhibits transmission range selection to prevent the vehicle from moving if the slide-out is not in its full "IN" position.

19 SLIDE-OUT MAXIMUM LOAD

Front slide-out:

Rear slide-out:

Maximum load with vehicle at stand still (retracted or extended)1500 lb Maximum load with vehicle moving or slide-out moving1000 lb 1

$NOT\overline{E}$

Maximum load includes people weight and equipment added by the converters in the slide-out


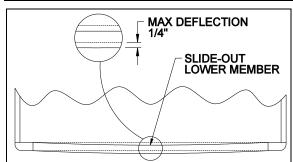


FIGURE 95: FRONT SLIDE-OUT DEFLECTION

¹ When the load is distributed in the slide-out to prevent a deflection of the inside lower member over ½" that could damage the seal.

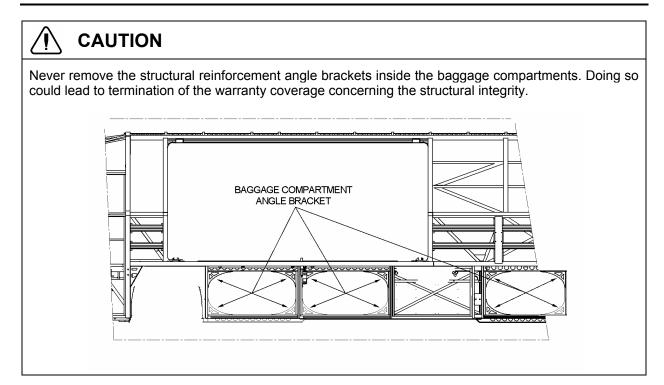

20 CONVERSION CHECKLIST

The converter should check these points before closing the walls covering the roof reinforcing rod and the pinions:

- Check that the front slide-out exterior panels are parallel with the vehicle panels when retracted. If not, readjust
 the tilt.
- 2. Check that the slide-out is straight when completely extended, and that it leans against all inner stoppers.
- 3. Make sure the vehicle upper member is parallel with the front slide-out structure. If not, readjust the roof reinforcing rod. This may be affected by the loading on the roof.
- 4. Make sure the front slide-out lower member deflection is within 1/4". If not, redistribute the slide-out load.
- 5. Check the whole slide-out mechanism good functioning. The slide-out should retract and extend smoothly without vibration.

Final check:

- Make sure the slide-out air pressure inlet valve is completely opened.
- o Check the inflatable seal air pressure on the pressure regulator. The pressure should be 10 psi.

TROUBLESHOOTING

20.1 ERROR CONDITION OR MISSING OPERATION CONDITION

When an error condition or a missing operation condition is present on a slide-out, the green indicator light on its respective handheld control starts blinking upon releasing of the IN/OUT rocker switch.

Turning the ignition OFF and ON again, will stop the blinking and reset the fault. If the error condition or a missing operation condition is still present, the blinking will start again the next time that the slide-out is operated. So, to get a fault diagnostic, use the MCD right after operating the slide-out without cycling the ignition switch.

NOTE

It is of the utmost importance to have a MCD (message center display) in working condition because it is the most important tool to achieve troubleshooting on a multiplex vehicle.

Fault diagnostic

To get more specific information about the error condition or the missing operation condition, request a diagnostic from the slide-out CECM using the dashboard message center display (MCD). Check if there are active errors in the slide-out electrical system. With the SYSTEM DIAGNOSTIC menu, highlight FAULT DIAGNOSTIC and then highlight ELECTRICAL SYSTEM to request a diagnostic of the electrical system from the CECM. Press the enter key. If applicable, the MCD shows the device ID, the fault messages or fault codes recorded. When more than one fault is recorded, an arrow pointing down appears on the right of the display. Use the down arrow to see all the fault messages.

Once the problem corrected, the MCD still shows the fault as being active. You have to leave the FAULT DIAGNOSTIC menu, wait approximately 20 to 30 seconds and then return to FAULT DIAGNOSTIC to request a new diagnostic of the ELECTRICAL SYSTEM from the CECM. The MCD should display the fault as being inactive.

20.2 TROUBLESHOOTING - OPERATING CONDITIONS & CONTROL

PROBLEM	CAUSE	CORRECTIVE ACTION
The slide-out functions normally but the handheld control green indicator light blinks	CAUSE Something is defective and may eventually create an issue if not repaired. The problem may be: A. Faulty limit sensor causing the slide-out to stop in overcurrent; B. CAN network problem causing the transmission inhibit safety to be non-operational; C. Vacuum pressure transducer disconnected or damaged (vacuum is applied for a fixed time of 7 seconds); D. Seal inflating valve solenoid open circuit (the seal is not re-inflated and water can penetrate in the vehicle); E. Security pin valve solenoid open circuit (the security pin is not extended while vehicle is riding).	Request a diagnostic from the electrical system using the MCD SYSTEM DIAGNOSTIC menu and refer to the Fault Message list in section 20.4.

PROBLEM	CA	USE	CC	PRRECTIVE ACTION	
The slide-out does not extend	A.	The parking brake is not seen by the controller as being applied;	A.	Make sure the parking brake is applied. Confirm parking brake application with the parking brake light on the telltale panel.	
	B.	Not enough air pressure in the accessory air tank to permit proper operation of the vacuum generator;	В.	Run the engine at fast idle a few minutes to increase air pressure in the accessory air tank and try again.	
	C.	Faulty vacuum generator, connection to the vacuum generator open, seal deflating valve solenoid open circuit;	C.	Turn the relieving shut-off valve handle clockwise to deflate the inflatable seal, disconnect the pressure transducer. Do not forget to reconnect the pressure transducer	
	D.	I/O-B module output defective, regulated 5-volt supply to sensors shorted to ground, "out limit" sensor shorted to ground, connection to the		and to close the relieving shut-off valve. Failure to do so could damage the seal and lead to water infiltration;	
		motor negative relay solenoid open circuit;	D.	Operate the slide-out with the manual override procedures.	
The slide-out does not retract	A.	Not enough air pressure in the accessory air tank to permit proper operation of the vacuum generator;	A.	Run the engine at fast idle a few minutes to increase air pressure in the accessory air tank and try again.	
	B.	Faulty vacuum generator, connection to the vacuum generator open, seal deflating valve solenoid open circuit;	В.	Turn the relieving shut-off valve handle clockwise to deflate the inflatable seal, disconnect the pressure transducer. CAUTION, do not forget to reconnect the	
	C.	I/O-B module output defective, "in limit" sensor shorted to ground, connection to the motor positive relay solenoid open circuit;		pressure transducer and to close the relieving shut-off valve. Failure to do so could damage the seal and lead to water infiltration;	
		solonola open circuit,	C.	Operate the slide-out with the manual override procedures.	
When extending, the slide-out stops after having extended by 1 inch	A.	 The security pin valve solenoid circuit is shorted to (+) 24-volt and the pin remains engaged; 		A. Disconnect air supply from the safety pir cylinder;	
Transmission DRIVE range	A.	Slide-out not in full "in" position;	A.	Retract slide-out.	
or REVERSE cannot be selected (the slide-out telltale light is illuminating).	B.	Faulty "in limit" sensor. The slide-out is retracted but the controller doesn't not see it as retracted.	B.	Confirm that all slide-out are retracted. On the slide-out control panel, disconnect the 5 pins green connector on the I/O-B module to disable the transmission inhibit. CAUTION, this is a temporary measure, the vehicle must be serviced as soon as possible.	

20.3 TROUBLESHOOTING - MECHANICAL COMPONENTS

PROBLEM	CAUSE	CORRECTIVE ACTION
Slide-out does not retract	A. Electrical motor failure;	A. Replace motor.
or extend when depressing the control switch.	B. Speed reduction gearbox failure;	B. Inspect gearbox components, particularly: bronze wheel or first
c.m.c.iii	C. Security pin still engaged in receptacle;	reduction stage output shaft. Replace damaged components.
		C. Disengage pin and check if air cylinder is damaged.
Slide-out is not straight once retracted or during	A. Broken rack tooth;	A. Replace rack.
retracting or extending operation.	B. Faulty rack attachment;	B. Tighten mounting bolts, apply proper torque and use Loctite
	C. Faulty shaft key at speed reduction gearbox or jaw coupling;	threadlocker (replace rack if necessary).
	D. Pinion keyless bushing slipping;	C. Replace key or component having a damaged keyway.
	E. Shaft breaking;	D. Realign slide-out and apply proper
	F. Flange bearing attachment loosen;	torque to keyless bushing.
		E. Replace shaft.
		F. Reposition shaft and tighten flange bearing mounting bolts.
Slide-out moves out slightly when vehicle is traveling.	A. Lower "in limit" stoppers are not leaning against the structure at the moment when the "in limit" sensor detects the magnet;	A. Adjust the sensor position in order to have contact of the stoppers against the structure at the time when the system stops the slide-out retraction.
Slide-out moves when vehicle is moving.	A. Inflatable seal not inflated	Check seal condition and seal air supply system.
Slide-out retracts or extends difficultly.	A. Foreign matters accumulated in the linear bearing;	A. Inspect the linear bearing end seals to see if they are in good condition. If not, replace the end seals and clean the inside of linear bearing.
Slide-out oscillates vertically when retracting or extending	A. Linear bearing balls hardened due to a too heavy load;	A. If balls clearance is excessive, replace linear bearing.
or exteriding	B. Linear bearing mounting bolts loosen;	B. Tighten mounting bolts.
Slide-out vibrating or noisy when extending or	A. Acetal plastic block rubbing against the slide-out structure;	A. Realign acetal plastic block.
retracting	·	B. Replace wiper seal.
	Worn-out anti-friction coating on wiper seal around slide-out;	C. Remove lower acetal plastic block and machine down 1mm (0.039").
	C. Lower acetal plastic block rubbing against rail;	and macanic down mini (0.008).

PROBLEM	CAUSE	CORRECTIVE ACTION		
Top of slide-out moves sideways when vehicle is moving	A. Roof reinforcing rod misadjusted;	A. Readjust as per procedure.		
Slide-out does not retract up to its full "in" position	A. Interference between the exterior extrusion and the vehicle upper horizontal member above the slide-out;	A. Check for straightness of horizontal member and adjust the roof reinforcing rod. B. Check for outer wiper seal lip straightness on the slide-out roof.		
Bottom of slide-out not flush with vehicle body	A. Broken or misadjusted lower "in limit" stopper;	A. Replace or adjust lower "in limit" stopper.		
	B. Lower "in limit" stoppers are not leaning against the structure at the moment when the "in limit" sensor detects the magnet; C. Acetal plastic block serving as leaning	B. Adjust the sensor position in order to have contact of the stoppers against the structure when slide-out is stopped.		
	surface for lower "in limit" stopper broken or moved;	is stopped. C. Replace or adjust acetal plastic block proper position.		
Top of slide-out not flush with vehicle body	Broken or misadjusted leveling or retaining screw;	A. Check and replace screw.		
	B. Faulty upper "in limit" stopper;	B. Replace upper "in limit" stopper.		
Lower edge of slide-out not parallel with vehicle body opening	A. Faulty leveling and retaining screw (8 screws each side).	A. Inspect screw, replace and adjust slide-out level.		
Watertightness problem	A. Inflatable seal and/or wiper seal damaged or unstuck;	A. Check both seals condition.		
	B. Insufficient air pressure in the seal;	B. Check the pressure regulator, the relieving shut-off valve and the seal valve condition.		
	C. No air pressure in the slide-out pneumatic system;	C. Check the slide-out air pressure inlet valve condition and the accessory air tank pressure.		
	D. Sealant missing;	D. Check the exterior extrusion screws, the windows and the exterior panels sealant		
	E. Wiper seal draining hole clogged;	condition.		
	F. Faulty water recovery pan;	E. Unclog draining hole.		
	G. Faulty internal gutter;	F. Check the recovery pan.		
		G. Check internal gutter.		
Knocking sound at end of travel when extending slide-out	A. Inner stoppers misadjusted;	A. Readjust the inner stoppers.		

PROBLEM		CAUSE		CORRECTIVE ACTION		
Knocking sound when parking brake is released	A.	Security pin retracts too rapidly;	A.	Adjust security pin air flow regulator.		
Inflatable seal damaged or removed, or wiper seal unstuck from the structure.	A.	Slide-out has been retracted or extended with the manual procedure with the inflatable seal not deflated;	A.	Always deflate the seal when manually retracting or extending the slide-out.		
	B.	Pressure transducer malfunction;	B.	Check the pressure transducer condition, replace if necessary.		
	C.	Faulty roof reinforcing rod adjustment;	C.	Readjust the roof reinforcing rod.		
	D.	Seal valve malfunction;	D.	Check the seal valve condition.		
		Excessive load in the slide-out;	E.	Reduce load or distribute load evenly in order to respect the		
	F.	Slide-out not centered in the structure opening;		deflection criterion and slide-out load capacity.		
			F.	Readjust the slide-out height and center horizontally in opening.		
Friction at end of travel when in full OUT position or at beginning of retraction	A.	Interference between upper structure key and upper inner stopper;	A.	Readjust the upper inner stopper.		

20.4 SLIDE-OUT FAULT MESSAGE ON MESSAGE CENTER DISPLAY (MCD)

SID #	FAULT MESSAGE	TEXT	PROBABLE CAUSE	CORRECTIVE ACTION
1	Voltage Module A56	Value Too Low	Module A56 sees a Voltage less than 18 V on its power supply connector. Breaker, fuse or wiring harness	Check/ reset circuit breaker CBSo and CBSo1. Check/ replace fuse FSo5 Fix wiring harness
2	No Response Mod A56	Data Error	Open. CECM module does not receive CAN communication from module A56. CAN connector A56 J3 Disconnected or CAN wiring harness open, or module A56 is defective.	Check connection A56 J3 Fix CAN wiring harness Replace module A56
3	Voltage Module A57	Value Too Low	Module A57 sees a voltage less than 18 V on its power supply connector. Breaker, fuse or wiring harness open.	Check/ reset circuit breaker CBSo and CBSo2. Check/ replace fuse FSo2 Fix wiring harness
4	No Response Mod A57	Data Error	CECM module does not receive CAN communication from module A57. CAN connector A57 J3 disconnected or CAN wiring harness open or module A57 is defective.	Check connection A57 J3 Fix CAN wiring harness Replace module
5	SIdO Vacuum Sensor	Open Circuit Shorted High	Pressure transducer disconnected. Faulty pressure transducer. Connection or wiring harness open. Pressure transducer is faulty Wiring harness shorted to 12v or 24v	Check/ replace vacuum transducer Check/ reconnect the connector SESo1 Fix wiring harness Check/ replace vacuum transducer Fix wiring harness
6	SIdO Seal Deaf Vac	Mechanical Fault	Does not reach vacuum level (-5 PSIG). Slide-out seal damaged or air leak in the seal deflating pneumatic circuit.	Check the seals and the pneumatic circuit.
7	SIdO Motor/Limit se	Mechanical Or Electrical Fault	Slide-Out motor is activated for more than 5 seconds and the limit	
8	SldO Park Br Signal	Mechanical Or Electrical Fault	Parking brake is not applied. Wire between parking brake switch and CECM is open.	Make sure the parking brake is applied and the parking brake telltale illuminates. Check / replace parking brake switch. Fix wiring harness.

SID #	FAULT MESSAGE	TEXT	PROBABLE CAUSE	CORRECTIVE ACTION
π		Shorted High	Wire between parking brake switch and CECM is shorted to 12v or 24v.	Fix wiring harness.
9	SIdO Mot SpeedA Ctr	Shorted High	Wiring harness shorted to 12v or 24v	Fix wiring harness
		Current Above normal	Security pin or object stop the movement of a slide-out	Check / fix security pin functionality. Check / remove any object around the slide-out.
10	SIdO Mot SpeedB Ctr	Shorted High	Wiring harness shorted to 12v or 24v	Fix wiring harness
		Current Above normal	Security pin or object stop the movement of a slide-out	Check / fix security pin functionality. Check / remove any object around the slide-out.
11	SIdO Remote Led	Shorted High	LED or wiring harness shorted to 12v or 24v	Fix LED or wiring harness
		Shorted Low	Led or wiring harness shorted to ground	Fix LED or wiring harness
		Open Circuit	LED is broken. Bad connection on handheld control. Wiring harness is cut.	Check / fix remote LED or connection Check /fix wiring harness
		Current Above normal	Led or wiring harness shorted to 12v or 24v	Fix Led or wiring harness
12	SldO Seal Inf Sol	Shorted High	Solenoid or wiring harness shorted to 12v or 24v	Fix solenoid or wiring harness
		Shorted Low	Solenoid or wiring harness shorted to ground	Fix solenoid or wiring harness
		Open Circuit	Solenoid is broken or open. Bad connection on solenoid or bloc valve.	
		Current Above	Wiring harness is cut. Solenoid or wiring harness	Check /fix wiring harness Fix solenoid or wiring
		normal	shorted to 12v or 24v	harness
13	SIdO Seal Def Sol	Shorted High	Solenoid or wiring harness shorted to 12v or 24v	Fix solenoid or wiring harness
		Shorted Low	Solenoid or wiring harness shorted to ground	Fix solenoid or wiring harness
		Open Circuit	Solenoid is broken or open. Bad connection on solenoid or bloc valve.	Check / fix solenoid or connection.
		Current Above	Wiring harness is cut. Solenoid or wiring harness	Check /fix wiring harness Fix solenoid or wiring
		normal	shorted to 12v or 24v	harness
14	SldO Vacc Gen Sol	Shorted High	Solenoid or wiring harness shorted to 12v or 24v	Fix solenoid or wiring harness
		Shorted Low	Solenoid or wiring harness Shorted to ground	Fix solenoid or wiring harness
		Open Circuit	Solenoid is broken or open. Bad connection on solenoid or bloc valve. Wiring harness is cut.	Check / fix solenoid or connection Check / fix wiring harness
		Current Above	Solenoid or wiring harness	Fix Solenoid or wiring
15	CIAO Mat Na - Div	normal	shorted to 12v or 24v	harness
15	SIdO Mot Neg Rly	Shorted High	Relay coil or wiring harness shorted to 12v or 24v	Fix relay coil or wiring harness
		Shorted Low	Relay coil or wiring harness shorted to ground	Fix relay coil or wiring harness

Section 26: XLII SLIDE-OUT

SID #	FAULT MESSAGE	TEXT	PROBABLE CAUSE	CORRECTIVE ACTION
		Open Circuit	Relay coil is broken or open. Bad connection on relay. Wiring harness is cut.	Check / fix relay coil or connection Check / fix wiring harness
		Current Above normal	Relay coil or wiring harness shorted to 12v or 24v	Fix relay coil or wiring harness
16	SIdO Mot Pos Rly	Shorted High	Relay coil or wiring harness shorted to 12v or 24v	Fix relay coil or wiring harness
		Shorted Low	Relay coil or wiring harness shorted to ground	Fix relay coil or wiring harness
		Open Circuit	Relay coil is broken or open. Bad connection on relay. Wiring harness is cut.	Check / fix relay coil or connection Check / fix wiring harness
		Current Above normal	Relay coil or wiring harness shorted to 12v or 24v	Fix relay coil or wiring harness
17	SldO Open Sw	Shorted High	Switch or wiring harness shorted to 12v or 24v	Fix switch or wiring harness
18	SIdO Close Sw	Shorted High	Switch or wiring harness shorted to 12v or 24v	Fix switch or wiring harness
19	SIdO Limit In Se	Shorted High	Sensor or wiring harness shorted to 12v or 24v	Fix sensor or wiring harness
20	SIdO Limit Out Se	Shorted High	Sensor or wiring harness shorted to 12v or 24v	Fix sensor or wiring harness
21	SIdO Secu Pin Sol	Shorted High	Solenoid or wiring harness shorted to 12v or 24v	Fix solenoid or wiring harness
		Shorted Low	Solenoid or wiring Harness shorted to ground	Fix solenoid or wiring harness
		Open Circuit	Solenoid is broken or open. Bad connection on solenoid or bloc valve.	
			Wiring harness is cut.	Check / fix wiring harness
		Current Above normal	Solenoid or wiring harness shorted to 12v or 24v	Fix solenoid or wiring harness
22	SIdO Limit In Out	Mechanical Or Electrical Fault	In Limit and Out Limit are seen at the same time. In Limit or Out Limit problem.	limit sensors Fix wiring harness.
23	Limit Sensor 5 V supply	Shorted Low	5v IO-B output is less than 2v. Wiring harness is open or shorted to ground.	Check 5v output on IO-B / replace IO-B module. Fix wiring harness.