

WIRING DIAGRAM LE MIRAGE BUS SHELL XL2

PREVOST



REFERENCE: STANDARD - MODEL 2003 NO: D060994

EFF. W/ OC# 2000090 PRIOR TO / OC# DR. MARTIN LAFLAMME DATE: 02-00-19

EFF. W/ VEH.# 4-7937,4-7953,4-8009,4-8019,4-8084,4-8165 PRIOR TO / VEH.# CK. SYLVAIN DESBIENS APPR. ROLAND LAPOINTE

REV.	DATE	DESCRIPTION	PAGE	BY	CK.	APPR.
00	02-11-19	COOLING 2002 OC *2000090	.	S.D.	E.L.	B
01	03-03-10	GENERAL UPDATE	B,C,E,G,4,2,8,1,11,1	E.L.	S.D.	B
02	03-04-04	NEW EVAP. MOTOR - TWO SPEED OC*2002050 REV.B - EFF: 4-8213	C1,E,G,I,J,1,1,15,3	E.L.	S.D.	B
03	03-04-17	UPPER DEFROST CABLE MODIFICATIONS SEE OC*2002060 REV.B- EFF: 4-8213 TOO PAGE UPDATED	1,1,15,4	E.L.	S.D.	B
04	03-06-17	SLIDE-OUT PAGE ADDED O.C.*2003018 EFF: 4-8252	4,2,	S.G.	S.D.	B
05	03-07-17	CHANGE FULL AIR HARNESS P/N O.C.*2002050 REV.C EFF:: 4-8227	A, 24,1, 24,2	E.L.	E.L.	B
06	03-08-26	NEW FUSE BLOCK W/O LED OC*2003033 EFF: 4-8252	C	E.L.	S.D.	B
			F, L, 4, 2, 4, 3, 6, 1, 7, 2			
			8, 1, 9, 1, 9, 2, 9, 3,			
			9, 3SP1, 11, 2, 13, 1,			
			15, 1, 15, 2, 15, 4, 16, 1,			
			19, 1			
	03-08-26	ENGINE CABLE SINGLE TO DOUBLE BRAID OC*2003075 EFF: 4-8279	C	A.S.	S.D.	B
07	03-12-11	NEW COOLING 2004 DDEC V OC*2003055 PRELIM:4-8279 EFF: 5-8359	B,C,E,G,H,I,1,1,3,1	S.D.		
			4,1,5,1,5,2,6,1,9,3			
			9,3SP1,21,1,21,1SP1			
		MARKER & DIRECTIONAL LTS CONNECTORS OC*2003079 EFF: 5-8359	9,1,9,2	A.S.	B	B
		A/C COMPRESSOR CONNECTOR OC*2003089 EFF: 5-8359	15,2			
		NEW HVAC PROGRAMMATION OC*2003120 EFF: 5-8359	N/A	E.L.	B	B
		ELECTRICAL AWNING WINDOWS OC*2003029 PRELIM: 8296,8325 EFF: 5-8380	A,7,3,20,1,23,1			
		FACE LIFT:NEW FOG & HEADLAMPS OC*2002132 PRELIM: 8279,8296 EFF: 5-8359	F,J,2,1,9,5			
		UPDATED PAGES	7,2,8,1,12,1			

WIRING DIAGRAM LE MIRAGE BUS SHELL XL2 D060994 P2

REV.	DATE	DESCRIPTION	PAGE	BY	CK.	APPR.
08	04-03-11	NEW SLIDE-OUT LOGIC CONTROL OC*2003078 EFF: 5-8385 CLEARANCE LTS W/JIFFY SPLICE OC*2003118 EFF: 5-8408 PAGES UPDATED →	G,24,1,24,2 C 1,6,1,7,3,15,4,22,1 C,G,4,3	S.D. A.S. E.L.	B	B
09	04-05-04	BOSCH ALT. C-399 ELIMINATED OC*20040200 EFF: 5-8426			B	B
10	04-05-25	DRIVER'S DEFROST, DOUBLE MOTOR UNIT OC*2003144,OC*2003153 → EFF: 5-8470 NEW HVAC CTRL MODULE - FULL AIR ONLY OC*2004041	C1,E,F,G,1,1,15,1,15,2	E.L.	B	B
11	05-01-14	OFF DELAY RELAY CHANGED OC*2004093 EFF:5-8518	11,2	E.O.	B	B
		REPLACE DOOR LACTCH'S SOLENOID VALVE OC*2004066 EFF:5-8610	C, G	S.L.		
12	05-01-17	24VDC MINI-RELAYS CHANGE TO VOLVO OC*2004108 EFF: 5-8578	1, 2, 1, 4, 1, 5, 1, 5, 2, 6, 1, 7, 2, 9, 1, 9, 2, 9, 3, 9, 3SP1, 9, 5, 11, 2, 12, 1, 15, 1, 20, 1, 21, 1, 21, 1SP1, 22, 1	J.PRO.	B	B
		TRAILER BRAKE PRESS. SW. OC*2003106 EFF:5-8645	8,1, 12,2, 23,1	E.O.		
		CIRCULATORY CONTROL PUMP. MODIF. PASS. LIQ. SOL. OC*2004103 EFF: 5-8645	C, 15,2, 15,3	J.PRO.		
13	05-07-12	NEW PREVOST SLIDE-OUT OC*2003088 AND *2004031 EFF: 6-8806	C, E, F, G, H, I, 1, 6, 1 8, 1, 15, 2, 15, 3 23, 1, 24, 1, 24, 2 24, 3, 24, 4, 24, 5	S.D.	B	B
14	06-01-12	BOSH ALTERNATOR (OPTION) ,OC2004079 EFF:5-8795	C, 4,3	J.PRO.	S.L.	B
15	06-03-24	HEAD LAMP WASHER CLEANING SYSTEM ,OC2005057 SLIDING WINDOW ,OC2005056	C, E, G, I, L 1,1, 10,1 7,3, 7,4, 7,5	MPOU	S.D.	
16	06-03-28	DAC*16642 ADD WIRE ON C390 FOR CONDENSOR MOTOR EFF:8942	15,3	MPOU	S.D.	
17	06-05-02	TRANSMISSION CHANGED TO GEN IV OC2006010 PRELIM:6-8966 EFF:6-9044	5,16,16,2 , C, G	E.O		D.G

WIRING DIAGRAM INDEX

A A/C & HEAT – DRIVER'S AIR	Page:	15.1			
A/C & HEAT – FULL AIR	Page:	15.2	D DASH INSTRUMENT	Page:	7.1
A/C & HEAT – UPPER FAN DEFROST	Page:	15.4	DDEC IV	Page:	5.1
ALARM & SIGNAL	Page:	7.2	DISCONNECT SWITCH 12V, 24V	Page:	1.1
ABS	Page:	22.1	DISTRIB. 24V DISC., IGN & HOT WIRE	Page:	1.1
ARRANGEMENT - CABLE	Page:	B	DISTRIB. 12V DISC., IGN & HOT WIRE	Page:	2.1
ARRANGEMENT - HARNESS	Page:	C	DRIVER'S SEAT ADJUST	Page:	13.1
ARRANGEMENT - SPARE WIRE	Page:	D			
ARRANGEMENT - SPARE WIRE	Page:	D			
B BACK-UP ALARM	Page:	9.3	E ENGINE BLOCK HEATER	Page:	20.1
BATTERY STANDARD	Page:	1.2	ENGINE BRAKE SYSTEM	Page:	21.1
			ENGINE CONTROL	Page:	4.1
C CENTER DOOR-AIR LOCK	Page:	20.1	ENTRANCE DOOR ELCTRICAL LOCK	Page:	12.1
CHARGING SYSTEM	Page:	4.2	ENTRANCE DOOR AIR LOCK	Page:	20.1
CIGAR LIGHTER & 12V OUTLET	Page:	13.1	ETHER COLD START	Page:	8.1
CLUSTER	Page:	7.1	EXTERIOR LIGHTING	Page:	9.1
CODE - CIRCUIT NUMBER	Page:	E	F FAN-CLUTCH RADIATOR	Page:	8.1
CODE - CIRCUIT BREAKER	Page:	F	FAST IDLE - DDEC	Page:	5.1
CODE - CONNECTOR	Page:	G	FIRE DETECTOR	Page:	7.2
CODE - DIODE	Page:	H	FUEL WATER FILTER	Page:	8.1
CODE - FUSE	Page:	L	FUEL PRIME PUMP	Page:	19.1
CODE - RELAY	Page:	I			
CODE - RESISTOR	Page:	J	G GROUND SYSTEM	Page:	3.1
CODE – TRUTH TABLE	Page:	M			
CODE - WIRING KEY	Page:	K	H HORN	Page:	7.2
CRUISE CONTROL - DDEC	Page:	5.1			
			I INTERIOR LIGHTING	Page:	11.1
			K KEYLESS ENTRY SYSTEM	Page:	12.1
			L LEVEL – LOW SYSTEM	Page:	18.1
			LUGGAGE DOOR LOCK	Page:	12.1
			M MIRROR-REAR VIEW	Page:	16.1
			P PARKING BRAKE SWITCH & ALARM	Page:	8.1
			POWER 12V OUTLET	Page:	13.1
			R RETARDER - WORLD TRANSM.	Page:	21.1
			S SPEED SIGNAL	Page:	17.1
			SPEEDOMETER	Page:	7.1
			STEERING CONTROL	Page:	17.1
			SUN VISOR	Page:	19.1
			T TACHOMETER	Page:	7.1
			TRANSMISSION – WTEC 3	Page:	6.1
			TELL TALE LIGHT MODULES	Page:	23.1
			W WINDOW AJAR	Page:	20.1
			WINDOW LIFTER	Page:	19.1
			WIPER & WASHER	Page:	10.1

WIRING DIAGRAM INDEX


A A/C & HEAT – DRIVER'S AIR	Page:	15.1			
A/C & HEAT – FULL AIR	Page:	15.2	D DASH INSTRUMENT	Page:	7.1
A/C & HEAT – UPPER FAN DEFROST	Page:	15.4	DDEC IV	Page:	5.1
ALARM & SIGNAL	Page:	7.2	DISCONNECT SWITCH 12V, 24V	Page:	1.1
ABS	Page:	22.1	DISTRIB. 24V DISC., IGN & HOT WIRE	Page:	1.1
ARRANGEMENT - CABLE	Page:	B	DISTRIB. 12V DISC., IGN & HOT WIRE	Page:	2.1
ARRANGEMENT - HARNESS	Page:	C	DRIVER'S SEAT ADJUST	Page:	13.1
ARRANGEMENT - SPARE WIRE	Page:	D			
ARRANGEMENT - SPARE WIRE	Page:	D			
B BACK-UP ALARM	Page:	9.3	E ENGINE BLOCK HEATER	Page:	20.1
BATTERY STANDARD	Page:	1.2	ENGINE BRAKE SYSTEM	Page:	21.1
			ENGINE CONTROL	Page:	4.1
C CENTER DOOR-AIR LOCK	Page:	20.1	ENTRANCE DOOR ELCTRICAL LOCK	Page:	12.1
CHARGING SYSTEM	Page:	4.2	ENTRANCE DOOR AIR LOCK	Page:	20.1
CIGAR LIGHTER & 12V OUTLET	Page:	13.1	ETHER COLD START	Page:	8.1
CLUSTER	Page:	7.1	EXTERIOR LIGHTING	Page:	9.1
CODE - CIRCUIT NUMBER	Page:	E	F FAN-CLUTCH RADIATOR	Page:	8.1
CODE - CIRCUIT BREAKER	Page:	F	FAST IDLE - DDEC	Page:	5.1
CODE - CONNECTOR	Page:	G	FIRE DETECTOR	Page:	7.2
CODE - DIODE	Page:	H	FUEL WATER FILTER	Page:	8.1
CODE - FUSE	Page:	L	FUEL PRIME PUMP	Page:	19.1
CODE - RELAY	Page:	I			
CODE - RESISTOR	Page:	J	G GROUND SYSTEM	Page:	3.1
CODE – TRUTH TABLE	Page:	M			
CODE - WIRING KEY	Page:	K	H HORN	Page:	7.2
CRUISE CONTROL - DDEC	Page:	5.1			
			I INTERIOR LIGHTING	Page:	11.1
			K KEYLESS ENTRY SYSTEM	Page:	12.2
			L LEVEL – LOW SYSTEM	Page:	18.1
			LUGGAGE DOOR LOCK	Page:	12.1
			M MIRROR-REAR VIEW	Page:	16.1
			P PARKING BRAKE SWITCH & ALARM	Page:	8.1
			POWER 12V OUTLET	Page:	13.1
			R RETARDER - WORLD TRANSM.	Page:	21.1
			S SLIDE-OUT	Page:	24
			SPEED SIGNAL	Page:	17.1
			SPEEDOMETER	Page:	7.1
			STEERING CONTROL	Page:	17.1
			SUN VISOR	Page:	19.1
			T TACHOMETER	Page:	7.1
			TRANSMISSION – WTEC 3	Page:	6.1
			TELL TALE LIGHT MODULES	Page:	23.1
			W WINDOW AJAR	Page:	20.1
			WINDOW LIFTER	Page:	19.1
			WIPER & WASHER	Page:	10.1


WIRING DIAGRAM INDEX


WIRING DIAGRAM INDEX


A A/C & HEAT – DRIVER'S AIR	Page:	15.1			
A/C & HEAT – FULL AIR	Page:	15.2	D DASH INSTRUMENT	Page:	7.1
A/C & HEAT – UPPER FAN DEFROST	Page:	15.4	DDEC IV	Page:	5.1
ALARM & SIGNAL	Page:	7.2	DISCONNECT SWITCH 12V, 24V	Page:	1.1
ABS	Page:	22.1	DISTRIB. 24V DISC., IGN & HOT WIRE	Page:	1.1
ARRANGEMENT - CABLE	Page:	B	DISTRIB. 12V DISC., IGN & HOT WIRE	Page:	2.1
ARRANGEMENT - HARNESS	Page:	C	DRIVER'S SEAT ADJUST	Page:	13.1
ARRANGEMENT - SPARE WIRE	Page:	D			
ARRANGEMENT - SPARE WIRE	Page:	D			
B BACK-UP ALARM	Page:	9.3	E ENGINE BLOCK HEATER	Page:	20.1
BATTERY STANDARD	Page:	1.2	ENGINE BRAKE SYSTEM	Page:	21.1
			ENGINE CONTROL	Page:	4.1
C CENTER DOOR-AIR LOCK	Page:	20.1	ENTRANCE DOOR ELCTRICAL LOCK	Page:	12.1
CHARGING SYSTEM	Page:	4.2	ENTRANCE DOOR AIR LOCK	Page:	20.1
CIGAR LIGHTER & 12V OUTLET	Page:	13.1	ETHER COLD START	Page:	8.1
CLUSTER	Page:	7.1	EXTERIOR LIGHTING	Page:	9.1
CODE - CIRCUIT NUMBER	Page:	E	F FAN-CLUTCH RADIATOR	Page:	8.1
CODE - CIRCUIT BREAKER	Page:	F	FAST IDLE - DDEC	Page:	5.1
CODE - CONNECTOR	Page:	G	FIRE DETECTOR	Page:	7.2
CODE - DIODE	Page:	H	FUEL WATER FILTER	Page:	8.1
CODE - FUSE	Page:	L	FUEL PRIME PUMP	Page:	19.1
CODE - RELAY	Page:	I			
CODE - RESISTOR	Page:	J	G GROUND SYSTEM	Page:	3.1
CODE – TRUTH TABLE	Page:	M			
CODE - WIRING KEY	Page:	K	H HORN	Page:	7.2
CRUISE CONTROL - DDEC	Page:	5.1			
			I INTERIOR LIGHTING	Page:	11.1
			K KEYLESS ENTRY SYSTEM	Page:	12.2
			L LEVEL – LOW SYSTEM	Page:	18.1
			LUGGAGE DOOR LOCK	Page:	12.1
			M MIRROR-REAR VIEW	Page:	16.1
			P PARKING BRAKE SWITCH & ALARM	Page:	8.1
			POWER 12V OUTLET	Page:	13.1
			R RETARDER - WORLD TRANSM.	Page:	21.1
			S SLIDE-OUT	Page:	24
			SPEED SIGNAL	Page:	17.1
			SPEEDOMETER	Page:	7.1
			STEERING CONTROL	Page:	17.1
			SUN VISOR	Page:	19.1
			T TACHOMETER	Page:	7.1
			TRANSMISSION – WTEC 3	Page:	6.1
			TELL TALE LIGHT MODULES	Page:	23.1
			W WINDOW AJAR	Page:	7.3
			WINDOW LIFTER	Page:	19.1
			WIPER & WASHER	Page:	10.1

 
WIRING DIAGRAM INDEX

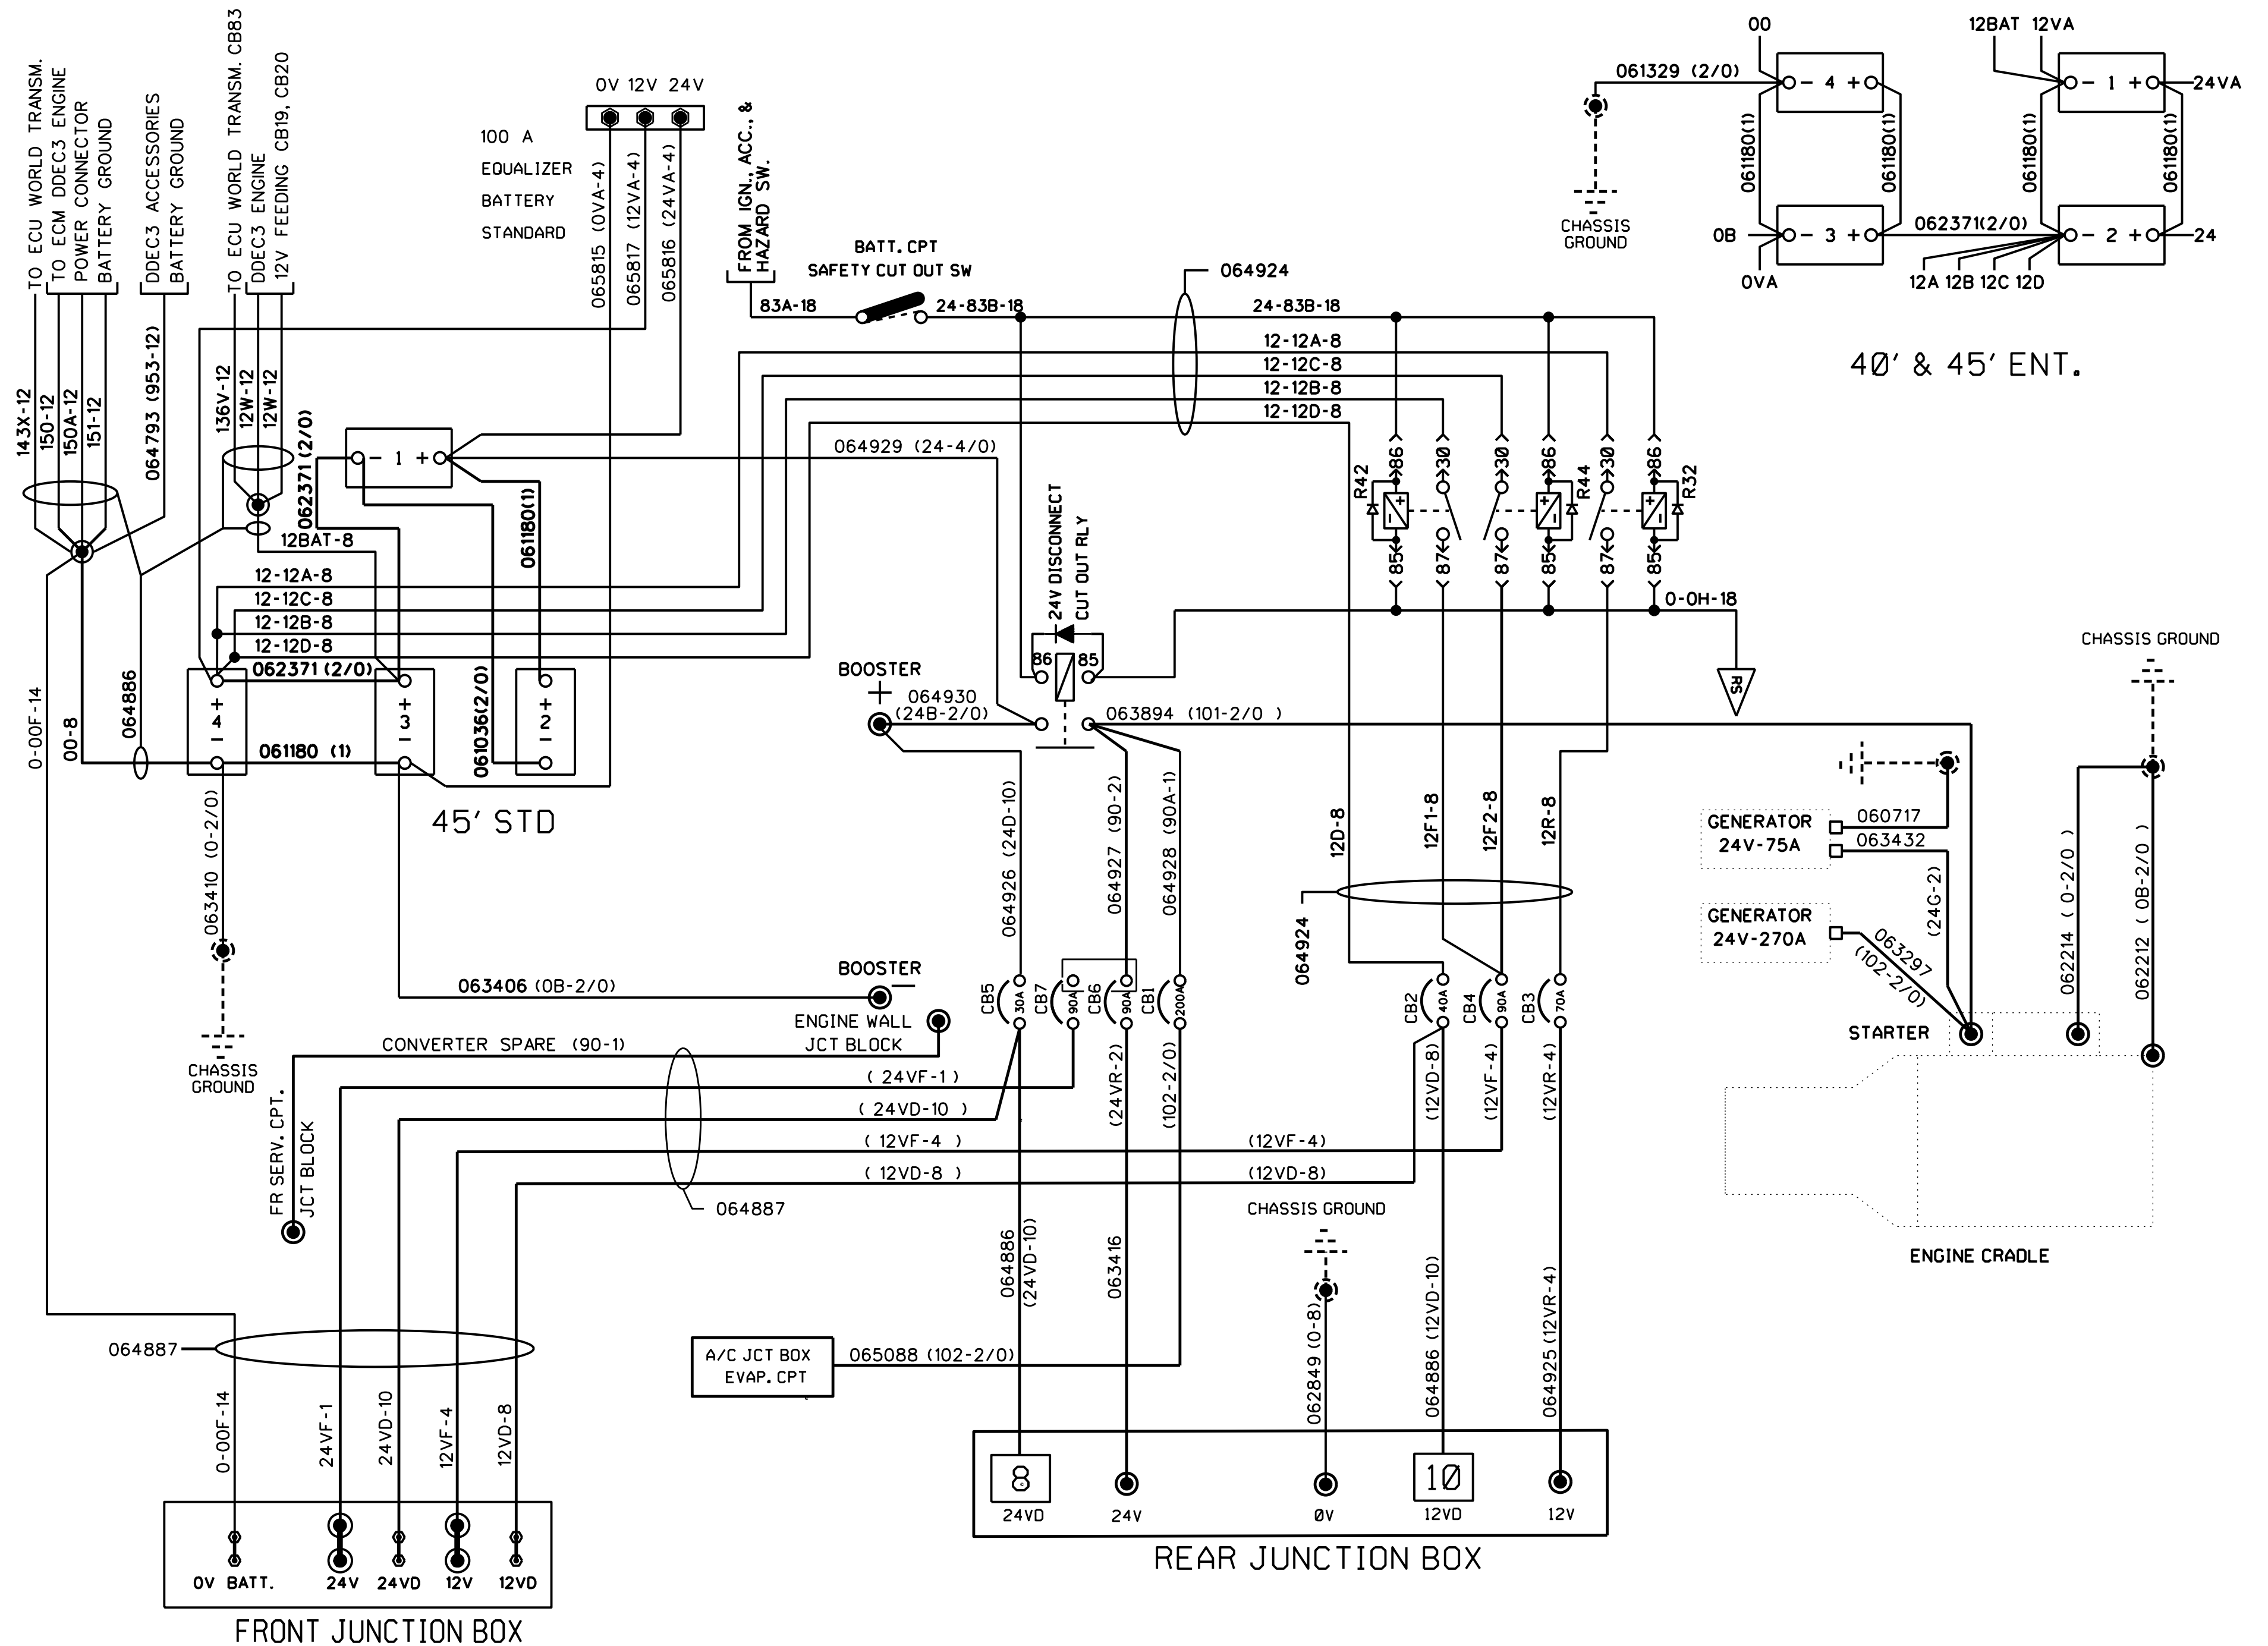

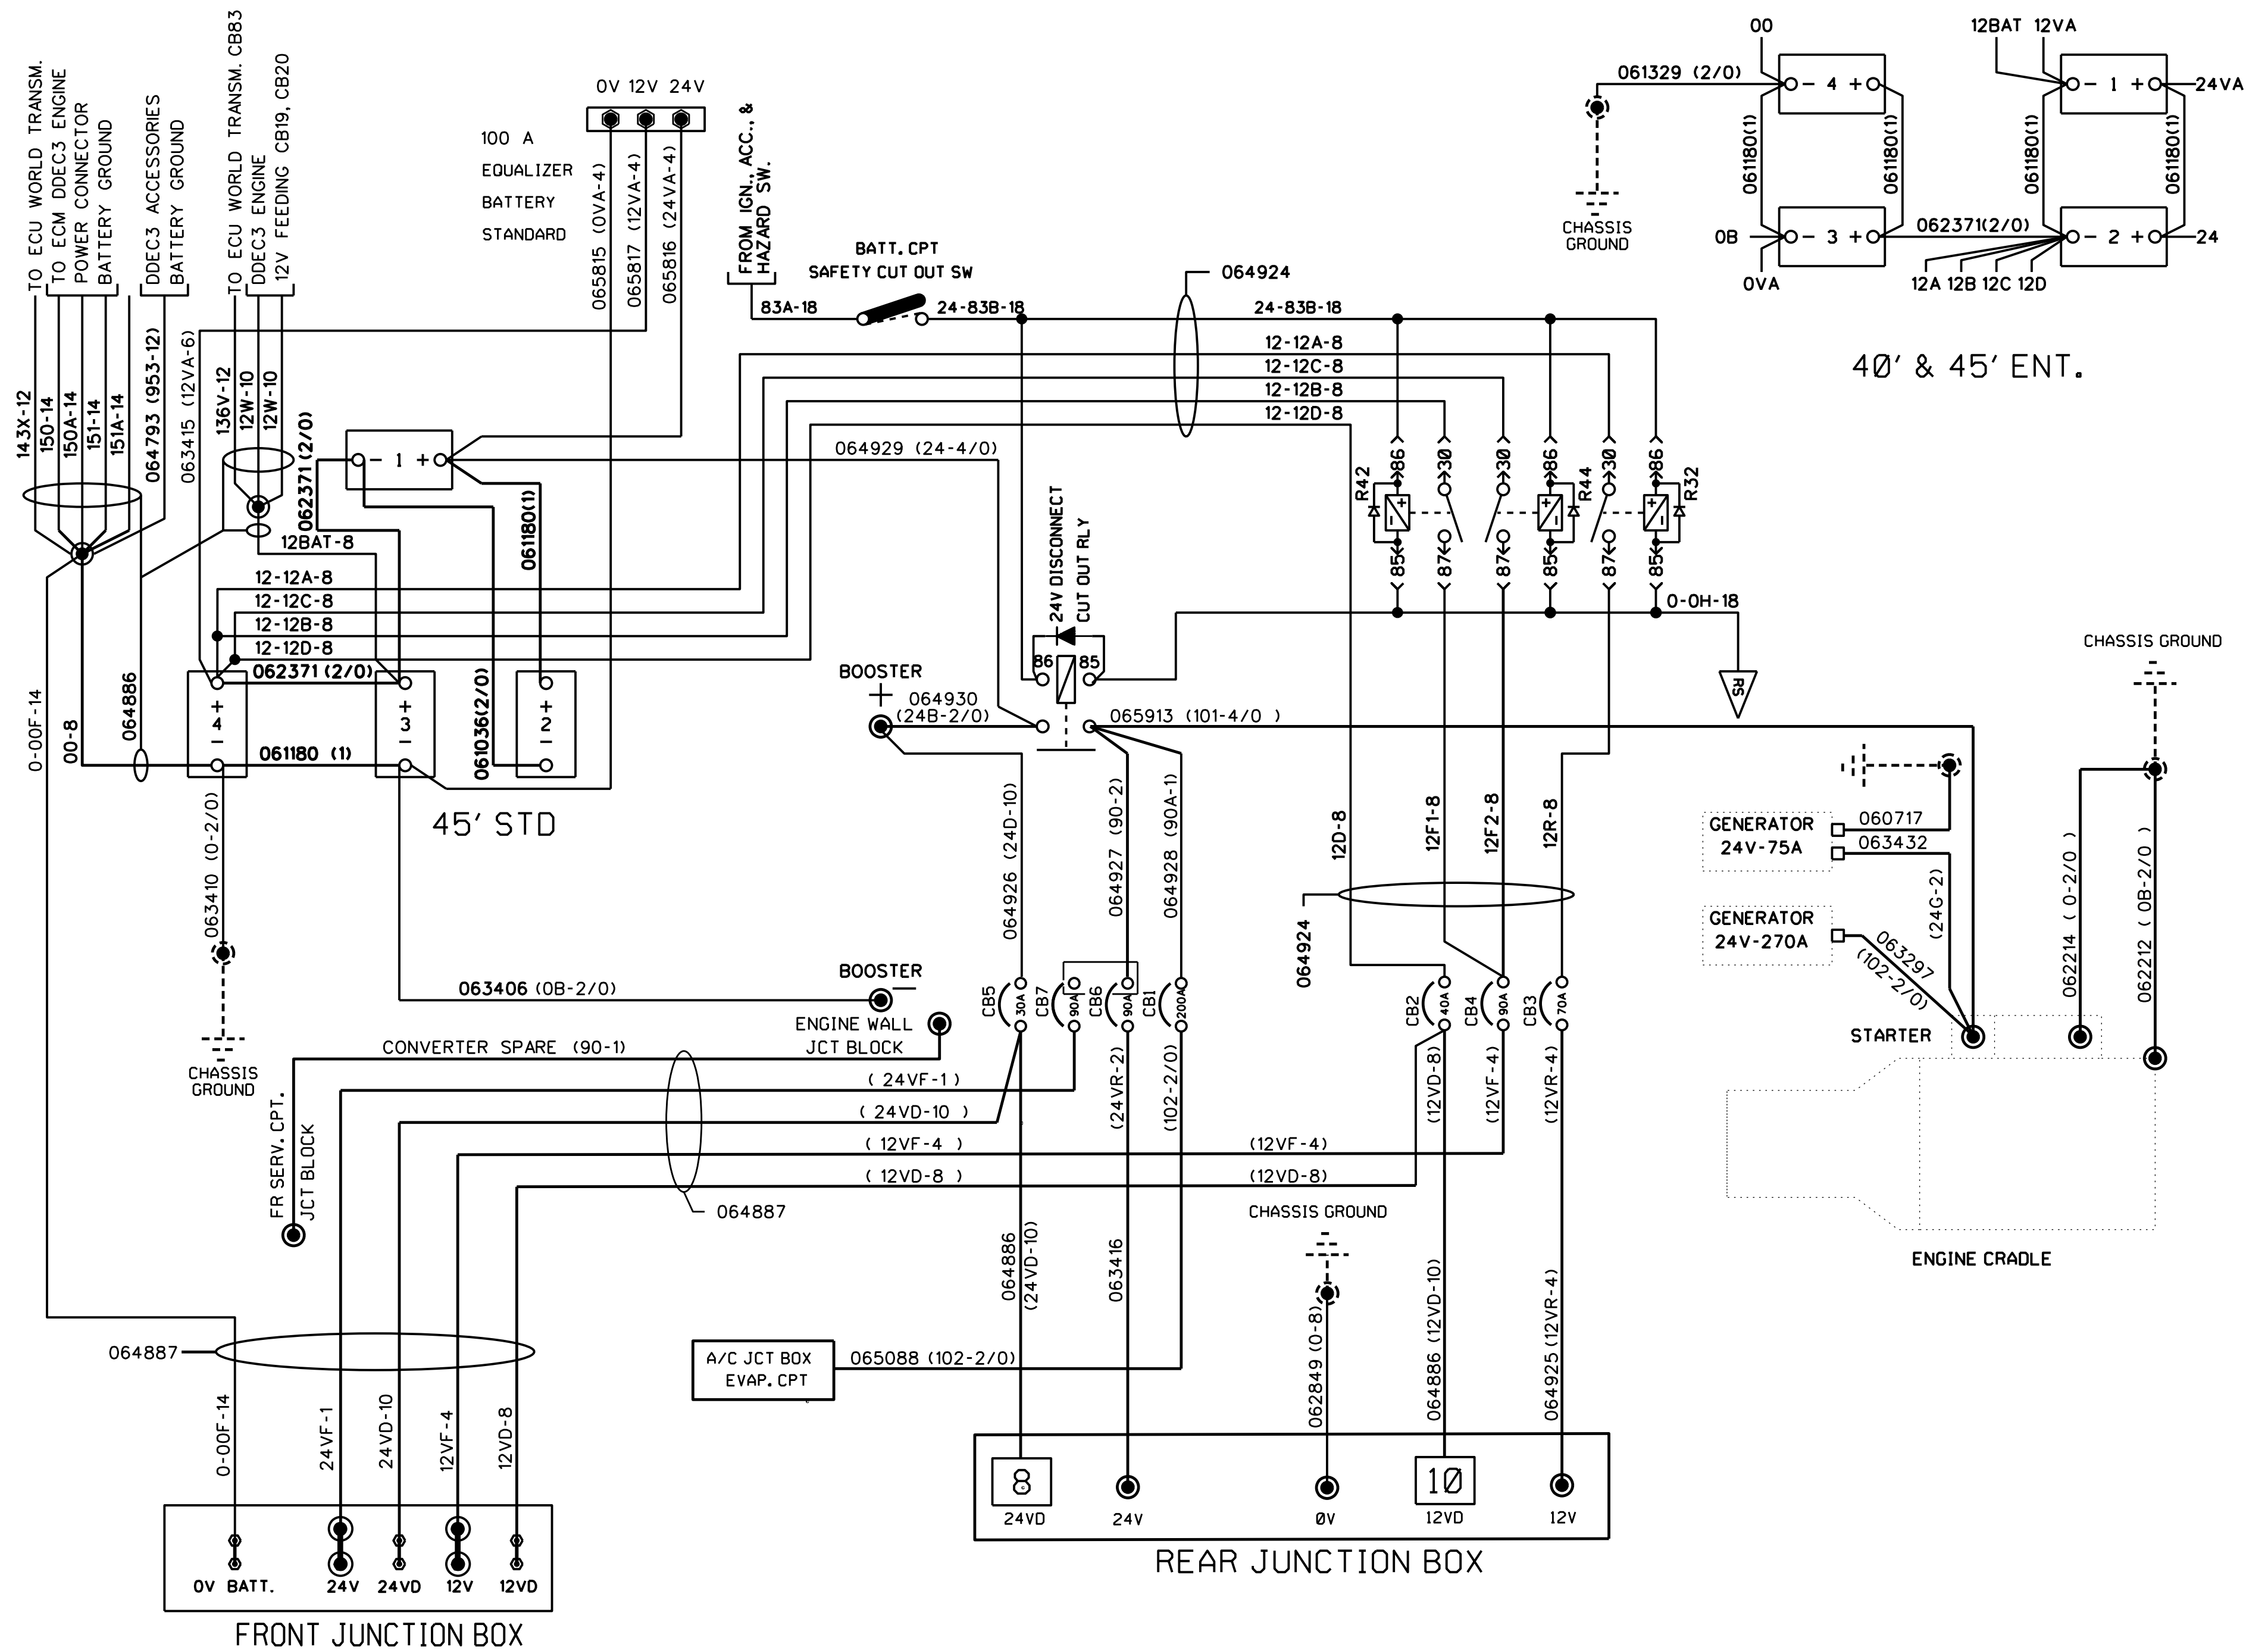


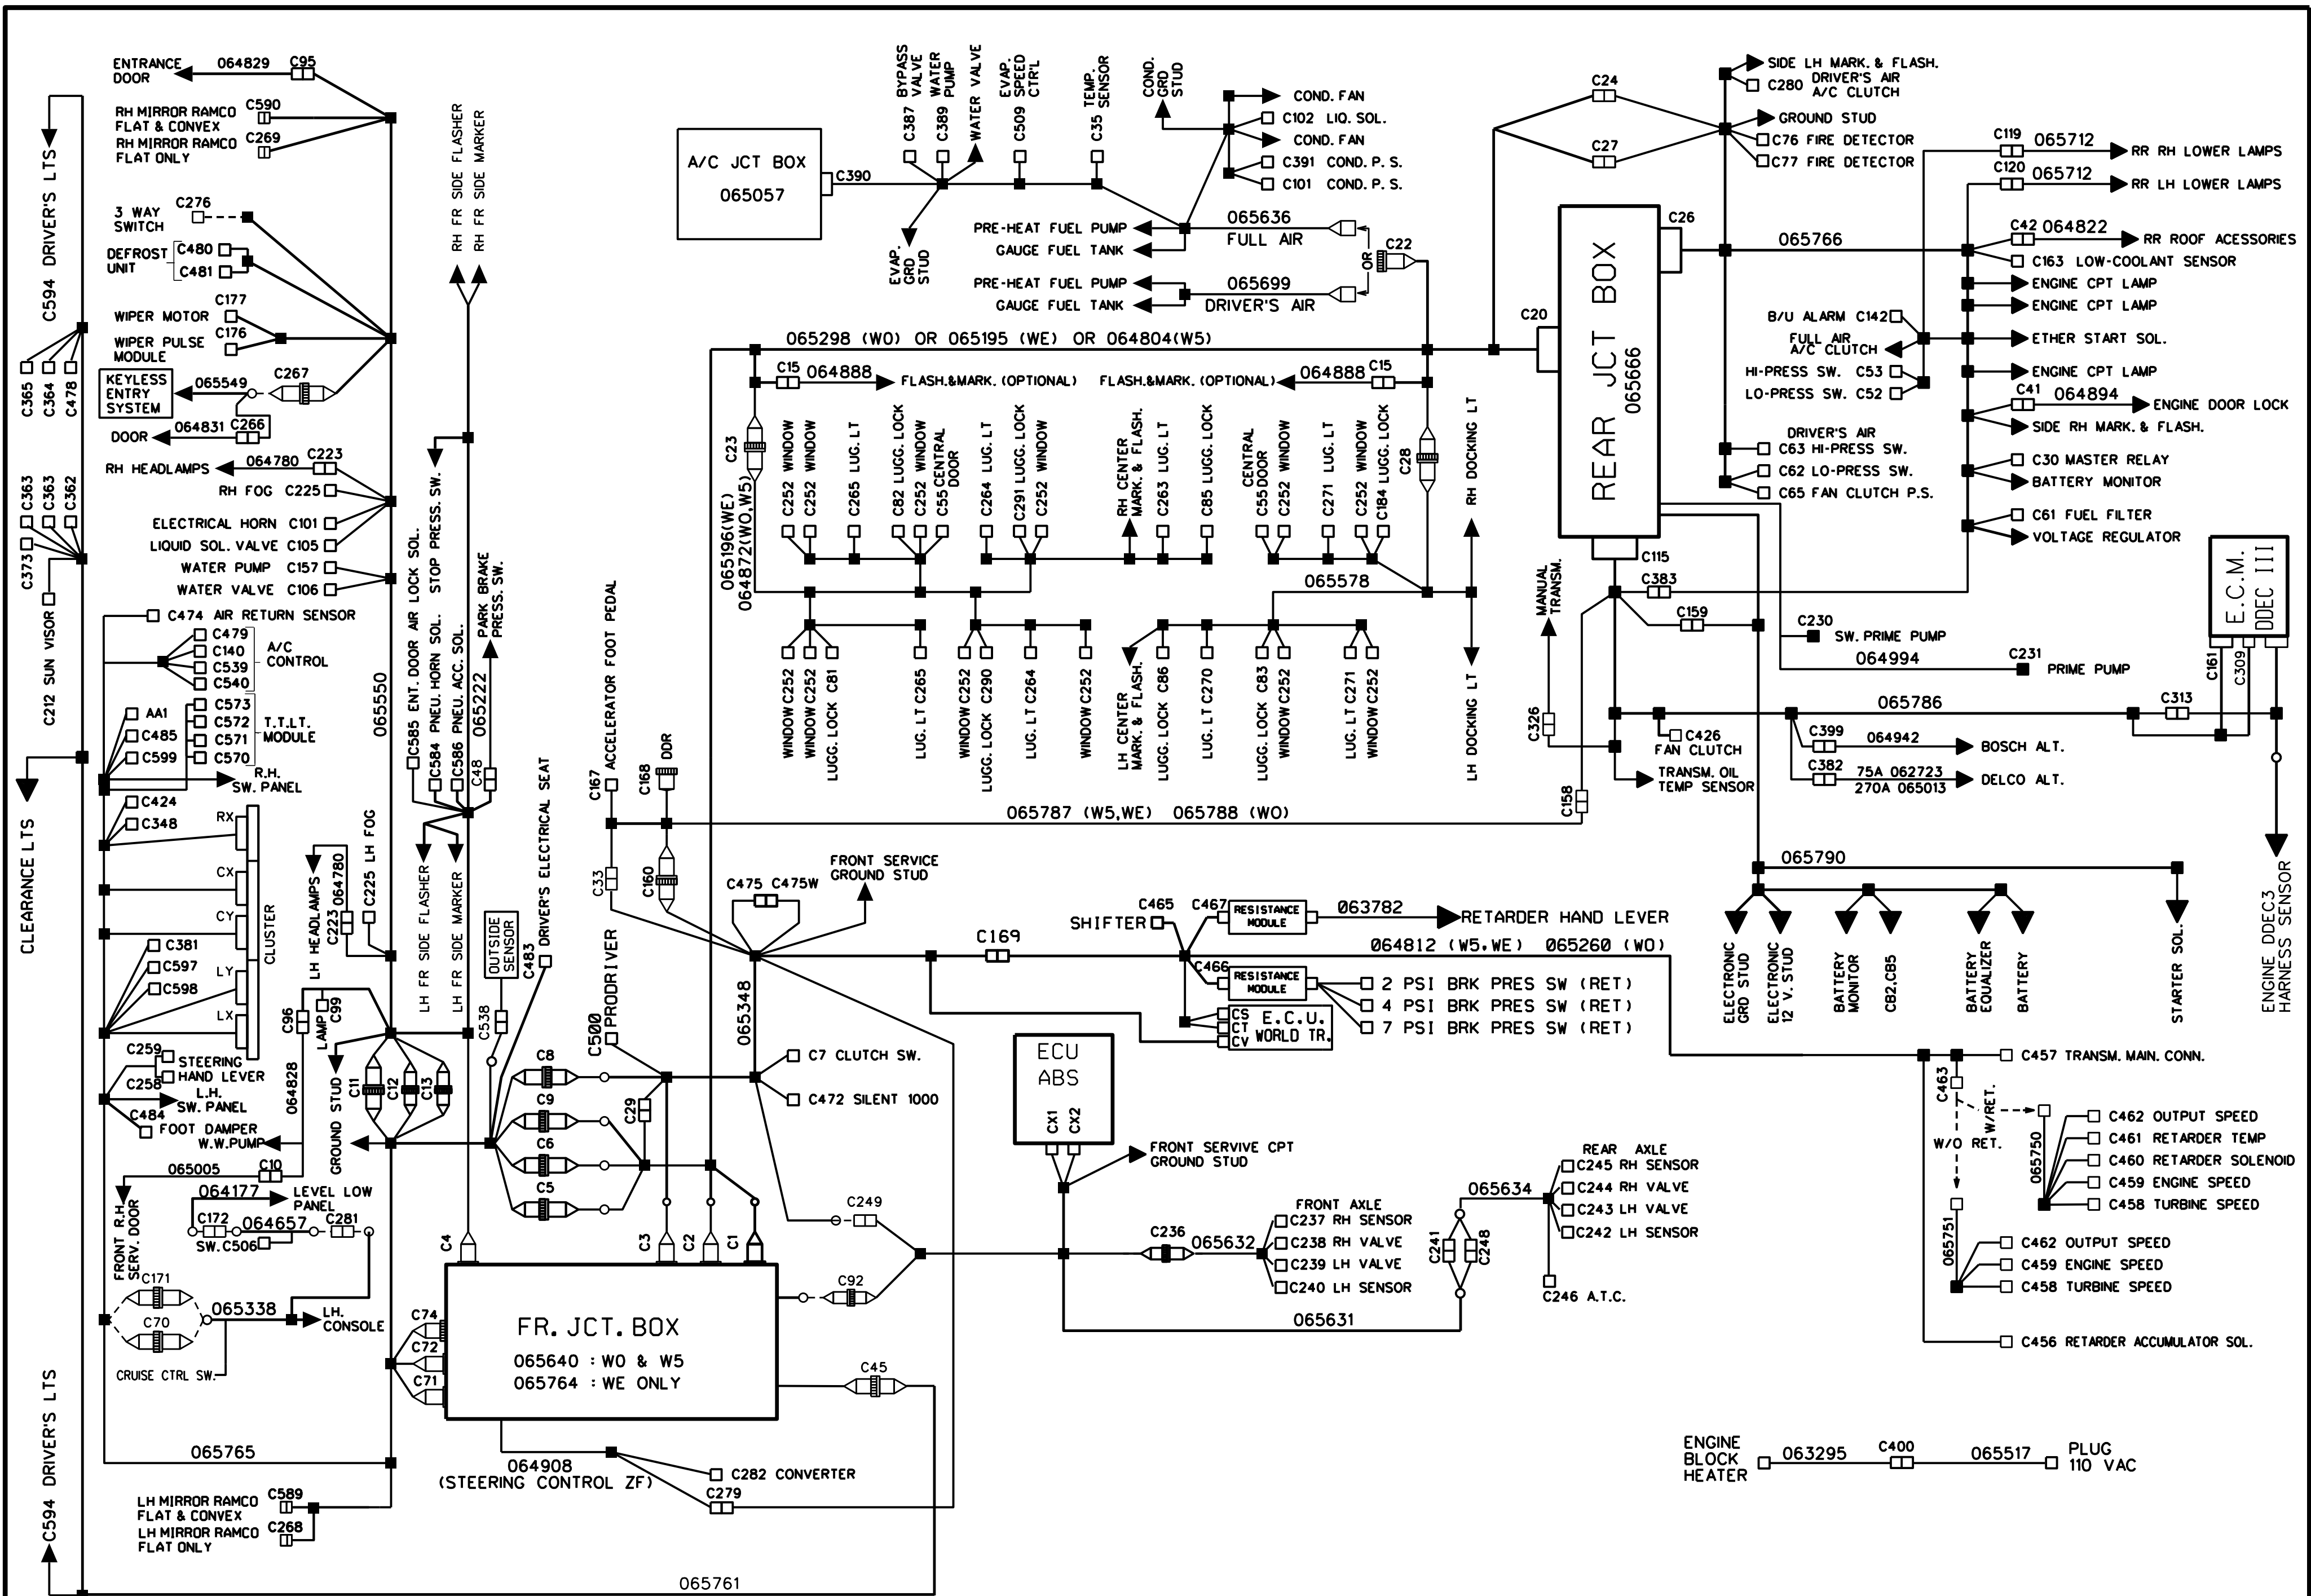


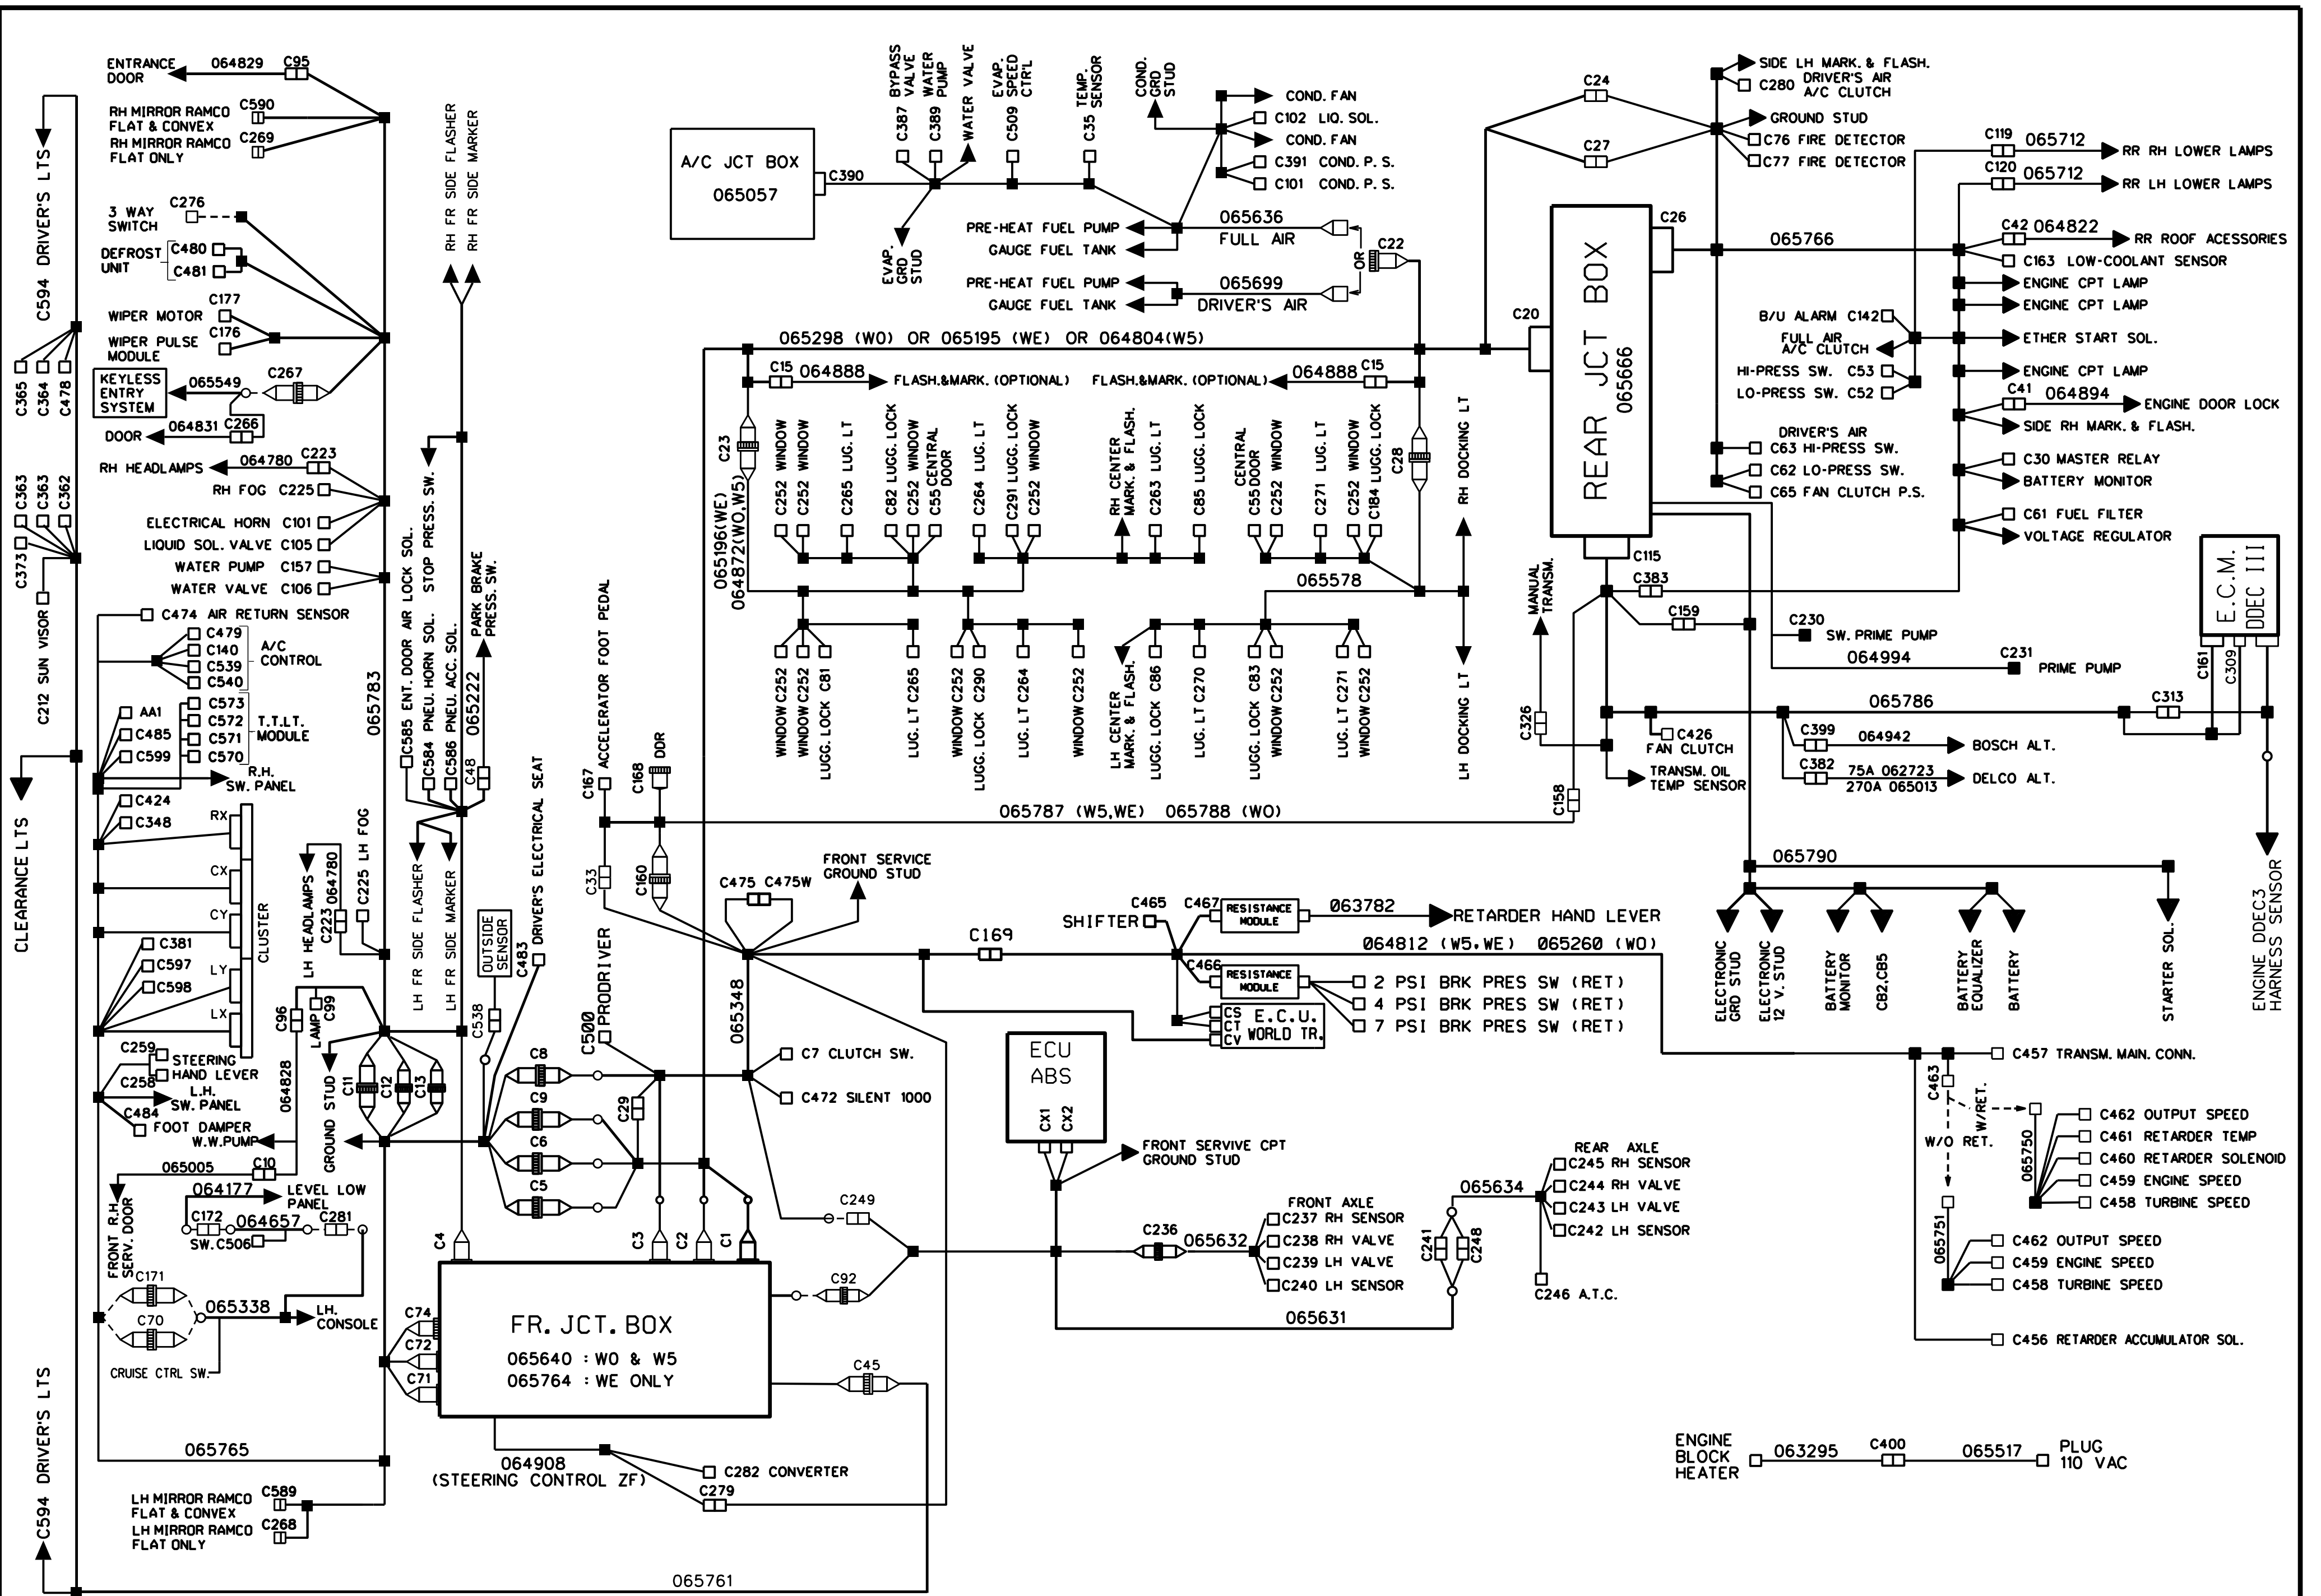





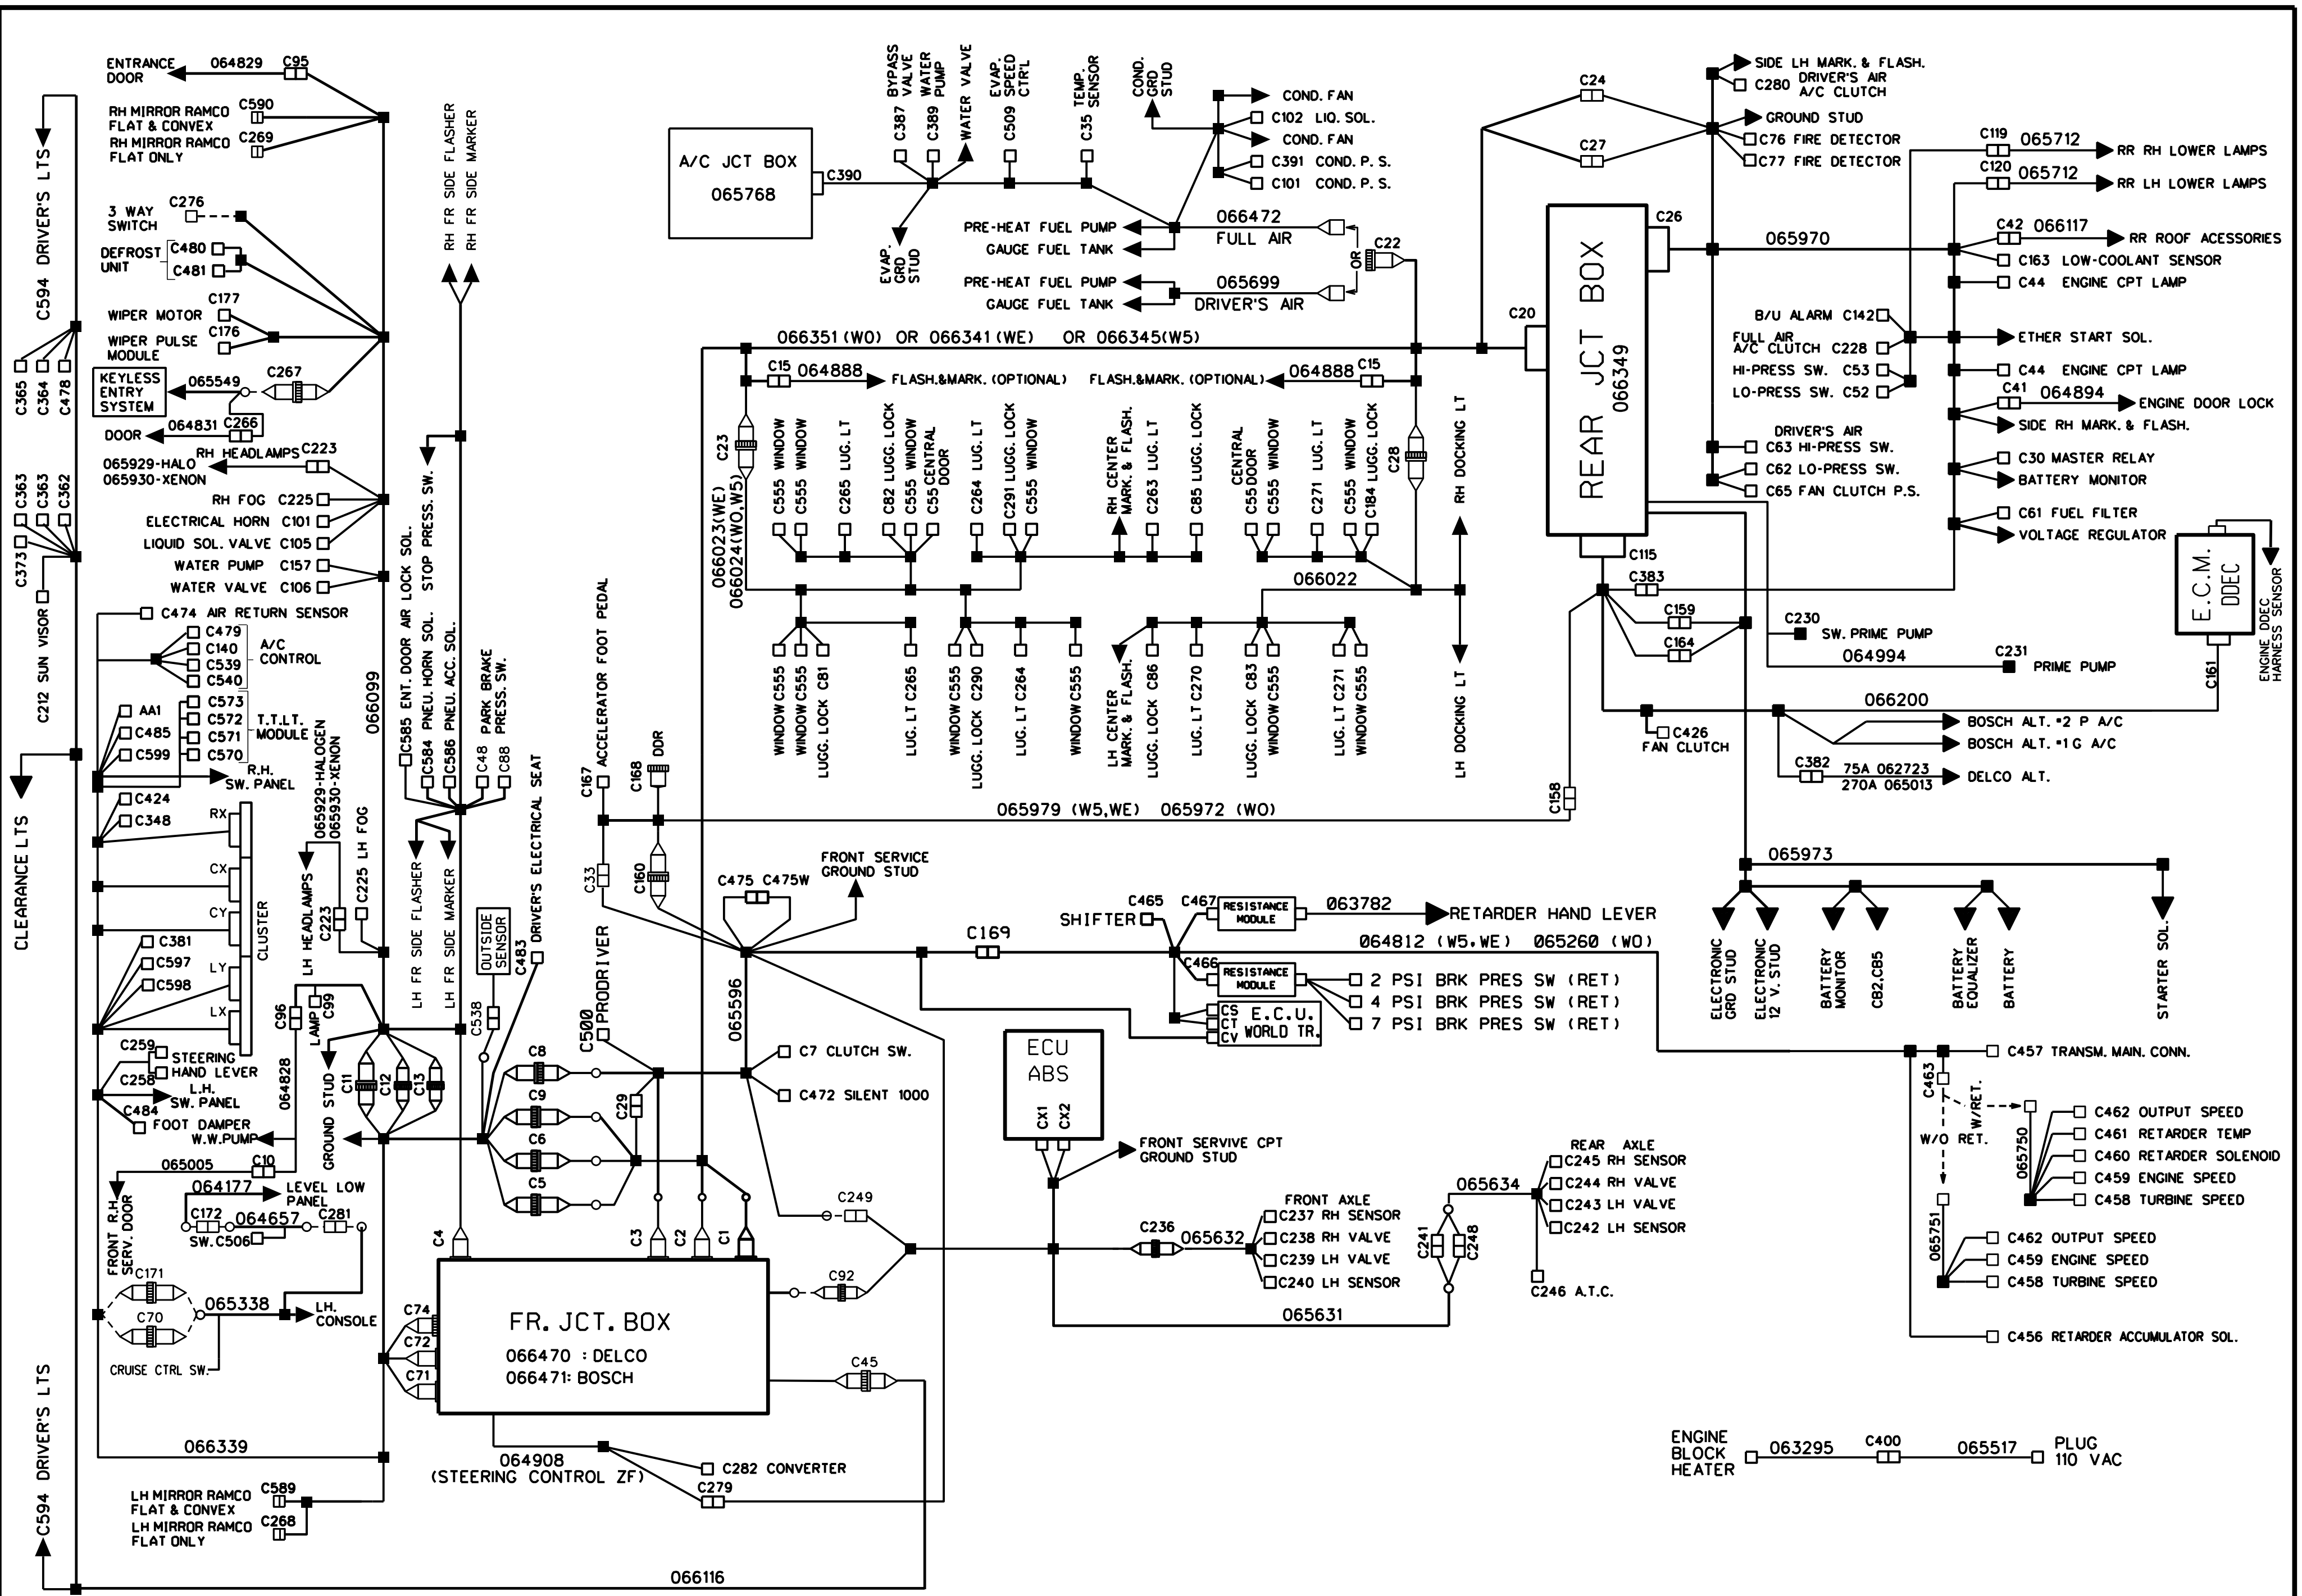

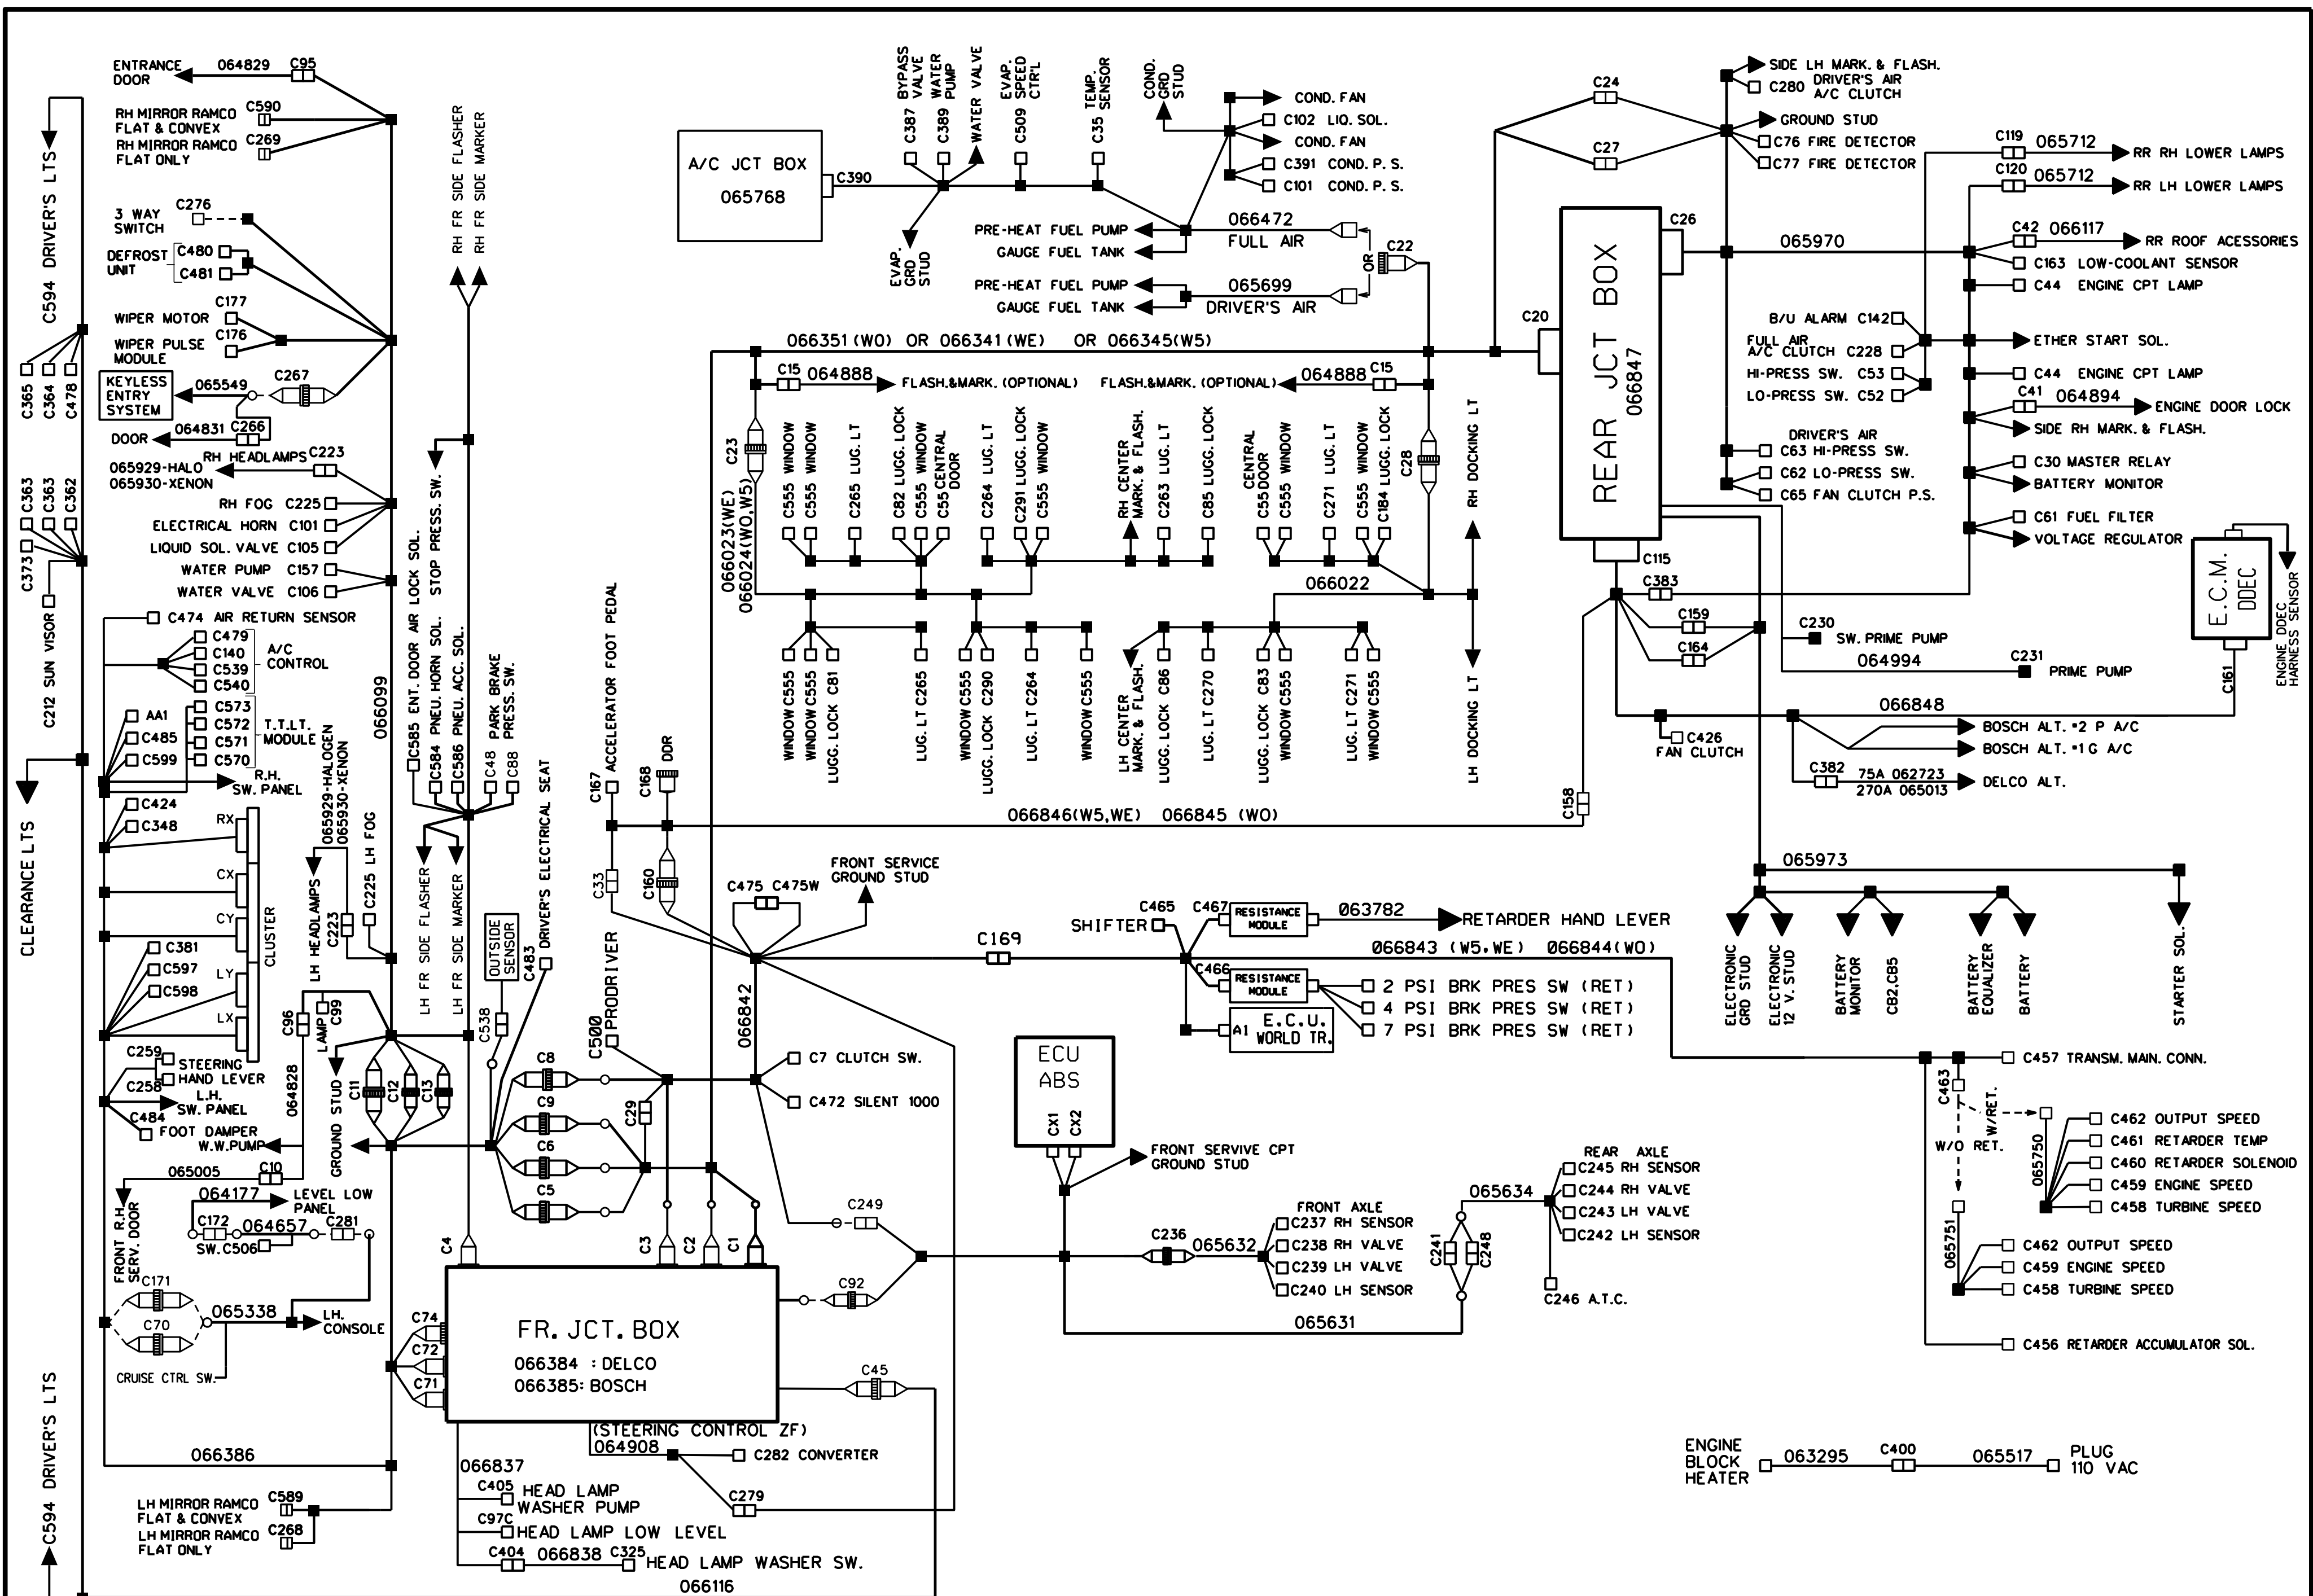



CIRCUIT NUMBER CODE

N0.	DESCRIPTION	N0.	DESCRIPTION	N0.	DESCRIPTION	N0.	DESCRIPTION
IPJ1	CLUSTER - BULB TEST POS	SP62	SPARE WIRE	0T2	CLUSTER ACC.	12E	RR JCT BOX 12V DISC SW
IPJ2	CLUSTER - BULB TEST NEG.	SP63	SPARE WIRE	0T2	WINDOW AWNING	12F	FR JCT PANEL 12V DISC SW
IPJ3	CLUSTER - SV SIGNAL	SP69	SPARE WIRE	0T3	ALTERNATOR MODULE	12G	FR JCT PANEL 12V DISC SW
IPJ4	CLUSTER - RETURN TO ZERO	SP70	SPARE WIRE	0T4	12V OUTLET - CTR MODULE	12H	12V DASH ACCESS.
IPJ5	CLUSTER - FUEL LEVEL GAUGE	SP71	SPARE WIRE	0T5	FS-HVAC DASH MODULE. GND	12I	RR JCT BOX 12V IGNITION
IPJ6	CLUSTER - BULB TEST POS.	SP72	SPARE WIRE	0W	FJB - TRANSM. RLY GRD	12I	FR JCT PANEL 12V IGNITION
IPJ7	CLUSTER - BULB TEST NEG.	SP74	SPARE WIRE	0W	TRANSM ACC. - FR.SERV. CPT	12IA	FR JCT PANEL 12V IGNITION
IPJ8	CLUSTER - MASTER WARNING	SP83	SPARE WIRE	0Y1	ASB SYSTEM-GRD	12IA	RR JCT PANEL 12V IGNITION
LX5	CLUSTER - COMPUTER MODE	SP84	SPARE WIRE	0Y2	ASB SYSTEM-GRD	12IE	ABS-FR JCT PANEL 12V IGN.
LX6	CLUSTER - COMPUTER DOWN	SP114	SPARE WIRE	0Y3	ASB SYSTEM-GRD	12IF	FR JCT PANEL 12V IGNITION
LX7	CLUSTER - COMPUTER SET	SP115	SPARE WIRE	0Y4	ASB SYSTEM-GRD	12J	FR JCT PANEL 12V DISC.SW.
LX16	CLUSTER - COMPUTER UP	SP116	SPARE WIRE	0Y5	ASB SYSTEM-GRD	12JA	FR JCT PANEL 12V DISC.SW.
LX21	CLUSTER - COMPUTER COM.	SP117	SPARE WIRE	0Y6	ASB SYSTEM-GRD	12K	FR JCT PANEL 12V DISC.SW.
RT	T.T.L.T. MODULE - TEST SW.	TW1	SPR. W. TWISTER 50T/M WITH TW2	00A	BATTERY GRD-DASH ACC.	12LX	12V HOTWIRE CLUST.& MOD A/C
SP1	SPARE WIRE	TW2	SPR. W. TWISTER 50T/M WITH TW1	2A	A/C & HEAT SYSTEM	12LX	CLUSTER 12V HOT WIRE
SP2	SPARE WIRE	0	A/C EVAP. CPT GRD	2B	A/C & HEAT SYSTEM	12M	ABS-FR JCT PANEL 12V DISC.SW.
SP3	SPARE WIRE	0	JUMPER - CLUTCH SIGN.	2D	A/C & HEAT SYSTEM	12P	12V POWER OUTLET
SP4	SPARE WIRE	0	RJB - INSIDE GRD	2E	A/C & HEAT SYSTEM	12T	RR JCT BOX 12V DISC SW
SP5	SPARE WIRE	0A	FR. ROOF ACC. GRD	2H	A/C & HEAT SYS-LO-PRESS SW.	12VD	12V HOT WIRE
SP6	SPARE WIRE	0B	A/C - CONDENSER GRD	2L	A/C & HEAT SYS-HI-PRESS SW.	12VI	RR JCT PANEL 12V IGNITION
SP7	SPARE WIRE	0B	ENG. CPT ACC. GRD	3A	A/C & HEAT SYSTEM-EVAPORATOR	12W	12V HOT WIRE DDEC III FEED
SP8	SPARE WIRE	0BE	OV BATTERY MONITOR	5N0	SPEED SIGNAL HIGHER 5MPH	15	EXT. LTS-MULTI FUNC LEVEL
SP9	SPARE WIRE	0C	R.J.B. - GRB	5NC	SPEED SIGNAL LOWER 5MPH	15	WIPER & WASHER SYSTEM
SP10	SPARE WIRE	0C	F.R. SERV. CPT-ACCESSOIRES	6	EXTERIOR LTS-DOCKING	16	SPEEDOMETER (+)
SP11	SPARE WIRE	0C1	ENTRANCE DOOR KEYLESS	6A	EXTERIOR LTS-CORNERING	16T	SPEED SW SIGNAL IN (+)
SP12	SPARE WIRE	0C4	F.J.B. GRD	6B1	EXTERIOR LTS-CORNERING RH	17	EXTERIOR LTS-FLASHER UNIT
SP13	SPARE WIRE	0CJ	CRUISE SW. JUMPER	6C1	EXTERIOR LTS-CORNERING RH	17A	EXTERIOR LTS-FLASHER UNIT
SP14	SPARE WIRE	0D	A/C JCT BOX - COND FAN GRD	6D	EXTERIOR LTS-DOCKING	17C	JUMPER LTS SW. - HAZARD
SP15	SPARE WIRE	0F	SILENT 1000	9	INTERIOR LTS-ENGINE CPT	18	UPPER FAN DEFROST
SP16	SPARE WIRE	0G	ABS GRD CX1	9	INTERIOR LTS-RR JCT BOX	19	UPPER FAN DEFROST
SP17	SPARE WIRE	0H	ENG. CPT. - ACC. GRD	9F	INTERIOR LTS - FR-SERV. CPT	20	SPEEDOMETER SIGNAL (-)
SP18	SPARE WIRE	0L	ENG.CPT -CLEAR.LTS RR ROOF	10	A/C & HEAT SYSTEM -LO PRES.	20T	SPEED SW SIGNAL IN (-)
SP19	SPARE WIRE	0L	R.J.B. - GRD	10	INTERIOR LTS-LUGGAGE CPT	21	EXTERIOR LTS-DIRECT. LH
SP21	SPARE WIRE	0L	FR - SIDE MARK. & FLASH GRD	10	INTERIOR LTS-FR SERV. CPT	21A	EXTERIOR LTS-LH
SP23	SPARE WIRE	0L1	ENG.CPT-SIDE MARK. & FL. GRD	10A	INTERIOR LTS-LUGGAGE CPT	21A	EXTERIOR LTS-CORNERING-LH
SP24	SPARE WIRE	0L2	HEAD LTS	10B	INTERIOR LTS-LUGGAGE CPT	21B	EXTERIOR LTS-DIRECT. LH
SP25	SPARE WIRE	0L3	FR.SERV.DR. & ENT.DOOR GRD ACC.	10C	INTERIOR LTS-LUGGAGE CPT	21BB	EXTERIOR LTS-DIRECT. LH
SP30	SPARE WIRE	0L4	FOG LTS RESISTOR GRD	10D	INTERIOR LTS-LUGGAGE CPT	21H	EXTERIOR LTS-HAZARD SIGNAL
SP33	SPARE WIRE	0L5	LH CONSOL - ACC. GRD	10E	INTERIOR LTS-LUGGAGE CPT	21M	AUX. LTS - DIRECTIONAL LH
SP38	SPARE WIRE	0L5	AIR DRYER GRD	10R	CENTER DOOR T.T.L.T.	21P	CORN. LTS - DIRECT. SIGN. LH
SP40	SPARE WIRE	0LV	WINDSHIELD WASHER LEVEL	12A	FR JCT PANEL 12V DISC SW	23	EXTERIOR LTS-DIRECT. RH
SP41	SPARE WIRE	0M	WIPER 2 MIRROR MOTOR	12B	FR JCT PANEL 12V DISC SW	23A	EXTERIOR LTS-DIRECT. RH
SP42	SPARE WIRE	0M3	DEFROST GRD	12BAT	12V HOT-WIRE ACC - JCT BLK	23A	EXTERIOR LTS - CORNER. LTS
SP43	SPARE WIRE	0M4	HORN & DR'S WINDOW LIFTER	12BE	12V BATTERY MONITOR	23BB	EXTERIOR LTS - DIRECT. RH
SP45	SPARE WIRE	0M5	SUN VISOR MOTOR	12C	FR JCT PANEL 12V DISC SW	23C	EXTERIOR LTS-CORNERING RH
SP48	SPARE WIRE	0M6	UPPER FAN DEFROST	12C	RR JCT BOX 12V DISC SW	23H	EXTERIOR LTS-HAZARD SIGNAL
SP56	SPARE WIRE	0M7	DR'S WIND.LIFT. & RH MIR. SW	12D	FR JCT PANEL 12V HOT WIRE	23M	AUX LTS - DIRECTIONAL RH
SP57	SPARE WIRE	0M7A	LH MIRROR SW.	12DD	FR JCT PANEL 12V HOT WIRE	23P	CORN. LTS - DIRECT SIGN RH
SP60	SPARE WIRE	0T	SPEED SW. CONNECTOR	12DDR	RR JCT BOX 12V HOT WIRE DDR CON	24	FR JCT PANEL 24V DISC. SW.
SP61	SPARE WIRE	0T1	DASH ACC.	12DT	T.T. LT MODULE	24A	RR JCT PANEL 24V DISC. SW

CIRCUIT NUMBER CODE

NO. DESCRIPTION

24A	FR JCT PANEL 24V DISC. SW
24BE	BATTERY MONITOR
24C	FR JCT PANEL 24V DISC SW
24D	FR JCT BOX 24V HOT WIRE
24F	RR JCT PANEL 24V DISC SW
24G	RR JCT PANEL 24V DISC SW
24I	FR JCT PANEL 24V IGNITION
24I	RR JCT PANEL 24V IGNITION
24IA	FR JCT PANEL 24V IGNITION
24IB	FR JCT PANEL 24V IGNITION
24IF	FR JCT PANEL 24V IGNITION
24P	FR JCT PANEL 24V DISC SW
24R	24V RR JCT BLK TO STARTER
24T	RR JCT PANEL 24V DISC SW
24VD	24V HOT WIRE FEED
25A	TT.LT. MODULE - LED
25A1	BOSCH ALTERNATOR - WE ONLY
25A2	BOSCH ALTERNATOR - WE ONLY
25B	EXT. LTS-DAYTIME RUN LTS
25D	GENERATOR SKTN. ON - HVAC
25L	GENERATOR SIGNAL TO RLY R88
26	DR'S & ENT. WINDOW LIFTER
26A	CIGAR LIGHT. & POW. OUTLET LH
26B	DRIVER'S WINDOW LIFTER
26C	DRIVER'S WINDOW LIFTER
26D	ENT. DOOR WINDOW LIFTER
26E	ENT. DOOR WINDOW LIFTER
26F	ENT. DOOR WINDOW LIFTER
28H	T.T.LT MODULE - HI A/C PRES.
28T	T.T.LT MODULE - LO A/C PRES.
29	A/C & HEAT SYS.-DR'S HTR
29H	HVAC DASH MODILE
31B	WIPER & WASHER SYSTEM
31C	WIPER & WASHER SYSTEM
32	EXTERIOR LTS-BACK-UP
32B	EXTERIOR LTS-BACK-UP
32F	BACK-UP CANCEL SW.
32G	BACK-UP ALARM
32J	BACK-UP SW. - JUMPER
35B	DRIVER'S LTS - KEYLESS SIGN
36	ENGINE BRAKE SYSTEM
36A	ENGINE BRAKE SYSTEM & RET.
39	INTERIOR LTS-DRIVER'S LTS
39B	INTERIOR LTS-DRIVER'S LTS
39C	INTERIOR LTS-DRIVER'S LTS
39D	INTERIOR LTS - FRIVER' LTS
39K	DR'S LTS - KEYLESS SIGN.
41	A/C SYS.-COND FAN MOTOR
41A	A/C SYS.-COND FAN MOTOR
41B	A/C SYS.-COND FAN MOTOR

NO. DESCRIPTION

42A	A/C SYS.-COND FAN MOTOR
43	A/C & HEAT SYS. - FAN SPEED
44	EXTERIOR LTS-FOG
44A	EXTERIOR LTS-FOG
44B	EXTERIOR LTS-FOG
44C	EXT. LTS-FOG,HVAC & HAZ. SW
44D	EXTERIOR LTS - FOG
44E	EXTERNAL LTS - FOG
45A	A/C & HEAT SYSTEM FULL AIR
45B	A/C & HEAT SYS.-WATER PUMP
45C	A/C & HEAT SYS.-WATER VALV
45D	A/C & HEAT SYS.-WATER VALV
45E	A/C & HEAT SYS.-WATER PUMP
45G	A/C & HEAT SYS.-DR'S HTR
45J	A/C & HEAT SYS.-WATER PUMP
46	EXTERIOR LTS-MARKER
46A	EXTERIOR LTS-AUX LTS RESIS.
46C	EXTERIOR LTS-MARKER
46D	EXTERIOR LTS-AUX LTS RESIS.
48A	ENTRANCE DOOR AIR LOCK
48B	ENTRANCE DOOR AIR LOCK
48C	ENTRANCE DOOR AIR LOCK
50	AIR DRYER
52	ALARM & SIGNAL-ELEC.HORN
52A	ALARM & SIGNAL-ELEC.HORN
53	ALARM & SIGNAL-ELEC.HORN
53B	WIPER & WASHER SYSTEM
53C	WIPER & WASHER SYSTEM
53E	WIPER & WASHER SYSTEM
53J	WIPER & WASHER SYSTEM
53K	KEYLESS SYSTEM
55	EXTERIOR LTS-HI BEAM
57	EXTERIOR LTS-HI BEAM
57A	EXTERIOR LTS-HI BEAM
57B	A/C & HEAT SYS.-WATER PUMP
57C	A/C & HEAT SYS.-WATER PUMP
57E	A/C & HEAT SYS.-WATER VALV
58	EXTERIOR LTS-LO BEAM
58A	EXTERIOR LTS-LO BEAM
58B	EXTERIOR LTS-LO BEAM
59A	ENGINE BRAKE SYSTEM
61	EXTERIOR LTS-24V FEED SW
61A	EXTERIOR LTS-HEAD SIGNAL
63	EXTERIOR LTS-CLEAR. FEED
63B	EXTERIOR LTS-CLEARANCE
63C	EXT. LTS-MARKER SIGNAL
63F	EXT. LTS-MARKER BLINKER
64	DRIVER'S FAN SPEED CTR
64A	DRIVER'S FAN SPEED CTR
64B	DRIVER'S FAN SPEED CTR

NO. DESCRIPTION

65	FOOT DAMPER MOTOR
65A	FOOT DAMPER MOTOR
65D	DRIVER'S REC. DAMPER
66	A/C PASSENGER - ON/OFF
67A	A/C & HEAT SYSTEM
68	DASH & DEFROST DAMPER MOT
68A	DASH & DEFROST DAMPER MOT
72	SUN VISOR - FEED
72A	SUN VISOR RH
72B	SUN VISOR RH
72C	SUN VISOR LH
72D	SUN VISOR LH
76	FUEL TANK GAUGE
76C	LOW FUEL T.T.LT
76L	LOW FUEL T.T.LT
77A	A/C & HEAT SYS. - THERMOST.
77B	A/C SYS. - LIQ. SOL. VALVE
77C	A/C & HEAT SYS.-COMPRESSOR
77H	A/C SYS.-LIQ. SOL. VALVE
77H	A/C & HEAT SYS.-THERMOSTAT
81	EXTERIOR LTS-STOP SW
82	EXTERIOR LTS-STOP SIGNAL
82A	EXTERIOR LTS-STOP SIGNAL
82B	EXTERIOR LTS-STOP LTS
82L	EXT. LTS-STOP LTS & CYCLOP
82R	EXTERIOR LTS-STOP LTS
83	ENG. CTR-MAST. KEY SW ACC.
84	ENG. CTR-MAST KEY SW START
84A	ENG. CTR-MAST KEY SW START
84J	ENG. CTR-MAST KEY SW START
85	24V IGNITION SIGNAL
85A	24V IGN DASH INSTRUMENT.
85C	24V IGNITION - FEED
85W	WORLD TRANSM. - 24V IGN.
85X	ABS-12V IGN
85Y	ABS-12V IGN
85Z	ABS-12V IGN
86	ENG. CTR-STARTER SOL SIGN
86A	ENG. CTR-STARTER SOL SIGN
87B	ENGINE CTR-24V IGNITION
88	ENGINE CTR-RR START SIGNAL
89	ENGINE CTR-RR START SIGNAL
90	CONVERTER - CABLE SPARG
90A	ENG. CTR-MAST KEY SW FEED
90B	A/C & H. SYS.-COND FAN MOT
90B	ENG. CTR-MAST KEY SW FEED
91	PARKING BRAKE SW SIGNAL
91A	DDEC III-FAST IDLE SIGNAL
91C	PARKING BRAKE - T.T.LT
91J	FAST IDLE - JUMPER SW.

NO. DESCRIPTION

92	BATT. EQUAL.-CHECK BALANCE
93	BATT. EQUALIZ.-CHECK LO/HI
95A	ENG. BRAKE & RETARDER SYS.
95B	ENG. BRAKE & RETARDER SYS.
97	TACHOMETER SIGN.-NOT USED
101	WORLD TR.- LO SIGN SOL.LO
102	WORLD TRANSM.-SOL. SUPPLY
103	WORLD TRANSM.- B.SOL.LO
104	LEVEL-LOW SYS- DR'S SOL.
104	WORLD TR. -SOL. FORWARD
105W	WORLD TR-SOL.-RET.OIL TT.LT
107	WORLD TR.-LOCKUP SOL. HI
108	WORLD TR.-LOCKUP SOL.
110	WORLD TR.-LOCKUP SOL. LO
112	WORLD TR.-SPARE OUTPUT (+)
112	WORLD TR.-SPARE OUTPUT (+)
113W	WORLD TR.-REVERSE WARNING
114	WORLD TR.-SPARE OUTPUT (-)
114	INTERIOR LT-DASH LT RHEOS.
114A	INTERIOR LT-DASH LT RHEOS.
114B	INT. LT-DASH LT RHEOS.FEED
115	DDEC III-COOLANT LEVEL
115W	WORLD TR.-DO NOT SHIFT SIGN
116	WORLD TR.-LO SIGNAL SOL. HI
116B	A/C & HEAT SYSTEM-DR'S HTR
116C	A/C SYS.-TRIG. DEFROST
119	WORLD TRANSM-ENGINE BRAKE
120	WORLD TRANSM-SOL. CI
121	WORLD TRANSM-SOL.GRD 2
123	WORLD TR.-NEUTRAL START
123A	ALARM & SIGNAL-FIRE DETECT.
123B	ALARM & SIGNAL-FIRE DETECT.
124	WORLD TR.-THROTTLE (HI)
124A	WORLD TRANSM-SENSOR PWR
125	WORLD TR-RETARDER INDICAT.
125W	WORLD TR-RETARDER INDICAT.
126	WORLD TR.-LUBE PRESS SW.
126	24VIGN-LEV.LOW & WORLD TR.
126F	LEVEL LOW SYSTEM
126H	SPEED SIGN 5NC - NOT USED
126W	WORLD TRANSM-NOT USED
127	24HW DR'S LT PREHEAT & HVAC
128	WORLD TRANSM-SOL. C2
129	WORLD TRANSM-SOL. C5
130	WORLD TRANSM-SOL. GRD 3
131	WORLD TRANSM-SOL.C4
132	WORLD TRANSM-ENGINE BRAKE
132A	LEVEL LOW SYSTEM
132B	LEVEL LOW SYSTEM
132C	LEVEL LOW SYSTEM

CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
132D	LEVEL LOW SYSTEM	147A	ETHER COLD START	171	WORLD TRANSM-SHIFTER	294	KEYLESS SYSTEM-ANTI-THEFT
132E	LEVEL LOW SYSTEM	147A	DAYTIME LST-ALT.SIGNAL	172	WORLD TRANSM-SHIFTER	295	KEYLESS SYS-LED INDICATOR
132F	LEVEL LOW SYSTEM	147C	ETHER COLD START	173	WORLD TRANSM-SHIFTER	417	DDEC-LIMIT SPEED GOVERNOR
135	WORLD TRANSM-RET.TEMP.	148	ABS SYSTEM-VALVE	174	WORLD TRANSM-SHIFTER	419	DDEC -CHEK ENGINE LIGHT
135A	WORLD TR.-RES MODULE RET.	148	WORLD TR.-OUTPUT SPEED LO	175A	WORLD TRANSM-SHIFTER	439	DDEC-12V IGNITION
135B	A/C & HEAT SYS.-AIR SENSOR	149	WORLD TR.-TURBINE SPEED HI	176	WORLD TRANSM-SHIFTER	451	DDEC-A/C FAN CLUTCH
135C	A/C & HEAT SYS.-AIR SENSOR	149	ABS SYSTEM-SENSOR	180	WORLD TRANSM-SHIFTER	505	DDEC-TACHOMETER DRIVE
136A	WORLD TRANSM-12V BATTERY	149A	ABS SYSTEM	180	OUTSIDE TEMP. DISPLAY	509	DDEC-STOP ENGINE LIGHT
136AA	WORLD TRANSM-SHIFTER PWR	150	WORLD TR.-ENGINE SPEED LO	180A	OUTSIDE TEMP. DISPLAY	510	DDEC-FAST IDLE SIGNAL
136V	WORLD TRANSM-12V BATTERY	150	DDEC III-ECM BATTERY GRD	180A	WORLD TRANSM-SHIFTER	524	DDEC-ENGINE BRAKEDISABLE
136W	WORLD TRANSM-12V BATTERY	150A	DDEC III-ECM BATTERY GRD	180B	OUTSIDE TEMP. DISPLAY	525	DDEC-FAST IDLE SIGNAL
137	WORLD TRANSM-RETARDER	151	DDEC III-ECM BATTERY GRD	180C	OUTSIDE TEMP. DISPLAY	528	DDEC-STOP ENG. OVERRIDE
137	RR VIEW MIRROR	151	ABS SYSTEM-SPARE	181	FROZEN POINT T.T.LT	531	DDEC-CRUISE CLUTCH CUT OUT
137A	RR VIEW MIRROR	152	ABS SYSTEM-SPARE	181A	THERMOMETER INSIDE SENSOR	540	DDEC-CRUISE ENABLE T.T.LT
137B	RR VIEW MIRROR	153	ELECTRICAL DRIVER'S SEAT	181B	THERMOMETER INSIDE SENSOR	541	DDEC-CRUISE SET SW
137C	RR VIEW MIRROR	154	WORLD TRANSM-ABS INPUT (-)	181C	THERMOMET. OUTSIDE SENSOR	542	INPUT PARK BRAKE INTERLOCK
137D	RR VIEW MIRROR	156A	ABS SYSTEM-FEED	181D	THERMOMET. OUTSIDE SENSOR	543	DDEC-CRUISE STOP SW CUT IN
137D	RR VIEW MIRROR	157B	ABS SYSTEM	195	WORLD TRANSM-TRANS ID	544	DDEC-CRUISE ON/OFF SW
137E	RR VIEW MIRROR	159	WORLD TRANSM-DIAGNOSTIC	197	FUEL WATER FILTER	545	DDEC-CRUISE RESUME SW
137F	RR VIEW MIRROR	160	ALARM & SIGN.-TAG PRESS SW	197A	FUEL WATER FILTER	555	DDEC-FAN CLUTCH SPEED#1
137H	RR VIEW MIRROR	161B	WORLD TRANSM-SIGNALGRD	201	WORLD TRANSM-SPARE	556	DDEC-VEHICULE SPEED (+)
137J	RR VIEW MIRROR	162	WORLD TRANSM-PRESS. SW C3	202	WORLD TRANSM-SPARE	557	DDEC-VEHICULE SPEED (-)
137K	RR VIEW MIRROR	163	WORLD TR.-RETARDER ENABLE	203	WORLD TRANSM-SPARE	563	DDEC-FAN CLUTCH SPEED#2
137L	RR VIEW MIRROR	164	WORLD TR.-RET. ACTUAT. SIGN	204	WORLD TRANSM-SPARE	564	DDEC-DIGITAL OUTPUT
137M	RR VIEW MIRROR FEED	165	WORLD TR.-OIL LEVEL SIGNAL	214	WORLD TR.-BACK-UP SIGNAL	565	DDEC-ENGINE BRAKE ACTIVE
137R	WORLD TRANSM-RETARDER	166B	A/C & HEAT SYS.-EVAP. MOD.	231	WORLD TR.-NEUTRAL SIGN GRD	583	DDEC-ENGINE BRAKE 4 CYL.
137T	MIRROR HEAT SW-JUMPER	167	WORLD TR.-SPEED 5N0, 5NC	240	DDEC III-ECM 12V FEEDING	900	DDEC-DATA LINK (+)
138	WORLD TR.-RETARDER TEMP	169	WORLD TRANSM-INPUT 12	241	DDEC III-ECM 12V FEEDING	901	DDEC-DATA LINK (-)
138	ABS SYSTEM-SENSOR	170	WORLD TRANSM-SHIFTER	260	WINDOW AJAR-T.T.LT	908	DDEC-HYDRAU. PWM#1 OUTPUT
138A	ABS SYSTEM-SENSOR	170C	LUGGAGE DOOR LOCK-T.T.LT	270	KEYLESS MODULE-FEED	916	DDEC-SENSOR SUPPLY (5VDC)
139	ABS SYSTEM-VALVE	170D	LUGGAGE DOOR LOCK-FEED	270A	ENTRANCE DOOR AIR LOCK	952	DDEC-SENSOR RETURN
139	WORLD TR.-OUTPUT SPEED HI	170E	LUG. DOOR LOCK-UNLOCK SIGN	272	KEYLESS SYSTEM-KEYBOARD	953	DDEC-BATTERY GRD
140	WORLD TR.-OUTPUT SPEED LO	170F	LUGGAGE DOOR LOCK-FEED	274	KEYLESS SYSTEM-KEYBOARD	979	DDEC-ENGINE BRAKE 2 CYL.
140	ABS SYSTEM-VALVE	170G	LUGGAGE DOOR LOCK-FEED	276	KEYLESS SYSTEM-KEYBOARD	2123	FLASHER SIGNAL LTS
141	ABS SYSTEM-VALVE	170H	LUGGAGE DOOR-LOCK SIGN	277	KEYLESS SYS-DR'V LTS SIGN		
141	WORLD TR.-ENGINE SPEED HI	170K	LUGGAGE DOOR-LOCK SIGN	278	KEYLESS SYSTEM-KEYBOARD		
142	ABS SYSTEM-VALVE	170LA	LUGG DOOR LOCK-T.T.LT WE	280	KEYLESS SYSTEM-KEYBOARD		
143	ABS SYSTEM-SENSOR	170LB	LUGG DOOR LOCK-T.T.LT WE	283	KEYLESS SYSTEM-ANTI-THEFT		
143A	ABS SYSTEM-SENSOR	170L	LUGG DOOR LOCK-SIGN T.T.LT	283A	KEYLESS SYS-ENT. DOOR SIGN		
143A	WORLD TRANS-BATERY GRD	170M	LUGG DOOR LOCK-SIGN T.T.LT	284A	KEYLESS SYSTEM		
143W	WORLD TRANSM-BATTERY GRD	170N	LUGG DOOR LOCK-SIGN T.T.LT	285	KEY. SYS-UNLOCK ENT. DOOR		
143X	WORLD TRANSM-BATTERY GRD	170P	LUGG DOOR LOCK-SIGN T.T.LT	285B	KEYLESS SYSTEM		
144	ABS SYSTEM-SENSOR	170R	LUGG DOOR LOCK-ENTR. DOOR	285C	KEYLESS SYSTEM		
144A	ABS SYSTEM-SENSOR	170S	LUGG DOOR LOCK-SIGN T.T.LT	286	LUGG DOOR LOCK-ENT. DOOR		
145	ABS SYSTEM-VALVE	170T	LUGG DOOR LOCK-SIGN T.T.LT	286A	KEYLESS SYS-CENTER DOOR		
146	ABS SYSTEM-VALUE	170V	LUGG DOOR LOCK-SIGN T.T.LT	290	FAN CLUTCH RADIATOR-FEED		
146A	WORLD TRANSM-12V IGNITION	170W	LUGGAGE DOOR LOCK-FEED	290A	FAN CLUTCH RADIATOR-FEED		
146AA	WORLD TRANSM-DIAGN.CONN.	170X	LUGG DOOR LOCK-SIGN T.T.LT	291	FAN CLUTCH RADIATOR SPD 1		
147	WORLD TRANSM-OIL TEMP	170Y	LUGGAGE DOOR LOCK-FEED	292	FAN CLUTCH RADIATOR SPD 2		
147	ABS SYSTEM-VALVE	170Z	LUGGAGE DOOR LOCK	292A	FAN CLUTCH RADIATOR SPD 2		

CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
-----	-------------	-----	-------------	-----	-------------	-----	-------------

CIRCUIT NUMBER CODE

N0. DESCRIPTION

IPJ1 CLUSTER - BULB TEST POS
 IPJ2 CLUSTER - BULB TEST NEG.
 IPJ3 CLUSTER - SV SIGNAL
 IPJ4 CLUSTER - RETURN TO ZERO
 IPJ5 CLUSTER - FUEL LEVEL GAUGE
 IPJ6 CLUSTER - BULB TEST POS.
 IPJ7 CLUSTER - BULB TEST NEG.
 IPJ8 CLUSTER - MASTER WARNING
 LX5 CLUSTER - COMPUTER MODE
 LX6 CLUSTER - COMPUTER DOWN
 LX7 CLUSTER - COMPUTER SET
 LX16 CLUSTER - COMPUTER UP
 LX21 CLUSTER - COMPUTER COM.
 RT T.T.L.T. MODULE - TEST SW.
 SP1 SPARE WIRE
 SP2 SPARE WIRE
 SP3 SPARE WIRE
 SP4 SPARE WIRE
 SP5 SPARE WIRE
 SP6 SPARE WIRE
 SP7 SPARE WIRE
 SP8 SPARE WIRE
 SP9 SPARE WIRE
 SP10 SPARE WIRE
 SP11 SPARE WIRE
 SP12 SPARE WIRE
 SP13 SPARE WIRE
 SP14 SPARE WIRE
 SP15 SPARE WIRE
 SP16 SPARE WIRE
 SP17 SPARE WIRE
 SP18 SPARE WIRE
 SP19 SPARE WIRE
 SP21 SPARE WIRE
 SP23 SPARE WIRE
 SP24 SPARE WIRE
 SP25 SPARE WIRE
 SP30 SPARE WIRE
 SP33 SPARE WIRE
 SP38 SPARE WIRE
 SP40 SPARE WIRE
 SP41 SPARE WIRE
 SP42 SPARE WIRE
 SP43 SPARE WIRE
 SP45 SPARE WIRE
 SP48 SPARE WIRE
 SP56 SPARE WIRE
 SP57 SPARE WIRE
 SP60 SPARE WIRE
 SP61 SPARE WIRE

N0. DESCRIPTION

SP62 SPARE WIRE
 SP63 SPARE WIRE
 SP69 SPARE WIRE
 SP70 SPARE WIRE
 SP71 SPARE WIRE
 SP72 SPARE WIRE
 SP74 SPARE WIRE
 SP83 SPARE WIRE
 SP84 SPARE WIRE
 SP114 SPARE WIRE
 SP115 SPARE WIRE
 SP116 SPARE WIRE
 SP117 SPARE WIRE
 TW1 SPR. W. TWISTER 50T/M WITH TW2
 TW2 SPR. W. TWISTER 50T/M WITH TW1
 0 A/C EVAP. CPT GRD
 0 JUMPER - CLUTCH SIGN.
 0 RJB - INSIDE GRD
 0A FR. ROOF ACC. GRD
 0B A/C - CONDENSER GRD
 0B ENG. CPT ACC. GRD
 0BE OV BATTERY MONITOR
 0C R.J.B. - GRB
 0C F.R. SERV. CPT-ACCESSOIRES
 0C1 ENTRANCE DOOR KEYLESS
 0C4 F.J.B. GRD
 0CJ CRUISE SW. JUMPER
 0D A/C JCT BOX - COND FAN GRD
 0F SILENT 1000
 0G ABS GRD CX1
 0H ENG. CPT. - ACC. GRD
 0L ENG.CPT -CLEAR.LTS RR ROOF
 0L R.J.B. - GRD
 0L FR - SIDE MARK. & FLASH GRD
 0L1 ENG.CPT-SIDE MARK. & FL. GRD
 0L2 HEAD LTS
 0L3 FR.SERV.DR. & ENT.DOOR GRD ACC.
 0L4 FOG LTS RESISTOR GRD
 0L5 LH CONSOL - ACC. GRD
 0L5 AIR DRYER GRD
 0LV WINDSHIELD WASHER LEVEL
 0M WIPER 2 MIRROR MOTOR
 0M3 DEFROST GRD
 0M4 HORN & DR'S WINDOW LIFTER
 0M5 SUN VISOR MOTOR
 0M6 UPPER FAN DEFROST
 0M7 DR'S WIND.LIFT. & RH MIR. SW
 0M7A LH MIRROR SW.
 0T SPEED SW. CONNECTOR
 0T1 DASH ACC.

N0. DESCRIPTION

0T2 CLUSTER ACC.
 0T2 WINDOW AWNING
 0T3 ALTERNATOR MODULE
 0T4 12V OUTLET - CTR MODULE
 0T5 FS-HVAC DASH MODULE. GND
 0W FJB - TRANSM. RLY GRD
 0W TRANSM ACC. - FR.SERV. CPT
 0Y1 ASB SYSTEM-GRD
 0Y2 ASB SYSTEM-GRD
 0Y3 ASB SYSTEM-GRD
 0Y4 ASB SYSTEM-GRD
 0Y5 ASB SYSTEM-GRD
 0Y6 ASB SYSTEM-GRD
 00A BATTERY GRD-DASH ACC.
 2A A/C & HEAT SYSTEM
 2B A/C & HEAT SYSTEM
 2D A/C & HEAT SYSTEM
 2E A/C & HEAT SYSTEM
 2H A/C & HEAT SYS-LO-PRESS SW.
 2L A/C & HEAT SYS-HI-PRESS SW.
 3A A/C & HEAT SYSTEM-EVAPORATOR
 5N0 SPEED SIGNAL HIGHER 5MPH
 5NC SPEED SIGNAL LOWER 5MPH
 6 EXTERIOR LTS-DOCKING
 6A EXTERIOR LTS-CORNERING
 6B1 EXTERIOR LTS-CORNERING RH
 6C1 EXTERIOR LTS-CORNERING RH
 6D EXTERIOR LTS-DOCKING
 9 INTERIOR LTS-ENGINE CPT
 9 INTERIOR LTS-RR JCT BOX
 9F INTERIOR LTS - FR-SERV. CPT
 10 A/C & HEAT SYSTEM -LO PRES.
 10 INTERIOR LTS-LUGGAGE CPT
 10 INTERIOR LTS-FR SERV. CPT
 10A INTERIOR LTS-LUGGAGE CPT
 10B INTERIOR LTS-LUGGAGE CPT
 10C INTERIOR LTS-LUGGAGE CPT
 10D INTERIOR LTS-LUGGAGE CPT
 10E INTERIOR LTS-LUGGAGE CPT
 10R CENTER DOOR T.T.L.T.
 12A FR JCT PANEL 12V DISC SW
 12B FR JCT PANEL 12V DISC SW
 12BAT 12V HOT-WIRE ACC - JCT BLK
 12BE 12V BATTERY MONITOR
 12C FR JCT PANEL 12V DISC SW
 12C RR JCT BOX 12V DISC SW
 12D FR JCT PANEL 12V HOT WIRE
 12DD FR JCT PANEL 12V HOT WIRE
 12DDR RR JCT BOX 12V HOT WIRE DDR CON
 12DT T.T. LT MODULE

N0. DESCRIPTION

12E RR JCT BOX 12V DISC SW
 12F FR JCT PANEL 12V DISC SW
 12G FR JCT PANEL 12V DISC SW
 12H 12V DASH ACCESS.
 12I RR JCT BOX 12V IGNITION
 12I FR JCT PANEL 12V IGNITION
 12IA FR JCT PANEL 12V IGNITION
 12IA RR JCT PANEL 12V IGNITION
 12IE ABS-FR JCT PANEL 12V IGN.
 12IF FR JCT PANEL 12V IGNITION
 12J FR JCT PANEL 12V DISC.SW.
 12JA FR JCT PANEL 12V DISC.SW.
 12K FR JCT PANEL 12V DISC.SW.
 12LX 12V HOTWIRE CLUST.& MOD A/C
 12LX CLUSTER 12V HOT WIRE
 12M ABS-FR JCT PANEL 12V DISC.SW.
 12P 12V POWER OUTLET
 12T RR JCT BOX 12V DISC SW
 12VD 12V HOT WIRE
 12VI RR JCT PANEL 12V IGNITION
 12W 12V HOT WIRE DDEC III FEED
 15 EXT. LTS-MULTI FUNC LEVEL
 15 WIPER & WASHER SYSTEM
 16 SPEEDOMETER (+)
 16T SPEED SW SIGNAL IN (+)
 17 EXTERIOR LTS-FLASHER UNIT
 17A EXTERIOR LTS-FLASHER UNIT
 17C JUMPER LTS SW. - HAZARD
 18 UPPER FAN DEFROST
 19 UPPER FAN DEFROST
 20 SPEEDOMETER SIGNAL (-)
 20T SPEED SW SIGNAL IN (-)
 21 EXTERIOR LTS-DIRECT. LH
 21A EXTERIOR LTS-LH
 21A EXTERIOR LTS-CORNERING-LH
 21B EXTERIOR LTS-DIRECT. LH
 21BB EXTERIOR LTS-DIRECT. LH
 21H EXTERIOR LTS-HAZARD SIGNAL
 21M AUX. LTS - DIRECTIONAL LH
 21P CORN. LTS - DIRECT. SIGN. LH
 23 EXTERIOR LTS-DIRECT. RH
 23A EXTERIOR LTS-DIRECT. RH
 23A EXTERIOR LTS - CORNER. LTS
 23BB EXTERIOR LTS - DIRECT. RH
 23C EXTERIOR LTS-CORNERING RH
 23H EXTERIOR LTS-HAZARD SIGNAL
 23M AUX LTS - DIRECTIONAL RH
 23P CORN. LTS - DIRECT SIGN RH
 24 FR JCT PANEL 24V DISC. SW.
 24A RR JCT PANEL 24V DISC. SW

CIRCUIT NUMBER CODE

NO. DESCRIPTION

24A FR JCT PANEL 24V DISC. SW
 24BE BATTERY MONITOR
 24C FR JCT PANEL 24V DISC SW
 24D FR JCT BOX 24V HOT WIRE
 24F RR JCT PANEL 24V DISC SW
 24G RR JCT PANEL 24V DISC SW
 24I FR JCT PANEL 24V IGNITION
 24I RR JCT PANEL 24V IGNITION
 24IA FR JCT PANEL 24V IGNITION
 24IB FR JCT PANEL 24V IGNITION
 24IF FR JCT PANEL 24V IGNITION
 24P FR JCT PANEL 24V DISC SW
 24R 24V RR JCT BLK TO STARTER
 24T RR JCT PANEL 24V DISC SW
 24VD 24V HOT WIRE FEED
 25A TT.LT. MODULE - LED
 25A1 BOSCH ALTERNATOR - WE ONLY
 25A2 BOSCH ALTERNATOR - WE ONLY
 25B EXT. LTS-DAYTIME RUN LTS
 25D GENERATOR SKTN. ON - HVAC
 25L GENERATOR SIGNAL TO RLY R88
 26 DR'S & ENT. WINDOW LIFTER
 26A CIGAR LIGHT. & POW. OUTLET LH
 26B DRIVER'S WINDOW LIFTER
 26C DRIVER'S WINDOW LIFTER
 26D ENT. DOOR WINDOW LIFTER
 26E ENT. DOOR WINDOW LIFTER
 26F ENT. DOOR WINDOW LIFTER
 28H T.T.LT MODULE - HI A/C PRES.
 28T T.T.LT MODULE - LO A/C PRES.
 29 A/C & HEAT SYS.-DR'S HTR
 29H HVAC DASH MODILE
 31B WIPER & WASHER SYSTEM
 31C WIPER & WASHER SYSTEM
 32 EXTERIOR LTS-BACK-UP
 32B EXTERIOR LTS-BACK-UP
 32F BACK-UP CANCEL SW.
 32G BACK-UP ALARM
 32J BACK-UP SW. - JUMPER
 35B DRIVER'S LTS - KEYLESS SIGN
 36 ENGINE BRAKE SYSTEM
 36A ENGINE BRAKE SYSTEM & RET.
 39 INTERIOR LTS-DRIVER'S LTS
 39B INTERIOR LTS-DRIVER'S LTS
 39C INTERIOR LTS-DRIVER'S LTS
 39D INTERIOR LTS - FRIVER' LTS
 39K DR'S LTS - KEYLESS SIGN.
 41 A/C SYS.-COND FAN MOTOR
 41A A/C SYS.-COND FAN MOTOR
 41B A/C SYS.-COND FAN MOTOR

NO. DESCRIPTION

42A A/C SYS.-COND FAN MOTOR
 43 A/C & HEAT SYS. - FAN SPEED
 44 EXTERIOR LTS-FOG
 44A EXTERIOR LTS-FOG
 44B EXTERIOR LTS-FOG
 44C EXT. LTS-FOG,HVAC & HAZ. SW
 44D EXTERIOR LTS - FOG
 44E EXTERNAL LTS - FOG
 45A A/C & HEAT SYSTEM FULL AIR
 45B A/C & HEAT SYS.-WATER PUMP
 45C A/C & HEAT SYS.-WATER VALV
 45D A/C & HEAT SYS.-WATER VALV
 45E A/C & HEAT SYS.-WATER PUMP
 45G A/C & HEAT SYS.-DR'S HTR
 45J A/C & HEAT SYS.-WATER PUMP
 46 EXTERIOR LTS-MARKER
 46A EXTERIOR LTS-AUX LTS RESIS.
 46C EXTERIOR LTS-MARKER
 46D EXTERIOR LTS-AUX LTS RESIS.
 48A ENTRANCE DOOR AIR LOCK
 48B ENTRANCE DOOR AIR LOCK
 48C ENTRANCE DOOR AIR LOCK
 52 ALARM & SIGNAL-ELEC.HORN
 52A ALARM & SIGNAL-ELEC.HORN
 53 ALARM & SIGNAL-ELEC.HORN
 53B WIPER & WASHER SYSTEM
 53C WIPER & WASHER SYSTEM
 53E WIPER & WASHER SYSTEM
 53J WIPER & WASHER SYSTEM
 53K KEYLESS SYSTEM
 55 EXTERIOR LTS-HI BEAM
 57 EXTERIOR LTS-HI BEAM
 57A EXTERIOR LTS-HI BEAM
 57B A/C & HEAT SYS.-WATER PUMP
 57C A/C & HEAT SYS.-WATER PUMP
 57E A/C & HEAT SYS.-WATER VALV
 58 EXTERIOR LTS-LO BEAM
 58A EXTERIOR LTS-LO BEAM
 58B EXTERIOR LTS-LO BEAM
 59A ENGINE BRAKE SYSTEM
 61 EXTERIOR LTS-24V FEED SW
 61A EXTERIOR LTS-HEAD SIGNAL
 63 EXTERIOR LTS-CLEAR. FEED
 63B EXTERIOR LTS-CLEARANCE
 63C EXT. LTS-MARKER SIGNAL
 63F EXT. LTS-MARKER BLINKER
 64 DRIVER'S FAN SPEED CTR
 64A DRIVER'S FAN SPEED CTR
 64B DRIVER'S FAN SPEED CTR
 65 FOOT DAMPER MOTOR

NO. DESCRIPTION

65A FOOT DAMPER MOTOR
 65D DRIVER'S REC. DAMPER
 66 A/C PASSENGER - ON/OFF
 67A A/C & HEAT SYSTEM
 68 DASH & DEFROST DAMPER MOT
 68A DASH & DEFROST DAMPER MOT
 72 SUN VISOR - FEED
 72A SUN VISOR RH
 72B SUN VISOR RH
 72C SUN VISOR LH
 72D SUN VISOR LH
 76 FUEL TANK GAUGE
 76C LOW FUEL T.T.LT
 76L LOW FUEL T.T.LT
 77A A/C & HEAT SYS. - THERMOST.
 77B A/C SYS. - LIQ. SOL. VALVE
 77C A/C & HEAT SYS.-COMPRESSOR
 77H A/C SYS.-LIQ. SOL. VALVE
 77H A/C & HEAT SYS.-THERMOSTAT
 81 EXTERIOR LTS-STOP SW
 82 EXTERIOR LTS-STOP SIGNAL
 82A EXTERIOR LTS-STOP SIGNAL
 82B EXTERIOR LTS-STOP LTS
 82L EXT. LTS-STOP LTS & CYCLOP
 82R EXTERIOR LTS-STOP LTS
 83 ENG. CTR-MAST. KEY SW ACC.
 84 ENG. CTR-MAST KEY SW START
 84A ENG. CTR-MAST KEY SW START
 84J ENG. CTR-MAST KEY SW START
 85 24V IGNITION SIGNAL
 85A 24V IGN DASH INSTRUMENT.
 85C 24V IGNITION - FEED
 85W WORLD TRANSM. - 24V IGN.
 85X ABS-12V IGN
 85Y ABS-12V IGN
 85Z ABS-12V IGN
 86 ENG. CTR-STARTER SOL SIGN
 86A ENG. CTR-STARTER SOL SIGN
 87B ENGINE CTR-24V IGNITION
 88 ENGINE CTR-RR START SIGNAL
 89 ENGINE CTR-RR START SIGNAL
 90 CONVERTER - CABLE SPARG
 90A ENG. CTR-MAST KEY SW FEED
 90B A/C & H. SYS.-COND FAN MOT
 90B ENG. CTR-MAST KEY SW FEED
 91 PARKING BRAKE SW SIGNAL
 91A DDEC III-FAST IDLE SIGNAL
 91C PARKING BRAKE - T.T.LT
 91J FAST IDLE - JUMPER SW.
 92 BATT. EQUAL.-CHECK BALANCE

NO. DESCRIPTION

93 BATT. EQUALIZ.-CHECK LO/HI
 95A ENG. BRAKE & RETARDER SYS.
 95B ENG. BRAKE & RETARDER SYS.
 97 TACHOMETER SIGN.-NOT USED
 101 WORLD TR.- LO SIGN SOL.LO
 102 WORLD TRANSM.-SOL. SUPPLY
 103 WORLD TRANSM.- B.SOL.LO
 104 LEVEL-LOW SYS- DR'S SOL.
 104 WORLD TR. -SOL. FORWARD
 105W WORLD TR-SOL.-RET.OIL TT.LT
 107 WORLD TR.-LOCKUP SOL. HI
 108 WORLD TR.-LOCKUP SOL.
 110 WORLD TR.-LOCKUP SOL. LO
 112 WORLD TR.-SPARE OUTPUT (+)
 112 WORLD TR.-SPARE OUTPUT (+)
 113W WORLD TR.-REVERSE WARNING
 114 WORLD TR.-SPARE OUTPUT (-)
 114 INTERIOR LT-DASH LT RHEOS.
 114A INTERIOR LT-DASH LT RHEOS.
 114B INT. LT-DASH LT RHEOST.FEED
 115 DDEC III-COOLANT LEVEL
 115W WORLD TR.-DO NOT SHIFT SIGN
 116 WORLD TR.-LO SIGNAL SOL. HI
 116B A/C & HEAT SYSTEM-DR'S HTR
 116C A/C SYS.-TRIG. DEFROST
 119 WORLD TRANSM-ENGINE BRAKE
 120 WORLD TRANSM-SOL. C1
 121 WORLD TRANSM-SOL.GRD 2
 123 WORLD TR.-NEUTRAL START
 123A ALARM & SIGNAL-FIRE DETECT.
 123B ALARM & SIGNAL-FIRE DETECT.
 124 WORLD TR.-THROTTLE (HI)
 124A WORLD TRANSM-SENSOR PWR
 125 WORLD TR-RETARDER INDICAT.
 125W WORLD TR-RETARDER INDICAT.
 126 WORLD TR.-LUBE PRESS SW.
 126 24VIGN-LEV.LOW & WORLD TR.
 126F LEVEL LOW SYSTEM
 126H SPEED SIGN 5NC - NOT USED
 126W WORLD TRANSM-NOT USED
 127 24HW DR'S LT PREHEAT & HVAC
 128 WORLD TRANSM-SOL. C2
 129 WORLD TRANSM-SOL. C5
 130 WORLD TRANSM-SOL. GRD 3
 131 WORLD TRANSM-SOL.C4
 132 WORLD TRANSM-ENGINE BRAKE
 132A LEVEL LOW SYSTEM
 132B LEVEL LOW SYSTEM
 132C LEVEL LOW SYSTEM
 132D LEVEL LOW SYSTEM

CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
132E	LEVEL LOW SYSTEM	147A	DAYTIME LST-ALT.SIGNAL	172	WORLD TRANSM-SHIFTER	295	KEYLESS SYS-LED INDICATOR
132F	LEVEL LOW SYSTEM	147C	ETHER COLD START	173	WORLD TRANSM-SHIFTER	417	DDEC-LIMIT SPEED GOVERNOR
135	WORLD TRANSM-RET.TEMP.	148	ABS SYSTEM-VALVE	174	WORLD TRANSM-SHIFTER	419	DDEC -CHEK ENGINE LIGHT
135A	WORLD TR.-RES MODULE RET.	148	WORLD TR.-OUTPUT SPEED LO	175A	WORLD TRANSM-SHIFTER	439	DDEC-12V IGNITION
135B	A/C & HEAT SYS.-AIR SENSOR	149	WORLD TR.-TURBINE SPEED HI	176	WORLD TRANSM-SHIFTER	451	DDEC-A/C FAN CLUTCH
135C	A/C & HEAT SYS.-AIR SENSOR	149	ABS SYSTEM-SENSOR	180	WORLD TRANSM-SHIFTER	505	DDEC-TACHOMETER DRIVE
136A	WORLD TRANSM-12V BATTERY	149A	ABS SYSTEM	180	OUTSIDE TEMP. DISPLAY	509	DDEC-STOP ENGINE LIGHT
136AA	WORLD TRANSM-SHIFTER PWR	150	WORLD TR.-ENGINE SPEED LO	180A	OUTSIDE TEMP. DISPLAY	510	DDEC-FAST IDLE SIGNAL
136V	WORLD TRANSM-12V BATTERY	150	DDEC III-ECM BATTERY GRD	180A	WORLD TRANSM-SHIFTER	524	DDEC-ENGINE BRAKEDISABLE
136W	WORLD TRANSM-12V BATTERY	150A	DDEC III-ECM BATTERY GRD	180B	OUTSIDE TEMP. DISPLAY	525	DDEC-FAST IDLE SIGNAL
137	WORLD TRANSM-RETARDER	151	DDEC III-ECM BATTERY GRD	180C	OUTSIDE TEMP. DISPLAY	528	DDEC-STOP ENG. OVERRIDE
137	RR VIEW MIRROR	151	ABS SYSTEM-SPARE	181	FROZEN POINT T.T.LT	531	DDEC-CRUISE CLUTCH CUT OUT
137A	RR VIEW MIRROR	152	ABS SYSTEM-SPARE	181A	THERMOMETER INSIDE SENSOR	540	DDEC-CRUISE ENABLE T.T.LT
137B	RR VIEW MIRROR	153	ELECTRICAL DRIVER'S SEAT	181B	THERMOMETER INSIDE SENSOR	541	DDEC-CRUISE SET SW
137C	RR VIEW MIRROR	154	WORLD TRANSM-ABS INPUT (-)	181C	THERMOMET. OUTSIDE SENSOR	542	INPUT PARK BRAKE INTERLOCK
137D	RR VIEW MIRROR	156A	ABS SYSTEM-FEED	181D	THERMOMET. OUTSIDE SENSOR	543	DDEC-CRUISE STOP SW CUT IN
137D	RR VIEW MIRROR	157B	ABS SYSTEM	195	WORLD TRANSM-TRANS ID	544	DDEC-CRUISE ON/OFF SW
137E	RR VIEW MIRROR	159	WORLD TRANSM-DIAGNOSTIC	197	FUEL WATER FILTER	545	DDEC-CRUISE RESUME SW
137F	RR VIEW MIRROR	160	ALARM & SIGN.-TAG PRESS SW	197A	FUEL WATER FILTER	555	DDEC-FAN CLUTCH SPEED#1
137H	RR VIEW MIRROR	161B	WORLD TRANSM-SIGNALGRD	201	WORLD TRANSM-SPARE	556	DDEC-VEHICLE SPEED (+)
137J	RR VIEW MIRROR	162	WORLD TRANSM-PRESS. SW C3	202	WORLD TRANSM-SPARE	557	DDEC-VEHICLE SPEED (-)
137K	RR VIEW MIRROR	163	WORLD TR.-RETARDER ENABLE	203	WORLD TRANSM-SPARE	563	DDEC-FAN CLUTCH SPEED#2
137L	RR VIEW MIRROR	164	WORLD TR.-RET. ACTUAT. SIGN	204	WORLD TRANSM-SPARE	564	DDEC-DIGTAL OUTPUT
137M	RR VIEW MIRROR FEED	165	WORLD TR.-OIL LEVEL SIGNAL	214	WORLD TR.-BACK-UP SIGNAL	565	DDEC-ENGINE BRAKE ACTIVE
137R	WORLD TRANSM-RETARDER	166B	A/C & HEAT SYS.-EVAP. MOD.	231	WORLD TR.-NEUTRAL SIGN GRD	583	DDEC-ENGINE BRAKE 4 CYL.
137T	MIRROR HEAT SW-JUMPER	167	WORLD TR.-SPEED 5N0, 5NC	240	DDEC III-ECM 12V FEEDING	900	DDEC-DATA LINK (+)
138	WORLD TR.-RETARDER TEMP	169	WORLD TRANSM-INPUT 12	241	DDEC III-ECM 12V FEEDING	901	DDEC-DATA LINK (-)
138	ABS SYSTEM-SENSOR	170	WORLD TRANSM-SHIFTER	260	WINDOW AJAR-T.T.LT	908	DDEC-HYDRAU. PWM#1 OUTPUT
138A	ABS SYSTEM-SENSOR	170C	LUGGAGE DOOR LOCK-T.T.LT	270	KEYLESS MODULE-FEED	916	DDEC-SENSOR SUPPLY (5VDC)
139	ABS SYSTEM-VALVE	170D	LUGGAGE DOOR LOCK-FEED	270A	ENTRANCE DOOR AIR LOCK	952	DDEC-SENSOR RETURN
139	WORLD TR.-OUTPUT SPEED HI	170E	LUG. DOOR LOCK-UNLOCK SIGN	272	KEYLESS SYSTEM-KEYBOARD	953	DDEC-BATTERY GRD
140	WORLD TR.-OUTPUT SPEED LO	170F	LUGGAGE DOOR LOCK-FEED	274	KEYLESS SYSTEM-KEYBOARD	979	DDEC-ENGINE BRAKE 2 CYL.
140	ABS SYSTEM-VALVE	170G	LUGGAGE DOOR LOCK-FEED	276	KEYLESS SYSTEM-KEYBOARD	2123	FLASHER SIGNAL LTS
141	ABS SYSTEM-VALVE	170H	LUGGAGE DOOR-LOCK SIGN	277	KEYLESS SYS-DR'V LTS SIGN		
141	WORLD TR.-ENGINE SPEED HI	170K	LUGGAGE DOOR-LOCK SIGN	278	KEYLESS SYSTEM-KEYBOARD		
142	ABS SYSTEM-VALVE	170LA	LUGG DOOR LOCK-T.T.LT WE	280	KEYLESS SYSTEM-KEYBOARD		
143	ABS SYSTEM-SENSOR	170LB	LUGG DOOR LOCK-T.T.LT WE	283	KEYLESS SYSTEM-ANTI-THEFT		
143A	ABS SYSTEM-SENSOR	170L	LUGG DOOR LOCK-SIGN T.T.LT	283A	KEYLESS SYS-ENT. DOOR SIGN		
143A	WORLD TRANS-BATERY GRD	170M	LUGG DOOR LOCK-SIGN T.T.LT	284A	KEYLESS SYSTEM		
143W	WORLD TRANSM-BATTERY GRD	170N	LUGG DOOR LOCK-SIGN T.T.LT	285	KEY. SYS-UNLOCK ENT. DOOR		
143X	WORLD TRANSM-BATTERY GRD	170P	LUGG DOOR LOCK-SIGN T.T.LT	285B	KEYLESS SYSTEM		
144	ABS SYSTEM-SENSOR	170R	LUGG DOOR LOCK-ENTR. DOOR	285C	KEYLESS SYSTEM		
144A	ABS SYSTEM-SENSOR	170S	LUGG DOOR LOCK-SIGN T.T.LT	286	LUGG DOOR LOCK-ENT. DOOR		
145	ABS SYSTEM-VALUE	170T	LUGG DOOR LOCK-SIGN T.T.LT	286A	KEYLESS SYS-CENTER DOOR		
146	ABS SYSTEM-VALUE	170V	LUGG DOOR LOCK-SIGN T.T.LT	290	FAN CLUTCH RADIATOR-FEED		
146A	WORLD TRANSM-12V IGNITION	170W	LUGGAGE DOOR LOCK-FEED	290A	FAN CLUTCH RADIATOR-FEED		
146AA	WORLD TRANSM-DIAGN.CONN.	170X	LUGG DOOR LOCK-SIGN T.T.LT	291	FAN CLUTCH RADIATOR SPD 1		
147	WORLD TRANSM-OIL TEMP	170Y	LUGGAGE DOOR LOCK-FEED	292	FAN CLUTCH RADIATOR SPD 2		
147	ABS SYSTEM-VALVE	170Z	LUGGAGE DOOR LOCK	292A	FAN CLUTCH RADIATOR SPD 2		
147A	ETHER COLD START	171	WORLD TRANSM-SHIFTER	294	KEYLESS SYSTEM-ANTI-THEFT		

CIRCUIT NUMBER CODE

N0.	DESCRIPTION	N0.	DESCRIPTION	N0.	DESCRIPTION	N0.	DESCRIPTION
-----	-------------	-----	-------------	-----	-------------	-----	-------------

CIRCUIT NUMBER CODE

N0. DESCRIPTION

IPJ1 CLUSTER - BULB TEST POS
 IPJ2 CLUSTER - BULB TEST NEG.
 IPJ3 CLUSTER - SV SIGNAL
 IPJ4 CLUSTER - RETURN TO ZERO
 IPJ5 CLUSTER - FUEL LEVEL GAUGE
 IPJ6 CLUSTER - BULB TEST POS.
 IPJ7 CLUSTER - BULB TEST NEG.
 IPJ8 CLUSTER - MASTER WARNING
 LX5 CLUSTER - COMPUTER MODE
 LX6 CLUSTER - COMPUTER DOWN
 LX7 CLUSTER - COMPUTER SET
 LX16 CLUSTER - COMPUTER UP
 LX21 CLUSTER - COMPUTER COM.
 RT T.T.L.T. MODULE - TEST SW.
 SP1 SPARE WIRE
 SP2 SPARE WIRE
 SP3 SPARE WIRE
 SP4 SPARE WIRE
 SP5 SPARE WIRE
 SP6 SPARE WIRE
 SP7 SPARE WIRE
 SP8 SPARE WIRE
 SP9 SPARE WIRE
 SP10 SPARE WIRE
 SP11 SPARE WIRE
 SP12 SPARE WIRE
 SP13 SPARE WIRE
 SP14 SPARE WIRE
 SP15 SPARE WIRE
 SP16 SPARE WIRE
 SP17 SPARE WIRE
 SP18 SPARE WIRE
 SP19 SPARE WIRE
 SP21 SPARE WIRE
 SP23 SPARE WIRE
 SP24 SPARE WIRE
 SP25 SPARE WIRE
 SP30 SPARE WIRE
 SP33 SPARE WIRE
 SP38 SPARE WIRE
 SP40 SPARE WIRE
 SP41 SPARE WIRE
 SP42 SPARE WIRE
 SP43 SPARE WIRE
 SP45 SPARE WIRE
 SP48 SPARE WIRE
 SP56 SPARE WIRE
 SP57 SPARE WIRE
 SP60 SPARE WIRE
 SP61 SPARE WIRE

N0. DESCRIPTION

SP62 SPARE WIRE
 SP63 SPARE WIRE
 SP69 SPARE WIRE
 SP70 SPARE WIRE
 SP71 SPARE WIRE
 SP72 SPARE WIRE
 SP74 SPARE WIRE
 SP83 SPARE WIRE
 SP84 SPARE WIRE
 SP114 SPARE WIRE
 SP115 SPARE WIRE
 SP116 SPARE WIRE
 SP117 SPARE WIRE
 TW1 SPR. W. TWISTER 50T/M WITH TW2
 TW2 SPR. W. TWISTER 50T/M WITH TW1
 0 A/C EVAP.CPT - CPT GRD
 0 JUMPER - CLUTCH SIGN.
 0 RJB - INSIDE GRD
 0A FR. ROOF ACC. GRD
 0A W0,W5 EVAP. MOTOR FAN GRD
 0B A/C - CONDENSER GRD
 0B ENG. CPT ACC. GRD
 0BE OV BATTERY MONITOR
 0C R.J.B. - GRB
 0C F.R. SERV. CPT-ACCESSOIRIES
 0C1 ENTRANCE DOOR KEYLESS
 0C4 F.J.B. GRD
 0CJ CRUISE SW. JUMPER
 0D A/C JCT BOX - COND FAN GRD
 0E WE EVAP. MOTOR FAN GRD
 0F SILENT 1000
 0G ABS GRD CX1
 0H ENG. CPT. - ACC. GRD
 0L ENG.CPT -CLEAR.LTS RR ROOF
 0L R.J.B. - GRD
 0L FR - SIDE MARK. & FLASH GRD
 0L1 ENG.CPT-SIDE MARK. & FL. GRD
 0L2 HEAD LTS
 0L3 FR.SERV.DR. & ENT.DOOR GRD ACC.
 0L4 FOG LTS RESISTOR GRD
 0L5 LH CONSOL - ACC. GRD
 0LV WINDSHIELD WASHER LEVEL
 0M WIPER 2 MIRROR MOTOR
 0M3 DEFROST GRD
 0M4 HORN & DR'S WINDOW LIFTER
 0M5 SUN VISOR MOTOR
 0M6 UPPER FAN DEFROST
 0M7 DR'S WIND.LIFT. & RH MIR. SW
 0M7A LH MIRROR SW.
 0T SPEED SW. CONNECTOR

N0. DESCRIPTION

0T1 DASH ACC.
 0T2 CLUSTER ACC.
 0T2 WINDOW AWNING
 0T3 ALTERNATOR MODULE
 0T4 12V OUTLET - CTR MODULE
 0T5 FS-HVAC DASH MODULE. GND
 0W FJB - TRANSM. RLY GRD
 0W TRANSM ACC. - FR.SERV. CPT
 0Y1 ASB SYSTEM-GRD
 0Y2 ASB SYSTEM-GRD
 0Y3 ASB SYSTEM-GRD
 0Y4 ASB SYSTEM-GRD
 0Y5 ASB SYSTEM-GRD
 0Y6 ASB SYSTEM-GRD
 00A BATTERY GRD-DASH ACC.
 2A A/C & HEAT SYSTEM
 2B A/C & HEAT SYSTEM
 2D A/C & HEAT SYSTEM
 2E A/C & HEAT SYSTEM
 2F A/C & HEAT SYSTEM - EVAP. FAN
 2H A/C & HEAT SYS-LO-PRESS SW.
 2L A/C & HEAT SYS-HI-PRESS SW.
 3A A/C & HEAT SYSTEM-EVAPORATOR
 5N0 SPEED SIGNAL HIGHER 5MPH
 5NC SPEED SIGNAL LOWER 5MPH
 6 EXTERIOR LTS-DOCKING
 6A EXTERIOR LTS-CORNERING
 6B1 EXTERIOR LTS-CORNERING RH
 6C1 EXTERIOR LTS-CORNERING RH
 6D EXTERIOR LTS-DOCKING
 9 INTERIOR LTS-ENGINE CPT
 9 INTERIOR LTS-RR JCT BOX
 9F INTERIOR LTS - FR-SERV. CPT
 10 A/C & HEAT SYSTEM -LO PRES.
 10 INTERIOR LTS-LUGGAGE CPT
 10 INTERIOR LTS-FR SERV. CPT
 10A INTERIOR LTS-LUGGAGE CPT
 10B INTERIOR LTS-LUGGAGE CPT
 10C INTERIOR LTS-LUGGAGE CPT
 10D INTERIOR LTS-LUGGAGE CPT
 10E INTERIOR LTS-LUGGAGE CPT
 10R CENTER DOOR T.T.L.T.
 12A FR JCT PANEL 12V DISC SW
 12B FR JCT PANEL 12V DISC SW
 12BAT 12V HOT-WIRE ACC - JCT BLK
 12BE 12V BATTERY MONITOR
 12C FR JCT PANEL 12V DISC SW
 12C RR JCT BOX 12V DISC SW
 12D FR JCT PANEL 12V HOT WIRE
 12DD FR JCT PANEL 12V HOT WIRE

N0. DESCRIPTION

12DDR RR JCT BOX 12V HOT WIRE DDR CON
 12DT T.T. LT MODULE
 12E RR JCT BOX 12V DISC SW
 12F FR JCT PANEL 12V DISC SW
 12G FR JCT PANEL 12V DISC SW
 12H 12V DASH ACCESS.
 12I RR JCT BOX 12V IGNITION
 12I FR JCT PANEL 12V IGNITION
 12IA FR JCT PANEL 12V IGNITION
 12IA RR JCT PANEL 12V IGNITION
 12IE ABS-FR JCT PANEL 12V IGN.
 12IF FR JCT PANEL 12V IGNITION
 12J FR JCT PANEL 12V DISC.SW.
 12JA FR JCT PANEL 12V DISC.SW.
 12K FR JCT PANEL 12V DISC.SW.
 12LX 12V HOTWIRE CLUST. & MOD A/C
 12LX CLUSTER 12V HOT WIRE
 12M ABS-FR JCT PANEL 12V DISC.SW.
 12P 12V POWER OUTLET
 12T RR JCT BOX 12V DISC SW
 12VD 12V HOT WIRE
 12VI RR JCT PANEL 12V IGNITION
 12W 12V HOT WIRE DDEC III FEED
 15 EXT. LTS-MULTI FUNC LEVEL
 15 WIPER & WASHER SYSTEM
 16 SPEEDOMETER (+)
 16T SPEED SW SIGNAL IN (+)
 17 EXTERIOR LTS-FLASHER UNIT
 17A EXTERIOR LTS-FLASHER UNIT
 17C JUMPER LTS SW. - HAZARD
 18 UPPER FAN DEFROST
 19 UPPER FAN DEFROST
 20 SPEEDOMETER SIGNAL (-)
 20T SPEED SW SIGNAL IN (-)
 21 EXTERIOR LTS-DIRECT. LH
 21A EXTERIOR LTS-LH
 21A EXTERIOR LTS-CORNERING-LH
 21B EXTERIOR LTS-DIRECT. LH
 21BB EXTERIOR LTS-DIRECT. LH
 21H EXTERIOR LTS-HAZARD SIGNAL
 21M AUX. LTS - DIRECTIONAL LH
 21P CORN. LTS - DIRECT. SIGN. LH
 23 EXTERIOR LTS-DIRECT. RH
 23A EXTERIOR LTS-DIRECT. RH
 23A EXTERIOR LTS - CORNER. LTS
 23BB EXTERIOR LTS - DIRECT. RH
 23C EXTERIOR LTS-CORNERING RH
 23H EXTERIOR LTS-HAZARD SIGNAL
 23M AUX LTS - DIRECTIONAL RH
 23P CORN. LTS - DIRECT SIGN RH

CIRCUIT NUMBER CODE

NO. DESCRIPTION

24 FR JCT PANEL 24V DISC. SW.
24A RR JCT PANEL 24V DISC. SW
24A FR JCT PANEL 24V DISC. SW
24BE BATTERY MONITOR
24C FR JCT PANEL 24V DISC SW
24D FR JCT BOX 24V HOT WIRE
24F RR JCT PANEL 24V DISC SW
24G RR JCT PANEL 24V DISC SW
24I FR JCT PANEL 24V IGNITION
24I RR JCT PANEL 24V IGNITION
24IA FR JCT PANEL 24V IGNITION
24IB FR JCT PANEL 24V IGNITION
24IF FR JCT PANEL 24V IGNITION
24P FR JCT PANEL 24V DISC SW
24R 24V RR JCT BLK TO STARTER
24T RR JCT PANEL 24V DISC SW
24VD 24V HOT WIRE FEED
25A TT.LT. MODULE - LED
25A1 BOSCH ALTERNATOR - WE ONLY
25A2 BOSCH ALTERNATOR - WE ONLY
25B EXT. LTS-DAYTIME RUN LTS
25D GENERATOR SKTN. ON - HVAC
25L GENERATOR SIGNAL TO RLY R88
26 DR'S & ENT. WINDOW LIFTER
26A CIGAR LIGHT. & POW.OUTLET LH
26B DRIVER'S WINDOW LIFTER
26C DRIVER'S WINDOW LIFTER
26D ENT. DOOR WINDOW LIFTER
26E ENT. DOOR WINDOW LIFTER
26F ENT. DOOR WINDOW LIFTER
28H T.T.LT MODULE - HI A/C PRES.
28T T.T.LT MODULE - LO A/C PRES.
29 A/C & HEAT SYS.-DR'S HTR
29H HVAC DASH MODILE
31B WIPER & WASHER SYSTEM
31C WIPER & WASHER SYSTEM
32 EXTERIOR LTS-BACK-UP
32B EXTERIOR LTS-BACK-UP
32F BACK-UP CANCEL SW.
32G BACK-UP ALARM
32J BACK-UP SW. - JUMPER
35B DRIVER'S LTS - KEYLESS SIGN
36 ENGINE BRAKE SYSTEM
36A ENGINE BRAKE SYSTEM & RET.
39 INTERIOR LTS-DRIVER'S LTS
39B INTERIOR LTS-DRIVER'S LTS
39C INTERIOR LTS-DRIVER'S LTS
39D INTERIOR LTS - FRIVER' LTS
39K DR'S LTS - KEYLESS SIGN.
41 A/C SYS.-COND FAN MOTOR

NO. DESCRIPTION

41A A/C SYS.-COND FAN MOTOR
41B A/C SYS.-COND FAN MOTOR
42A A/C SYS.-COND FAN MOTOR
43 A/C & HEAT SYS. - FAN SPEED
44 EXTERIOR LTS-FOG
44A EXTERIOR LTS-FOG
44B EXTERIOR LTS-FOG
44C EXT. LTS-FOG,HVAC & HAZ. SW
44D EXTERIOR LTS - FOG
44E EXTERNAL LTS - FOG
45A A/C & HEAT SYSTEM FULL AIR
45B A/C & HEAT SYS.-WATER PUMP
45C A/C & HEAT SYS.-WATER VALV
45D A/C & HEAT SYS.-WATER VALV
45E A/C & HEAT SYS.-WATER PUMP
45G A/C & HEAT SYS.-DR'S HTR
45H A/C & HEAT SYS.- EVAP.FAN
45J A/C & HEAT SYS.-WATER PUMP
46 EXTERIOR LTS-MARKER
46A EXTERIOR LTS-AUX LTS RESIS.
46C EXTERIOR LTS-MARKER
46D EXTERIOR LTS-AUX LTS RESIS.
48A ENTRANCE DOOR AIR LOCK
48B ENTRANCE DOOR AIR LOCK
48C ENTRANCE DOOR AIR LOCK
52 ALARM & SIGNAL-ELEC.HORN
52A ALARM & SIGNAL-ELEC.HORN
53 ALARM & SIGNAL-ELEC.HORN
53B WIPER & WASHER SYSTEM
53C WIPER & WASHER SYSTEM
53E WIPER & WASHER SYSTEM
53J WIPER & WASHER SYSTEM
53K KEYLESS SYSTEM
55 EXTERIOR LTS-HI BEAM
57 EXTERIOR LTS-HI BEAM
57A EXTERIOR LTS-HI BEAM
57B A/C & HEAT SYS.-WATER PUMP
57C A/C & HEAT SYS.-WATER PUMP
57E A/C & HEAT SYS.-WATER VALV
58 EXTERIOR LTS-LO BEAM
58A EXTERIOR LTS-LO BEAM
58B EXTERIOR LTS-LO BEAM
59A ENGINE BRAKE SYSTEM
61 EXTERIOR LTS-24V FEED SW
61A EXTERIOR LTS-HEAD SIGNAL
63 EXTERIOR LTS-CLEAR. FEED
63B EXTERIOR LTS-CLEARANCE
63C EXT. LTS-MARKER SIGNAL
63F EXT. LTS-MARKER BLINKER
64 DRIVER'S FAN SPEED CTR

NO. DESCRIPTION

64A DRIVER'S FAN SPEED CTR
64B DRIVER'S FAN SPEED CTR
65 FOOT DAMPER MOTOR
65A FOOT DAMPER MOTOR
65D DRIVER'S REC. DAMPER
66 A/C PASSENGER - ON/OFF
67A A/C & HEAT SYSTEM
68 DASH & DEFROST DAMPER MOT
68A DASH & DEFROST DAMPER MOT
72 SUN VISOR - FEED
72A SUN VISOR RH
72B SUN VISOR RH
72C SUN VISOR LH
72D SUN VISOR LH
76 FUEL TANK GAUGE
76C LOW FUEL T.T.LT
76L LOW FUEL T.T.LT
77A A/C & HEAT SYS. - THERMOST.
77B A/C SYS. - LIQ. SOL. VALVE
77C A/C & HEAT SYS.-COMPRESSOR
77H A/C SYS.-LIQ. SOL. VALVE
77H A/C & HEAT SYS.-THERMOSTAT
81 EXTERIOR LTS-STOP SW
82 EXTERIOR LTS-STOP SIGNAL
82A EXTERIOR LTS-STOP SIGNAL
82B EXTERIOR LTS-STOP LTS
82L EXT. LTS-STOP LTS & CYCLOP
82R EXTERIOR LTS-STOP LTS
83 ENG. CTR-MAST. KEY SW ACC.
84 ENG. CTR-MAST KEY SW START
84A ENG. CTR-MAST KEY SW START
84J ENG. CTR-MAST KEY SW START
85 24V IGNITION SIGNAL
85A 24V IGN DASH INSTRUMENT.
85C 24V IGNITION - FEED
85W WORLD TRANSM. - 24V IGN.
85X ABS-12V IGN
85Y ABS-12V IGN
85Z ABS-12V IGN
86 ENG. CTR-STARTER SOL SIGN
86A ENG. CTR-STARTER SOL SIGN
87B ENGINE CTR-24V IGNITION
88 ENGINE CTR-RR START SIGNAL
89 ENGINE CTR-RR START SIGNAL
90 CONVERTER - CABLE SPARG
90A ENG. CTR-MAST KEY SW FEED
90B A/C & H. SYS.-COND FAN MOT
90B ENG. CTR-MAST KEY SW FEED
91 PARKING BRAKE SW SIGNAL
91A DDEC III-FAST IDLE SIGNAL

NO. DESCRIPTION

91C PARKING BRAKE - T.T.LT
91J FAST IDLE - JUMPER SW.
92 BATT. EQUAL.-CHECK BALANCE
93 BATT. EQUALIZ.-CHECK LO/HI
95A ENG. BRAKE & RETARDER SYS.
95B ENG. BRAKE & RETARDER SYS.
97 TACHOMETER SIGN.-NOT USED
101 WORLD TR.- LO SIGN SOL.LO
102 WORLD TRANSM.-SOL. SUPPLY
103 WORLD TRANSM.- B.SOL.LO
104 LEVEL-LOW SYS- DR'S SOL.
104 WORLD TR. -SOL. FORWARD
105W WORLD TR.-SOL.-RET.OIL TT.LT
107 WORLD TR.-LOCKUP SOL. HI
108 WORLD TR.-LOCKUP SOL.
110 WORLD TR.-LOCKUP SOL. LO
112 WORLD TR.-SPARE OUTPUT (+)
112 WORLD TR.-SPARE OUTPUT (+)
113W WORLD TR.-REVERSE WARNING
114 WORLD TR.-SPARE OUTPUT (-)
114 INTERIOR LT-DASH LT RHEOS.
114A INTERIOR LT-DASH LT RHEOS.
114B INT. LT-DASH LT RHEOST.FEED
115 DDEC III-COOLANT LEVEL
115W WORLD TR.-DO NOT SHIFT SIGN
116 WORLD TR.-LO SIGNAL SOL. HI
116B A/C & HEAT SYSTEM-DR'S HTR
116C A/C SYS.-TRIG. DEFROST
119 WORLD TRANSM-ENGINE BRAKE
120 WORLD TRANSM-SOL. CI
121 WORLD TRANSM-SOL.GRD 2
123 WORLD TR.-NEUTRAL START
123A ALARM & SIGNAL-FIRE DETECT.
123B ALARM & SIGNAL-FIRE DETECT.
124 WORLD TR.-THROTTLE (HI)
124A WORLD TRANSM-SENSOR PWR
125 WORLD TR-RETARDER INDICAT.
125W WORLD TR-RETARDER INDICAT.
126 WORLD TR.-LUBE PRESS SW.
126 24VIGN-LEV.LOW & WORLD TR.
126F LEVEL LOW SYSTEM
126H SPEED SIGN 5NC - NOT USED
126W WORLD TRANSM-NOT USED
127 24HW DR'S LT PREHEAT & HVAC
128 WORLD TRANSM-SOL. C2
129 WORLD TRANSM-SOL. C5
130 WORLD TRANSM-SOL. GRD 3
130 EVAP. FAN - POWER CABLE
130A EVAP. FAN - POWER CABLE
131 WORLD TRANSM-SOL.C4

CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
132	WORLD TRANSM-ENGINE BRAKE	146A	WORLD TRANSM-12V IGNITION	170X	LUGG DOOR LOCK-SIGN T.T.LT	291	FAN CLUTCH RADIATOR SPD 1
132A	LEVEL LOW SYSTEM	146AA	WORLD TRANSM-DIAGN.CONN.	170Y	LUGGAGE DOOR LOCK-FEED	292	FAN CLUTCH RADIATOR SPD 2
132B	LEVEL LOW SYSTEM	147	WORLD TRANSM-OIL TEMP	170Z	LUGGAGE DOOR LOCK	292A	FAN CLUTCH RADIATOR SPD 2
132C	LEVEL LOW SYSTEM	147	ABS SYSTEM-VALVE	171	WORLD TRANSM-SHIFTER	294	KEYLESS SYSTEM-ANTI-THEFT
132D	LEVEL LOW SYSTEM	147A	ETHER COLD START	172	WORLD TRANSM-SHIFTER	295	KEYLESS SYS-LED INDICATOR
132E	LEVEL LOW SYSTEM	147A	DAYTIME LST-ALT.SIGNAL	173	WORLD TRANSM-SHIFTER	417	DDEC-LIMIT SPEED GOVERNOR
132F	LEVEL LOW SYSTEM	147C	ETHER COLD START	174	WORLD TRANSM-SHIFTER	419	DDEC -CHEK ENGINE LIGHT
135	WORLD TRANSM-RET.TEMP.	148	ABS SYSTEM-VALVE	175A	WORLD TRANSM-SHIFTER	439	DDEC-12V IGNITION
135A	WORLD TR.-RES MODULE RET.	148	WORLD TR.-OUTPUT SPEED LO	176	WORLD TRANSM-SHIFTER	451	DDEC-A/C FAN CLUTCH
135B	A/C & HEAT SYS.-AIR SENSOR	149	WORLD TR.-TURBINE SPEED HI	180	WORLD TRANSM-SHIFTER	505	DDEC-TACHOMETER DRIVE
135C	A/C & HEAT SYS.-AIR SENSOR	149	ABS SYSTEM-SENSOR	180	OUTSIDE TEMP. DISPLAY	509	DDEC-STOP ENGINE LIGHT
136A	WORLD TRANSM-12V BATTERY	149A	ABS SYSTEM	180A	OUTSIDE TEMP. DISPLAY	510	DDEC-FAST IDLE SIGNAL
136AA	WORLD TRANSM-SHIFTER PWR	150	WORLD TR.-ENGINE SPEED LO	180A	WORLD TRANSM-SHIFTER	524	DDEC-ENGINE BRAKEDISABLE
136V	WORLD TRANSM-12V BATTERY	150	DDEC III-ECM BATTERY GRD	180B	OUTSIDE TEMP. DISPLAY	525	DDEC-FAST IDLE SIGNAL
136W	WORLD TRANSM-12V BATTERY	150A	DDEC III-ECM BATTERY GRD	180C	OUTSIDE TEMP. DISPLAY	528	DDEC-STOP ENG. OVERRIDE
137	WORLD TRANSM-RETARDER	151	DDEC III-ECM BATTERY GRD	181	FROZEN POINT T.T.LT	531	DDEC-CRUISE CLUTCH CUT OUT
137	RR VIEW MIRROR	151	ABS SYSTEM-SPARE	181A	THERMOMETER INSIDE SENSOR	540	DDEC-CRUISE ENABLE T.T.LT
137A	RR VIEW MIRROR	152	ABS SYSTEM-SPARE	181B	THERMOMETER INSIDE SENSOR	541	DDEC-CRUISE SET SW
137B	RR VIEW MIRROR	153	ELECTRICAL DRIVER'S SEAT	181C	THERMOMET. OUTSIDE SENSOR	542	INPUT PARK BRAKE INTERLOCK
137C	RR VIEW MIRROR	154	WORLD TRANSM-ABS INPUT (-)	181D	THERMOMET. OUTSIDE SENSOR	543	DDEC-CRUISE STOP SW CUT IN
137D	RR VIEW MIRROR	156A	ABS SYSTEM-FEED	195	WORLD TRANSM-TRANS ID	544	DDEC-CRUISE ON/OFF SW
137D	RR VIEW MIRROR	157B	ABS SYSTEM	197	FUEL WATER FILTER	545	DDEC-CRUISE RESUME SW
137E	RR VIEW MIRROR	159	WORLD TRANSM-DIAGNOSTIC	197A	FUEL WATER FILTER	555	DDEC-FAN CLUTCH SPEED#1
137F	RR VIEW MIRROR	160	ALARM & SIGN.-TAG PRESS SW	201	WORLD TRANSM-SPARE	556	DDEC-VEHICLE SPEED (+)
137H	RR VIEW MIRROR	161B	WORLD TRANSM-SIGNALGRD	202	WORLD TRANSM-SPARE	557	DDEC-VEHICLE SPEED (-)
137J	RR VIEW MIRROR	162	WORLD TRANSM-PRESS. SW C3	203	WORLD TRANSM-SPARE	563	DDEC-FAN CLUTCH SPEED#2
137K	RR VIEW MIRROR	163	WORLD TR.-RETARDER ENABLE	204	WORLD TRANSM-SPARE	564	DDEC-DIGTAL OUTPUT
137L	RR VIEW MIRROR	164	WORLD TR.-RET. ACTUAT. SIGN	214	WORLD TR.-BACK-UP SIGNAL	565	DDEC-ENGINE BRAKE ACTIVE
137M	RR VIEW MIRROR FEED	165	WORLD TR.-OIL LEVEL SIGNAL	231	WORLD TR.-NEUTRAL SIGN GRD	583	DDEC-ENGINE BRAKE 4 CYL.
137R	WORLD TRANSM-RETARDER	167	WORLD TR.-SPEED 5N0, 5NC	240	DDEC III-ECM 12V FEEDING	900	DDEC-DATA LINK (+)
137T	MIRROR HEAT SW-JUMPER	169	WORLD TRANSM-INPUT 12	241	DDEC III-ECM 12V FEEDING	901	DDEC-DATA LINK (-)
138	WORLD TR.-RETARDER TEMP	170	WORLD TRANSM-SHIFTER	260	WINDOW AJAR-T.T.LT	908	DDEC-HYDRAU. PWM#1 OUTPUT
138	ABS SYSTEM-SENSOR	170C	LUGGAGE DOOR LOCK-T.T.LT	270	KEYLESS MODULE-FEED	916	DDEC-SENSOR SUPPLY (5VDC)
138A	ABS SYSTEM-SENSOR	170D	LUGGAGE DOOR LOCK-FEED	270A	ENTRANCE DOOR AIR LOCK	952	DDEC-SENSOR RETURN
139	ABS SYSTEM-VALVE	170E	LUG. DOOR LOCK-UNLOCK SIGN	272	KEYLESS SYSTEM-KEYBOARD	953	DDEC-BATTERY GRD
139	WORLD TR.-OUTPUT SPEED HI	170F	LUGGAGE DOOR LOCK-FEED	274	KEYLESS SYSTEM-KEYBOARD	979	DDEC-ENGINE BRAKE 2 CYL.
140	WORLD TR.-OUTPUT SPEED LO	170G	LUGGAGE DOOR LOCK-FEED	276	KEYLESS SYSTEM-KEYBOARD	2123	FLASHER SIGNAL LTS
140	ABS SYSTEM-VALVE	170H	LUGGAGE DOOR-LOCK SIGN	277	KEYLESS SYS-DR'V LTS SIGN		
141	ABS SYSTEM-VALVE	170K	LUGGAGE DOOR-LOCK SIGN	278	KEYLESS SYSTEM-KEYBOARD		
141	WORLD TR.-ENGINE SPEED HI	170LA	LUGG DOOR LOCK-T.T.LT WE	280	KEYLESS SYSTEM-KEYBOARD		
142	ABS SYSTEM-VALVE	170LB	LUGG DOOR LOCK-T.T.LT WE	283	KEYLESS SYSTEM-ANTI-THEFT		
143	ABS SYSTEM-SENSOR	170L	LUGG DOOR LOCK-SIGN T.T.LT	283A	KEYLESS SYS-ENT. DOOR SIGN		
143A	ABS SYSTEM-SENSOR	170M	LUGG DOOR LOCK-SIGN T.T.LT	284A	KEYLESS SYSTEM		
143A	WORLD TRANS-BATERY GRD	170N	LUGG DOOR LOCK-SIGN T.T.LT	285	KEY. SYS-UNLOCK ENT. DOOR		
143W	WORLD TRANSM-BATTERY GRD	170P	LUGG DOOR LOCK-SIGN T.T.LT	285B	KEYLESS SYSTEM		
143X	WORLD TRANSM-BATTERY GRD	170R	LUGG DOOR LOCK-ENTR. DOOR	285C	KEYLESS SYSTEM		
144	ABS SYSTEM-SENSOR	170S	LUGG DOOR LOCK-SIGN T.T.LT	286	LUGG DOOR LOCK-ENT. DOOR		
144A	ABS SYSTEM-SENSOR	170T	LUGG DOOR LOCK-SIGN T.T.LT	286A	KEYLESS SYS-CENTER DOOR		
145	ABS SYSTEM-VALUE	170V	LUGG DOOR LOCK-SIGN T.T.LT	290	FAN CLUTCH RADIATOR-FEED		
146	ABS SYSTEM-VALUE	170W	LUGGAGE DOOR LOCK-FEED	290A	FAN CLUTCH RADIATOR-FEED		

CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
-----	-------------	-----	-------------	-----	-------------	-----	-------------

CIRCUIT NUMBER CODE

NO. DESCRIPTION

IPJ1 CLUSTER - BULB TEST POS
 IPJ2 CLUSTER - BULB TEST NEG.
 IPJ3 CLUSTER - SV SIGNAL
 IPJ4 CLUSTER - RETURN TO ZERO
 IPJ5 CLUSTER - FUEL LEVEL GAUGE
 IPJ6 CLUSTER - BULB TEST POS.
 IPJ7 CLUSTER - BULB TEST NEG.
 IPJ8 CLUSTER - MASTER WARNING
 LX5 CLUSTER - COMPUTER MODE
 LX6 CLUSTER - COMPUTER DOWN
 LX7 CLUSTER - COMPUTER SET
 LX16 CLUSTER - COMPUTER UP
 LX21 CLUSTER - COMPUTER COM.
 RT T.T.L.T. MODULE - TEST SW.
 SP1 SPARE WIRE
 SP2 SPARE WIRE
 SP3 SPARE WIRE
 SP4 SPARE WIRE
 SP5 SPARE WIRE
 SP6 SPARE WIRE
 SP7 SPARE WIRE
 SP8 SPARE WIRE
 SP9 SPARE WIRE
 SP10 SPARE WIRE
 SP11 SPARE WIRE
 SP12 SPARE WIRE
 SP13 SPARE WIRE
 SP14 SPARE WIRE
 SP15 SPARE WIRE
 SP16 SPARE WIRE
 SP17 SPARE WIRE
 SP18 SPARE WIRE
 SP19 SPARE WIRE
 SP21 SPARE WIRE
 SP23 SPARE WIRE
 SP24 SPARE WIRE
 SP25 SPARE WIRE
 SP30 SPARE WIRE
 SP33 SPARE WIRE
 SP38 SPARE WIRE
 SP40 SPARE WIRE
 SP41 SPARE WIRE
 SP42 SPARE WIRE
 SP43 SPARE WIRE
 SP45 SPARE WIRE
 SP48 SPARE WIRE
 SP56 SPARE WIRE
 SP57 SPARE WIRE
 SP60 SPARE WIRE
 SP61 SPARE WIRE

NO. DESCRIPTION

SP62 SPARE WIRE
 SP63 SPARE WIRE
 SP69 SPARE WIRE
 SP70 SPARE WIRE
 SP71 SPARE WIRE
 SP72 SPARE WIRE
 SP74 SPARE WIRE
 SP83 SPARE WIRE
 SP84 SPARE WIRE
 SP114 SPARE WIRE
 SP115 SPARE WIRE
 SP116 SPARE WIRE
 SP117 SPARE WIRE
 TW1 SPR. W. TWISTER 50T/M WITH TW2
 TW2 SPR. W. TWISTER 50T/M WITH TW1
 0 A/C EVAP.CPT - CPT GRD
 0 JUMPER - CLUTCH SIGN.
 0 RJB - INSIDE GRD
 0A FR. ROOF ACC. GRD
 0A W0,W5 EVAP. MOTOR FAN GRD
 0AW AWNING WINDOWS
 0B A/C - CONDENSER GRD
 0B ENG. CPT ACC. GRD
 0BE OV BATTERY MONITOR
 0C R.J.B. - GRB
 0C F.R. SERV. CPT-ACCESSOIRES
 0C1 ENTRANCE DOOR KEYLESS
 0C4 F.J.B. GRD
 0CJ CRUISE SW. JUMPER
 0D A/C JCT BOX - COND FAN GRD
 0E WE EVAP. MOTOR FAN GRD
 0F SILENT 1000
 0G ABS GRD CX1
 0H ENG. CPT. - ACC. GRD
 0L ENG.CPT -CLEAR.LTS RR ROOF
 0L R.J.B. - GRD
 0L FR - SIDE MARK. & FLASH GRD
 0L1 ENG.CPT-SIDE MARK. & FL. GRD
 0L2 HEAD LTS
 0L3 FR.SERV.DR. & ENT.DOOR GRD ACC.
 0L4 FOG LTS RESISTOR GRD
 0L5 LH CONSOL - ACC. GRD
 0LV WINDSHIELD WASHER LEVEL
 0M WIPER 2 MIRROR MOTOR
 0M3 DEFROST GRD
 0M4 HORN & DR'S WINDOW LIFTER
 0M5 SUN VISOR MOTOR
 0M6 UPPER FAN DEFROST
 0M7 DR'S WIND.LIFT. & RH MIR. SW
 0M7A LH MIRROR SW.

NO. DESCRIPTION

OP1 A/C COMPRESSOR GRD
 OT SPEED SW. CONNECTOR
 OT1 DASH ACC.
 OT2 CLUSTER ACC.
 OT2 WINDOW AWNING
 OT3 ALTERNATOR MODULE
 OT4 12V OUTLET - CTR MODULE
 OT5 FS-HVAC DASH MODULE. GND
 OT6 FS-DDR GROUND
 OW FJB - TRANSM. RLY GRD
 OW TRANSM ACC. - FR.SERV. CPT
 OY1 ASB SYSTEM-GRD
 OY2 ASB SYSTEM-GRD
 OY3 ASB SYSTEM-GRD
 OY4 ASB SYSTEM-GRD
 OY5 ASB SYSTEM-GRD
 OY6 ASB SYSTEM-GRD
 00A BATTERY GRD-DASH ACC.
 2A A/C & HEAT SYSTEM
 2B A/C & HEAT SYSTEM
 2D A/C & HEAT SYSTEM
 2E A/C & HEAT SYSTEM
 2F A/C & HEAT SYSTEM - EVAP. FAN
 2H A/C & HEAT SYS-LO-PRESS SW.
 2L A/C & HEAT SYS-HI-PRESS SW.
 3A A/C & HEAT SYSTEM-EVAPORATOR
 5N0 SPEED SIGNAL HIGHER 5MPH
 5NC SPEED SIGNAL LOWER 5MPH
 6 EXTERIOR LTS-DOCKING
 6A EXTERIOR LTS-CORNERING
 6B1 EXTERIOR LTS-CORNERING RH
 6C1 EXTERIOR LTS-CORNERING RH
 6D EXTERIOR LTS-DOCKING
 9 INTERIOR LTS-ENGINE CPT
 9 INTERIOR LTS-RR JCT BOX
 9F INTERIOR LTS - FR-SERV. CPT
 10 A/C & HEAT SYSTEM -LO PRES.
 10 INTERIOR LTS-LUGGAGE CPT
 10 INTERIOR LTS-FR SERV. CPT
 10A INTERIOR LTS-LUGGAGE CPT
 10B INTERIOR LTS-LUGGAGE CPT
 10C INTERIOR LTS-LUGGAGE CPT
 10D INTERIOR LTS-LUGGAGE CPT
 10E INTERIOR LTS-LUGGAGE CPT
 10R CENTER DOOR T.T.L.T.
 12A FR JCT PANEL 12V DISC SW
 12B FR JCT PANEL 12V DISC SW
 12BAT 12V HOT-WIRE ACC - JCT BLK
 12BE 12V BATTERY MONITOR
 12C FR JCT PANEL 12V DISC SW

NO. DESCRIPTION

12C RR JCT BOX 12V DISC SW
 12D FR JCT PANEL 12V HOT WIRE
 12DD FR JCT PANEL 12V HOT WIRE
 12DDR RR JCT BOX 12V HOT WIRE DDR CON
 12DT T.T. LT MODULE
 12E RR JCT BOX 12V DISC SW
 12F FR JCT PANEL 12V DISC SW
 12G FR JCT PANEL 12V DISC SW
 12H 12V DASH ACCESS.
 12I RR JCT BOX 12V IGNITION
 12I FR JCT PANEL 12V IGNITION
 12IA FR JCT PANEL 12V IGNITION
 12IA RR JCT PANEL 12V IGNITION
 12IE ABS-FR JCT PANEL 12V IGN.
 12IF FR JCT PANEL 12V IGNITION
 12J FR JCT PANEL 12V DISC.SW.
 12JA FR JCT PANEL 12V DISC.SW.
 12K FR JCT PANEL 12V DISC.SW.
 12LX 12V HOTWIRE CLUST.& MOD A/C
 12LX CLUSTER 12V HOT WIRE
 12M ABS-FR JCT PANEL 12V DISC.SW.
 12P 12V POWER OUTLET
 12T RR JCT BOX 12V DISC SW
 12VD 12V HOT WIRE
 12VI RR JCT PANEL 12V IGNITION
 12W 12V HOT WIRE DDEC III FEED
 15 EXT. LTS-MULTI FUNC LEVEL
 15 WIPER & WASHER SYSTEM
 16 SPEEDOMETER (+)
 16T SPEED SW SIGNAL IN (+)
 17 EXTERIOR LTS-FLASHER UNIT
 17A EXTERIOR LTS-FLASHER UNIT
 17C JUMPER LTS SW. - HAZARD
 18 UPPER FAN DEFROST
 19 UPPER FAN DEFROST
 20 SPEEDOMETER SIGNAL (-)
 20T SPEED SW SIGNAL IN (-)
 21 EXTERIOR LTS-DIRECT. LH
 21A EXTERIOR LTS-LH
 21A EXTERIOR LTS-CORNERING-LH
 21B EXTERIOR LTS-DIRECT. LH
 21BB EXTERIOR LTS-DIRECT. LH
 21H EXTERIOR LTS-HAZARD SIGNAL
 21M AUX. LTS - DIRECTIONAL LH
 21P CORN. LTS - DIRECT. SIGN. LH
 23 EXTERIOR LTS-DIRECT. RH
 23A EXTERIOR LTS-DIRECT. RH
 23A EXTERIOR LTS - CORNER. LTS
 23BB EXTERIOR LTS - DIRECT. RH
 23C EXTERIOR LTS-CORNERING RH

CIRCUIT NUMBER CODE

NO. DESCRIPTION

23H	EXTERIOR LTS-HAZARD SIGNAL
23M	AUX LTS - DIRECTIONAL RH
23P	CORN. LTS - DIRECT SIGN RH
24	FR JCT PANEL 24V DISC. SW.
24A	RR JCT PANEL 24V DISC. SW
24A	FR JCT PANEL 24V DISC. SW
24AW	AWNING WINDOWS
24BE	BATTERY MONITOR
24C	FR JCT PANEL 24V DISC SW
24D	FR JCT BOX 24V HOT WIRE
24F	RR JCT PANEL 24V DISC SW
24G	RR JCT PANEL 24V DISC SW
24I	FR JCT PANEL 24V IGNITION
24I	RR JCT PANEL 24V IGNITION
24IA	FR JCT PANEL 24V IGNITION
24IB	FR JCT PANEL 24V IGNITION
24IF	FR JCT PANEL 24V IGNITION
24P	FR JCT PANEL 24V DISC SW
24R	24V RR JCT BLK TO STARTER
24T	RR JCT PANEL 24V DISC SW
24VD	24V HOT WIRE FEED
25A	TT.LT. MODULE - LED
25A1	BOSCH ALTERNATOR - WE ONLY
25A2	BOSCH ALTERNATOR - WE ONLY
25B	EXT. LTS-DAYTIME RUN LTS
25D	GENERATOR SKTN. ON - HVAC
25L	GENERATOR SIGNAL TO RLY R88
26	DR'S & ENT. WINDOW LIFTER
26A	CIGAR LIGHT. & POW. OUTLET LH
26B	DRIVER'S WINDOW LIFTER
26C	DRIVER'S WINDOW LIFTER
26D	ENT. DOOR WINDOW LIFTER
26E	ENT. DOOR WINDOW LIFTER
26F	ENT. DOOR WINDOW LIFTER
28H	T.T.LT MODULE - HI A/C PRES.
28T	T.T.LT MODULE - LO A/C PRES.
29	A/C & HEAT SYS.-DR'S HTR
29H	HVAC DASH MODILE
31B	WIPER & WASHER SYSTEM
31C	WIPER & WASHER SYSTEM
32	EXTERIOR LTS-BACK-UP
32B	EXTERIOR LTS-BACK-UP
32F	BACK-UP CANCEL SW.
32G	BACK-UP ALARM
32J	BACK-UP SW. - JUMPER
35B	DRIVER'S LTS - KEYLESS SIGN
36	ENGINE BRAKE SYSTEM
36A	ENGINE BRAKE SYSTEM & RET.
39	INTERIOR LTS-DRIVER'S LTS
39B	INTERIOR LTS-DRIVER'S LTS

NO. DESCRIPTION

39C	INTERIOR LTS-DRIVER'S LTS
39D	INTERIOR LTS - FRIVER' LTS
39K	DR'S LTS - KEYLESS SIGN.
41	A/C SYS.-COND FAN MOTOR
41A	A/C SYS.-COND FAN MOTOR
41B	A/C SYS.-COND FAN MOTOR
42A	A/C SYS.-COND FAN MOTOR
43	A/C & HEAT SYS. - FAN SPEED
44	EXTERIOR LTS-FOG
44A	EXTERIOR LTS-FOG
44B	EXTERIOR LTS-FOG
44C	EXT. LTS-FOG,HVAC & HAZ. SW
44D	EXTERIOR LTS - FOG
44E	EXTERNAL LTS - FOG
45A	A/C & HEAT SYSTEM FULL AIR
45B	A/C & HEAT SYS.-WATER PUMP
45C	A/C & HEAT SYS.-WATER VALV
45D	A/C & HEAT SYS.-WATER VALV
45E	A/C & HEAT SYS.-WATER PUMP
45G	A/C & HEAT SYS.-DR'S HTR
45H	A/C & HEAT SYS.- EVAP.FAN
45J	A/C & HEAT SYS.-WATER PUMP
46	EXTERIOR LTS-MARKER
46A	EXTERIOR LTS-AUX LTS RESIS.
46C	EXTERIOR LTS-MARKER
46D	EXTERIOR LTS-AUX LTS RESIS.
48A	ENTRANCE DOOR AIR LOCK
48B	ENTRANCE DOOR AIR LOCK
48C	ENTRANCE DOOR AIR LOCK
52	ALARM & SIGNAL-ELEC.HORN
52A	ALARM & SIGNAL-ELEC.HORN
53	ALARM & SIGNAL-ELEC.HORN
53B	WIPER & WASHER SYSTEM
53C	WIPER & WASHER SYSTEM
53E	WIPER & WASHER SYSTEM
53J	WIPER & WASHER SYSTEM
53K	KEYLESS SYSTEM
55	EXTERIOR LTS-HI BEAM
57	EXTERIOR LTS-HI BEAM
57A	EXTERIOR LTS-HI BEAM
57B	A/C & HEAT SYS.-WATER PUMP
57C	A/C & HEAT SYS.-WATER PUMP
57E	A/C & HEAT SYS.-WATER VALV
58	EXTERIOR LTS-LO BEAM
58A	EXTERIOR LTS-LO BEAM
58B	EXTERIOR LTS-LO BEAM
59A	ENGINE BRAKE SYSTEM
61	EXTERIOR LTS-24V FEED SW
61A	EXTERIOR LTS-HEAD SIGNAL
63	EXTERIOR LTS-CLEAR. FEED

NO. DESCRIPTION

63B	EXTERIOR LTS-CLEARANCE
63C	EXT. LTS-MARKER SIGNAL
63F	EXT. LTS-MARKER BLINKER
64	DRIVER'S FAN SPEED CTR
64A	DRIVER'S FAN SPEED CTR
64B	DRIVER'S FAN SPEED CTR
65	FOOT DAMPER MOTOR
65A	FOOT DAMPER MOTOR
65D	DRIVER'S REC. DAMPER
66	A/C PASSENGER - ON/OFF
67A	A/C & HEAT SYSTEM
68	DASH & DEFROST DAMPER MOT
68A	DASH & DEFROST DAMPER MOT
72	SUN VISOR - FEED
72A	SUN VISOR RH
72B	SUN VISOR RH
72C	SUN VISOR LH
72D	SUN VISOR LH
76	FUEL TANK GAUGE
76C	LOW FUEL T.T.LT
76L	LOW FUEL T.T.LT
77A	A/C & HEAT SYS. - THERMOST.
77B	A/C SYS. - LIQ. SOL. VALVE
77C	A/C & HEAT SYS.-COMPRESSOR
77H	A/C SYS.-LIQ. SOL. VALVE
77H	A/C & HEAT SYS.-THERMOSTAT
81	EXTERIOR LTS-STOP SW
82	EXTERIOR LTS-STOP SIGNAL
82A	EXTERIOR LTS-STOP SIGNAL
82B	EXTERIOR LTS-STOP LTS
82L	EXT. LTS-STOP LTS & CYCLOP
82R	EXTERIOR LTS-STOP LTS
83	ENG. CTR-MAST. KEY SW ACC.
84	ENG. CTR-MAST KEY SW START
84A	ENG. CTR-MAST KEY SW START
84J	ENG. CTR-MAST KEY SW START
85	24V IGNITION SIGNAL
85A	24V IGN DASH INSTRUMENT.
85C	24V IGNITION - FEED
85W	WORLD TRANSM. - 24V IGN.
85X	ABS-12V IGN
85Y	ABS-12V IGN
85Z	ABS-12V IGN
86	ENG. CTR-STARTER SOL SIGN
86A	ENG. CTR-STARTER SOL SIGN
87B	ENGINE CTR-24V IGNITION
88	ENGINE CTR-RR START SIGNAL
89	ENGINE CTR-RR START SIGNAL
90	CONVERTER - CABLE SPARG
90A	ENG. CTR-MAST KEY SW FEED

NO. DESCRIPTION

90B	A/C & H. SYS.-COND FAN MOT
90B	ENG. CTR-MAST KEY SW FEED
91	PARKING BRAKE SW SIGNAL
91A	DDEC III-FAST IDLE SIGNAL
91C	PARKING BRAKE - T.T.LT
91J	FAST IDLE - JUMPER SW.
92	BATT. EQUAL.-CHECK BALANCE
93	BATT. EQUALIZ.-CHECK LO/HI
95A	ENG. BRAKE & RETARDER SYS.
95B	ENG. BRAKE & RETARDER SYS.
97	TACHOMETER SIGN.-NOT USED
101	WORLD TR.- LO SIGN SOL.LO
102	WORLD TR.-SPM.-SOL. SUPPLY
103	WORLD TRANSM.- B.SOL.LO
104	LEVEL-LOW SYS- DR'S SOL.
104	WORLD TR. -SOL. FORWARD
105W	WORLD TR.-SOL.-RET.OIL TT.LT
107	WORLD TR.-LOCKUP SOL. HI
108	WORLD TR.-LOCKUP SOL.
110	WORLD TR.-LOCKUP SOL. LO
112	WORLD TR.-SPM. OUTPUT (+)
112	WORLD TR.-SPARE OUTPUT (+)
113W	WORLD TR.-REVERSE WARNING
114	WORLD TR.-SPARE OUTPUT (-)
114	INTERIOR LT-DASH LT RHEOS.
114A	INTERIOR LT-DASH LT RHEOS.
114B	INT. LT-DASH LT RHEOST.FEED
115	DDEC III-COOLANT LEVEL
115W	WORLD TR.-DO NOT SHIFT SIGN
116	WORLD TR.-LO SIGNAL SOL. HI
116B	A/C & HEAT SYSTEM-DR'S HTR
116C	A/C SYS.-TRIG. DEFROST
119	WORLD TRANSM-ENGINE BRAKE
120	WORLD TRANSM-SOL. CI
121	WORLD TRANSM-SOL.GRD 2
123	WORLD TR.-NEUTRAL START
123A	ALARM & SIGNAL-FIRE DETECT.
123B	ALARM & SIGNAL-FIRE DETECT.
124	WORLD TR.-THROTTLE (HI)
124A	WORLD TRANSM-SENSOR PWR
125	WORLD TR-RETARDER INDICAT.
125W	WORLD TR-RETARDER INDICAT.
126	WORLD TR.-LUBE PRESS SW.
126	24VIGN-LEV.LOW & WORLD TR.
126F	LEVEL LOW SYSTEM
126H	SPEED SIGN 5NC - NOT USED
126W	WORLD TRANSM-NOT USED
127	24HW DR'S LT PREHEAT & HVAC
128	WORLD TRANSM-SOL. C2
129	WORLD TRANSM-SOL. C5

CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
130	WORLD TRANSM-SOL. GRD 3	144	ABS SYSTEM-SENSOR	170S	LUGG DOOR LOCK-SIGN T.T.LT	286	LUGG DOOR LOCK-ENT. DOOR
130	EVAP. FAN - POWER CABLE	144A	ABS SYSTEM-SENSOR	170T	LUGG DOOR LOCK-SIGN T.T.LT	286A	KEYLESS SYS-CENTER DOOR
130A	EVAP. FAN - POWER CABLE	145	ABS SYSTEM-VALVE	170V	LUGG DOOR LOCK-SIGN T.T.LT	290	FAN CLUTCH RADIATOR-FEED
131	WORLD TRANSM-SOL.C4	146	ABS SYSTEM-VALVE	170W	LUGGAGE DOOR LOCK-FEED	290A	FAN CLUTCH RADIATOR-FEED
132	WORLD TRANSM-ENGINE BRAKE	146A	WORLD TRANSM-12V IGNITION	170X	LUGG DOOR LOCK-SIGN T.T.LT	291	FAN CLUTCH RADIATOR SPD 1
132A	LEVEL LOW SYSTEM	146AA	WORLD TRANSM-DIAGN.CONN.	170Y	LUGGAGE DOOR LOCK-FEED	292	FAN CLUTCH RADIATOR SPD 2
132B	LEVEL LOW SYSTEM	147	WORLD TRANSM-OIL TEMP	170Z	LUGGAGE DOOR LOCK	292A	FAN CLUTCH RADIATOR SPD 2
132C	LEVEL LOW SYSTEM	147	ABS SYSTEM-VALVE	171	WORLD TRANSM-SHIFTER	294	KEYLESS SYSTEM-ANTI-THEFT
132D	LEVEL LOW SYSTEM	147A	ETHER COLD START	172	WORLD TRANSM-SHIFTER	295	KEYLESS SYS-LED INDICATOR
132E	LEVEL LOW SYSTEM	147A	DAYTIME LST-ALT.SIGNAL	173	WORLD TRANSM-SHIFTER	417	DDEC-LIMIT SPEED GOVERNOR
132F	LEVEL LOW SYSTEM	147C	ETHER COLD START	174	WORLD TRANSM-SHIFTER	419	DDEC -CHEK ENGINE LIGHT
135	WORLD TRANSM-RET.TEMP.	148	ABS SYSTEM-VALVE	175A	WORLD TRANSM-SHIFTER	439	DDEC-12V IGNITION
135A	WORLD TR.-RES MODULE RET.	148	WORLD TR.-OUTPUT SPEED LO	176	WORLD TRANSM-SHIFTER	451	DDEC-A/C FAN CLUTCH
135B	A/C & HEAT SYS.-AIR SENSOR	149	WORLD TR.-TURBINE SPEED HI	180	WORLD TRANSM-SHIFTER	505	DDEC-TACHOMETER DRIVE
135C	A/C & HEAT SYS.-AIR SENSOR	149	ABS SYSTEM-SENSOR	180	OUTSIDE TEMP. DISPLAY	509	DDEC-STOP ENGINE LIGHT
136A	WORLD TRANSM-12V BATTERY	149A	ABS SYSTEM	180A	OUTSIDE TEMP. DISPLAY	510	DDEC-FAST IDLE SIGNAL
136AA	WORLD TRANSM-SHIFTER PWR	150	WORLD TR.-ENGINE SPEED LO	180A	WORLD TRANSM-SHIFTER	524	DDEC-ENGINE BRAKEDISABLE
136V	WORLD TRANSM-12V BATTERY	150	DDEC III-ECM BATTERY GRD	180B	OUTSIDE TEMP. DISPLAY	525	DDEC-FAST IDLE SIGNAL
136W	WORLD TRANSM-12V BATTERY	150A	DDEC III-ECM BATTERY GRD	180C	OUTSIDE TEMP. DISPLAY	528	DDEC-STOP ENG. OVERRIDE
137	WORLD TRANSM-RETARDER	151	DDEC III-ECM BATTERY GRD	181	FROZEN POINT T.T.LT	531	DDEC-CRUISE CLUTCH CUT OUT
137	RR VIEW MIRROR	151	ABS SYSTEM-SPARE	181A	THERMOMETER INSIDE SENSOR	540	DDEC-CRUISE ENABLE T.T.LT
137A	RR VIEW MIRROR	152	ABS SYSTEM-SPARE	181B	THERMOMETER INSIDE SENSOR	541	DDEC-CRUISE SET SW
137B	RR VIEW MIRROR	153	ELECTRICAL DRIVER'S SEAT	181C	THERMOMET. OUTSIDE SENSOR	542	INPUT PARK BRAKE INTERLOCK
137C	RR VIEW MIRROR	154	WORLD TRANSM-ABS INPUT (-)	181D	THERMOMET. OUTSIDE SENSOR	543	DDEC-CRUISE STOP SW CUT IN
137D	RR VIEW MIRROR	156A	ABS SYSTEM-FEED	195	WORLD TRANSM-TRANS ID	544	DDEC-CRUISE ON/OFF SW
137D	RR VIEW MIRROR	157B	ABS SYSTEM	197	FUEL WATER FILTER	545	DDEC-CRUISE RESUME SW
137E	RR VIEW MIRROR	159	WORLD TRANSM-DIAGNOSTIC	197A	FUEL WATER FILTER	555	DDEC-FAN CLUTCH SPEED#1
137F	RR VIEW MIRROR	160	ALARM & SIGN.-TAG PRESS SW	201	WORLD TRANSM-SPARE	556	DDEC-VEHICLE SPEED (+)
137H	RR VIEW MIRROR	161B	WORLD TRANSM-SIGNALGRD	202	WORLD TRANSM-SPARE	557	DDEC-VEHICLE SPEED (-)
137J	RR VIEW MIRROR	162	WORLD TRANSM-PRESS. SW C3	203	WORLD TRANSM-SPARE	563	DDEC-FAN CLUTCH SPEED#2
137K	RR VIEW MIRROR	163	WORLD TR.-RETARDER ENABLE	204	WORLD TRANSM-SPARE	564	DDEC-DIGTAL OUTPUT
137L	RR VIEW MIRROR	164	WORLD TR.-RET. ACTUAT. SIGN	214	WORLD TR.-BACK-UP SIGNAL	565	DDEC-ENGINE BRAKE ACTIVE
137M	RR VIEW MIRROR FEED	165	WORLD TR.-OIL LEVEL SIGNAL	231	WORLD TR.-NEUTRAL SIGN GRD	583	DDEC-ENGINE BRAKE 4 CYL.
137R	WORLD TRANSM-RETARDER	167	WORLD TR.-SPEED 5N0, 5NC	240	DDEC III-ECM 12V FEEDING	900	DDEC-DATA LINK (+)
137T	MIRROR HEAT SW-JUMPER	169	WORLD TRANSM-INPUT 12	241	DDEC III-ECM 12V FEEDING	901	DDEC-DATA LINK (-)
138	WORLD TR.-RETARDER TEMP	170	WORLD TRANSM-SHIFTER	260	WINDOW AJAR-T.T.LT	908	DDEC-HYDRAU. PWM#1 OUTPUT
138	ABS SYSTEM-SENSOR	170C	LUGGAGE DOOR LOCK-T.T.LT	270	KEYLESS MODULE-FEED	916	DDEC-SENSOR SUPPLY (5VDC)
138A	ABS SYSTEM-SENSOR	170D	LUGGAGE DOOR LOCK-FEED	270A	ENTRANCE DOOR AIR LOCK	952	DDEC-SENSOR RETURN #1
139	ABS SYSTEM-VALVE	170E	LUG. DOOR LOCK-UNLOCK SIGN	272	KEYLESS SYSTEM-KEYBOARD	953	DDEC-SENSOR RETURN #2
139	WORLD TR.-OUTPUT SPEED HI	170F	LUGGAGE DOOR LOCK-FEED	274	KEYLESS SYSTEM-KEYBOARD	979	DDEC-ENGINE BRAKE 2 CYL.
140	WORLD TR.-OUTPUT SPEED LO	170G	LUGGAGE DOOR LOCK-FEED	276	KEYLESS SYSTEM-KEYBOARD	2123	FLASHER SIGNAL LTS
140	ABS SYSTEM-VALVE	170H	LUGGAGE DOOR-LOCK SIGN	277	KEYLESS SYS-DR'V LTS SIGN		
141	ABS SYSTEM-VALVE	170K	LUGGAGE DOOR-LOCK SIGN	278	KEYLESS SYSTEM-KEYBOARD		
141	WORLD TR.-ENGINE SPEED HI	170LA	LUGG DOOR LOCK-T.T.LT WE	280	KEYLESS SYSTEM-KEYBOARD		
142	ABS SYSTEM-VALVE	170LB	LUGG DOOR LOCK-T.T.LT WE	283	KEYLESS SYSTEM-ANTI-THEFT		
143	ABS SYSTEM-SENSOR	170L	LUGG DOOR LOCK-SIGN T.T.LT	283A	KEYLESS SYS-ENT. DOOR SIGN		
143A	ABS SYSTEM-SENSOR	170M	LUGG DOOR LOCK-SIGN T.T.LT	284A	KEYLESS SYSTEM		
143A	WORLD TRANS-BATERY GRD	170N	LUGG DOOR LOCK-SIGN T.T.LT	285	KEY. SYS-UNLOCK ENT. DOOR		
143W	WORLD TRANSM-BATTERY GRD	170P	LUGG DOOR LOCK-SIGN T.T.LT	285B	KEYLESS SYSTEM		
143X	WORLD TRANSM-BATTERY GRD	170R	LUGG DOOR LOCK-ENTR. DOOR	285C	KEYLESS SYSTEM		

CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
-----	-------------	-----	-------------	-----	-------------	-----	-------------

CIRCUIT NUMBER CODE

NO. DESCRIPTION

IPJ1 CLUSTER - BULB TEST POS
 IPJ2 CLUSTER - BULB TEST NEG.
 IPJ3 CLUSTER - SV SIGNAL
 IPJ4 CLUSTER - RETURN TO ZERO
 IPJ5 CLUSTER - FUEL LEVEL GAUGE
 IPJ6 CLUSTER - BULB TEST POS.
 IPJ7 CLUSTER - BULB TEST NEG.
 IPJ8 CLUSTER - MASTER WARNING
 LX5 CLUSTER - COMPUTER MODE
 LX6 CLUSTER - COMPUTER DOWN
 LX7 CLUSTER - COMPUTER SET
 LX16 CLUSTER - COMPUTER UP
 LX21 CLUSTER - COMPUTER COM.
 RT T.T.L.T. MODULE - TEST SW.
 SP1 SPARE WIRE
 SP2 SPARE WIRE
 SP3 SPARE WIRE
 SP4 SPARE WIRE
 SP5 SPARE WIRE
 SP6 SPARE WIRE
 SP7 SPARE WIRE
 SP8 SPARE WIRE
 SP9 SPARE WIRE
 SP10 SPARE WIRE
 SP11 SPARE WIRE
 SP12 SPARE WIRE
 SP13 SPARE WIRE
 SP14 SPARE WIRE
 SP15 SPARE WIRE
 SP16 SPARE WIRE
 SP17 SPARE WIRE
 SP18 SPARE WIRE
 SP19 SPARE WIRE
 SP21 SPARE WIRE
 SP23 SPARE WIRE
 SP24 SPARE WIRE
 SP25 SPARE WIRE
 SP30 SPARE WIRE
 SP33 SPARE WIRE
 SP38 SPARE WIRE
 SP40 SPARE WIRE
 SP41 SPARE WIRE
 SP42 SPARE WIRE
 SP43 SPARE WIRE
 SP45 SPARE WIRE
 SP48 SPARE WIRE
 SP56 SPARE WIRE
 SP57 SPARE WIRE
 SP60 SPARE WIRE
 SP61 SPARE WIRE

NO. DESCRIPTION

SP62 SPARE WIRE
 SP63 SPARE WIRE
 SP69 SPARE WIRE
 SP70 SPARE WIRE
 SP71 SPARE WIRE
 SP72 SPARE WIRE
 SP74 SPARE WIRE
 SP83 SPARE WIRE
 SP84 SPARE WIRE
 SP114 SPARE WIRE
 SP115 SPARE WIRE
 SP116 SPARE WIRE
 SP117 SPARE WIRE
 TW1 SPR. W. TWISTER 50T/M WITH TW2
 TW2 SPR. W. TWISTER 50T/M WITH TW1
 0 A/C EVAP.CPT - CPT GRD
 0 JUMPER - CLUTCH SIGN.
 0 RJB - INSIDE GRD
 0A FR. ROOF ACC. GRD
 0A W0,W5 EVAP. MOTOR FAN GRD
 0AW AWNING WINDOWS
 0B A/C - CONDENSER GRD
 0B ENG. CPT ACC. GRD
 0BE OV BATTERY MONITOR
 0C R.J.B. - GRB
 0C F.R. SERV. CPT-ACCESSOIRES
 0C1 ENTRANCE DOOR KEYLESS
 0C4 F.J.B. GRD
 0CJ CRUISE SW. JUMPER
 0D A/C JCT BOX - COND FAN GRD
 0E WE EVAP. MOTOR FAN GRD
 0F SILENT 1000
 0G ABS GRD CX1
 0H ENG. CPT. - ACC. GRD
 0L ENG.CPT -CLEAR.LTS RR ROOF
 0L R.J.B. - GRD
 0L FR - SIDE MARK. & FLASH GRD
 0L1 ENG.CPT-SIDE MARK. & FL. GRD
 0L2 HEAD LTS
 0L3 FR.SERV.DR. & ENT.DOOR GRD ACC.
 0L4 FOG LTS RESISTOR GRD
 0L5 LH CONSOL - ACC. GRD
 0LV WINDSHIELD WASHER LEVEL
 0M WIPER 2 MIRROR MOTOR
 0M3 DEFROST GRD
 0M4 HORN & DR'S WINDOW LIFTER
 0M5 SUN VISOR MOTOR
 0M6 UPPER FAN DEFROST
 0M7 DR'S WIND.LIFT. & RH MIR. SW
 0M7A LH MIRROR SW.

NO. DESCRIPTION

OP1 A/C COMPRESSOR GRD
 OT SPEED SW. CONNECTOR
 OT1 DASH ACC.
 OT2 CLUSTER ACC.
 OT2 WINDOW AWNING
 OT3 ALTERNATOR MODULE
 OT4 12V OUTLET - CTR MODULE
 OT5 FS-HVAC DASH MODULE. GND
 OT6 FS-DDR GROUND
 OW FJB - TRANSM. RLY GRD
 OW TRANSM ACC. - FR.SERV. CPT
 OY1 ASB SYSTEM-GRD
 OY2 ASB SYSTEM-GRD
 OY3 ASB SYSTEM-GRD
 OY4 ASB SYSTEM-GRD
 OY5 ASB SYSTEM-GRD
 OY6 ASB SYSTEM-GRD
 00A BATTERY GRD-DASH ACC.
 2A A/C & HEAT SYSTEM
 2B A/C & HEAT SYSTEM
 2D A/C & HEAT SYSTEM
 2E A/C & HEAT SYSTEM
 2F A/C & HEAT SYSTEM - EVAP. FAN
 2H A/C & HEAT SYS-LO-PRESS SW.
 2L A/C & HEAT SYS-HI-PRESS SW.
 3A A/C & HEAT SYSTEM-EVAPORATOR
 5N0 SPEED SIGNAL HIGHER 5MPH
 5NC SPEED SIGNAL LOWER 5MPH
 6 EXTERIOR LTS-DOCKING
 6A EXTERIOR LTS-CORNERING
 6B1 EXTERIOR LTS-CORNERING RH
 6C1 EXTERIOR LTS-CORNERING RH
 6D EXTERIOR LTS-DOCKING
 9 INTERIOR LTS-ENGINE CPT
 9 INTERIOR LTS-RR JCT BOX
 9F INTERIOR LTS - FR-SERV. CPT
 10 A/C & HEAT SYSTEM -LO PRES.
 10 INTERIOR LTS-LUGGAGE CPT
 10 INTERIOR LTS-FR SERV. CPT
 10A INTERIOR LTS-LUGGAGE CPT
 10B INTERIOR LTS-LUGGAGE CPT
 10C INTERIOR LTS-LUGGAGE CPT
 10D INTERIOR LTS-LUGGAGE CPT
 10E INTERIOR LTS-LUGGAGE CPT
 10R CENTER DOOR T.T.L.T.
 12A FR JCT PANEL 12V DISC SW
 12B FR JCT PANEL 12V DISC SW
 12BAT 12V HOT-WIRE ACC - JCT BLK
 12BE 12V BATTERY MONITOR
 12C FR JCT PANEL 12V DISC SW

NO. DESCRIPTION

12C RR JCT BOX 12V DISC SW
 12D FR JCT PANEL 12V HOT WIRE
 12DD FR JCT PANEL 12V HOT WIRE
 12DDR RR JCT BOX 12V HOT WIRE DDR CON
 12DT T.T. LT MODULE
 12E RR JCT BOX 12V DISC SW
 12F FR JCT PANEL 12V DISC SW
 12G FR JCT PANEL 12V DISC SW
 12H 12V DASH ACCESS.
 12I RR JCT BOX 12V IGNITION
 12I FR JCT PANEL 12V IGNITION
 12IA FR JCT PANEL 12V IGNITION
 12IA RR JCT PANEL 12V IGNITION
 12IE ABS-FR JCT PANEL 12V IGN.
 12IF FR JCT PANEL 12V IGNITION
 12J FR JCT PANEL 12V DISC.SW.
 12JA FR JCT PANEL 12V DISC.SW.
 12K FR JCT PANEL 12V DISC.SW.
 12LX 12V HOTWIRE CLUST.& MOD A/C
 12LX CLUSTER 12V HOT WIRE
 12M ABS-FR JCT PANEL 12V DISC.SW.
 12P 12V POWER OUTLET
 12T RR JCT BOX 12V DISC SW
 12VD 12V HOT WIRE
 12VI RR JCT PANEL 12V IGNITION
 12W 12V HOT WIRE DDEC III FEED
 15 EXT. LTS-MULTI FUNC LEVEL
 15 WIPER & WASHER SYSTEM
 16 SPEEDOMETER (+)
 16T SPEED SW SIGNAL IN (+)
 17 EXTERIOR LTS-FLASHER UNIT
 17A EXTERIOR LTS-FLASHER UNIT
 17C JUMPER LTS SW. - HAZARD
 18 UPPER FAN DEFROST
 19 UPPER FAN DEFROST
 20 SPEEDOMETER SIGNAL (-)
 20T SPEED SW SIGNAL IN (-)
 21 EXTERIOR LTS-DIRECT. LH
 21A EXTERIOR LTS-LH
 21A EXTERIOR LTS-CORNERING-LH
 21B EXTERIOR LTS-DIRECT. LH
 21BB EXTERIOR LTS-DIRECT. LH
 21H EXTERIOR LTS-HAZARD SIGNAL
 21M AUX. LTS - DIRECTIONAL LH
 21P CORN. LTS - DIRECT. SIGN. LH
 23 EXTERIOR LTS-DIRECT. RH
 23A EXTERIOR LTS-DIRECT. RH
 23A EXTERIOR LTS - CORNER. LTS
 23BB EXTERIOR LTS - DIRECT. RH
 23C EXTERIOR LTS-CORNERING RH

CIRCUIT NUMBER CODE

NO. DESCRIPTION

23H EXTERIOR LTS-HAZARD SIGNAL
 23M AUX LTS - DIRECTIONAL RH
 23P CORN. LTS - DIRECT SIGN RH
 24 FR JCT PANEL 24V DISC. SW.
 24A RR JCT PANEL 24V DISC. SW
 24A FR JCT PANEL 24V DISC. SW
 24AW AWNING WINDOWS
 24BE BATTERY MONITOR
 24C FR JCT PANEL 24V DISC SW
 24D FR JCT BOX 24V HOT WIRE
 24F RR JCT PANEL 24V DISC SW
 24G RR JCT PANEL 24V DISC SW
 24I FR JCT PANEL 24V IGNITION
 24I RR JCT PANEL 24V IGNITION
 24IA FR JCT PANEL 24V IGNITION
 24IB FR JCT PANEL 24V IGNITION
 24IF FR JCT PANEL 24V IGNITION
 24P FR JCT PANEL 24V DISC SW
 24R 24V RR JCT BLK TO STARTER
 24T RR JCT PANEL 24V DISC SW
 24VD 24V HOT WIRE FEED
 25A TT.LT. MODULE - LED
 25A1 BOSCH ALTERNATOR - WE ONLY
 25A2 BOSCH ALTERNATOR - WE ONLY
 25B EXT. LTS-DAYTIME RUN LTS
 25D GENERATOR SKTN. ON - HVAC
 25L GENERATOR SIGNAL TO RLY R88
 26 DR'S & ENT. WINDOW LIFTER
 26A CIGAR LIGHT. & POW.OUTLET LH
 26B DRIVER'S WINDOW LIFTER
 26C DRIVER'S WINDOW LIFTER
 26D ENT. DOOR WINDOW LIFTER
 26E ENT. DOOR WINDOW LIFTER
 26F ENT. DOOR WINDOW LIFTER
 28H T.T.LT MODULE - HI A/C PRES.
 28T T.T.LT MODULE - LO A/C PRES.
 29 A/C & HEAT SYS.-DR'S HTR
 29H HVAC DASH MODILE
 29X A/C & HEAT SYS.-DR'S HTR
 31B WIPER & WASHER SYSTEM
 31C WIPER & WASHER SYSTEM
 32 EXTERIOR LTS-BACK-UP
 32B EXTERIOR LTS-BACK-UP
 32F BACK-UP CANCEL SW.
 32G BACK-UP ALARM
 32J BACK-UP SW. - JUMPER
 35B DRIVER'S LTS - KEYLESS SIGN
 36 ENGINE BRAKE SYSTEM
 36A ENGINE BRAKE SYSTEM & RET.
 39 INTERIOR LTS-DRIVER'S LTS

NO. DESCRIPTION

39B INTERIOR LTS-DRIVER'S LTS
 39C INTERIOR LTS-DRIVER'S LTS
 39D INTERIOR LTS - FRIVER' LTS
 39K DR'S LTS - KEYLESS SIGN.
 41 A/C SYS.-COND FAN MOTOR
 41A A/C SYS.-COND FAN MOTOR
 41B A/C SYS.-COND FAN MOTOR
 42A A/C SYS.-COND FAN MOTOR
 43 A/C & HEAT SYS. - FAN SPEED
 44 EXTERIOR LTS-FOG
 44A EXTERIOR LTS-FOG
 44B EXTERIOR LTS-FOG
 44C EXT. LTS-FOG,HVAC & HAZ. SW
 44D EXTERIOR LTS - FOG
 44E EXTERNAL LTS - FOG
 45A A/C & HEAT SYSTEM FULL AIR
 45B A/C & HEAT SYS.-WATER PUMP
 45C A/C & HEAT SYS.-WATER VALV
 45D A/C & HEAT SYS.-WATER VALV
 45E A/C & HEAT SYS.-WATER PUMP
 45G A/C & HEAT SYS.-DR'S HTR
 45H A/C & HEAT SYS.- EVAP.FAN
 45J A/C & HEAT SYS.-WATER PUMP
 46 EXTERIOR LTS-MARKER
 46A EXTERIOR LTS-AUX LTS RESIS.
 46C EXTERIOR LTS-MARKER
 46D EXTERIOR LTS-AUX LTS RESIS.
 48A ENTRANCE DOOR AIR LOCK
 48B ENTRANCE DOOR AIR LOCK
 48C ENTRANCE DOOR AIR LOCK
 52 ALARM & SIGNAL-ELEC.HORN
 52A ALARM & SIGNAL-ELEC.HORN
 53 ALARM & SIGNAL-ELEC.HORN
 53B WIPER & WASHER SYSTEM
 53C WIPER & WASHER SYSTEM
 53E WIPER & WASHER SYSTEM
 53J WIPER & WASHER SYSTEM
 53K KEYLESS SYSTEM
 55 EXTERIOR LTS-HI BEAM
 57 EXTERIOR LTS-HI BEAM
 57A EXTERIOR LTS-HI BEAM
 57B A/C & HEAT SYS.-WATER PUMP
 57C A/C & HEAT SYS.-WATER PUMP
 57E A/C & HEAT SYS.-WATER VALV
 57F A/C & HEATSYS-PASS REC DAMPER
 58 EXTERIOR LTS-SEAL BEAM
 58A EXTERIOR LTS-SEAL BEAM
 58B EXTERIOR LTS-SEAL BEAM
 58RH EXTERIOR LTS-LO BEAM
 58LH EXTERIOR LTS-LO BEAM

NO. DESCRIPTION

59A ENGINE BRAKE SYSTEM
 61 EXTERIOR LTS-24V FEED SW
 61A EXTERIOR LTS-HEAD SIGNAL
 63 EXTERIOR LTS-CLEAR. FEED
 63B EXTERIOR LTS-CLEARANCE
 63C EXT. LTS-MARKER SIGNAL
 63F EXT. LTS-MARKER BLINKER
 64 DRIVER'S FAN SPEED CTR
 65 FOOT DAMPER MOTOR
 65A FOOT DAMPER MOTOR
 65D DRIVER'S REC. DAMPER
 66 A/C PASSENGER - ON/OFF
 67A A/C & HEAT SYSTEM
 68 DASH & DEFROST DAMPER MOT
 68A DASH & DEFROST DAMPER MOT
 72 SUN VISOR - FEED
 72A SUN VISOR RH
 72B SUN VISOR RH
 72C SUN VISOR LH
 72D SUN VISOR LH
 76 FUEL TANK GAUGE
 76C LOW FUEL T.T.LT
 76L LOW FUEL T.T.LT
 77A A/C & HEAT SYS. - THERMOST.
 77B A/C SYS. - LIQ. SOL. VALVE
 77C A/C & HEAT SYS.-COMPRESSOR
 77H A/C SYS.-LIQ. SOL. VALVE
 77H A/C & HEAT SYS.-THEMOSTAT
 81 EXTERIOR LTS-STOP SW
 82 EXTERIOR LTS-STOP SIGNAL
 82A EXTERIOR LTS-STOP SIGNAL
 82B EXTERIOR LTS-STOP LTS
 82L EXT. LTS-STOP LTS & CYCLOP
 82R EXTERIOR LTS-STOP LTS
 83 ENG. CTR-MAST. KEY SW ACC.
 84 ENG. CTR-MAST KEY SW START
 84A ENG. CTR-MAST KEY SW START
 84J ENG. CTR-MAST KEY SW START
 85 24V IGNITION SIGNAL
 85A 24V IGN DASH INSTRUMENT.
 85C 24V IGNITION - FEED
 85W WORLD TRANSM. - 24V IGN.
 85X ABS-12V IGN
 85Y ABS-12V IGN
 85Z ABS-12V IGN
 86 ENG. CTR-STARTER SOL SIGN
 86A ENG. CTR-STARTER SOL SIGN
 87B ENGINE CTR-24V IGNITION
 88 ENGINE CTR-RR START SIGNAL
 89 ENGINE CTR-RR START SIGNAL

NO. DESCRIPTION

90 CONVERTER - CABLE SPARG
 90A ENG. CTR-MAST KEY SW FEED
 90B A/C & H. SYS.-COND FAN MOT
 90B ENG. CTR-MAST KEY SW FEED
 91 PARKING BRAKE SW SIGNAL
 91A DDEC III-FAST IDLE SIGNAL
 91C PARKING BRAKE - T.T.LT
 91J FAST IDLE - JUMPER SW.
 92 BATT. EQUAL.-CHECK BALANCE
 93 BATT. EQUALIZ.-CHECK LO/HI
 95A ENG. BRAKE & RETARDER SYS.
 95B ENG. BRAKE & RETARDER SYS.
 97 TACHOMETER SIGN.-NOT USED
 98A TRAIL PARK BRAKE PRESS SW
 98B TRAIL BRAKE PRESS SW
 101 WORLD TR.- LO SIGN SOL.LO
 102 WORLD TRANSM.-SOL. SUPPLY
 103 WORLD TRANSM.- B.SOL.LO
 104 LEVEL-LOW SYS- DR'S SOL.
 104 WORLD TR. -SOL. FORWARD
 105W WORLD TR-SOL.-RET.OIL TT.LT
 107 WORLD TR.-LOCKUP SOL. HI
 108 WORLD TR.-LOCKUP SOL.
 110 WORLD TR.-LOCKUP SOL. LO
 112 WORLD TR.-SPARE OUTPUT (+)
 112 WORLD TR.-SPARE OUTPUT (+)
 113W WORLD TR.-REVERSE WARNING
 114 WORLD TR.-SPARE OUTPUT (-)
 114 INTERIOR LT-DASH LT RHEOS.
 114A INTERIOR LT-DASH LT RHEOS.
 114B INT. LT-DASH LT RHEOST.FEED
 115 DDEC III-COOLANT LEVEL
 115W WORLD TR.-DO NOT SHIF SIGN
 116 WORLD TR.-LO SIGNAL SOL. HI
 116B A/C & HEAT SYSTEM-DR'S HTR
 116C A/C SYS.-TRIG. DEFROST
 119 WORLD TRANSM-ENGINE BRAKE
 120 WORLD TRANSM-SOL. CI
 121 WORLD TRANSM-SOL.GRD 2
 123 WORLD TR.-NEUTRAL START
 123A ALARM & SIGNAL-FIRE DETECT.
 123B ALARM & SIGNAL-FIRE DETECT.
 124 WORLD TR.-THROTTLE (HI)
 124A WORLD TRANSM-SENSOR PWR
 125 WORLD TR-RETARDER INDICAT.
 125W WORLD TR-RETARDER INDICAT.
 126 WORLD TR.-LUBE PRESS SW.
 126 24VIGN-LEV.LOW & WORLD TR.
 126F LEVEL LOW SYSTEM
 126H SPEED SIGN 5NC - NOT USED

CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
126W	WORLD TRANSM-NOT USED	143A	ABS SYSTEM-SENSOR	170M	LUGG DOOR LOCK-SIGN T.T.LT	280	KEYLESS SYSTEM-KEYBOARD
127	24HW DR'S LT PREHEAT & HVAC	143A	WORLD TRANS-BATTERY GRD	170N	LUGG DOOR LOCK-SIGN T.T.LT	283	KEYLESS SYSTEM-ANTI-THEFT
128	WORLD TRANSM-SOL. C2	143W	WORLD TRANSM-BATTERY GRD	170P	LUGG DOOR LOCK-SIGN T.T.LT	283A	KEYLESS SYS-ENT. DOOR SIGN
129	WORLD TRANSM-SOL. C5	143X	WORLD TRANSM-BATTERY GRD	170R	LUGG DOOR LOCK-ENTR. DOOR	284A	KEYLESS SYSTEM
130	WORLD TRANSM-SOL. GRD 3	144	ABS SYSTEM-SENSOR	170S	LUGG DOOR LOCK-SIGN T.T.LT	285	KEY. SYS-UNLOCK ENT. DOOR
130	EVAP. FAN - POWER CABLE	144A	ABS SYSTEM-SENSOR	170T	LUGG DOOR LOCK-SIGN T.T.LT	285B	KEYLESS SYSTEM
130A	EVAP. FAN - POWER CABLE	145	ABS SYSTEM-VALUE	170V	LUGG DOOR LOCK-SIGN T.T.LT	285C	KEYLESS SYSTEM
131	WORLD TRANSM-SOL.C4	146	ABS SYSTEM-VALUE	170W	LUGGAGE DOOR LOCK-FEED	286	LUGG DOOR LOCK-ENT. DOOR
132	WORLD TRANSM-ENGINE BRAKE	146A	WORLD TRANSM-12V IGNITION	170X	LUGG DOOR LOCK-SIGN T.T.LT	286A	KEYLESS SYS-CENTER DOOR
132A	LEVEL LOW SYSTEM	146AA	WORLD TRANSM-DIAGN.CONN.	170Y	LUGGAGE DOOR LOCK-FEED	290	FAN CLUTCH RADIATOR-FEED
132B	LEVEL LOW SYSTEM	147	WORLD TRANSM-OIL TEMP	170Z	LUGGAGE DOOR LOCK	290A	FAN CLUTCH RADIATOR-FEED
132C	LEVEL LOW SYSTEM	147	ABS SYSTEM-VALVE	171	WORLD TRANSM-SHIFTER	291	FAN CLUTCH RADIATOR SPD 1
132D	LEVEL LOW SYSTEM	147A	ETHER COLD START	172	WORLD TRANSM-SHIFTER	292	FAN CLUTCH RADIATOR SPD 2
132E	LEVEL LOW SYSTEM	147A	DAYTIME LST-ALT.SIGNAL	173	WORLD TRANSM-SHIFTER	292A	FAN CLUTCH RADIATOR SPD 2
132F	LEVEL LOW SYSTEM	147C	ETHER COLD START	174	WORLD TRANSM-SHIFTER	294	KEYLESS SYSTEM-ANTI-THEFT
135	WORLD TRANSM-RET.TEMP.	148	ABS SYSTEM-VALVE	175A	WORLD TRANSM-SHIFTER	295	KEYLESS SYS-LED INDICATOR
135A	WORLD TR.-RES MODULE RET.	148	WORLD TR.-OUTPUT SPEED LO	176	WORLD TRANSM-SHIFTER	417	DDEC-LIMIT SPEED GOVERNOR
135B	A/C & HEAT SYS.-AIR SENSOR	149	WORLD TR.-TURBINE SPEED HI	180	WORLD TRANSM-SHIFTER	419	DDEC -CHEK ENGINE LIGHT
135C	A/C & HEAT SYS.-AIR SENSOR	149	ABS SYSTEM-SENSOR	180	OUTSIDE TEMP. DISPLAY	439	DDEC-12V IGNITION
136A	WORLD TRANSM-12V BATTERY	149A	ABS SYSTEM	180A	OUTSIDE TEMP. DISPLAY	451	DDEC-A/C FAN CLUTCH
136AA	WORLD TRANSM-SHIFTER PWR	150	WORLD TR.-ENGINE SPEED LO	180A	WORLD TRANSM-SHIFTER	505	DDEC-TACHOMETER DRIVE
136V	WORLD TRANSM-12V BATTERY	150	DDEC III-ECM BATTERY GRD	180B	OUTSIDE TEMP. DISPLAY	509	DDEC-STOP ENGINE LIGHT
136W	WORLD TRANSM-12V BATTERY	150A	DDEC III-ECM BATTERY GRD	180C	OUTSIDE TEMP. DISPLAY	510	DDEC-FAST IDLE SIGNAL
137	WORLD TRANSM-RETARDER	151	DDEC III-ECM BATTERY GRD	181	FROZEN POINT T.T.LT	524	DDEC-ENGINE BRAKEDISABLE
137	RR VIEW MIRROR	151	ABS SYSTEM-SPARE	181A	THERMOMETER INSIDE SENSOR	525	DDEC-FAST IDLE SIGNAL
137A	RR VIEW MIRROR	152	ABS SYSTEM-SPARE	181B	THERMOMETER INSIDE SENSOR	528	DDEC-STOP ENG. OVERRIDE
137B	RR VIEW MIRROR	153	ELECTRICAL DRIVER'S SEAT	181C	THERMOMET. OUTSIDE SENSOR	531	DDEC-CRUISE CLUTCH CUT OUT
137C	RR VIEW MIRROR	154	WORLD TRANSM-ABS INPUT (-)	181D	THERMOMET. OUTSIDE SENSOR	540	DDEC-CRUISE ENABLE T.T.LT
137D	RR VIEW MIRROR	156A	ABS SYSTEM-FEED	195	WORLD TRANSM-TRANS ID	541	DDEC-CRUISE SET SW
137D	RR VIEW MIRROR	157B	ABS SYSTEM	197	FUEL WATER FILTER	542	INPUT PARK BRAKE INTERLOCK
137E	RR VIEW MIRROR	159	WORLD TRANSM-DIAGNOSTIC	197A	FUEL WATER FILTER	543	DDEC-CRUISE STOP SW CUT IN
137F	RR VIEW MIRROR	160	ALARM & SIGN.-TAG PRESS SW	200S	POER SW. HEAD LAMP WASHER	544	DDEC-CRUISE ON/OFF SW
137H	RR VIEW MIRROR	161B	WORLD TRANSM-SIGNALGRD	201	WORLD TRANSM-SPARE	545	DDEC-CRUISE RESUME SW
137J	RR VIEW MIRROR	162	WORLD TRANSM-PRESS. SW C3	201S	SIGNAL SW. HEAD LAMP WASHER	555	DDEC-FAN CLUTCH SPEED#1
137K	RR VIEW MIRROR	163	WORLD TR.-RETARDER ENABLE	202	WORLD TRANSM-SPARE	556	DDEC-VEHICULE SPEED (+)
137L	RR VIEW MIRROR	164	WORLD TR.-RET. ACTUAT. SIGN	202S	HEAD LAMP WASHER PUMP	557	DDEC-VEHICULE SPEED (-)
137M	RR VIEW MIRROR FEED	165	WORLD TR.-OIL LEVEL SIGNAL	203	WORLD TRANSM-SPARE	563	DDEC-FAN CLUTCH SPEED#2
137R	WORLD TRANSM-RETARDER	167	WORLD TR.-SPEED 5N0, 5NC	204	WORLD TRANSM-SPARE	564	DDEC-DIGTAL OUTPUT
137T	MIRROR HEAT SW-JUMPER	169	WORLD TRANSM-INPUT 12	214	WORLD TR.-BACK-UP SIGNAL	565	DDEC-ENGINE BRAKE ACTIVE
138	WORLD TR.-RETARDER TEMP	170	WORLD TRANSM-SHIFTER	231	WORLD TR.-NEUTRAL SIGN GRD	583	DDEC-ENGINE BRAKE 4 CYL.
138	ABS SYSTEM-SENSOR	170C	LUGGAGE DOOR LOCK-T.T.LT	240	DDEC III-ECM 12V FEEDING	900	DDEC-DATA LINK (+)
138A	ABS SYSTEM-SENSOR	170D	LUGGAGE DOOR LOCK-FEED	241	DDEC III-ECM 12V FEEDING	901	DDEC-DATA LINK (-)
139	ABS SYSTEM-VALVE	170E	LUG. DOOR LOCK-UNLOCK SIGN	260	WINDOW AJAR-T.T.LT	908	DDEC-HYDRAU. PWM#1 OUTPUT
139	WORLD TR.-OUTPUT SPEED HI	170F	LUGGAGE DOOR LOCK-FEED	270	KEYLESS MODULE-FEED	916	DDEC-SENSOR SUPPLY (5VDC)
140	WORLD TR.-OUTPUT SPEED LO	170G	LUGGAGE DOOR LOCK-FEED	270A	ENTRANCE DOOR AIR LOCK	952	DDEC-SENSOR RETURN #1
140	ABS SYSTEM-VALVE	170H	LUGGAGE DOOR-LOCK SIGN	272	KEYLESS SYSTEM-KEYBOARD	953	DDEC-SENSOR RETURN #2
141	ABS SYSTEM-VALVE	170K	LUGGAGE DOOR-LOCK SIGN	274	KEYLESS SYSTEM-KEYBOARD	979	DDEC-ENGINE BRAKE 2 CYL.
141	WORLD TR.-ENGINE SPEED HI	170LA	LUGG DOOR LOCK-T.T.LT WE	276	KEYLESS SYSTEM-KEYBOARD	2123	FLASHER SIGNAL LTS
142	ABS SYSTEM-VALVE	170LB	LUGG DOOR LOCK-T.T.LT WE	277	KEYLESS SYS-DR'V LTS SIGN	S01	SLIDE-OUT #2 RLY & SOL GND
143	ABS SYSTEM-SENSOR	170L	LUGG DOOR LOCK-SIGN T.T.LT	278	KEYLESS SYSTEM-KEYBOARD	S02	SLIDE-OUT REMOTE#1 OUT

CIRCUIT NUMBER C0DE

N0.	DESCRIPTION	N0.	DESCRIPTION	N0.	DESCRIPTION	N0.	DESCRIPTION
So3	SLIDE-OUT REMOTE#1 IN						
So4	SLIDE-OUT ANA INPUT VAC						
So5	SLIDE-OUT IN PARK BRAKE						
So 6	SLIDE-OUT IN LIMIT IN#1						
So 7	SLIDE-OUT IN LIMIT OUT #1						
So 8	SLIDE-OUT 5V SUPPLY						
So 9	SLIDE-OUT OUT REMOTE LED						
So 10	SLIDE-OUT OUT RSO1 CTR						
So 11	SLIDE-OUT OUT RSO2 CTR						
So 12	SLIDE-OUT OUT SOSO5 CTR						
So 13	SLIDE-OUT OUT SOSO1 CTR						
So 14	SLIDE-OUT OUT SOSO2 CTR						
So 15	SLIDE-OUT OUT TRANS INHIBIT						
So 16	SLIDE-OUT SENSOR GND						
So 18	SLIDE-OUT GND MOSO1						
So 19	SLIDE-OUT MOSO1 CTR						
So 20	SLIDE-OUT MOSO1 CTR						
So 21	SLIDE-OUT OUT PWM MOSO1						
So 22	SLIDE-OUT CBSO1 24V OUT						
So 24	SLIDE-OUT FSO1 24V OUT						
So 25	SLIDE-OUT FSO2 24V OUT						
So 26	SLIDE-OUT CBSO POWER						
So 27	SLIDE-OUT CBSO POWER						
So 28	SLIDE-OUT CBSO2 24V OUT						
So 29	SLIDE-OUT FSO5 24V OUT						
So 30	SLIDE-OUT RLY & SOL GND						
So 31	SLIDE-OUT GND MOSO2						
So 32	SLIDE-OUT REMOTE#2 OUT						
So 33	SLIDE-OUT REMOTE#2 IN						
So 36	SLIDE-OUT IN LIMIT IN #2						
So 37	SLIDE-OUT IN LIMIT OUT #2						
So 38	SLIDE-OUT 5V SUPPLY						
So 39	SLIDE-OUT OUT REMOTE LED						
So 40	SLIDE-OUT OUT RSO3 CTR						
So 41	SLIDE-OUT OUT RSO4 CTR						
So 42	SLIDE-OUT OUT SOSO3 CTR						
So 46	SLIDE-OUT MOSO2 CTR						
So 47	SLIDE-OUT MOSO2 CTR						
So 48	SLIDE-OUT OUT PWM MOSO2						
So 55	SLIDE-OUT SECURITY PIN CTR						
So 60	SLIDE-OUT DASH LED OUT						
So 61	SLIDE-OUT OUT SOSO6 CTR						

CIRCUIT BREAKERS CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION	No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 1	1.1	200A	560838	ENGINE CPT	A/C FULL AIR	CB 59					
CB 2	1.1	40A	870093	ENGINE CPT	12V HOT WIRE RR JCT BOX	CB 60					
CB 3	1.1	70A	562687	ENGINE CPT	12V FEDD RR JCT BOX	CB 61					
CB 4	1.1	90A	562683	ENGINE CPT	12V FEDD FR JCT BOX	CB 62					
CB 5	1.1	30A	870690	ENGINE CPT	24V HOT WIRE RR JCT BOX	CB 63					
CB 6	1.1	90A	562683	ENGINE CPT	24V FEED RR JCT BOX	CB 64					
CB 7	1.1	90A	562683	ENGINE CPT	24V FEED FR JCT BOX	CB 65					
CB 8	15.3	40A	562686	A/C JCT BOX	CONDENSER FAN MOTOR L.H.	CB 66					
CB 9	15.3	120A	562688	A/C JCT BOX	EVAPORATOR FAN MOTOR	CB 67					
CB 10	4.1	8A	561791	FR JCT BOX	MASTER SWITCH	CB 68					
CB 11	15.3	40A	562686	A/C JCT BOX	CONDENSER FAN MOTOR R.H.	CB 69					
CB 12						CB 70					
CB 13	6.1	3A	561797	RR JCT BOX	12V HOT WIRE DDR CONNECTOR	CB 71					
CB 14	15.4	25A	561795	FR JCT BOX	UPPER FAN DEFROST	CB 72	15.1,15.2	10A	561792	RR JCT BOX	A/C COMPRESSOR CLUTCH
CB 15						CB 73	15.1,15.3	15A	561793	FR JCT BOX	WATER PUMP
CB 16	4.1	8A	561791	RR JCT BOX	ENGINE-RR CTR & START SW	CB 74					
CB 17						CB 75					
CB 18	4.1	6A	561791	RR JCT BOX	ENGINE-FR CTR SW	CB 76					
CB 19	5.1	15A	561793	RR JCT BOX	DDEC III E.C.M. POWER	CB 77					
CB 20	5.1	15A	561793	RR JCT BOX	DDEC III E.C.M. POWER	CB 78					
CB 21	5.1	10A	561790	RR JCT BOX	DDEC III 12V IGNITION	CB 79	15.1,15.2	15A	561792	FR JCT BOX	DRIVER'S DEFROSTER FAN
CB 22						CB 80					
CB 23						CB 81					
CB 24						CB 82					
CB 25						CB 83	6.1	20A	561794	RR JCT BOX	WORLD TRANSMISSION VIM POWER
CB 26	9.3	10A	561792	RR JCT BOX	BACK-UP LTS & ALARM	CB 84					
CB 27	7.2	8A	561791	FR JCT BOX	24V IGN DASH ACCESSORIES	CB 85					
CB 28	7.1	6A	561790	FR JCT BOX	12V IGN. DASH ACCESSORIES	CB 86					
CB 29						CB 87					
CB 30						CB 88					
CB 31						CB 89					
CB 32						CB 90					
CB 33						CB 91					
CB 34						CB 92	17.1	6A	561790	FR JCT BOX	DECEL SW & LEVEL-LOW
CB 35	9.3	6A	561790	FR JCT BOX	FOG, HAZARD SW & A/C MODULE	CB 105	22.1	6A	561790	FR JCT BOX	ABS E . C . U .
CB 36						CB 106	22.1	15A	561793	FR JCT BOX	ABS E . C . U .
CB 37	9.1	8A	561791	FR JCT BOX	HEAD & MULTI-FUNC. SW	CB 107					
CB 38						CB 115	12.2	8A	561791	FR JCT BOX	KEYLESS ENTRY SYSTEM
CB 39						CB 118	12.1	20A	561794	RR JCT BOX	LUGGAGE DOOR LOCK MOTOR
CB 40	9.1	10A	561791	FR JCT BOX	MARKER CLEARANCE & ID. LTS	CB 120	12.1	20A	561794	RR JCT BOX	LUGGAGE DOOR LOCK MOTOR
CB 41						CB 123	13.1	25A	561795	FR JCT BOX	ELECTRIC DRIVER'S SEAT
CB 42	9.1	10A	561792	RR JCT BOX	RR TAIL & LICENCE LTS	CB 124	8.1	6A	561790	RR JCT BOX	FAN CLUTCH RADIATOR
CB 43	9.1	20A	561794	FR JCT BOX	HEADLAMP (HI)	CB 125	9.2	20A	561794	FR JCT BOX	DIRECTIONAL LTS LH
CB 44	9.1	20A	561794	FR JCT BOX	HEADLAMP (LO)	CB 126	9.2	20A	561794	FR JCT BOX	DIRECTIONAL LTS RH
CB 45	9.2	10A	561792	FR JCT BOX	MULTI-FUNC. SW (WIPER CTR)	CB 129	7.1	6A	561790	FR JCT BOX	CLUSTER
CB 46						CB 130	23.1	6A	561790	FR JCT BOX	TT LT MODULE
CB 47						CB 132					
CB 48	9.3	6A	561790	FR JCT BOX	STOP SW	CB 138					
CB 49	9.3	15A	561793	RR JCT BOX	LH STOP LTS	CB 141	4.2	20A	561790	RR JCT BOX	ALT DELCO 24V-270A
CB 50						CB 142	2.1	15A	561790	RR JCT BOX	12V IGNITION FR. & RR. JCT. BOX
CB 51	9.3	15A	561793	RR JCT BOX	RH STOP LTS & TRAILER SIGN.						
CB 52	11.1	15A	561793	FR JCT BOX	LUGGAGE LTS						
CB 53											
CB 54											
CB 55											
CB 56											
CB 57	11.2	8A	561791	FR JCT BOX	DASH LTS RHEOSTAT						
CB 58	15.1,15.2	6A	561790	FR JCT BOX	HVAC DASH MODULE						

CIRCUIT BREAKERS CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION	No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 1	1.1	200A	560838	ENGINE CPT	A/C FULL AIR	CB 59					
CB 2	1.1	40A	870093	ENGINE CPT	12V HOT WIRE RR JCT BOX	CB 60					
CB 3	1.1	70A	562687	ENGINE CPT	12V FEDD RR JCT BOX	CB 61					
CB 4	1.1	90A	562683	ENGINE CPT	12V FEDD FR JCT BOX	CB 62					
CB 5	1.1	30A	870690	ENGINE CPT	24V HOT WIRE RR JCT BOX	CB 63					
CB 6	1.1	90A	562683	ENGINE CPT	24V FEED RR JCT BOX	CB 64					
CB 7	1.1	90A	562683	ENGINE CPT	24V FEED FR JCT BOX	CB 65					
CB 8	15.3	40A	562686	A/C JCT BOX	CONDENSER FAN MOTOR L.H.	CB 66					
CB 9	15.3	120A	562688	A/C JCT BOX	EVAPORATOR FAN MOTOR	CB 67					
CB 10	4.1	8A	561791	FR JCT BOX	MASTER SWITCH	CB 68					
CB 11	15.3	40A	562686	A/C JCT BOX	CONDENSER FAN MOTOR R.H.	CB 69					
CB 12						CB 70					
CB 13	6.1	3A	561797	RR JCT BOX	12V HOT WIRE DDR CONNECTOR	CB 71					
CB 14	15.4	25A	561795	FR JCT BOX	UPPER FAN DEFROST	CB 72	15.1,15.2	15A	561793	RR JCT BOX	A/C COMPRESSOR CLUTCH
CB 15						CB 73	15.1,15.3	15A	561793	FR JCT BOX	WATER PUMP
CB 16	4.1	8A	561791	RR JCT BOX	ENGINE-RR CTR & START SW	CB 74					
CB 17						CB 75					
CB 18	4.1	6A	561791	RR JCT BOX	ENGINE-FR CTR SW	CB 76					
CB 19	5.1	15A	561793	RR JCT BOX	DDEC III E.C.M. POWER	CB 77					
CB 20	5.1	15A	561793	RR JCT BOX	DDEC III E.C.M. POWER	CB 78					
CB 21	5.1	10A	561790	RR JCT BOX	DDEC III 12V IGNITION	CB 79	15.1,15.2	15A	561792	FR JCT BOX	DRIVER'S DEFROSTER FAN
CB 22						CB 80					
CB 23						CB 81					
CB 24						CB 82					
CB 25						CB 83	6.1	20A	561794	RR JCT BOX	WORLD TRANSMISSION VIM POWER
CB 26	9.3	10A	561792	RR JCT BOX	BACK-UP LTS & ALARM	CB 84					
CB 27	7.2	8A	561791	FR JCT BOX	24V IGN DASH ACCESSORIES	CB 85					
CB 28	7.1	6A	561790	FR JCT BOX	12V IGN. DASH ACCESSORIES	CB 86					
CB 29						CB 87					
CB 30						CB 88					
CB 31						CB 89					
CB 32						CB 90					
CB 33						CB 91					
CB 34						CB 92	17.1	6A	561790	FR JCT BOX	DECEL SW & LEVEL-LOW
CB 35	9.3	6A	561790	FR JCT BOX	FOG, HAZARD SW & A/C MODULE	CB 105	22.1	6A	561790	FR JCT BOX	ABS E . C . U .
CB 36						CB 106	22.1	15A	561793	FR JCT BOX	ABS E . C . U .
CB 37	9.1	8A	561791	FR JCT BOX	HEAD & MULTI-FUNC. SW	CB 107					
CB 38						CB 115	12.2	8A	561791	FR JCT BOX	KEYLESS ENTRY SYSTEM
CB 39						CB 118	12.1	20A	561794	RR JCT BOX	LUGGAGE DOOR LOCK MOTOR
CB 40	9.1	10A	561791	FR JCT BOX	MARKER CLEARANCE & ID. LTS	CB 120	12.1	20A	561794	RR JCT BOX	LUGGAGE DOOR LOCK MOTOR
CB 41						CB 123	13.1	25A	561795	FR JCT BOX	ELECTRIC DRIVER'S SEAT
CB 42	9.1	10A	561792	RR JCT BOX	RR TAIL & LICENCE LTS	CB 124	8.1	8A	561791	RR JCT BOX	FAN CLUTCH RADIATOR
CB 43	9.1	20A	561794	FR JCT BOX	HEADLAMP (HI)	CB 125	9.2	20A	561794	FR JCT BOX	DIRECTIONAL LTS LH
CB 44	9.1	20A	561794	FR JCT BOX	HEADLAMP (LO)	CB 126	9.2	20A	561794	FR JCT BOX	DIRECTIONAL LTS RH
CB 45	9.2	10A	561792	FR JCT BOX	MULTI-FUNC. SW (WIPER CTR)	CB 129	7.1	6A	561790	FR JCT BOX	CLUSTER
CB 46						CB 130	23.1	6A	561790	FR JCT BOX	TT LT MODULE
CB 47						CB 132					
CB 48	9.3	6A	561790	FR JCT BOX	STOP SW	CB 138					
CB 49	9.3	15A	561793	RR JCT BOX	LH STOP LTS	CB 141	4.2	20A	561790	RR JCT BOX	ALT DELCO 24V-270A
CB 50						CB 142	2.1	15A	561790	RR JCT BOX	12V IGNITION FR. & RR. JCT. BOX
CB 51		15A	561793	RR JCT BOX	RH STOP LTS & TRAILER SIGN.						
CB 52	11.1	15A	561793	FR JCT BOX	LUGGAGE LTS						
CB 53											
CB 54											
CB 55											
CB 56											
CB 57	11.2	8A	561791	FR JCT BOX	DASH LTS RHEOSTAT						
CB 58	15.1,15.2	6A	561790	FR JCT BOX	HVAC DASH MODULE						

CIRCUIT BREAKERS CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION	No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 1	1.1	200A	560838	ENGINE CPT	A/C FULL AIR	CB 59					
CB 2	1.1	40A	870093	ENGINE CPT	12V HOT WIRE RR JCT BOX	CB 60					
CB 3	1.1	70A	562687	ENGINE CPT	12V FEDD RR JCT BOX	CB 61					
CB 4	1.1	90A	562683	ENGINE CPT	12V FEDD FR JCT BOX	CB 62					
CB 5	1.1	30A	870690	ENGINE CPT	24V HOT WIRE RR JCT BOX	CB 63					
CB 6	1.1	90A	562683	ENGINE CPT	24V FEED RR JCT BOX	CB 64					
CB 7	1.1	90A	562683	ENGINE CPT	24V FEED FR JCT BOX	CB 65					
CB 8	15.3	40A	562686	A/C JCT BOX	CONDENSER FAN MOTOR L.H.	CB 66					
CB 9	15.3	120A	562688	A/C JCT BOX	EVAPORATOR FAN MOTOR	CB 67					
CB 10	4.1	8A	561791	FR JCT BOX	MASTER SWITCH	CB 68					
CB 11	15.3	40A	562686	A/C JCT BOX	CONDENSER FAN MOTOR R.H.	CB 69					
CB 12						CB 70					
CB 13	6.1	3A	561797	RR JCT BOX	12V HOT WIRE DDR CONNECTOR	CB 71					
CB 14	15.4	25A	561795	FR JCT BOX	UPPER FAN DEFROST	CB 72	15.1,15.2	15A	561793	RR JCT BOX	A/C COMPRESSOR CLUTCH
CB 15						CB 73	15.1,15.3	15A	561793	FR JCT BOX	WATER PUMP
CB 16	4.1	8A	561791	RR JCT BOX	ENGINE-RR CTR & START SW	CB 74					
CB 17						CB 75					
CB 18	4.1	6A	561791	RR JCT BOX	ENGINE-FR CTR SW	CB 76					
CB 19	5.1	15A	561793	RR JCT BOX	DDEC III E.C.M. POWER	CB 77					
CB 20	5.1	15A	561793	RR JCT BOX	DDEC III E.C.M. POWER	CB 78					
CB 21	5.1	10A	561790	RR JCT BOX	DDEC III 12V IGNITION	CB 79	15.1,15.2	15A	561792	FR JCT BOX	DRIVER'S DEFROSTER FAN
CB 22						CB 80					
CB 23						CB 81					
CB 24						CB 82					
CB 25						CB 83	6.1	20A	561794	RR JCT BOX	WORLD TRANSMISSION VIM POWER
CB 26	9.3	10A	561792	RR JCT BOX	BACK-UP LTS & ALARM	CB 84					
CB 27	7.2	8A	561791	FR JCT BOX	24V IGN DASH ACCESSORIES	CB 85					
CB 28	7.1	6A	561790	FR JCT BOX	12V IGN. DASH ACCESSORIES	CB 86					
CB 29						CB 87					
CB 30						CB 88					
CB 31						CB 89					
CB 32						CB 90					
CB 33						CB 91					
CB 34						CB 92	17.1	6A	561790	FR JCT BOX	DECEL SW & LEVEL-LOW
CB 35	9.3	6A	561790	FR JCT BOX	FOG, HAZARD SW & A/C MODULE	CB 105	22.1	6A	561790	FR JCT BOX	ABS E . C . U .
CB 36						CB 106	22.1	15A	561793	FR JCT BOX	ABS E . C . U .
CB 37	9.1	8A	561791	FR JCT BOX	HEAD & MULTI-FUNC. SW	CB 107					
CB 38						CB 115	12.2	8A	561791	FR JCT BOX	KEYLESS ENTRY SYSTEM
CB 39						CB 118	12.1	20A	561794	RR JCT BOX	LUGGAGE DOOR LOCK MOTOR
CB 40	9.1	10A	561791	FR JCT BOX	MARKER CLEARANCE & ID. LTS	CB 120	12.1	20A	561794	RR JCT BOX	LUGGAGE DOOR LOCK MOTOR
CB 41						CB 123	13.1	25A	561795	FR JCT BOX	ELECTRIC DRIVER'S SEAT
CB 42	9.1	10A	561792	RR JCT BOX	RR TAIL & LICENCE LTS	CB 124	8.1	8A	561791	RR JCT BOX	FAN CLUTCH RADIATOR
CB 43	9.5	15A	561793	FR JCT BOX	HEADLAMP (HI)	CB 125	9.2	20A	561794	FR JCT BOX	DIRECTIONAL LTS LH
CB 44	9.5	15A	561793	FR JCT BOX	HEADLAMP (LO)	CB 126	9.2	20A	561794	FR JCT BOX	DIRECTIONAL LTS RH
CB 45	9.2	10A	561792	FR JCT BOX	MULTI-FUNC. SW (WIPER CTR)	CB 129	7.1	6A	561790	FR JCT BOX	CLUSTER
CB 46						CB 130	23.1	6A	561790	FR JCT BOX	TT LT MODULE
CB 47						CB 132					
CB 48	9.3	6A	561790	FR JCT BOX	STOP SW	CB 138					
CB 49	9.3	15A	561793	RR JCT BOX	LH STOP LTS	CB 141	4.2	20A	561790	RR JCT BOX	ALT DELCO 24V-270A
CB 50						CB 142	2.1	15A	561790	RR JCT BOX	12V IGNITION FR. & RR. JCT. BOX
CB 51	9.3	15A	561793	RR JCT BOX	RH STOP LTS & TRAILER SIGN.						
CB 52	11.1	15A	561793	FR JCT BOX	LUGGAGE LTS						
CB 53											
CB 54											
CB 55											
CB 56											
CB 57	11.2	8A	561791	FR JCT BOX	DASH LTS RHEOSTAT						
CB 58	15.1,15.2	6A	561790	FR JCT BOX	HVAC DASH MODULE						

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
AA 1	UNDER DASH PANEL-TAG AXLE SONALERT	BOSCH	5	-----	561183	C 65	ENGINE CPT - PRESS SW FAN CLUTCH	PED WP	2	561566	561690
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584	C 66					
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561638	561640	C 67					
C 3	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646	C 68					
C 4	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643	C 69					
C 5	FR SERVICE COMPT. - UNDERNEATH	AMP CPC	37	561645	561646	C 70	LH CONSOLE	AMP CPC	16	561639	561640
C 6	FR SERVICE COMPT. - UNDERNEATH	AMP CPC	16	561639	561640	C 71	FR JCT BOX COMPT.	AMP CPC	37	561645	561646
C 7	FR SERVICE COMPT - CLUTCH SW	ITT SS	3	561080	561111	C 72	FR JCT BOX COMPT.	AMP CPC	24	561642	561643
C 8	FR SERVICE COMPT. - UNDERNEATH	AMP CPC	24	561642	561643	C 73					
C 9	FR SERVICE COMPT. - UNDERNEATH	AMP CPC	24	561642	561643	C 74	FR JCT BOX COMPT.	AMP CPC	37	561645	561646
C 10	FR SERVICE DOOR ACCESS.	DEUTSCH	5	562565	562566	C 75					
C 11	FR SERV. CPT ACCESS	AMP CPC	37	561645	561646	C 76	ENGINE CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 12	FR SERV. CPT ACCESS	AMP CPC	16	561639	561640	C 77	ENGINE CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 13	FR SERV. CPT ACCESS	AMP CPC	9	561635	561637	C 78					
C 14						C 79					
C 15	LUGGAGE CPT (184)-MARK. SUPPL.	DEUTSCH	4	562479	562477	C 80					
C 16	LH CONSOLE SW-CRUISE ON/OFF	EATON	12	-----	562763	C 81	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	12		562763	C 82	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 18	LH CONSOLE SW-CRUISE SET	EATON	12		562763	C 83	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 19	LH CONSOLE SW-DECEL SW	EATON	12		562763	C 84	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 20	RR JCT BOX	DEUTSCH	70	562282	562285	C 85	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 21	ENGINE COMPT - LOCK DOOR MOT.	PED WP	2		562076	C 86	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 22	LUGGAGE COMPT (A) - A/C & FUEL TANK	AMP CPC	16	561639	561640	C 87					
C 23	LUGGAGE COMPT (1) - LUGG. ACCESS.	AMP CPC	24	561642	561643	C 88					
C 24	ENGINE COMPT. - INTERF RJB	PED WP	6	561606	561607	C 89					
C 25						C 90					
C 26	ENGINE COMPT. ACCESS	DEUTSCH	40	562281	562284	C 91					
C 27	ENGINE COMPT. - INTERF. RJB	DEUTSCH	6	562583	562581	C 92	FR JCT BOX COMPT - ABS	AMP CPC	9	561635	561637
C 28	LUGGAGE COMPT(4) - LUGG. ACCESS	AMP CPC	24	561642	561643	C 93					
C 29	FR SERVICE COMPT - E.C.U. FEED	PED WP	3	561781	561782	C 94					
C 30	ENGINE COMPT - MASTER SW. SIGN.	DEUTSCH	2	562486	562485	C 95	ENTRANCE DOOR ACCESS	DEUTSCH	6	562583	562581
C 31						C 96	FR SERVICE DOOR ACCESS	AMP MNL	9	561670	561669
C 32						C 97	FR SERVICE DOOR - WATER TANK	PED MP	20		562426
C 33	ENGINE DDEC II - SPEED SIGN SPARE	PED WP	2	561566	561690	C 98					
C 34						C 99	FR SERVICE CPT. LTS	AMP MNL	2	561248	561247
C 35	A/C COMPT - AIR RETURN SENSOR	AMP MNL	2	561248	561247	C 100					
C 36						C 101	FR SERVICE COMPT. ELEC. HORNS	PED WP	2	561566	561690
C 37						C 101	CONDENSER COMPT - A/C PRES. SW 1SP	PED WP	2	561566	561690
C 38						C 102	CONDENS. COMPT - LIQU. SOL. VAL. PRES.	PED WP	2	561566	561690
C 39						C 103					
C 40						C 104					
C 41	ENGINE COMPT - RH DOOR LOCK	DEUTSCH	4	562479	562477	C 105	UNDER DASH RH - DRV LIO SOL VL	PED WP	2	561566	561690
C 42	ENGINE COMPT - RR CAP LIGHTING	DEUTSCH	6	562583	562581	C 106	UNDER DASH RH - DRV WTR VALVE	PED WP	2	561566	561690
C 43	FR JCT BOX - ALT. MODULE	AMP MNL	12	561735	561734	C 107					
C 44	ENGINE COMPT - LIGHTS	PED WP	1	561605	561577	C 108					
C 45	FR JCT BOX COMPT - ROOF ACCESS	AMP CPC	24	561642	561643	C 109					
C 46						C 110					
C 47						C 111					
C 48	FR SERV. CPT. PRESS SW PARK BRAKE	DEUTSCH	4	562479	562477	C 112					
C 49						C 113					
C 50						C 114	ENGINE DDEC - SPEED SIGNAL (SPARG)	PED WP	2	561566	561690
C 51						C 115	RR JCT BOX - ENGINE ACCESS	DEUTSCH	40	562281	562284
C 52	ENGINE COMPT - COMPRESSOR	PED WP	2	561566	561690	C 116					
C 53	ENGINE COMPT - COMPRESSOR	PED WP	2	561566	561690	C 117					
C 54	FRONT ROOF - UPPER FAN DEFROST	AMP MNL	6	561552	561515	C 118	ENGINE COMPT - LICENCE	PED WP	2	930210	
C 55	CENTRAL DOOR LOCK	DEUTSCH	4	562479	562477	C 119	ENGINE COMPT - RH LOWER LAMP	PED WP	6	561606	561607
C 56						C 120	ENGINE COMPT - LH LOWER LAMP	PED WP	6	561606	561607
C 57						C 121					
C 58						C 122					
C 59						C 123					
C 60						C 124					
C 61	ENGINE COMPT - FUEL FILTER	PED WP	2	561566	561690	C 125					
C 62	ENGINE COMPT - COMPRESSOR STD	PED WP	2	561566	561690	C 126					
C 63	ENGINE COMPT - COMPRESSOR STD	PED WP	2	561566	561690	C 127					
C 64						C 128					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 129						C 194					
C 130						C 195					
C 131						C 196					
C 132						C 197					
C 133						C 198					
C 134	FR JCT BOX – DIODE CONN.	AMP MNL	15	561987	561986	C 199					
C 135	FR JCT BOX – DIODE CONN.	AMP MNL	15	561987	561986	C 200					
C 136	FR JCT BOX – DIODE CONN.	AMP MNL	15	561987	561986	C 201					
C 137						C 202					
C 138						C 203					
C 139						C 204					
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782	C 205					
C 141	RR DASH PANEL – LTS CONN. (SPARE)	AMP MNL	2	561248	561247	C 206					
C 142	ENGINE COMPT. B/U ALARM	PED WP	2	561566	561690	C 207					
C 143						C 208					
C 144						C 209					
C 145						C 210					
C 146						C 211	FR ROOF – SUN VISOR LH	AMP MNL	2	560900	560898
C 147						C 212	FR ROOF – SUN VISOR RH	AMP MNL	2	560900	560898
C 148						C 213					
C 149						C 214					
C 150						C 215					
C 151						C 216					
C 152						C 217					
C 153						C 218					
C 154						C 219					
C 155	EVAPORATOR CPT – WATER VALVE	BURKERT	3		563204	C 220					
C 156						C 221					
C 157	FR SERV. CPT – WATER PUMP DR'S	PED WP	3	561781	561782	C 222					
C 158	ENGINE CPT – DDEC INTERFACE	DEUTSCH	31	562572	562536	C 223	HEAD LIGHTS - FLASHER	DEUTSCH	5	562565	562566
C 159	ENGINE CPT – DDEC FEED	PED WP	6	561606	561607	C 224	HEAD LIGHTS	PED MP	3		562099
C 160	FR SERVICE CPT - INTERFACE	AMP CPC	37	561644	561646	C 225	FOG LIGHTS	DEUTSCH	3	562902	562901
C 161	ENGINE DDEC - ECM	PED MP	30		561600	C 226	FLASHER – (FR)	PED	3	562137	
C 162	ENGINE DDEC - ACCESSORIES	PED WP	4	561610	561611	C 227					
C 163	ENGINE CPT - COOLANT PROBE	PED MP	2		562350	C 228					
C 164						C 229					
C 165						C 230					
C 166						C 231					
C 167	FR SERVICE CPT - EL. FOOT PEDAL	PED WP	3	561781	561782	C 232					
C 168	FR SERVICE CPT - DDR	DEUTSCH	6	562360		C 233					
C 169	FR SERVICE CPT - WORLD TR. INTERFACE	AMP CPC	16	561639	561640	C 234					
C 170	FR JCT BOX FLASHER UNIT	PED	2		561940	C 235					
C 171	LH CONSOLE	AMP CPC	24	561642	561643	C 236	FR SERVICE CPT CENTER - ABS	AMP CPC	14	561636	561637
C 172	FR SERVICE COMPT - LEVEL LOW	AMP CPC	9	561637		C 237	FR AXLE CPT - ABS RH SENSOR	WABCO	2	641132	
C 173						C 238	FR AXLE CPT - ABS RH VALVE	WABCO	3	641098	
C 174						C 239	FR AXLE CPT - ABS LH VALVE	WABCO	3	641098	
C 175						C 240	FR AXLE CPT - ABS LH SENSOR	WABCO	2	641132	
C 176	UNDER DASH RH – WIPER PULSE	AMP FF	6		561186	C 241	LAST LUGGAGE COMPT - ABS	PED WP	6	561606	561607
C 177	UNDER DASH RH – WIPER MOTOR	AMP FF	6		561186	C 242	DRIVE AXLE CPT - ABS LH SENSOR	WABCO	2	641132	
C 178						C 243	DRIVE AXLE CPT - ABS LH VALVE	WABCO	3	641098	
C 179						C 244	DRIVE AXLE CPT - ABS RH VALVE	WABCO	3	641098	
C 180						C 245	DRIVE AXLE CPT - ABS RH SENSOR	WABCO	2	641132	
C 181						C 246	DRIVE AXLE CPT - ABS SPARE	PED WP	2	561566	561690
C 182						C 247					
C 183						C 248	LAST LUGGAGE CPT - ABS	PED WP	6	561606	561607
C 184						C 249	FR SERVICE CPT - ABS/DDEC	PED WP	2	561566	561690
C 185						C 250					
C 186						C 251	LH SW PANEL – FAST IDLE	EATON	12		562763
C 187	FR SERVICE JCT BOX - RESISTORS	AMP MNL	6	561552	561515	C 252	LUGGAGE COMPT. – WINDOW AJAR	MOLEX	4	561477	561476
C 188						C 253	LH SWITCH PANEL - ETHER	EATON	12		562763
C 189	ENGINE COMPT – DOOR LIGHT BACK UP	TRUCK-LITE	2	562755		C 254					
C 190	ENGINE COMPT – DOOR LIGHT STOP/TURN	AMP SS	3		562601	C 255	LH SWITCH PANEL – ENGINE BRAKE	EATON	12		562763
C 191	ENGINE COMPT – DOOR LIGHT STOP/TURN	AMP SS	3		562601	C 256					
C 192	ENGINE COMPT – DOOR LIGHT PARKING	AMP SS	3		562601	C 257					
C 193						C 258					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 258	LH SWITCH PANEL – MULTI FUNC. SW	AMP FF	8	561188		C 322	UNDER DASH RH - KEYLESS MODULE	AMP COM	22		562675
C 259						C 323	DRIVER'S WINDOW MOTOR	PED	2		561848
C 259	LH SWITCH PANEL – MULTI FUNC. SW	AMP FF	6		561186	C 324	LH SWITCH PANEL - UPPER FAN DEFROST	EATON	12		562763
C 260						C 325					
C 261						C 326	ENGINE MANUEL TRANSM. (SPARC)	PED WP	4	561610	561611
C 262						C 327					
C 263	LUGGAGE COMPT. LTS COMPT #3	AMP MNL	2	561248	561247	C 328					
C 264	LUGGAGE COMPT. LTS COMPT #2	AMP MNL	2	561248	561247	C 329					
C 265	LUGGAGE COMPT. LTS COMPT #1	AMP MNL	2	561248	561247	C 330					
C 266	ENTRANCE DOOR KEYLESS	AMP CPC	14	561585	561583	C 331					
C 267	UNDER DASH RH – KEYLESS PANEL	AMP CPC	24	561642	561643	C 332					
C 268	FR MIRROR RH	CONXALL	5	563091	563090	C 333					
C 269	FR MIRROR LH	CONXALL	5	563091	563090	C 334					
C 270	LUGGAGE COMPT LTS - 3 LH	AMP MNL	2	561248	561247	C 335					
C 271	LUGGAGE COMPT LTS - 4	AMP MNL	2	561248	561247	C 336					
C 272						C 337					
C 273						C 338					
C 274						C 339					
C 275						C 340	FR JCT BOX – FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 276	UNDER DASH RH – 3 WAY LTS DR'S	EATON	12		562763	C 341	LH SWITCH PANEL – HEAT MIRROR SW.	EATON	12		562763
C 277	LH SWITCH PANEL DOCK & CORN. SW.	EATON	12		562763	C 342					
C 278	LH SWITCH PANEL – B/U CANCEL	EATON	12		562763	C 343	LH SWITCH PANEL – HEAD LAMP SW.	EATON	12		562763
C 279	FR SERVICE COMPT LH – STEERING ZF	DEUTSCH	2		562485	C 344	LH SWITCH PANEL – HAZARD LT SW.	EATON	12		562763
C 280	ENGINE COMPT - COMPRESSOR STD	PED WP	2	561566	561690	C 345	LH SWITCH PANEL – FOG LT SW.	EATON	12		562763
C 281	LH CONSOLE – LEVEL LOW	AMP MNL	4	560851	560852	C 346					
C 282	FR SERVICE COMPT – STEERING ZF	VOLVO	2		562928	C 347					
C 283						C 348	INSTR. PANEL CENT. – RACOR MODULE	MOLEX	6	562070	562069
C 284						C 349					
C 285						C 350					
C 286						C 351					
C 287						C 352					
C 288						C 353					
C 289						C 354					
C 290	LUGGAGE CPT - DOOR LOCK	AMP MNL	4	560851	560852	C 355					
C 291	LUGGAGE CPT - DOOR LOCK	AMP MNL	4	560851	560852	C 356					
C 292	FR SERVICE CPT LEVEL LOW	PNEUMAC	2		641385	C 357					
C 293	FR SERVICE CPT LEVEL LOW	PNEUMAC	2		641385	C 358					
C 294	FR SERVICE CPT LEVEL LOW	PNEUMAC	2		641385	C 359	RH SWITCH PANEL – ENT. DOOR WIND. SW.	EATON	12		562763
C 295	FR SERVICE CPT LEVEL LOW	PNEUMAC	2		641385	C 360	ENTRANCE WINDOW MOTOR	PED	2		561848
C 296	FR SERVICE CPT LEVEL LOW	PNEUMAC	2		641385	C 361					
C 297						C 362					
C 298						C 363					
C 299						C 364					
C 300						C 365					
C 301						C 366					
C 302						C 367					
C 303	RR JCT BOX - DIODES	AMP MNL	15	561987	561986	C 368					
C 304						C 369					
C 305						C 370					
C 306						C 371					
C 307						C 372					
C 308						C 373					
C 309	ENGINE DDEC - ECM POWER	PED	4	561610	561611	C 374					
C 310	LH CONSOLE SW – LUG. DOOR LOCK	EATON	12		562763	C 375					
C 311						C 376					
C 312	ENGINE DDEC - ACCESSORIES	PED WP	3	561781	561782	C 377	LH SWITCH PANEL – STOP ENGINE OVERRIDE	EATON	12		562763
C 313	ENGINE DDEC - INPUT	FCI	10	563207		C 378					
C 314						C 379					
C 315	LH SWITCH PANEL – LH SUN VISOR SW.	EATON	12		562763	C 380					
C 316						C 381	UNDER DASH PANEL – ANTI THIELED	AMP MNL	2	561248	561247
C 317	LH SWITCH PANEL – RH SUN VISOR SW.	EATON	12		562763	C 382	ENGINE GENERATOR (1)	PED WP	1	561605	561577
C 318	LH CONSOLE SW – DR'S WINDOW SW.	EATON	12		562763	C 383	ENGINE COMPT – VOLTAGE REGULATOR	PED WP	1	561605	561577
C 319	ENGINE DDEC – ECM POWER	PED	4	561610	561611	C 384					
C 320	RT SWITCH PANEL – DRIVER'S LTS SW.	EATON	12		562763	C 385					
C 321	UNDER DASH RH - KEYLESS MODULE	AMP COM	26		562676	C 386					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 387	ENGINE COMPT. - BY-PASS VALVE	PED WP	2	561566	561690	C 452					
C 388						C 453					
C 389	ENGINE COMPT. - WATER PUMP	PED WP	2	561566	561690	C 454					
C 390	ENGINE COMPT. - A/C JCT. BOX	DEUTSCH	24	562280	562283	C 455					
C 391	CONDENSER COMPT. A/C PRESS SW 2 SP	PED WP	2	561566	561690	C 456	WORLD TRANS. - RETARDER ACCUM.	PED MP	2		562427
C 392						C 457	WORLD TRANS. - MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 393						C 458	WORLD TRANS. - TURBINE SP. SENS.	PED MP	2		562426
C 394						C 459	WORLD TRANS. - ENGINE SP. SENS.	PED MP	2		562426
C 395						C 460	WORLD TRANS. - SPEED SENSOR	ITT	2		562541
C 396						C 461	WORLD TRANS. - RETARDER TEMP.	PED MP	2		562856
C 397						C 462	WORLD TRANS. - RETARDER SOL. "K"	PED MP	2		562426
C 398						C 463	WORLD TRANS. - SENSOR CONN.	DEUTSCH	16	562570	562571
C 399	ENGINE GENERATOR (2)	PED WP	2	561566	561690	C 464	RR JCT BOX - DDL CONN	DEUTSCH	6		565360
C 400	ENGINE COMPT. - BLOCK HEATER	PED WP	3	561781	561782	C 465	LH CONSOLE - SHIFTER SELECTOR	PED	20		562825
C 401						C 466	FR SERVICE CPT - RESIS. MOD.	PED WP	3		562428
C 402						C 467	FR SERVICE CPT - RESIS. MOD.	PED WP	3		562428
C 403						C 468	FR SERVICE CPT - RET. HAND LEVER	AMP FF	8	561188	562363
C 404						C 469	FR SERVICE CPT - RET. HAND LEVER	AMP FF	8	561188	562363
C 405						C 470					
C 406						C 471					
C 407						C 472	FR SERVICE CPT - SILENT 1000	PED WP	2	561566	561690
C 408						C 473					
C 409						C 474	DRIVER'S TEMP SENSOR	AMP MNL	2	561248	561247
C 410						C 475	FR SERVICE CPT - SPEED SIGN. CONNECT.	DEUTSCH	6	562583	562581
C 411						C 475W	FR SERVICE CPT - SPEED SIGN. W. TR.	DEUTSCH	6	562583	562581
C 412						C 476					
C 413						C 477					
C 414						C 478					
C 415						C 479	UNDER DASH - HVAC DASH MODULE	MOLEX	3		562783
C 416						C 480	UNDER DASH RH - DR'S FAN SPEED CTR	PED WP	4	561889	561890
C 417						C 481	UNDER DASH RH - DR'S FAN SPEED CTR	PED WP	3	561781	561782
C 418						C 482					
C 419						C 483	FR SERVICE CPT - ELECTRICAL SEAT	PED	2	562237	
C 420						C 484	UNDER DASH LH - FOOT DAMPER MOTOR	PED	2		562076
C 421						C 485	UNDER DASH LH - DASH & DEFR. DAMP. M.	AMP MNL	3	561667	561558
C 422						C 486					
C 423						C 487					
C 424	UNDER DASH- AUDIBLE FLASHER	AMP MNL	3	561667	561550	C 488					
C 425						C 489					
C 426	ENGINE S60 RAD. FAN CLUTCH	PED WP	3	561781	561782	C 490					
C 427						C 491					
C 428	RH SW PANEL - DASH LTS RHEOSTAT	AMP MNL	3	561667	561550	C 492					
C 429						C 493					
C 430						C 494					
C 431						C 495					
C 432						C 496					
C 433						C 497					
C 434						C 498					
C 435						C 499					
C 436						C 500	FR JCT PANEL - PRODRIVER	MOLEX	6	562070	562069
C 437						C 501					
C 438						C 502					
C 439						C 503					
C 440						C 504					
C 441						C 505					
C 442						C 506	LH CONSOLE - LEVEL LOW SW.	EATON	12		562763
C 443						C 507					
C 444						C 508	RR JCT BOX - FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 445						C 509					
C 446						C 510					
C 447						C 511					
C 448						C 512					
C 449						C 513					
C 450						C 514					
C 451						C 515					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 516						C 581	LH DASH PANEL – ELECTRICAL HORN	PED MP	2		562777
C 517						C 582					
C 518						C 583	LH DASH PANEL – MASTER KEY SW.	DEUTSCH	2	562486	562485
C 519						C 584	FR. SERVICE COMPT – HORN PNEU. VALVE	PNEUMAC	3		562848
C 520						C 585	RH CONSOLE – ENT. DOOR LOCK VALVE	PNEUTECH	2		563147
C 521						C 586	FR SERVICE COMPT – ACC. PNEU.VALVE	PNEUMAC	3		562848
C 522	FR JCT BOX – DAYTIME LTS MODULE	BOSCH	5		561183	C 587					
C 523						C 588					
C 524	FR JCT BOX – FUSE BLOCK	PED	8	562647	562646	C 589	FR. MIRROR LH	CONXALL	8	563163	563088
C 525	FR JCT BOX – FUSE BLOCK	PED	8	562647	562646	C 590	FR. MIRROR RH	CONXALL	8	563163	563088
C 526	FR JCT BOX – FUSE BLOCK	PED	8	562647	562646	C 591	LH CONSOLE – LH MIRROR SW.	EURAMT.	8		562749
C 527	FR JCT BOX – FUSE BLOCK	PED	8	562647	562646	C 592	LH CONSOLE – RH MIRROR SW.	EURAMT.	8		562749
C 528						C 593					
C 529						C 594	FRONT ROOF – DRIVER'S LTS	LEEKRAFT	2	-----	562803
C 530						C 595					
C 531						C 596					
C 532						C 597	LH DASH PANEL – DISPLAY SET SW.	MOLEX	5		562905
C 533						C 598	LH DASH PANEL – DISPLAY SET SW.	MOLEX	5		562905
C 534						C 599	UND. DASH – MAGN. SW CTR POS. DR'S AIR	AMP MNL	2	561248	561247
C 535						C 600					
C 536						C 601					
C 537	A/C JCT BOX RESISTOR SIGN. RLY	AMP MNL	2	561248	561247	C 602					
C 538	FR SERV. CPT RH – OUTSIDE TEMP. SENS	AMP MNL	2	561248	561247	C 603					
C 539	HVAC DASH MODULE OUTPUT CONN.	MOLEY	24		562780	C 604					
C 540	HVAC DASH MODULE INPUT CONN.	MOLEY	22		562781	C 605					
C 541						C 606					
C 542						C 607	FR SERVICE COMPT – RPM SIGNAL (SPARE)	PED WP	2	561566	561690
C 543						C 608	FR SERV. COMPT – SPEED SIGNAL (SPARE)	PED WP	2	561566	561690
C 544						CS	FR SERVICE CPT - ECU WOLRD TR.	PED MP	32		562817
C 545						CT	FR SERVICE CPT - ECU WORLD TR.	PED MP	32		562824
C 546						CV	FR SERVICE CPT - ECU WORLD TR.	PED MP	32		562823
C 547						CX	CLUSTER	JAE	5		562957
C 548	LH DASH PANEL – T.T.LT TEST SW.	EATON	12		562763	CX 1	FR SERVICE CPT - ECU ABS	AMP JN	15		563200
C 549						CX 2	FR SERVICE CPT - ECU ABS	AMP JN	18		563201
C 550						CY	CLUSTER	JAE	30		562765
C 551						LX	CLUSTER	JAE	22		562766
C 552						LY	CLUSTER	JAE	30		562767
C 553						RX	CLUSTER	JAE	30		562767
C 554											
C 555											
C 556											
C 557											
C 558											
C 559											
C 560											
C 561											
C 562											
C 563											
C 564											
C 565											
C 566											
C 567											
C 568											
C 569											
C 570	UNDER DASH PANEL – T.T.LT MODULE	MOLEX	6		562464						
C 571	UNDER DASH PANEL – T.T.LT MODULE	MOLEX	20		562778						
C 572	UNDER DASH PANEL – T.T.LT MODULE	MOLEX	18		562779						
C 573	UNDER DASH PANEL – T.T.LT MODULE	MOLEX	8		562465						
C 574											
C 575											
C 576											
C 577											
C 578											
C 579											
C 580											

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN	#SOCKET	NO	LOCATION	TYPE	CAVITY	#PIN	#SOCKET
				HOUSING	HOUSING					HOUSING	HOUSING
AA 1	UNDER DASH PANEL-TAG AXLE SONALERT	BOSCH	5	-----	561183	C 65	ENGINE CPT - PRESS SW FAN CLUTCH	PED WP	2	561566	561690
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584	C 66					
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561638	561640	C 67					
C 3	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646	C 68					
C 4	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643	C 69					
C 5	FR SERVICE COMPT. - UNDERNEATH	AMP CPC	37	561645	561646	C 70	LH CONSOLE	AMP CPC	16	561639	561640
C 6	FR SERVICE COMPT. - UNDERNEATH	AMP CPC	16	561639	561640	C 71	FR JCT BOX COMPT.	AMP CPC	37	561645	561646
C 7	FR SERVICE COMPT - CLUTCH SW	ITT SS	3	561080	561111	C 72	FR JCT BOX COMPT.	AMP CPC	24	561642	561643
C 8	FR SERVICE COMPT. - UNDERNEATH	AMP CPC	24	561642	561643	C 73					
C 9	FR SERVICE COMPT. - UNDERNEATH	AMP CPC	24	561642	561643	C 74	FR JCT BOX COMPT.	AMP CPC	37	561645	561646
C 10	FR SERVICE DOOR ACCESS.	DEUTSCH	5	562565	562566	C 75					
C 11	FR SERV. CPT ACCESS	AMP CPC	37	561645	561646	C 76	ENGINE CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 12	FR SERV. CPT ACCESS	AMP CPC	16	561639	561640	C 77	ENGINE CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 13	FR SERV. CPT ACCESS	AMP CPC	9	561635	561637	C 78					
C 14						C 79					
C 15	LUGGAGE CPT (184)-MARK. SUPPL.	DEUTSCH	4	562479	562477	C 80					
C 16	LH CONSOLE SW-CRUISE ON/OFF	EATON	12	-----	562763	C 81	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	12		562763	C 82	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 18	LH CONSOLE SW-CRUISE SET	EATON	12		562763	C 83	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 19	LH CONSOLE SW-DECEL SW	EATON	12		562763	C 84	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 20	RR JCT BOX	DEUTSCH	70	562282	562285	C 85	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 21	ENGINE COMPT - LOCK DOOR MOT.	PED WP	2		562076	C 86	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 22	LUGGAGE COMPT (A) - A/C & FUEL TANK	AMP CPC	16	561639	561640	C 87					
C 23	LUGGAGE COMPT (1) - LUGG. ACCESS.	AMP CPC	24	561642	561643	C 88					
C 24	ENGINE COMPT. - INTERF RJB	PED WP	6	561606	561607	C 89					
C 25						C 90					
C 26	ENGINE COMPT. ACCESS	DEUTSCH	40	562281	562284	C 91					
C 27	ENGINE COMPT. - INTERF. RJB	DEUTSCH	6	562583	562581	C 92	FR JCT BOX COMPT - ABS	AMP CPC	9	561635	561637
C 28	LUGGAGE COMPT(4) - LUGG. ACCESS	AMP CPC	24	561642	561643	C 93					
C 29	FR SERVICE COMPT - E.C.U. FEED	PED WP	3	561781	561782	C 94					
C 30	ENGINE COMPT - MASTER SW. SIGN.	DEUTSCH	2	562486	562485	C 95	ENTRANCE DOOR ACCESS	DEUTSCH	6	562583	562581
C 31						C 96	FR SERVICE DOOR ACCESS	AMP MNL	9	561670	561669
C 32						C 97	FR SERVICE DOOR - WATER TANK	PED MP	20		562426
C 33	ENGINE DDEC II - SPEED SIGN SPARE	PED WP	2	561566	561690	C 98					
C 34						C 99	FR SERVICE CPT. LTS	AMP MNL	2	561248	561247
C 35	A/C COMPT - AIR RETURN SENSOR	AMP MNL	2	561248	561247	C 100					
C 36						C 101	FR SERVICE COMPT. ELEC. HORNS	PED WP	2	561566	561690
C 37						C 101	CONDENSER COMPT - A/C PRES. SW 1SP	PED WP	2	561566	561690
C 38						C 102	CONDENS. COMPT - LIQU. SOL. VAL. PRES.	PED WP	2	561566	561690
C 39						C 103					
C 40						C 104					
C 41	ENGINE COMPT - RH DOOR LOCK	DEUTSCH	4	562479	562477	C 105	UNDER DASH RH - DRV LIO SOL VL	PED WP	2	561566	561690
C 42	ENGINE COMPT - RR CAP LIGHTING	DEUTSCH	6	562583	562581	C 106	UNDER DASH RH - DRV WTR VALVE	PED WP	2	561566	561690
C 43	FR JCT BOX - ALT. MODULE	AMP MNL	12	561735	561734	C 107					
C 44	ENGINE COMPT - LIGHTS	GROTE	2	563268	-----	C 108					
C 45	FR JCT BOX COMPT - ROOF ACCESS	AMP CPC	24	561642	561643	C 109					
C 46						C 110					
C 47						C 111					
C 48	FR SERV. CPT. PRESS SW PARK BRAKE	DEUTSCH	4	562479	562477	C 112					
C 49						C 113					
C 50						C 114	ENGINE DDEC - SPEED SIGNAL (SPARG)	PED WP	2	561566	561690
C 51						C 115	RR JCT BOX - ENGINE ACCESS	DEUTSCH	40	562281	562284
C 52	ENGINE COMPT - COMPRESSOR	PED WP	2	561566	561690	C 116					
C 53	ENGINE COMPT - COMPRESSOR	PED WP	2	561566	561690	C 117					
C 54	FRONT ROOF - UPPER FAN DEFROST	AMP MNL	6	561552	561515	C 118	ENGINE COMPT - LICENCE	PED WP	2	930210	
C 55	CENTRAL DOOR LOCK	DEUTSCH	4	562479	562477	C 119	ENGINE COMPT - RH LOWER LAMP	PED WP	6	561606	561607
C 56						C 120	ENGINE COMPT - LH LOWER LAMP	PED WP	6	561606	561607
C 57						C 121					
C 58						C 122					
C 59						C 123					
C 60						C 124					
C 61	ENGINE COMPT - FUEL FILTER	PED WP	2	561566	561690	C 125					
C 62	ENGINE COMPT - COMPRESSOR STD	PED WP	2	561566	561690	C 126					
C 63	ENGINE COMPT - COMPRESSOR STD	PED WP	2	561566	561690	C 127					
C 64						C 128					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 129						C 194					
C 130						C 195					
C 131						C 196					
C 132						C 197					
C 133						C 198					
C 134	FR JCT BOX – DIODE CONN.	AMP MNL	15	561987	561986	C 199					
C 135	FR JCT BOX – DIODE CONN.	AMP MNL	15	561987	561986	C 200					
C 136	FR JCT BOX – DIODE CONN.	AMP MNL	15	561987	561986	C 201					
C 137						C 202					
C 138						C 203					
C 139						C 204					
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782	C 205					
C 141	RR DASH PANEL – LTS CONN. (SPARE)	AMP MNL	2	561248	561247	C 206					
C 142	ENGINE COMPT. B/U ALARM	PED WP	2	561566	561690	C 207					
C 143						C 208					
C 144						C 209					
C 145						C 210					
C 146						C 211	FR ROOF – SUN VISOR LH	AMP MNL	2	560900	560898
C 147						C 212	FR ROOF – SUN VISOR RH	AMP MNL	2	560900	560898
C 148						C 213					
C 149						C 214					
C 150						C 215					
C 151						C 216					
C 152						C 217					
C 153						C 218					
C 154						C 219					
C 155	EVAPORATOR CPT – WATER VALVE	BURKERT	3		563204	C 220					
C 156						C 221					
C 157	FR SERV. CPT – WATER PUMP DR'S	PED WP	3	561781	561782	C 222					
C 158	ENGINE CPT – DDEC INTERFACE	DEUTSCH	31	562572	562536	C 223	HEAD LIGHTS - FLASHER	DEUTSCH	5	562565	562566
C 159	ENGINE CPT – DDEC FEED	PED WP	6	561606	561607	C 224	HEAD LIGHTS	PED MP	3		562099
C 160	FR SERVICE CPT - INTERFACE	AMP CPC	37	561644	561646	C 225	FOG LIGHTS	DEUTSCH	3	562902	562901
C 161	ENGINE DDEC - ECM	PED MP	30		561600	C 226	FLASHER – (FR)	PED	3	562137	
C 162	ENGINE DDEC - ACCESSORIES	PED WP	4	561610	561611	C 227					
C 163	ENGINE CPT - COOLANT PROBE	PED MP	2		562350	C 228					
C 164						C 229					
C 165						C 230					
C 166						C 231					
C 167	FR SERVICE CPT - EL. FOOT PEDAL	PED WP	3	561781	561782	C 232					
C 168	FR SERVICE CPT - DDR	DEUTSCH	6	562360		C 233					
C 169	FR SERVICE CPT - WORLD TR. INTERFACE	AMP CPC	16	561639	561640	C 234					
C 170	FR JCT BOX FLASHER UNIT	PED	2		561940	C 235					
C 171	LH CONSOLE	AMP CPC	24	561642	561643	C 236	FR SERVICE CPT CENTER - ABS	AMP CPC	14	561636	561637
C 172	FR SERVICE COMPT - LEVEL LOW	AMP CPC	9	561637		C 237	FR AXLE CPT - ABS RH SENSOR	WABCO	2	641132	
C 173						C 238	FR AXLE CPT - ABS RH VALVE	WABCO	3	641098	
C 174						C 239	FR AXLE CPT - ABS LH VALVE	WABCO	3	641098	
C 175						C 240	FR AXLE CPT - ABS LH SENSOR	WABCO	2	641132	
C 176	UNDER DASH RH – WIPER PULSE	AMP FF	6		561186	C 241	LAST LUGGAGE COMPT - ABS	PED WP	6	561606	561607
C 177	UNDER DASH RH – WIPER MOTOR	AMP FF	6		561186	C 242	DRIVE AXLE CPT - ABS LH SENSOR	WABCO	2	641132	
C 178						C 243	DRIVE AXLE CPT - ABS LH VALVE	WABCO	3	641098	
C 179						C 244	DRIVE AXLE CPT - ABS RH VALVE	WABCO	3	641098	
C 180						C 245	DRIVE AXLE CPT - ABS RH SENSOR	WABCO	2	641132	
C 181						C 246	DRIVE AXLE CPT - ABS SPARE	PED WP	2	561566	561690
C 182						C 247					
C 183						C 248	LAST LUGGAGE CPT - ABS	PED WP	6	561606	561607
C 184						C 249	FR SERVICE CPT - ABS/DDEC	PED WP	2	561566	561690
C 185						C 250					
C 186						C 251	LH SW PANEL – FAST IDLE	EATON	12		562763
C 187	FR SERVICE JCT BOX - RESISTORS	AMP MNL	6	561552	561515	C 252	LUGGAGE COMPT. – WINDOW AJAR	MOLEX	4	561477	561476
C 188						C 253	LH SWITCH PANEL - ETHER	EATON	12		562763
C 189	ENGINE COMPT – DOOR LIGHT BACK UP	TRUCK-LITE	2	562755		C 254					
C 190	ENGINE COMPT – DOOR LIGHT STOP/TURN	AMP SS	3		562601	C 255	LH SWITCH PANEL – ENGINE BRAKE	EATON	12		562763
C 191	ENGINE COMPT – DOOR LIGHT STOP/TURN	AMP SS	3		562601	C 256					
C 192	ENGINE COMPT – DOOR LIGHT PARKING	AMP SS	3		562601	C 257					
C 193						C 258					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 258	LH SWITCH PANEL – MULTI FUNC. SW	AMP FF	8	561188		C 322	UNDER DASH RH - KEYLESS MODULE	AMP COM	22		562675
C 259						C 323	DRIVER'S WINDOW MOTOR	PED	2		561848
C 259	LH SWITCH PANEL – MULTI FUNC. SW	AMP FF	6		561186	C 324	LH SWITCH PANEL - UPPER FAN DEFROST	EATON	12		562763
C 260						C 325					
C 261						C 326					
C 262						C 327					
C 263	LUGGAGE COMPT. LTS COMPT #3	AMP MNL	2	561248	561247	C 328					
C 264	LUGGAGE COMPT. LTS COMPT #2	AMP MNL	2	561248	561247	C 329					
C 265	LUGGAGE COMPT. LTS COMPT #1	AMP MNL	2	561248	561247	C 330					
C 266	ENTRANCE DOOR KEYLESS	AMP CPC	14	561585	561583	C 331					
C 267	UNDER DASH RH – KEYLESS PANEL	AMP CPC	24	561642	561643	C 332					
C 268	FR MIRROR RH	CONXALL	5	563091	563090	C 333					
C 269	FR MIRROR LH	CONXALL	5	563091	563090	C 334					
C 270	LUGGAGE COMPT LTS - 3 LH	AMP MNL	2	561248	561247	C 335					
C 271	LUGGAGE COMPT LTS - 4	AMP MNL	2	561248	561247	C 336					
C 272						C 337					
C 273						C 338					
C 274						C 339					
C 275						C 340	FR JCT BOX – FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 276	UNDER DASH RH – 3 WAY LTS DR'S	EATON	12		562763	C 341	LH SWITCH PANEL – HEAT MIRROR SW.	EATON	12		562763
C 277	LH SWITCH PANEL DOCK & CORN. SW.	EATON	12		562763	C 342					
C 278	LH SWITCH PANEL – B/U CANCEL	EATON	12		562763	C 343	LH SWITCH PANEL – HEAD LAMP SW.	EATON	12		562763
C 279	FR SERVICE COMPT LH – STEERING ZF	DEUTSCH	2		562485	C 344	LH SWITCH PANEL – HAZARD LT SW.	EATON	12		562763
C 280	ENGINE COMPT - COMPRESSOR STD	PED WP	2	561566	561690	C 345	LH SWITCH PANEL – FOG LT SW.	EATON	12		562763
C 281	LH CONSOLE – LEVEL LOW	AMP MNL	4	560851	560852	C 346					
C 282	FR SERVICE COMPT – STEERING ZF	VOLVO	2		562928	C 347					
C 283						C 348	INSTR. PANEL CENT. – RACOR MODULE	MOLEX	6	562070	562069
C 284						C 349					
C 285						C 350					
C 286						C 351					
C 287						C 352					
C 288						C 353					
C 289						C 354					
C 290	LUGGAGE CPT - DOOR LOCK	AMP MNL	4	560851	560852	C 355					
C 291	LUGGAGE CPT - DOOR LOCK	AMP MNL	4	560851	560852	C 356					
C 292	FR SERVICE CPT LEVEL LOW	PNEUMAC	2		641385	C 357					
C 293	FR SERVICE CPT LEVEL LOW	PNEUMAC	2		641385	C 358					
C 294	FR SERVICE CPT LEVEL LOW	PNEUMAC	2		641385	C 359	RH SWITCH PANEL – ENT. DOOR WIND. SW.	EATON	12		562763
C 295	FR SERVICE CPT LEVEL LOW	PNEUMAC	2		641385	C 360	ENTRANCE WINDOW MOTOR	PED	2		561848
C 296	FR SERVICE CPT LEVEL LOW	PNEUMAC	2		641385	C 361					
C 297						C 362					
C 298						C 363					
C 299						C 364					
C 300						C 365					
C 301						C 366					
C 302						C 367					
C 303	RR JCT BOX - DIODES	AMP MNL	15	561987	561986	C 368					
C 304						C 369					
C 305						C 370					
C 306						C 371					
C 307						C 372					
C 308						C 373					
C 309	ENGINE DDEC - ECM POWER	PED	4	561610	561611	C 374					
C 310	LH CONSOLE SW – LUG. DOOR LOCK	EATON	12		562763	C 375					
C 311						C 376					
C 312	ENGINE DDEC - ACCESSORIES	PED WP	3	561781	561782	C 377	LH SWITCH PANEL – STOP ENGINE OVERRIDE	EATON	12		562763
C 313	ENGINE DDEC - INPUT	FCI	10	563207		C 378					
C 314						C 379					
C 315	LH SWITCH PANEL – LH SUN VISOR SW.	EATON	12		562763	C 380					
C 316						C 381	UNDER DASH PANEL – ANTI THIELED	AMP MNL	2	561248	561247
C 317	LH SWITCH PANEL – RH SUN VISOR SW.	EATON	12		562763	C 382	ENGINE GENERATOR (1)	PED WP	1	561605	561577
C 318	LH CONSOLE SW – DR'S WINDOW SW.	EATON	12		562763	C 383	ENGINE COMPT – VOLTAGE REGULATOR	PED WP	1	561605	561577
C 319	ENGINE DDEC – ECM POWER	PED	4	561610	561611	C 384					
C 320	RT SWITCH PANEL – DRIVER'S LTS SW.	EATON	12		562763	C 385					
C 321	UNDER DASH RH - KEYLESS MODULE	AMP COM	26		562676	C 386					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 387	ENGINE COMPT. - BY-PASS VALVE	PED WP	2	561566	561690	C 452					
C 388						C 453					
C 389	ENGINE COMPT. - WATER PUMP	PED WP	2	561566	561690	C 454					
C 390	ENGINE COMPT. - A/C JCT. BOX	DEUTSCH	24	562280	562283	C 455					
C 391	CONDENSER COMPT. A/C PRESS SW 2 SP	PED WP	2	561566	561690	C 456	WORLD TRANS. - RETARDER ACCUM.	PED MP	2		562427
C 392						C 457	WORLD TRANS. - MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 393						C 458	WORLD TRANS. - TURBINE SP. SENS.	PED MP	2		562426
C 394						C 459	WORLD TRANS. - ENGINE SP. SENS.	PED MP	2		562426
C 395						C 460	WORLD TRANS. - SPEED SENSOR	ITT	2		562541
C 396						C 461	WORLD TRANS. - RETARDER TEMP.	PED MP	2		562856
C 397						C 462	WORLD TRANS. - RETARDER SOL. "K"	PED MP	2		562426
C 398						C 463	WORLD TRANS. - SENSOR CONN.	DEUTSCH	16	562570	562571
C 399	ENGINE GENERATOR (2)	PED WP	2	561566	561690	C 464	RR JCT BOX - DDL CONN	DEUTSCH	6		565360
C 400	ENGINE COMPT. - BLOCK HEATER	PED WP	3	561781	561782	C 465	LH CONSOLE - SHIFTER SELECTOR	PED	20		562825
C 401						C 466	FR SERVICE CPT - RESIS. MOD.	PED WP	3		562428
C 402						C 467	FR SERVICE CPT - RESIS. MOD.	PED WP	3		562428
C 403						C 468	FR SERVICE CPT - RET. HAND LEVER	AMP FF	8	561188	562363
C 404						C 469	FR SERVICE CPT - RET. HAND LEVER	AMP FF	8	561188	562363
C 405						C 470					
C 406						C 471					
C 407						C 472	FR SERVICE CPT - SILENT 1000	PED WP	2	561566	561690
C 408						C 473					
C 409						C 474	DRIVER'S TEMP SENSOR	AMP MNL	2	561248	561247
C 410						C 475	FR SERVICE CPT - SPEED SIGN. CONNECT.	DEUTSCH	6	562583	562581
C 411						C 475W	FR SERVICE CPT - SPEED SIGN. W. TR.	DEUTSCH	6	562583	562581
C 412						C 476					
C 413						C 477					
C 414						C 478					
C 415						C 479	UNDER DASH - HVAC DASH MODULE	MOLEX	3		562783
C 416						C 480	UNDER DASH RH - DR'S FAN SPEED CTR	PED WP	4	561889	561890
C 417						C 481	UNDER DASH RH - DR'S FAN SPEED CTR	PED WP	3	561781	561782
C 418						C 482					
C 419						C 483	FR SERVICE CPT - ELECTRICAL SEAT	PED	2	562237	
C 420						C 484	UNDER DASH LH - FOOT DAMPER MOTOR	PED	2		562076
C 421						C 485	UNDER DASH LH - DASH & DEFR. DAMP. M.	AMP MNL	3	561667	561558
C 422						C 486					
C 423						C 487					
C 424	UNDER DASH- AUDIBLE FLASHER	AMP MNL	3	561667	561550	C 488					
C 425						C 489					
C 426	ENGINE S60 RAD. FAN CLUTCH	PED WP	3	561781	561782	C 490					
C 427						C 491					
C 428	RH SW PANEL - DASH LTS RHEOSTAT	AMP MNL	3	561667	561550	C 492					
C 429						C 493					
C 430						C 494					
C 431						C 495					
C 432						C 496					
C 433						C 497					
C 434						C 498					
C 435						C 499					
C 436						C 500	FR JCT PANEL - PRODRIVER	MOLEX	6	562070	562069
C 437						C 501					
C 438						C 502					
C 439						C 503					
C 440						C 504					
C 441						C 505					
C 442						C 506	LH CONSOLE - LEVEL LOW SW.	EATON	12		562763
C 443						C 507					
C 444						C 508	RR JCT BOX - FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 445						C 509					
C 446						C 510					
C 447						C 511					
C 448						C 512					
C 449						C 513					
C 450						C 514					
C 451						C 515					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 516						C 581	LH DASH PANEL – ELECTRICAL HORN	PED MP	2		562777
C 517						C 582					
C 518						C 583	LH DASH PANEL – MASTER KEY SW.	DEUTSCH	2	562486	562485
C 519						C 584	FR. SERVICE COMPT – HORN PNEU. VALVE	PNEUMAC	3		562848
C 520						C 585	RH CONSOLE – ENT. DOOR LOCK VALVE	PNEUTECH	2		563147
C 521						C 586	FR SERVICE COMPT – ACC. PNEU.VALVE	PNEUMAC	3		562848
C 522	FR JCT BOX – DAYTIME LTS MODULE	BOSCH	5		561183	C 587					
C 523						C 588					
C 524	FR JCT BOX – FUSE BLOCK	PED	8	562647	562646	C 589	FR. MIRROR LH	CONXALL	8	563163	563088
C 525	FR JCT BOX – FUSE BLOCK	PED	8	562647	562646	C 590	FR. MIRROR RH	CONXALL	8	563163	563088
C 526	FR JCT BOX – FUSE BLOCK	PED	8	562647	562646	C 591	LH CONSOLE – LH MIRROR SW.	EURAMT.	8		562749
C 527	FR JCT BOX – FUSE BLOCK	PED	8	562647	562646	C 592	LH CONSOLE – RH MIRROR SW.	EURAMT.	8		562749
C 528						C 593					
C 529						C 594	FRONT ROOF – DRIVER'S LTS	LEEKRAFT	2	-----	562803
C 530						C 595					
C 531						C 596					
C 532						C 597	LH DASH PANEL – DISPLAY SET SW.	MOLEX	5		562905
C 533						C 598	LH DASH PANEL – DISPLAY SET SW.	MOLEX	5		562905
C 534						C 599	UND. DASH – MAGN. SW CTR POS. DR'S AIR	AMP MNL	2	561248	561247
C 535						C 600					
C 536						C 601					
C 537	A/C JCT BOX RESISTOR SIGN. RLY	AMP MNL	2	561248	561247	C 602					
C 538	FR SERV. CPT RH – OUTSIDE TEMP. SENS	AMP MNL	2	561248	561247	C 603					
C 539	HVAC DASH MODULE OUTPUT CONN.	MOLEY	24		562780	C 604					
C 540	HVAC DASH MODULE INPUT CONN.	MOLEY	22		562781	C 605					
C 541						C 606					
C 542						C 607	FR SERVICE COMPT – RPM SIGNAL (SPARE)	PED WP	2	561566	561690
C 543						C 608	FR SERV. COMPT – SPEED SIGNAL (SPARE)	PED WP	2	561566	561690
C 544						CS	FR SERVICE CPT - ECU WOLRD TR.	PED MP	32		562817
C 545						CT	FR SERVICE CPT - ECU WORLD TR.	PED MP	32		562824
C 546						CV	FR SERVICE CPT - ECU WORLD TR.	PED MP	32		562823
C 547						CX	CLUSTER	JAE	5		562957
C 548	LH DASH PANEL – T.T.LT TEST SW.	EATON	12		562763	CX 1	FR SERVICE CPT - ECU ABS	AMP JN	15		563200
C 549						CX 2	FR SERVICE CPT - ECU ABS	AMP JN	18		563201
C 550						CY	CLUSTER	JAE	30		562765
C 551						LX	CLUSTER	JAE	22		562766
C 552						LY	CLUSTER	JAE	30		562767
C 553						RX	CLUSTER	JAE	30		562767
C 554											
C 555											
C 556											
C 557											
C 558											
C 559											
C 560											
C 561											
C 562											
C 563											
C 564											
C 565											
C 566											
C 567											
C 568											
C 569											
C 570	UNDER DASH PANEL – T.T.LT MODULE	MOLEX	6		562464						
C 571	UNDER DASH PANEL – T.T.LT MODULE	MOLEX	20		562778						
C 572	UNDER DASH PANEL – T.T.LT MODULE	MOLEX	18		562779						
C 573	UNDER DASH PANEL – T.T.LT MODULE	MOLEX	8		562465						
C 574											
C 575											
C 576											
C 577											
C 578											
C 579											
C 580											

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN	#SOCKET	NO	LOCATION	TYPE	CAVITY	#PIN	#SOCKET
				HOUSING	HOUSING					HOUSING	HOUSING
AA 1	UNDER DASH PANEL-TAG AXLE SONALERT	BOSCH	5	-----	561183	C 65	ENGINE CPT - PRESS SW FAN CLUTCH	PED WP	2	561566	561690
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584	C 66					
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561638	561640	C 67					
C 3	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646	C 68					
C 4	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643	C 69					
C 5	FR SERVICE COMPT. - UNDERNEATH	AMP CPC	37	561645	561646	C 70	LH CONSOLE	AMP CPC	16	561639	561640
C 6	FR SERVICE COMPT. - UNDERNEATH	AMP CPC	16	561639	561640	C 71	FR JCT BOX COMPT.	AMP CPC	37	561645	561646
C 7	FR SERVICE COMPT - CLUTCH SW	ITT SS	3	561080	561111	C 72	FR JCT BOX COMPT.	AMP CPC	24	561642	561643
C 8	FR SERVICE COMPT. - UNDERNEATH	AMP CPC	24	561642	561643	C 73					
C 9	FR SERVICE COMPT. - UNDERNEATH	AMP CPC	24	561642	561643	C 74	FR JCT BOX COMPT.	AMP CPC	37	561645	561646
C 10	FR SERVICE DOOR ACCESS.	DEUTSCH	5	562565	562566	C 75					
C 11	FR SERV. CPT ACCESS	AMP CPC	37	561645	561646	C 76	ENGINE CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 12	FR SERV. CPT ACCESS	AMP CPC	16	561639	561640	C 77	ENGINE CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 13	FR SERV. CPT ACCESS	AMP CPC	9	561635	561637	C 78					
C 14						C 79					
C 15	LUGGAGE CPT (184)-MARK. SUPPL.	DEUTSCH	4	562479	562477	C 80					
C 16	LH CONSOLE SW-CRUISE ON/OFF	EATON	12	-----	562763	C 81	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	12		562763	C 82	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 18	LH CONSOLE SW-CRUISE SET	EATON	12		562763	C 83	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 19	LH CONSOLE SW-DECEL SW	EATON	12		562763	C 84	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 20	RR JCT BOX	DEUTSCH	70	562282	562285	C 85	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 21	ENGINE COMPT - LOCK DOOR MOT.	PED WP	2		562076	C 86	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 22	LUGGAGE COMPT (A) - A/C & FUEL TANK	AMP CPC	16	561639	561640	C 87					
C 23	LUGGAGE COMPT (1) - LUGG. ACCESS.	AMP CPC	24	561642	561643	C 88					
C 24	ENGINE COMPT. - INTERF RJB	PED WP	6	561606	561607	C 89					
C 25						C 90					
C 26	ENGINE COMPT. ACCESS	DEUTSCH	40	562281	562284	C 91					
C 27	ENGINE COMPT. - INTERF. RJB	DEUTSCH	6	562583	562581	C 92	FR JCT BOX COMPT - ABS	AMP CPC	9	561635	561637
C 28	LUGGAGE COMPT(4) - LUGG. ACCESS	AMP CPC	24	561642	561643	C 93					
C 29	FR SERVICE COMPT - E.C.U. FEED	PED WP	3	561781	561782	C 94					
C 30	ENGINE COMPT - MASTER SW. SIGN.	DEUTSCH	2	562486	562485	C 95	ENTRANCE DOOR ACCESS	DEUTSCH	6	562583	562581
C 31						C 96	FR SERVICE DOOR ACCESS	AMP MNL	9	561670	561669
C 32						C 97	FR SERVICE DOOR - WATER TANK	PED MP	20		562426
C 33	ENGINE DDEC II - SPEED SIGN SPARE	PED WP	2	561566	561690	C 98					
C 34						C 99	FR SERVICE CPT. LTS	AMP MNL	2	561248	561247
C 35	A/C COMPT - AIR RETURN SENSOR	AMP MNL	2	561248	561247	C 100					
C 36						C 101	FR SERVICE COMPT. ELEC. HORNS	PED WP	2	561566	561690
C 37						C 101	CONDENSER COMPT - A/C PRES. SW 1SP	PED WP	2	561566	561690
C 38						C 102	CONDENS. COMPT - LIQU. SOL. VAL. PRES.	PED WP	2	561566	561690
C 39						C 103					
C 40						C 104					
C 41	ENGINE COMPT - RH DOOR LOCK	DEUTSCH	4	562479	562477	C 105	UNDER DASH RH - DRV LIO SOL VL	PED WP	2	561566	561690
C 42	ENGINE COMPT - RR CAP LIGHTING	DEUTSCH	6	562583	562581	C 106	UNDER DASH RH - DRV WTR VALVE	PED WP	2	561566	561690
C 43	FR JCT BOX - ALT. MODULE	AMP MNL	12	561735	561734	C 107					
C 44	ENGINE COMPT - LIGHTS	GROTE	2	563268	-----	C 108					
C 45	FR JCT BOX COMPT - ROOF ACCESS	AMP CPC	24	561642	561643	C 109					
C 46						C 110					
C 47						C 111					
C 48	FR SERV. CPT. PRESS SW PARK BRAKE	DEUTSCH	4	562479	562477	C 112					
C 49						C 113					
C 50						C 114	ENGINE DDEC - SPEED SIGNAL (SPARG)	PED WP	2	561566	561690
C 51						C 115	RR JCT BOX - ENGINE ACCESS	DEUTSCH	40	562281	562284
C 52	ENGINE COMPT - COMPRESSOR	PED WP	2	561566	561690	C 116					
C 53	ENGINE COMPT - COMPRESSOR	PED WP	2	561566	561690	C 117					
C 54	FRONT ROOF - UPPER FAN DEFROST	AMP MNL	6	561552	561515	C 118	ENGINE COMPT - LICENCE	PED WP	2	930210	
C 55	CENTRAL DOOR LOCK	DEUTSCH	4	562479	562477	C 119	ENGINE COMPT - RH LOWER LAMP	PED WP	6	561606	561607
C 56						C 120	ENGINE COMPT - LH LOWER LAMP	PED WP	6	561606	561607
C 57						C 121					
C 58						C 122					
C 59						C 123					
C 60						C 124					
C 61	ENGINE COMPT - FUEL FILTER	PED WP	2	561566	561690	C 125					
C 62	ENGINE COMPT - COMPRESSOR STD	PED WP	2	561566	561690	C 126					
C 63	ENGINE COMPT - COMPRESSOR STD	PED WP	2	561566	561690	C 127					
C 64						C 128					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 129						C 194					
C 130						C 195					
C 131						C 196					
C 132						C 197					
C 133						C 198					
C 134	FR JCT BOX – DIODE CONN.	AMP MNL	15	561987	561986	C 199					
C 135	FR JCT BOX – DIODE CONN.	AMP MNL	15	561987	561986	C 200					
C 136	FR JCT BOX – DIODE CONN.	AMP MNL	15	561987	561986	C 201					
C 137						C 202					
C 138						C 203					
C 139						C 204					
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782	C 205					
C 141	RR DASH PANEL – LTS CONN. (SPARE)	AMP MNL	2	561248	561247	C 206					
C 142	ENGINE COMPT. B/U ALARM	PED WP	2	561566	561690	C 207					
C 143						C 208					
C 144						C 209					
C 145						C 210					
C 146						C 211	FR ROOF – SUN VISOR LH	AMP MNL	2	560900	560898
C 147						C 212	FR ROOF – SUN VISOR RH	AMP MNL	2	560900	560898
C 148						C 213					
C 149						C 214					
C 150						C 215					
C 151						C 216					
C 152						C 217					
C 153						C 218					
C 154						C 219					
C 155	EVAPORATOR CPT – WATER VALVE	BURKERT	3		563204	C 220					
C 156						C 221					
C 157	FR SERV. CPT – WATER PUMP DR'S	PED WP	3	561781	561782	C 222					
C 158	ENGINE CPT – DDEC INTERFACE	DEUTSCH	31	562572	562536	C 223	HEAD LIGHTS - FLASHER	DEUTSCH	5	562565	562566
C 159	ENGINE CPT – DDEC FEED	PED WP	6	561606	561607	C 224	HEAD LIGHTS	PED MP	3		562099
C 160	FR SERVICE CPT - INTERFACE	AMP CPC	37	561644	561646	C 225	FOG LIGHTS	DEUTSCH	3	562902	562901
C 161	ENGINE DDEC - ECM	PED MP	30		561600	C 226	FLASHER – (FR)	PED	3	562137	
C 162	ENGINE DDEC - ACCESSORIES	PED WP	4	561610	561611	C 227					
C 163	ENGINE CPT - COOLANT PROBE	PED MP	2		562350	C 228					
C 164						C 229					
C 165						C 230					
C 166						C 231					
C 167	FR SERVICE CPT - EL. FOOT PEDAL	PED WP	3	561781	561782	C 232					
C 168	FR SERVICE CPT - DDR	DEUTSCH	6	562360		C 233					
C 169	FR SERVICE CPT - WORLD TR. INTERFACE	AMP CPC	16	561639	561640	C 234					
C 170	FR JCT BOX FLASHER UNIT	PED	2		561940	C 235					
C 171	LH CONSOLE	AMP CPC	24	561642	561643	C 236	FR SERVICE CPT CENTER - ABS	AMP CPC	14	561636	561637
C 172	FR SERVICE COMPT - LEVEL LOW	AMP CPC	9	561637		C 237	FR AXLE CPT - ABS RH SENSOR	WABCO	2	641132	
C 173						C 238	FR AXLE CPT - ABS RH VALVE	WABCO	3	641098	
C 174						C 239	FR AXLE CPT - ABS LH VALVE	WABCO	3	641098	
C 175						C 240	FR AXLE CPT - ABS LH SENSOR	WABCO	2	641132	
C 176	UNDER DASH RH – WIPER PULSE	AMP FF	6		561186	C 241	LAST LUGGAGE COMPT - ABS	PED WP	6	561606	561607
C 177	UNDER DASH RH – WIPER MOTOR	AMP FF	6		561186	C 242	DRIVE AXLE CPT - ABS LH SENSOR	WABCO	2	641132	
C 178						C 243	DRIVE AXLE CPT - ABS LH VALVE	WABCO	3	641098	
C 179						C 244	DRIVE AXLE CPT - ABS RH VALVE	WABCO	3	641098	
C 180						C 245	DRIVE AXLE CPT - ABS RH SENSOR	WABCO	2	641132	
C 181						C 246	DRIVE AXLE CPT - ABS SPARE	PED WP	2	561566	561690
C 182						C 247					
C 183						C 248	LAST LUGGAGE CPT - ABS	PED WP	6	561606	561607
C 184						C 249	FR SERVICE CPT - ABS/DDEC	PED WP	2	561566	561690
C 185						C 250					
C 186						C 251	LH SW PANEL – FAST IDLE	EATON	12		562763
C 187	FR SERVICE JCT BOX - RESISTORS	AMP MNL	6	561552	561515	C 252	LUGGAGE COMPT. – WINDOW AJAR	MOLEX	4	561477	561476
C 188						C 253	LH SWITCH PANEL - ETHER	EATON	12		562763
C 189	ENGINE COMPT – DOOR LIGHT BACK UP	TRUCK-LITE	2	562755		C 254					
C 190	ENGINE COMPT – DOOR LIGHT STOP/TURN	AMP SS	3		562601	C 255	LH SWITCH PANEL – ENGINE BRAKE	EATON	12		562763
C 191	ENGINE COMPT – DOOR LIGHT STOP/TURN	AMP SS	3		562601	C 256					
C 192	ENGINE COMPT – DOOR LIGHT PARKING	AMP SS	3		562601	C 257					
C 193						C 258					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 258	LH SWITCH PANEL – MULTI FUNC. SW	AMP FF	8	561188		C 322	UNDER DASH RH - KEYLESS MODULE	AMP COM	22		562675
C 259						C 323	DRIVER'S WINDOW MOTOR	PED	2		561848
C 259	LH SWITCH PANEL – MULTI FUNC. SW	AMP FF	6		561186	C 324	LH SWITCH PANEL - UPPER FAN DEFROST	EATON	12		562763
C 260						C 325					
C 261						C 326					
C 262						C 327					
C 263	LUGGAGE COMPT. LTS COMPT #3	AMP MNL	2	561248	561247	C 328					
C 264	LUGGAGE COMPT. LTS COMPT #2	AMP MNL	2	561248	561247	C 329					
C 265	LUGGAGE COMPT. LTS COMPT #1	AMP MNL	2	561248	561247	C 330					
C 266	ENTRANCE DOOR KEYLESS	AMP CPC	14	561585	561583	C 331					
C 267	UNDER DASH RH – KEYLESS PANEL	AMP CPC	24	561642	561643	C 332					
C 268	FR MIRROR RH	CONXALL	5	563091	563090	C 333					
C 269	FR MIRROR LH	CONXALL	5	563091	563090	C 334					
C 270	LUGGAGE COMPT LTS - 3 LH	AMP MNL	2	561248	561247	C 335					
C 271	LUGGAGE COMPT LTS - 4	AMP MNL	2	561248	561247	C 336					
C 272						C 337					
C 273						C 338					
C 274						C 339					
C 275						C 340	FR JCT BOX – FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 276	UNDER DASH RH – 3 WAY LTS DR'S	EATON	12		562763	C 341	LH SWITCH PANEL – HEAT MIRROR SW.	EATON	12		562763
C 277	LH SWITCH PANEL DOCK & CORN. SW.	EATON	12		562763	C 342					
C 278	LH SWITCH PANEL – B/U CANCEL	EATON	12		562763	C 343	LH SWITCH PANEL – HEAD LAMP SW.	EATON	12		562763
C 279	FR SERVICE COMPT LH – STEERING ZF	DEUTSCH	2		562485	C 344	LH SWITCH PANEL – HAZARD LT SW.	EATON	12		562763
C 280	ENGINE COMPT - COMPRESSOR STD	PED WP	2	561566	561690	C 345	LH SWITCH PANEL – FOG LT SW.	EATON	12		562763
C 281	LH CONSOLE – LEVEL LOW	AMP MNL	4	560851	560852	C 346					
C 282	FR SERVICE COMPT – STEERING ZF	VOLVO	2		562928	C 347					
C 283						C 348	INSTR. PANEL CENT. – RACOR MODULE	MOLEX	6	562070	562069
C 284						C 349					
C 285						C 350					
C 286						C 351					
C 287						C 352					
C 288						C 353					
C 289						C 354					
C 290	LUGGAGE CPT - DOOR LOCK	AMP MNL	4	560851	560852	C 355					
C 291	LUGGAGE CPT - DOOR LOCK	AMP MNL	4	560851	560852	C 356					
C 292	FR SERVICE CPT LEVEL LOW	PNEUMAC	2		641385	C 357					
C 293	FR SERVICE CPT LEVEL LOW	PNEUMAC	2		641385	C 358					
C 294	FR SERVICE CPT LEVEL LOW	PNEUMAC	2		641385	C 359	RH SWITCH PANEL – ENT. DOOR WIND. SW.	EATON	12		562763
C 295	FR SERVICE CPT LEVEL LOW	PNEUMAC	2		641385	C 360	ENTRANCE WINDOW MOTOR	PED	2		561848
C 296	FR SERVICE CPT LEVEL LOW	PNEUMAC	2		641385	C 361					
C 297						C 362					
C 298						C 363					
C 299						C 364					
C 300						C 365					
C 301						C 366					
C 302						C 367					
C 303	RR JCT BOX - DIODES	AMP MNL	15	561987	561986	C 368					
C 304						C 369					
C 305						C 370					
C 306						C 371					
C 307						C 372					
C 308						C 373					
C 309	ENGINE DDEC - ECM POWER	PED	4	561610	561611	C 374					
C 310	LH CONSOLE SW – LUG. DOOR LOCK	EATON	12		562763	C 375					
C 311						C 376					
C 312	ENGINE DDEC - ACCESSORIES	PED WP	3	561781	561782	C 377	LH SWITCH PANEL – STOP ENGINE OVERRIDE	EATON	12		562763
C 313	ENGINE DDEC - INPUT	FCI	10	563207		C 378					
C 314						C 379					
C 315	LH SWITCH PANEL – LH SUN VISOR SW.	EATON	12		562763	C 380					
C 316						C 381	UNDER DASH PANEL – ANTI THIELED	AMP MNL	2	561248	561247
C 317	LH SWITCH PANEL – RH SUN VISOR SW.	EATON	12		562763	C 382	ENGINE GENERATOR (1)	PED WP	1	561605	561577
C 318	LH CONSOLE SW – DR'S WINDOW SW.	EATON	12		562763	C 383	ENGINE COMPT – VOLTAGE REGULATOR	PED WP	1	561605	561577
C 319	ENGINE DDEC – ECM POWER	PED	4	561610	561611	C 384					
C 320	RT SWITCH PANEL – DRIVER'S LTS SW.	EATON	12		562763	C 385					
C 321	UNDER DASH RH - KEYLESS MODULE	AMP COM	26		562676	C 386					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 387	ENGINE COMPT. - BY-PASS VALVE	PED WP	2	561566	561690	C 452					
C 388						C 453					
C 389	ENGINE COMPT. - WATER PUMP	PED WP	2	561566	561690	C 454					
C 390	ENGINE COMPT. - A/C JCT. BOX	DEUTSCH	24	562280	562283	C 455					
C 391	CONDENSER COMPT. A/C PRESS SW 2 SP	PED WP	2	561566	561690	C 456	WORLD TRANS. - RETARDER ACCUM.	PED MP	2		562427
C 392						C 457	WORLD TRANS. - MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 393						C 458	WORLD TRANS. - TURBINE SP. SENS.	PED MP	2		562426
C 394						C 459	WORLD TRANS. - ENGINE SP. SENS.	PED MP	2		562426
C 395						C 460	WORLD TRANS. - SPEED SENSOR	ITT	2		562541
C 396						C 461	WORLD TRANS. - RETARDER TEMP.	PED MP	2		562856
C 397						C 462	WORLD TRANS. - RETARDER SOL. "K"	PED MP	2		562426
C 398						C 463	WORLD TRANS. - SENSOR CONN.	DEUTSCH	16	562570	562571
C 399	ENGINE GENERATOR (2)	PED WP	2	561566	561690	C 464	RR JCT BOX - DDL CONN	DEUTSCH	6		565360
C 400	ENGINE COMPT. - BLOCK HEATER	PED WP	3	561781	561782	C 465	LH CONSOLE - SHIFTER SELECTOR	PED	20		562825
C 401						C 466	FR SERVICE CPT - RESIS. MOD.	PED WP	3		562428
C 402						C 467	FR SERVICE CPT - RESIS. MOD.	PED WP	3		562428
C 403						C 468	FR SERVICE CPT - RET. HAND LEVER	AMP FF	8	561188	562363
C 404						C 469	FR SERVICE CPT - RET. HAND LEVER	AMP FF	8	561188	562363
C 405						C 470					
C 406						C 471					
C 407						C 472	FR SERVICE CPT - SILENT 1000	PED WP	2	561566	561690
C 408						C 473					
C 409						C 474	DRIVER'S TEMP SENSOR	AMP MNL	2	561248	561247
C 410						C 475	FR SERVICE CPT - SPEED SIGN. CONNECT.	DEUTSCH	6	562583	562581
C 411						C 475W	FR SERVICE CPT - SPEED SIGN. W. TR.	DEUTSCH	6	562583	562581
C 412						C 476					
C 413						C 477					
C 414						C 478					
C 415						C 479	UNDER DASH - HVAC DASH MODULE	MOLEX	3		562783
C 416						C 480	UNDER DASH RH - DR'S FAN SPEED CTR	PED WP	4	561889	561890
C 417						C 481	UNDER DASH RH - DR'S FAN SPEED CTR	PED WP	3	561781	561782
C 418						C 482					
C 419						C 483	FR SERVICE CPT - ELECTRICAL SEAT	PED	2	562237	
C 420						C 484	UNDER DASH LH - FOOT DAMPER MOTOR	PED	2		562076
C 421						C 485	UNDER DASH LH - DASH & DEFR. DAMP. M.	AMP MNL	3	561667	561558
C 422						C 486					
C 423						C 487					
C 424	UNDER DASH- AUDIBLE FLASHER	AMP MNL	3	561667	561550	C 488					
C 425						C 489					
C 426	ENGINE S60 RAD. FAN CLUTCH	PED WP	3	561781	561782	C 490					
C 427						C 491					
C 428	RH SW PANEL - EVAP. FAN SPEED	EATON	12		562763	C 492					
C 429						C 493					
C 430						C 494					
C 431						C 495					
C 432						C 496					
C 433						C 497					
C 434						C 498					
C 435						C 499					
C 436						C 500	FR JCT PANEL - PRODRIVER	MOLEX	6	562070	562069
C 437						C 501					
C 438						C 502					
C 439						C 503					
C 440						C 504					
C 441						C 505					
C 442						C 506	LH CONSOLE - LEVEL LOW SW.	EATON	12		562763
C 443						C 507					
C 444						C 508	RR JCT BOX - FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 445						C 509					
C 446						C 510					
C 447						C 511					
C 448						C 512					
C 449						C 513					
C 450						C 514					
C 451						C 515					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 516						C 581	LH DASH PANEL – ELECTRICAL HORN	PED MP	2		562777
C 517						C 582					
C 518						C 583	LH DASH PANEL – MASTER KEY SW.	DEUTSCH	2	562486	562485
C 519						C 584	FR. SERVICE COMPT – HORN PNEU. VALVE	PNEUMAC	3		562848
C 520						C 585	RH CONSOLE – ENT. DOOR LOCK VALVE	PNEUTECH	2		563147
C 521						C 586	FR SERVICE COMPT – ACC. PNEU.VALVE	PNEUMAC	3		562848
C 522	FR JCT BOX – DAYTIME LTS MODULE	BOSCH	5		561183	C 587					
C 523						C 588					
C 524	FR JCT BOX – FUSE BLOCK	PED	8	562647	562646	C 589	FR. MIRROR LH	CONXALL	8	563163	563088
C 525	FR JCT BOX – FUSE BLOCK	PED	8	562647	562646	C 590	FR. MIRROR RH	CONXALL	8	563163	563088
C 526	FR JCT BOX – FUSE BLOCK	PED	8	562647	562646	C 591	LH CONSOLE – LH MIRROR SW.	EURAMT.	8		562749
C 527	FR JCT BOX – FUSE BLOCK	PED	8	562647	562646	C 592	LH CONSOLE – RH MIRROR SW.	EURAMT.	8		562749
C 528						C 593					
C 529						C 594	FRONT ROOF – DRIVER'S LTS	LEEKRAFT	2	-----	562803
C 530						C 595					
C 531						C 596					
C 532						C 597	LH DASH PANEL – DISPLAY SET SW.	MOLEX	5		562905
C 533						C 598	LH DASH PANEL – DISPLAY SET SW.	MOLEX	5		562905
C 534						C 599	UND. DASH – MAGN. SW CTR POS. DR'S AIR	AMP MNL	2	561248	561247
C 535						C 600					
C 536						C 601					
C 537	A/C JCT BOX RESISTOR SIGN. RLY	AMP MNL	2	561248	561247	C 602					
C 538	FR SERV. CPT RH – OUTSIDE TEMP. SENS	AMP MNL	2	561248	561247	C 603					
C 539	HVAC DASH MODULE OUTPUT CONN.	MOLEY	24		562780	C 604					
C 540	HVAC DASH MODULE INPUT CONN.	MOLEY	22		562781	C 605					
C 541						C 606					
C 542						C 607	FR SERVICE COMPT – RPM SIGNAL (SPARE)	PED WP	2	561566	561690
C 543						C 608	FR SERV. COMPT – SPEED SIGNAL (SPARE)	PED WP	2	561566	561690
C 544						CS	FR SERVICE CPT - ECU WOLRD TR.	PED MP	32		562817
C 545						CT	FR SERVICE CPT - ECU WORLD TR.	PED MP	32		562824
C 546						CV	FR SERVICE CPT - ECU WORLD TR.	PED MP	32		562823
C 547						CX	CLUSTER	JAE	5		562957
C 548	LH DASH PANEL – T.T.LT TEST SW.	EATON	12		562763	CX 1	FR SERVICE CPT - ECU ABS	AMP JN	15		563200
C 549						CX 2	FR SERVICE CPT - ECU ABS	AMP JN	18		563201
C 550						CY	CLUSTER	JAE	30		562765
C 551						LX	CLUSTER	JAE	22		562766
C 552						LY	CLUSTER	JAE	30		562767
C 553						RX	CLUSTER	JAE	30		562767
C 554											
C 555											
C 556											
C 557											
C 558											
C 559											
C 560											
C 561											
C 562											
C 563											
C 564											
C 565											
C 566											
C 567											
C 568											
C 569											
C 570	UNDER DASH PANEL – T.T.LT MODULE	MOLEX	6		562464						
C 571	UNDER DASH PANEL – T.T.LT MODULE	MOLEX	20		562778						
C 572	UNDER DASH PANEL – T.T.LT MODULE	MOLEX	18		562779						
C 573	UNDER DASH PANEL – T.T.LT MODULE	MOLEX	8		562465						
C 574											
C 575											
C 576											
C 577											
C 578											
C 579											
C 580											

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN	#SOCKET	NO	LOCATION	TYPE	CAVITY	#PIN	#SOCKET
				HOUSING	HOUSING					HOUSING	HOUSING
AA 1	UNDER DASH PANEL-TAG AXLE SONALERT	BOSCH	5	-----	561183	C 65	ENGINE CPT - PRESS SW FAN CLUTCH	PED WP	2	561566	561690
C 1	FR JCT BOX COMPARTIMENT	AMP CPC	14	561585	561584	C 66					
C 2	FR JCT BOX COMPARTIMENT	AMP CPC	16	561638	561640	C 67					
C 3	FR JCT BOX COMPARTIMENT	AMP CPC	37	561644	561646	C 68					
C 4	FR JCT BOX COMPARTIMENT	AMP CPC	24	561641	561643	C 69					
C 5	FR SERVICE COMPT. - UNDERNEATH	AMP CPC	37	561645	561646	C 70	LH CONSOLE	AMP CPC	16	561639	561640
C 6	FR SERVICE COMPT. - UNDERNEATH	AMP CPC	16	561639	561640	C 71	FR JCT BOX COMPT.	AMP CPC	37	561645	561646
C 7	FR SERVICE COMPT - CLUTCH SW	ITT SS	3	561080	561111	C 72	FR JCT BOX COMPT.	AMP CPC	24	561642	561643
C 8	FR SERVICE COMPT. - UNDERNEATH	AMP CPC	24	561642	561643	C 73					
C 9	FR SERVICE COMPT. - UNDERNEATH	AMP CPC	24	561642	561643	C 74	FR JCT BOX COMPT.	AMP CPC	37	561645	561646
C 10	FR SERVICE DOOR ACCESS.	DEUTSCH	5	562565	562566	C 75					
C 11	FR SERV. CPT ACCESS	AMP CPC	37	561645	561646	C 76	ENGINE CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 12	FR SERV. CPT ACCESS	AMP CPC	16	561639	561640	C 77	ENGINE CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 13	FR SERV. CPT ACCESS	AMP CPC	9	561635	561637	C 78					
C 14						C 79					
C 15	LUGGAGE CPT (184)-MARK. SUPPL.	DEUTSCH	4	562479	562477	C 80					
C 16	LH CONSOLE SW-CRUISE ON/OFF	EATON	12	-----	562763	C 81	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	12		562763	C 82	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 18	LH CONSOLE SW-CRUISE SET	EATON	12		562763	C 83	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 19	LH CONSOLE SW-DECEL SW	EATON	12		562763	C 84	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 20	RR JCT BOX	DEUTSCH	70	562282	562285	C 85	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 21	ENGINE COMPT - LOCK DOOR MOT.	PED WP	2		562076	C 86	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 22	LUGGAGE COMPT (A) - A/C & FUEL TANK	AMP CPC	16	561639	561640	C 87					
C 23	LUGGAGE COMPT (1) - LUGG. ACCESS.	AMP CPC	24	561642	561643	C 88	FR SERV. CPT. PRESS SW PARK BRAKE	PED WP	2	561566	561690
C 24	ENGINE COMPT. - INTERF RJB	PED WP	6	561606	561607	C 89					
C 25						C 90					
C 26	ENGINE COMPT. ACCESS	DEUTSCH	40	562281	562284	C 91					
C 27	ENGINE COMPT. - INTERF. RJB	DEUTSCH	6	562583	562581	C 92	FR JCT BOX COMPT - ABS	AMP CPC	9	561635	561637
C 28	LUGGAGE COMPT(4) - LUGG. ACCESS	AMP CPC	24	561642	561643	C 93					
C 29	FR SERVICE COMPT - E.C.U. FEED	PED WP	3	561781	561782	C 94					
C 30	ENGINE COMPT - MASTER SW. SIGN.	DEUTSCH	2	562486	562485	C 95	ENTRANCE DOOR ACCESS	DEUTSCH	6	562583	562581
C 31						C 96	FR SERVICE DOOR ACCESS	AMP MNL	9	561670	561669
C 32						C 97	FR SERVICE DOOR - WATER TANK	PED MP	20		562426
C 33	ENGINE DDEC II - SPEED SIGN SPARE	PED WP	2	561566	561690	C 98					
C 34						C 99	FR SERVICE CPT. LTS	AMP MNL	2	561248	561247
C 35	A/C COMPT - AIR RETURN SENSOR	AMP MNL	2	561248	561247	C 100	SIDE (LH/FR & CTR) DIR LTS	GROTE	2	-----	562155
C 36						C 101	FR SERVICE COMPT. ELEC. HORNS	PED WP	2	561566	561690
C 37						C 101	CONDENSER COMPT - A/C PRES. SW 1SP	PED WP	2	561566	561690
C 38						C 102	CONDENS. COMPT - LIQU. SOL. VAL. PRES.	PED WP	2	561566	561690
C 39						C 103					
C 40						C 104					
C 41	ENGINE COMPT - RH DOOR LOCK	DEUTSCH	4	562479	562477	C 105	UNDER DASH RH - DRV LIO SOL VL	PED WP	2	561566	561690
C 42	ENGINE COMPT - RR CAP LIGHTING	DEUTSCH	6	562583	562581	C 106	UNDER DASH RH - DRV WTR VALVE	PED WP	2	561566	561690
C 43	FR JCT BOX - ALT. MODULE	AMP MNL	12	561735	561734	C 107					
C 44	ENGINE COMPT - LIGHTS	GROTE	2	563268	-----	C 108					
C 45	FR JCT BOX COMPT - ROOF ACCESS	AMP CPC	24	561642	561643	C 109	SIDE (RH/FR & CTR) DIR LTS	GROTE	2	-----	562155
C 46						C 110	SIDE (LH/FR) MARKER LTS	GROTE	2	-----	562155
C 47						C 111	SIDE (RH/FR) MARKER LTS	GROTE	2	-----	562155
C 48	FR SERV. CPT. PRESS SW PARK BRAKE	PED WP	2	561566	561690	C 112	SIDE (RH/CTR) MARKER LTS	GROTE	2	-----	562155
C 49						C 113	SIDE (LH/RR) MARKER LTS	GROTE	2	-----	562155
C 50						C 114	ENGINE DDEC - SPEED SIGNAL (SPARG)	PED WP	2	561566	561690
C 51						C 115	RR JCT BOX - ENGINE ACCESS	DEUTSCH	40	562281	562284
C 52	ENGINE COMPT - COMPRESSOR	PED WP	2	561566	561690	C 116	SIDE (LH/CTR) MARKER LTS	GROTE	2	-----	562155
C 53	ENGINE COMPT - COMPRESSOR	PED WP	2	561566	561690	C 117	SIDE (RH/RR) MARKER LTS	GROTE	2	-----	562155
C 54	FRONT ROOF - UPPER FAN DEFROST	AMP MNL	6	561552	561515	C 118	ENGINE COMPT - LICENCE	PED WP	2	930210	
C 55	CENTRAL DOOR LOCK	DEUTSCH	4	562479	562477	C 119	ENGINE COMPT - RH LOWER LAMP	PED WP	6	561606	561607
C 56						C 120	ENGINE COMPT - LH LOWER LAMP	PED WP	6	561606	561607
C 57						C 121	SIDE (RH/RR) DIR LTS	GROTE	2	-----	562155
C 58						C 122	SIDE (LH/RR) DIR LTS	GROTE	2	-----	562155
C 59						C 123					
C 60						C 124					
C 61	ENGINE COMPT - FUEL FILTER	PED WP	2	561566	561690	C 125					
C 62	ENGINE COMPT - COMPRESSOR STD	PED WP	2	561566	561690	C 126					
C 63	ENGINE COMPT - COMPRESSOR STD	PED WP	2	561566	561690	C 127					
C 64						C 128					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 129						C 194					
C 130						C 195					
C 131						C 196					
C 132						C 197					
C 133						C 198					
C 134	FR JCT BOX – DIODE CONN.	AMP MNL	15	561987	561986	C 199					
C 135	FR JCT BOX – DIODE CONN.	AMP MNL	15	561987	561986	C 200					
C 136	FR JCT BOX – DIODE CONN.	AMP MNL	15	561987	561986	C 201					
C 137	FR JCT BOX – DIODE CONN.	AMP MNL	15	561987	561986	C 202					
C 138						C 203					
C 139						C 204					
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782	C 205					
C 141	RR DASH PANEL – LTS CONN. (SPARE)	AMP MNL	2	561248	561247	C 206					
C 142	ENGINE COMPT. B/U ALARM	PED WP	2	561566	561690	C 207					
C 143						C 208					
C 144						C 209					
C 145						C 210					
C 146						C 211	FR ROOF – SUN VISOR LH	AMP MNL	2	560900	560898
C 147						C 212	FR ROOF – SUN VISOR RH	AMP MNL	2	560900	560898
C 148						C 213					
C 149						C 214					
C 150						C 215					
C 151						C 216					
C 152						C 217					
C 153						C 218					
C 154						C 219					
C 155	EVAPORATOR CPT – WATER VALVE	BURKERT	3		563204	C 220					
C 156						C 221					
C 157	FR SERV. CPT – WATER PUMP DR'S	PED WP	3	561781	561782	C 222	HEADLAMPS – LOW BEAM	HELLA	2		562623
C 158	ENGINE CPT – DDEC INTERFACE	DEUTSCH	31	562572	562536	C 222	HEADLAMPS – LOW BEAM (XENON OPTION)	PED MP	2		563366
C 159	ENGINE CPT – DDEC FEED	PED WP	4	561889	561890	C 223	FR AXLE CPT – HEADLAMPS MAIN CONN.	DEUTSCH	6	565131	562789
C 160	FR SERVICE CPT - INTERFACE	AMP CPC	37	561644	561646	C 224	HEADLAMPS – HI BEAM	HELLA	2		562623
C 161	ENGINE DDEC - ECM	AMP	68		563463	C 225	FOG LIGHTS	DEUTSCH	3	562902	562901
C 162	ENGINE DDEC - ACCESSORIES	PED WP	4	561610	561611	C 226	FLASHER – (FR)	PED	3	562137	
C 163	ENGINE CPT - COOLANT PROBE	PED MP	2		562350	C 227					
C 164	ENGINE CPT – DDEC FEED	PED WP	4	561889	561890	C 228	A/C COMPRESSOR	PED WP	2	561566	561690
C 165						C 229					
C 166						C 230					
C 167	FR SERVICE CPT - EL. FOOT PEDAL	PED WP	3	561781	561782	C 231					
C 168	FR SERVICE CPT - DDR	DEUTSCH	6	562360		C 232					
C 169	FR SERVICE CPT - WORLD TR. INTERFACE	AMP CPC	16	561639	561640	C 233					
C 170	FR JCT BOX FLASHER UNIT	PED	2		561940	C 234					
C 171	LH CONSOLE	AMP CPC	24	561642	561643	C 235					
C 172	FR SERVICE COMPT - LEVEL LOW	AMP CPC	9	561637		C 236	FR SERVICE CPT CENTER - ABS	AMP CPC	14	561636	561637
C 173						C 237	FR AXLE CPT - ABS RH SENSOR	WABCO	2	641132	
C 174						C 238	FR AXLE CPT - ABS RH VALVE	WABCO	3	641098	
C 175						C 239	FR AXLE CPT - ABS LH VALVE	WABCO	3	641098	
C 176	UNDER DASH RH – WIPER PULSE	AMP FF	6		561186	C 240	FR AXLE CPT - ABS LH SENSOR	WABCO	2	641132	
C 177	UNDER DASH RH – WIPER MOTOR	AMP FF	6		561186	C 241	LAST LUGGAGE COMPT - ABS	PED WP	6	561606	561607
C 178						C 242	DRIVE AXLE CPT - ABS LH SENSOR	WABCO	2	641132	
C 179						C 243	DRIVE AXLE CPT - ABS LH VALVE	WABCO	3	641098	
C 180						C 244	DRIVE AXLE CPT - ABS RH VALVE	WABCO	3	641098	
C 181						C 245	DRIVE AXLE CPT - ABS RH SENSOR	WABCO	2	641132	
C 182						C 246	DRIVE AXLE CPT - ABS SPARE	PED WP	2	561566	561690
C 183						C 247					
C 184						C 248	LAST LUGGAGE CPT - ABS	PED WP	6	561606	561607
C 185						C 249	FR SERVICE CPT - ABS/DDEC	PED WP	2	561566	561690
C 186						C 250					
C 187	FR SERVICE JCT BOX - RESISTORS	AMP MNL	6	561552	561515	C 251	LH SW PANEL – FAST IDLE	EATON	12		562763
C 188						C 252					
C 189	ENGINE COMPT – DOOR LIGHT BACK UP	TRUCK-LITE	2	562755		C 253	LH SWITCH PANEL - ETHER	EATON	12		562763
C 190	ENGINE COMPT – DOOR LIGHT STOP/TURN	AMP SS	3		562601	C 254					
C 191	ENGINE COMPT – DOOR LIGHT STOP/TURN	AMP SS	3		562601	C 255	LH SWITCH PANEL – ENGINE BRAKE	EATON	12		562763
C 192	ENGINE COMPT – DOOR LIGHT PARKING	AMP SS	3		562601	C 256					
C 193						C 257					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 258	LH SWITCH PANEL – MULTI FUNC. SW	AMP FF	8	561188		C 321	UNDER DASH RH - KEYLESS MODULE	AMP COM	26		562676
C 259	LH SWITCH PANEL – MULTI FUNC. SW	AMP FF	6		561186	C 322	UNDER DASH RH - KEYLESS MODULE	AMP COM	22		562675
C 260						C 323	DRIVER'S WINDOW MOTOR	PED	2		561848
C 261						C 324	LH SWITCH PANEL - UPPER FAN DEFROST	EATON	12		562763
C 262						C 325					
C 263	LUGGAGE COMPT. LTS COMPT #3	AMP MNL	2	561248	561247	C 326					
C 264	LUGGAGE COMPT. LTS COMPT #2	AMP MNL	2	561248	561247	C 327					
C 265	LUGGAGE COMPT. LTS COMPT #1	AMP MNL	2	561248	561247	C 328					
C 266	ENTRANCE DOOR KEYLESS	AMP CPC	14	561585	561583	C 329					
C 267	UNDER DASH RH – KEYLESS PANEL	AMP CPC	24	561642	561643	C 330					
C 268	FR MIRROR RH	CONXALL	5	563091	563090	C 331					
C 269	FR MIRROR LH	CONXALL	5	563091	563090	C 332					
C 270	LUGGAGE COMPT LTS - 3 LH	AMP MNL	2	561248	561247	C 333					
C 271	LUGGAGE COMPT LTS - 4	AMP MNL	2	561248	561247	C 334					
C 272						C 335					
C 273						C 336					
C 274						C 337					
C 275						C 338					
C 276	UNDER DASH RH – 3 WAY LTS DR'S	EATON	12		562763	C 339					
C 277	LH SWITCH PANEL DOCK & CORN. SW.	EATON	12		562763	C 340	FR JCT BOX – FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 278	LH SWITCH PANEL – B/U CANCEL	EATON	12		562763	C 341	LH SWITCH PANEL – HEAT MIRROR SW.	EATON	12		562763
C 279	FR SERVICE COMPT LH – STEERING ZF	DEUTSCH	2		562485	C 342					
C 280	ENGINE COMPT - COMPRESSOR STD	PED WP	2	561566	561690	C 343	LH SWITCH PANEL – HEAD LAMP SW.	EATON	12		562763
C 281	LH CONSOLE – LEVEL LOW	AMP MNL	4	560851	560852	C 344	LH SWITCH PANEL – HAZARD LT SW.	EATON	12		562763
C 282	FR SERVICE COMPT – STEERING ZF	VOLVO	2		562928	C 345	LH SWITCH PANEL – FOG LT SW.	EATON	12		562763
C 283						C 346					
C 284						C 347					
C 285						C 348	INSTR. PANEL CENT. – RACOR MODULE	MOLEX	6	562070	562069
C 286						C 349					
C 287						C 350					
C 288						C 351					
C 289						C 352					
C 290	LUGGAGE CPT - DOOR LOCK	AMP MNL	4	560851	560852	C 353					
C 291	LUGGAGE CPT - DOOR LOCK	AMP MNL	4	560851	560852	C 354					
C 292	FR SERVICE CPT LEVEL LOW	PNEUMAC	2		641385	C 355					
C 293	FR SERVICE CPT LEVEL LOW	PNEUMAC	2		641385	C 356					
C 294	FR SERVICE CPT LEVEL LOW	PNEUMAC	2		641385	C 357					
C 295	FR SERVICE CPT LEVEL LOW	PNEUMAC	2		641385	C 358					
C 296	FR SERVICE CPT LEVEL LOW	PNEUMAC	2		641385	C 359	RH SWITCH PANEL – ENT. DOOR WIND. SW.	EATON	12		562763
C 297						C 360	ENTRANCE WINDOW MOTOR	PED	2		561848
C 298						C 361					
C 299						C 362					
C 300	FR SERVICE CPT – LOW BEAM RESISTORS	PED WP	2	561566	561690	C 363					
C 301						C 364					
C 302						C 365					
C 303	RR JCT BOX - DIODES	AMP MNL	15	561987	561986	C 366					
C 304						C 367					
C 305						C 368					
C 306						C 369					
C 307						C 370					
C 308						C 371					
C 309						C 372					
C 310	LH CONSOLE SW – LUG. DOOR LOCK	EATON	12		562763	C 373					
C 311						C 374					
C 312	ENGINE DDEC - ACCESSORIES	PED WP	3	561781	561782	C 375					
C 313						C 376					
C 314						C 377	LH SWITCH PANEL – STOP ENGINE OVERRIDE	EATON	12		562763
C 315	LH SWITCH PANEL – LH SUN VISOR SW.	EATON	12		562763	C 378					
C 316						C 379					
C 317	LH SWITCH PANEL – RH SUN VISOR SW.	EATON	12		562763	C 380					
C 318	LH CONSOLE SW – DR'S WINDOW SW.	EATON	12		562763	C 381	UNDER DASH PANEL – ANTI THIELED	AMP MNL	2	561248	561247
C 319	ENGINE DDEC – ECM POWER	PED	4	561610	561611	C 382	ENGINE GENERATOR (1)	PED WP	1	561605	561577
C 320	RT SWITCH PANEL – DRIVER'S LTS SW.	EATON	12		562763	C 383	ENGINE COMPT – VOLTAGE REGULATOR	PED WP	1	561605	561577
						C 384					
						C 385					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 386						C 451					
C 387	ENGINE COMPT. - BY-PASS VALVE	PED WP	2	561566	561690	C 452					
C 388						C 453					
C 389	ENGINE COMPT. - WATER PUMP	PED WP	2	561566	561690	C 454					
C 390	ENGINE COMPT. - A/C JCT. BOX	DEUTSCH	24	562280	562283	C 455					
C 391	CONDENSER COMPT. A/C PRESS SW 2 SP	PED WP	2	561566	561690	C 456	WORLD TRANS. - RETARDER ACCUM.	PED MP	2		562427
C 392						C 457	WORLD TRANS. - MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 393						C 458	WORLD TRANS. - TURBINE SP. SENS.	PED MP	2		562426
C 394						C 459	WORLD TRANS. - ENGINE SP. SENS.	PED MP	2		562426
C 395						C 460	WORLD TRANS. - SPEED SENSOR	ITT	2		562541
C 396						C 461	WORLD TRANS. - RETARDER TEMP.	PED MP	2		562856
C 397						C 462	WORLD TRANS. - RETARDER SOL. "K"	PED MP	2		562426
C 398						C 463	WORLD TRANS. - SENSOR CONN.	DEUTSCH	16	562570	562571
C 399	ENGINE GENERATOR (2)	PED WP	2	561566	561690	C 464	RR JCT BOX - DDL CONN	DEUTSCH	6		565360
C 400	ENGINE COMPT. - BLOCK HEATER	PED WP	3	561781	561782	C 465	LH CONSOLE - SHIFTER SELECTOR	PED	20		562825
C 401						C 466	FR SERVICE CPT - RESIS. MOD.	PED WP	3		562428
C 402						C 467	FR SERVICE CPT - RESIS. MOD.	PED WP	3		562428
C 403						C 468	FR SERVICE CPT - RET. HAND LEVER	AMP FF	8	561188	562363
C 404						C 469	FR SERVICE CPT - RET. HAND LEVER	AMP FF	8	561188	562363
C 405						C 470					
C 406						C 471					
C 407						C 472	FR SERVICE CPT - SILENT 1000	PED WP	2	561566	561690
C 408						C 473					
C 409						C 474	DRIVER'S TEMP SENSOR	AMP MNL	2	561248	561247
C 410						C 475	FR SERVICE CPT - SPEED SIGN. CONNECT.	DEUTSCH	6	562583	562581
C 411						C 475W	FR SERVICE CPT - SPEED SIGN. W. TR.	DEUTSCH	6	562583	562581
C 412						C 476					
C 413						C 477					
C 414						C 478					
C 415						C 479	UNDER DASH - HVAC DASH MODULE	MOLEX	3		562783
C 416						C 480	UNDER DASH RH - DR'S FAN SPEED CTR	PED WP	4	561889	561890
C 417						C 481	UNDER DASH RH - DR'S FAN SPEED CTR	PED WP	3	561781	561782
C 418						C 482					
C 419						C 483	FR SERVICE CPT - ELECTRICAL SEAT	PED	2	562237	
C 420						C 484	UNDER DASH LH - FOOT DAMPER MOTOR	PED	2		562076
C 421						C 485	UNDER DASH LH - DASH & DEFR. DAMP. M.	AMP MNL	3	561667	561558
C 422						C 486					
C 423						C 487					
C 424	UNDER DASH- AUDIBLE FLASHER	AMP MNL	3	561667	561550	C 488					
C 425						C 489					
C 426	ENGINE S60 RAD. FAN CLUTCH	PED WP	3	561781	561782	C 490					
C 427						C 491					
C 428	RH SW PANEL - EVAP. FAN SPEED	EATON	12		562763	C 492					
C 429						C 493					
C 430						C 494					
C 431						C 495					
C 432						C 496					
C 433						C 497					
C 434						C 498					
C 435						C 499					
C 436						C 500	FR JCT PANEL - PRODRIVER	MOLEX	6	562070	562069
C 437						C 501					
C 438						C 502					
C 439						C 503					
C 440						C 504					
C 441						C 505					
C 442						C 506	LH CONSOLE - LEVEL LOW SW.	EATON	12		562763
C 443						C 507					
C 444						C 508	RR JCT BOX - FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 445						C 509					
C 446						C 510					
C 447						C 511					
C 448						C 512					
C 449						C 513					
C 450						C 514					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 515						C 579					
C 516						C 580					
C 517						C 581	LH DASH PANEL – ELECTRICAL HORN	PED MP	2		562777
C 518						C 582					
C 519						C 583	LH DASH PANEL – MASTER KEY SW.	DEUTSCH	2	562486	562485
C 520						C 584	FR. SERVICE COMPT – HORN PNEU. VALVE	PNEUMAC	3		562848
C 521						C 585	RH CONSOLE – ENT. DOOR LOCK VALVE	PNEUTECH	2		563147
C 522	FR JCT BOX – DAYTIME LTS MODULE	BOSCH	5		561183	C 586	FR SERVICE COMPT – ACC. PNEU.VALVE	PNEUMAC	3		562848
C 523						C 587					
C 524	FR JCT BOX – FUSE BLOCK	PED	8	562647	562646	C 588					
C 525	FR JCT BOX – FUSE BLOCK	PED	8	562647	562646	C 589	FR. MIRROR LH	CONXALL	8	563163	563088
C 526	FR JCT BOX – FUSE BLOCK	PED	8	562647	562646	C 590	FR. MIRROR RH	CONXALL	8	563163	563088
C 527	FR JCT BOX – FUSE BLOCK	PED	8	562647	562646	C 591	LH CONSOLE – LH MIRROR SW.	EURAMT.	8		562749
C 528						C 592	LH CONSOLE – RH MIRROR SW.	EURAMT.	8		562749
C 529						C 593					
C 530						C 594	FRONT ROOF – DRIVER'S LTS	LEEKRAFT	2	-----	562803
C 531						C 595					
C 532						C 596					
C 533						C 597	LH DASH PANEL – DISPLAY SET SW.	MOLEX	5		562905
C 534						C 598	LH DASH PANEL – DISPLAY SET SW.	MOLEX	5		562905
C 535						C 599	UND. DASH – MAGN. SW CTR POS. DR'S AIR	AMP MNL	2	561248	561247
C 536						C 600					
C 537	A/C JCT BOX RESISTOR SIGN. RLY	AMP MNL	2	561248	561247	C 601					
C 538	FR SERV. CPT RH – OUTSIDE TEMP. SENS	AMP MNL	2	561248	561247	C 602					
C 539	HVAC DASH MODULE OUTPUT CONN.	MOLEY	24		562780	C 603					
C 540	HVAC DASH MODULE INPUT CONN.	MOLEY	22		562781	C 604					
C 541						C 605					
C 542						C 606					
C 543						C 607	FR SERVICE COMPT – RPM SIGNAL (SPARE)	PED WP	2	561566	561690
C 544						C 608	FR SERV. COMPT – SPEED SIGNAL (SPARE)	PED WP	2	561566	561690
C 545						CH 50	RR JCT BOX – TRANS. INHIBIT	PED WP	1	561605	561577
C 546						CH 51	RR JCT BOX – TRANS. INHIBIT	PED WP	1	561605	561577
C 547						CH 88	FR SERV. COMPT. – PARK BRAKR S.O.	PED WP	1	561605	561577
C 548	LH DASH PANEL – T.T.LT TEST SW.	EATON	12		562763	CS	FR SERVICE CPT - ECU WOLRD TR.	PED MP	32		562817
C 549						CT	FR SERVICE CPT - ECU WORLD TR.	PED MP	32		562824
C 550						CTCI	ENGINE CPT. – TURBO TEMP.	FCI	2		563404
C 551						CV	FR SERVICE CPT - ECU WORLD TR.	PED MP	32		562823
C 552						CX	CLUSTER	JAE	5		562957
C 553						CX 1	FR SERVICE CPT - ECU ABS	AMP JN	15		563200
C 554						CX 2	FR SERVICE CPT - ECU ABS	AMP JN	18		563201
C 555	LUGGAGE COMPT. – AWNING WINDOWS	MOLEX	4	561477	561476	CY	CLUSTER	JAE	30		562765
C 555A	LUGGAGES – AWNING EXT. HARNESS	MOLEX	4	561477	561476	LX	CLUSTER	JAE	22		562766
C 556						LY	CLUSTER	JAE	30		562767
C 557						RX	CLUSTER	JAE	30		562767
C 558											
C 559											
C 560											
C 561											
C 562											
C 563											
C 564											
C 565											
C 566											
C 567											
C 568											
C 569											
C 570	UNDER DASH PANEL – T.T.LT MODULE	MOLEX	6		562464						
C 571	UNDER DASH PANEL – T.T.LT MODULE	MOLEX	20		562778						
C 572	UNDER DASH PANEL – T.T.LT MODULE	MOLEX	18		562779						
C 573	UNDER DASH PANEL – T.T.LT MODULE	MOLEX	8		562465						
C 574											
C 575											
C 576											
C 577											
C 578											

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN	#SOCKET	NO	LOCATION	TYPE	CAVITY	#PIN	#SOCKET
				HOUSING	HOUSING					HOUSING	HOUSING
AA 1	UNDER DASH PANEL-TAG AXLE SONALERT	BOSCH	5	-----	561183	C 65	ENGINE CPT - PRESS SW FAN CLUTCH	PED WP	2	561566	561690
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584	C 66					
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561638	561640	C 67					
C 3	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646	C 68					
C 4	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643	C 69					
C 5	FR SERVICE COMPT. - UNDERNEATH	AMP CPC	37	561645	561646	C 70	LH CONSOLE	AMP CPC	16	561639	561640
C 6	FR SERVICE COMPT. - UNDERNEATH	AMP CPC	16	561639	561640	C 71	FR JCT BOX COMPT.	AMP CPC	37	561645	561646
C 7	FR SERVICE COMPT - CLUTCH SW	ITT SS	3	561080	561111	C 72	FR JCT BOX COMPT.	AMP CPC	24	561642	561643
C 8	FR SERVICE COMPT. - UNDERNEATH	AMP CPC	24	561642	561643	C 73					
C 9	FR SERVICE COMPT. - UNDERNEATH	AMP CPC	24	561642	561643	C 74	FR JCT BOX COMPT.	AMP CPC	37	561645	561646
C 10	FR SERVICE DOOR ACCESS.	DEUTSCH	5	562565	562566	C 75					
C 11	FR SERV. CPT ACCESS	AMP CPC	37	561645	561646	C 76	ENGINE CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 12	FR SERV. CPT ACCESS	AMP CPC	16	561639	561640	C 77	ENGINE CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 13	FR SERV. CPT ACCESS	AMP CPC	9	561635	561637	C 78					
C 14						C 79					
C 15	LUGGAGE CPT (184)-MARK. SUPPL.	DEUTSCH	4	562479	562477	C 80					
C 16	LH CONSOLE SW-CRUISE ON/OFF	EATON	12	-----	562763	C 81	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	12		562763	C 82	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 18	LH CONSOLE SW-CRUISE SET	EATON	12		562763	C 83	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 19	LH CONSOLE SW-DECEL SW	EATON	12		562763	C 84	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 20	RR JCT BOX	DEUTSCH	70	562282	562285	C 85	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 21	ENGINE COMPT - LOCK DOOR MOT.	PED WP	2		562076	C 86	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 22	LUGGAGE COMPT (A) - A/C & FUEL TANK	AMP CPC	16	561639	561640	C 87					
C 23	LUGGAGE COMPT (1) - LUGG. ACCESS.	AMP CPC	24	561642	561643	C 88	FR SERV. CPT. PRESS SW PARK BRAKE	PED WP	2	561566	561690
C 24	ENGINE COMPT. - INTERF RJB	PED WP	6	561606	561607	C 89					
C 25						C 90					
C 26	ENGINE COMPT. ACCESS	DEUTSCH	40	562281	562284	C 91					
C 27	ENGINE COMPT. - INTERF. RJB	DEUTSCH	6	562583	562581	C 92	FR JCT BOX COMPT - ABS	AMP CPC	9	561635	561637
C 28	LUGGAGE COMPT(4) - LUGG. ACCESS	AMP CPC	24	561642	561643	C 93					
C 29	FR SERVICE COMPT - E.C.U. FEED	PED WP	3	561781	561782	C 94					
C 30	ENGINE COMPT - MASTER SW. SIGN.	DEUTSCH	2	562486	562485	C 95	ENTRANCE DOOR ACCESS	DEUTSCH	6	562583	562581
C 31						C 96	FR SERVICE DOOR ACCESS	AMP MNL	9	561670	561669
C 32						C 97	FR SERVICE DOOR - WATER TANK	PED MP	20		562426
C 33	ENGINE DDEC II - SPEED SIGN SPARE	PED WP	2	561566	561690	C 98					
C 34						C 99	FR SERVICE CPT. LTS	AMP MNL	2	561248	561247
C 35	A/C COMPT - AIR RETURN SENSOR	AMP MNL	2	561248	561247	C 100	SIDE (LH/FR & CTR) DIR LTS	GROTE	2	-----	562155
C 36						C 101	FR SERVICE COMPT. ELEC. HORNS	PED WP	2	561566	561690
C 37						C 101	CONDENSER COMPT - A/C PRES. SW 1SP	PED WP	2	561566	561690
C 38						C 102	CONDENS. COMPT - LIQU. SOL. VAL. PRES.	PED WP	2	561566	561690
C 39						C 103					
C 40						C 104					
C 41	ENGINE COMPT - RH DOOR LOCK	DEUTSCH	4	562479	562477	C 105	UNDER DASH RH - DRV LIO SOL VL	PED WP	2	561566	561690
C 42	ENGINE COMPT - RR CAP LIGHTING	DEUTSCH	6	562583	562581	C 106	UNDER DASH RH - DRV WTR VALVE	PED WP	2	561566	561690
C 43	FR JCT BOX - ALT. MODULE	AMP MNL	12	561735	561734	C 107					
C 44	ENGINE COMPT - LIGHTS	GROTE	2	563268	-----	C 108					
C 45	FR JCT BOX COMPT - ROOF ACCESS	AMP CPC	24	561642	561643	C 109	SIDE (RH/FR & CTR) DIR LTS	GROTE	2	-----	562155
C 46						C 110	SIDE (LH/FR) MARKER LTS	GROTE	2	-----	562155
C 47						C 111	SIDE (RH/FR) MARKER LTS	GROTE	2	-----	562155
C 48	FR SERV. CPT. PRESS SW PARK BRAKE	PED WP	2	561566	561690	C 112	SIDE (RH/CTR) MARKER LTS	GROTE	2	-----	562155
C 49						C 113	SIDE (LH/RR) MARKER LTS	GROTE	2	-----	562155
C 50						C 114	ENGINE DDEC - SPEED SIGNAL (SPARG)	PED WP	2	561566	561690
C 51						C 115	RR JCT BOX - ENGINE ACCESS	DEUTSCH	40	562281	562284
C 52	ENGINE COMPT - COMPRESSOR	PED WP	2	561566	561690	C 116	SIDE (LH/CTR) MARKER LTS	GROTE	2	-----	562155
C 53	ENGINE COMPT - COMPRESSOR	PED WP	2	561566	561690	C 117	SIDE (RH/RR) MARKER LTS	GROTE	2	-----	562155
C 54	FRONT ROOF - UPPER FAN DEFROST	AMP MNL	6	561552	561515	C 118	ENGINE COMPT - LICENCE	PED WP	2	930210	
C 55	CENTRAL DOOR LOCK	DEUTSCH	4	562479	562477	C 119	ENGINE COMPT - RH LOWER LAMP	PED WP	6	561606	561607
C 56						C 120	ENGINE COMPT - LH LOWER LAMP	PED WP	6	561606	561607
C 57						C 121	SIDE (RH/RR) DIR LTS	GROTE	2	-----	562155
C 58						C 122	SIDE (LH/RR) DIR LTS	GROTE	2	-----	562155
C 59						C 123					
C 60						C 124					
C 61	ENGINE COMPT - FUEL FILTER	PED WP	2	561566	561690	C 125					
C 62	ENGINE COMPT - COMPRESSOR STD	PED WP	2	561566	561690	C 126					
C 63	ENGINE COMPT - COMPRESSOR STD	PED WP	2	561566	561690	C 127					
C 64						C 128					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 129						C 192	ENGINE COMPT – DOOR LIGHT PARKING	AMP SS	3		562601
C 130						C 193					
C 131						C 194					
C 132						C 195					
C 133						C 196					
C 134	FR JCT BOX – DIODE CONN.	AMP MNL	15	561987	561986	C 197					
C 135	FR JCT BOX – DIODE CONN.	AMP MNL	15	561987	561986	C 198					
C 136	FR JCT BOX – DIODE CONN.	AMP MNL	15	561987	561986	C 199					
C 137	FR JCT BOX – DIODE CONN.	AMP MNL	15	561987	561986	C 200					
C 138						C 201					
C 139						C 202					
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782	C 203					
C 141	RR DASH PANEL – LTS CONN. (SPARE)	AMP MNL	2	561248	561247	C 204					
C 142	ENGINE COMPT. B/U ALARM	PED WP	2	561566	561690	C 205					
C 143						C 206					
C 144						C 207					
C 145						C 208					
C 146						C 209					
C 147						C 210					
C 148						C 211	FR ROOF – SUN VISOR LH	AMP MNL	2	560900	560898
C 149						C 212	FR ROOF – SUN VISOR RH	AMP MNL	2	560900	560898
C 150						C 213					
C 151						C 214					
C 152						C 215					
C 153						C 216					
C 154						C 217					
C 155	EVAPORATOR CPT – WATER VALVE	BURKERT	3		563204	C 218					
C 156						C 219					
C 157	FR SERV. CPT – WATER PUMP DR'S	PED WP	3	561781	561782	C 220					
C 158	ENGINE CPT – DDEC INTERFACE	DEUTSCH	31	562572	562536	C 221					
C 159	ENGINE CPT – DDEC FEED	PED WP	4	561889	561890	C 222	HEADLAMPS – LOW BEAM	HELLA	2		562623
C 160	FR SERVICE CPT - INTERFACE	AMP CPC	37	561644	561646	C 222	HEADLAMPS – LOW BEAM (XENON OPTION)	PED MP	2		563366
C 161	ENGINE DDEC - ECM	AMP	68		563463	C 223	FR AXLE CPT – HEADLAMPS MAIN CONN.	DEUTSCH	6	565131	562789
C 162	ENGINE DDEC - ACCESSORIES	PED WP	4	561610	561611	C 224	HEADLAMPS – HI BEAM	HELLA	2		562623
C 163	ENGINE CPT - COOLANT PROBE	PED MP	2		562350	C 225	FOG LIGHTS	DEUTSCH	3	562902	562901
C 164	ENGINE CPT – DDEC FEED	PED WP	4	561889	561890	C 226	FLASHER – (FR)	PED	3	562137	
C 165						C 227					
C 166						C 228	A/C COMPRESSOR	PED WP	2	561566	561690
C 167	FR SERVICE CPT - EL. FOOT PEDAL	PED WP	3	561781	561782	C 229					
C 168	FR SERVICE CPT - DDR	DEUTSCH	6	562360		C 230					
C 169	FR SERVICE CPT - WORLD TR. INTERFACE	AMP CPC	16	561639	561640	C 231					
C 170	FR JCT BOX FLASHER UNIT	PED	2		561940	C 232					
C 171	LH CONSOLE	AMP CPC	24	561642	561643	C 233					
C 172	FR SERVICE COMPT - LEVEL LOW	AMP CPC	9	561637		C 234					
C 173						C 235					
C 174						C 236	FR SERVICE CPT CENTER - ABS	AMP CPC	14	561636	561637
C 175						C 237	FR AXLE CPT - ABS RH SENSOR	WABCO	2	641132	
C 176	UNDER DASH RH – WIPER PULSE	AMP FF	6		561186	C 238	FR AXLE CPT - ABS RH VALVE	WABCO	3	641098	
C 177	UNDER DASH RH – WIPER MOTOR	AMP FF	6		561186	C 239	FR AXLE CPT - ABS LH VALVE	WABCO	3	641098	
C 178						C 240	FR AXLE CPT - ABS LH SENSOR	WABCO	2	641132	
C 179						C 241	LAST LUGGAGE COMPT - ABS	PED WP	6	561606	561607
C 180						C 242	DRIVE AXLE CPT - ABS LH SENSOR	WABCO	2	641132	
C 181						C 243	DRIVE AXLE CPT - ABS LH VALVE	WABCO	3	641098	
C 182						C 244	DRIVE AXLE CPT - ABS RH VALVE	WABCO	3	641098	
C 183						C 245	DRIVE AXLE CPT - ABS RH SENSOR	WABCO	2	641132	
C 184						C 246	DRIVE AXLE CPT - ABS SPARE	PED WP	2	561566	561690
C 185						C 247					
C 186						C 248	LAST LUGGAGE CPT - ABS	PED WP	6	561606	561607
C 187	FR SERVICE JCT BOX - RESISTORS	AMP MNL	6	561552	561515	C 249	FR SERVICE CPT - ABS/DDEC	PED WP	2	561566	561690
C 188	LUGG COMPT –MANUAL REMOTE SLIDE-OUT	AMP CPC	7	561772	561773	C 250					
						C 251	LH SW PANEL – FAST IDLE	EATON	12		562763
						C 252					
C 189	ENGINE COMPT – DOOR LIGHT BACK UP	TRUCK-LITE	2	562755		C 253	LH SWITCH PANEL - ETHER	EATON	12		562763
C 190	ENGINE COMPT – DOOR LIGHT STOP/TURN	AMP SS	3		562601	C 254					
C 191	ENGINE COMPT – DOOR LIGHT STOP/TURN	AMP SS	3		562601	C 255	LH SWITCH PANEL – ENGINE BRAKE	EATON	12		562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 256						C 319	ENGINE DDEC – ECM POWER	PED	4	561610	561611
C 257						C 320	RT SWITCH PANEL – DRIVER'S LTS SW.	EATON	12		562763
C 258	LH SWITCH PANEL – MULTI FUNC. SW	AMP FF	8	561188		C 321	UNDER DASH RH - KEYLESS MODULE	AMP COM	26		562676
C 259						C 322	UNDER DASH RH - KEYLESS MODULE	AMP COM	22		562675
C 259	LH SWITCH PANEL – MULTI FUNC. SW	AMP FF	6		561186	C 323	DRIVER'S WINDOW MOTOR	PED	2		561848
C 260						C 324	LH SWITCH PANEL - UPPER FAN DEFROST	EATON	12		562763
C 261						C 325					
C 262						C 326					
C 263	LUGGAGE COMPT. LTS COMPT #3	AMP MNL	2	561248	561247	C 327					
C 264	LUGGAGE COMPT. LTS COMPT #2	AMP MNL	2	561248	561247	C 328					
C 265	LUGGAGE COMPT. LTS COMPT #1	AMP MNL	2	561248	561247	C 329					
C 266	ENTRANCE DOOR KEYLESS	AMP CPC	14	561585	561583	C 330					
C 267	UNDER DASH RH – KEYLESS PANEL	AMP CPC	24	561642	561643	C 331					
C 268	FR MIRROR RH	CONXALL	5	563091	563090	C 332					
C 269	FR MIRROR LH	CONXALL	5	563091	563090	C 333					
C 270	LUGGAGE COMPT LTS - 3 LH	AMP MNL	2	561248	561247	C 334					
C 271	LUGGAGE COMPT LTS - 4	AMP MNL	2	561248	561247	C 335					
C 272						C 336					
C 273						C 337					
C 274						C 338					
C 275						C 339					
C 276	UNDER DASH RH – 3 WAY LTS DR'S	EATON	12		562763	C 340	FR JCT BOX – FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 277	LH SWITCH PANEL DOCK & CORN. SW.	EATON	12		562763	C 341	LH SWITCH PANEL – HEAT MIRROR SW.	EATON	12		562763
C 278	LH SWITCH PANEL – B/U CANCEL	EATON	12		562763	C 342					
C 279	FR SERVICE COMPT LH – STEERING ZF	DEUTSCH	2		562485	C 343	LH SWITCH PANEL – HEAD LAMP SW.	EATON	12		562763
C 280	ENGINE COMPT - COMPRESSOR STD	PED WP	2	561566	561690	C 344	LH SWITCH PANEL – HAZARD LT SW.	EATON	12		562763
C 281	LH CONSOLE – LEVEL LOW	AMP MNL	4	560851	560852	C 345	LH SWITCH PANEL – FOG LT SW.	EATON	12		562763
C 282	FR SERVICE COMPT – STEERING ZF	VOLVO	2		562928	C 346					
C 283						C 347					
C 284						C 348	INSTR. PANEL CENT. – RACOR MODULE	MOLEX	6	562070	562069
C 285						C 349					
C 286						C 350					
C 287						C 351					
C 288						C 352					
C 289						C 353					
C 290	LUGGAGE CPT - DOOR LOCK	AMP MNL	4	560851	560852	C 354					
C 291	LUGGAGE CPT - DOOR LOCK	AMP MNL	4	560851	560852	C 355					
C 292	FR SERVICE CPT LEVEL LOW	PNEUMAC	2		641385	C 356					
C 293	FR SERVICE CPT LEVEL LOW	PNEUMAC	2		641385	C 357					
C 294	FR SERVICE CPT LEVEL LOW	PNEUMAC	2		641385	C 358					
C 295	FR SERVICE CPT LEVEL LOW	PNEUMAC	2		641385	C 359	RH SWITCH PANEL – ENT. DOOR WIND. SW.	EATON	12		562763
C 296	FR SERVICE CPT LEVEL LOW	PNEUMAC	2		641385	C 360	ENTRANCE WINDOW MOTOR	PED	2		561848
C 297						C 361					
C 298						C 362					
C 299						C 363					
C 300	FR SERVICE CPT – LOW BEAM RESISTORS	PED WP	2	561566	561690	C 364					
C 301						C 365					
C 302						C 366					
C 303	RR JCT BOX - DIODES	AMP MNL	15	561987	561986	C 367					
C 304						C 368					
C 305						C 369					
C 306						C 370					
C 307						C 371					
C 308						C 372					
C 309						C 373					
C 310	LH CONSOLE SW – LUG. DOOR LOCK	EATON	12		562763	C 374					
C 311						C 375					
C 312	ENGINE DDEC - ACCESSORIES	PED WP	3	561781	561782	C 376					
C 313						C 377	LH SWITCH PANEL – STOP ENGINE OVERRIDE	EATON	12		562763
C 314						C 378					
C 315	LH SWITCH PANEL – LH SUN VISOR SW.	EATON	12		562763	C 379					
C 316						C 380					
C 317	LH SWITCH PANEL – RH SUN VISOR SW.	EATON	12		562763	C 381	UNDER DASH PANEL – ANTI THIELED	AMP MNL	2	561248	561247
C 318	LH CONSOLE SW – DR'S WINDOW SW.	EATON	12		562763	C 382	ENGINE GENERATOR (1)	PED WP	1	561605	561577
						C 383	ENGINE COMPT – VOLTAGE REGULATOR	PED WP	1	561605	561577

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 384						C 449					
C 385						C 450					
C 386						C 451					
C 387	ENGINE COMPT. - BY-PASS VALVE	PED WP	2	561566	561690	C 452					
C 388						C 453					
C 389	ENGINE COMPT. - WATER PUMP	PED WP	2	561566	561690	C 454					
C 390	ENGINE COMPT. - A/C JCT. BOX	DEUTSCH	24	562280	562283	C 455					
C 391	CONDENSER COMPT. A/C PRESS SW 2 SP	PED WP	2	561566	561690	C 456	WORLD TRANS. - RETARDER ACCUM.	PED MP	2		562427
C 392						C 457	WORLD TRANS. - MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 393						C 458	WORLD TRANS. - TURBINE SP. SENS.	PED MP	2		562426
C 394						C 459	WORLD TRANS. - ENGINE SP. SENS.	PED MP	2		562426
C 395						C 460	WORLD TRANS. - SPEED SENSOR	ITT	2		562541
C 396						C 461	WORLD TRANS. - RETARDER TEMP.	PED MP	2		562856
C 397						C 462	WORLD TRANS. - RETARDER SOL. "K"	PED MP	2		562426
C 398						C 463	WORLD TRANS. - SENSOR CONN.	DEUTSCH	16	562570	562571
C 399	ENGINE GENERATOR (2)	PED WP	2	561566	561690	C 464	RR JCT BOX - DDL CONN	DEUTSCH	6		565360
C 400	ENGINE COMPT. - BLOCK HEATER	PED WP	3	561781	561782	C 465	LH CONSOLE - SHIFTER SELECTOR	PED	20		562825
C 401						C 466	FR SERVICE CPT - RESIS. MOD.	PED WP	3		562428
C 402						C 467	FR SERVICE CPT - RESIS. MOD.	PED WP	3		562428
C 403						C 468	FR SERVICE CPT - RET. HAND LEVER	AMP FF	8	561188	562363
C 404						C 469	FR SERVICE CPT - RET. HAND LEVER	AMP FF	8	561188	562363
C 405						C 470					
C 406						C 471					
C 407						C 472	FR SERVICE CPT - SILENT 1000	PED WP	2	561566	561690
C 408						C 473					
C 409						C 474	DRIVER'S TEMP SENSOR	AMP MNL	2	561248	561247
C 410						C 475	FR SERVICE CPT - SPEED SIGN. CONNECT.	DEUTSCH	6	562583	562581
C 411						C 475W	FR SERVICE CPT - SPEED SIGN. W. TR.	DEUTSCH	6	562583	562581
C 412						C 476					
C 413						C 477					
C 414						C 478					
C 415						C 479	UNDER DASH - HVAC DASH MODULE	MOLEX	3		562783
C 416						C 480	UNDER DASH RH - DR'S FAN SPEED CTR	PED WP	4	561889	561890
C 417						C 481	UNDER DASH RH - DR'S FAN SPEED CTR	PED WP	3	561781	561782
C 418						C 482					
C 419						C 483	FR SERVICE CPT - ELECTRICAL SEAT	PED	2	562237	
C 420						C 484	UNDER DASH LH - FOOT DAMPER MOTOR	PED	2		562076
C 421						C 485	UNDER DASH LH - DASH & DEFR. DAMP. M.	AMP MNL	3	561667	561558
C 422						C 486					
C 423						C 487					
C 424	UNDER DASH- AUDIBLE FLASHER	AMP MNL	3	561667	561550	C 488					
C 425						C 489					
C 426	ENGINE S60 RAD. FAN CLUTCH	PED WP	3	561781	561782	C 490					
C 427						C 491					
C 428	RH SW PANEL - EVAP. FAN SPEED	EATON	12		562763	C 492					
C 429						C 493					
C 430						C 494					
C 431						C 495					
C 432						C 496					
C 433						C 497					
C 434						C 498					
C 435						C 499					
C 436						C 500	FR JCT PANEL - PRODRIVER	MOLEX	6	562070	562069
C 437						C 501					
C 438						C 502					
C 439						C 503					
C 440						C 504					
C 441						C 505					
C 442						C 506	LH CONSOLE - LEVEL LOW SW.	EATON	12		562763
C 443						C 507					
C 444						C 508	RR JCT BOX - FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 445						C 509					
C 446						C 510					
C 447						C 511					
C 448						C 512					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 513						C 577					
C 514						C 578					
C 515						C 579					
C 516						C 580					
C 517						C 581	LH DASH PANEL – ELECTRICAL HORN	PED MP	2		562777
C 518						C 582					
C 519						C 583	LH DASH PANEL – MASTER KEY SW.	DEUTSCH	2	562486	562485
C 520						C 584	FR. SERVICE COMPT – HORN PNEU. VALVE	PNEUMAC	3		562848
C 521						C 585	RH CONSOLE – ENT. DOOR LOCK VALVE	PNEUTECH	2		563147
C 522	FR JCT BOX – DAYTIME LTS MODULE	BOSCH	5		561183	C 586	FR SERVICE COMPT – ACC. PNEU. VALVE	PNEUMAC	3		562848
C 523						C 587					
C 524	FR JCT BOX – FUSE BLOCK	PED	8	562647	562646	C 588					
C 525	FR JCT BOX – FUSE BLOCK	PED	8	562647	562646	C 589	FR. MIRROR LH	CONXALL	8	563163	563088
C 526	FR JCT BOX – FUSE BLOCK	PED	8	562647	562646	C 590	FR. MIRROR RH	CONXALL	8	563163	563088
C 527	FR JCT BOX – FUSE BLOCK	PED	8	562647	562646	C 591	LH CONSOLE – LH MIRROR SW.	EURAMT.	8		562749
C 528						C 592	LH CONSOLE – RH MIRROR SW.	EURAMT.	8		562749
C 529						C 593					
C 530						C 594	FRONT ROOF – DRIVER'S LTS	LEEKRAFT	2	-----	562803
C 531						C 595					
C 532						C 596					
C 533						C 597	LH DASH PANEL – DISPLAY SET SW.	MOLEX	5		562905
C 534						C 598	LH DASH PANEL – DISPLAY SET SW.	MOLEX	5		562905
C 535						C 599	UND. DASH – MAGN. SW CTR POS. DR'S AIR	AMP MNL	2	561248	561247
C 536						C 600					
C 537	A/C JCT BOX RESISTOR SIGN. RLY	AMP MNL	2	561248	561247	C 601					
C 538	FR SERV. CPT RH – OUTSIDE TEMP. SENS	AMP MNL	2	561248	561247	C 602					
C 539	HVAC DASH MODULE OUTPUT CONN.	MOLEY	24		562780	C 603					
C 540	HVAC DASH MODULE INPUT CONN.	MOLEY	22		562781	C 604					
C 541						C 605					
C 542						C 606					
C 543						C 607	FR SERVICE COMPT – RPM SIGNAL (SPARE)	PED WP	2	561566	561690
C 544						C 608	FR SERV. COMPT – SPEED SIGNAL (SPARE)	PED WP	2	561566	561690
C 545						CH 50	RR JCT BOX – TRANS. INHIBIT	PED WP	1	561605	561577
C 546						CH 51	RR JCT BOX – TRANS. INHIBIT	PED WP	1	561605	561577
C 547						CH 88	FR SERV. COMPT. – PARK BRAKR S.O.	PED WP	1	561605	561577
C 548	LH DASH PANEL – T.T.LT TEST SW.	EATON	12		562763	CS	FR SERVICE CPT - ECU WOLRD TR.	PED MP	32		562817
C 549						CT	FR SERVICE CPT - ECU WORLD TR.	PED MP	32		562824
C 550						CTCI	ENGINE CPT. – TURBO TEMP.	FCI	2		563404
C 551						CV	FR SERVICE CPT - ECU WORLD TR.	PED MP	32		562823
C 552						CX	CLUSTER	JAE	5		562957
C 553						CX 1	FR SERVICE CPT - ECU ABS	AMP JN	15		563200
C 554						CX 2	FR SERVICE CPT - ECU ABS	AMP JN	18		563201
C 555	LUGGAGE COMPT. – AWNING WINDOWS	MOLEX	4	561477	561476	CY	CLUSTER	JAE	30		562765
C 555A	LUGGAGES – AWNING EXT. HARNESS	MOLEX	4	561477	561476	LX	CLUSTER	JAE	22		562766
C 556						LY	CLUSTER	JAE	30		562767
C 557						RX	CLUSTER	JAE	30		562767
C 558											
C 559											
C 560											
C 561											
C 562											
C 563											
C 564											
C 565											
C 566											
C 567											
C 568											
C 569											
C 570	UNDER DASH PANEL – T.T.LT MODULE	MOLEX	6		562464						
C 571	UNDER DASH PANEL – T.T.LT MODULE	MOLEX	20		562778						
C 572	UNDER DASH PANEL – T.T.LT MODULE	MOLEX	18		562779						
C 573	UNDER DASH PANEL – T.T.LT MODULE	MOLEX	8		562465						
C 574											
C 575											
C 576											

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN	#SOCKET	NO	LOCATION	TYPE	CAVITY	#PIN	#SOCKET
				HOUSING	HOUSING					HOUSING	HOUSING
AA 1	UNDER DASH PANEL-TAG AXLE SONALERT	BOSCH	5	-----	561183	C 65	ENGINE CPT - PRESS SW FAN CLUTCH	PED WP	2	561566	561690
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584	C 66					
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561638	561640	C 67					
C 3	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646	C 68					
C 4	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643	C 69					
C 5	FR SERVICE COMPT. - UNDERNEATH	AMP CPC	37	561645	561646	C 70	LH CONSOLE	AMP CPC	16	561639	561640
C 6	FR SERVICE COMPT. - UNDERNEATH	AMP CPC	16	561639	561640	C 71	FR JCT BOX COMPT.	AMP CPC	37	561645	561646
C 7	FR SERVICE COMPT - CLUTCH SW	ITT SS	3	561080	561111	C 72	FR JCT BOX COMPT.	AMP CPC	24	561642	561643
C 8	FR SERVICE COMPT. - UNDERNEATH	AMP CPC	24	561642	561643	C 73					
C 9	FR SERVICE COMPT. - UNDERNEATH	AMP CPC	24	561642	561643	C 74	FR JCT BOX COMPT.	AMP CPC	37	561645	561646
C 10	FR SERVICE DOOR ACCESS.	DEUTSCH	5	562565	562566	C 75					
C 11	FR SERV. CPT ACCESS	AMP CPC	37	561645	561646	C 76	ENGINE CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 12	FR SERV. CPT ACCESS	AMP CPC	16	561639	561640	C 77	ENGINE CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 13	FR SERV. CPT ACCESS	AMP CPC	9	561635	561637	C 78					
C 14						C 79					
C 15	LUGGAGE CPT (184)-MARK. SUPPL.	DEUTSCH	4	562479	562477	C 80					
C 16	LH CONSOLE SW-CRUISE ON/OFF	EATON	12	-----	562763	C 81	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	12		562763	C 82	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 18	LH CONSOLE SW-CRUISE SET	EATON	12		562763	C 83	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 19	LH CONSOLE SW-DECEL SW	EATON	12		562763	C 84	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 20	RR JCT BOX	DEUTSCH	70	562282	562285	C 85	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 21	ENGINE COMPT - LOCK DOOR MOT.	PED WP	2		562076	C 86	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 22	LUGGAGE COMPT (A) - A/C & FUEL TANK	AMP CPC	16	561639	561640	C 87					
C 23	LUGGAGE COMPT (1) - LUGG. ACCESS.	AMP CPC	24	561642	561643	C 88	FR SERV. CPT. PRESS SW PARK BRAKE	PED WP	2	561566	561690
C 24	ENGINE COMPT. - INTERF RJB	PED WP	6	561606	561607	C 89					
C 25						C 90					
C 26	ENGINE COMPT. ACCESS	DEUTSCH	40	562281	562284	C 91					
C 27	ENGINE COMPT. - INTERF. RJB	DEUTSCH	6	562583	562581	C 92	FR JCT BOX COMPT - ABS	AMP CPC	9	561635	561637
C 28	LUGGAGE COMPT(4) - LUGG. ACCESS	AMP CPC	24	561642	561643	C 93					
C 29	FR SERVICE COMPT - E.C.U. FEED	PED WP	3	561781	561782	C 94					
C 30	ENGINE COMPT - MASTER SW. SIGN.	DEUTSCH	2	562486	562485	C 95	ENTRANCE DOOR ACCESS	DEUTSCH	6	562583	562581
C 31						C 96	FR SERVICE DOOR ACCESS	AMP MNL	9	561670	561669
C 32						C 97	FR SERVICE DOOR - WATER TANK	PED MP	20		562426
C 33	ENGINE DDEC II - SPEED SIGN SPARE	PED WP	2	561566	561690	C 98					
C 34						C 99	FR SERVICE CPT. LTS	AMP MNL	2	561248	561247
C 35	A/C COMPT - AIR RETURN SENSOR	AMP MNL	2	561248	561247	C 100	SIDE (LH/FR & CTR) DIR LTS	GROTE	2	-----	562155
C 36						C 101	FR SERVICE COMPT. ELEC. HORNS	PED WP	2	561566	561690
C 37						C 101	CONDENSER COMPT - A/C PRES. SW 1SP	PED WP	2	561566	561690
C 38						C 102	CONDENS. COMPT - LIQU. SOL. VAL. PRES.	PED WP	2	561566	561690
C 39						C 103					
C 40						C 104					
C 41	ENGINE COMPT - RH DOOR LOCK	DEUTSCH	4	562479	562477	C 105	UNDER DASH RH - DRV LIO SOL VL	PED WP	2	561566	561690
C 42	ENGINE COMPT - RR CAP LIGHTING	DEUTSCH	6	562583	562581	C 106	UNDER DASH RH - DRV WTR VALVE	PED WP	2	561566	561690
C 43	FR JCT BOX - ALT. MODULE	AMP MNL	12	561735	561734	C 107					
C 44	ENGINE COMPT - LIGHTS	GROTE	2	563268	-----	C 108					
C 45	FR JCT BOX COMPT - ROOF ACCESS	AMP CPC	24	561642	561643	C 109	SIDE (RH/FR & CTR) DIR LTS	GROTE	2	-----	562155
C 46						C 110	SIDE (LH/FR) MARKER LTS	GROTE	2	-----	562155
C 47						C 111	SIDE (RH/FR) MARKER LTS	GROTE	2	-----	562155
C 48	FR SERV. CPT. PRESS SW PARK BRAKE	PED WP	2	561566	561690	C 112	SIDE (RH/CTR) MARKER LTS	GROTE	2	-----	562155
C 49						C 113	SIDE (LH/RR) MARKER LTS	GROTE	2	-----	562155
C 50						C 114	ENGINE DDEC - SPEED SIGNAL (SPARG)	PED WP	2	561566	561690
C 51						C 115	RR JCT BOX - ENGINE ACCESS	DEUTSCH	40	562281	562284
C 52	ENGINE COMPT - COMPRESSOR	PED WP	2	561566	561690	C 116	SIDE (LH/CTR) MARKER LTS	GROTE	2	-----	562155
C 53	ENGINE COMPT - COMPRESSOR	PED WP	2	561566	561690	C 117	SIDE (RH/RR) MARKER LTS	GROTE	2	-----	562155
C 54	FRONT ROOF - UPPER FAN DEFROST	AMP MNL	6	561552	561515	C 118	ENGINE COMPT - LICENCE	PED WP	2	930210	
C 55	CENTRAL DOOR LOCK	DEUTSCH	4	562479	562477	C 119	ENGINE COMPT - RH LOWER LAMP	PED WP	6	561606	561607
C 56						C 120	ENGINE COMPT - LH LOWER LAMP	PED WP	6	561606	561607
C 57						C 121	SIDE (RH/RR) DIR LTS	GROTE	2	-----	562155
C 58						C 122	SIDE (LH/RR) DIR LTS	GROTE	2	-----	562155
C 59						C 123					
C 60						C 124					
C 61	ENGINE COMPT - FUEL FILTER	PED WP	2	561566	561690	C 125					
C 62	ENGINE COMPT - COMPRESSOR STD	PED WP	2	561566	561690	C 126					
C 63	ENGINE COMPT - COMPRESSOR STD	PED WP	2	561566	561690	C 127					
C 64						C 128					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 129						C 192	ENGINE COMPT – DOOR LIGHT PARKING	AMP SS	3		562601
C 130						C 193					
C 131						C 194					
C 132						C 195					
C 133						C 196					
C 134	FR JCT BOX – DIODE CONN.	AMP MNL	15	561987	561986	C 197					
C 135	FR JCT BOX – DIODE CONN.	AMP MNL	15	561987	561986	C 198					
C 136	FR JCT BOX – DIODE CONN.	AMP MNL	15	561987	561986	C 199					
C 137	FR JCT BOX – DIODE CONN.	AMP MNL	15	561987	561986	C 200					
C 138						C 201					
C 139						C 202					
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782	C 203					
C 141	RR DASH PANEL – LTS CONN. (SPARE)	AMP MNL	2	561248	561247	C 204					
C 142	ENGINE COMPT. B/U ALARM	PED WP	2	561566	561690	C 205					
C 143	TRAILER BRAKE PRESSURE SWITCH	PED	2	561566	561690	C 206					
C 144						C 207					
C 145						C 208					
C 146						C 209					
C 147						C 210					
C 148	TRAILER PARK BRAKE PRESSURE SWITCH	PED	2	561690	561566	C 211	FR ROOF – SUN VISOR LH	AMP MNL	2	560900	560898
C 149						C 212	FR ROOF – SUN VISOR RH	AMP MNL	2	560900	560898
C 150						C 213					
C 151						C 214					
C 152						C 215					
C 153						C 216					
C 154						C 217					
C 155	EVAPORATOR CPT – WATER VALVE	BURKERT	3		563204	C 218					
C 156						C 219					
C 157	FR SERV. CPT – WATER PUMP DR'S	PED WP	3	561781	561782	C 220					
C 158	ENGINE CPT – DDEC INTERFACE	DEUTSCH	31	562572	562536	C 221					
C 159	ENGINE CPT – DDEC FEED	PED WP	4	561889	561890	C 222	HEADLAMPS – LOW BEAM	HELLA	2		562623
C 160	FR SERVICE CPT - INTERFACE	AMP CPC	37	561644	561646	C 222	HEADLAMPS – LOW BEAM (XENON OPTION)	PED MP	2		563366
C 161	ENGINE DDEC - ECM	AMP	68		563463	C 223	FR AXLE CPT – HEADLAMPS MAIN CONN.	DEUTSCH	6	565131	562789
C 162	ENGINE DDEC - ACCESSORIES	PED WP	4	561610	561611	C 224	HEADLAMPS – HI BEAM	HELLA	2		562623
C 163	ENGINE CPT - COOLANT PROBE	PED MP	2		562350	C 225	FOG LIGHTS	DEUTSCH	3	562902	562901
C 164	ENGINE CPT – DDEC FEED	PED WP	4	561889	561890	C 226	FLASHER – (FR)	PED	3	562137	
C 165						C 227					
C 166						C 228	A/C COMPRESSOR	PED WP	2	561566	561690
C 167	FR SERVICE CPT - EL. FOOT PEDAL	PED WP	3	561781	561782	C 229					
C 168	FR SERVICE CPT - DDR	DEUTSCH	6	562360		C 230					
C 169	FR SERVICE CPT - WORLD TR. INTERFACE	AMP CPC	16	561639	561640	C 231					
C 170	FR JCT BOX FLASHER UNIT	PED	2		561940	C 232					
C 171	LH CONSOLE	AMP CPC	24	561642	561643	C 233					
C 172	FR SERVICE COMPT - LEVEL LOW	AMP CPC	9	561637		C 234					
C 173						C 235					
C 174						C 236	FR SERVICE CPT CENTER - ABS	AMP CPC	14	561636	561637
C 175						C 237	FR AXLE CPT - ABS RH SENSOR	WABCO	2	641132	
C 176	UNDER DASH RH – WIPER PULSE	AMP FF	6		561186	C 238	FR AXLE CPT - ABS RH VALVE	WABCO	3	641098	
C 177	UNDER DASH RH – WIPER MOTOR	AMP FF	6		561186	C 239	FR AXLE CPT - ABS LH VALVE	WABCO	3	641098	
C 178						C 240	FR AXLE CPT - ABS LH SENSOR	WABCO	2	641132	
C 179						C 241	LAST LUGGAGE COMPT - ABS	PED WP	6	561606	561607
C 180						C 242	DRIVE AXLE CPT - ABS LH SENSOR	WABCO	2	641132	
C 181						C 243	DRIVE AXLE CPT - ABS LH VALVE	WABCO	3	641098	
C 182						C 244	DRIVE AXLE CPT - ABS RH VALVE	WABCO	3	641098	
C 183						C 245	DRIVE AXLE CPT - ABS RH SENSOR	WABCO	2	641132	
C 184						C 246	DRIVE AXLE CPT - ABS SPARE	PED WP	2	561566	561690
C 185						C 247					
C 186						C 248	LAST LUGGAGE CPT - ABS	PED WP	6	561606	561607
C 187	FR SERVICE JCT BOX - RESISTORS	AMP MNL	6	561552	561515	C 249	FR SERVICE CPT - ABS/DDEC	PED WP	2	561566	561690
C 188	LUGG COMPT –MANUAL REMOTE SLIDE-OUT	AMP CPC	7	561772	561773	C 250					
						C 251	LH SW PANEL – FAST IDLE	EATON	12		562763
						C 252					
C 189	ENGINE COMPT – DOOR LIGHT BACK UP	TRUCK-LITE	2	562755		C 253	LH SWITCH PANEL - ETHER	EATON	12		562763
C 190	ENGINE COMPT – DOOR LIGHT STOP/TURN	AMP SS	3		562601	C 254					
C 191	ENGINE COMPT – DOOR LIGHT STOP/TURN	AMP SS	3		562601	C 255	LH SWITCH PANEL – ENGINE BRAKE	EATON	12		562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 256						C 319	ENGINE DDEC – ECM POWER	PED	4	561610	561611
C 257						C 320	RT SWITCH PANEL – DRIVER'S LTS SW.	EATON	12		562763
C 258	LH SWITCH PANEL – MULTI FUNC. SW	AMP FF	8	561188		C 321	UNDER DASH RH - KEYLESS MODULE	AMP COM	26		562676
C 259						C 322	UNDER DASH RH - KEYLESS MODULE	AMP COM	22		562675
C 259	LH SWITCH PANEL – MULTI FUNC. SW	AMP FF	6		561186	C 323	DRIVER'S WINDOW MOTOR	PED	2		561848
C 260						C 324	LH SWITCH PANEL - UPPER FAN DEFROST	EATON	12		562763
C 261						C 325					
C 262						C 326					
C 263	LUGGAGE COMPT. LTS COMPT #3	AMP MNL	2	561248	561247	C 327					
C 264	LUGGAGE COMPT. LTS COMPT #2	AMP MNL	2	561248	561247	C 328					
C 265	LUGGAGE COMPT. LTS COMPT #1	AMP MNL	2	561248	561247	C 329					
C 266	ENTRANCE DOOR KEYLESS	AMP CPC	14	561585	561583	C 330					
C 267	UNDER DASH RH – KEYLESS PANEL	AMP CPC	24	561642	561643	C 331					
C 268	FR MIRROR RH	CONXALL	5	563091	563090	C 332					
C 269	FR MIRROR LH	CONXALL	5	563091	563090	C 333					
C 270	LUGGAGE COMPT LTS - 3 LH	AMP MNL	2	561248	561247	C 334					
C 271	LUGGAGE COMPT LTS - 4	AMP MNL	2	561248	561247	C 335					
C 272						C 336					
C 273						C 337					
C 274						C 338					
C 275						C 339					
C 276	UNDER DASH RH – 3 WAY LTS DR'S	EATON	12		562763	C 340	FR JCT BOX – FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 277	LH SWITCH PANEL DOCK & CORN. SW.	EATON	12		562763	C 341	LH SWITCH PANEL – HEAT MIRROR SW.	EATON	12		562763
C 278	LH SWITCH PANEL – B/U CANCEL	EATON	12		562763	C 342					
C 279	FR SERVICE COMPT LH – STEERING ZF	DEUTSCH	2		562485	C 343	LH SWITCH PANEL – HEAD LAMP SW.	EATON	12		562763
C 280	ENGINE COMPT - COMPRESSOR STD	PED WP	2	561566	561690	C 344	LH SWITCH PANEL – HAZARD LT SW.	EATON	12		562763
C 281	LH CONSOLE – LEVEL LOW	AMP MNL	4	560851	560852	C 345	LH SWITCH PANEL – FOG LT SW.	EATON	12		562763
C 282	FR SERVICE COMPT – STEERING ZF	VOLVO	2		562928	C 346					
C 283						C 347					
C 284						C 348	INSTR. PANEL CENT. – RACOR MODULE	MOLEX	6	562070	562069
C 285						C 349					
C 286						C 350					
C 287						C 351					
C 288						C 352					
C 289						C 353					
C 290	LUGGAGE CPT - DOOR LOCK	AMP MNL	4	560851	560852	C 354					
C 291	LUGGAGE CPT - DOOR LOCK	AMP MNL	4	560851	560852	C 355					
C 292	FR SERVICE CPT LEVEL LOW	PNEUMAC	2		641385	C 356					
C 293	FR SERVICE CPT LEVEL LOW	PNEUMAC	2		641385	C 357					
C 294	FR SERVICE CPT LEVEL LOW	PNEUMAC	2		641385	C 358					
C 295	FR SERVICE CPT LEVEL LOW	PNEUMAC	2		641385	C 359	RH SWITCH PANEL – ENT. DOOR WIND. SW.	EATON	12		562763
C 296	FR SERVICE CPT LEVEL LOW	PNEUMAC	2		641385	C 360	ENTRANCE WINDOW MOTOR	PED	2		561848
C 297						C 361					
C 298						C 362					
C 299						C 363					
C 300	FR SERVICE CPT – LOW BEAM RESISTORS	PED WP	2	561566	561690	C 364					
C 301	FR SERV. CPT ACCESS – DR'S FAN SPEED	PED WP	1	561605	561577	C 365					
C 302						C 366					
C 303	RR JCT BOX - DIODES	AMP MNL	15	561987	561986	C 367					
C 304						C 368					
C 305						C 369					
C 306						C 370					
C 307						C 371					
C 308						C 372					
C 309						C 373					
C 310	LH CONSOLE SW – LUG. DOOR LOCK	EATON	12		562763	C 374					
C 311						C 375					
C 312	ENGINE DDEC - ACCESSORIES	PED WP	3	561781	561782	C 376					
C 313						C 377	LH SWITCH PANEL – STOP ENGINE OVERIDE	EATON	12		562763
C 314						C 378					
C 315	LH SWITCH PANEL – LH SUN VISOR SW.	EATON	12		562763	C 379					
C 316						C 380					
C 317	LH SWITCH PANEL – RH SUN VISOR SW.	EATON	12		562763	C 381	UNDER DASH PANEL – ANTI THIELED	AMP MNL	2	561248	561247
C 318	LH CONSOLE SW – DR'S WINDOW SW.	EATON	12		562763	C 382	ENGINE GENERATOR (1)	PED WP	1	561605	561577
						C 383	ENGINE COMPT – VOLTAGE REGULATOR	PED WP	1	561605	561577

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 384						C 449					
C 385						C 450					
C 386						C 451					
C 387	ENGINE COMPT. - BY-PASS VALVE	PED WP	2	561566	561690	C 452					
C 388						C 453					
C 389	ENGINE COMPT. - WATER PUMP	PED WP	2	561566	561690	C 454					
C 390	ENGINE COMPT. - A/C JCT. BOX	DEUTSCH	24	562280	562283	C 455					
C 391	CONDENSER COMPT. A/C PRESS SW 2 SP	PED WP	2	561566	561690	C 456	WORLD TRANS. - RETARDER ACCUM.	PED MP	2		562427
C 392						C 457	WORLD TRANS. - MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 393						C 458	WORLD TRANS. - TURBINE SP. SENS.	PED MP	2		562426
C 394						C 459	WORLD TRANS. - ENGINE SP. SENS.	PED MP	2		562426
C 395						C 460	WORLD TRANS. - SPEED SENSOR	ITT	2		562541
C 396						C 461	WORLD TRANS. - RETARDER TEMP.	PED MP	2		562856
C 397						C 462	WORLD TRANS. - RETARDER SOL. "K"	PED MP	2		562426
C 398						C 463	WORLD TRANS. - SENSOR CONN.	DEUTSCH	16	562570	562571
C 399						C 464	RR JCT BOX - DDL CONN	DEUTSCH	6		565360
C 400	ENGINE COMPT. - BLOCK HEATER	PED WP	3	561781	561782	C 465	LH CONSOLE - SHIFTER SELECTOR	PED	20		562825
C 401						C 466	FR SERVICE CPT - RESIS. MOD.	PED WP	3		562428
C 402						C 467	FR SERVICE CPT - RESIS. MOD.	PED WP	3		562428
C 403						C 468	FR SERVICE CPT - RET. HAND LEVER	AMP FF	8	561188	562363
C 404						C 469	FR SERVICE CPT - RET. HAND LEVER	AMP FF	8	561188	562363
C 405						C 470					
C 406						C 471					
C 407						C 472	FR SERVICE CPT - SILENT 1000	PED WP	2	561566	561690
C 408						C 473					
C 409						C 474	DRIVER'S TEMP SENSOR	AMP MNL	2	561248	561247
C 410						C 475	FR SERVICE CPT - SPEED SIGN. CONNECT.	DEUTSCH	6	562583	562581
C 411						C 475W	FR SERVICE CPT - SPEED SIGN. W. TR.	DEUTSCH	6	562583	562581
C 412						C 476					
C 413						C 477					
C 414						C 478					
C 415						C 479	UNDER DASH - HVAC DASH MODULE	MOLEX	3		562783
C 416						C 480	UNDER DASH RH - DR'S FAN SPEED CTR	PED WP	4	561889	561890
C 417						C 481	UNDER DASH RH - DR'S FAN SPEED CTR	PED WP	3	561781	561782
C 418						C 482					
C 419						C 483	FR SERVICE CPT - ELECTRICAL SEAT	PED	2	562237	
C 420						C 484	UNDER DASH LH - FOOT DAMPER MOTOR	PED	2		562076
C 421						C 485	UNDER DASH LH - DASH & DEFR. DAMP. M.	AMP MNL	3	561667	561558
C 422						C 486					
C 423						C 487					
C 424	UNDER DASH- AUDIBLE FLASHER	AMP MNL	3	561667	561550	C 488					
C 425						C 489					
C 426	ENGINE S60 RAD. FAN CLUTCH	PED WP	3	561781	561782	C 490					
C 427						C 491					
C 428	RH SW PANEL - EVAP. FAN SPEED	EATON	12		562763	C 492					
C 429						C 493					
C 430						C 494					
C 431						C 495					
C 432						C 496					
C 433						C 497					
C 434						C 498					
C 435						C 499					
C 436						C 500	FR JCT PANEL - PRODRIVER	MOLEX	6	562070	562069
C 437						C 501					
C 438						C 502					
C 439						C 503					
C 440						C 504					
C 441						C 505					
C 442						C 506	LH CONSOLE - LEVEL LOW SW.	EATON	12		562763
C 443						C 507					
C 444						C 508	RR JCT BOX - FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 445						C 509					
C 446						C 510					
C 447						C 511					
C 448						C 512					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 513						C 577					
C 514						C 578					
C 515						C 579					
C 516						C 580					
C 517						C 581	LH DASH PANEL – ELECTRICAL HORN	PED MP	2		562777
C 518						C 582					
C 519						C 583	LH DASH PANEL – MASTER KEY SW.	DEUTSCH	2	562486	562485
C 520						C 584	FR. SERVICE COMPT – HORN PNEU. VALVE	PNEUMAC	3		562848
C 521						C 585	RH CONSOLE – ENT. DOOR LOCK VALVE	PNEUTECH	2		563147
C 522	FR JCT BOX – DAYTIME LTS MODULE	BOSCH	5		561183	C 586	FR SERVICE COMPT – ACC. PNEU. VALVE	PNEUMAC	3		562848
C 523						C 587					
C 524	FR JCT BOX – FUSE BLOCK	PED	8	562647	562646	C 588					
C 525	FR JCT BOX – FUSE BLOCK	PED	8	562647	562646	C 589	FR. MIRROR LH	CONXALL	8	563163	563088
C 526	FR JCT BOX – FUSE BLOCK	PED	8	562647	562646	C 590	FR. MIRROR RH	CONXALL	8	563163	563088
C 527	FR JCT BOX – FUSE BLOCK	PED	8	562647	562646	C 591	LH CONSOLE – LH MIRROR SW.	EURAMT.	8		562749
C 528						C 592	LH CONSOLE – RH MIRROR SW.	EURAMT.	8		562749
C 529						C 593					
C 530						C 594	FRONT ROOF – DRIVER'S LTS	LEEKRAFT	2	-----	562803
C 531						C 595					
C 532						C 596					
C 533						C 597	LH DASH PANEL – DISPLAY SET SW.	MOLEX	5		562905
C 534						C 598	LH DASH PANEL – DISPLAY SET SW.	MOLEX	5		562905
C 535						C 599	UND. DASH – MAGN. SW CTR POS. DR'S AIR	AMP MNL	2	561248	561247
C 536						C 600					
C 537	A/C JCT BOX RESISTOR SIGN. RLY	AMP MNL	2	561248	561247	C 601					
C 538	FR SERV. CPT RH – OUTSIDE TEMP. SENS	AMP MNL	2	561248	561247	C 602					
C 539	HVAC DASH MODULE OUTPUT CONN.	MOLEY	24		562780	C 603					
C 540	HVAC DASH MODULE INPUT CONN.	MOLEY	22		562781	C 604					
C 541						C 605					
C 542						C 606					
C 543						C 607	FR SERVICE COMPT – RPM SIGNAL (SPARE)	PED WP	2	561566	561690
C 544						C 608	FR SERV. COMPT – SPEED SIGNAL (SPARE)	PED WP	2	561566	561690
C 545						CH 50	RR JCT BOX – TRANS. INHIBIT	PED WP	1	561605	561577
C 546						CH 51	RR JCT BOX – TRANS. INHIBIT	PED WP	1	561605	561577
C 547						CH 88	FR SERV. COMPT. – PARK BRAKR S.O.	PED WP	1	561605	561577
C 548	LH DASH PANEL – T.T.LT TEST SW.	EATON	12		562763	CS	FR SERVICE CPT - ECU WOLRD TR.	PED MP	32		562817
C 549						CT	FR SERVICE CPT - ECU WORLD TR.	PED MP	32		562824
C 550						CTCI	ENGINE CPT. – TURBO TEMP.	FCI	2		563404
C 551						CV	FR SERVICE CPT - ECU WORLD TR.	PED MP	32		562823
C 552						CX	CLUSTER	JAE	5		562957
C 553						CX 1	FR SERVICE CPT - ECU ABS	AMP JN	15		563200
C 554						CX 2	FR SERVICE CPT - ECU ABS	AMP JN	18		563201
C 555	LUGGAGE COMPT. – AWNING WINDOWS	MOLEX	4	561477	561476	CY	CLUSTER	JAE	30		562765
C 555A	LUGGAGES – AWNING EXT. HARNESS	MOLEX	4	561477	561476	LX	CLUSTER	JAE	22		562766
C 556						LY	CLUSTER	JAE	30		562767
C 557						RX	CLUSTER	JAE	30		562767
C 558											
C 559											
C 560											
C 561											
C 562											
C 563											
C 564											
C 565											
C 566											
C 567											
C 568											
C 569											
C 570	UNDER DASH PANEL – T.T.LT MODULE	MOLEX	6		562464						
C 571	UNDER DASH PANEL – T.T.LT MODULE	MOLEX	20		562778						
C 572	UNDER DASH PANEL – T.T.LT MODULE	MOLEX	18		562779						
C 573	UNDER DASH PANEL – T.T.LT MODULE	MOLEX	8		562465						
C 574											
C 575											
C 576											

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
A 1	TRANSMISSION MODULE	AFL	80		563975	C 64					
AA 1	UNDER DASH PANEL-TAG AXLE SONALERT	BOSCH	5	-----	561183	C 65	ENGINE CPT - PRESS SW FAN CLUTCH	PED WP	2	561566	561690
C 1	FR JCT BOX COMPARTIMENT	AMP CPC	14	561585	561584	C 66					
C 2	FR JCT BOX COMPARTIMENT	AMP CPC	16	561638	561640	C 67					
C 3	FR JCT BOX COMPARTIMENT	AMP CPC	37	561644	561646	C 68					
C 4	FR JCT BOX COMPARTIMENT	AMP CPC	24	561641	561643	C 69					
C 5	FR SERVICE COMPT. - UNDERNEATH	AMP CPC	37	561645	561646	C 70	LH CONSOLE	AMP CPC	16	561639	561640
C 6	FR SERVICE COMPT. - UNDERNEATH	AMP CPC	16	561639	561640	C 71	FR JCT BOX COMPT.	AMP CPC	37	561645	561646
C 7	FR SERVICE COMPT. - CLUTCH SW	ITT SS	3	561080	561111	C 72	FR JCT BOX COMPT.	AMP CPC	24	561642	561643
C 8	FR SERVICE COMPT. - UNDERNEATH	AMP CPC	24	561642	561643	C 73					
C 9	FR SERVICE COMPT. - UNDERNEATH	AMP CPC	24	561642	561643	C 74	FR JCT BOX COMPT.	AMP CPC	37	561645	561646
C 10	FR SERVICE DOOR ACCESS.	DEUTSCH	5	562565	562566	C 75					
C 11	FR SERV. CPT ACCESS	AMP CPC	37	561645	561646	C 76	ENGINE CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 12	FR SERV. CPT ACCESS	AMP CPC	16	561639	561640	C 77	ENGINE CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 13	FR SERV. CPT ACCESS	AMP CPC	9	561635	561637	C 78					
C 14						C 79					
C 15	LUGGAGE CPT (184)-MARK. SUPPL.	DEUTSCH	4	562479	562477	C 80					
C 16	LH CONSOLE SW-CRUISE ON/OFF	EATON	12	-----	562763	C 81	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	12		562763	C 82	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 18	LH CONSOLE SW-CRUISE SET	EATON	12		562763	C 83	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 19	LH CONSOLE SW-DECEL SW	EATON	12		562763	C 84	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 20	RR JCT BOX	DEUTSCH	70	562282	562285	C 85	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 21	ENGINE COMPT - LOCK DOOR MOT.	PED WP	2		562076	C 86	LUGGAGE COMPT - DOOR LOCK	AMP MNL	4	560851	560852
C 22	LUGGAGE COMPT (A) - A/C & FUEL TANK	AMP CPC	16	561639	561640	C 87					
C 23	LUGGAGE COMPT (1) - LUGG. ACCESS.	AMP CPC	24	561642	561643	C 88	FR SERV. CPT. PRESS SW PARK BRAKE	PED WP	2	561566	561690
C 24	ENGINE COMPT. - INTERF RJB	PED WP	6	561606	561607	C 89					
C 25						C 90					
C 26	ENGINE COMPT. ACCESS	DEUTSCH	40	562281	562284	C 91					
C 27	ENGINE COMPT. - INTERF. RJB	DEUTSCH	6	562583	562581	C 92	FR JCT BOX COMPT - ABS	AMP CPC	9	561635	561637
C 28	LUGGAGE COMPT(4) - LUGG. ACCESS	AMP CPC	24	561642	561643	C 93					
C 29	FR SERVICE COMPT - E.C.U. FEED	PED WP	3	561781	561782	C 94					
C 30	ENGINE COMPT - MASTER SW. SIGN.	DEUTSCH	2	562486	562485	C 95	ENTRANCE DOOR ACCESS	DEUTSCH	6	562583	562581
C 31						C 96	FR SERVICE DOOR ACCESS	AMP MNL	9	561670	561669
C 32						C 97	FR SERVICE DOOR - WATER TANK	PED MP	20		562426
C 33	ENGINE DDEC II - SPEED SIGN SPARE	PED WP	2	561566	561690	C 97B	FR SERV. D- HEAD LAMP W. TANK SPLICE				
C 34						C 97C	FR SERV. D- HEAD LAMP W. TANK L.LEVEL				
C 35	A/C COMPT - AIR RETURN SENSOR	AMP MNL	2	561248	561247	C 98	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 36						C 99	FR SERVICE CPT. LTS	AMP MNL	2	561248	561247
C 37						C 100	SIDE (LH/FR & CTR) DIR LTS	GROTE	2	-----	562155
C 38						C 101	FR SERVICE COMPT. ELEC. HORNS	PED WP	2	561566	561690
C 39						C 101	CONDENSER COMPT - A/C PRES. SW 1SP	PED WP	2	561566	561690
C 40						C 102	CONDENS. COMPT - LIQU. SOL. VAL. PRES.	PED WP	2	561566	561690
C 41	ENGINE COMPT - RH DOOR LOCK	DEUTSCH	4	562479	562477	C 103					
C 42	ENGINE COMPT - RR CAP LIGHTING	DEUTSCH	6	562583	562581	C 104					
C 43	FR JCT BOX - ALT. MODULE	AMP MNL	12	561735	561734	C 105	UNDER DASH RH - DRV LIO SOL VL	PED WP	2	561566	561690
C 44	ENGINE COMPT - LIGHTS	GROTE	2	563268	-----	C 106	UNDER DASH RH - DRV WTR VALVE	PED WP	2	561566	561690
C 45	FR JCT BOX COMPT - ROOF ACCESS	AMP CPC	24	561642	561643	C 107					
C 46						C 108					
C 47						C 109	SIDE (RH/FR & CTR) DIR LTS	GROTE	2	-----	562155
C 48	FR SERV. CPT. PRESS SW PARK BRAKE	PED WP	2	561566	561690	C 110	SIDE (LH/FR) MARKER LTS	GROTE	2	-----	562155
C 49						C 111	SIDE (RH/FR) MARKER LTS	GROTE	2	-----	562155
C 50						C 112	SIDE (RH/CTR) MARKER LTS	GROTE	2	-----	562155
C 51						C 113	SIDE (LH/RR) MARKER LTS	GROTE	2	-----	562155
C 52	ENGINE COMPT - COMPRESSOR	PED WP	2	561566	561690	C 114	ENGINE DDEC - SPEED SIGNAL (SPARG)	PED WP	2	561566	561690
C 53	ENGINE COMPT - COMPRESSOR	PED WP	2	561566	561690	C 115	RR JCT BOX - ENGINE ACCESS	DEUTSCH	40	562281	562284
C 54	FRONT ROOF - UPPER FAN DEFROST	AMP MNL	6	561552	561515	C 116	SIDE (LH/CTR) MARKER LTS	GROTE	2	-----	562155
C 55	CENTRAL DOOR LOCK	DEUTSCH	4	562479	562477	C 117	SIDE (RH/RR) MARKER LTS	GROTE	2	-----	562155
C 56						C 118	ENGINE COMPT - LICENCE	PED WP	2	930210	
C 57						C 119	ENGINE COMPT - RH LOWER LAMP	PED WP	6	561606	561607
C 58						C 120	ENGINE COMPT - LH LOWER LAMP	PED WP	6	561606	561607
C 59						C 121	SIDE (RH/RR) DIR LTS	GROTE	2	-----	562155
C 60						C 122	SIDE (LH/RR) DIR LTS	GROTE	2	-----	562155
C 61	ENGINE COMPT - FUEL FILTER	PED WP	2	561566	561690	C 123					
C 62	ENGINE COMPT - COMPRESSOR STD	PED WP	2	561566	561690	C 124					
C 63	ENGINE COMPT - COMPRESSOR STD	PED WP	2	561566	561690	C 125					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 126						C 189	ENGINE COMPT – DOOR LIGHT BACK UP	TRUCK-LITE	2	562755	
C 127						C 190	ENGINE COMPT – DOOR LIGHT STOP/TURN	AMP SS	3		562601
C 128						C 191	ENGINE COMPT – DOOR LIGHT STOP/TURN	AMP SS	3		562601
C 129						C 192	ENGINE COMPT – DOOR LIGHT PARKING	AMP SS	3		562601
C 130						C 193					
C 131						C 194					
C 132						C 195					
C 133						C 196					
C 134	FR JCT BOX – DIODE CONN.	AMP MNL	15	561987	561986	C 197					
C 135	FR JCT BOX – DIODE CONN.	AMP MNL	15	561987	561986	C 198					
C 136	FR JCT BOX – DIODE CONN.	AMP MNL	15	561987	561986	C 199					
C 137	FR JCT BOX – DIODE CONN.	AMP MNL	15	561987	561986	C 200					
C 138						C 201					
C 139						C 202					
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782	C 203					
C 141	RR DASH PANEL – LTS CONN. (SPARE)	AMP MNL	2	561248	561247	C 204					
C 142	ENGINE COMPT. B/U ALARM	PED WP	2	561566	561690	C 205					
C 143	TRAILER BRAKE PRESSURE SWITCH	PED	2	561566	561690	C 206					
C 144						C 207					
C 145						C 208					
C 146						C 209					
C 147						C 210					
C 148	TRAILER PARK BRAKE PRESSURE SWITCH	PED	2	561690	561566	C 211	FR ROOF – SUN VISOR LH	AMP MNL	2	560900	560898
C 149						C 212	FR ROOF – SUN VISOR RH	AMP MNL	2	560900	560898
C 150						C 213					
C 151						C 214					
C 152						C 215					
C 153						C 216					
C 154						C 217					
C 155	EVAPORATOR CPT – WATER VALVE	BURKERT	3		563204	C 218					
C 156						C 219					
C 157	FR SERV. CPT – WATER PUMP DR'S	PED WP	3	561781	561782	C 220					
C 158	ENGINE CPT – DDEC INTERFACE	DEUTSCH	31	562572	562536	C 221					
C 159	ENGINE CPT – DDEC FEED	PED WP	4	561889	561890	C 222	HEADLAMPS – LOW BEAM	HELLA	2		562623
C 160	FR SERVICE CPT - INTERFACE	AMP CPC	37	561644	561646	C 222	HEADLAMPS – LOW BEAM (XENON OPTION)	PED MP	2		563366
C 161	ENGINE DDEC - ECM	AMP	68		563463	C 223	FR AXLE CPT – HEADLAMPS MAIN CONN.	DEUTSCH	6	565131	562789
C 162	ENGINE DDEC - ACCESSORIES	PED WP	4	561610	561611	C 224	HEADLAMPS – HI BEAM	HELLA	2		562623
C 163	ENGINE CPT - COOLANT PROBE	PED MP	2		562350	C 225	FOG LIGHTS	DEUTSCH	3	562902	562901
C 164	ENGINE CPT – DDEC FEED	PED WP	4	561889	561890	C 226	FLASHER – (FR)	PED	3	562137	
C 165						C 227					
C 166						C 228	A/C COMPRESSOR	PED WP	2	561566	561690
C 167	FR SERVICE CPT - EL. FOOT PEDAL	PED WP	3	561781	561782	C 229					
C 168	FR SERVICE CPT - DDR	DEUTSCH	9	563180		C 230					
C 169	FR SERVICE CPT - WORLD TR. INTERFACE	AMP CPC	24	561642	561643	C 231					
C 170	FR JCT BOX FLASHER UNIT	PED	2		561940	C 232					
C 171	LH CONSOLE	AMP CPC	24	561642	561643	C 233					
C 172	FR SERVICE COMPT - LEVEL LOW	AMP CPC	9	561637		C 234					
C 173						C 235					
C 174						C 236	FR SERVICE CPT CENTER - ABS	AMP CPC	14	561636	561637
C 175						C 237	FR AXLE CPT - ABS RH SENSOR	WABCO	2	641132	
C 176	UNDER DASH RH – WIPER PULSE	AMP FF	6		561186	C 238	FR AXLE CPT - ABS RH VALVE	WABCO	3	641098	
C 177	UNDER DASH RH – WIPER MOTOR	AMP FF	6		561186	C 239	FR AXLE CPT - ABS LH VALVE	WABCO	3	641098	
C 178						C 240	FR AXLE CPT - ABS LH SENSOR	WABCO	2	641132	
C 179						C 241	LAST LUGGAGE COMPT - ABS	PED WP	6	561606	561607
C 180						C 242	DRIVE AXLE CPT - ABS LH SENSOR	WABCO	2	641132	
C 181						C 243	DRIVE AXLE CPT - ABS LH VALVE	WABCO	3	641098	
C 182						C 244	DRIVE AXLE CPT - ABS RH VALVE	WABCO	3	641098	
C 183						C 245	DRIVE AXLE CPT - ABS RH SENSOR	WABCO	2	641132	
C 184						C 246	DRIVE AXLE CPT - ABS SPARE	PED WP	2	561566	561690
C 185						C 247					
C 186						C 248	LAST LUGGAGE CPT - ABS	PED WP	6	561606	561607
C 187	FR SERVICE JCT BOX - RESISTORS	AMP MNL	6	561552	561515	C 249	FR SERVICE CPT - ABS/DDEC	PED WP	2	561566	561690
C 188	LUGG COMPT –MANUAL REMOTE SLIDE-OUT	AMP CPC	7	561772	561773	C 250					
						C 251	LH SW PANEL – FAST IDLE	EATON	12		562763
						C 252					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 253	LH SWITCH PANEL - ETHER	EATON	12		562763	C 316					
C 254						C 317	LH SWITCH PANEL – RH SUN VISOR SW.	EATON	12		562763
C 255	LH SWITCH PANEL – ENGINE BRAKE	EATON	12		562763	C 318	LH CONSOLE SW – DR'S WINDOW SW.	EATON	12		562763
C 256						C 319	ENGINE DDEC – ECM POWER	PED	4	561610	561611
C 257						C 320	RT SWITCH PANEL – DRIVER'S LTS SW.	EATON	12		562763
C 258	LH SWITCH PANEL – MULTI FUNC. SW	AMP FF	8	561188		C 321	UNDER DASH RH - KEYLESS MODULE	AMP COM	26		562676
C 259						C 322	UNDER DASH RH - KEYLESS MODULE	AMP COM	22		562675
C 259	LH SWITCH PANEL – MULTI FUNC. SW	AMP FF	6		561186	C 323	DRIVER'S WINDOW MOTOR	PED	2		561848
C 260						C 324	LH SWITCH PANEL - UPPER FAN DEFROST	EATON	12		562763
C 261						C 325					
C 262						C 326					
C 263	LUGGAGE COMPT. LTS COMPT #3	AMP MNL	2	561248	561247	C 327					
C 264	LUGGAGE COMPT. LTS COMPT #2	AMP MNL	2	561248	561247	C 328					
C 265	LUGGAGE COMPT. LTS COMPT #1	AMP MNL	2	561248	561247	C 329					
C 266	ENTRANCE DOOR KEYLESS	AMP CPC	14	561585	561583	C 330					
C 267	UNDER DASH RH – KEYLESS PANEL	AMP CPC	24	561642	561643	C 331					
C 268	FR MIRROR RH	CONXALL	5	563091	563090	C 332					
C 269	FR MIRROR LH	CONXALL	5	563091	563090	C 333					
C 270	LUGGAGE COMPT LTS - 3 LH	AMP MNL	2	561248	561247	C 334					
C 271	LUGGAGE COMPT LTS - 4	AMP MNL	2	561248	561247	C 335					
C 272						C 336					
C 273						C 337					
C 274						C 338					
C 275						C 339					
C 276	UNDER DASH RH – 3 WAY LTS DR'S	EATON	12		562763	C 340	FR JCT BOX – FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 277	LH SWITCH PANEL DOCK & CORN. SW.	EATON	12		562763	C 341	LH SWITCH PANEL – HEAT MIRROR SW.	EATON	12		562763
C 278	LH SWITCH PANEL – B/U CANCEL	EATON	12		562763	C 342					
C 279	FR SERVICE COMPT LH – STEERING ZF	DEUTSCH	2		562485	C 343	LH SWITCH PANEL – HEAD LAMP SW.	EATON	12		562763
C 280	ENGINE COMPT - COMPRESSOR STD	PED WP	2	561566	561690	C 344	LH SWITCH PANEL – HAZARD LT SW.	EATON	12		562763
C 281	LH CONSOLE – LEVEL LOW	AMP MNL	4	560851	560852	C 345	LH SWITCH PANEL – FOG LT SW.	EATON	12		562763
C 282	FR SERVICE COMPT – STEERING ZF	VOLVO	2		562928	C 346					
C 283						C 347					
C 284						C 348	INSTR. PANEL CENT. – RACOR MODULE	MOLEX	6	562070	562069
C 285						C 349					
C 286						C 350					
C 287						C 351					
C 288						C 352					
C 289						C 353					
C 290	LUGGAGE CPT - DOOR LOCK	AMP MNL	4	560851	560852	C 354					
C 291	LUGGAGE CPT - DOOR LOCK	AMP MNL	4	560851	560852	C 355					
C 292	FR SERVICE CPT LEVEL LOW	PNEUMAC	2		641385	C 356					
C 293	FR SERVICE CPT LEVEL LOW	PNEUMAC	2		641385	C 357					
C 294	FR SERVICE CPT LEVEL LOW	PNEUMAC	2		641385	C 358					
C 295	FR SERVICE CPT LEVEL LOW	PNEUMAC	2		641385	C 359	RH SWITCH PANEL – ENT. DOOR WIND. SW.	EATON	12		562763
C 296	FR SERVICE CPT LEVEL LOW	PNEUMAC	2		641385	C 360	ENTRANCE WINDOW MOTOR	PED	2		561848
C 297						C 361					
C 298						C 362					
C 299						C 363					
C 300	FR SERVICE CPT – LOW BEAM RESISTORS	PED WP	2	561566	561690	C 364					
C 301	FR SERV. CPT ACCESS – DR'S FAN SPEED	PED WP	1	561605	561577	C 365					
C 302						C 366					
C 303	RR JCT BOX - DIODES	AMP MNL	15	561987	561986	C 367					
C 304						C 368					
C 305						C 369					
C 306						C 370					
C 307						C 371					
C 308						C 372					
C 309						C 373					
C 310	LH CONSOLE SW – LUG. DOOR LOCK	EATON	12		562763	C 374					
C 311						C 375					
C 312	ENGINE DDEC - ACCESSORIES	PED WP	3	561781	561782	C 376					
C 313						C 377	LH SWITCH PANEL – STOP ENGINE OVERRIDE	EATON	12		562763
C 314						C 378					
C 315	LH SWITCH PANEL – LH SUN VISOR SW.	EATON	12		562763	C 379					
						C 380					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 381	UNDER DASH PANEL – ANTI THIELED	AMP MNL	2	561248	561247	C 445					
C 382	ENGINE GENERATOR (1)	PED WP	1	561605	561577	C 446					
C 383	ENGINE COMPT – VOLTAGE REGULATOR	PED WP	1	561605	561577	C 447					
C 384						C 448					
C 385						C 449					
C 386						C 450					
C 387	EVAPORATOR COMPT. - BY-PASS VALVE	PED WP	2	561566	561690	C 451					
C 388						C 452					
C 389	EVAPORATOR COMPT. – WATER PUMP	PED WP	2	561566	561690	C 453					
C 390	EVAPORATOR COMPT. – A/C JCT. BOX	DEUTSCH	24	562280	562283	C 454					
C 391	CONDENSER COMPT. A/C PRESS SW 2 SP	PED WP	2	561566	561690	C 455					
C 392						C 456	WORLD TRANS. - RETARDER ACCUM.	PED MP	2		562427
C 393						C 457	WORLD TRANS. - MAIN CONNECTOR	AFL	20		563979
C 394						C 458	WORLD TRANS. - TURBINE SP. SENS.	PED MP	2		562426
C 395						C 459	WORLD TRANS. - ENGINE SP. SENS.	PED MP	2		562426
C 396						C 460	WORLD TRANS. - SPEED SENSOR	ITT	2		562541
C 397						C 461	WORLD TRANS. - RETARDER TEMP.	PED MP	2		562856
C 398						C 462	WORLD TRANS. - RETARDER SOL. "K"	PED MP	2		562426
C 399						C 463	WORLD TRANS. - SENSOR CONN.	DEUTSCH	16	562570	562571
C 400	ENGINE COMPT. – BLOCK HEATER	PED WP	3	561781	561782	C 464	RR JCT BOX - DDL CONN	DEUTSCH	9		563180
C 401						C 465	LH CONSOLE - SHIFTER SELECTOR	PED	16		563984
C 402						C 466	FR SERVICE CPT - RESIS. MOD.	PED WP	3		562428
C 403						C 467	FR SERVICE CPT - RESIS. MOD.	PED WP	3		562428
C 404	HEAD LAMP WASHER SWITCH EXTENSION	AMP	2	561248	561247	C 468	FR SERVICE CPT – RET. HAND LEVER	AMP FF	8	561188	562363
C 405	HEAD LAMP WASHER PUMP	AMP	2	562473	562474	C 469	FR SERVICE CPT - RET. HAND LEVER	AMP FF	8	561188	562363
C 406						C 470					
C 407						C 471					
C 408						C 472	FR SERVICE CPT – SILENT 1000	PED WP	2	561566	561690
C 409						C 473					
C 410						C 474	DRIVER'S TEMP SENSOR	AMP MNL	2	561248	561247
C 411						C 475	FR SERVICE CPT - SPEED SIGN. CONNECT.	DEUTSCH	6	562583	562581
C 412						C 475W	FR SERVICE CPT – SPEED SIGN. W. TR.	DEUTSCH	6	562583	562581
C 413						C 476					
C 414						C 477					
C 415						C 478					
C 416						C 479	UNDER DASH – HVAC DASH MODULE	MOLEX	3		562783
C 417						C 480	UNDER DASH RH – DR'S FAN SPEED CTR	PED WP	4	561889	561890
C 418						C 481	UNDER DASH RH – DR'S FAN SPEED CTR	PED WP	3	561781	561782
C 419						C 482					
C 420						C 483	FR SERVICE CPT – ELECTRICAL SEAT	PED	2	562237	
C 421						C 484	UNDER DASH LH – FOOT DAMPER MOTOR	PED	2		562076
C 422						C 485	UNDER DASH LH – DASH & DEFR. DAMP. M.	AMP MNL	3	561667	561558
C 423						C 486					
C 424	UNDER DASH– AUDIBLE FLASHER	AMP MNL	3	561667	561550	C 487					
C 425						C 488					
C 426	ENGINE S60 RAD. FAN CLUTCH	PED WP	3	561781	561782	C 489					
C 427						C 490					
C 428	RH SW PANEL – EVAP. FAN SPEED	EATON	12		562763	C 491					
C 429						C 492					
C 430						C 493					
C 431						C 494					
C 432						C 495					
C 433						C 496					
C 434						C 497					
C 435						C 498					
C 436						C 499					
C 437						C 500	FR JCT PANEL - PRODRIVER	MOLEX	6	562070	562069
C 438						C 501					
C 439						C 502					
C 440						C 503					
C 441						C 504					
C 442						C 505					
C 443						C 506	LH CONSOLE – LEVEL LOW SW.	EATON	12		562763
C 444						C 507					
						C 508	RR JCT BOX - FAN CLUTCH RETARDER	AMP MNL	6	561552	561515

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 509						C 573	UNDER DASH PANEL – T.T.LT MODULE	MOLEX	8		562465
C 510						C 574					
C 511						C 575					
C 512						C 576					
C 513						C 577					
C 514						C 578					
C 515						C 579					
C 516						C 580					
C 517						C 581	LH DASH PANEL – ELECTRICAL HORN	PED MP	2		562777
C 518						C 582					
C 519						C 583	LH DASH PANEL – MASTER KEY SW.	DEUTSCH	2	562486	562485
C 520						C 584	FR. SERVICE COMPT – HORN PNEU. VALVE	PNEUMAC	3		562848
C 521						C 585	RH CONSOLE – ENT. DOOR LOCK VALVE	PNEUTECH	2		563147
C 522	FR JCT BOX – DAYTIME LTS MODULE	BOSCH	5		561183	C 586	FR SERVICE COMPT – ACC. PNEU.VALVE	PNEUMAC	3		562848
C 523						C 587					
C 524	FR JCT BOX – FUSE BLOCK	PED	8	562647	562646	C 588					
C 525	FR JCT BOX – FUSE BLOCK	PED	8	562647	562646	C 589	FR. MIRROR LH	CONXALL	8	563163	563088
C 526	FR JCT BOX – FUSE BLOCK	PED	8	562647	562646	C 590	FR. MIRROR RH	CONXALL	8	563163	563088
C 527	FR JCT BOX – FUSE BLOCK	PED	8	562647	562646	C 591	LH CONSOLE – LH MIRROR SW.	EURAMT.	8		562749
C 528						C 592	LH CONSOLE – RH MIRROR SW.	EURAMT.	8		562749
C 529						C 593					
C 530						C 594	FRONT ROOF – DRIVER'S LTS	LEEKRAFT	2	-----	562803
C 531						C 595					
C 532						C 596					
C 533						C 597	LH DASH PANEL – DISPLAY SET SW.	MOLEX	5		562905
C 534						C 598	LH DASH PANEL – DISPLAY SET SW.	MOLEX	5		562905
C 535						C 599	UND. DASH – MAGN. SW CTR POS. DR'S AIR	AMP MNL	2	561248	561247
C 536						C 600					
C 537	A/C JCT BOX RESISTOR SIGN. RLY	AMP MNL	2	561248	561247	C 601					
C 538	FR SERV. CPT RH – OUTSIDE TEMP. SENS	AMP MNL	2	561248	561247	C 602					
C 539	HVAC DASH MODULE OUTPUT CONN.	MOLEY	24		562780	C 603					
C 540	HVAC DASH MODULE INPUT CONN.	MOLEY	22		562781	C 604					
C 541						C 605					
C 542						C 606					
C 543						C 607	FR SERVICE COMPT – RPM SIGNAL (SPARE)	PED WP	2	561566	561690
C 544						C 608	FR SERV. COMPT – SPEED SIGNAL (SPARE)	PED WP	2	561566	561690
C 545						CS	FR SERVICE CPT - ECU WOLRD TR.	PED MP	32		562817
C 546						CT	FR SERVICE CPT - ECU WORLD TR.	PED MP	32		562824
C 547						CTCI	ENGINE CPT. – TURBO TEMP.	FCI	2		563404
C 548	LH DASH PANEL – T.T.LT TEST SW.	EATON	12		562763	CV	FR SERVICE CPT - ECU WORLD TR.	PED MP	32		562823
C 549						CX	CLUSTER	JAE	5		562957
C 550						CX 1	FR SERVICE CPT - ECU ABS	AMP JN	15		563200
C 551						CX 2	FR SERVICE CPT - ECU ABS	AMP JN	18		563201
C 552						CY	CLUSTER	JAE	30		562765
C 553						LX	CLUSTER	JAE	22		562766
C 554						LY	CLUSTER	JAE	30		562767
C 555	LUGGAGE COMPT. – AWNING WINDOWS	MOLEX	4	561477	561476	RX	CLUSTER	JAE	30		562767
C 555A	LUGGAGES – AWNING EXT. HARNESS	MOLEX	4	561477	561476	A13 .J1	MASTER ID				562794
C 556						A13 .J2	MASTER ID				562650
C 557						A36 .JA	CECM				562767
C 558						A36 .JB	CECM				562765
C 559						A36 .JC	CECM				562957
C 560						A56 .J1	IO-B FRONT SLIDE-OUT				563133
C 561						A56 .J2	IO-B FRONT SLIDE-OUT				563132
C 562						A56 .J3	IO-B FRONT SLIDE-OUT				562957
C 563						A57 .J1	IO-B REAR SLIDE-OUT				563133
C 564						A57 .J2	IO-B REAR SLIDE-OUT				563132
C 565						A57 .J3	IO-B REAR SLIDE-OUT				562957
C 566						CS 01	FR SERVICE CPT – INTERFACE SLIDE-OUT			562583	562581
C 567						CS 02	SLIDE-OUT BLOC VALVE INTERFACE			561641	561643
C 568						CS 07	SLIDE-OUT#1 INTERFACE TO SLIDE-OUT#2			562583	562581
C 569						RES 7	CAN NETWORK END OF LINE RESISTOR	DEUTSCH	2	563590	563593
C 570	UNDER DASH PANEL – T.T.LT MODULE	MOLEX	6		562464	RES 12	CAN NETWORK END OF LINE RESISTOR	DEUTSCH	2	563590	563593
C 571	UNDER DASH PANEL – T.T.LT MODULE	MOLEX	20		562778	SESO 1	SLIDE-OUT VACUUM SENSOR				563159
C 572	UNDER DASH PANEL – T.T.LT MODULE	MOLEX	18		562779	SESO 2	SLIDE-OUT#1 LIMIT IN			562479	

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN	#SOCKET	NO	LOCATION	TYPE	CAVITY	#PIN	#SOCKET
				HOUSING	HOUSING					HOUSING	HOUSING
SESO 3	SLIDE-OUT#1 LIMIT OUT				562479						
SESO 5	SLIDE-OUT#2 LIMIT IN				562479						
SESO 6	SLIDE-OUT#2 LIMIT OUT				562479						

DIODES NUMBER CODE

No.	PAGE	AMP	#PREV.	LOCATION	FUNCTION	No.	PAGE	AMP	#PREV.	LOCATION	FUNCTION
D 1	20.1	3A	561740	FR JCT BOX	CENTER DOOR LOCK SIGNAL	D 58					
D 2	15.1	3A	063849	FR JCT BOX	WATER PUMP RRE-HEAT SIGN	D 59					
D 3	15.1	3A	063849	FR JCT BOX	WATER PUMP	D 60	15.1,15.2	3A	561740	RR JCT BOX	A/C COMPR. CLUTCH
D 4	9.2	3A	561740	FR JCT BOX	WARNING HAZARD -RH	D 61					
D 5	9.2	3A	561740	FR JCT BOX	WARNING HAZARD -LH	D 62					
D 6	12.1	3A	561740	KEYLESS MODULE PANEL	ENTRANCE DOOR LOCK	D 63					
D 7	12.1	3A	561740	KEYLESS MODULE PANEL	LUCKAGE DOOR LOCK	D 64					
D 8	12.1	3A	561740	KEYLESS MODULE PANEL	LUCKAGE DOOR LOCK	D 65					
D 9						D 66					
D 10						D 67					
D 11						D 68					
D 12						D 69					
D 13						D 70					
D 14						D 71					
D 15						D 72					
D 16	9.1	3A	561740	FR JCT BOX	DAYTIME RUNNING LTS	D 73					
D 17	9.2	3A	561740	FR JCT BOX	TURN SIGNAL LT-LH	D 74					
D 18	9.2	3A	561740	FR JCT BOX	TURN SIGNAL LT-RH	D 75					
D 19	9.1	3A	561740	FR JCT BOX	DAYTIME RUNNING LTS	D 76					
D 20	9.1	3A	561740	FR JCT BOX	DAYTIME RUNNING LTS	D 77					
D 21	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY LH	D 78					
D 22	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY RH	D 79					
D 23						D 80					
D 24	8.1	3A	561740	RR JCT BOX	FAN CLUTCH RADIATOR	D 81					
D 25	8.1	3A	561740	RR JCT BOX	FAN CLUTCH RADIATOR	D 82					
D 26	18.1	3A	560931	FR SERVICE CPT.	LEVEL LOW SYSTEM	D 83	8.1	3A	561740	RR JCT BOX	RAD. FAN CLUTCH W. A/C OR RETARDER
D 27	18.1	3A	560931	FR SERVICE CPT.	LEVEL LOW SYSTEM						
D 27	9.3	3A	561740	RR JCT BOX	AUX LTS-TAIL						
D 28	9.3	3A	561740	RR JCT BOX	AUX LTS-STOP						
D 29											
D 30	4.1	3A	561740	FR JCT BOX	MASTER KEY SW. CUT-OFF						
D 31	4.1	3A	561740	FR JCT BOX	MASTER KEY SW. CUT-OFF						
D 32	9.2	3A	561740	FR JCT BOX	HAZARD MASTER RLY CUT OUT						
D 33											
D 34	15.3	3A	561740	FR JCT BOX	A/C WATER VALVE						
D 35	15.3	3A	561740	FR JCT BOX	A/C WATER VALVE						
D 36	15.2	3A	561740	EVAP. CPT.	BY-PASS VALVE						
D 37											
D 38											
D 39											
D 40	9.1	3A	561740	FR JCT BOX	HI - LO BEAM						
D 41											
D 42											
D 43											
D 44											
D 45											
D 46											
D 47											
D 48											
D 49											
D 50											
D 51											
D 52											
D 53											
D 54											
D 55											
D 56											
D 57											

DIODES NUMBER CODE

No.	PAGE	AMP	#PREV.	LOCATION	FUNCTION	No.	PAGE	AMP	#PREV.	LOCATION	FUNCTION
D 1	20.1	3A	561740	FR JCT BOX	CENTER DOOR LOCK SIGNAL	D 58					
D 2	15.1	3A	063849	FR JCT BOX	WATER PUMP RRE-HEAT SIGN	D 59					
D 3	15.1	3A	063849	FR JCT BOX	WATER PUMP	D 60	15.1,15.2	3A	561740	RR JCT BOX	A/C COMPR. CLUTCH
D 4	9.2	3A	561740	FR JCT BOX	WARNING HAZARD -RH	D 61					
D 5	9.2	3A	561740	FR JCT BOX	WARNING HAZARD -LH	D 62					
D 6	12.1	3A	561740	KEYLESS MODULE PANEL	ENTRANCE DOOR LOCK	D 63					
D 7	12.1	3A	561740	KEYLESS MODULE PANEL	LUCKAGE DOOR LOCK	D 64					
D 8	12.1	3A	561740	KEYLESS MODULE PANEL	LUCKAGE DOOR LOCK	D 65					
D 9	9.5	3A	561740	FR JCT BOX	HI / LOW BEAMS	D 66					
D 10						D 67					
D 11						D 68					
D 12						D 69	21.1	3A	561740	RR JCT BOX	ENGINE BREAKE – LEAKAGE SUPP.
D 13						D 70					
D 14						D 71					
D 15						D 72					
D 16	9.1	3A	561740	FR JCT BOX	DAYTIME RUNNING LTS	D 73					
D 17	9.2	3A	561740	FR JCT BOX	TURN SIGNAL LT-LH	D 74					
D 18	9.2	3A	561740	FR JCT BOX	TURN SIGNAL LT-RH	D 75					
D 19	9.1	3A	561740	FR JCT BOX	DAYTIME RUNNING LTS	D 76					
D 20	9.1	3A	561740	FR JCT BOX	DAYTIME RUNNING LTS	D 77					
D 21	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY LH	D 78					
D 22	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY RH	D 79					
D 23						D 80					
D 24	8.1	3A	561740	RR JCT BOX	FAN CLUTCH RADIATOR	D 81					
D 25	8.1	3A	561740	RR JCT BOX	FAN CLUTCH RADIATOR	D 82					
D 26	18.1	3A	560931	FR SERVICE CPT.	LEVEL LOW SYSTEM	D 83	8.1	3A	561740	RR JCT BOX	RAD. FAN CLUTCH W. A/C OR RETARDER
D 27	18.1	3A	560931	FR SERVICE CPT.	LEVEL LOW SYSTEM						
D 27	9.3	3A	561740	RR JCT BOX	AUX LTS-TAIL						
D 28	9.3	3A	561740	RR JCT BOX	AUX LTS-STOP						
D 29											
D 30	4.1	3A	561740	FR JCT BOX	MASTER KEY SW. CUT-OFF						
D 31	4.1	3A	561740	FR JCT BOX	MASTER KEY SW. CUT-OFF						
D 32	9.2	3A	561740	FR JCT BOX	HAZARD MASTER RLY CUT OUT						
D 33											
D 34	15.3	3A	561740	FR JCT BOX	A/C WATER VALVE						
D 35	15.3	3A	561740	FR JCT BOX	A/C WATER VALVE						
D 36	15.2	3A	561740	EVAP. CPT.	BY-PASS VALVE						
D 37											
D 38											
D 39											
D 40	9.1	3A	561740	FR JCT BOX	HI – LO BEAM						
D 41											
D 42											
D 43											
D 44											
D 45											
D 46											
D 47											
D 48											
D 49											
D 50											
D 51											
D 52											
D 53											
D 54											
D 55											
D 56											
D 57											

RELAYS NUMBER CODE

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION	No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R 1	1.1	24V	561991	FR JCT BOX	IGNITION (24) FR	R 63					
R 2	12.1	12V	562092	UNDER DASH R.H.	UNLOCK ENTRANCE DOOR	R 64					
R 3	12.1	12V	563054	UNDER DASH R.H.	ENTRANCE DOOR OPEN SIGNAL	R 65					
R 4	4.1	24V	560407	RR JCT BOX	STARTING MOTOR	R 66	11.2	24V	562341	UNDER DASH R.H.	DRIVER'S LIGHT TIME DELAY
R 5	5.1	24V	561707	FR JCT BOX	CRUISE CTR BRAKE CUT-OFF	R 67					
R 6						R 68					
R 7	5.1	24V	561707	FR JCT BOX	DDEC FAST IDLE SIGNAL	R 69	12.1	12V	562092	RR JCT BOX	LUGG DOOR LOCK
R 8	11.2	12V	563054	UNDER DASH R.H.	DRIVER'S LIGHT SIGNAL FROM KEYLESS	R 70	12.1	12V	562092	RR JCT BOX	LUGG DOOR UNLOCK
R 9	9.3	24V	561707	RR JCT BOX	BACK-UP LTS	R 71	12.1	24V	561707	FR JCT BOX	LUGG DOOR UNLOCK TT LT
R 10	12.1	12V	562092	UNDER DASH R.H.	LOCK ENTRANCE DOOR	R 72					
R 11						R 73					
R 12	7.2	12V	562092	FR JCT BOX	ELECTRICAL HORNS	R 74	12.1	12V	562092	RR JCT BOX	LUGG DOOR LOCK
R 13	9.3	24V	561707	FR JCT BOX	FOG LTS-12V	R 75	12.1	12V	562092	RR JCT BOX	LUGG DOOR UNLOCK
R 14	9.1	24V	561707	FR JCT BOX	BLINKER	R 76	9.3	24V	561707	RR JCT BOX	STOP LTS-ENGINE BRK & RETARDER SYST.
R 15	15.4	24V	561707	FR JCT BOX	UPPER FAN DEFROST	R 77	9.2	12V	562092	UNDER DASH	AUDIBLE FLASHER RLY
R 16	9.1	24V	561707	FR JCT BOX	FRONT CLEARANCE LIGHT	R 78	8.1	24V	561707	RR JCT BOX	DDEC FAN CONTROL SPEED#1
R 17	9.1	24V	561707	RR JCT BOX	TAIL.LICENCE. RR LTS	R 79	8.1	24V	561707	RR JCT BOX	DDEC FAN CONTROL SPEED#2
R 18	9.1	24V	561707	FR JCT BOX	DAYTIME RUN LTS-CUT-OUT	R 80	9.3	24V	561707	RR JCT BOX	CYCLOP LTS WITH BRAKE
R 19	9.1	24V	561707	FR JCT BOX	HI-BEAM	R 81					
R 20	9.1	24V	561707	FR JCT BOX	LO-BEAM	R 82	21.1	24V	561707	FR JCT BOX	RETARDER SYSTEM
R 21	9.2	24V	561707	FR JCT BOX	LH DIRECTIONNAL LTS	R 83					
R 22						R 84	15.2	24V	561707	RR JCT BOX	HVAC ON-OFF SIGNAL (FULL AIR)
R 23	9.2	24V	561707	FR JCT BOX	RH DIRECTIONNAL LTS	R 85					
R 24	9.2	24V	561707	FR JCT BOX	RH CORNERING	R 86	15.2	24V	561707	RR JCT BOX	HVAC MODE COOL/HEAT
R 25	9.2	24V	561707	FR JCT BOX	LH CORNERING	R 87	21.1	24V	561707	FR JCT BOX	ENGINE BRAKE PRESELECT #1
R 26	9.3	24V	561707	RR JCT BOX	STOP LTS	R 88	4.1	12V or	561538	FR JCT BOX	LATCHING 24V CUT OUT SW. (DELCO ALT.)
R 27						R 88	4.1	24V	561707	FR JCT BOX	LATCHING 24V CUT OUT SW. (TWIN BOSCH)
R 28	11.2	24V	561707	FR JCT BOX	DASH LTS RHEOSTAT	R 89	15.3	24V	561707	FR JCT BOX	WATER PUMP RELAY
R 29	15.3	24V	561005	A/C JCT BOX	CONDENSER FAN	R 90					
R 30						R 91					
R 31	15.3	24V	561707	FR JCT BOX	WATER VALVE & BYPASS (FULL AIR)	R 92					
R 32	1.1	24V	561991	POWER JCT BOX	12 V. CUT-OUT REAR	R 93					
R 33						R 94	9.3	24V	561707	RR JCT BOX	AUX READ LAMP-LH
R 34	15.1	24V	561707	RR JCT BOX	A/C RAD. FAN CLUTCH (DRIVER'S AIR)	R 95	9.3	24V	561707	RR JCT BOX	AUX READ LAMP-RH
R 35	15.1	24V	561707	FR JCT BOX	WATER PUMP (DRIVER'S AIR)	R 96					
R 35	15.3	24V	561707	FR JCT BOX	WATER PUMP (FULL AIR)	R 97					
R 36	15.1	24V	561707	RR JCT BOX	A/C COMPR. CLUTCH (DRIVER'S AIR)	R 98					
R 37						R 99	8.1	24V	561707	RR JCT BOX	RADIATOR FAN CLUTCH
R 38						R 104	4.1	12V	561707	UNDER DASH R.H.	KEYLESS SYSTEM
R 39						R 107	21.1	24V	561707	FR JCT BOX	ENGINE BRAKE PRESELECT #2
R 40	15.3	24V	561005	A/C JCT BOX	CONDENSER FAN	R 108	20.1	24V	561707	FR JCT BOX	ENTRANCE DOOR AIR LOCK
R 41	15.3	24V	561005	A/C JCT BOX	CONDENSER FAN	R 113	12.2	12V	563054	UNDER DASH R.H.	KEYLESS SYSTEM
R 42	1.1	24V	561991	POWER JCT BOX	12 V. CUT-OUT FRONT	R 114	12.2	12V	563054	UNDER DASH R.H.	KEYLESS SYSTEM
R 43						R 115	12.2	12V	563054	UNDER DASH R.H.	KEYLESS SYSTEM
R 44	1.1	24V	561991	POWER JCT BOX	12 V. CUT-OUT FRONT	R 116	12.2	12V	563054	UNDER DASH R.H.	KEYLESS SYSTEM
R 45						R F1	8.1	24V	561707	RR JCT BOX	FAN CLUTCH SP#1 OPT. RETARDER
R 46						R F2	8.1	24V	561707	RR JCT BOX	FAN CLUTCH SP#2 OPT. RETARDER
R 47						R F3	8.1	24V	560772	RR JCT BOX	TIME DELAY FAN CLUTCH
R 48						R F4	8.1	24V	561707	RR JCT BOX	FAN CLUTCH. SP2- STD A/C NO RET
R 49	22.1	12V	562092	FR JCT BOX	12V ABS - ENGINE BRAKE	V IM1	6.1	12V	562092	FR JCT BOX	VIM WORLD TR.-OUTPUT 1 SPEED INTERLOCK
R 50						V IM2	6.1	12V	562092	FR JCT BOX	VIM WORLD TR.-OUTPUT 2 ENG. BRK DISABLE
R 51	11.2	24V	561707	FR JCT BOX	DRIVER'S LTS KEYLERSS ALARM	V IM3	6.1	12V	562092	FR JCT BOX	VIM WORLD TR.-OUTPUT 3
R 52	22.1	12V	562092	FR JCT BOX	12V ABS - RETARDER	V IM4	6.1	12V	562092	FR JCT BOX	VIM WORLD TR.-OUTPUT 4 RETARD. ON SIGNAL
R 53	1.1	24V	561991	RR JCT BOX	IGNITION 24V RR	V IMN	6.1	12V	562092	FR JCT BOX	VIM WORLD TR.-NEUTRAL SIGNAL
R 54	2.1	24V	561707	RR JCT BOX	IGNITION 12V RR	V IMR	6.1	12V	562092	FR JCT BOX	VIM WORLD TR.-B/U SIGNAL
R 55											
R 56											
R 57											
R 58											
R 59											
R 60											
R 61											
R 62	5.1	24V	561707	FR JCT BOX	DDEC PARK BRAKE S SIGNAL						

RELAYS NUMBER CODE

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION
-----	-------------	--------	----------	----------

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION
-----	-------------	--------	----------	----------

RELAYS NUMBER CODE

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION	No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R 1	1.1	24V	561991	FR JCT BOX	IGNITION (24) FR	R 63	15.3	24V	560772	A/C JCT BOX	TIME DELAY - EVAPORATOR FAN
R 2	12.1	12V	562092	UNDER DASH R.H.	UNLOCK ENTRANCE DOOR	R 64					
R 3	12.1	12V	563054	UNDER DASH R.H.	ENTRANCE DOOR OPEN SIGNAL	R 65					
R 4	4.1	24V	560407	RR JCT BOX	STARTING MOTOR	R 66	11.2	24V	562341	UNDER DASH R.H.	DRIVER'S LIGHT TIME DELAY
R 5	5.1	24V	561707	FR JCT BOX	CRUISE CTR BRAKE CUT-OFF	R 67					
R 6						R 68					
R 7	5.1	24V	561707	FR JCT BOX	DDEC FAST IDLE SIGNAL	R 69	12.1	12V	562092	RR JCT BOX	LUGG DOOR LOCK
R 8	11.2	12V	563054	UNDER DASH R.H.	DRIVER'S LIGHT SIGNAL FROM KEYLESS	R 70	12.1	12V	562092	RR JCT BOX	LUGG DOOR UNLOCK
R 9	9.3	24V	561707	RR JCT BOX	BACK-UP LTS	R 71	12.1	24V	561707	FR JCT BOX	LUGG DOOR UNLOCK TT LT
R 10	12.1	12V	562092	UNDER DASH R.H.	LOCK ENTRANCE DOOR	R 72					
R 11						R 73					
R 12	7.2	12V	562092	FR JCT BOX	ELECTRICAL HORNS	R 74	12.1	12V	562092	RR JCT BOX	LUGG DOOR LOCK
R 13	9.3	24V	561707	FR JCT BOX	FOG LTS-12V	R 75	12.1	12V	562092	RR JCT BOX	LUGG DOOR UNLOCK
R 14	9.1	24V	561707	FR JCT BOX	BLINKER	R 76	9.3	24V	561707	RR JCT BOX	STOP LTS-ENGINE BRK & RETARDER SYST.
R 15	15.4	24V	561707	FR JCT BOX	UPPER FAN DEFROST	R 77	9.2	12V	562092	UNDER DASH	AUDIBLE FLASHER RLY
R 16	9.1	24V	561707	FR JCT BOX	FRONT CLEARANCE LIGHT	R 78	8.1	24V	561707	RR JCT BOX	DDEC FAN CONTROL SPEED#1
R 17	9.1	24V	561707	RR JCT BOX	TAIL.LICENCE. RR LTS	R 79	8.1	24V	561707	RR JCT BOX	DDEC FAN CONTROL SPEED#2
R 18	9.1	24V	561707	FR JCT BOX	DAYTIME RUN LTS-CUT-OUT	R 80	9.3	24V	561707	RR JCT BOX	CYCLOP LTS WITH BRAKE
R 19	9.1	24V	561707	FR JCT BOX	HI-BEAM	R 81					
R 20	9.1	24V	561707	FR JCT BOX	LO-BEAM	R 82	21.1	24V	561707	FR JCT BOX	RETARDER SYSTEM
R 21	9.2	24V	561707	FR JCT BOX	LH DIRECTIONNAL LTS	R 83					
R 22						R 84	15.2	24V	561707	RR JCT BOX	HVAC ON-OFF SIGNAL (FULL AIR)
R 23	9.2	24V	561707	FR JCT BOX	RH DIRECTIONNAL LTS	R 85					
R 24	9.2	24V	561707	FR JCT BOX	RH CORNERING	R 86	15.2	24V	561707	RR JCT BOX	HVAC MODE COOL/HEAT
R 25	9.2	24V	561707	FR JCT BOX	LH CORNERING	R 87	21.1	24V	561707	FR JCT BOX	ENGINE BRAKE PRESELECT #1
R 26	9.3	24V	561707	RR JCT BOX	STOP LTS	R 88	4.1	12V or	561538	FR JCT BOX	LATCHING 24V CUT OUT SW. (DELCO ALT.)
R 27						R 88	4.1	24V	561707	FR JCT BOX	LATCHING 24V CUT OUT SW. (TWIN BOSCH)
R 28	11.2	24V	561707	FR JCT BOX	DASH LTS RHEOSTAT	R 89	15.3	24V	561707	FR JCT BOX	WATER PUMP RELAY
R 29	15.3	24V	561005	A/C JCT BOX	CONDENSER FAN	R 90					
R 30	15.3	24V	561005	A/C JCT BOX	EVAPORATOR FAN	R 91					
R 31	15.3	24V	561707	FR JCT BOX	WATER VALVE & BYPASS (FULL AIR)	R 92					
R 32	1.1	24V	561991	POWER JCT BOX	12 V. CUT-OUT REAR	R 93					
R 33						R 94	9.3	24V	561707	RR JCT BOX	AUX READ LAMP-LH
R 34	15.1	24V	561707	RR JCT BOX	A/C RAD. FAN CLUTCH (DRIVER'S AIR)	R 95	9.3	24V	561707	RR JCT BOX	AUX READ LAMP-RH
R 35	15.1	24V	561707	FR JCT BOX	WATER PUMP (DRIVER'S AIR)	R 96					
R 35	15.3	24V	561707	FR JCT BOX	WATER PUMP (FULL AIR)	R 97					
R 36	15.1	24V	561707	RR JCT BOX	A/C COMPR. CLUTCH (DRIVER'S AIR)	R 98					
R 37						R 99	8.1	24V	561707	RR JCT BOX	RADIATOR FAN CLUTCH
R 38						R 104	4.1	12V	561707	UNDER DASH R.H.	KEYLESS SYSTEM
R 39						R 107	21.1	24V	561707	FR JCT BOX	ENGINE BRAKE PRESELECT #2
R 40	15.3	24V	561005	A/C JCT BOX	CONDENSER FAN	R 108	20.1	24V	561707	FR JCT BOX	ENTRANCE DOOR AIR LOCK
R 41	15.3	24V	561005	A/C JCT BOX	CONDENSER FAN	R 113	12.2	12V	563054	UNDER DASH R.H.	KEYLESS SYSTEM
R 42	1.1	24V	561991	POWER JCT BOX	12 V. CUT-OUT FRONT	R 114	12.2	12V	563054	UNDER DASH R.H.	KEYLESS SYSTEM
R 43						R 115	12.2	12V	563054	UNDER DASH R.H.	KEYLESS SYSTEM
R 44	1.1	24V	561991	POWER JCT BOX	12 V. CUT-OUT FRONT	R 116	12.2	12V	563054	UNDER DASH R.H.	KEYLESS SYSTEM
R 45						R F1	8.1	24V	561707	RR JCT BOX	FAN CLUTCH SP#1 OPT. RETARDER
R 46						R F2	8.1	24V	561707	RR JCT BOX	FAN CLUTCH SP#2 OPT. RETARDER
R 47						R F3	8.1	24V	560772	RR JCT BOX	TIME DELAY FAN CLUTCH
R 48						R F4	8.1	24V	561707	RR JCT BOX	FAN CLUTCH. SP2- STD A/C NO RET
R 49	22.1	12V	562092	FR JCT BOX	12V ABS - ENGINE BRAKE	V IM1	6.1	12V	562092	FR JCT BOX	VIM WORLD TR.-OUTPUT 1 SPEED INTERLOCK
R 50						V IM2	6.1	12V	562092	FR JCT BOX	VIM WORLD TR.-OUTPUT 2 ENG. BRK DISABLE
R 51	11.2	24V	561707	FR JCT BOX	DRIVER'S LTS KEYLERSS ALARM	V IM3	6.1	12V	562092	FR JCT BOX	VIM WORLD TR.-OUTPUT 3
R 52	22.1	12V	562092	FR JCT BOX	12V ABS - RETARDER	V IM4	6.1	12V	562092	FR JCT BOX	VIM WORLD TR.-OUTPUT 4 RETARD. ON SIGNAL
R 53	1.1	24V	561991	RR JCT BOX	IGNITION 24V RR	V IMN	6.1	12V	562092	FR JCT BOX	VIM WORLD TR.-NEUTRAL SIGNAL
R 54	2.1	24V	561707	RR JCT BOX	IGNITION 12V RR	V IMR	6.1	12V	562092	FR JCT BOX	VIM WORLD TR.-B/U SIGNAL
R 55											
R 56											
R 57											
R 58											
R 59											
R 60											
R 61	15.3	24V	561707	A/C JCT BOX	EVAPORATOR FAN						
R 62	5.1	24V	561707	FR JCT BOX	DDEC PARK BRAKE S SIGNAL						

RELAYS NUMBER CODE

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION
-----	-------------	--------	----------	----------

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION
-----	-------------	--------	----------	----------

RELAYS NUMBER CODE

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION	No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R 1	1.1	24V	561991	FR JCT BOX	IGNITION (24) FR	R 63	15.3	24V	560772	A/C JCT BOX	TIME DELAY - EVAPORATOR FAN
R 2	12.1	12V	562092	UNDER DASH R.H.	UNLOCK ENTRANCE DOOR	R 64					
R 3	12.1	12V	563054	UNDER DASH R.H.	ENTRANCE DOOR OPEN SIGNAL	R 65					
R 4	4.1	24V	560407	RR JCT BOX	STARTING MOTOR	R 66	11.2	24V	562341	UNDER DASH R.H.	DRIVER'S LIGHT TIME DELAY
R 5	5.1	24V	561707	FR JCT BOX	CRUISE CTR BRAKE CUT-OFF	R 67					
R 6						R 68					
R 7	5.1	24V	561707	FR JCT BOX	DDEC FAST IDLE SIGNAL	R 69	12.1	12V	562092	RR JCT BOX	LUGG DOOR LOCK
R 8	11.2	12V	563054	UNDER DASH R.H.	DRIVER'S LIGHT SIGNAL FROM KEYLESS	R 70	12.1	12V	562092	RR JCT BOX	LUGG DOOR UNLOCK
R 9	9.3	24V	561707	RR JCT BOX	BACK-UP LTS	R 71	12.1	24V	561707	FR JCT BOX	LUGG DOOR UNLOCK TT LT
R 10	12.1	12V	562092	UNDER DASH R.H.	LOCK ENTRANCE DOOR	R 72					
R 11	6.1	24V	561707	FR JCT BOX	TRANS. INHIBIT	R 73					
R 12	7.2	12V	562092	FR JCT BOX	ELECTRICAL HORNS	R 74	12.1	12V	562092	RR JCT BOX	LUGG DOOR LOCK
R 13	9.3	24V	561707	FR JCT BOX	FOG LTS-12V	R 75	12.1	12V	562092	RR JCT BOX	LUGG DOOR UNLOCK
R 14	9.1	24V	561707	FR JCT BOX	BLINKER	R 76	9.3	24V	561707	RR JCT BOX	STOP LTS-ENGINE BRK & RETARDER SYST.
R 15	15.4	24V	561707	FR JCT BOX	UPPER FAN DEFROST	R 77	9.2	12V	562092	UNDER DASH	AUDIBLE FLASHER RLY
R 16	9.1	24V	561707	FR JCT BOX	FRONT CLEARANCE LIGHT	R 78	8.1	24V	561707	RR JCT BOX	DDEC FAN CONTROL SPEED#1
R 17	9.1	24V	561707	RR JCT BOX	TAIL.LICENCE. RR LTS	R 79	8.1	24V	561707	RR JCT BOX	DDEC FAN CONTROL SPEED#2
R 18	9.1	24V	561707	FR JCT BOX	DAYTIME RUN LTS-CUT-OUT	R 80	9.3	24V	561707	RR JCT BOX	CYCLOP LTS WITH BRAKE
R 19	9.1	24V	561707	FR JCT BOX	HI-BEAM	R 81					
R 20	9.1	24V	561707	FR JCT BOX	LO-BEAM	R 82	21.1	24V	561707	FR JCT BOX	RETARDER SYSTEM
R 21	9.2	24V	561707	FR JCT BOX	LH DIRECTIONNAL LTS	R 83					
R 22						R 84	15.2	24V	561707	RR JCT BOX	HVAC ON-OFF SIGNAL (FULL AIR)
R 23	9.2	24V	561707	FR JCT BOX	RH DIRECTIONNAL LTS	R 85					
R 24	9.2	24V	561707	FR JCT BOX	RH CORNERING	R 86	15.2	24V	561707	RR JCT BOX	HVAC MODE COOL/HEAT
R 25	9.2	24V	561707	FR JCT BOX	LH CORNERING	R 87	21.1	24V	561707	FR JCT BOX	ENGINE BRAKE PRESELECT #1
R 26	9.3	24V	561707	RR JCT BOX	STOP LTS	R 88	4.1	12V or	561538	FR JCT BOX	LATCHING 24V CUT OUT SW. (DELCO ALT.)
R 27						R 88	4.1	24V	561707	FR JCT BOX	LATCHING 24V CUT OUT SW. (TWIN BOSCH)
R 28	11.2	24V	561707	FR JCT BOX	DASH LTS RHEOSTAT	R 89	15.3	24V	561707	FR JCT BOX	WATER PUMP RELAY
R 29	15.3	24V	561005	A/C JCT BOX	CONDENSER FAN	R 90					
R 30	15.3	24V	561005	A/C JCT BOX	EVAPORATOR FAN	R 91					
R 31	15.3	24V	561707	FR JCT BOX	WATER VALVE & BYPASS (FULL AIR)	R 92					
R 32	1.1	24V	561991	POWER JCT BOX	12 V. CUT-OUT REAR	R 93					
R 33						R 94	9.3	24V	561707	RR JCT BOX	AUX READ LAMP-LH
R 34	15.1	24V	561707	RR JCT BOX	A/C RAD. FAN CLUTCH (DRIVER'S AIR)	R 95	9.3	24V	561707	RR JCT BOX	AUX READ LAMP-RH
R 35	15.1	24V	561707	FR JCT BOX	WATER PUMP (DRIVER'S AIR)	R 96					
R 35	15.3	24V	561707	FR JCT BOX	WATER PUMP (FULL AIR)	R 97					
R 36	15.1	24V	561707	RR JCT BOX	A/C COMPR. CLUTCH (DRIVER'S AIR)	R 98					
R 37						R 99	8.1	24V	561707	RR JCT BOX	RADIATOR FAN CLUTCH
R 38						R 104	4.1	12V	561707	UNDER DASH R.H.	KEYLESS SYSTEM
R 39						R 107	21.1	24V	561707	FR JCT BOX	ENGINE BRAKE PRESELECT #2
R 40	15.3	24V	561005	A/C JCT BOX	CONDENSER FAN	R 108	20.1	24V	561707	FR JCT BOX	ENTRANCE DOOR AIR LOCK
R 41	15.3	24V	561005	A/C JCT BOX	CONDENSER FAN	R 113	12.2	12V	563054	UNDER DASH R.H.	KEYLESS SYSTEM
R 42	1.1	24V	561991	POWER JCT BOX	12 V. CUT-OUT FRONT	R 114	12.2	12V	563054	UNDER DASH R.H.	KEYLESS SYSTEM
R 43						R 115	12.2	12V	563054	UNDER DASH R.H.	KEYLESS SYSTEM
R 44	1.1	24V	561991	POWER JCT BOX	12 V. CUT-OUT FRONT	R 116	12.2	12V	563054	UNDER DASH R.H.	KEYLESS SYSTEM
R 45						R F1	8.1	24V	561707	RR JCT BOX	FAN CLUTCH SP#1 OPT. RETARDER
R 46						R F2	8.1	24V	561707	RR JCT BOX	FAN CLUTCH SP#2 OPT. RETARDER
R 47						R F3	8.1	24V	560772	RR JCT BOX	TIME DELAY FAN CLUTCH
R 48						R F4	8.1	24V	561707	RR JCT BOX	FAN CLUTCH. SP2- STD A/C NO RET
R 49	22.1	12V	562092	FR JCT BOX	12V ABS - ENGINE BRAKE	V IM1	6.1	12V	562092	FR JCT BOX	VIM WORLD TR.-OUTPUT 1 SPEED INTERLOCK
R 50						V IM2	6.1	12V	562092	FR JCT BOX	VIM WORLD TR.-OUTPUT 2 ENG. BRK DISABLE
R 51	11.2	24V	561707	FR JCT BOX	DRIVER'S LTS KEYLERSS ALARM	V IM3	6.1	12V	562092	FR JCT BOX	VIM WORLD TR.-OUTPUT 3
R 52	22.1	12V	562092	FR JCT BOX	12V ABS - RETARDER	V IM4	6.1	12V	562092	FR JCT BOX	VIM WORLD TR.-OUTPUT 4 RETARD. ON SIGNAL
R 53	1.1	24V	561991	RR JCT BOX	IGNITION 24V RR	V IMN	6.1	12V	562092	FR JCT BOX	VIM WORLD TR.-NEUTRAL SIGNAL
R 54	2.1	24V	561707	RR JCT BOX	IGNITION 12V RR	V IMR	6.1	12V	562092	FR JCT BOX	VIM WORLD TR.-B/U SIGNAL
R 55											
R 56											
R 57											
R 58											
R 59											
R 60											
R 61	15.3	24V	561707	A/C JCT BOX	EVAPORATOR FAN						
R 62	5.1	24V	561707	FR JCT BOX	DDEC PARK BRAKE S SIGNAL						

RELAYS NUMBER CODE

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION
-----	-------------	--------	----------	----------

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION
-----	-------------	--------	----------	----------

RELAYS NUMBER CODE

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION	No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R 1	1.1	24V	561991	FR JCT BOX	IGNITION (24) FR	R 63	15.3	24V	560772	A/C JCT BOX	TIME DELAY - EVAPORATOR FAN
R 2	12.1	12V	562092	UNDER DASH R.H.	UNLOCK ENTRANCE DOOR	R 64					
R 3	12.1	12V	563054	UNDER DASH R.H.	ENTRANCE DOOR OPEN SIGNAL	R 65					
R 4	4.1	24V	560407	RR JCT BOX	STARTING MOTOR	R 66	11.2	24V	562341	UNDER DASH R.H.	DRIVER'S LIGHT TIME DELAY
R 5	5.1	24V	561707	FR JCT BOX	CRUISE CTR BRAKE CUT-OFF	R 67					
R 6						R 68					
R 7	5.1	24V	561707	FR JCT BOX	DDEC FAST IDLE SIGNAL	R 69	12.1	12V	562092	RR JCT BOX	LUGG DOOR LOCK
R 8	11.2	12V	563054	UNDER DASH R.H.	DRIVER'S LIGHT SIGNAL FROM KEYLESS	R 70	12.1	12V	562092	RR JCT BOX	LUGG DOOR UNLOCK
R 9	9.3	24V	561707	RR JCT BOX	BACK-UP LTS	R 71	12.1	24V	561707	FR JCT BOX	LUGG DOOR UNLOCK TT LT
R 10	12.1	12V	562092	UNDER DASH R.H.	LOCK ENTRANCE DOOR	R 72					
R 11	6.1	24V	561707	FR JCT BOX	TRANS. INHIBIT	R 73					
R 12	7.2	12V	562092	FR JCT BOX	ELECTRICAL HORNS	R 74	12.1	12V	562092	RR JCT BOX	LUGG DOOR LOCK
R 13	9.3	24V	561707	FR JCT BOX	FOG LTS-12V	R 75	12.1	12V	562092	RR JCT BOX	LUGG DOOR UNLOCK
R 14	9.1	24V	561707	FR JCT BOX	BLINKER	R 76	9.3	24V	561707	RR JCT BOX	STOP LTS-ENGINE BRK & RETARDER SYST.
R 15	15.4	24V	561991	FR JCT BOX	UPPER FAN DEFROST	R 77	9.2	12V	562092	UNDER DASH	AUDIBLE FLASHER RLY
R 16	9.1	24V	561707	FR JCT BOX	FRONT CLEARANCE LIGHT	R 78	8.1	24V	561707	RR JCT BOX	DDEC FAN CONTROL SPEED#1
R 17	9.1	24V	561707	RR JCT BOX	TAIL.LICENCE. RR LTS	R 79	8.1	24V	561707	RR JCT BOX	DDEC FAN CONTROL SPEED#2
R 18	9.1	24V	561707	FR JCT BOX	DAYTIME RUN LTS-CUT-OUT	R 80	9.3	24V	561707	RR JCT BOX	CYCLOP LTS WITH BRAKE
R 19	9.1	24V	561707	FR JCT BOX	HI-BEAM	R 81					
R 20	9.1	24V	561707	FR JCT BOX	LO-BEAM	R 82	21.1	24V	561707	FR JCT BOX	RETARDER SYSTEM
R 21	9.2	24V	561707	FR JCT BOX	LH DIRECTIONNAL LTS	R 83					
R 22						R 84	15.2	24V	561707	RR JCT BOX	HVAC ON-OFF SIGNAL (FULL AIR)
R 23	9.2	24V	561707	FR JCT BOX	RH DIRECTIONNAL LTS	R 85					
R 24	9.2	24V	561707	FR JCT BOX	RH CORNERING	R 86	15.2	24V	561707	RR JCT BOX	HVAC MODE COOL/HEAT
R 25	9.2	24V	561707	FR JCT BOX	LH CORNERING	R 87	21.1	24V	561707	FR JCT BOX	ENGINE BRAKE PRESELECT #1
R 26	9.3	24V	561707	RR JCT BOX	STOP LTS	R 88	4.1	12V or	561538	FR JCT BOX	LATCHING 24V CUT OUT SW. (DELCO ALT.)
R 27						R 88	4.1	24V	561707	FR JCT BOX	LATCHING 24V CUT OUT SW. (TWIN BOSCH)
R 28	11.2	24V	561707	FR JCT BOX	DASH LTS RHEOSTAT	R 89	15.3	24V	561707	FR JCT BOX	WATER PUMP RELAY
R 29	15.3	24V	561005	A/C JCT BOX	CONDENSER FAN	R 90					
R 30	15.3	24V	561005	A/C JCT BOX	EVAPORATOR FAN	R 91					
R 31	15.3	24V	561707	FR JCT BOX	WATER VALVE & BYPASS (FULL AIR)	R 92					
R 32	1.1	24V	561991	POWER JCT BOX	12 V. CUT-OUT REAR	R 93					
R 33						R 94	9.3	24V	561707	RR JCT BOX	AUX READ LAMP-LH
R 34	15.1	24V	561707	RR JCT BOX	A/C RAD. FAN CLUTCH (DRIVER'S AIR)	R 95	9.3	24V	561707	RR JCT BOX	AUX READ LAMP-RH
R 35	15.1	24V	561707	FR JCT BOX	WATER PUMP (DRIVER'S AIR)	R 96					
R 35	15.3	24V	561707	FR JCT BOX	WATER PUMP (FULL AIR)	R 97					
R 36	15.1	24V	561707	RR JCT BOX	A/C COMPR. CLUTCH (DRIVER'S AIR)	R 98					
R 37						R 99	8.1	24V	561707	RR JCT BOX	RADIATOR FAN CLUTCH
R 38						R 104	4.1	12V	561707	UNDER DASH R.H.	KEYLESS SYSTEM
R 39						R 107	21.1	24V	561707	FR JCT BOX	ENGINE BRAKE PRESELECT #2
R 40	15.3	24V	561005	A/C JCT BOX	CONDENSER FAN	R 108	20.1	24V	561707	FR JCT BOX	ENTRANCE DOOR AIR LOCK
R 41	15.3	24V	561005	A/C JCT BOX	CONDENSER FAN	R 113	12.2	12V	563054	UNDER DASH R.H.	KEYLESS SYSTEM
R 42	1.1	24V	561991	POWER JCT BOX	12 V. CUT-OUT FRONT	R 114	12.2	12V	563054	UNDER DASH R.H.	KEYLESS SYSTEM
R 43						R 115	12.2	12V	563054	UNDER DASH R.H.	KEYLESS SYSTEM
R 44	1.1	24V	561991	POWER JCT BOX	12 V. CUT-OUT FRONT	R 116	12.2	12V	563054	UNDER DASH R.H.	KEYLESS SYSTEM
R 45						R F1	8.1	24V	561707	RR JCT BOX	FAN CLUTCH SP#1 OPT. RETARDER
R 46						R F2	8.1	24V	561707	RR JCT BOX	FAN CLUTCH SP#2 OPT. RETARDER
R 47						R F3	8.1	24V	560772	RR JCT BOX	TIME DELAY FAN CLUTCH
R 48						R F4	8.1	24V	561707	RR JCT BOX	FAN CLUTCH SP2- STD A/C NO RET
R 49	22.1	12V	562092	FR JCT BOX	12V ABS - ENGINE BRAKE	V IM1	6.1	12V	562092	FR JCT BOX	VIM WORLD TR.-OUTPUT 1 SPEED INTERLOCK
R 50						V IM2	6.1	12V	562092	FR JCT BOX	VIM WORLD TR.-OUTPUT 2 ENG. BRK DISABLE
R 51	11.2	24V	561707	FR JCT BOX	DRIVER'S LTS KEYLERSS ALARM	V IM3	6.1	12V	562092	FR JCT BOX	VIM WORLD TR.-OUTPUT 3
R 52	22.1	12V	562092	FR JCT BOX	12V ABS - RETARDER	V IM4	6.1	12V	562092	FR JCT BOX	VIM WORLD TR.-OUTPUT 4 RETARD. ON SIGNAL
R 53	1.1	24V	561991	RR JCT BOX	IGNITION 24V RR	V IMN	6.1	12V	562092	FR JCT BOX	VIM WORLD TR.-NEUTRAL SIGNAL
R 54	2.1	24V	561707	RR JCT BOX	IGNITION 12V RR	V IMR	6.1	12V	562092	FR JCT BOX	VIM WORLD TR.-B/U SIGNAL
R 55											
R 56											
R 57											
R 58											
R 59											
R 60											
R 61	15.3	24V	561707	A/C JCT BOX	EVAPORATOR FAN						
R 62	5.1	24V	561707	FR JCT BOX	DDEC PARK BRAKE S SIGNAL						

RELAYS NUMBER CODE

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION
-----	-------------	--------	----------	----------

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION
-----	-------------	--------	----------	----------

RELAYS NUMBER CODE

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION	No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R 1	1.1	24V	561991	FR JCT BOX	IGNITION (24) FR	R 63	15.3	24V	560772	A/C JCT BOX	TIME DELAY - EVAPORATOR FAN
R 2	12.1	12V	563337	UNDER DASH R.H.	UNLOCK ENTRANCE DOOR	R 64					
R 3	12.1	12V	563054	UNDER DASH R.H.	ENTRANCE DOOR OPEN SIGNAL	R 65					
R 4	4.1	24V	560407	RR JCT BOX	STARTING MOTOR	R 66	11.2	24V	562341	UNDER DASH R.H.	DRIVER'S LIGHT TIME DELAY
R 5	5.1	24V	563332	FR JCT BOX	CRUISE CTR BRAKE CUT-OFF	R 67					
R 6						R 68					
R 7	5.1	24V	563332	FR JCT BOX	DDEC FAST IDLE SIGNAL	R 69	12.1	12V	563337	RR JCT BOX	LUGG DOOR LOCK
R 8	11.2	12V	563054	UNDER DASH R.H.	DRIVER'S LIGHT SIGNAL FROM KEYLESS	R 70	12.1	12V	563337	RR JCT BOX	LUGG DOOR UNLOCK
R 9	9.3	24V	563332	RR JCT BOX	BACK-UP LTS	R 71	12.1	24V	563332	FR JCT BOX	LUGG DOOR UNLOCK TT LT
R 10	12.1	12V	563337	UNDER DASH R.H.	LOCK ENTRANCE DOOR	R 72					
R 11	6.1	24V	563332	FR JCT BOX	TRANS. INHIBIT	R 73					
R 12	7.2	12V	563337	FR JCT BOX	ELECTRICAL HORNS	R 74	12.1	12V	563337	RR JCT BOX	LUGG DOOR LOCK
R 13	9.3	24V	563332	FR JCT BOX	FOG LTS-12V	R 75	12.1	12V	563337	RR JCT BOX	LUGG DOOR UNLOCK
R 14	9.1	24V	563332	FR JCT BOX	BLINKER	R 76	9.3	24V	563332	RR JCT BOX	STOP LTS-ENGINE BRK & RETARDER SYST.
R 15	15.4	24V	561991	FR JCT BOX	UPPER FAN DEFROST	R 77	9.2	12V	563337	UNDER DASH	AUDIBLE FLASHER RLY
R 16	9.1	24V	563332	FR JCT BOX	FRONT CLEARANCE LIGHT	R 78	8.1	24V	563332	RR JCT BOX	DDEC FAN CONTROL SPEED#1
R 17	9.1	24V	563332	RR JCT BOX	TAIL.LICENCE. RR LTS	R 79	8.1	24V	563332	RR JCT BOX	DDEC FAN CONTROL SPEED#2
R 18	9.1	24V	563332	FR JCT BOX	DAYTIME RUN LTS-CUT-OUT	R 80	9.3	24V	563332	RR JCT BOX	CYCLOP LTS WITH BRAKE
R 19	9.1	24V	563332	FR JCT BOX	HI-BEAM	R 81					
R 20	9.1	24V	563332	FR JCT BOX	LO-BEAM	R 82	21.1	24V	563332	FR JCT BOX	RETARDER SYSTEM
R 21	9.2	24V	563332	FR JCT BOX	LH DIRECTIONNAL LTS	R 83					
R 22						R 84	15.2	24V	563332	RR JCT BOX	HVAC ON-OFF SIGNAL (FULL AIR)
R 23	9.2	24V	563332	FR JCT BOX	RH DIRECTIONNAL LTS	R 85					
R 24	9.2	24V	563332	FR JCT BOX	RH CORNERING	R 86	15.2	24V	563332	RR JCT BOX	HVAC MODE COOL/HEAT
R 25	9.2	24V	563332	FR JCT BOX	LH CORNERING	R 87	21.1	24V	563332	FR JCT BOX	ENGINE BRAKE PRESELECT #1
R 26	9.3	24V	563332	RR JCT BOX	STOP LTS	R 88	4.1	12V or	561538	FR JCT BOX	LATCHING 24V CUT OUT SW. (DELCO ALT.)
R 27						R 88	4.1	24V	563332	FR JCT BOX	LATCHING 24V CUT OUT SW. (TWIN BOSCH)
R 28	11.2	24V	563332	FR JCT BOX	DASH LTS RHEOSTAT	R 89	15.3	24V	563332	FR JCT BOX	WATER PUMP RELAY
R 29	15.3	24V	561005	A/C JCT BOX	CONDENSER FAN	R 90					
R 30	15.3	24V	561005	A/C JCT BOX	EVAPORATOR FAN	R 91					
R 31	15.3	24V	563332	FR JCT BOX	WATER VALVE & BYPASS (FULL AIR)	R 92					
R 32	1.1	24V	561991	POWER JCT BOX	12 V. CUT-OUT REAR	R 93					
R 33						R 94	9.3	24V	563332	RR JCT BOX	AUX READ LAMP-LH
R 34	15.1	24V	563332	RR JCT BOX	A/C RAD. FAN CLUTCH (DRIVER'S AIR)	R 95	9.3	24V	563332	RR JCT BOX	AUX READ LAMP-RH
R 35	15.1	24V	563332	FR JCT BOX	WATER PUMP (DRIVER'S AIR)	R 96					
R 35	15.3	24V	563332	FR JCT BOX	WATER PUMP (FULL AIR)	R 97					
R 36	15.1	24V	563332	RR JCT BOX	A/C COMPR. CLUTCH (DRIVER'S AIR)	R 98					
R 37						R 99	8.1	24V	563332	RR JCT BOX	RADIATOR FAN CLUTCH
R 38						R 104	4.1	12V	563054	UNDER DASH R.H.	KEYLESS SYSTEM
R 39						R 108	20.1	24V	563332	FR JCT BOX	ENTRANCE DOOR AIR LOCK
R 40	15.3	24V	561005	A/C JCT BOX	CONDENSER FAN	R 113	12.2	12V	563054	UNDER DASH R.H.	KEYLESS SYSTEM
R 41	15.3	24V	561005	A/C JCT BOX	CONDENSER FAN	R 114	12.2	12V	563054	UNDER DASH R.H.	KEYLESS SYSTEM
R 42	1.1	24V	561991	POWER JCT BOX	12 V. CUT-OUT FRONT	R 115	12.2	12V	563054	UNDER DASH R.H.	KEYLESS SYSTEM
R 43						R 116	12.2	12V	563054	UNDER DASH R.H.	KEYLESS SYSTEM
R 44	1.1	24V	561991	POWER JCT BOX	12 V. CUT-OUT FRONT	R F1	8.1	24V	563332	RR JCT BOX	FAN CLUTCH SP#1 OPT. RETARDER
R 45						R F2	8.1	24V	563332	RR JCT BOX	FAN CLUTCH SP#2 OPT. RETARDER
R 46						R F3	8.1	24V	560772	RR JCT BOX	TIME DELAY FAN CLUTCH
R 47						R RJ	21.1SP	24V	563332	FR JCT BOX	ENGINE BRAKE SYSTEM JAKE & RETARDER OPT.
R 48						V IM1	6.1	12V	563337	FR JCT BOX	VIM WORLD TR.-OUTPUT 1 SPEED INTERLOCK
R 49	22.1	12V	563337	FR JCT BOX	12V ABS - ENGINE BRAKE	V IM2	6.1	12V	563337	FR JCT BOX	VIM WORLD TR.-OUTPUT 2 ENG. BRK DISABLE
R 50						V IM3	6.1	12V	563337	FR JCT BOX	VIM WORLD TR.-OUTPUT 3
R 51	11.2	24V	563332	FR JCT BOX	DRIVER'S LTS KEYLERSS ALARM	V IM4	6.1	12V	563337	FR JCT BOX	VIM WORLD TR.-OUTPUT 4 RETARD. ON SIGNAL
R 52	22.1	12V	563337	FR JCT BOX	12V ABS - RETARDER	V IMN	6.1	12V	563337	FR JCT BOX	VIM WORLD TR.-NEUTRAL SIGNAL
R 53	1.1	24V	561991	RR JCT BOX	IGNITION 24V RR	V IMR	6.1	12V	563337	FR JCT BOX	VIM WORLD TR.-B/U SIGNAL
R 54	2.1	24V	563332	RR JCT BOX	IGNITION 12V RR						
R 55											
R 56											
R 57											
R 58											
R 59											
R 60											
R 61	15.3	24V	563332	A/C JCT BOX	EVAPORATOR FAN						
R 62	5.1	24V	563332	FR JCT BOX	DDEC PARK BRAKE S SIGNAL						

RELAYS NUMBER CODE

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION
-----	-------------	--------	----------	----------

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION
-----	-------------	--------	----------	----------

RELAYS NUMBER CODE

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION	No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R 1	1.1	24V	561991	FR JCT BOX	IGNITION (24) FR	R 63	15.3	24V	560772	A/C JCT BOX	TIME DELAY - EVAPORATOR FAN
R 2	12.1	12V	563337	UNDER DASH R.H.	UNLOCK ENTRANCE DOOR	R 64					
R 3	12.1	12V	563054	UNDER DASH R.H.	ENTRANCE DOOR OPEN SIGNAL	R 65					
R 4	4.1	24V	560407	RR JCT BOX	STARTING MOTOR	R 66	11.2	24V	562341	UNDER DASH R.H.	DRIVER'S LIGHT TIME DELAY
R 5	5.1	24V	563332	FR JCT BOX	CRUISE CTR BRAKE CUT-OFF	R 67					
R 6	15.3	24V	563332	FR JCT BOX	REC PASS DAMPER	R 68					
R 7	5.1	24V	563332	FR JCT BOX	DDEC FAST IDLE SIGNAL	R 69	12.1	12V	563337	RR JCT BOX	LUGG DOOR LOCK
R 8	11.2	12V	563054	UNDER DASH R.H.	DRIVER'S LIGHT SIGNAL FROM KEYLESS	R 70	12.1	12V	563337	RR JCT BOX	LUGG DOOR UNLOCK
R 9	9.3	24V	563332	RR JCT BOX	BACK-UP LTS	R 71	12.1	24V	563332	FR JCT BOX	LUGG DOOR UNLOCK TT LT
R 10	12.1	12V	563337	UNDER DASH R.H.	LOCK ENTRANCE DOOR	R 72					
R 11	6.1	24V	563332	FR JCT BOX	TRANS. INHIBIT	R 73					
R 12	7.2	12V	563337	FR JCT BOX	ELECTRICAL HORNS	R 74	12.1	12V	563337	RR JCT BOX	LUGG DOOR LOCK
R 13	9.3	24V	563332	FR JCT BOX	FOG LTS-12V	R 75	12.1	12V	563337	RR JCT BOX	LUGG DOOR UNLOCK
R 14	9.1	24V	563332	FR JCT BOX	BLINKER	R 76	9.3	24V	563332	RR JCT BOX	STOP LTS-ENGINE BRK & RETARDER SYST.
R 15	15.4	24V	561991	FR JCT BOX	UPPER FAN DEFROST	R 77	9.2	12V	563337	UNDER DASH	AUDIBLE FLASHER RLY
R 16	9.1	24V	563332	FR JCT BOX	FRONT CLEARANCE LIGHT	R 78	8.1	24V	563332	RR JCT BOX	DDEC FAN CONTROL SPEED#1
R 17	9.1	24V	563332	RR JCT BOX	TAIL.LICENCE. RR LTS	R 79	8.1	24V	563332	RR JCT BOX	DDEC FAN CONTROL SPEED#2
R 18	9.1	24V	563332	FR JCT BOX	DAYTIME RUN LTS-CUT-OUT	R 80	9.3	24V	563332	RR JCT BOX	CYCLOP LTS WITH BRAKE
R 19	9.1	24V	563332	FR JCT BOX	HI-BEAM	R 81					
R 20	9.1	24V	563332	FR JCT BOX	LO-BEAM	R 82	21.1	24V	563332	FR JCT BOX	RETARDER SYSTEM
R 21	9.2	24V	563332	FR JCT BOX	LH DIRECTIONNAL LTS	R 83					
R 22						R 84	15.2	24V	563332	RR JCT BOX	HVAC ON-OFF SIGNAL (FULL AIR)
R 23	9.2	24V	563332	FR JCT BOX	RH DIRECTIONNAL LTS	R 85					
R 24	9.2	24V	563332	FR JCT BOX	RH CORNERING	R 86	15.2	24V	563332	RR JCT BOX	HVAC MODE COOL/HEAT
R 25	9.2	24V	563332	FR JCT BOX	LH CORNERING	R 87	21.1	24V	563332	FR JCT BOX	ENGINE BRAKE PRESELECT #1
R 26	9.3	24V	563332	RR JCT BOX	STOP LTS	R 88	4.1	12V or	561538	FR JCT BOX	LATCHING 24V CUT OUT SW. (DELCO ALT.)
R 27						R 88	4.1	24V	563332	FR JCT BOX	LATCHING 24V CUT OUT SW. (TWIN BOSCH)
R 28	11.2	24V	563332	FR JCT BOX	DASH LTS RHEOSTAT	R 89	15.3	24V	563332	FR JCT BOX	WATER PUMP RELAY
R 29	15.3	24V	561005	A/C JCT BOX	CONDENSER FAN	R 90					
R 30	15.3	24V	561005	A/C JCT BOX	EVAPORATOR FAN	R 91					
R 31	15.3	24V	563332	FR JCT BOX	WATER VALVE & BYPASS (FULL AIR)	R 92					
R 32	1.1	24V	561991	POWER JCT BOX	12 V. CUT-OUT REAR	R 93					
R 33						R 94	9.3	24V	563332	RR JCT BOX	AUX READ LAMP-LH
R 34	15.1	24V	563332	RR JCT BOX	A/C RAD. FAN CLUTCH (DRIVER'S AIR)	R 95	9.3	24V	563332	RR JCT BOX	AUX READ LAMP-RH
R 35	15.1	24V	563332	FR JCT BOX	WATER PUMP (DRIVER'S AIR)	R 96					
R 35	15.3	24V	563332	FR JCT BOX	WATER PUMP (FULL AIR)	R 97					
R 36	15.1	24V	563332	RR JCT BOX	A/C COMPR. CLUTCH (DRIVER'S AIR)	R 98					
R 37						R 99	8.1	24V	563332	RR JCT BOX	RADIATOR FAN CLUTCH
R 38						R 104	4.1	12V	563054	UNDER DASH R.H.	KEYLESS SYSTEM
R 39						R 108	20.1	24V	563332	FR JCT BOX	ENTRANCE DOOR AIR LOCK
R 40	15.3	24V	561005	A/C JCT BOX	CONDENSER FAN	R 113	12.2	12V	563054	UNDER DASH R.H.	KEYLESS SYSTEM
R 41	15.3	24V	561005	A/C JCT BOX	CONDENSER FAN	R 114	12.2	12V	563054	UNDER DASH R.H.	KEYLESS SYSTEM
R 42	1.1	24V	561991	POWER JCT BOX	12 V. CUT-OUT FRONT	R 115	12.2	12V	563054	UNDER DASH R.H.	KEYLESS SYSTEM
R 43						R 116	12.2	12V	563054	UNDER DASH R.H.	KEYLESS SYSTEM
R 44	1.1	24V	561991	POWER JCT BOX	12 V. CUT-OUT FRONT	R 200	10.1	24V	565862	FR JCT BOX	HEAD LAMP WASHER TIMER/RELAY
R 45						R F1	8.1	24V	563332	RR JCT BOX	FAN CLUTCH SP#1 OPT. RETARDER
R 46						R F2	8.1	24V	563332	RR JCT BOX	FAN CLUTCH SP#2 OPT. RETARDER
R 47						R F3	8.1	24V	560772	RR JCT BOX	TIME DELAY FAN CLUTCH
R 48						R RJ	21.1SP	24V	563332	FR JCT BOX	ENGINE BRAKE SYSTEM JAKE & RETARDER OPT.
R 49	22.1	12V	563337	FR JCT BOX	12V ABS - ENGINE BRAKE	V IM1	6.1	12V	563337	FR JCT BOX	VIM WORLD TR.-OUTPUT 1 SPEED INTERLOCK
R 50						V IM2	6.1	12V	563337	FR JCT BOX	VIM WORLD TR.-OUTPUT 2 ENG. BRK DISABLE
R 51	11.2	24V	563332	FR JCT BOX	DRIVER'S LTS KEYLERSS ALARM	V IM3	6.1	12V	563337	FR JCT BOX	VIM WORLD TR.-OUTPUT 3
R 52	22.1	12V	563337	FR JCT BOX	12V ABS - RETARDER	V IM4	6.1	12V	563337	FR JCT BOX	VIM WORLD TR.-OUTPUT 4 RETARD. ON SIGNAL
R 53	1.1	24V	561991	RR JCT BOX	IGNITION 24V RR	V IMN	6.1	12V	563337	FR JCT BOX	VIM WORLD TR.-NEUTRAL SIGNAL
R 54	2.1	24V	563332	RR JCT BOX	IGNITION 12V RR	V IMR	6.1	12V	563337	FR JCT BOX	VIM WORLD TR.-B/U SIGNAL
R 55											
R 56											
R 57											
R 58											
R 59											
R 60											
R 61	15.3	24V	563332	A/C JCT BOX	EVAPORATOR FAN						
R 62	5.1	24V	563332	FR JCT BOX	DDEC PARK BRAKE S SIGNAL						

RELAYS NUMBER CODE

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION
-----	-------------	--------	----------	----------

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION
-----	-------------	--------	----------	----------

RESISTORS NUMBER CODE

No.	PAGE	OHM(S)	#PREV.	LOCATION	FUNCTION
RS1	5.1	11K	562307	FR JCT BOX	DDEC III-FAST IDLE
RS2	5.1	3.6K	562306	FR JCT BOX	DDEC III-FAST IDLE
RS3	9.3	1 (2)	561537	FR JCT BOX	FOG LT - RH
RS4	9.3	1 (2)	561537	FR JCT BOX	FOG LT - LH
RS5	22.1	620	563205	FR. SERV. COMPT.	ABS
RS6	22.1	620	563205	FR. SERV. COMPT.	TRAILER ABS
RS7					
RS8					
RS9					
RS10					
RS11					
RS12					
RS13					
RS14					
RS15					
RS16					
RS17	7.2	220	562498	UNDER DASH	FIRE ALARM
RS18	8.1	75K	064208	RR JCT BOX	FAN CLUTCH WITH A/C STD & OR RETARDER
RS19	9.3	24	562903	RR JCT BOX	CYCLOPS LTS - TAIL
RS40	15.4	1.5K	562908	UNDER DASH	UPPER FAN DEFROST LED SWITCH




















RESISTORS NUMBER CODE

No.	PAGE	OHM(S)	#PREV.	LOCATION	FUNCTION
RS1	5.1	11K	562307	FR JCT BOX	DDEC III-FAST IDLE
RS2	5.1	3.6K	562306	FR JCT BOX	DDEC III-FAST IDLE
RS3	9.3	1 (2)	561537	FR JCT BOX	FOG LT - RH
RS4	9.3	1 (2)	561537	FR JCT BOX	FOG LT - LH
RS5	22.1	620	563205	FR. SERV. COMPT.	ABS
RS6	22.1	620	563205	FR. SERV. COMPT.	TRAILER ABS
RS7					
RS8					
RS9					
RS10					
RS11					
RS12					
RS13					
RS14					
RS15					
RS16					
RS17	7.2	220	562498	UNDER DASH	FIRE ALARM
RS18	8.1	75K	064208	RR JCT BOX	FAN CLUTCH WITH A/C STD & OR RETARDER
RS19	9.3	24	562903	RR JCT BOX	CYCLOPS LTS - TAIL
RS20					
RS21					
RS22					
RS23					
RS24	9.1	1.5K	562908	UNDER DASH	HEAD & MARKER LTS – LED SWITCH
RS25	9.3	1.5K	562908	UNDER DASH	FOG LTS – LED SWITCH
RS26					
RS27					
RS28	15.4	1.5K	562908	UNDER DASH	EVAP. FAN CONTROL - LED SWITCH
RS40	15.4	1.5K	562908	UNDER DASH	UPPER FAN DEFROST - LED SWITCH
RS63	15.3	30K	065613	A/C JCT BOX	EVAP. FAN - TIME DELAY RLY

RESISTORS NUMBER CODE

No.	PAGE	OHM(S)	#PREV.	LOCATION	FUNCTION
RS 1	5.1	11K	562307	FR JCT BOX	DDEC III-FAST IDLE
RS 2	5.1	3.6K	562306	FR JCT BOX	DDEC III-FAST IDLE
RS 3	9.3	1 (2)	561537	FR JCT BOX	FOG LT - RH
RS 4	9.3	1 (2)	561537	FR JCT BOX	FOG LT - LH
RS 5	22.1	620	563205	FR. SERV. COMPT.	ABS
RS 6	22.1	620	563205	FR. SERV. COMPT.	TRAILER ABS
RS 7					
RS 8					
RS 9					
RS 10					
RS 11					
RS 12					
RS 13					
RS 14					
RS 15					
RS 16					
RS 17	7.2	220	562498	UNDER DASH	FIRE ALARM
RS 18	8.1	75K	064208	RR JCT BOX	FAN CLUTCH WITH A/C STD & OR RETARDER
RS 19	9.3	24	562903	RR JCT BOX	CYCLOPS LTS - TAIL
RS 20					
RS 21					
RS 22					
RS 23					
RS 24	9.1	1.5K	562908	UNDER DASH	HEAD & MARKER LTS – LED SWITCH
RS 25	9.3	1.5K	562908	UNDER DASH	FOG LTS – LED SWITCH
RS 26					
RS 27					
RS 28	15.4	1.5K	562908	UNDER DASH	EVAP. FAN CONTROL - LED SWITCH
RS 40	15.4	1.5K	562908	UNDER DASH	UPPER FAN DEFROST - LED SWITCH
RS 42	9.5	0.2	066001	FR JCT BOX	RH LOW BEAM (HALOGEN ONLY)
RS 43	9.5	0.2	066001	FR JCT BOX	LH LOW BEAM (HALOGEN ONLY)
RS 63	15.3	30K	065613	A/C JCT BOX	EVAP. FAN - TIME DELAY RLY

      WIRING DIAGRAM KEYS

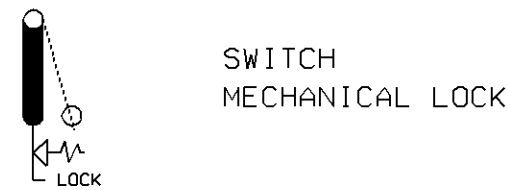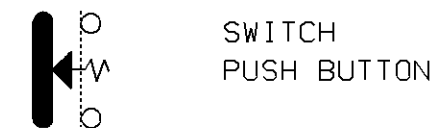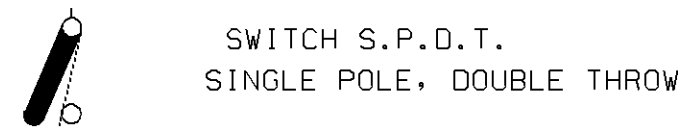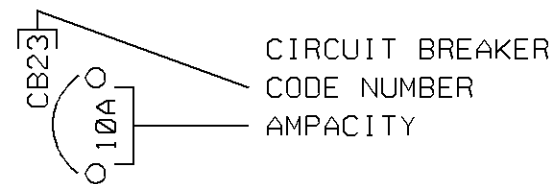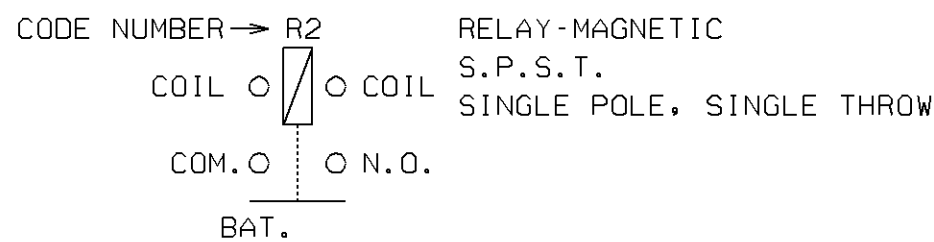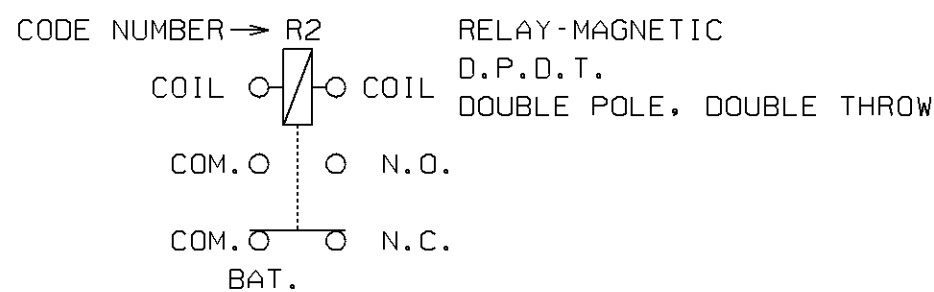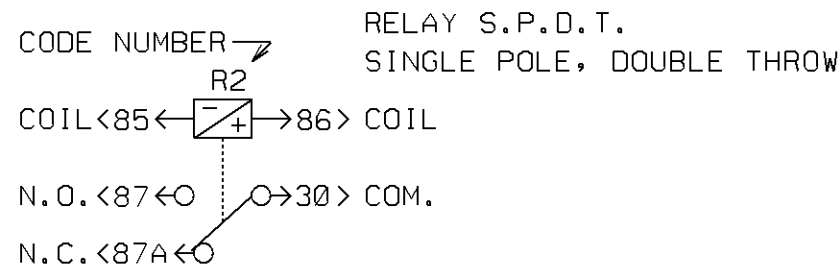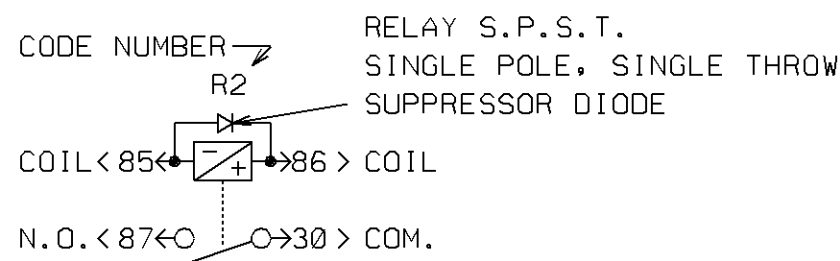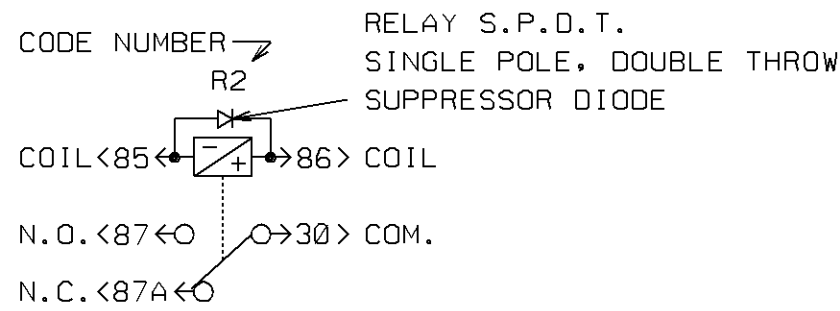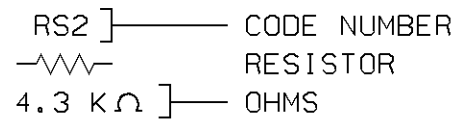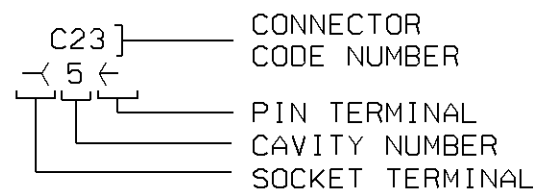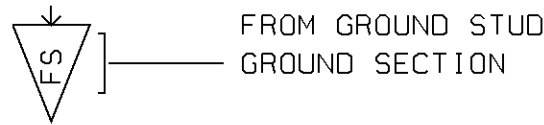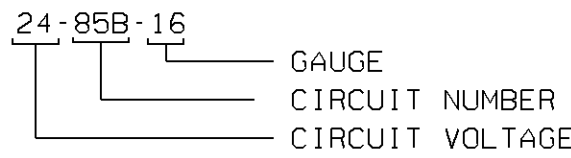

BLK BLACK
YEL YELLOW
RED RED
WH WHITE
GRY GREY
ORA ORANGE
BLU BLUE
GRN GREEN
BRN BROWN
PUR PURPLE
PK PINK



NO:

D060994

FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
F 1	6.1	10A	562407	FR JCT BOX	WORLD TRANSM 12V BATT
F 2	6.1	10A	562407	FR JCT BOX	WORLD TRANSM 12V IGN.
F 3	7.2	20A	562605	FR JCT BOX	ELECTRICAL HORNS
F 4	7.2	5A	562259	FR JCT BOX	FIRE ALARME
F 5					
F 6	17.1	3A	562599	FR JCT BOX	STEERING CONTROL
F 7	4.2	3A	560893	RH ENG.CPT.	STARTER ON T.T.LT.
F 8	9.2	15A	562604	FR JCT BOX	CORNERING LTS
F 9					
F 10	9.3	15A	562604	FR JCT BOX	FOG LTS
F 11					
F 12					
F 13					
F 14	11.2	15A	562604	FR JCT BOX	DRIVER'S LTS SW.
F 15					
F 16					
F 17					
F 18					
F 19					
F 20					
F 21					
F 22	13.1	10A	562407	FR JCT BOX	POWER OUTLET DASH R.H.
F 23	19.1	15A	562604	FR JCT BOX	DRIVER'S & WINDOW LIFTER
F 24	13.1	15A	562604	FR JCT BOX	CIGAR LIGHTER & POWER OUTLET L.H. CONSOL
F 25	19.1	3A	562599	FR JCT BOX	SUN VISOR
F 26	11.2	7.5A	562602	FR JCT BOX	DRIVER'S LIGHTS
F 27					
F 28					
F 29					
F 30					
F 31					
F 32	19.1	15A	562604	FR JCT BOX	ENTRANCE WINDOW LIFTER
F 33					
F 34					
F 35					
F 36					
F 37					
F 38					
F 39					
F 40					
F 41					
F 42					
F 43	1.2	3A	562599	ENGINE CPT.	12V SIGNAL TO BATT. MONITOR
F 44	1.2	3A	562599	ENGINE CPT.	24V SIGNAL TO BATT. MONITOR
F 45					
F 46					
F 47	16.1	7.5A	562602	FR JCT BOX	RR VIEW MIRROR

FUSES CODE


No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
F 1	6.1	10A	562407	FR JCT BOX	WORLD TRANSM 12V BATT
F 2	6.1	10A	562407	FR JCT BOX	WORLD TRANSM 12V IGN.
F 3	7.2	20A	562605	FR JCT BOX	ELECTRICAL HORNS
F 4	7.2	5A	562259	FR JCT BOX	FIRE ALARME
F 5					
F 6	17.1	3A	562599	FR JCT BOX	STEERING CONTROL
F 7S	4.2	3A	560893	RH ENG.CPT.	STARTER « ON » T.T.LT.
F 8	9.2	15A	562604	FR JCT BOX	CORNERING LTS
F 9					
F 10	9.3	15A	562604	FR JCT BOX	FOG LTS
F 11					
F 12					
F 13					
F 14	11.2	15A	562604	FR JCT BOX	DRIVER'S LTS SW.
F 15					
F 16					
F 17					
F 18					
F 19					
F 20					
F 21					
F 22	13.1	10A	562407	FR JCT BOX	POWER OUTLET DASH R.H.
F 23	19.1	15A	562604	FR JCT BOX	DRIVER'S & WINDOW LIFTER
F 24	13.1	15A	562604	FR JCT BOX	CIGAR LIGHTER & POWER OUTLET L.H. CONSOL
F 25	19.1	3A	562599	FR JCT BOX	SUN VISOR
F 26	11.2	7.5A	562602	FR JCT BOX	DRIVER'S LIGHTS
F 27					
F 28					
F 29					
F 30					
F 31					
F 32	19.1	15A	562604	FR JCT BOX	ENTRANCE WINDOW LIFTER
F 33					
F 34					
F 35					
F 36					
F 37					
F 38					
F 39					
F 40					
F 41					
F 42					
F 43	1.2	3A	562599	ENGINE CPT.	12V SIGNAL TO BATT. MONITOR
F 44	1.2	3A	562599	ENGINE CPT.	24V SIGNAL TO BATT. MONITOR
F 45					
F 46					
F 47	16.1	7.5A	562602	FR JCT BOX	RR VIEW MIRROR

FUSES CODE


No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
F 1	6.1	10A	562407	FR JCT BOX	WORLD TRANSM 12V BATT
F 2	6.1	10A	562407	FR JCT BOX	WORLD TRANSM 12V IGN.
F 3	7.2	20A	562605	FR JCT BOX	ELECTRICAL HORNS
F 4	7.2	5A	562259	FR JCT BOX	FIRE ALARME
F 5					
F 6	17.1	3A	562599	FR JCT BOX	STEERING CONTROL
F 7S	4.2	3A	560893	RH ENG.CPT.	STARTER « ON » T.T.LT.
F 8	9.2	15A	562604	FR JCT BOX	CORNERING LTS
F 9					
F 10	9.3	15A	562604	FR JCT BOX	FOG LTS
F 11					
F 12					
F 13					
F 14	11.2	15A	562604	FR JCT BOX	DRIVER'S LTS SW.
F 15					
F 16					
F 17					
F 18					
F 19					
F 20					
F 21					
F 22	13.1	10A	562407	FR JCT BOX	POWER OUTLET DASH R.H.
F 23	19.1	15A	562604	FR JCT BOX	DRIVER'S & WINDOW LIFTER
F 24	13.1	15A	562604	FR JCT BOX	CIGAR LIGHTER & POWER OUTLET L.H. CONSOL
F 25	19.1	3A	562599	FR JCT BOX	SUN VISOR
F 26	11.2	7.5A	562602	FR JCT BOX	DRIVER'S LIGHTS
F 27					
F 28					
F 29					
F 30					
F 31					
F 32	19.1	15A	562604	FR JCT BOX	ENTRANCE WINDOW LIFTER
F 33	10.1	15A	562604	FR JCT BOX	HEAD LAMP WASHER
F 34					
F 35					
F 36					
F 37					
F 38					
F 39					
F 40					
F 41					
F 42					
F 43	1.2	3A	562599	ENGINE CPT.	12V SIGNAL TO BATT. MONITOR
F 44	1.2	3A	562599	ENGINE CPT.	24V SIGNAL TO BATT. MONITOR
F 45					
F 46					
F 47	16.1	7.5A	562602	FR JCT BOX	RR VIEW MIRROR
F SO1	24.1	3A	563279	SLIDE-OUT BOX	LOGIC POWER MASTER-ID & CECM
F SO2	24.1	7.5A	563005	SLIDE-OUT BOX	LOGIC POWER IO-B SLIDE-OUT#1
F SO3	24.1	7.5A	563005	SLIDE-OUT BOX	LOGIC POWER IO-B SLIDE-OUT#2

LOGIC GATE


TRUTH TABLE

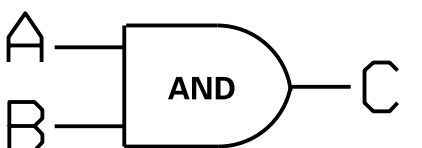AND GATE		
		
INPUT		OUT
A	B	C
0	0	0
0	1	0
1	0	0
1	1	1


• OUTPUT IS 1 WHEN ALL INPUT IS 1

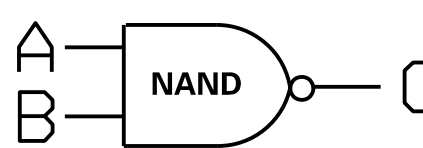NAND GATE		
		
INPUT		OUT
A	B	C
0	0	1
0	1	1
1	0	1
1	1	0


• OUTPUT IS 0 WHEN ALL INPUT IS 1

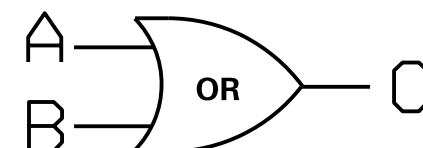OR GATE		
		
INPUT		OUT
A	B	C
0	0	0
0	1	1
1	0	1
1	1	1

• OUTPUT IS 1 WHEN AT LEAST INPUT IS 1

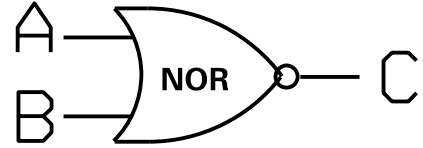NOR GATE		
		
INPUT		OUT
A	B	C
0	0	1
0	1	0
1	0	0
1	1	0


• OUTPUT IS 1 WHEN NONE INPUT IS 1

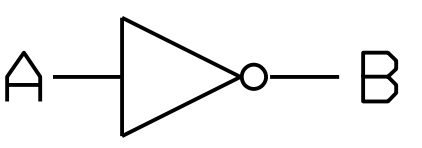
NOT GATE		
		
INPUT		OUT
	A	B
	0	1
	1	0

• OUTPUT IS REVERSE OF INPUT

ON-DELAY	
	
XX SECOND AFTER A=1 THAN B=1	

OFF-DELAY	
	
XX SECOND AFTER A=0 THAN B=0	

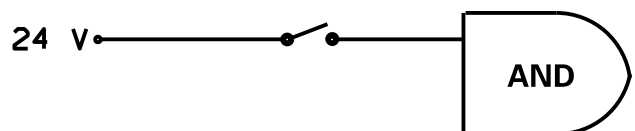
POSITIVE INPUT	
	
INPUT CONNECTED WITH SIGNAL 12V OR 24V SWITCH CLOSED • LEVEL 1 SWITCH OPENED • LEVEL 0	

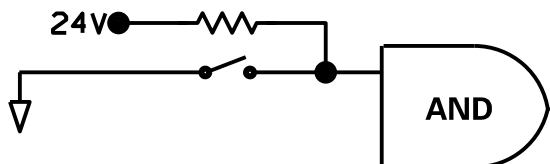
NEGATIVE INPUT	
	
INPUT CONNECTED WITH SIGNAL GROUND SWITCH CLOSED • LEVEL 0 SWITCH OPENED • LEVEL 1	


INPUT OR OUTPUT LEVEL



LEVEL 1 = 12 VOLTS OR 24 VOLTS


LEVEL 0 = 0 VOLT (TO GROUND)

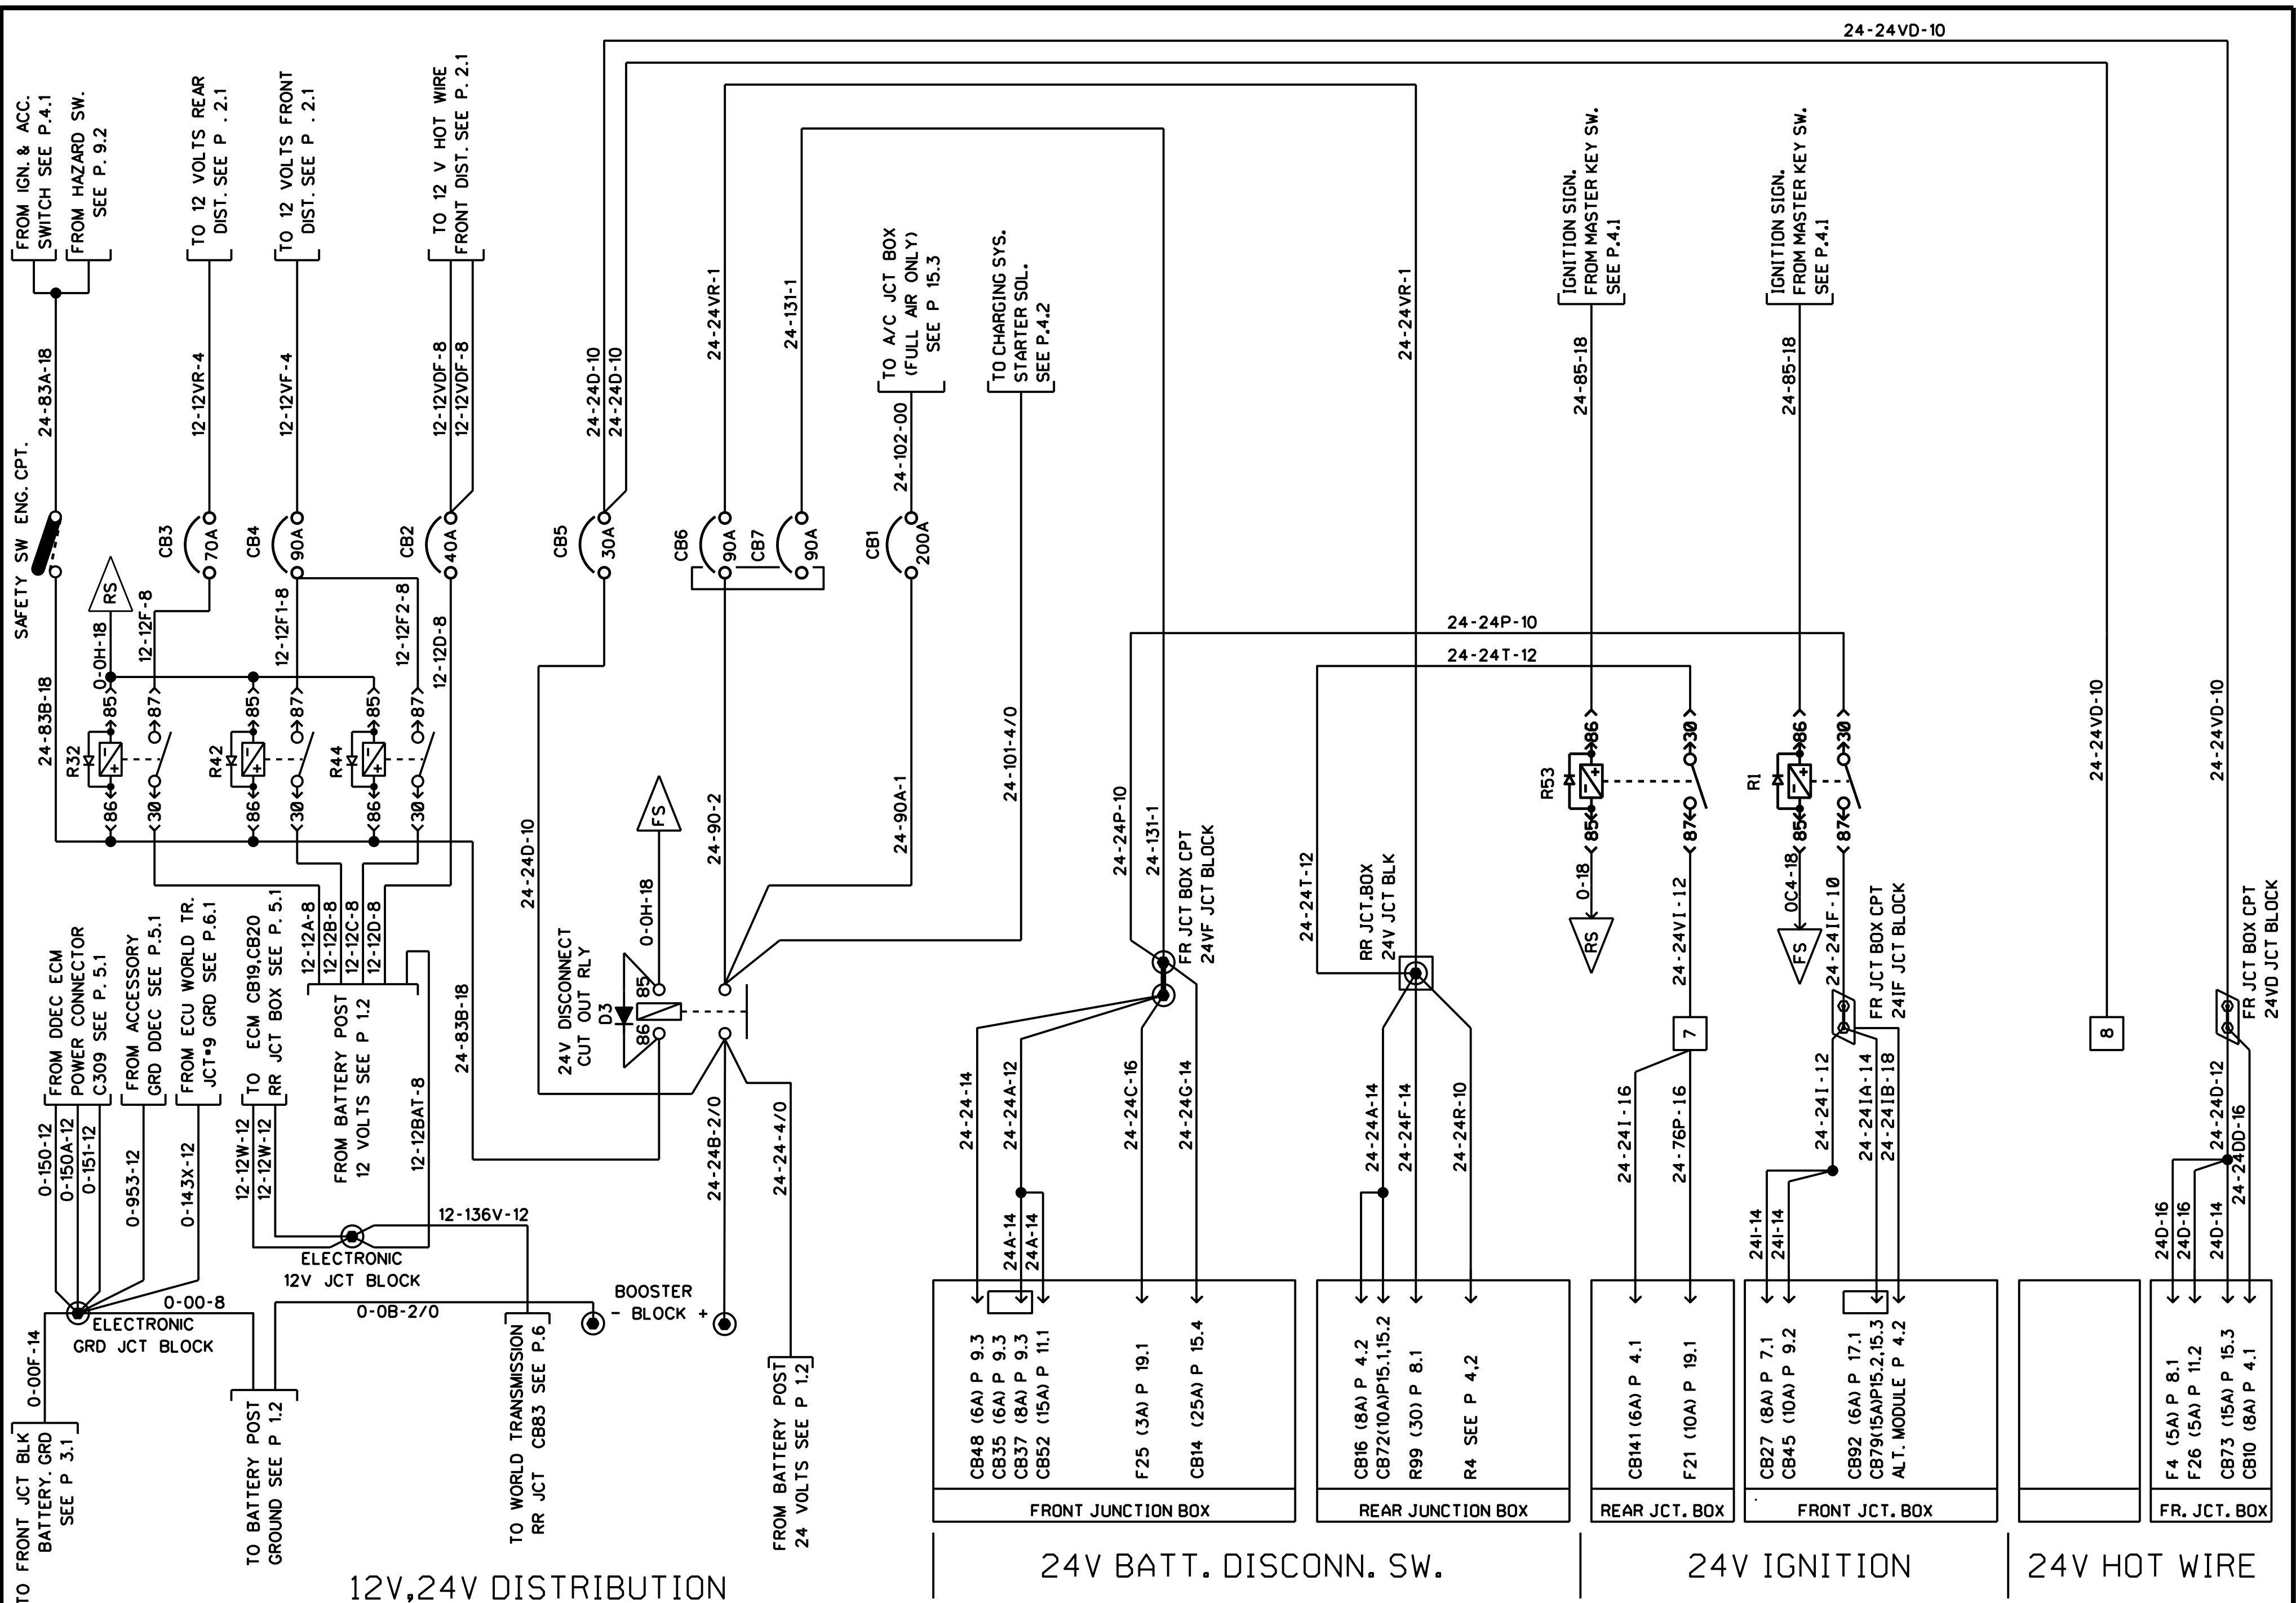


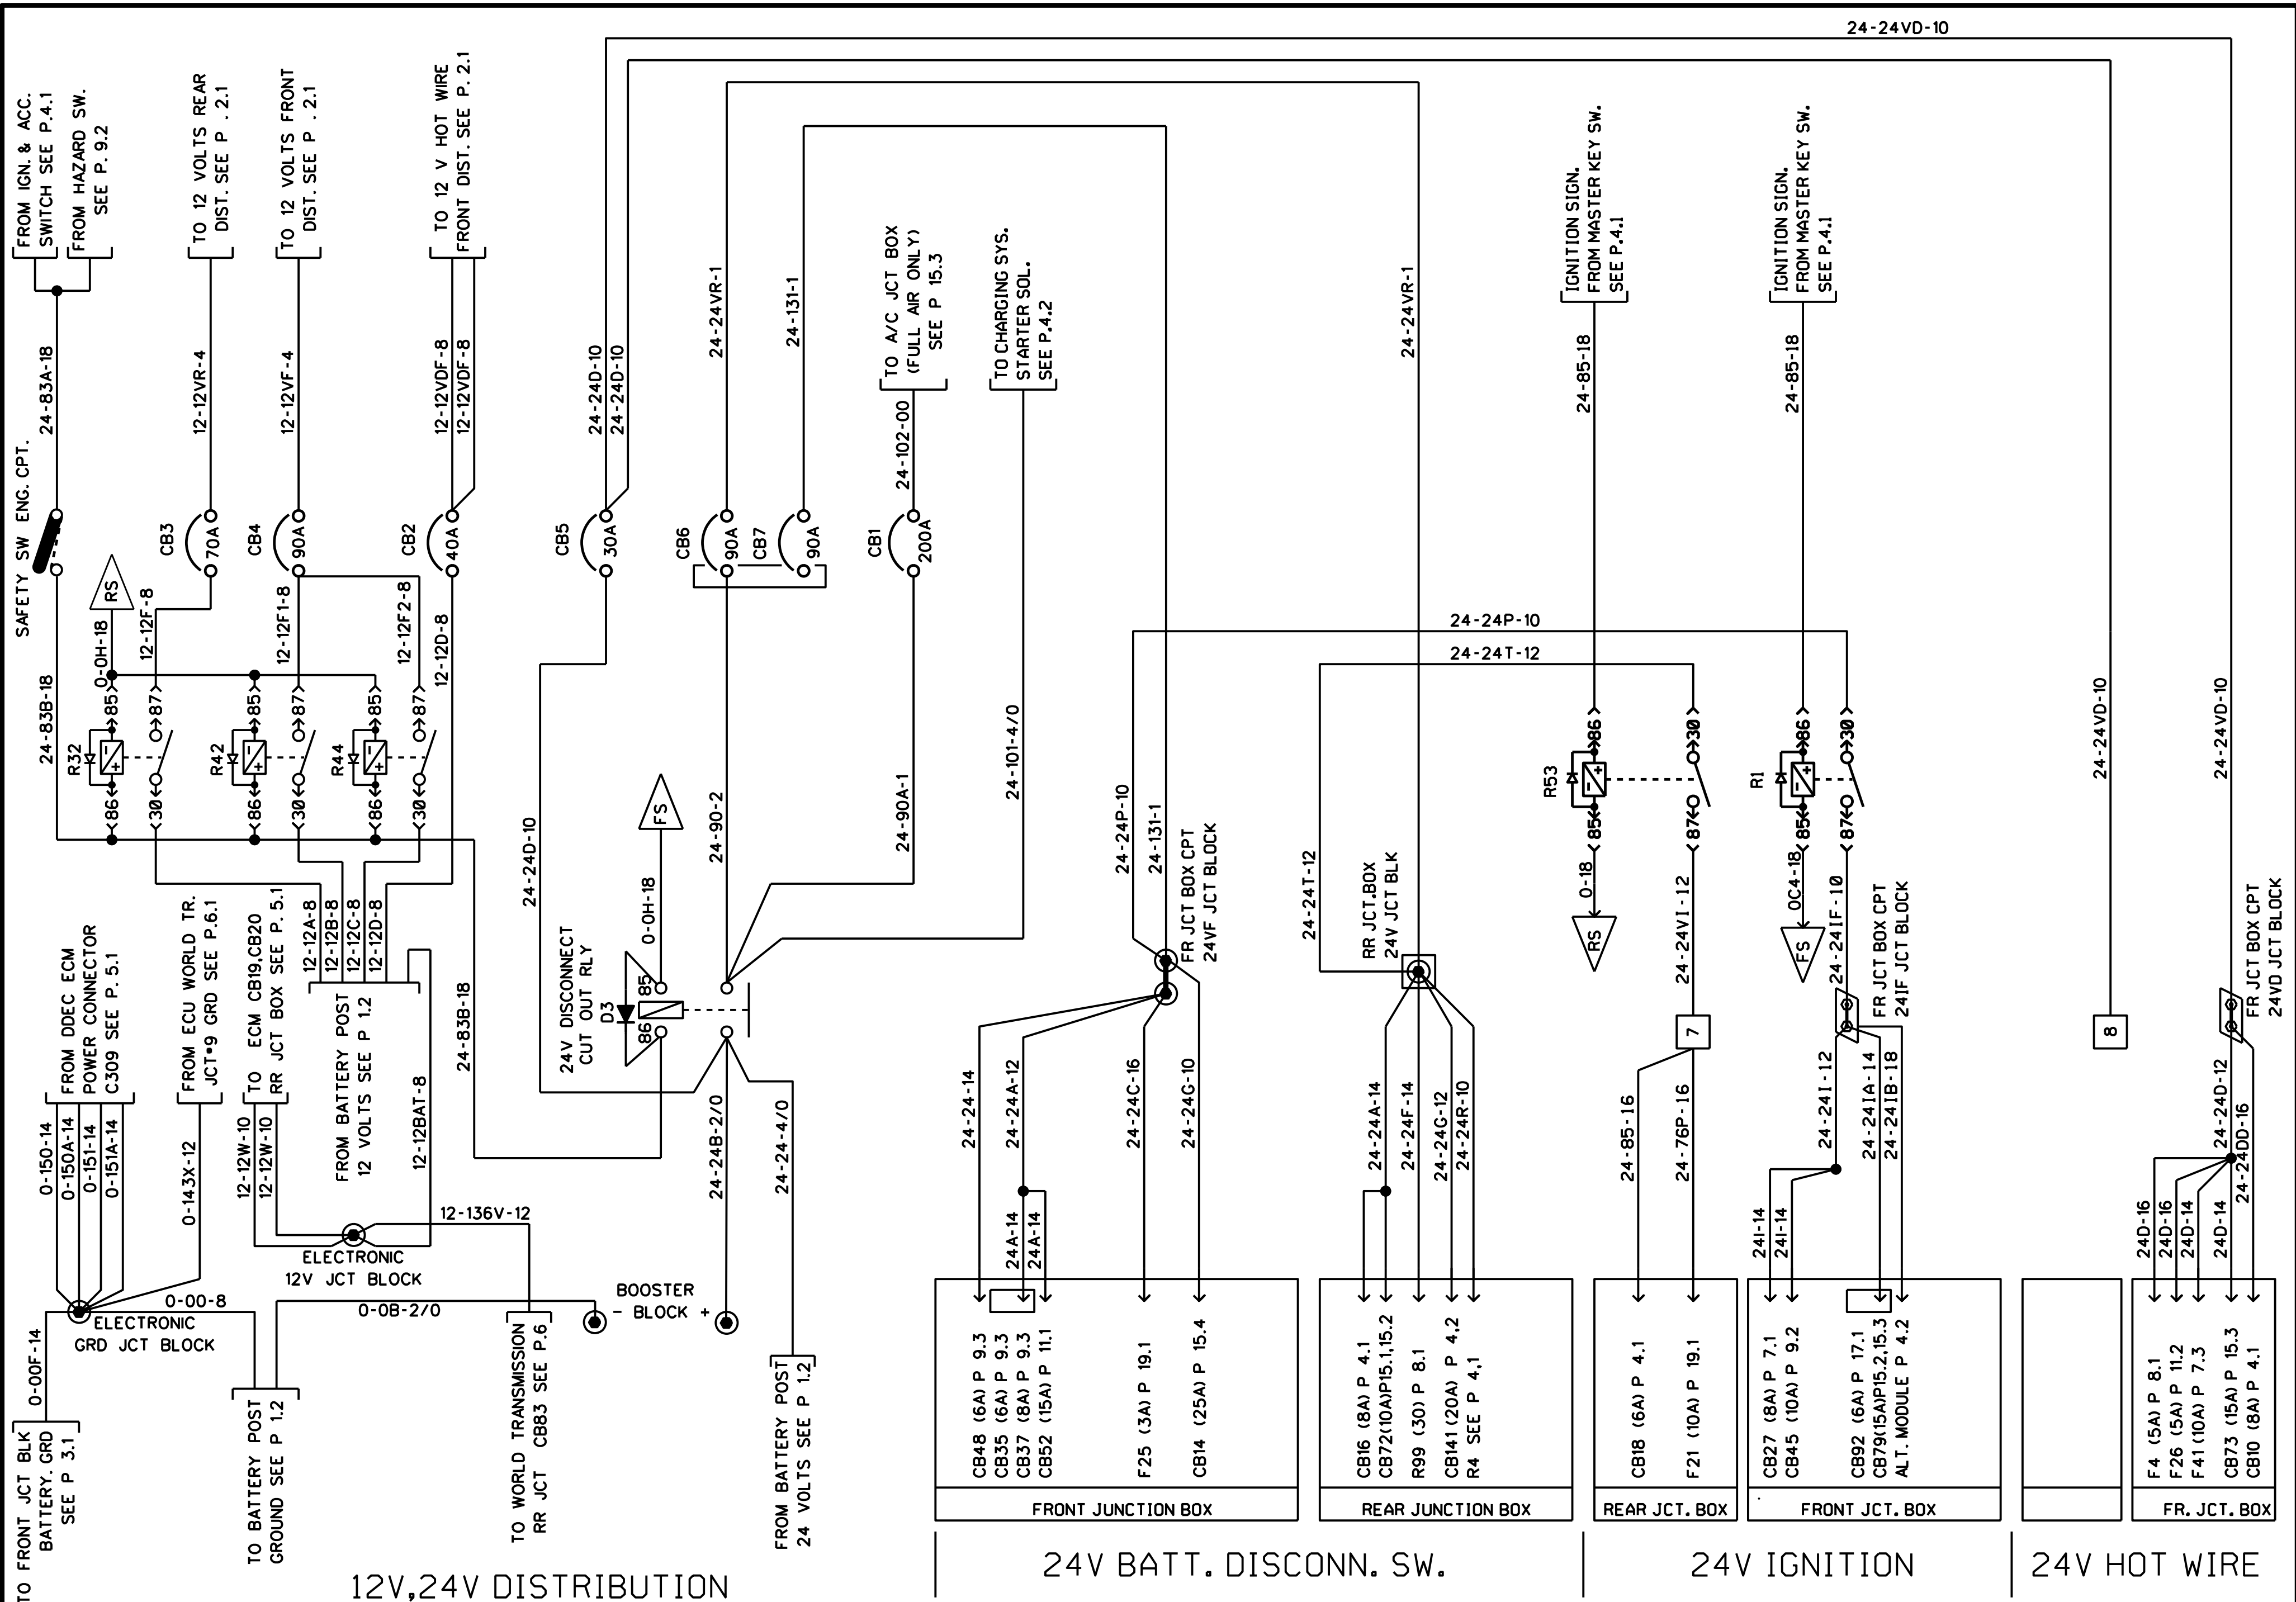

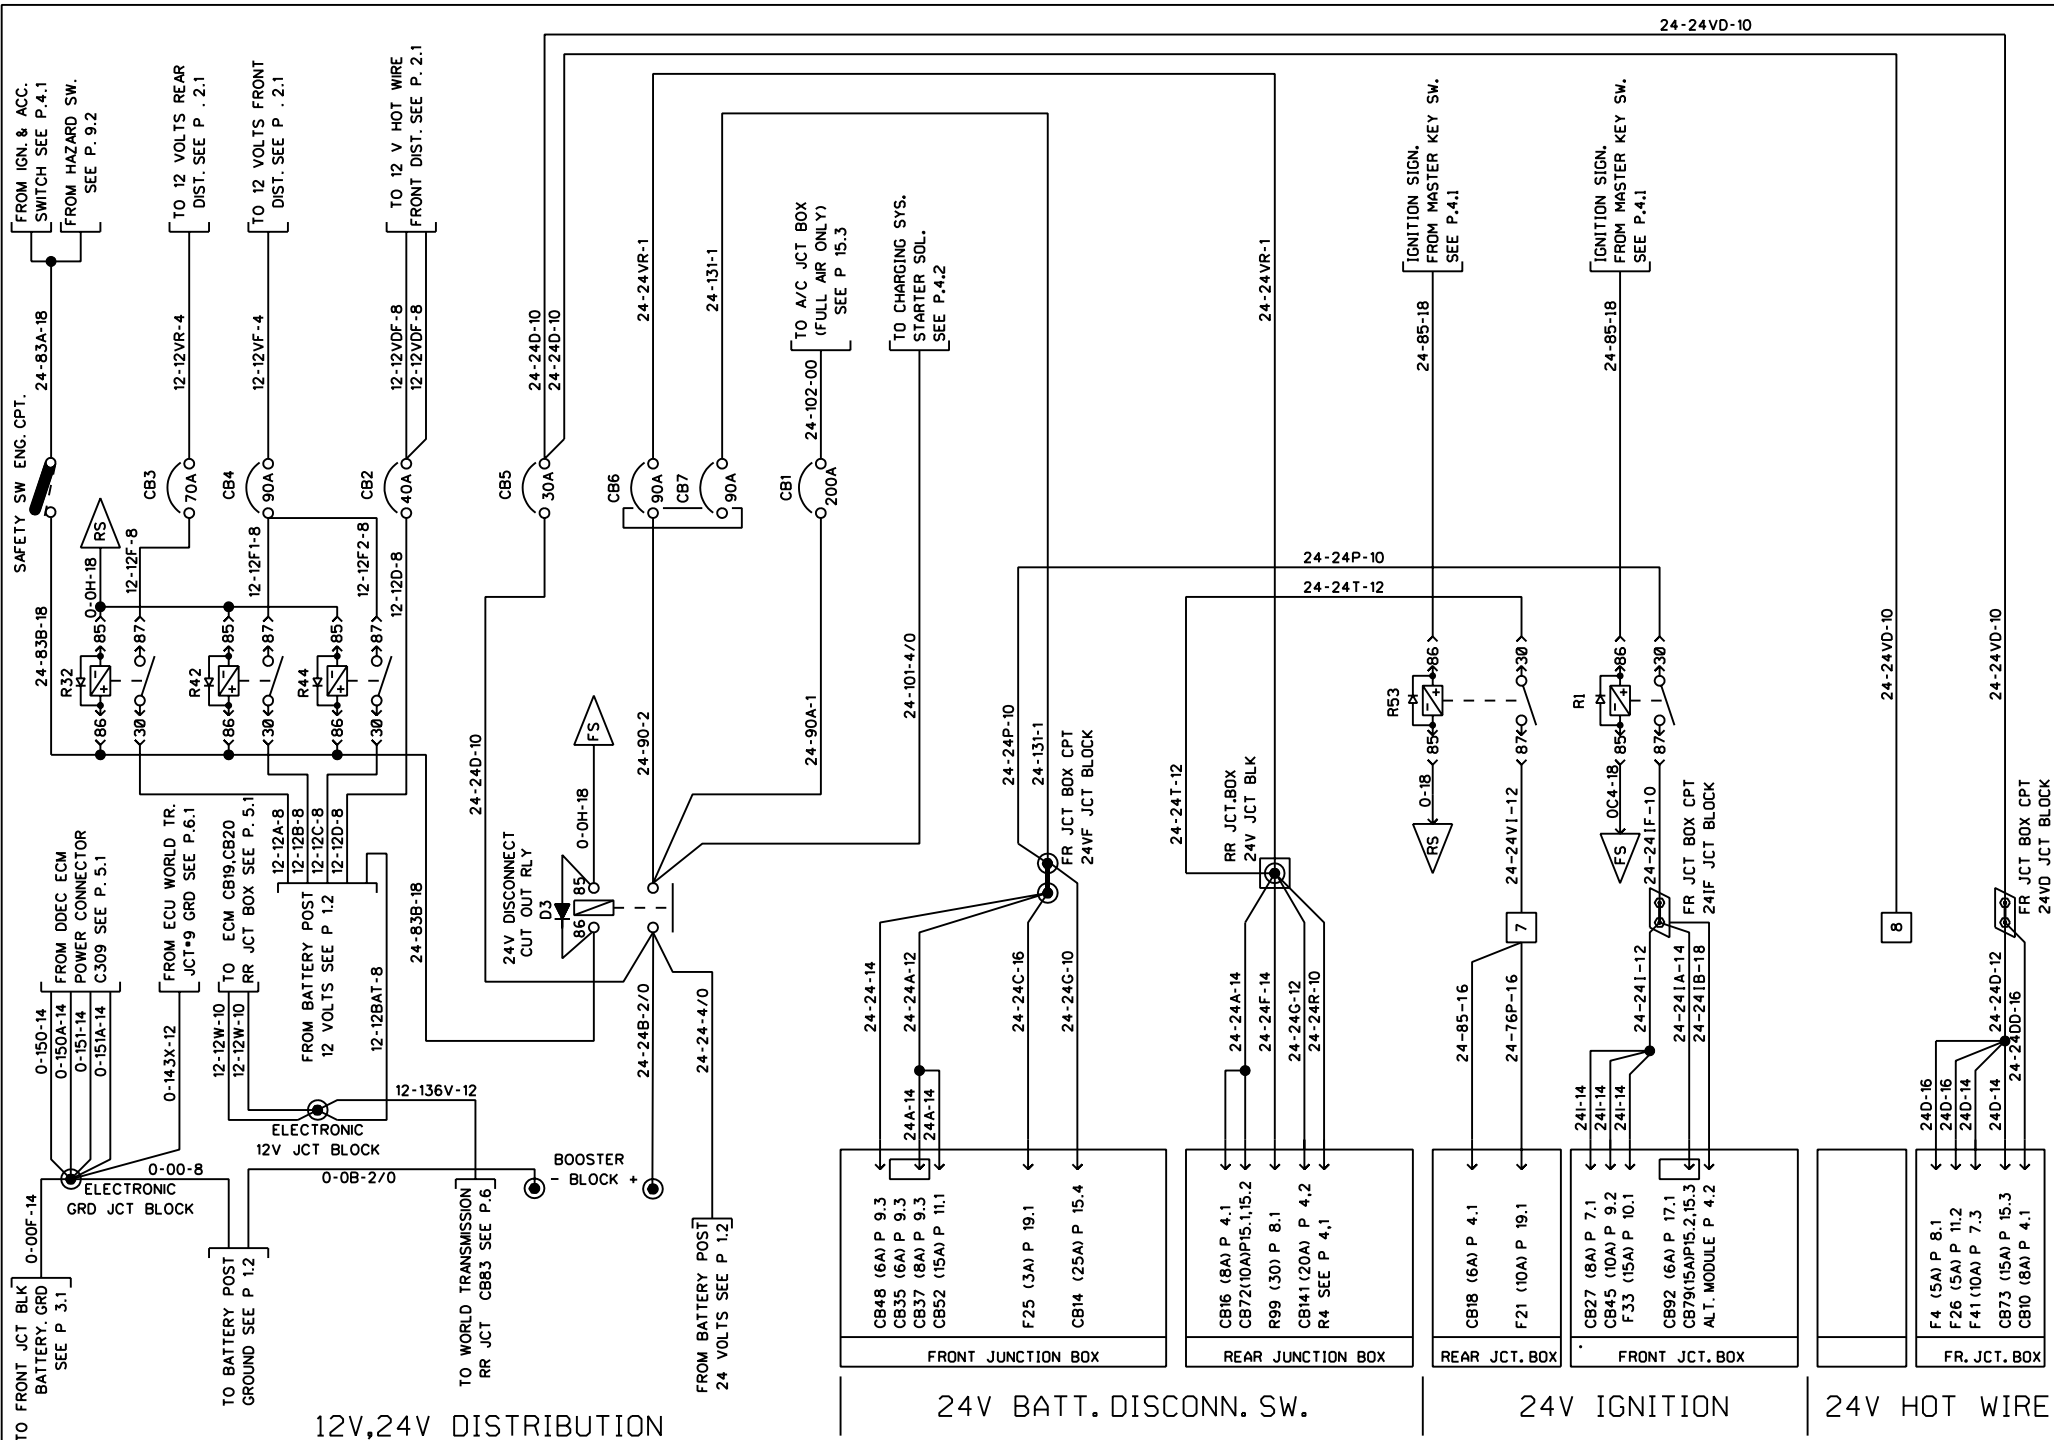

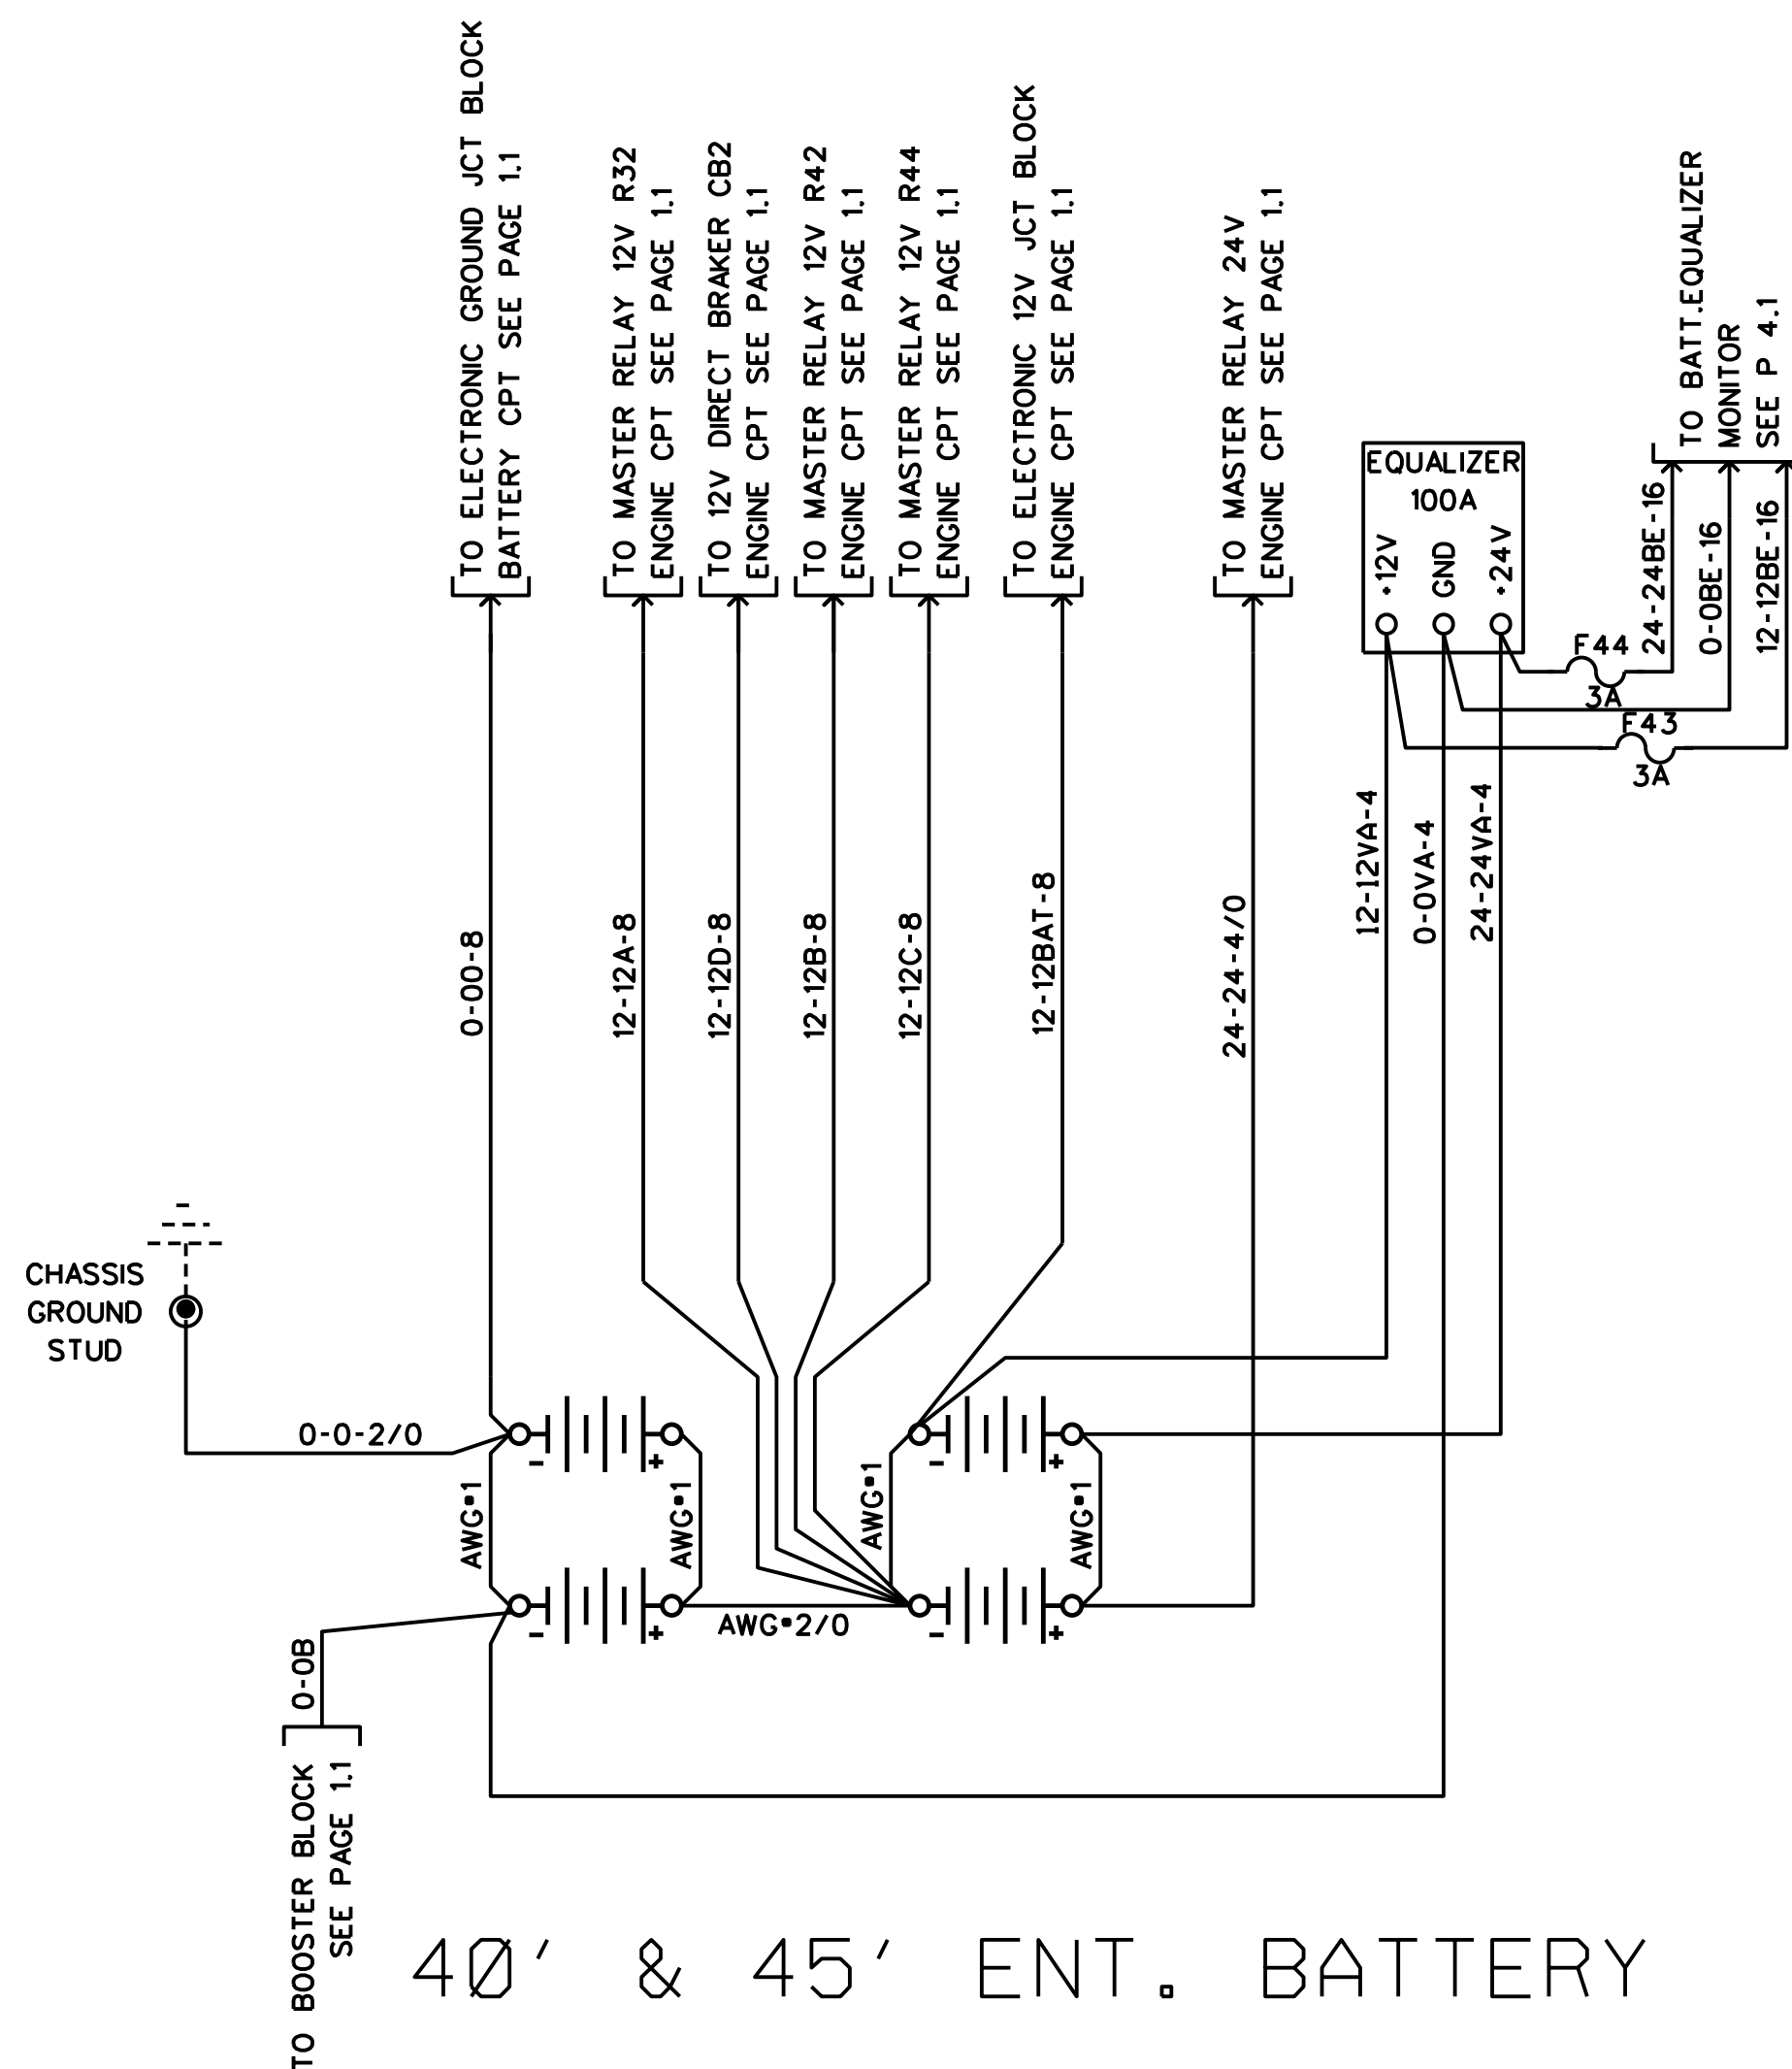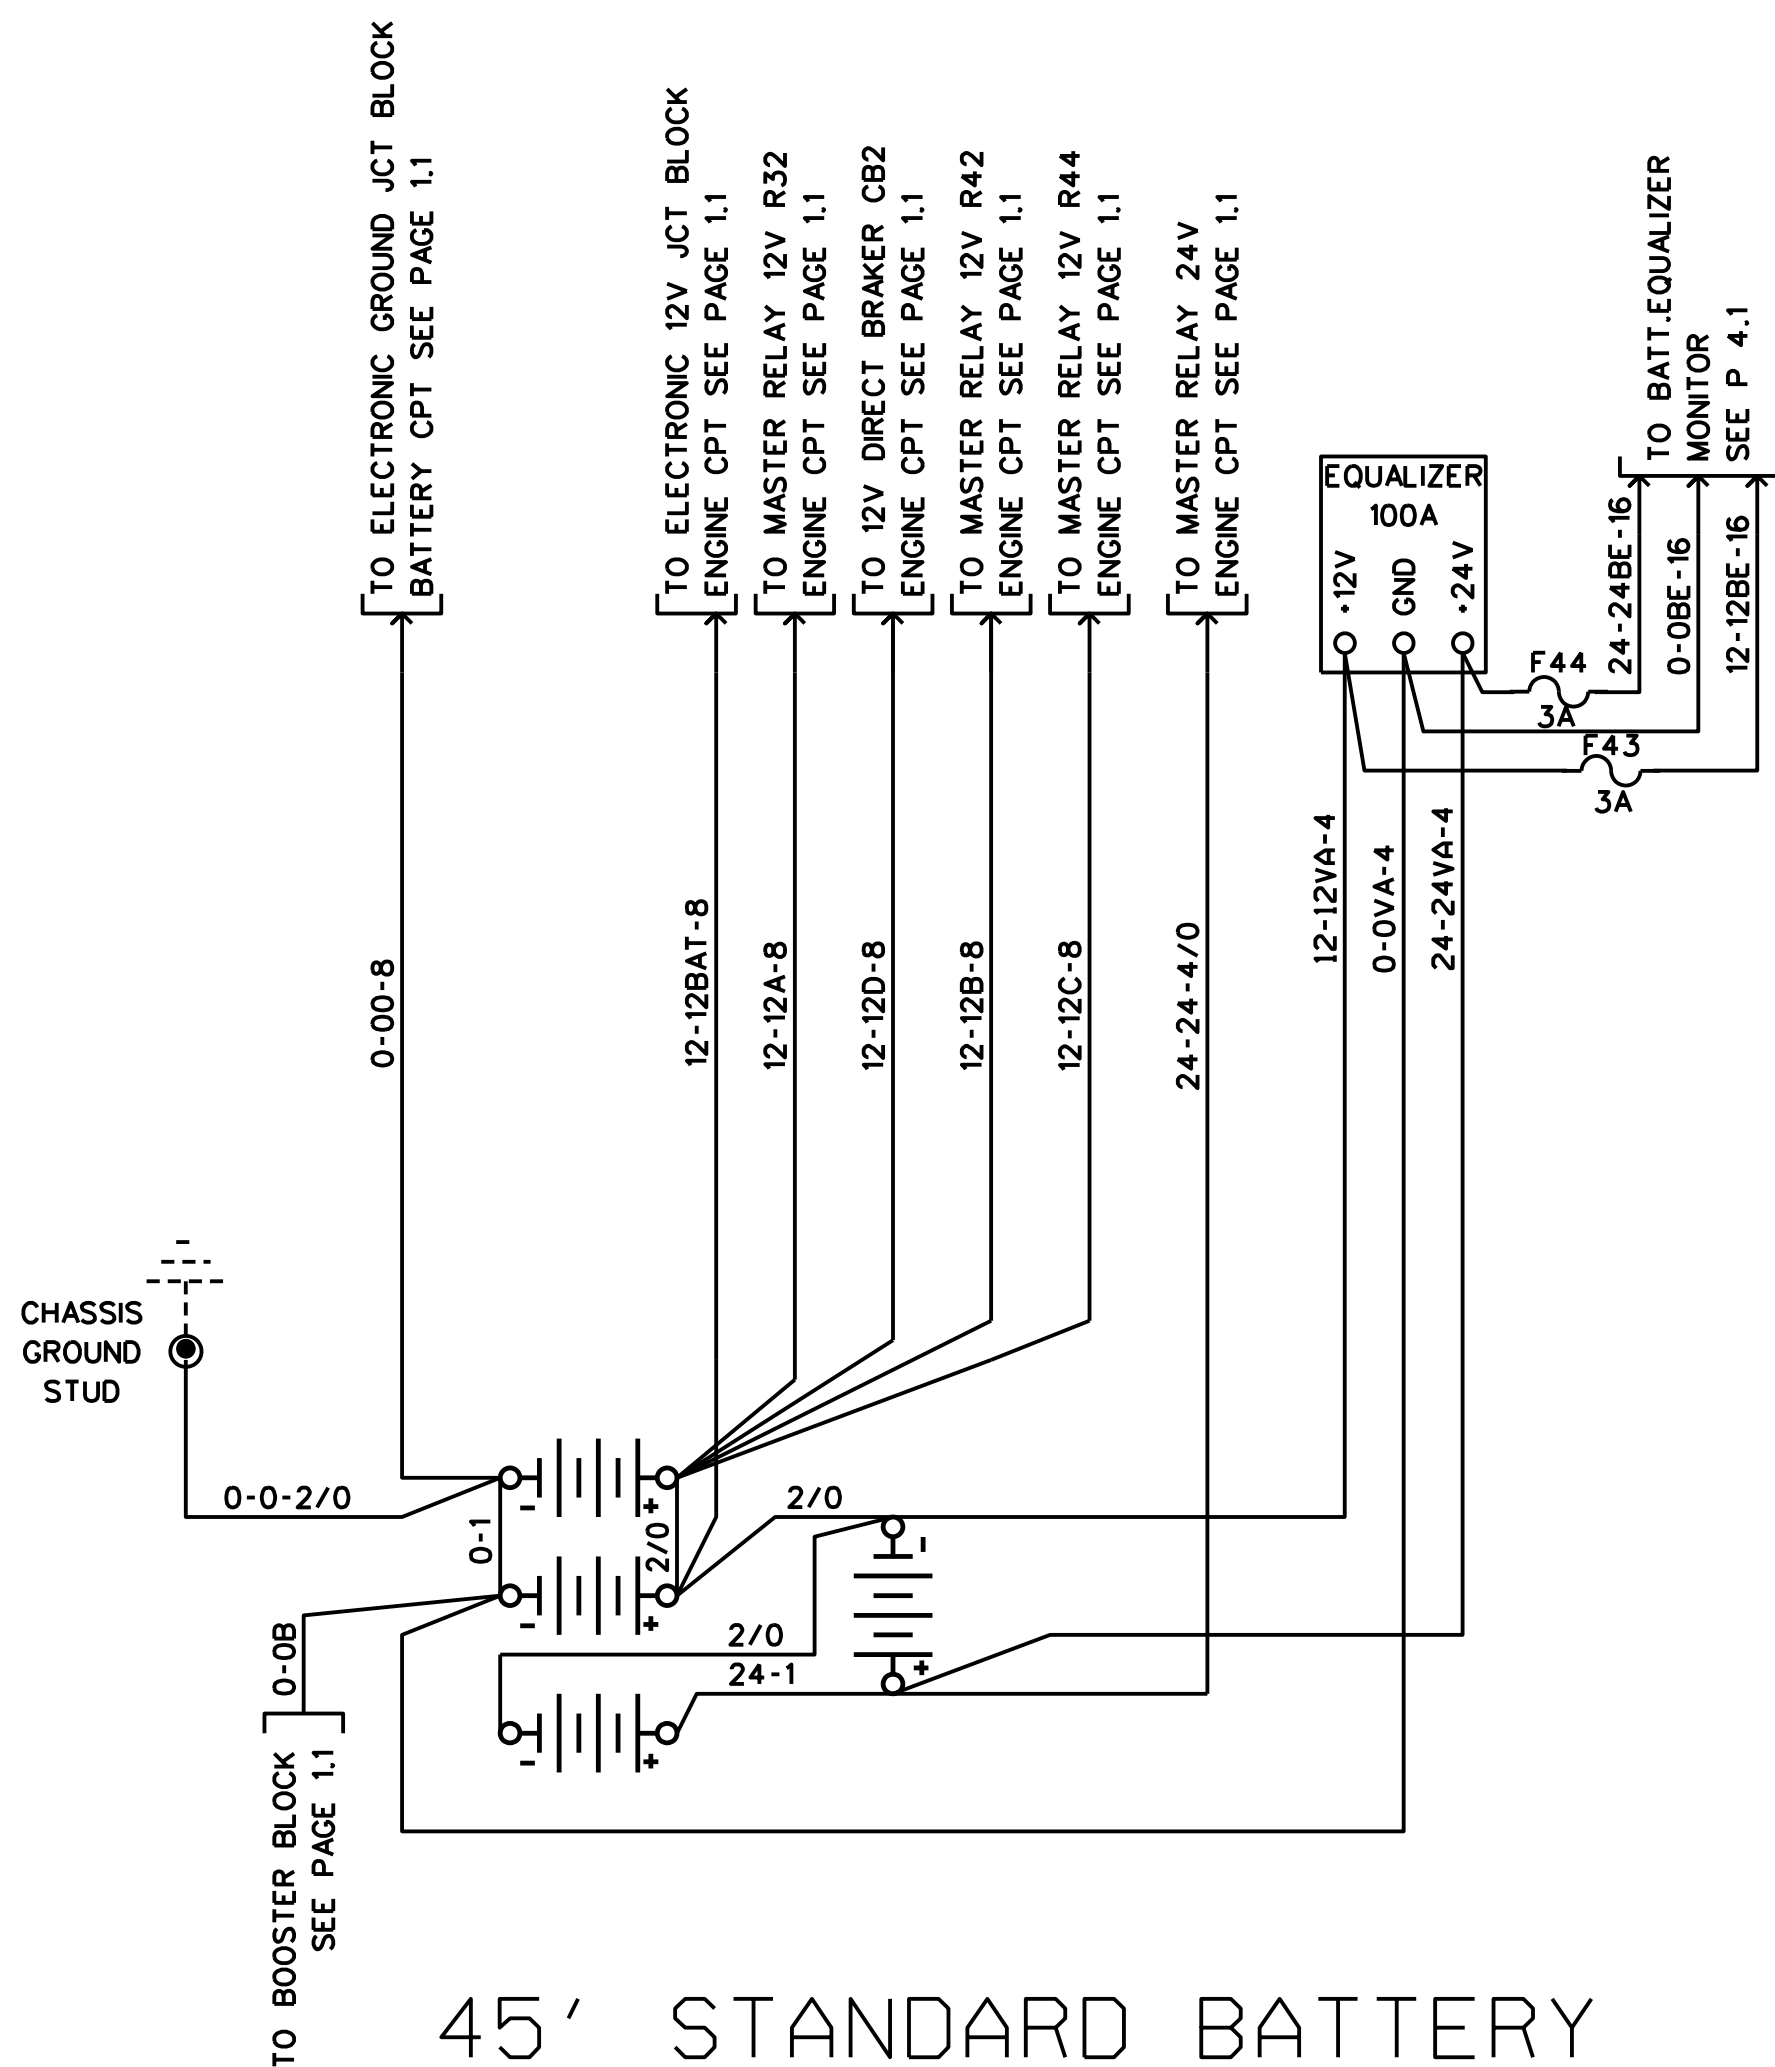

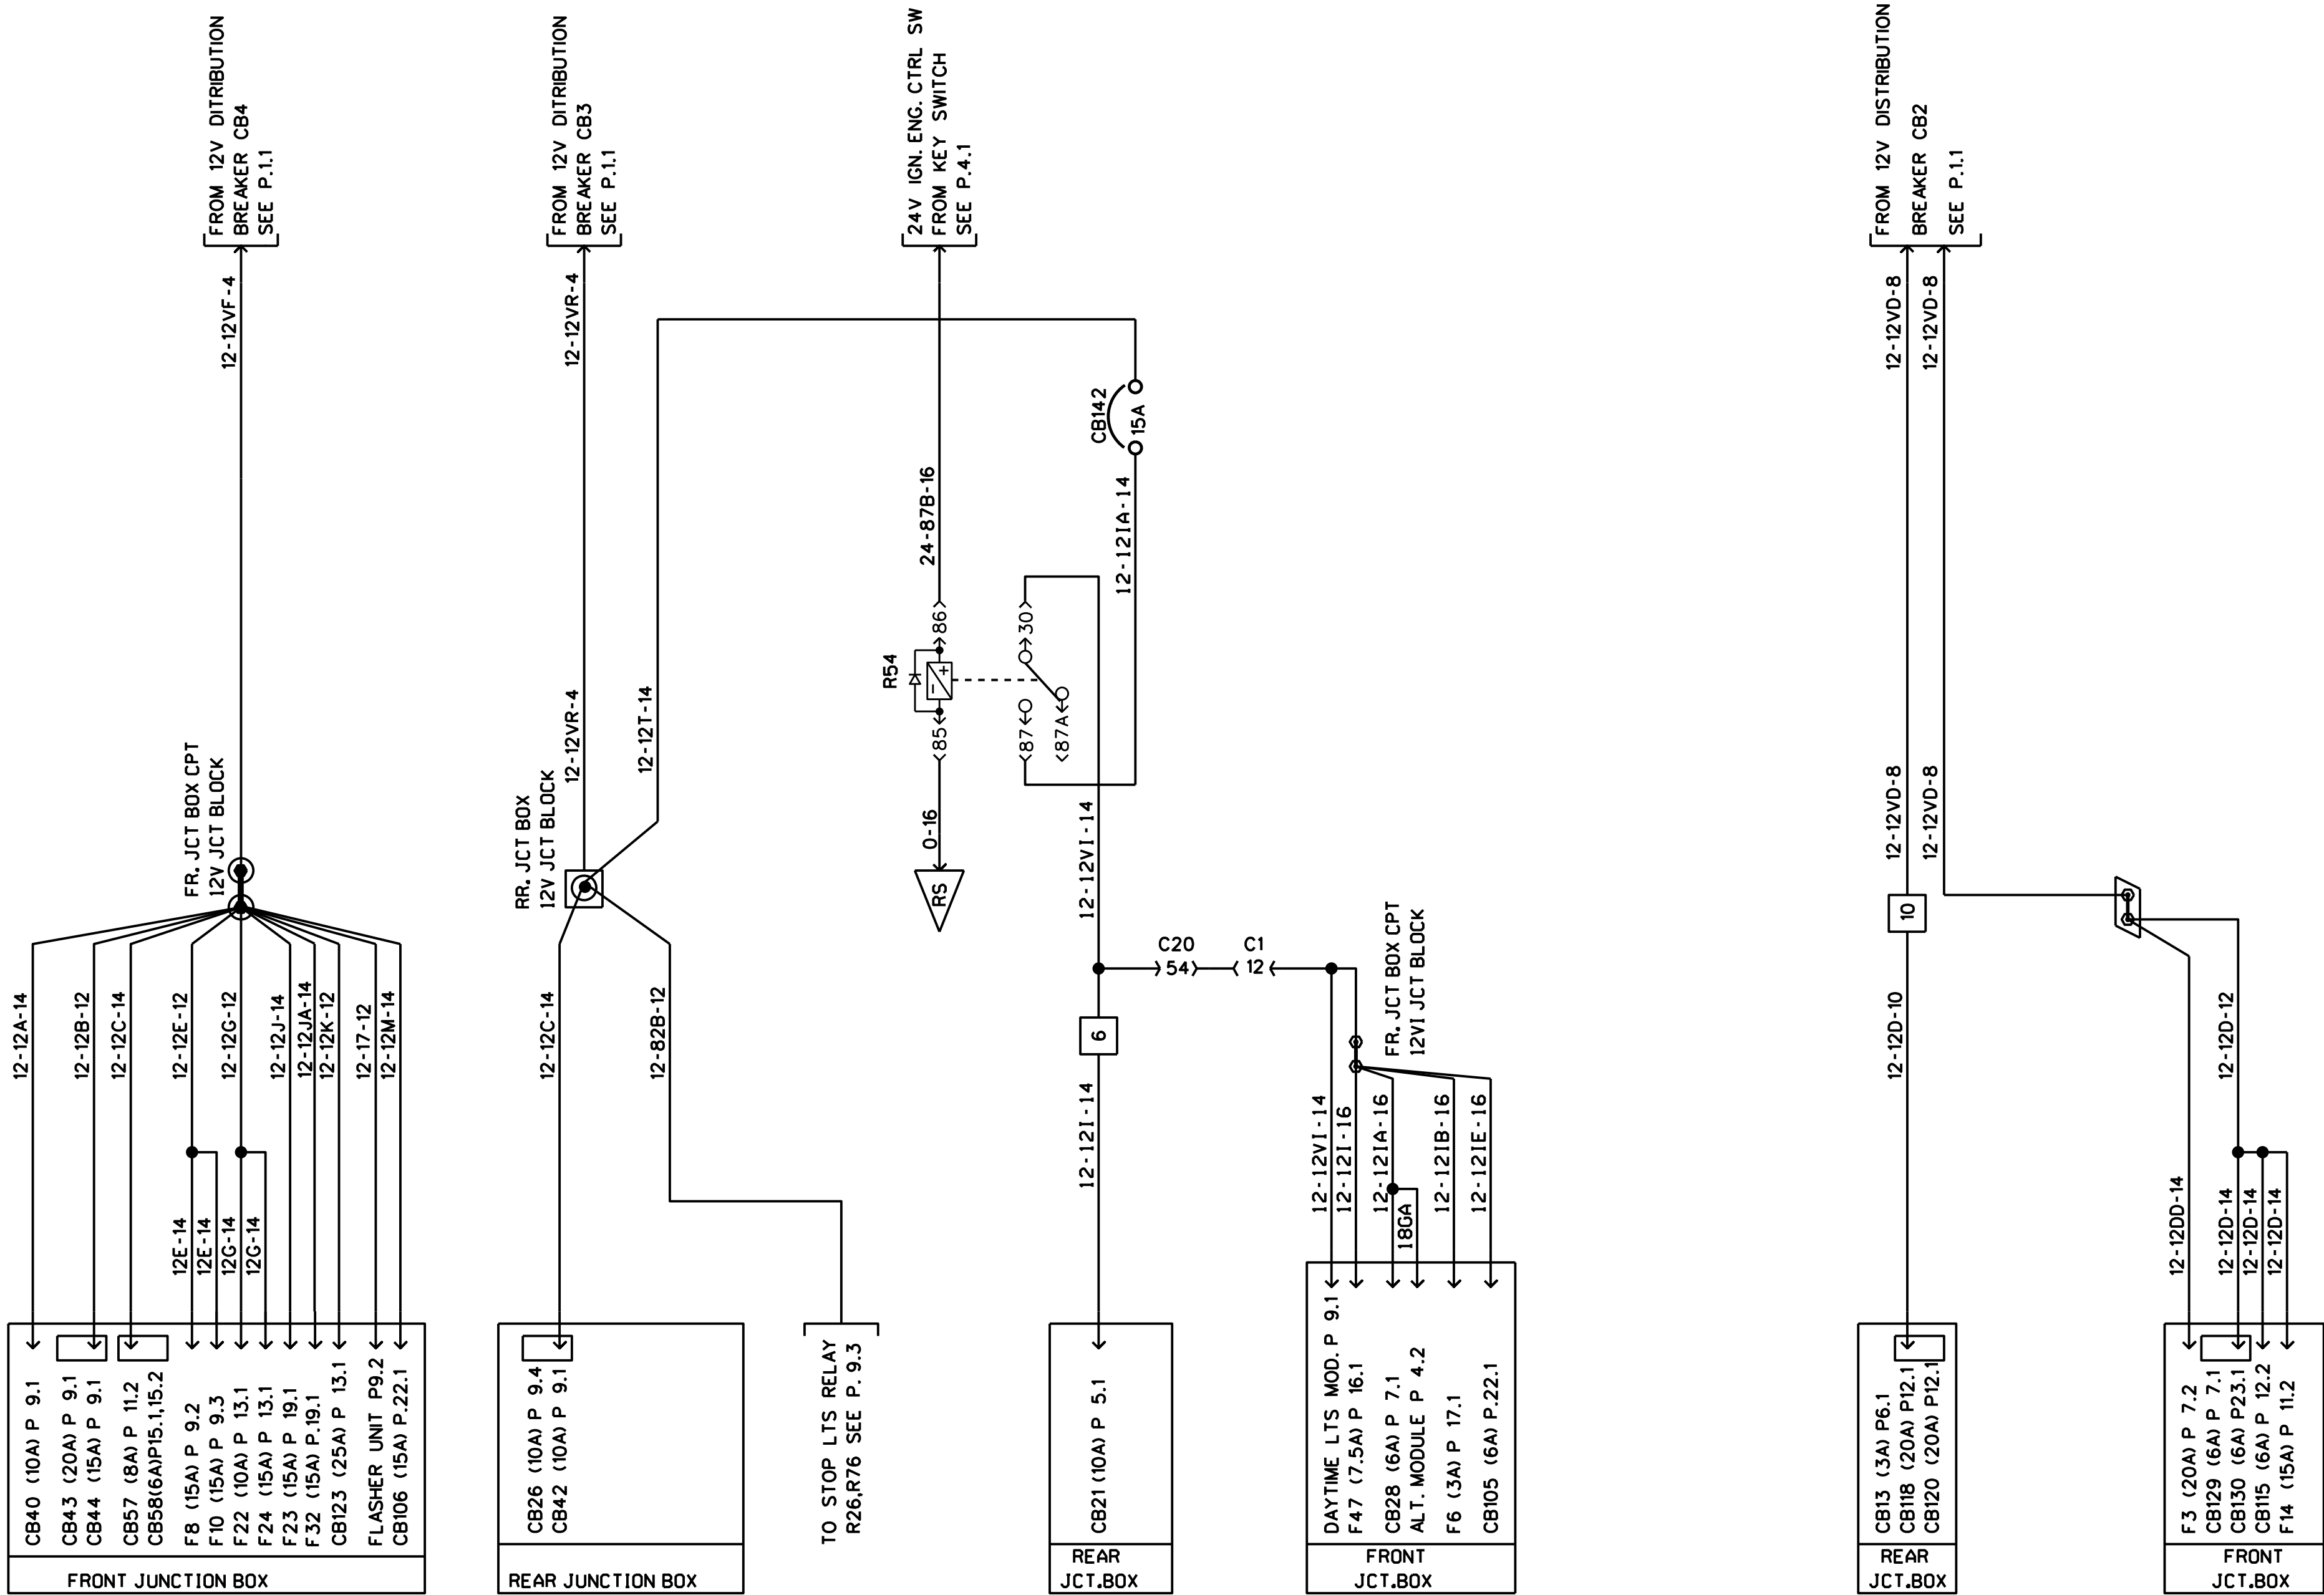

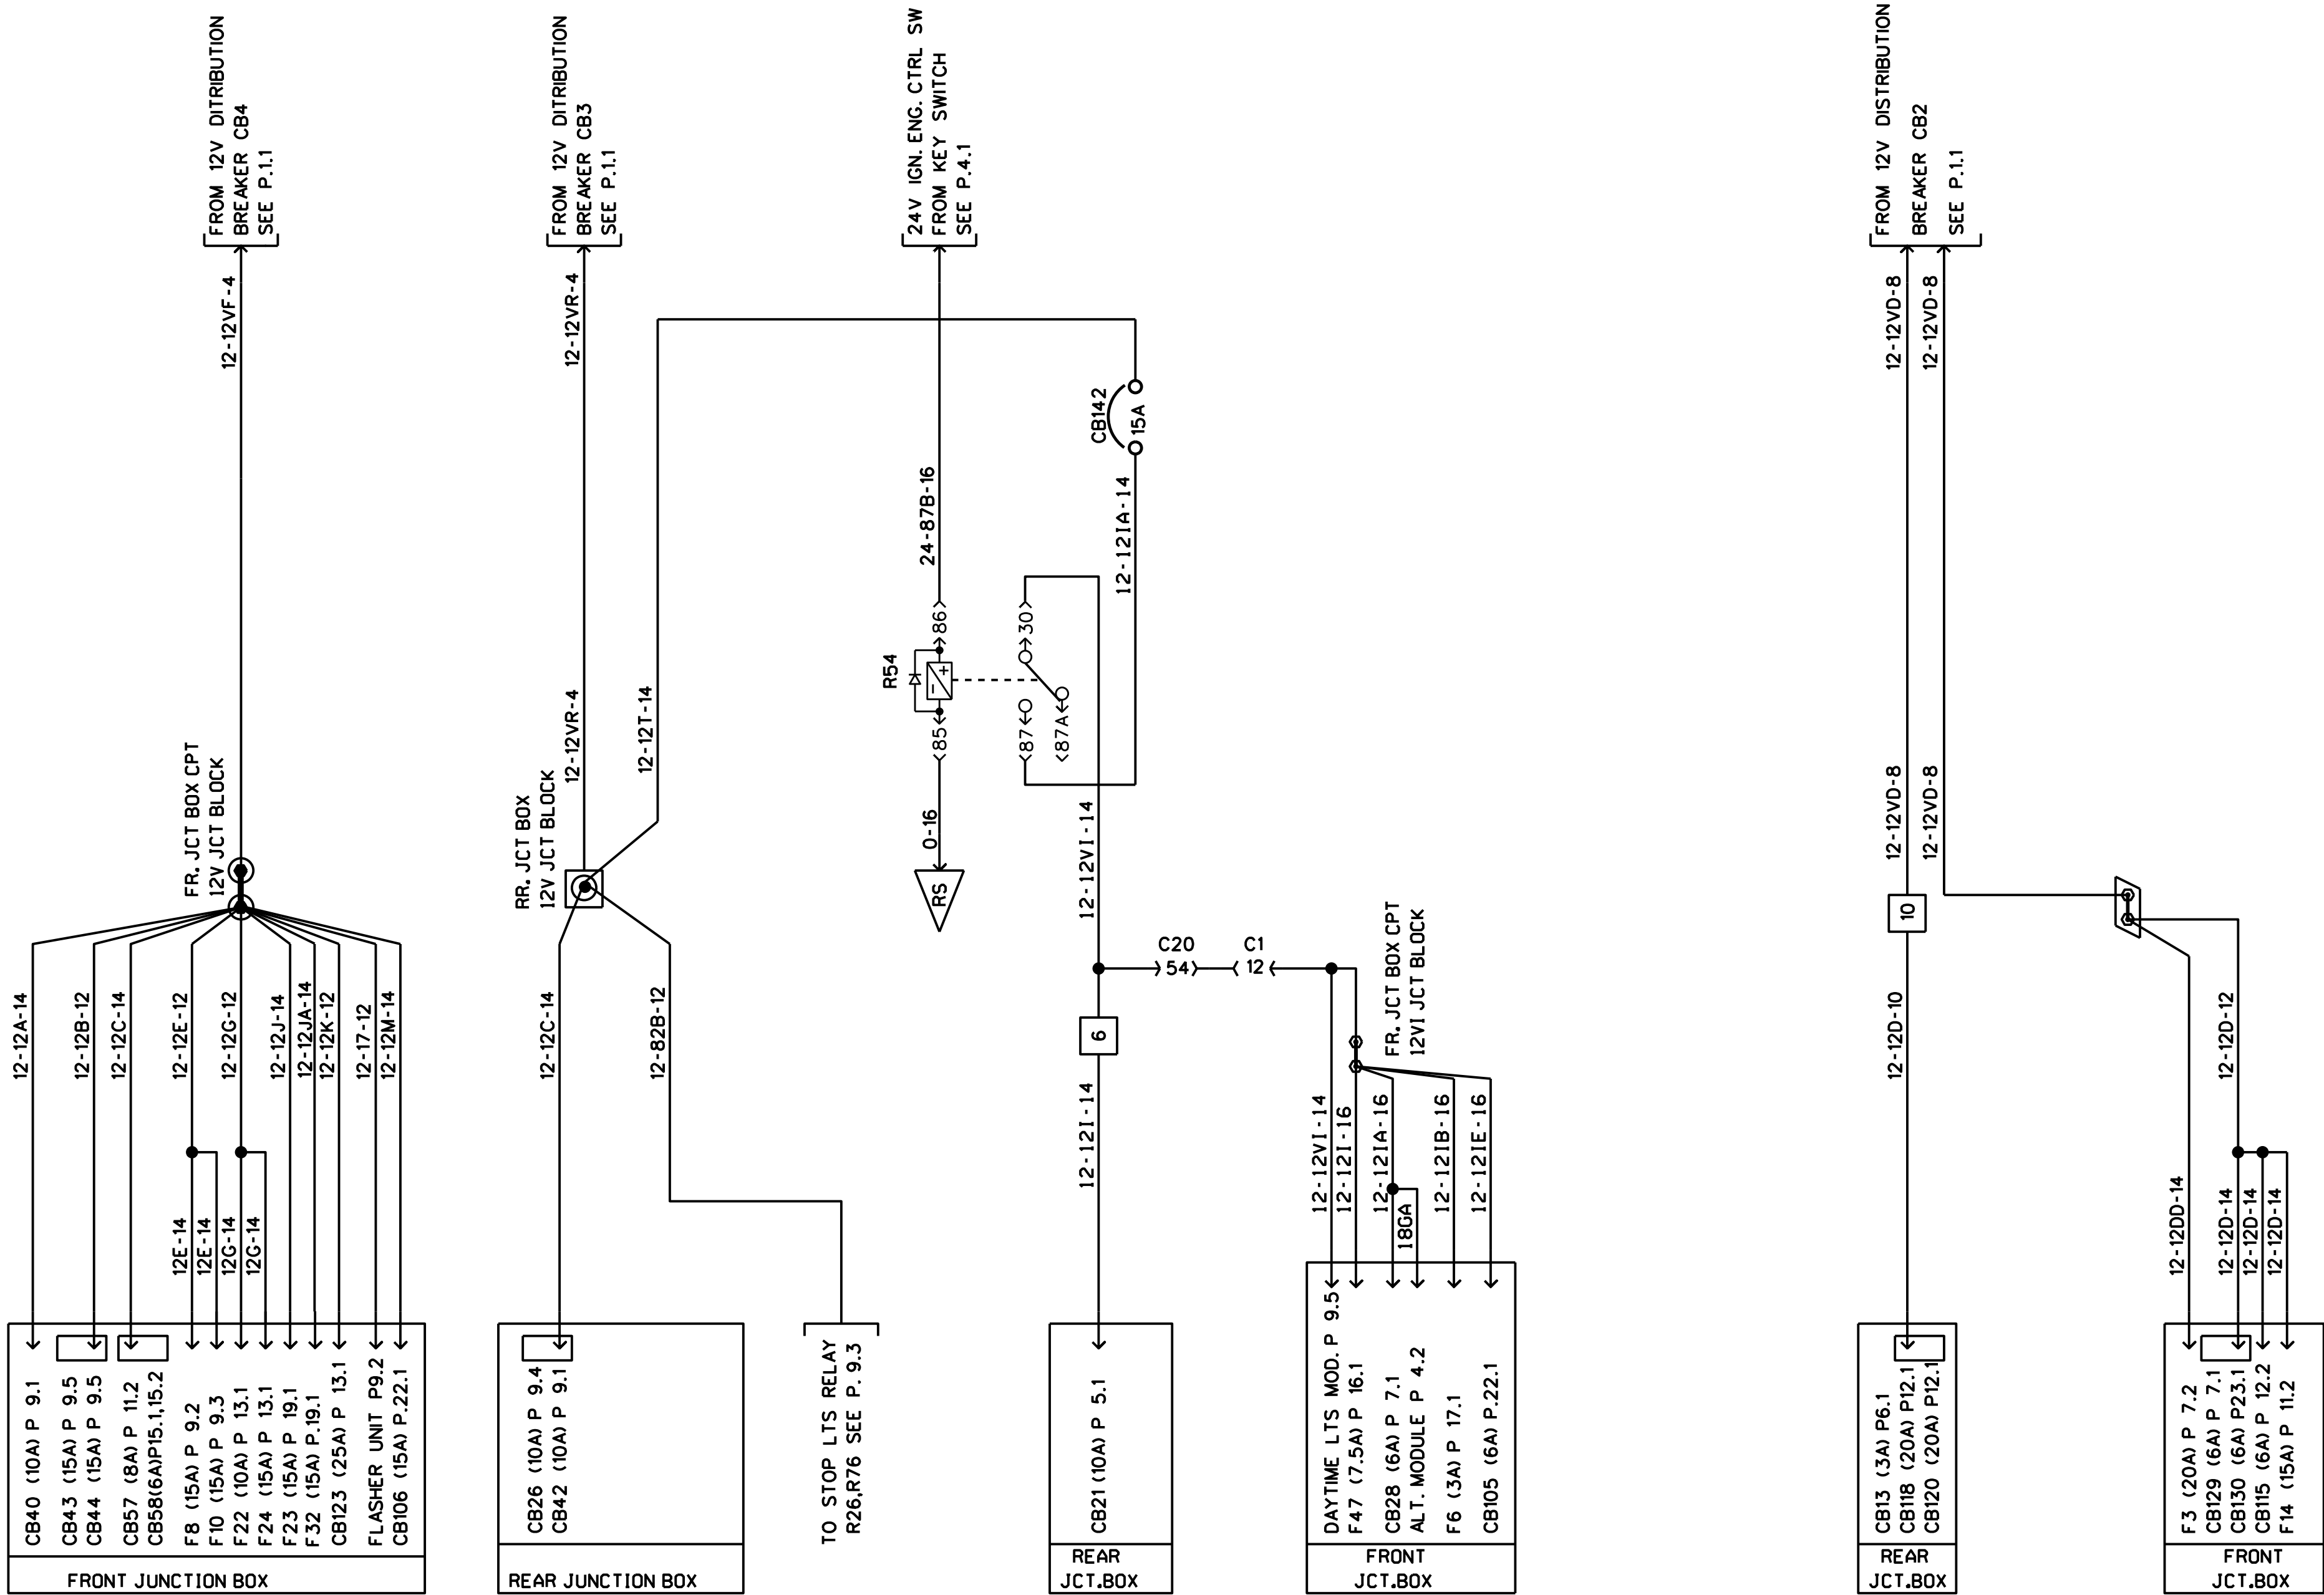

FRONT SECTION

FRONT JUNCTION BOX COMPARTMENT



SOL. CUT-OUT PNEUMATIC ACC. C586 P. 7.2
WATER PUMP C157 P. 15.1
DRIVER LIQ. SOL. VALVE C105 P. 15.1
DRIVER WATER VALVE C106 P. 15.1
PARK BRAKE PRESS. SWITCH P. 8.1 C48(1)
KEYLESS ENTRY SYSTEM P. 12.1

COIL RELAY CONTROL FR. JCT BOX
BACK ALARM CANCEL SW. C278 P. 9.3
3-WAYS SW. DRIVER'S LTS P. 11.2
SIDE FRONT FLASHER & MARKER LAMP P. 9.1
R.H. HEADLAMP, FLASHER & MARKER P. 9.1, 9.2
L.H. HEADLAMP, FLASHER & MARKER P. 9.1, 9.2
FRONT DOCKING/CORNERING LTS P. 9.2
SPARE NOT USED
FOG LIGHT P. 9.3
AIR DRYER P. 8.1 C116(8)
L.H. CENTRAL MARKER & FLASHER P. 9.1
SPARE FOR MARKER & FLASHER ADD. (FR. LUGG.)
L.H. CONSOLE DASH - MARKERS L.H. CENTER
R.H. CENTRAL MARKER & FLASHER P. 9.1
SPARE FOR MARKER & FLASHER ADD. (RR. LUGG.)

WIPER'S MOTOR C176, C177 P. 10.1
R.H. MIRROR C269, C590 P. 16.1
DEFROSTER UNIT C480 P. 15.1
WINDSHIELD WASHER C96 P. 10.1
ELECTRICAL HORN C101 P. 7.2
DRIVER'S SEAT C483 P. 13.1
SUN VISOR SWITCH C315, C317 P. 19.1
L.H. MIRROR C268, C589 P. 16.1
L.H. CONSOLE SW. C318 (P. 19.1) C591, C592 (P. 16.2)
EVAP. FAN SPEED CONTROL DASH C428 P. 15.3
WINDOW LIFTER OF ENTRANCE DOOR C359 P. 19.1
LED INSIDE DASH SWITCH
SW. DISPLAY CLUSTER C598 P. 7.1
AUXILIARY FAN SPEED CONTROL C428 P. 15.3
TELL TALE LIGHT MODULE C570 P. 23.1
WINDOW AJAR SWITCH P. 20.1
ANTI-THEFT LED INDICATOR C381 P. 12.1
CLUSTER LY, LX, CY P. 7.1
LUGG. DOOR LOCK SWITCH C310 P. 12.1
DDR CONNECTOR SEE P. 5.1
ALTERNATOR SIGNAL MODULE C43 P. 4.2
12 VOLTS POWER OUTLET P. 13.1
HVAC DASH MODULE P. 15.1 & 15.2

CHASSIS GROUND

FRONT
JCT
BLOCK



FRONT
SERVICE
COMPT.



REAR SECTION

REAR JUNCTION BOX CPT.



FIRE DETECTOR P. 7.2
TAIL, B/U, FLASH, STOP LAMPS L.H. P. 9.1
TAIL, B/U, FLASH, STOP LAMPS R.H. P. 9.1
SMALL A/C COMPRESSOR CLUTCH C280 P. 15.1
DRIVER'S AIR A/C PRESS. SW. C62, C63, C65 P. 15.1
FULL AIR A/C PRESS. SW. C52, C53 P. 15.2
12V & 24V MASTER RELAY P. 1.1
FUEL WATER FILTER C61 P. 8.1
AUX. LTS P. 9.3 - RR CLEARANCE LTS P. 9.1
REAR SIDE MARKERS & FLASHERS P. 9.1
WATER PRE-HEATER C257, C259 P. 14.1
VOLTAGE REGULATOR (DELCO ONLY) P. 4.3

RELAY COIL & LAMP INSIDE REAR. JCT BOX
SW. MANUAL TRANS. (NOT USED) C326(B)
FAN CLUTCH RELAY C508(3), R78, R79 P. 8.1
FIRST SPEED FAN CLUTCH A/C CTRL R34 P. 15.1
LUGG. DOOR LOCK R69, R70, R74, R75 P. 12.1
FUEL PRIME PUMP C231 P. 19.1
PREHEAT C257, C259 P. 14.1

EVAPORATOR
COMPT.



CONDENSER
COMPT.



FRONT
JUNCTION
BOX





A/C JUNCTION BOX ACCESSORIES
PASSENGER LIQUIDE SOL. VALVE C102 P. 15.3
WATER PUMP C389 P. 15.3
BY-PASS VALVE C387 P. 15.3
FUEL GAUGE TANK P. 7.1
CONDENSER FAN P. 15.3


CONDENSER FAN P. 15.3


SW. T.T.L.T. TEST C548 P. 23.1
CLUSTER LX & RX P. 7.1
MODULE T.T.L.T. C570 P. 23.1


BATTERY
GROUND

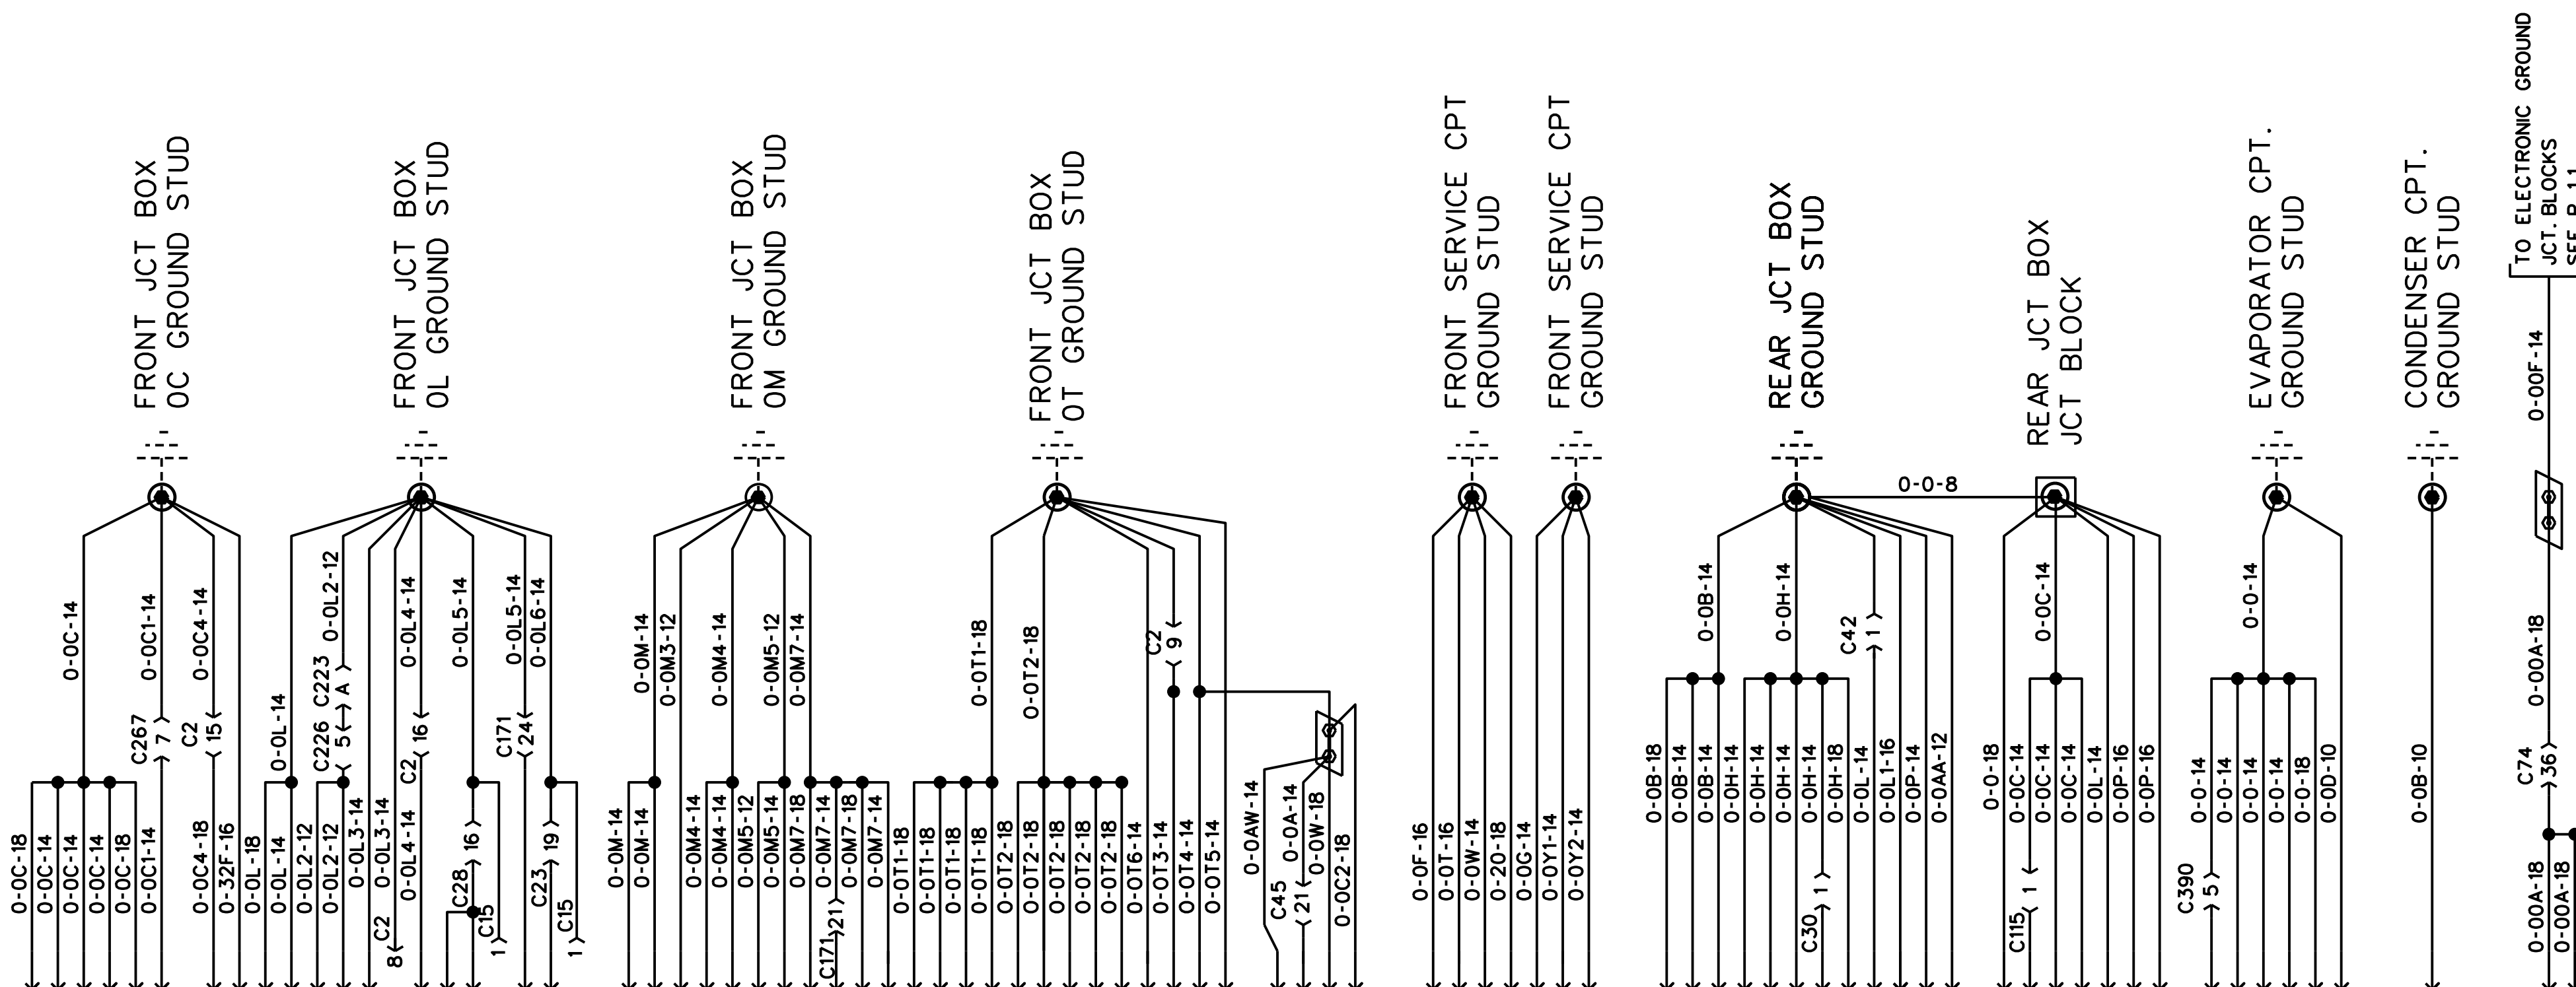

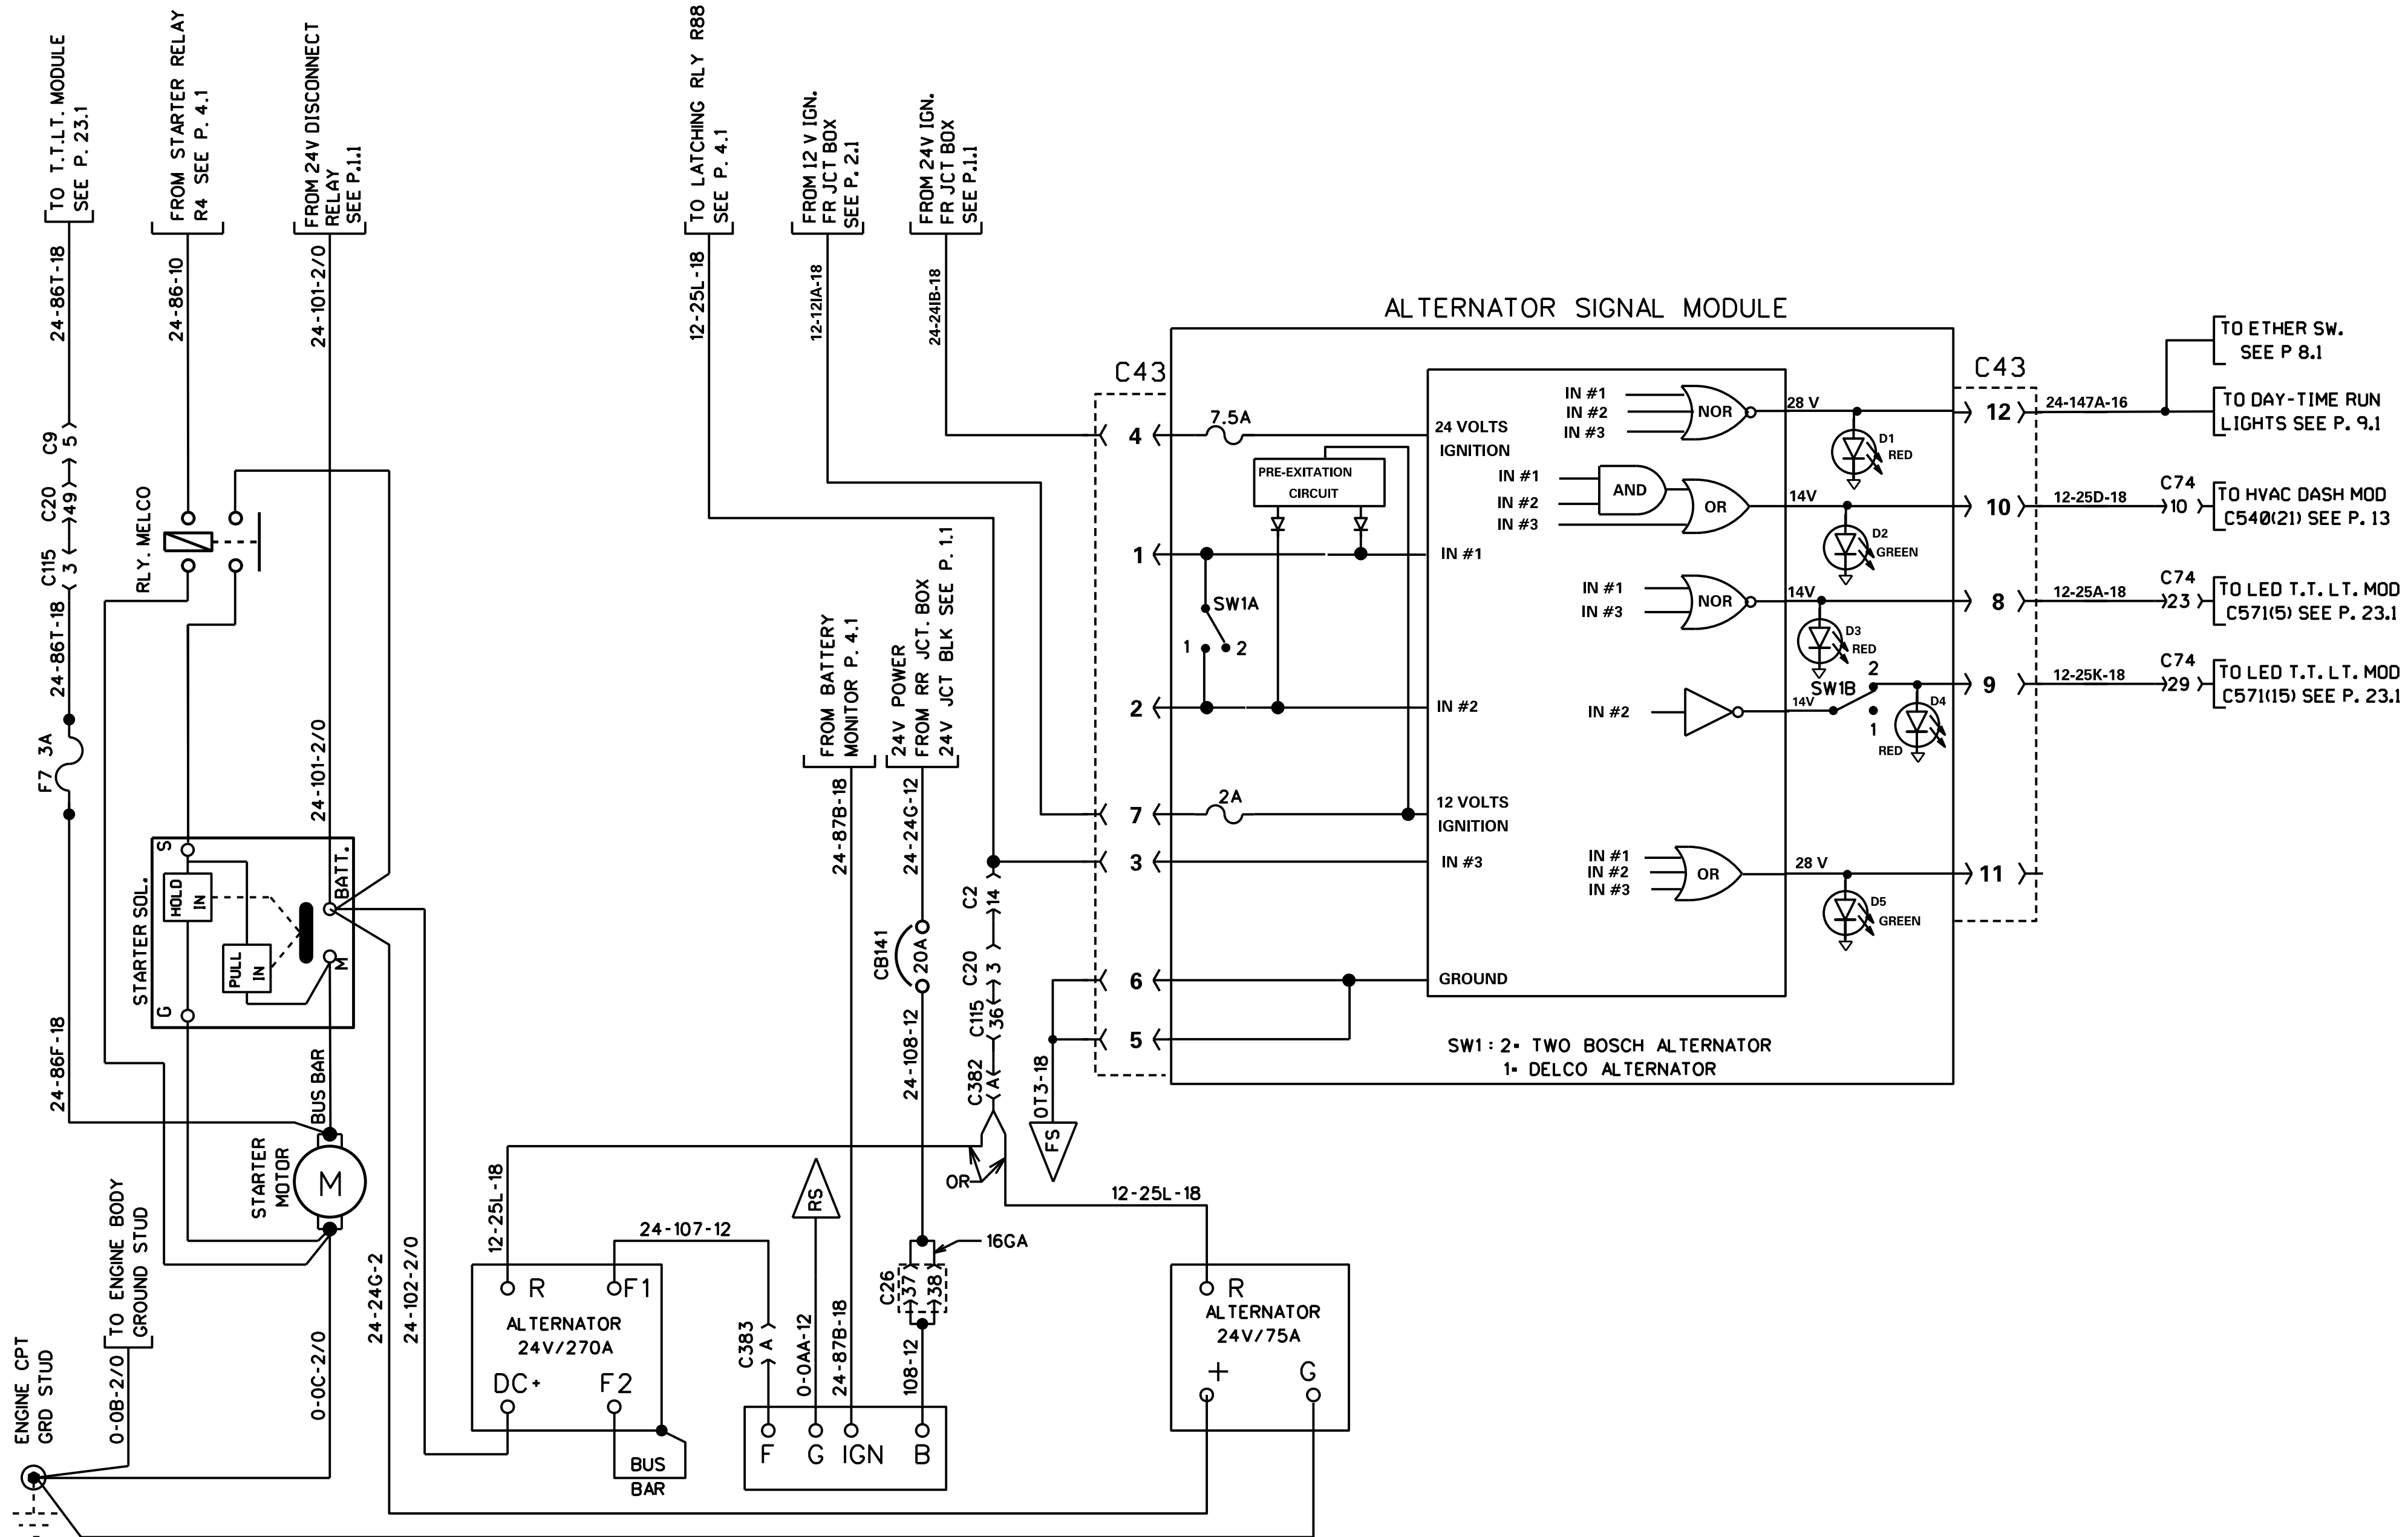

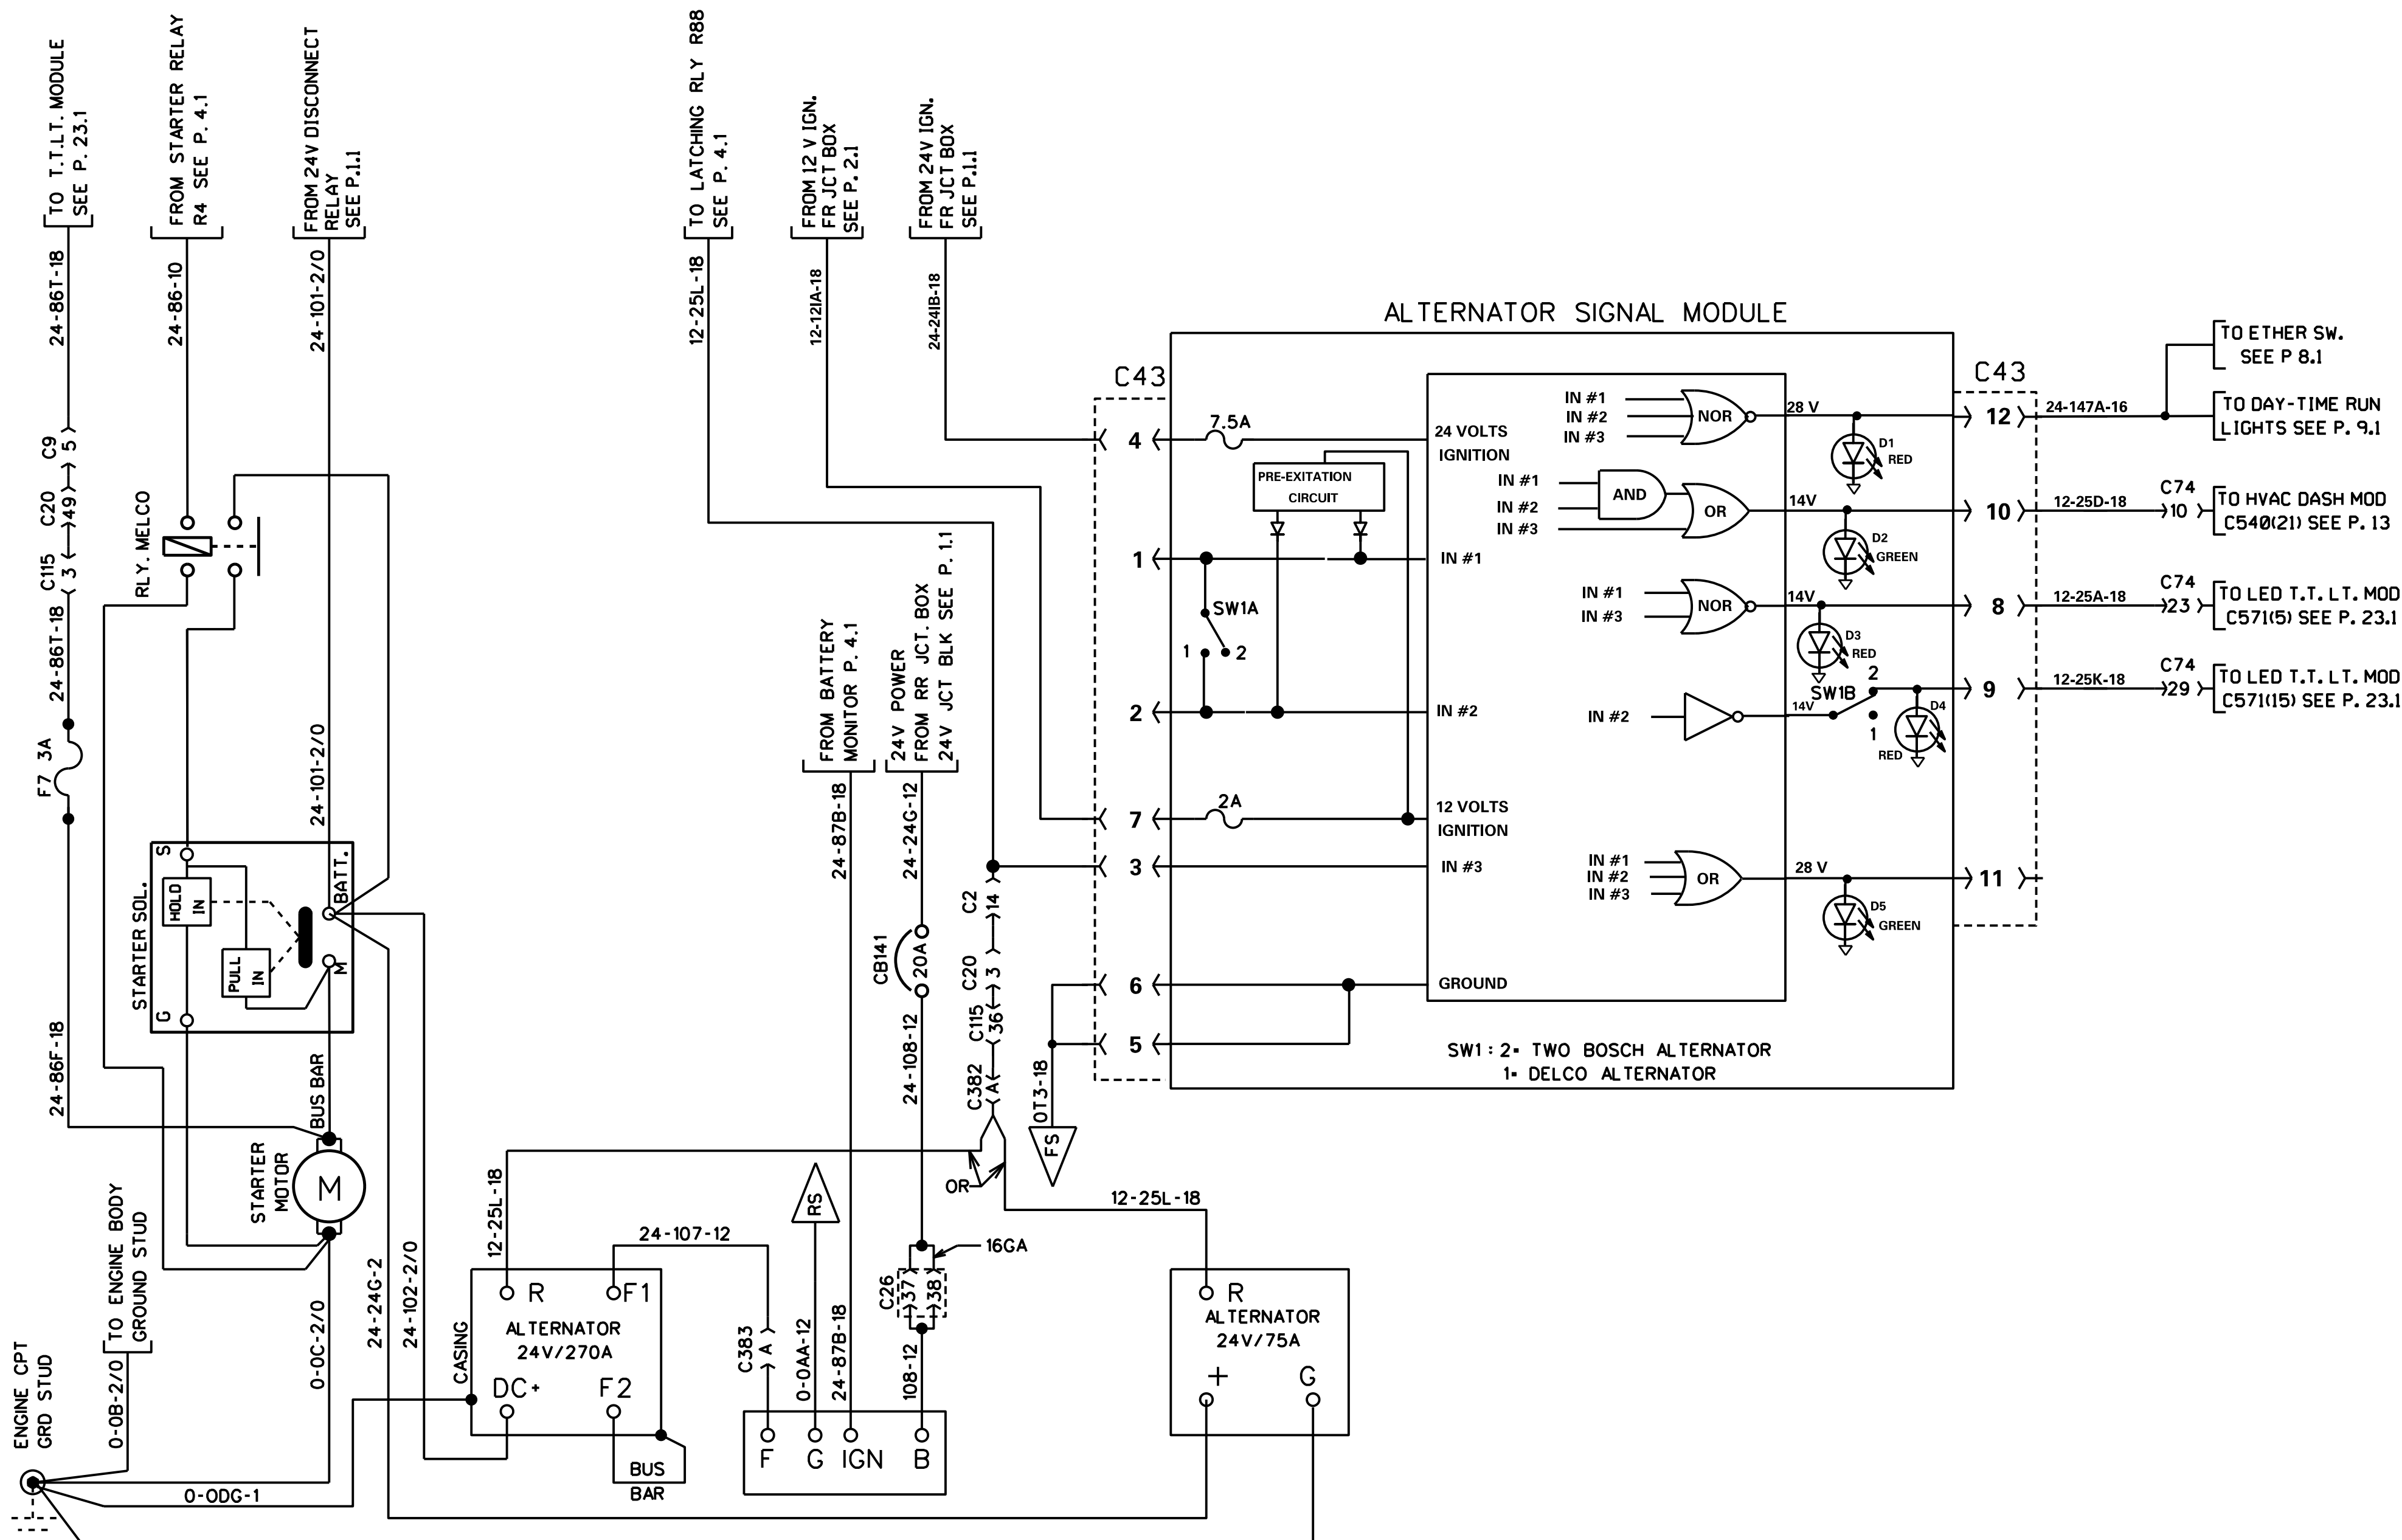


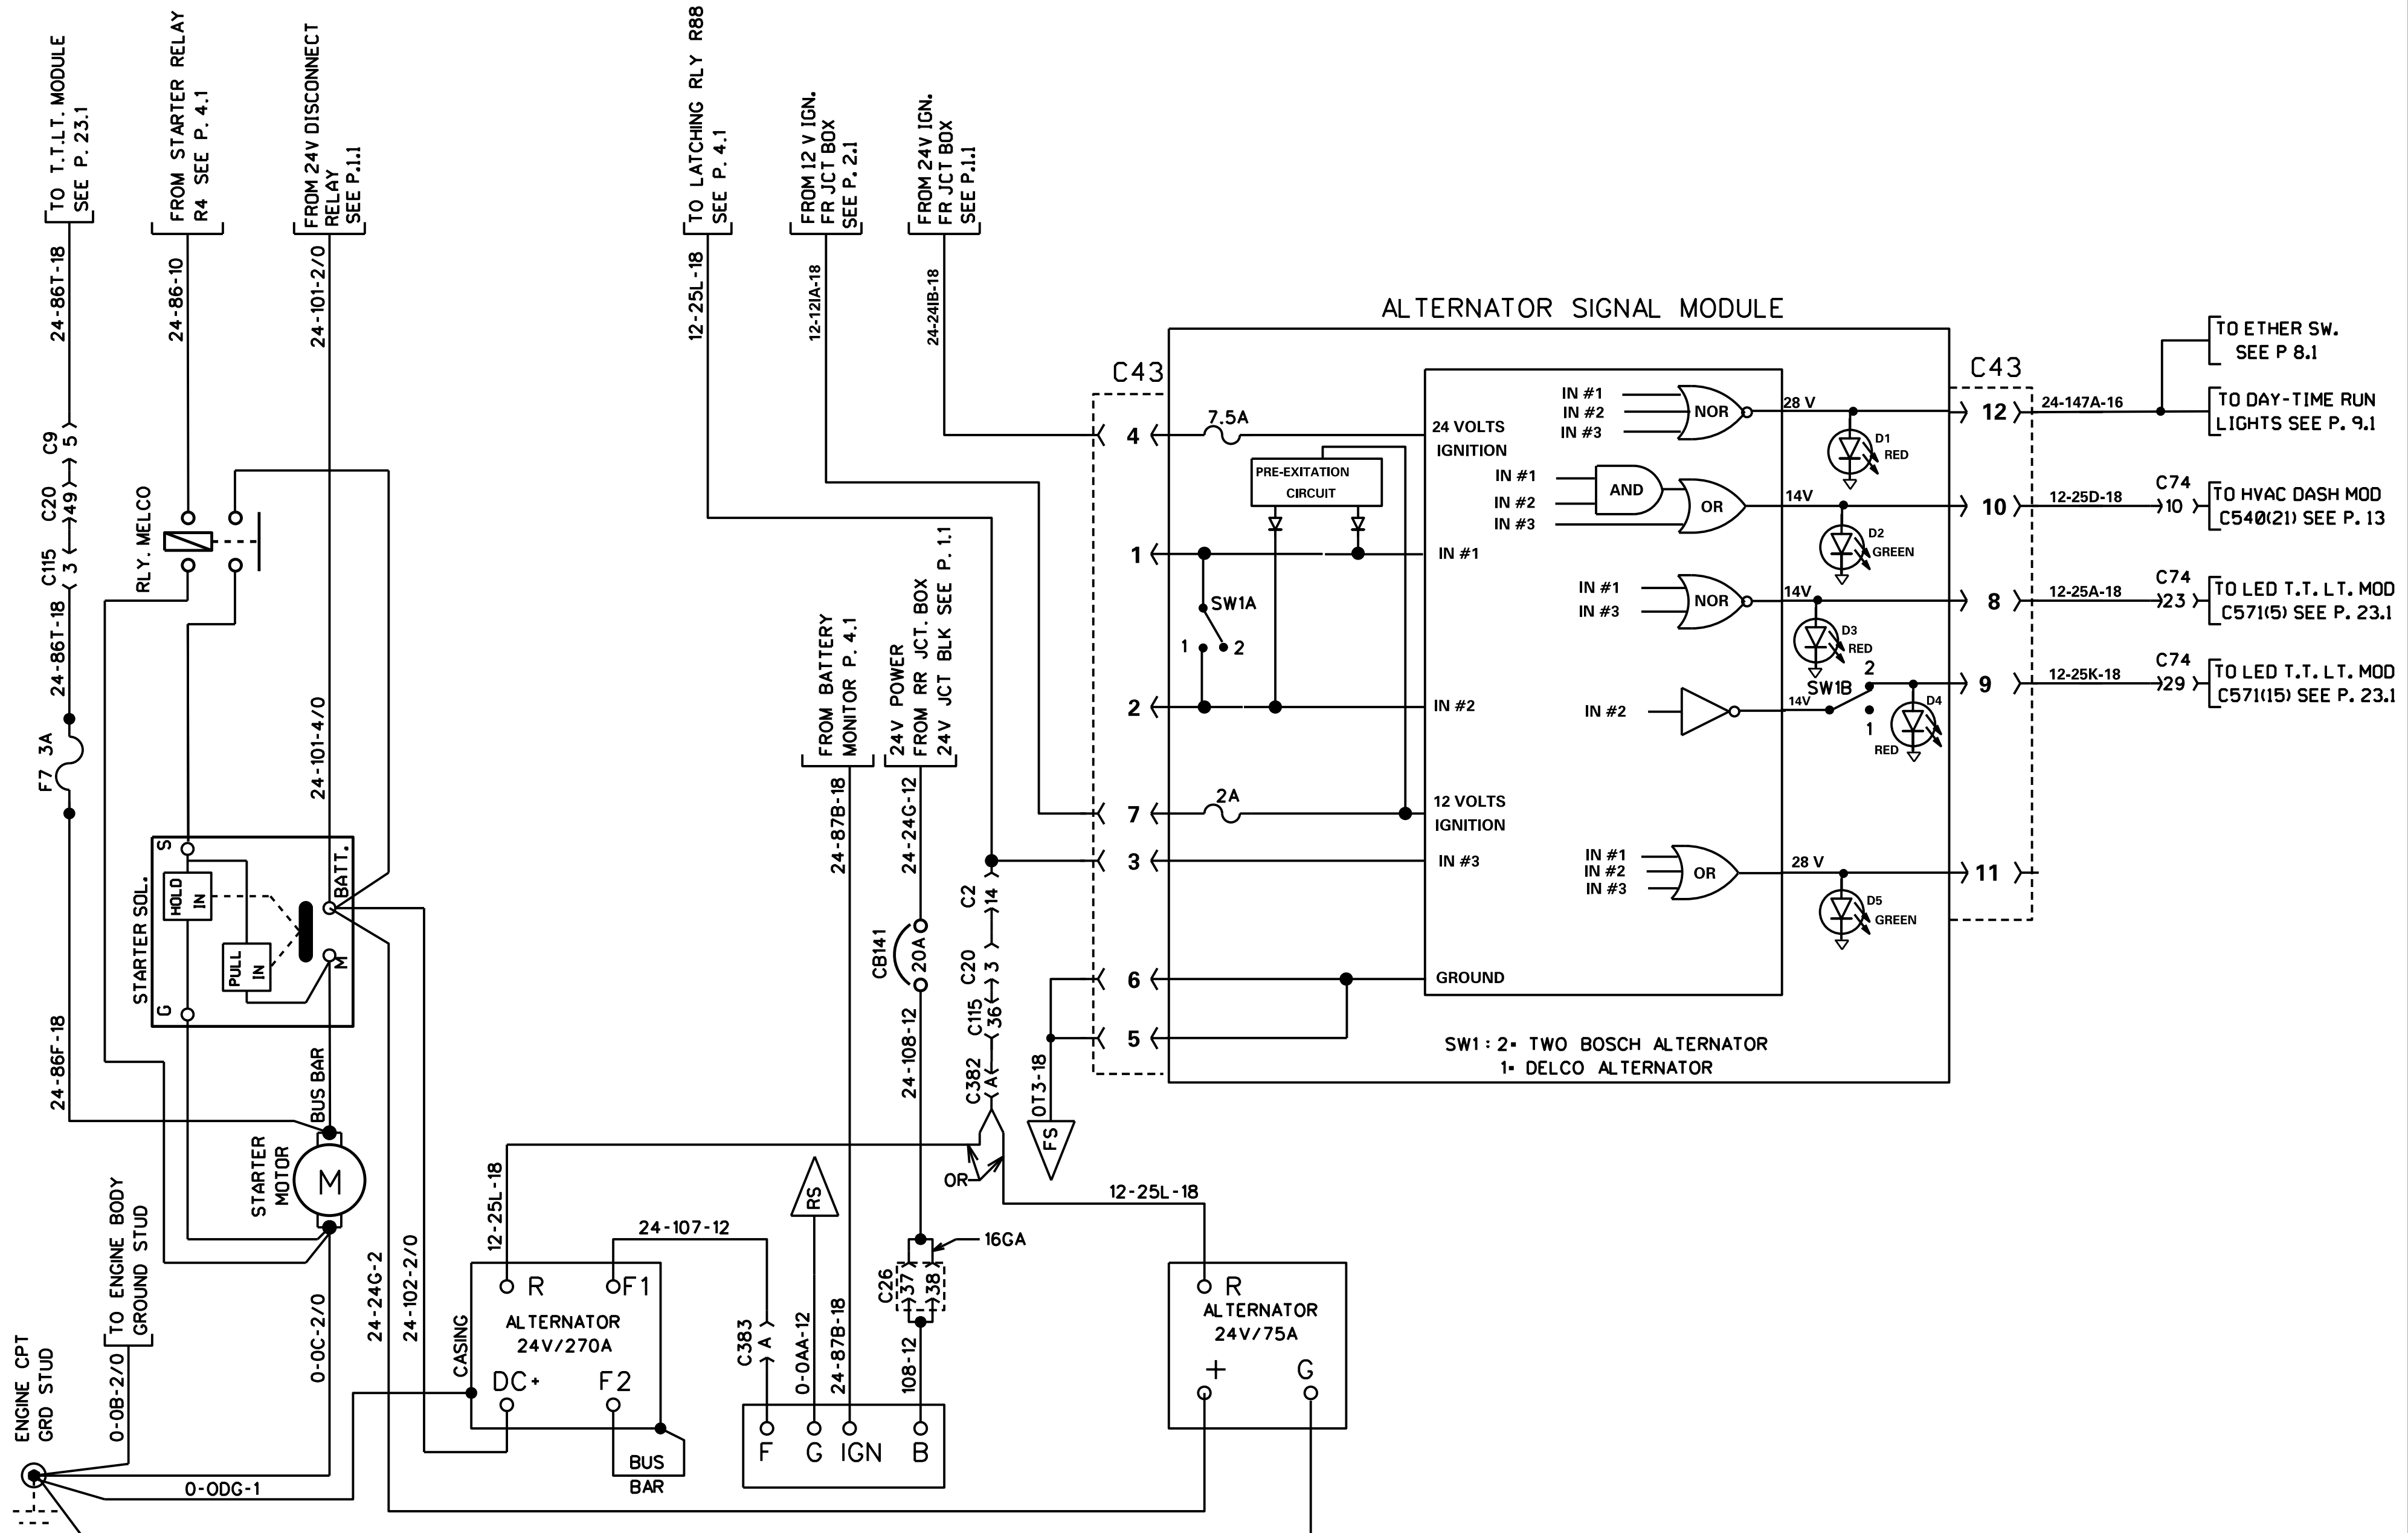

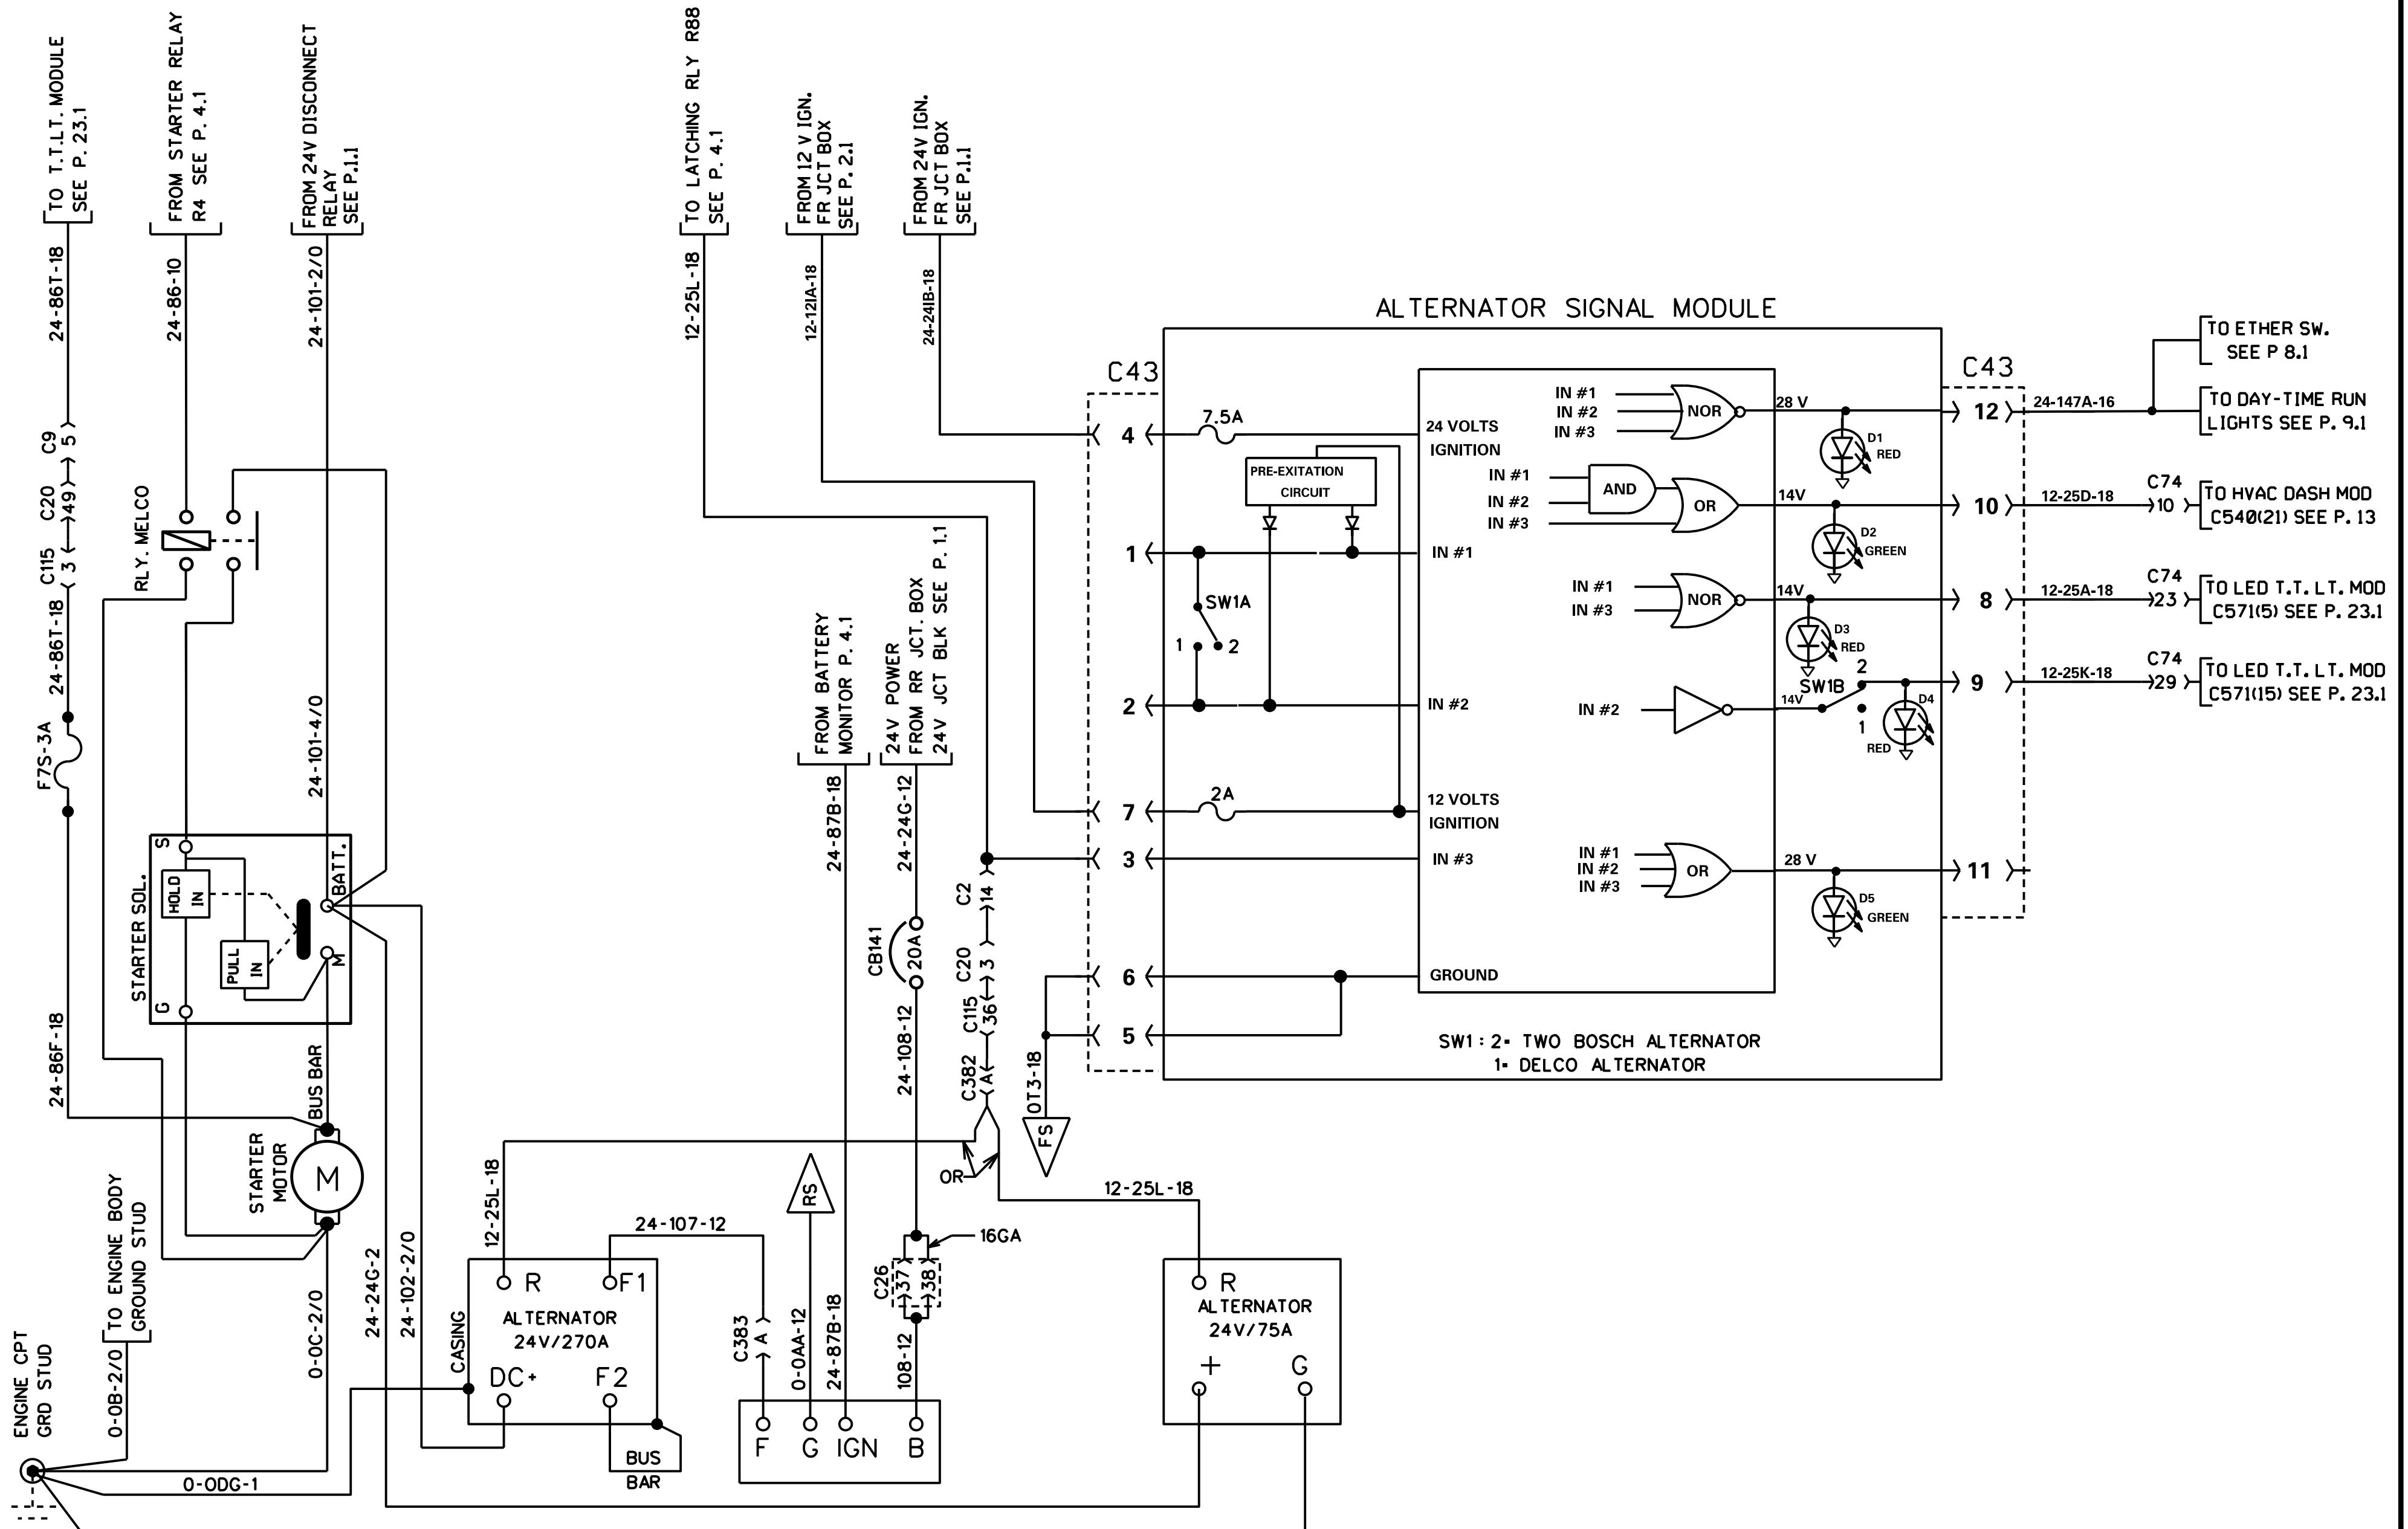


DELCO ALTERNATOR
24V/270A WITH FULL AIR

DELCO ALTERNATOR
24V/75A WITH DRIVER'S AIR

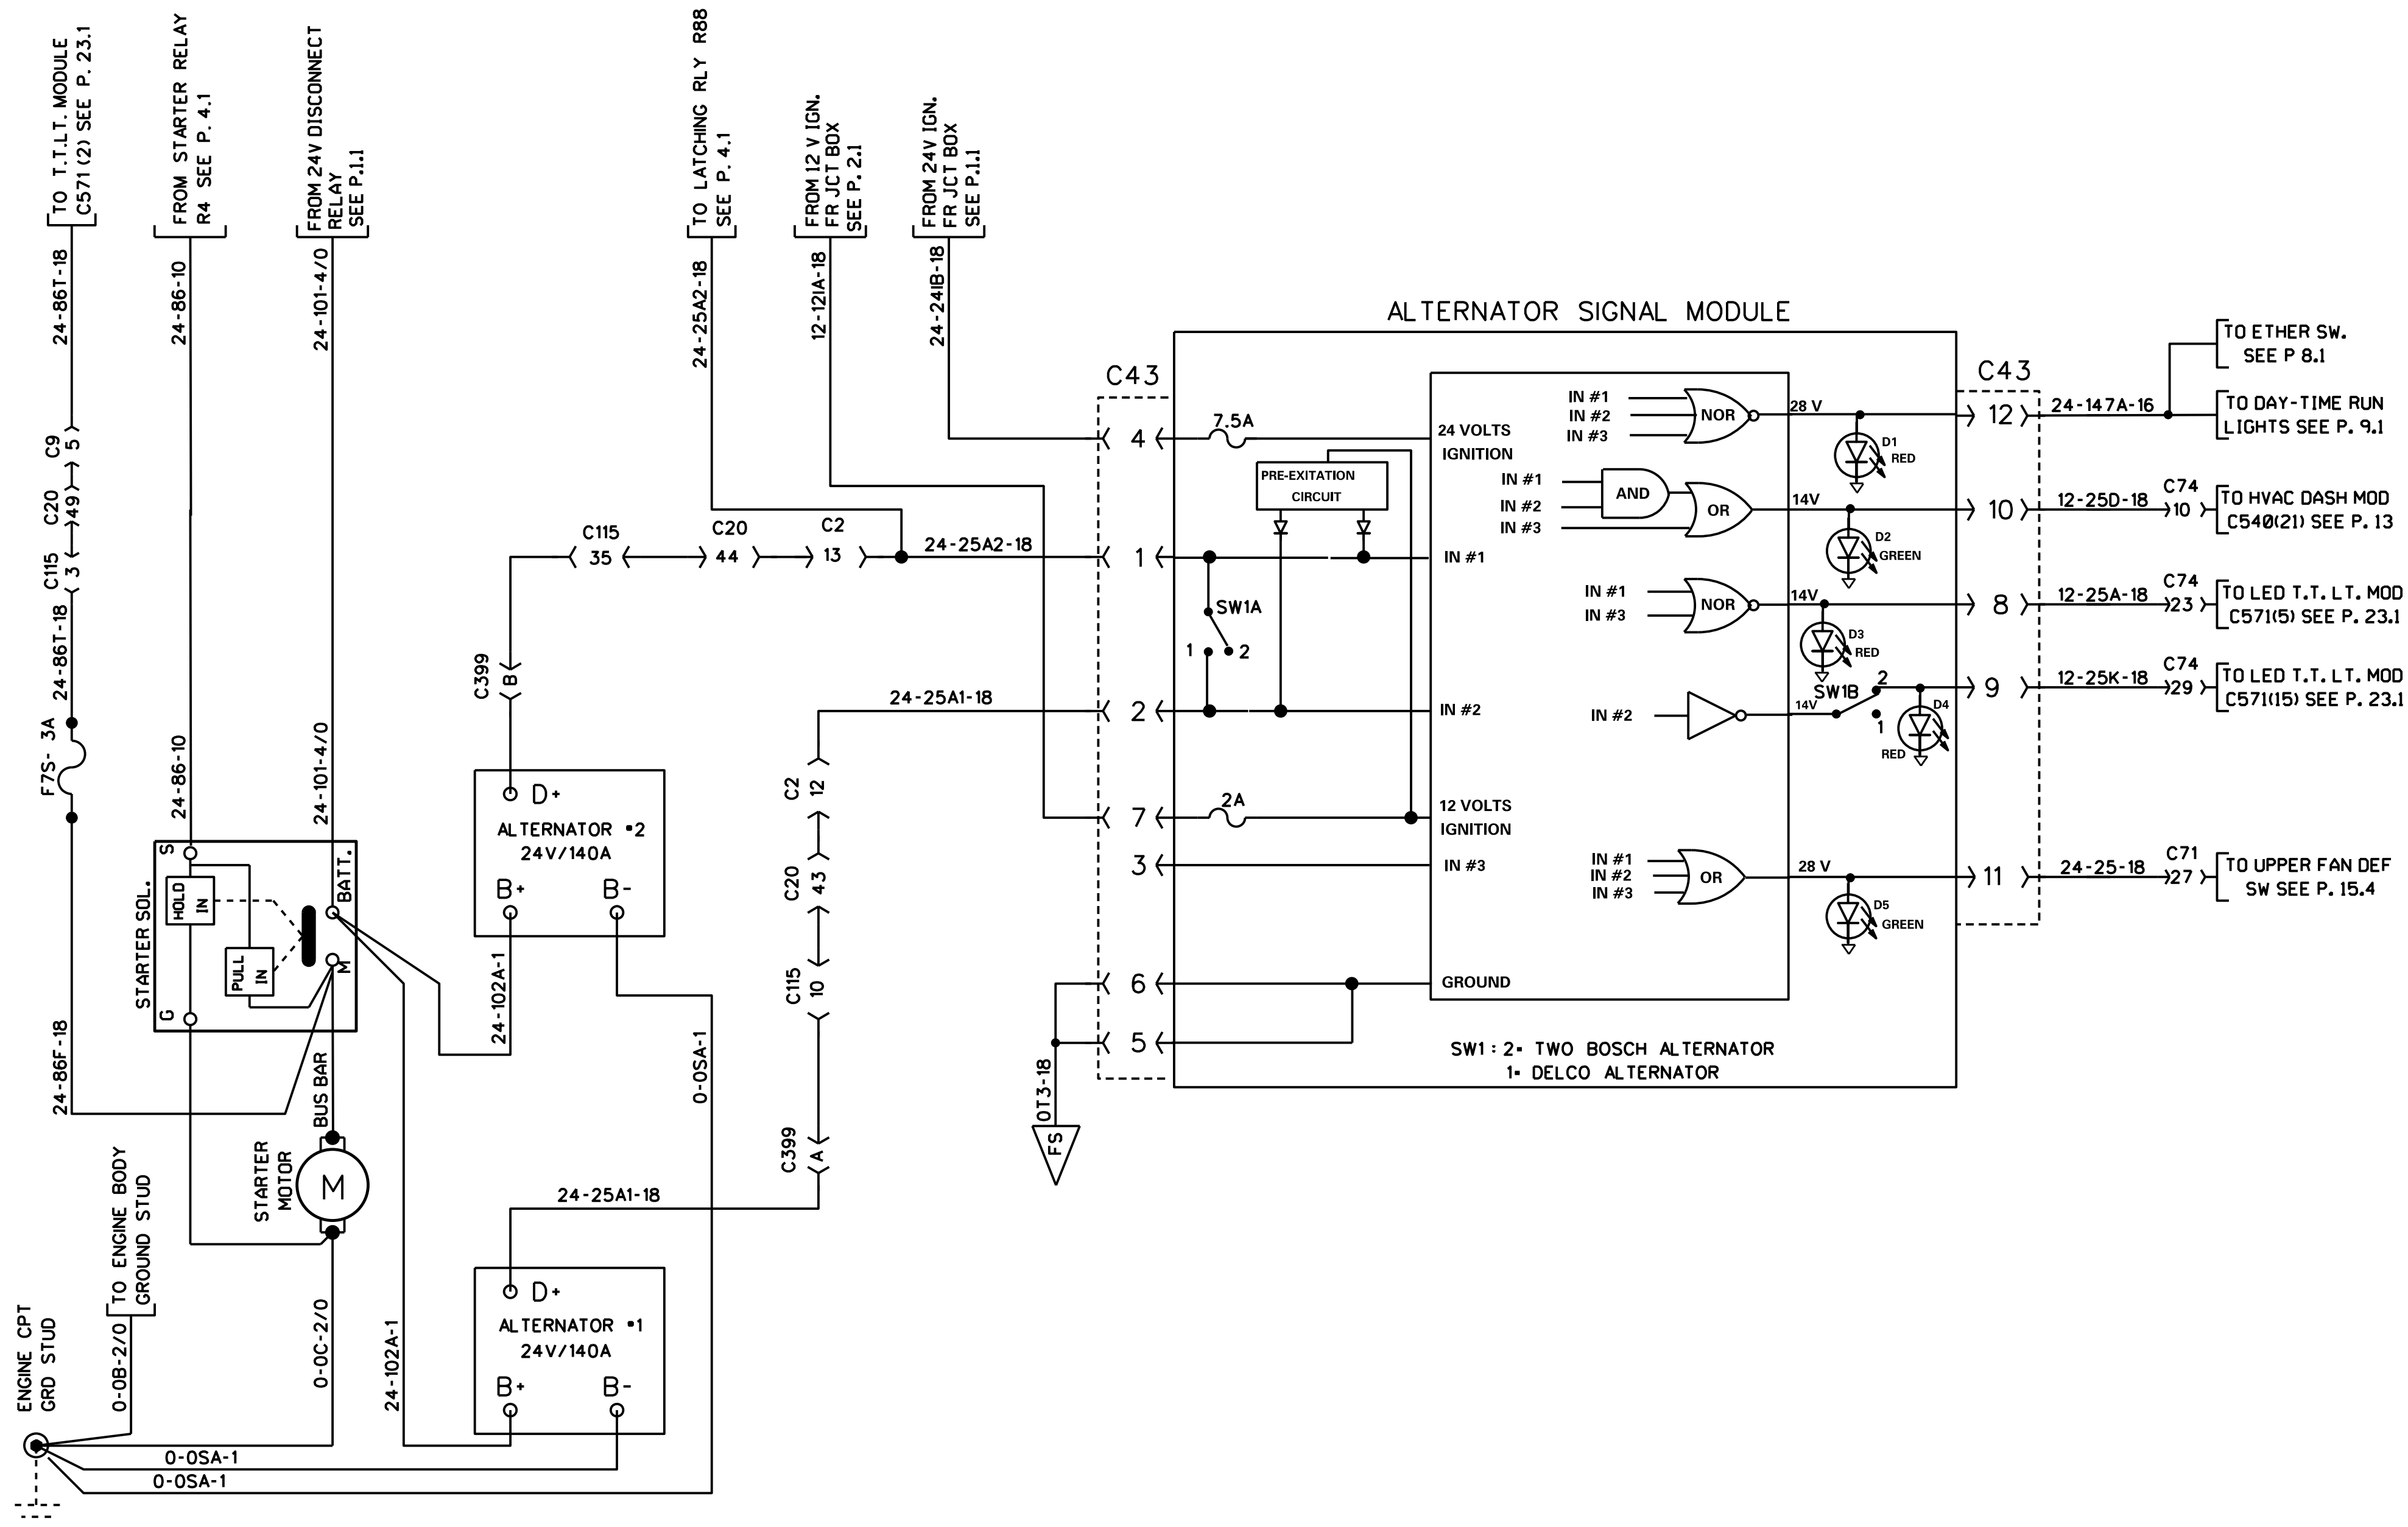

STARTER | DUAL BOSCH ALTERNATOR – WE ENTERTAINER ONLY

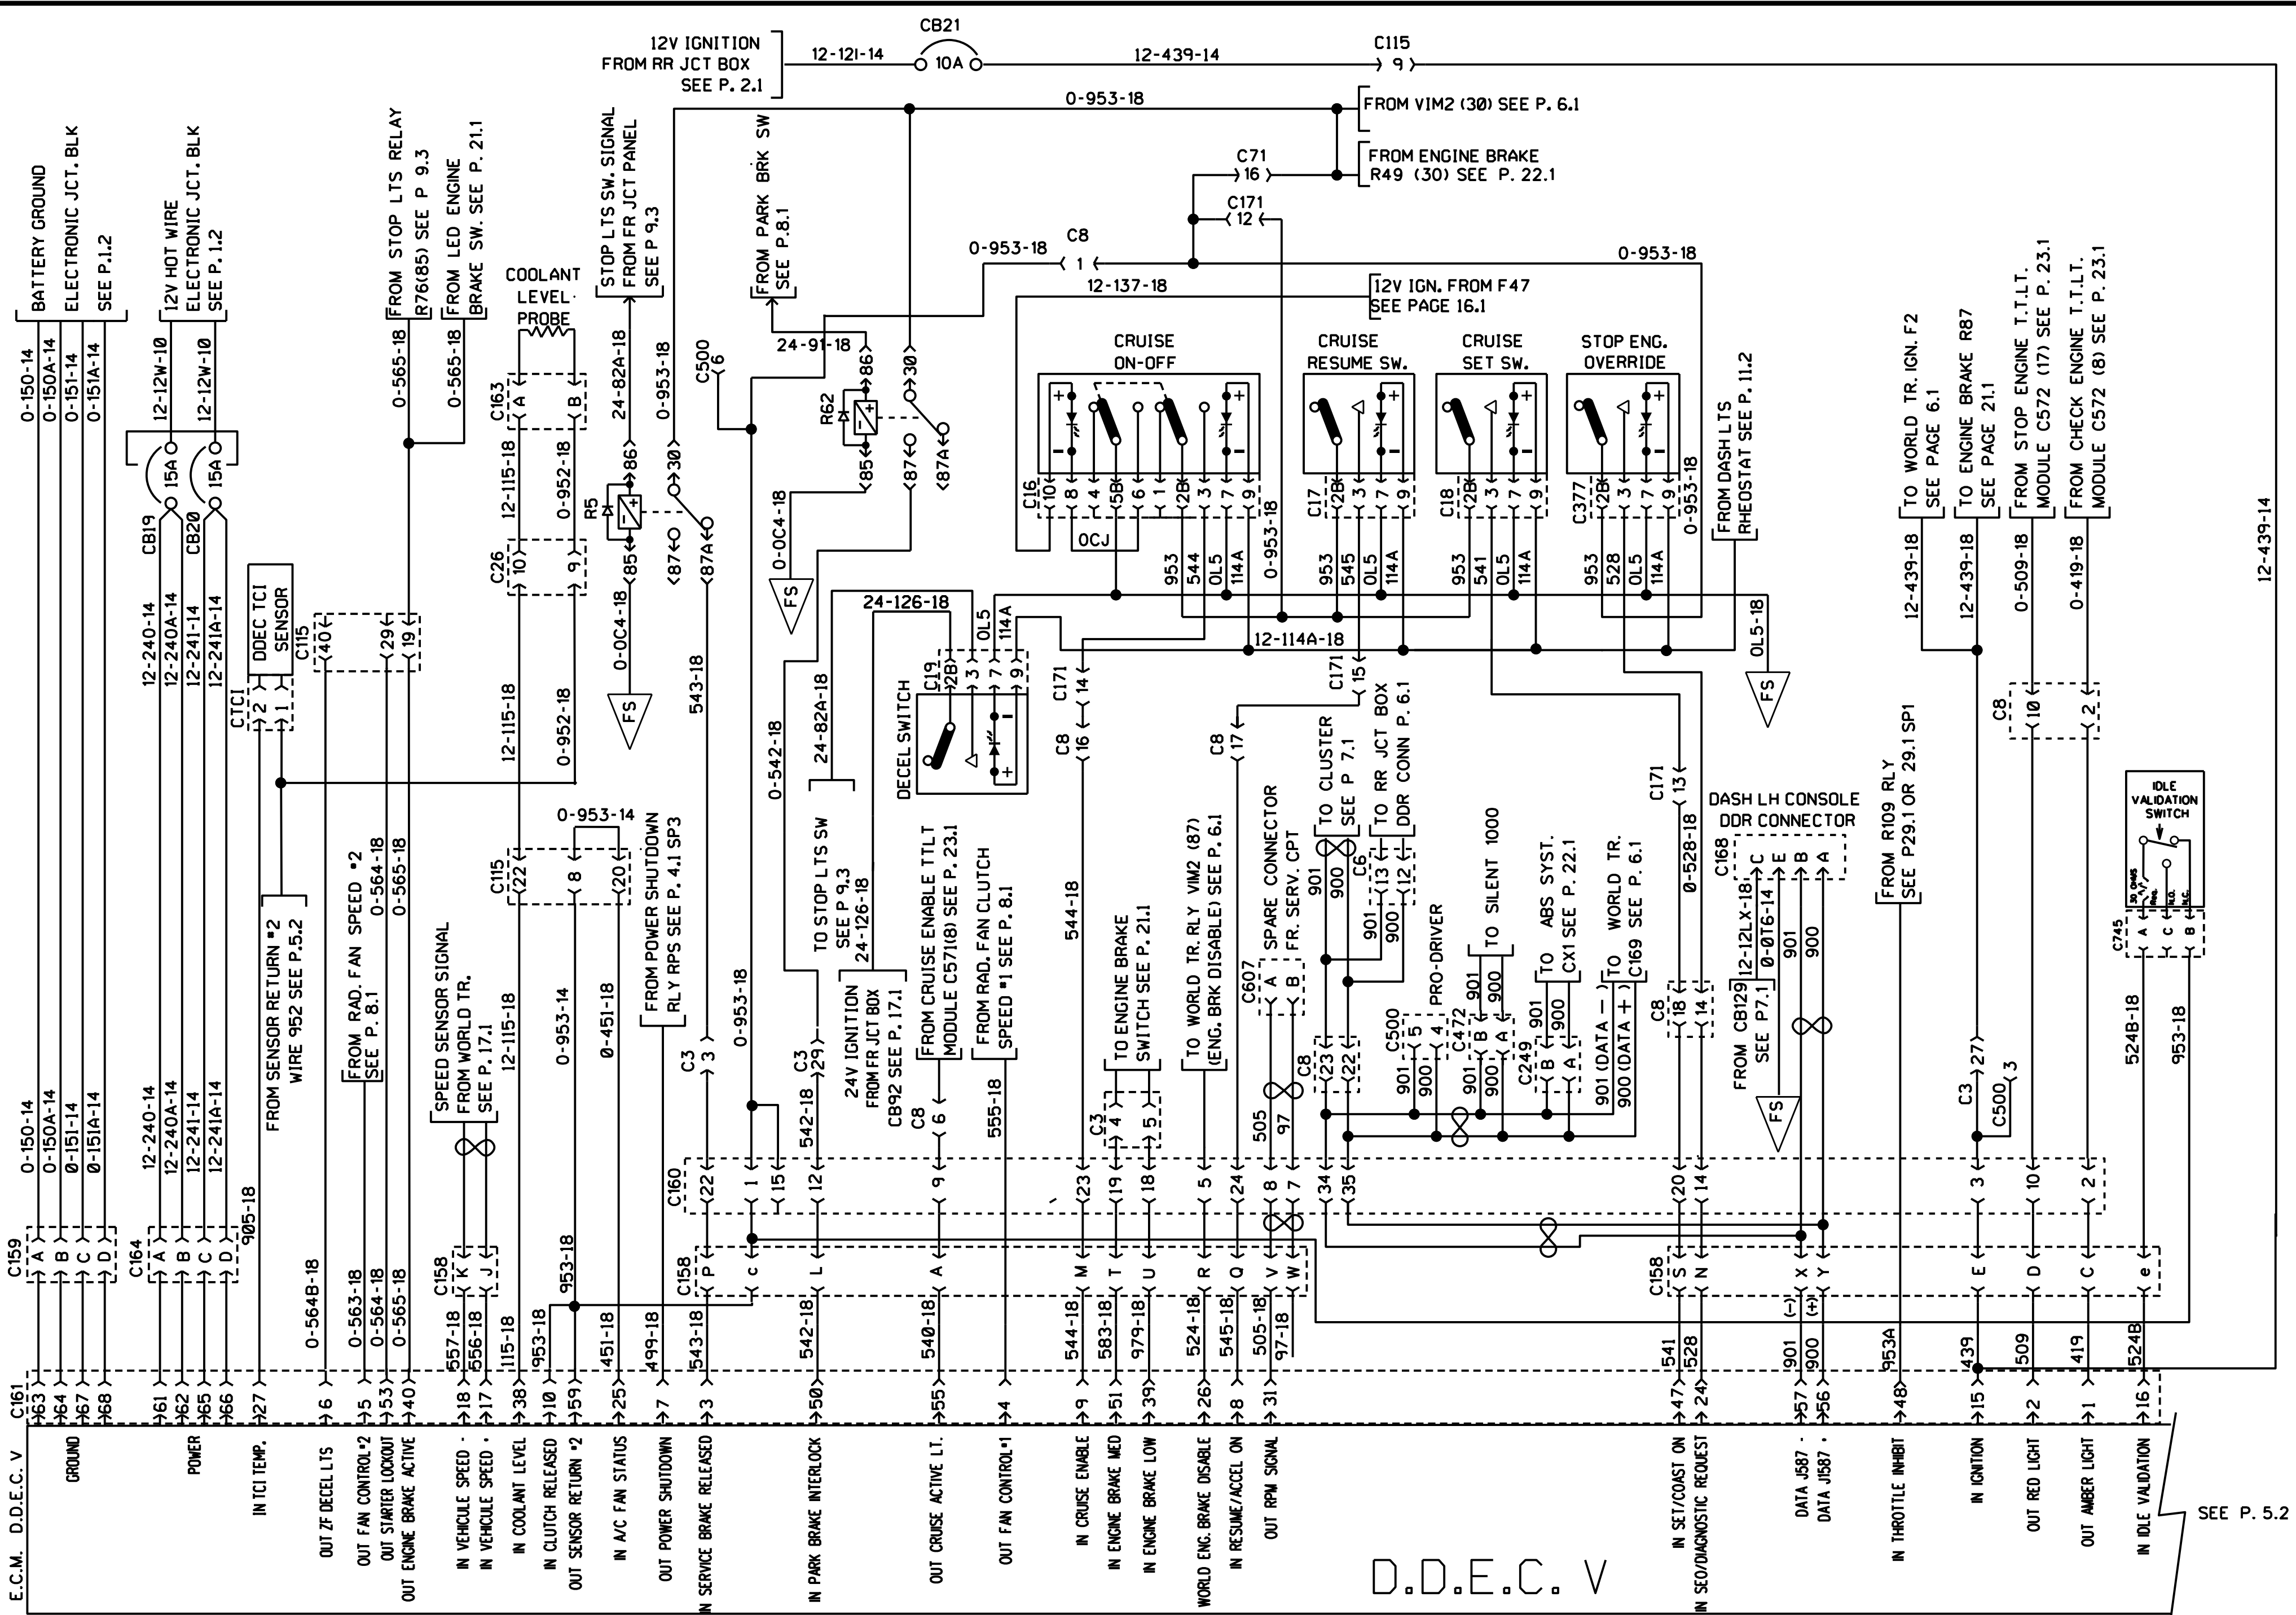









WORLD TRANSMISSION E.C.U.

PREVOST

WIRING DIAGRAM


NO:

0060994


PAGE:

6.1


REVISION
07

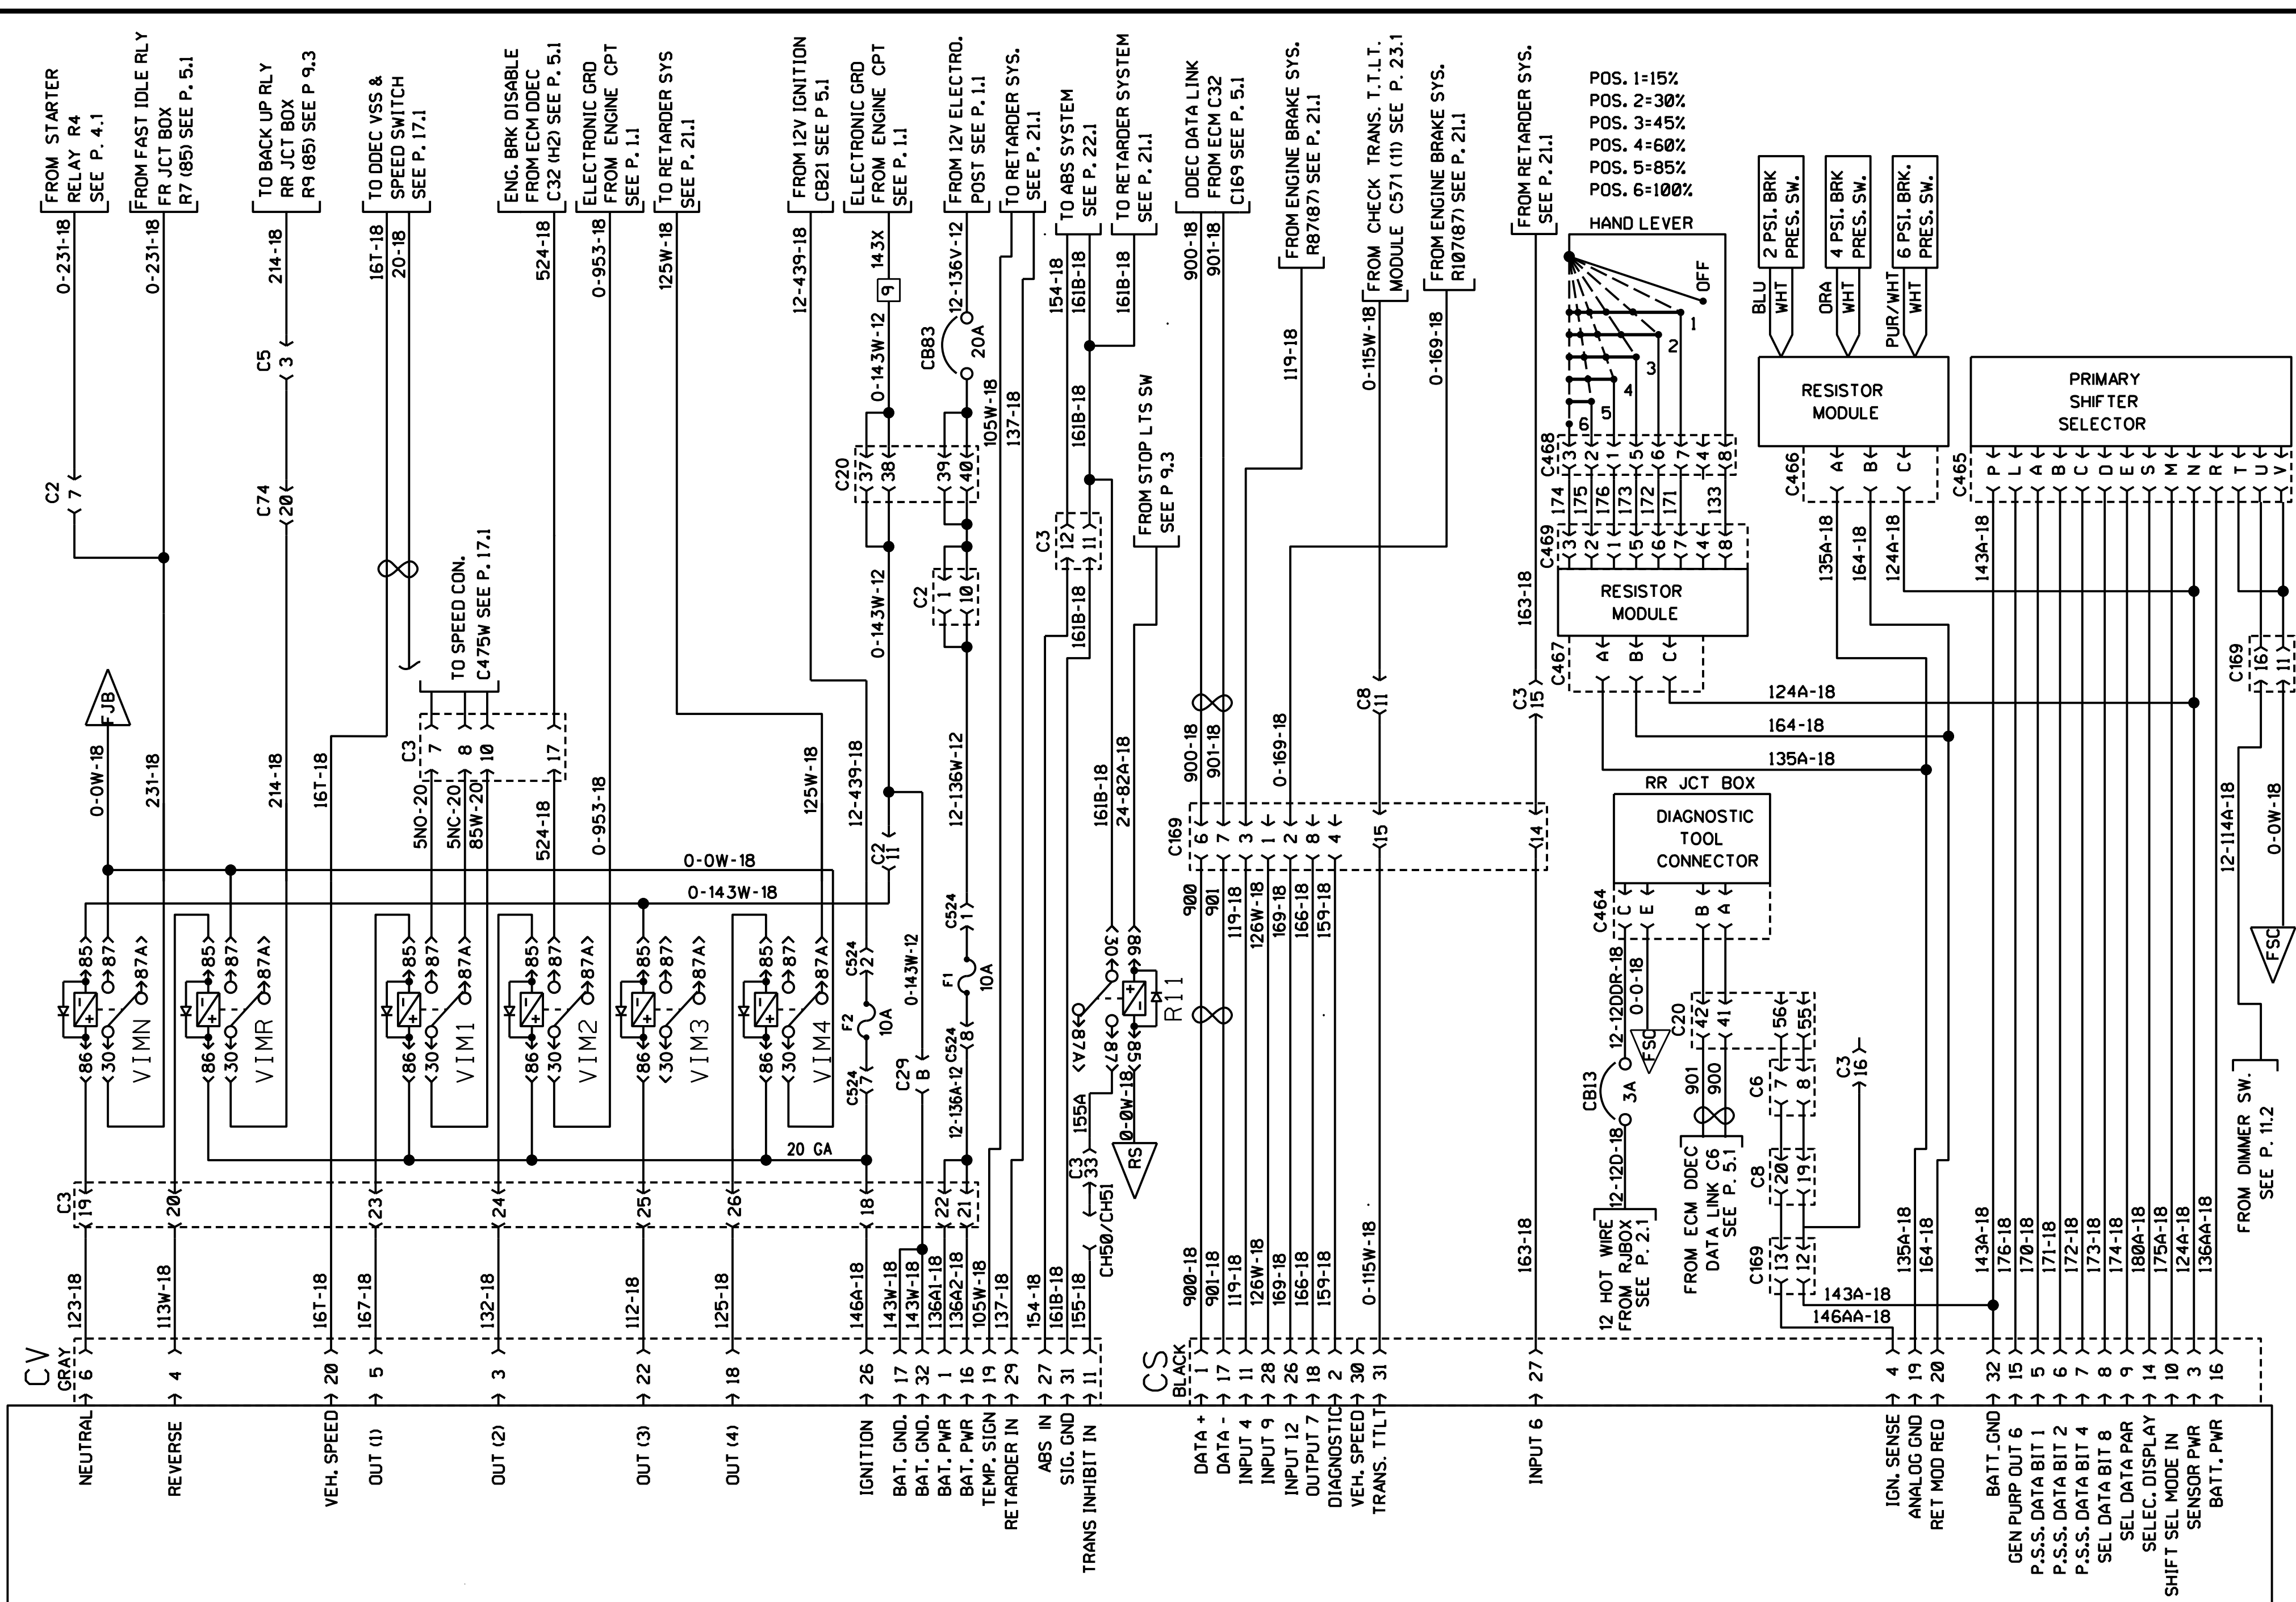



CV

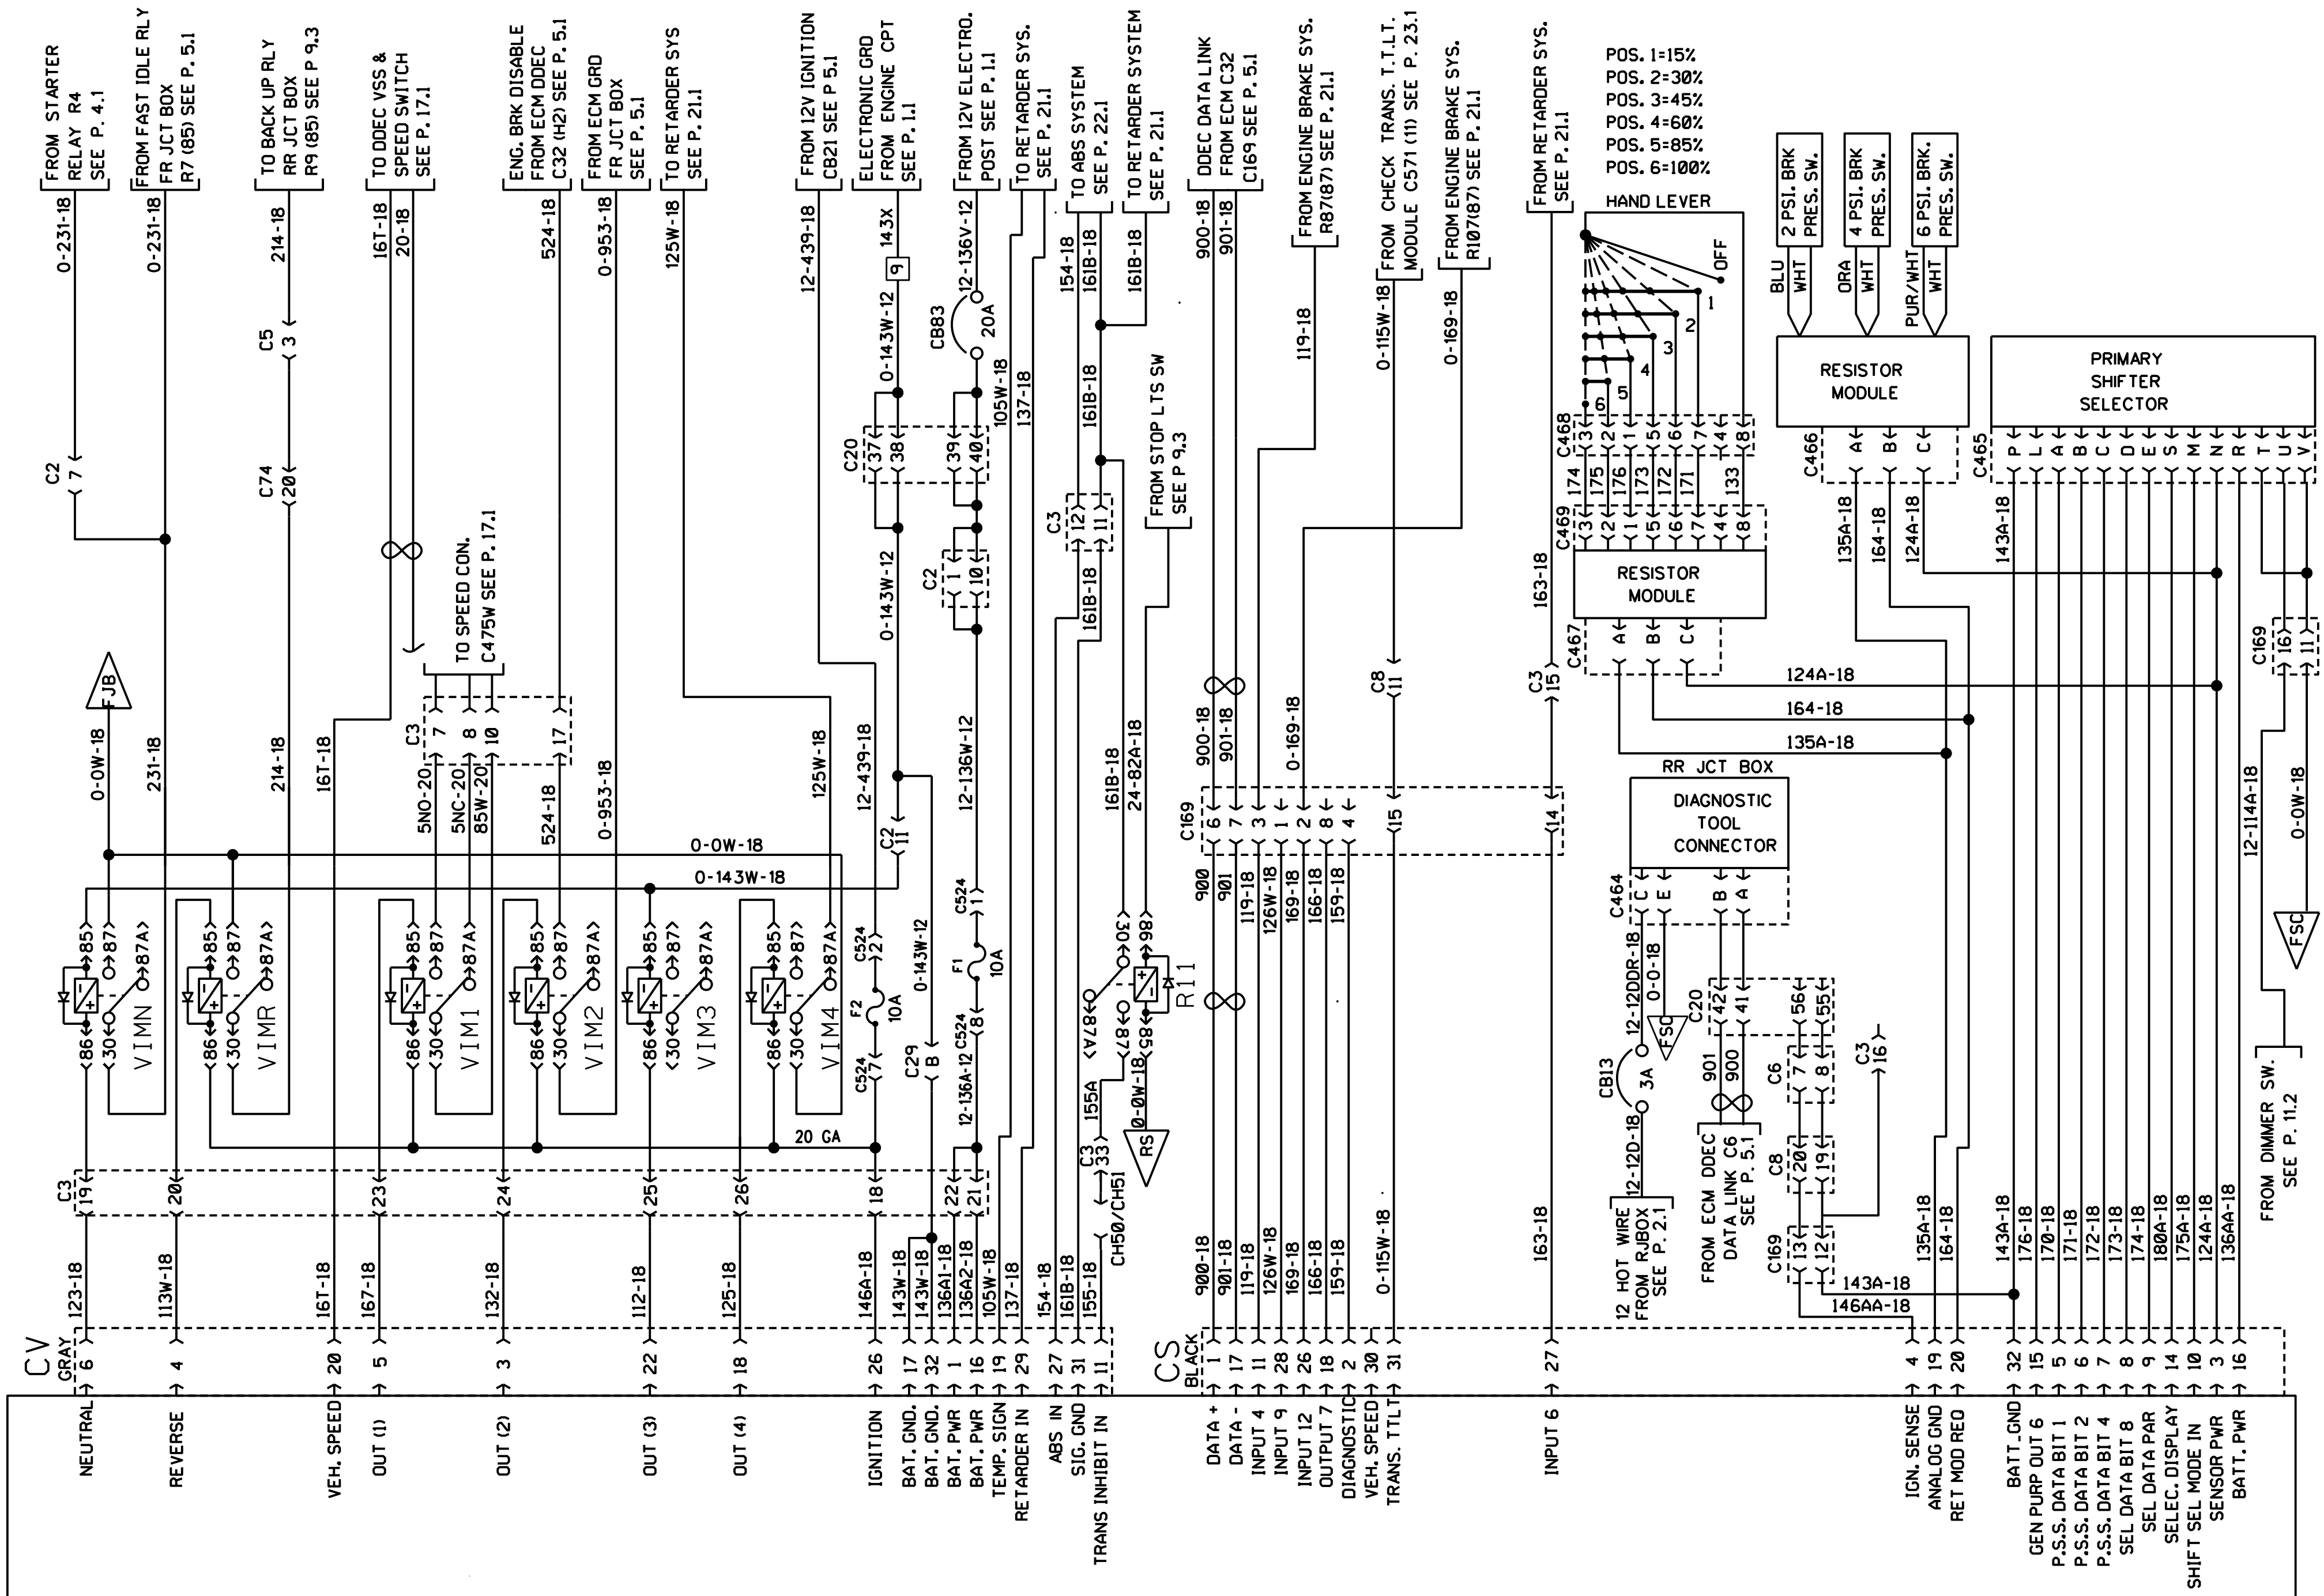


CV

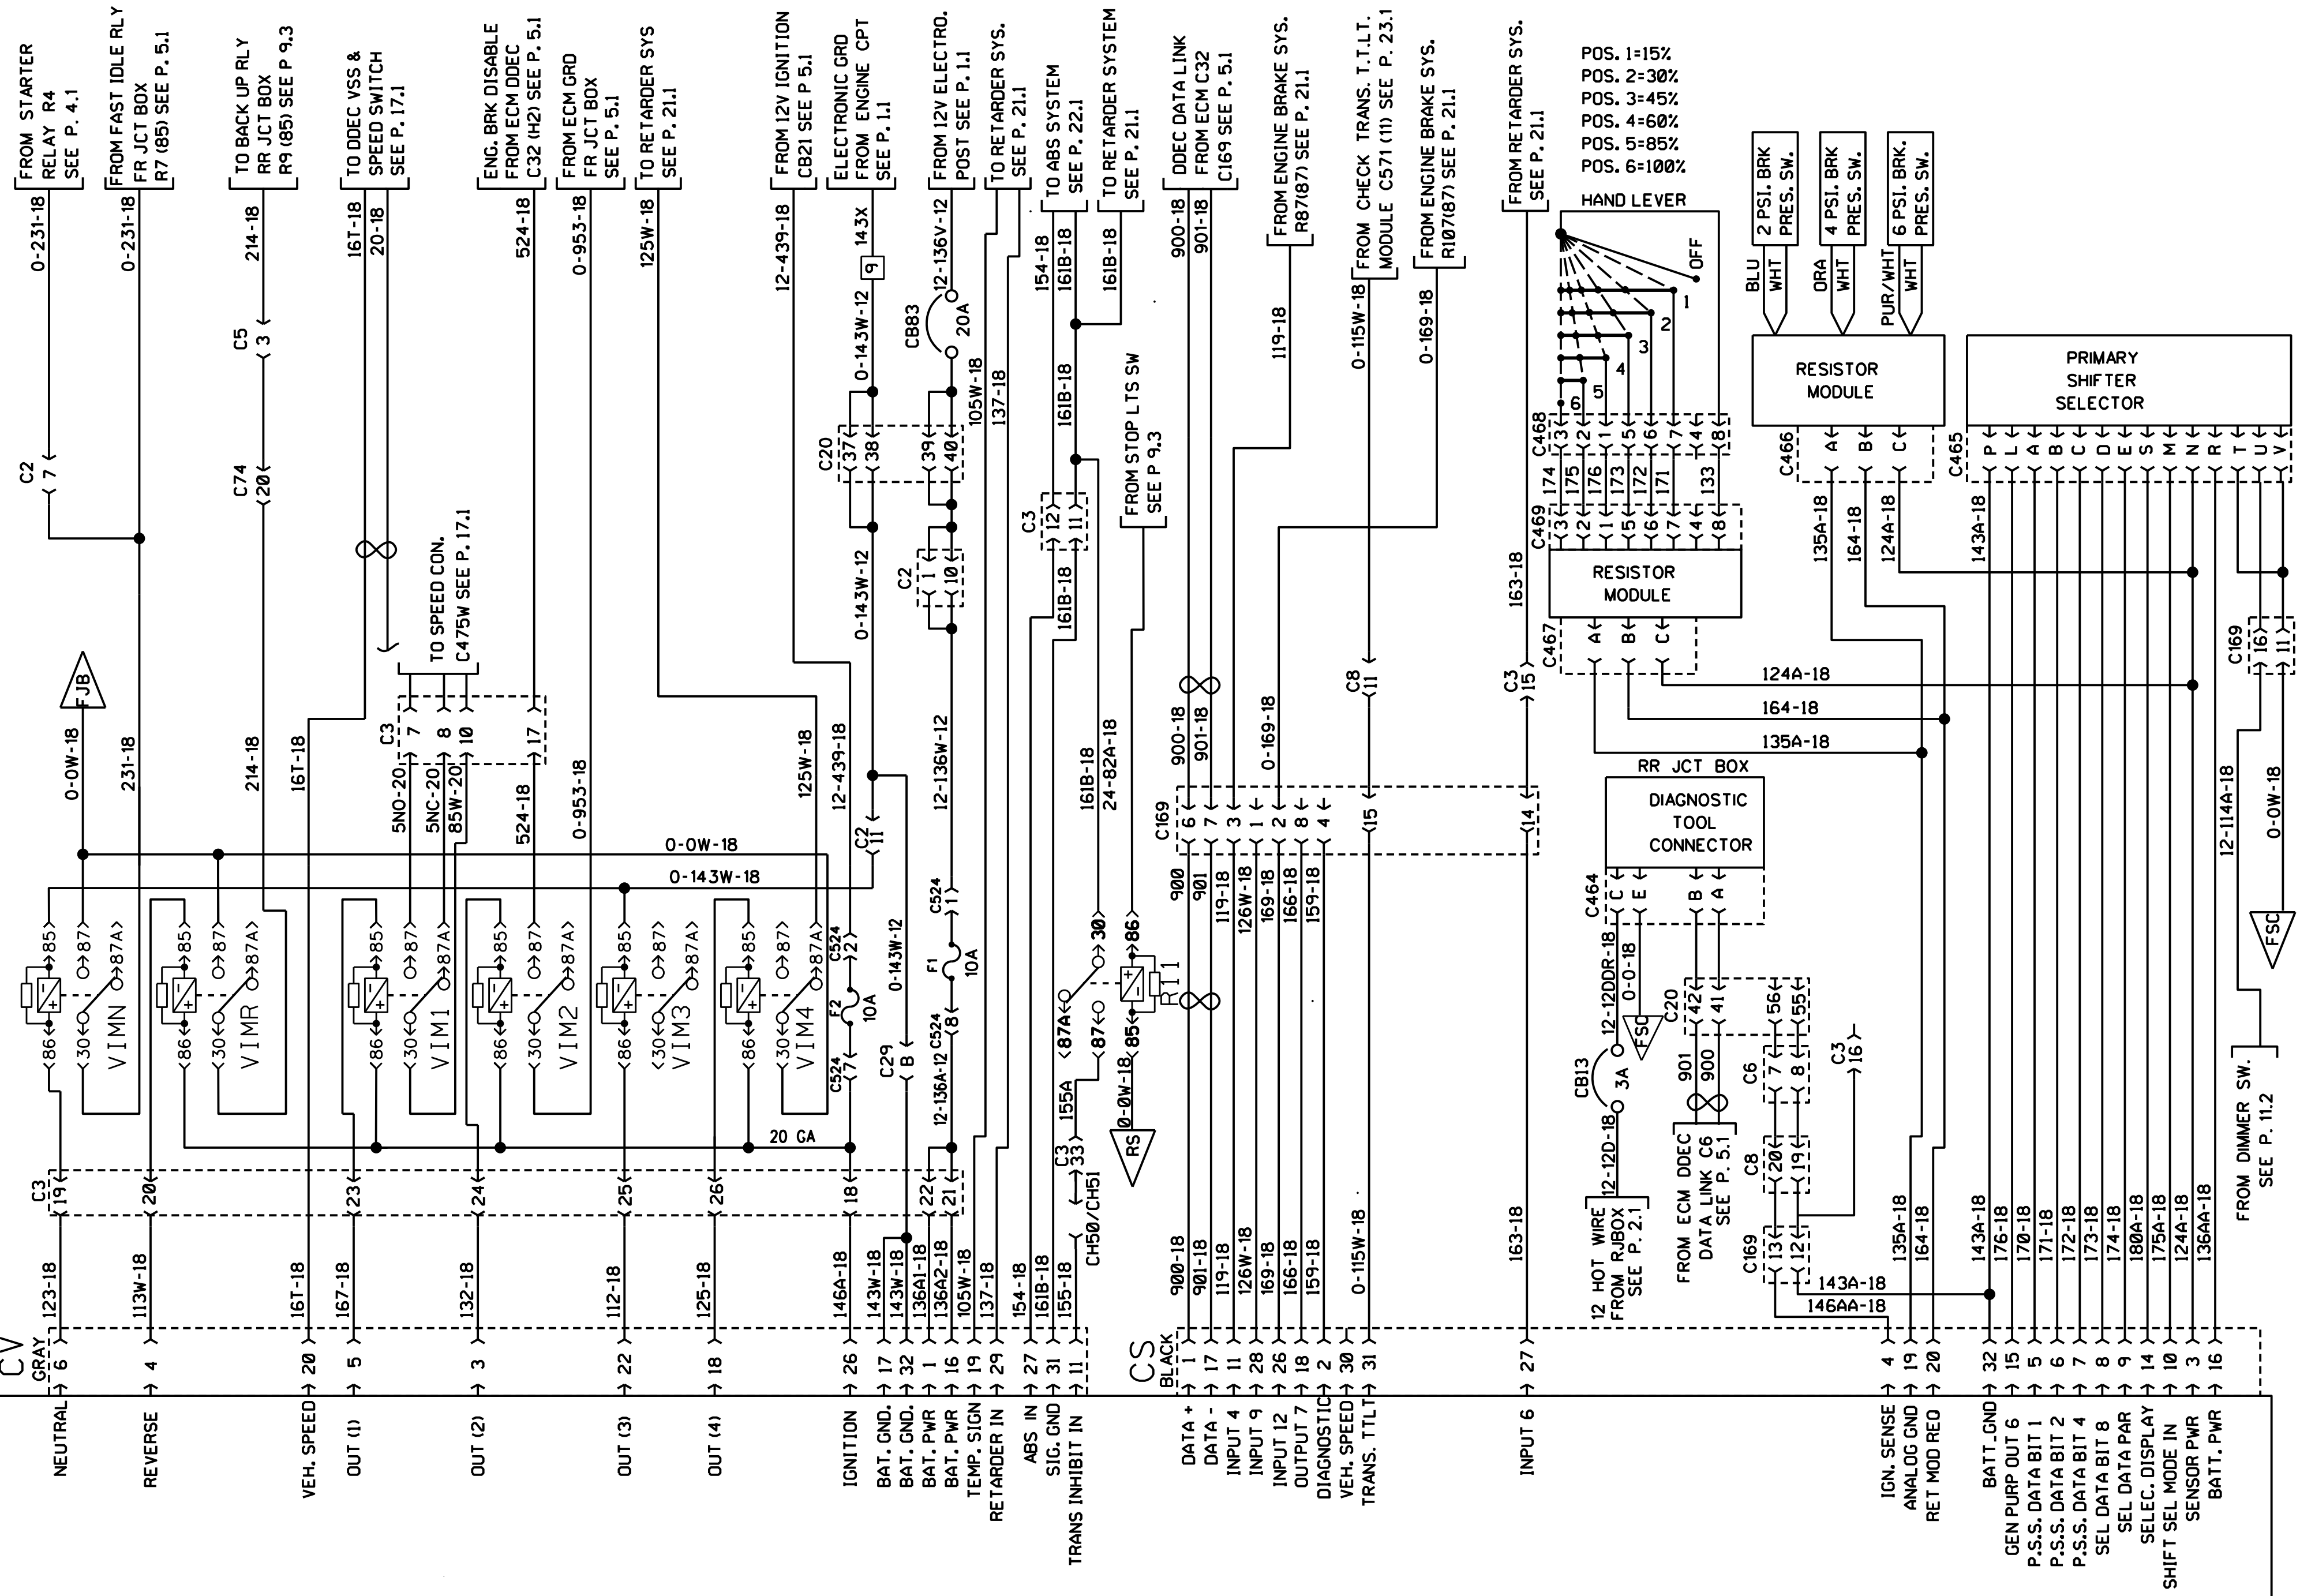

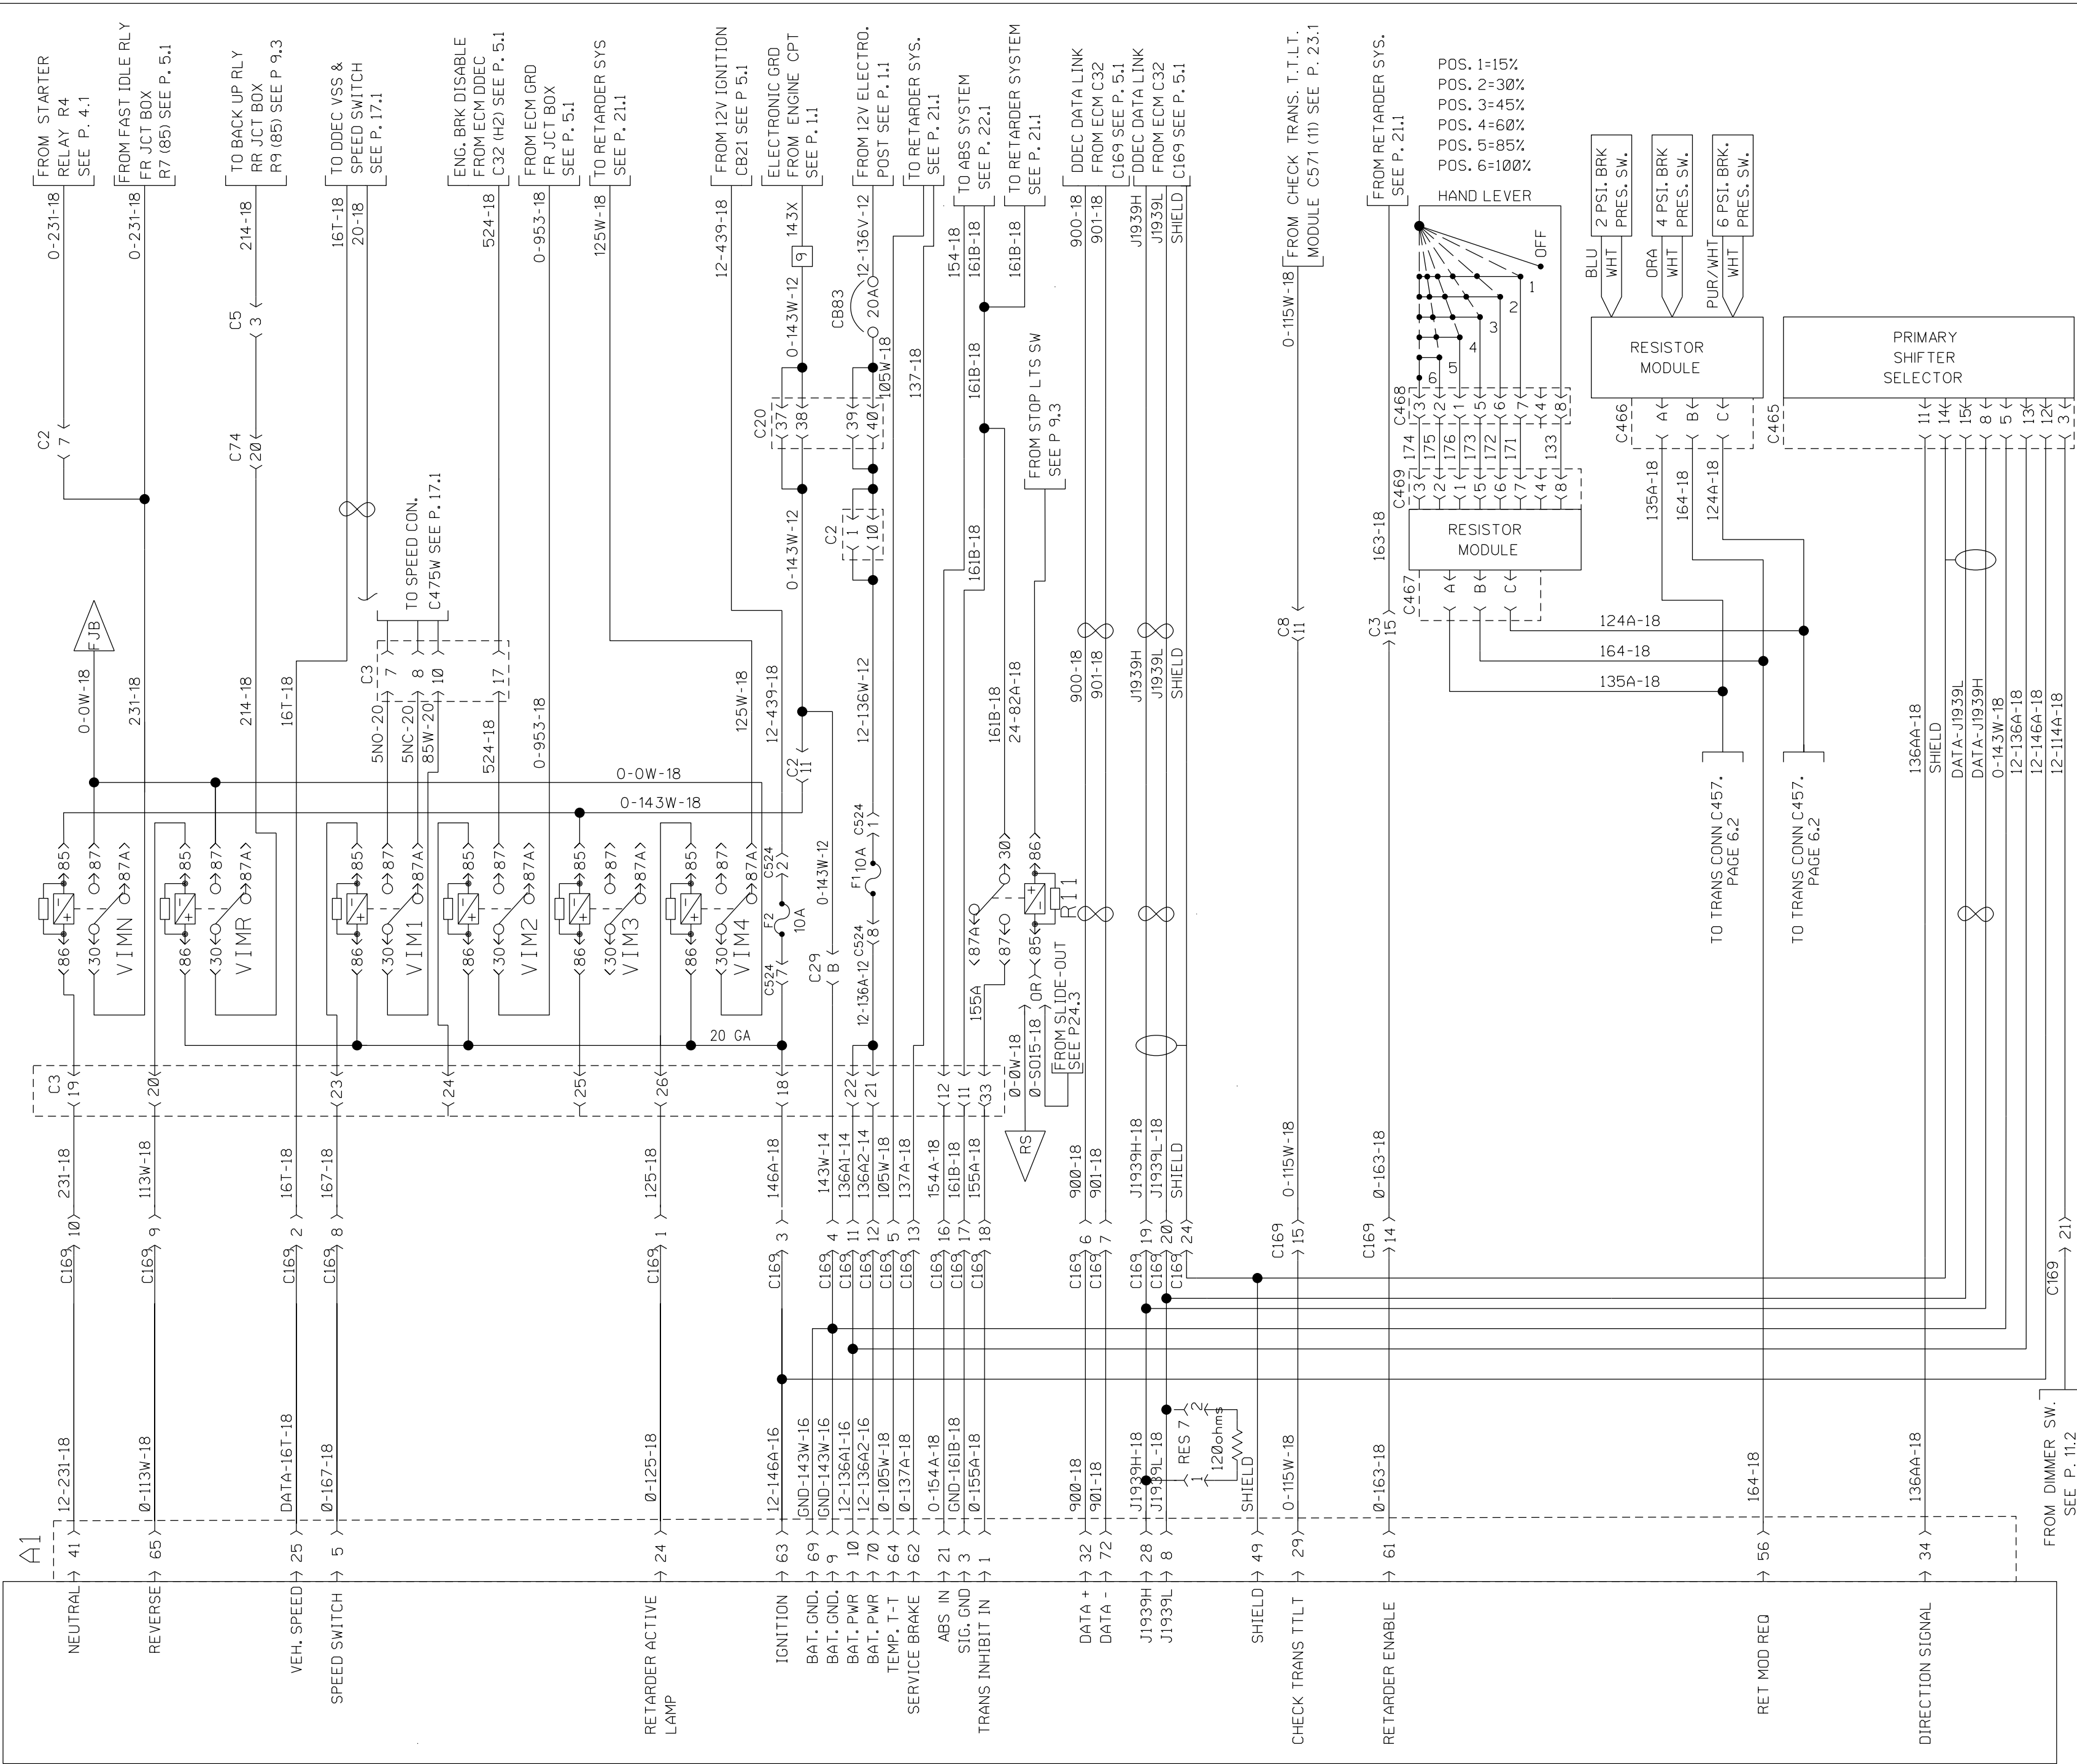



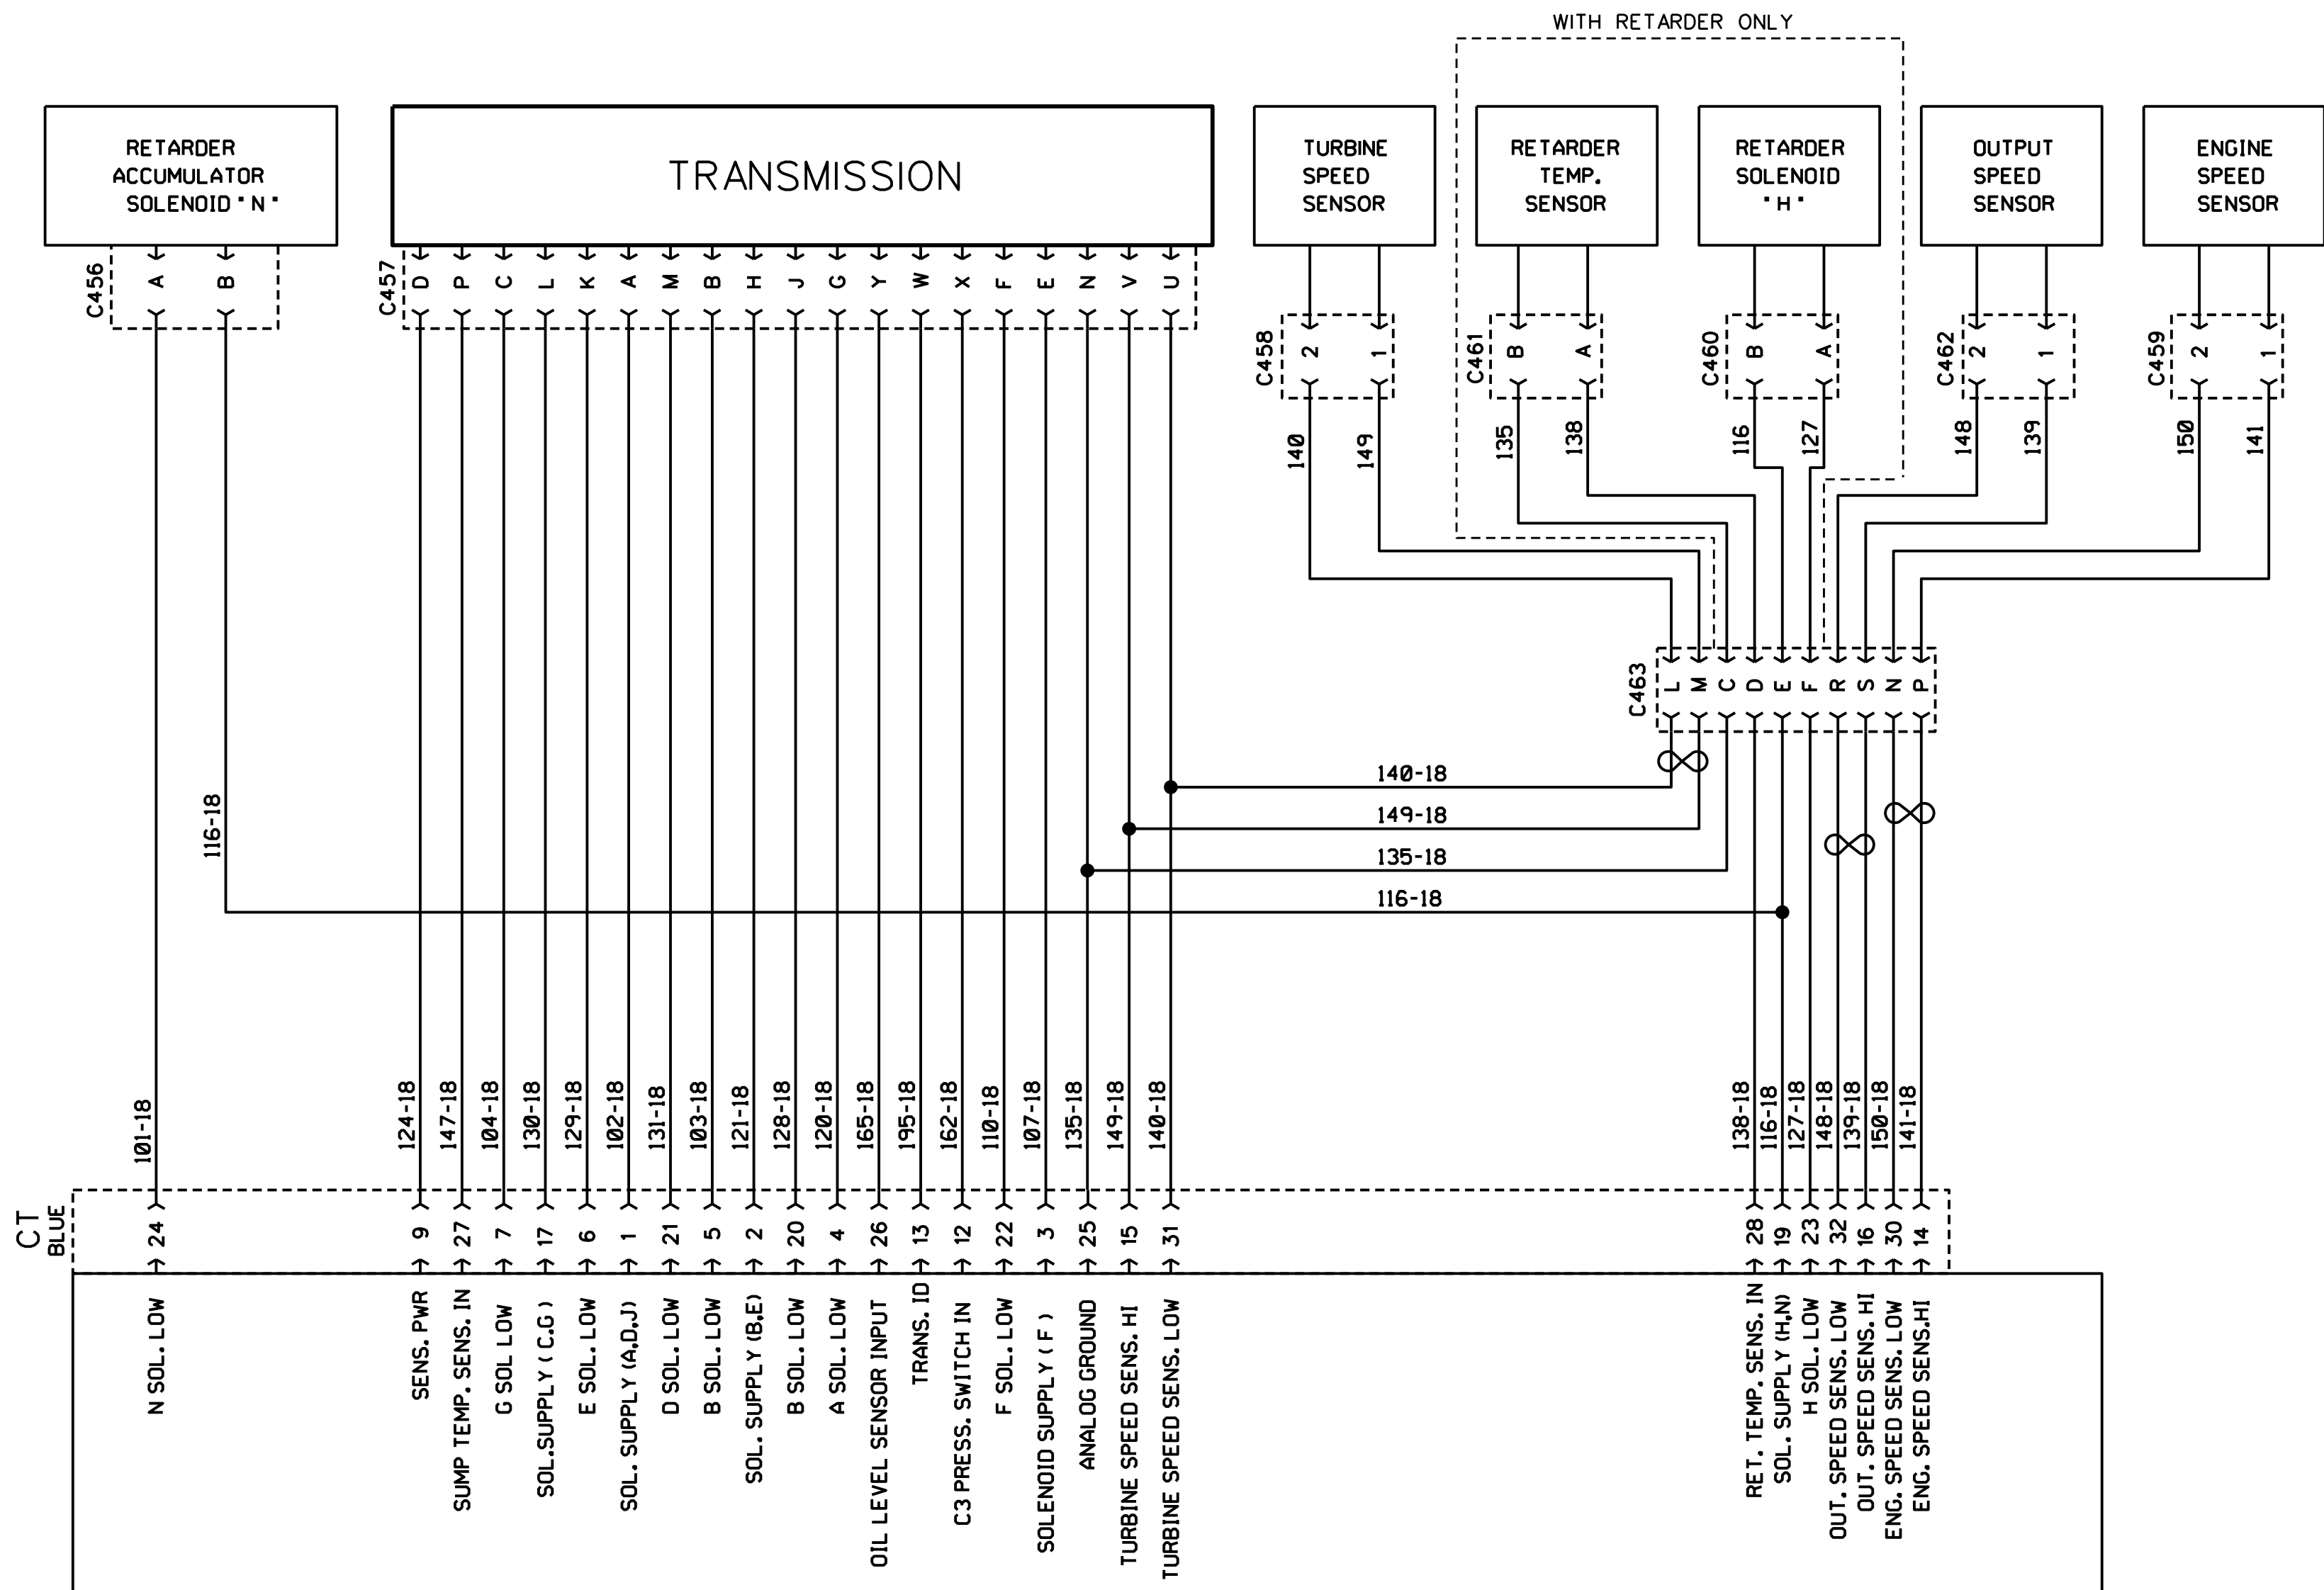




WORLD TRANSMISSION E.C.U. (SUITE)


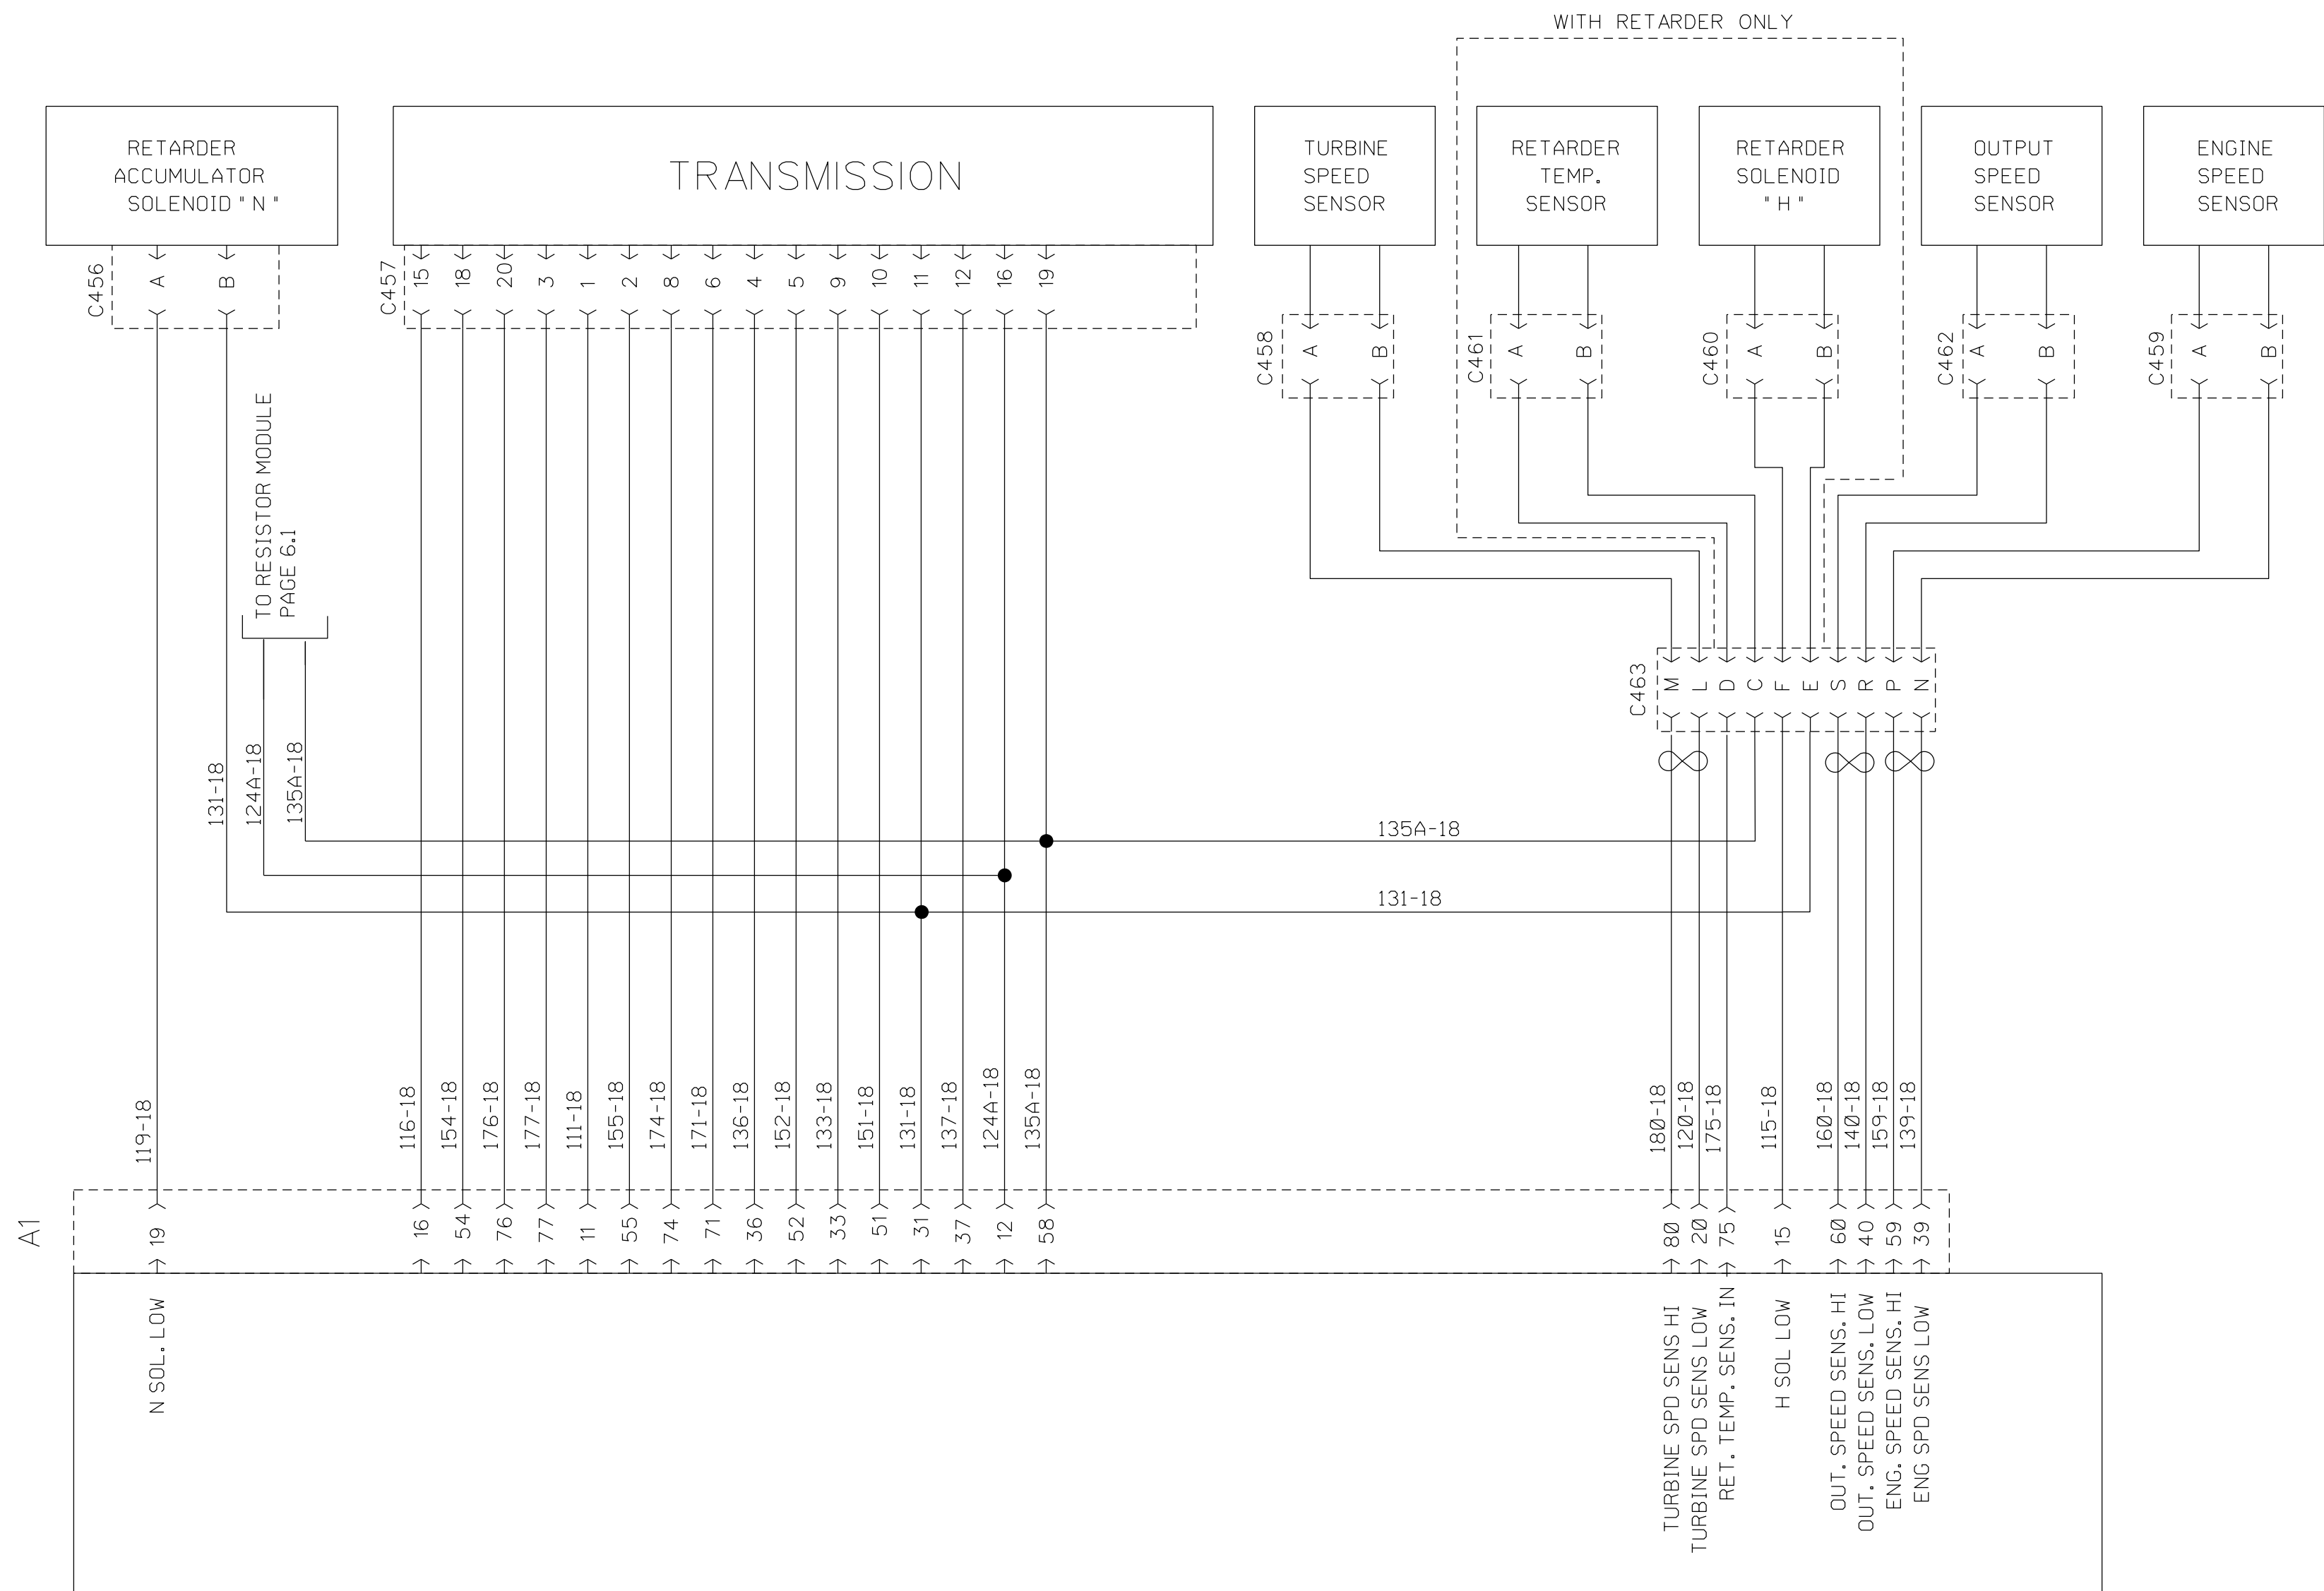




WORLD TRANSMISSION E.C.U. (SUITE)

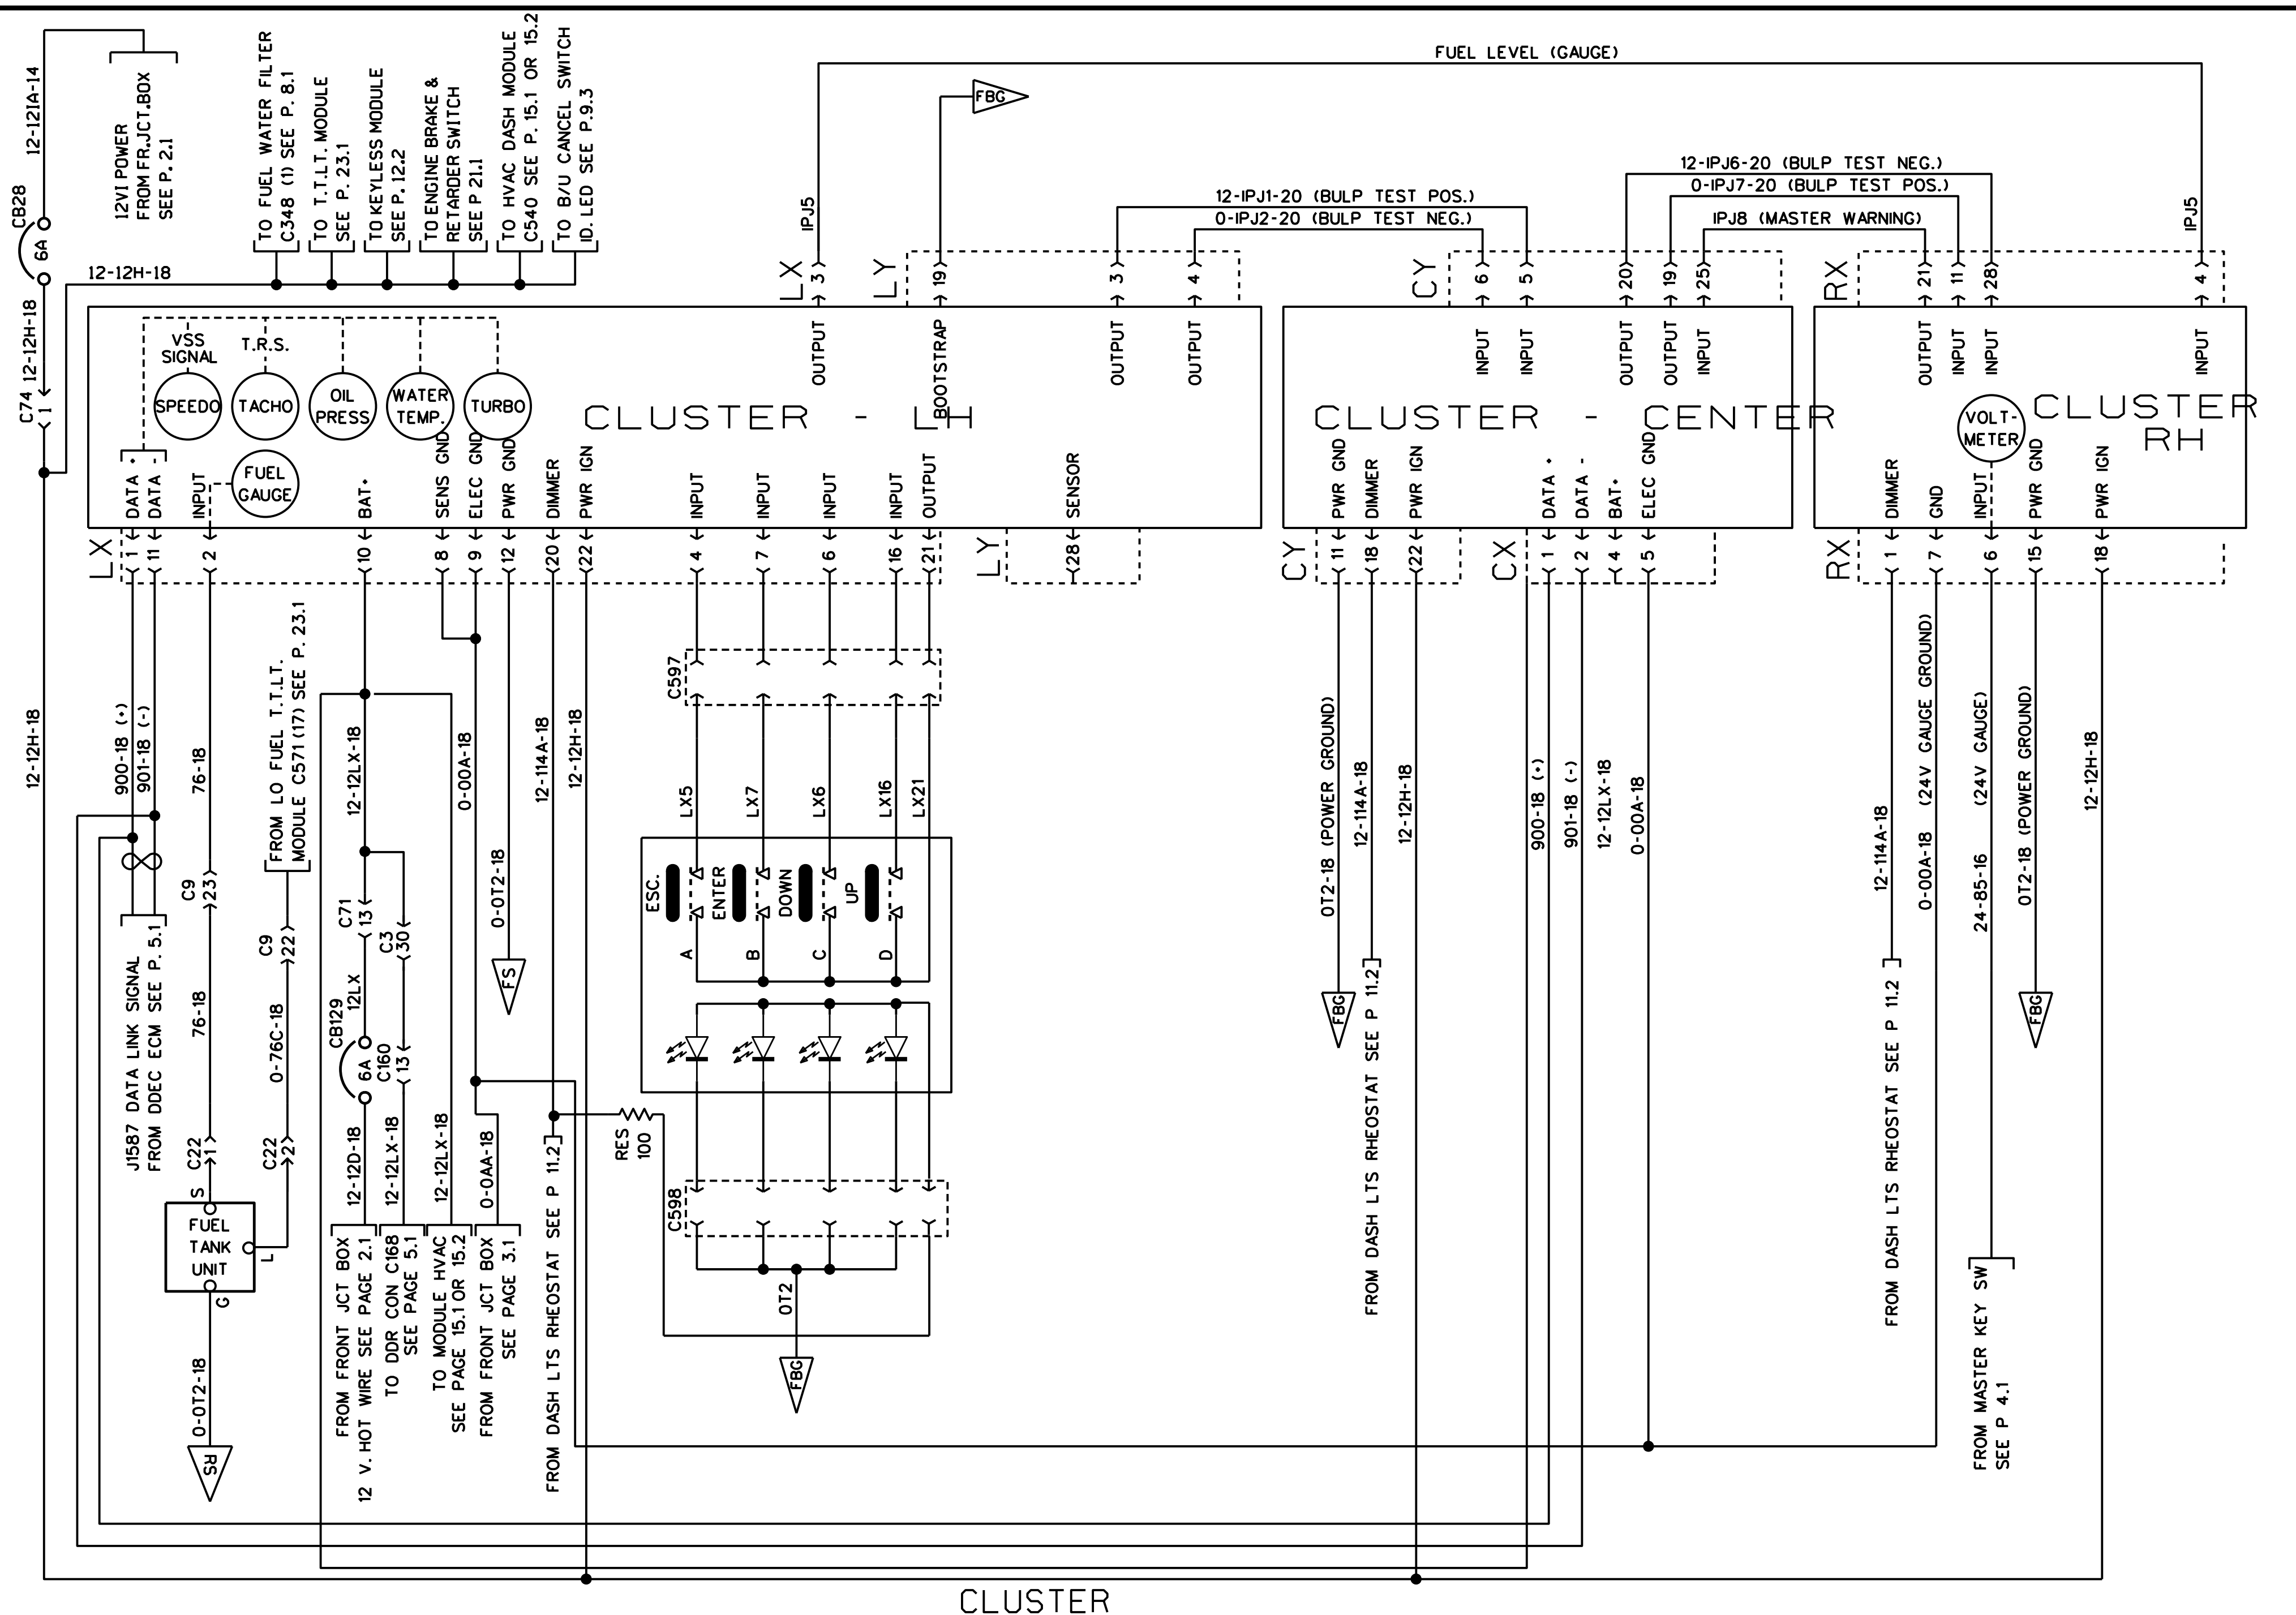


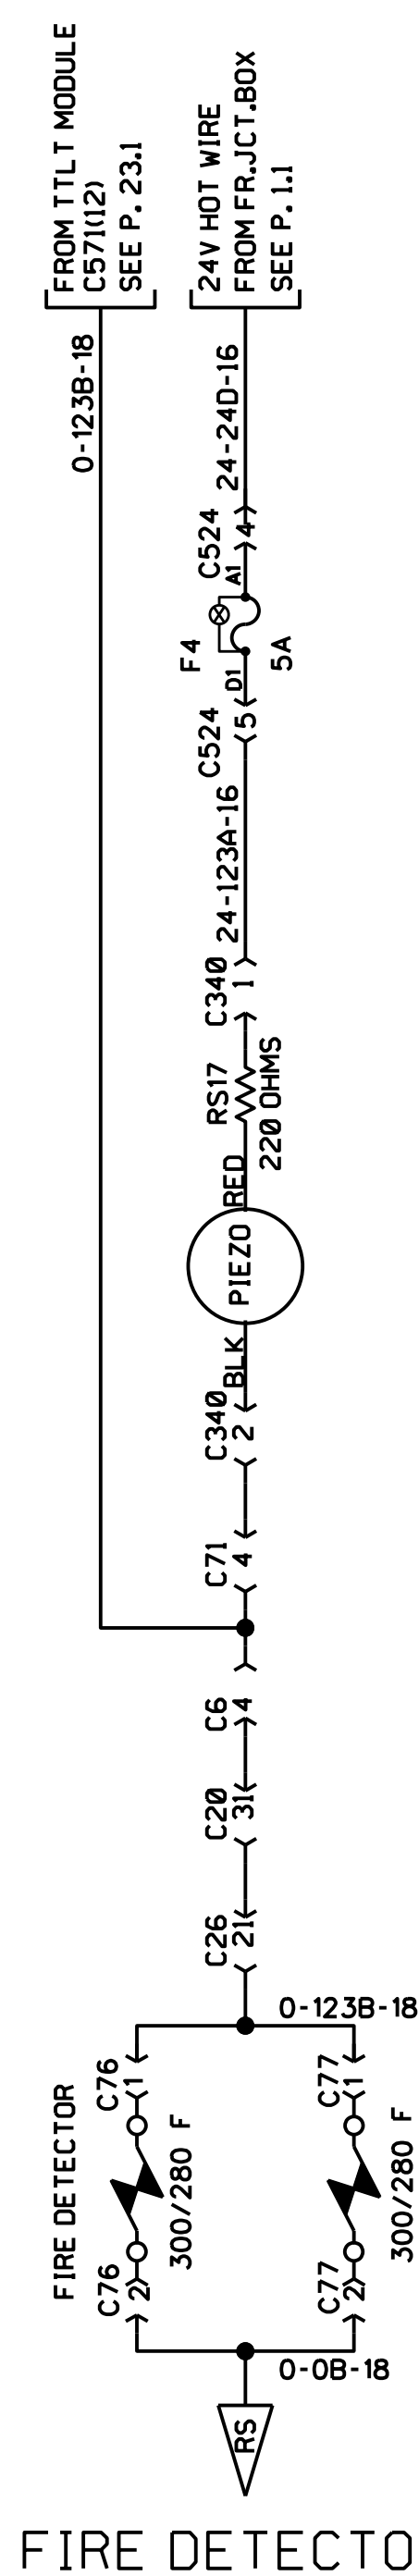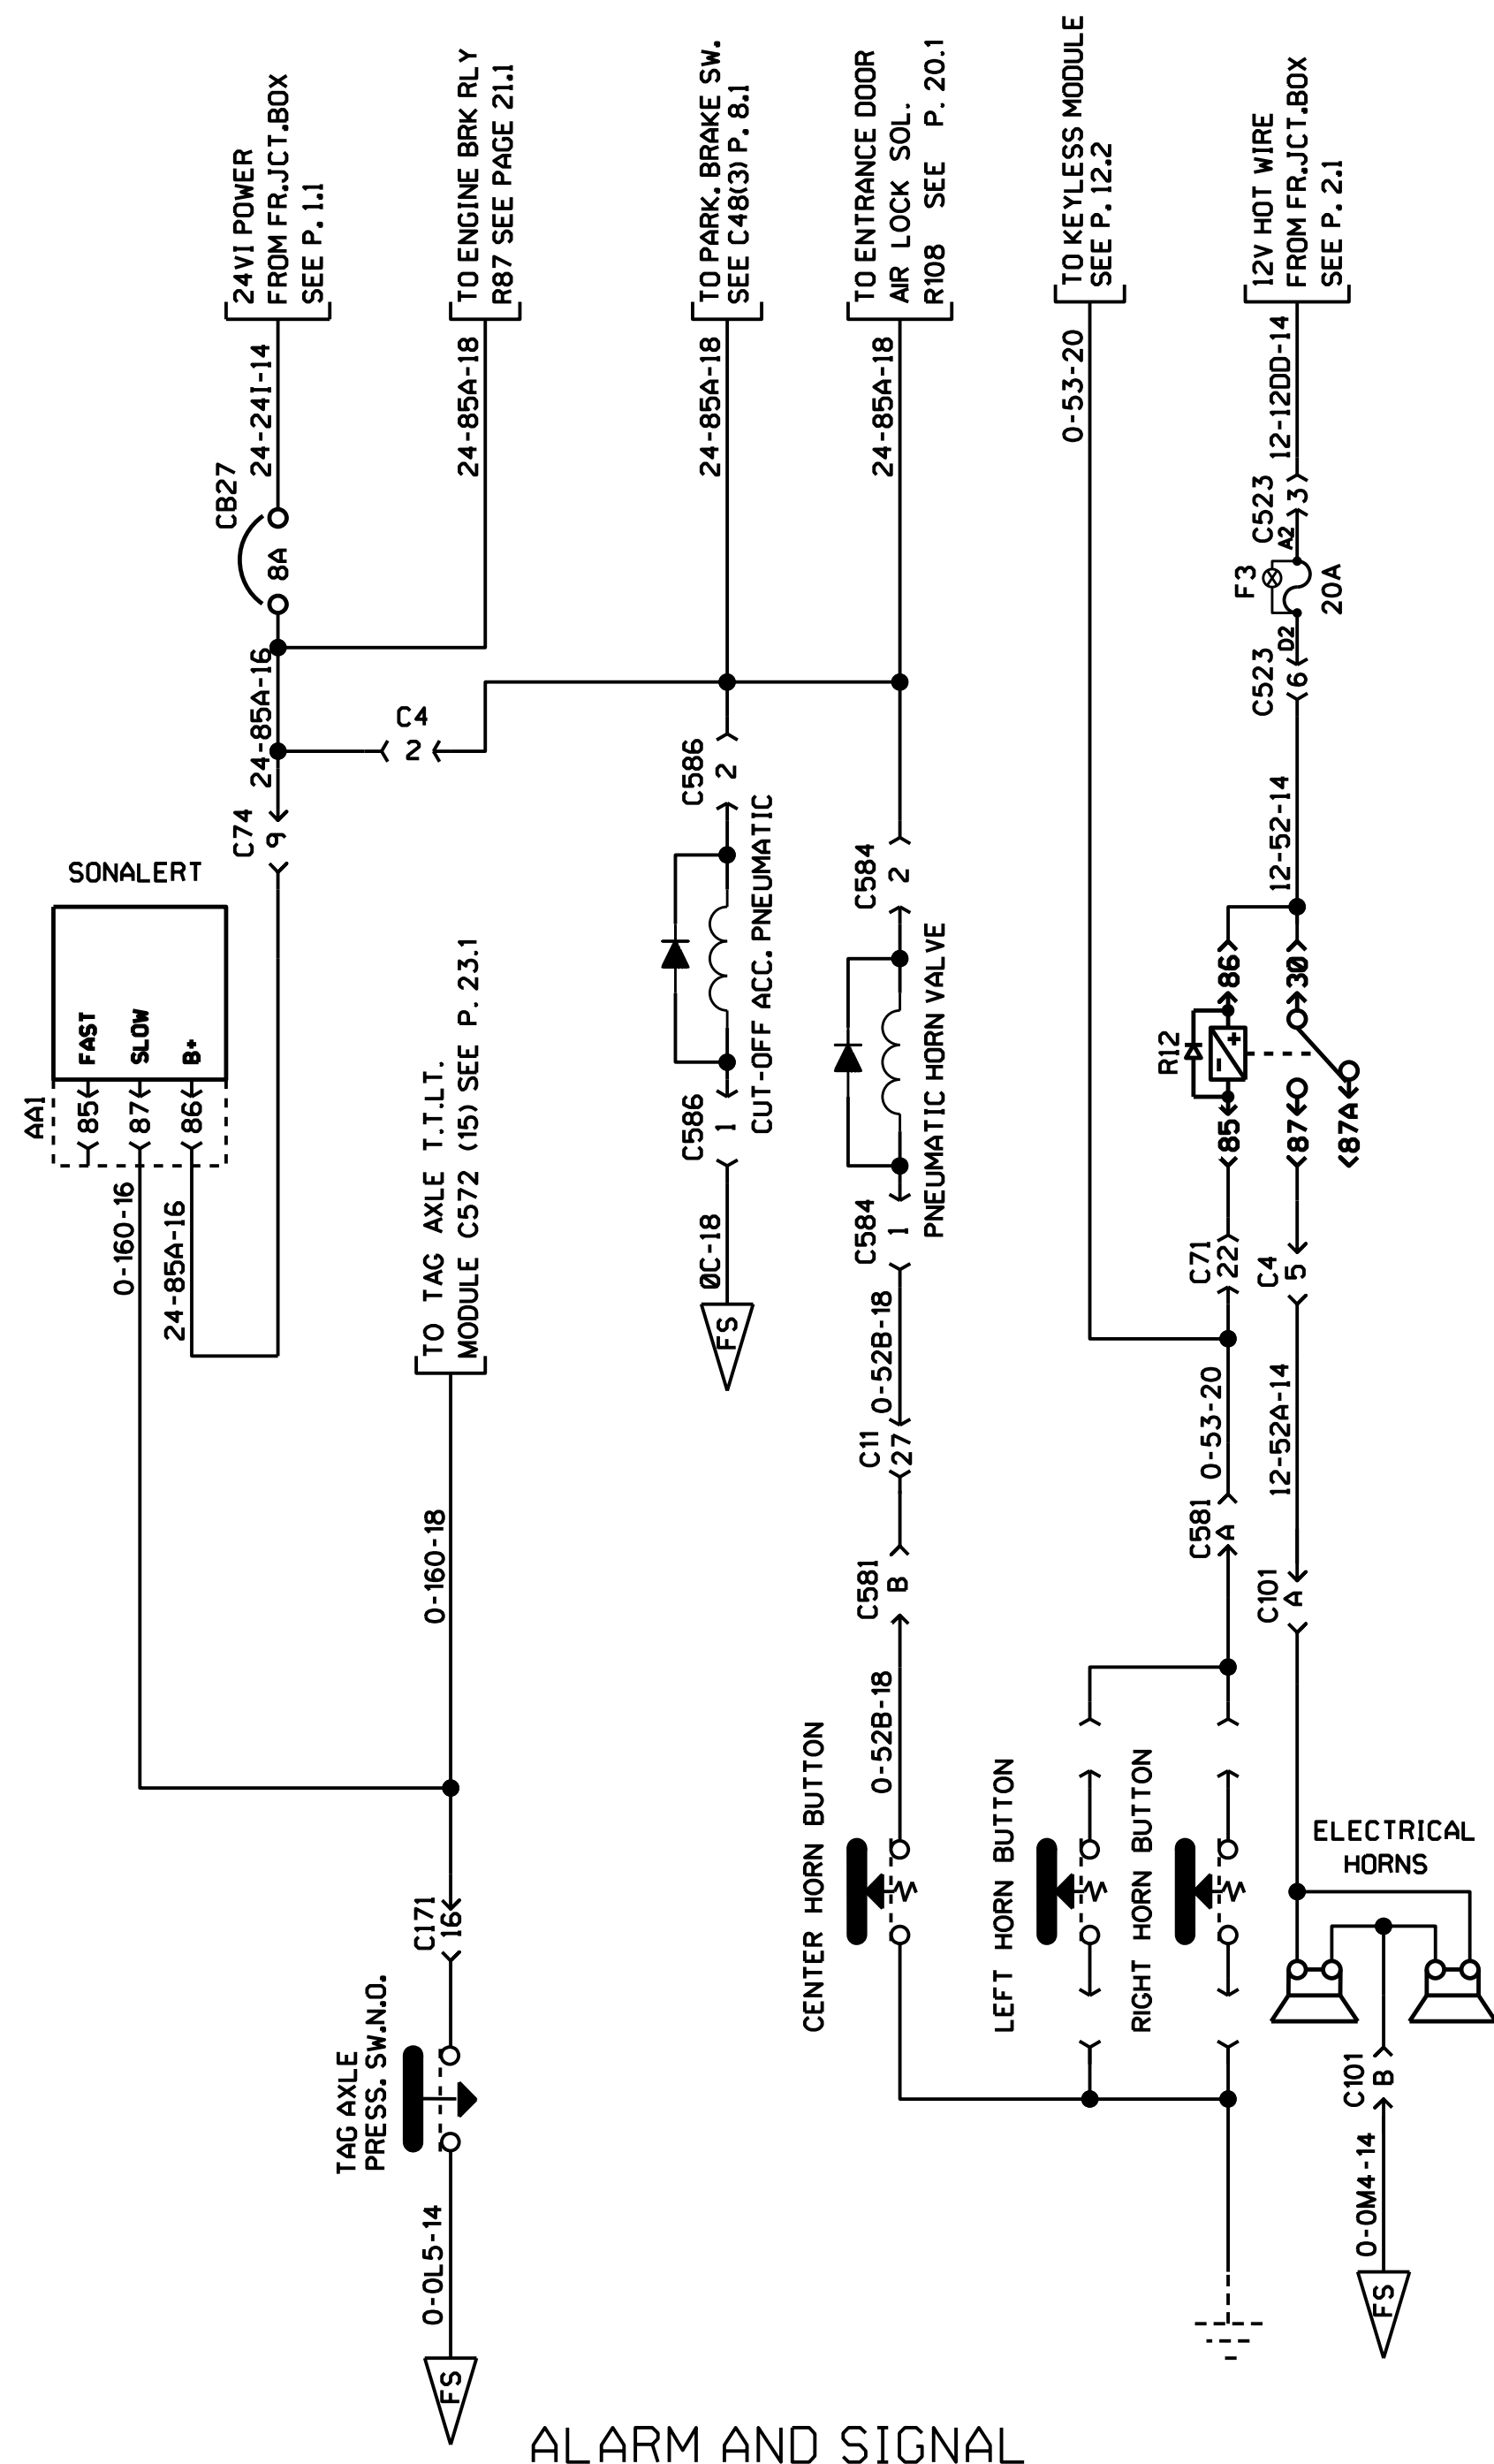


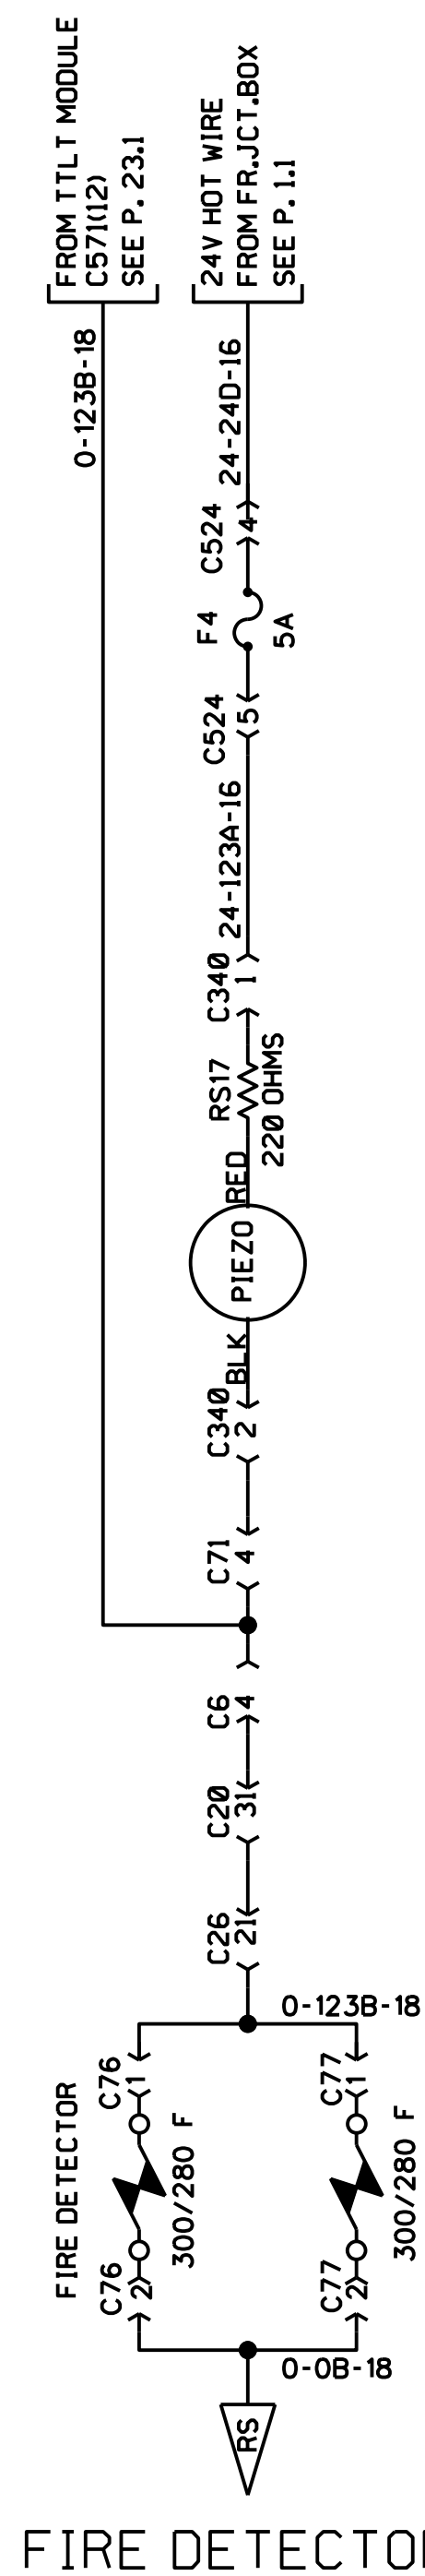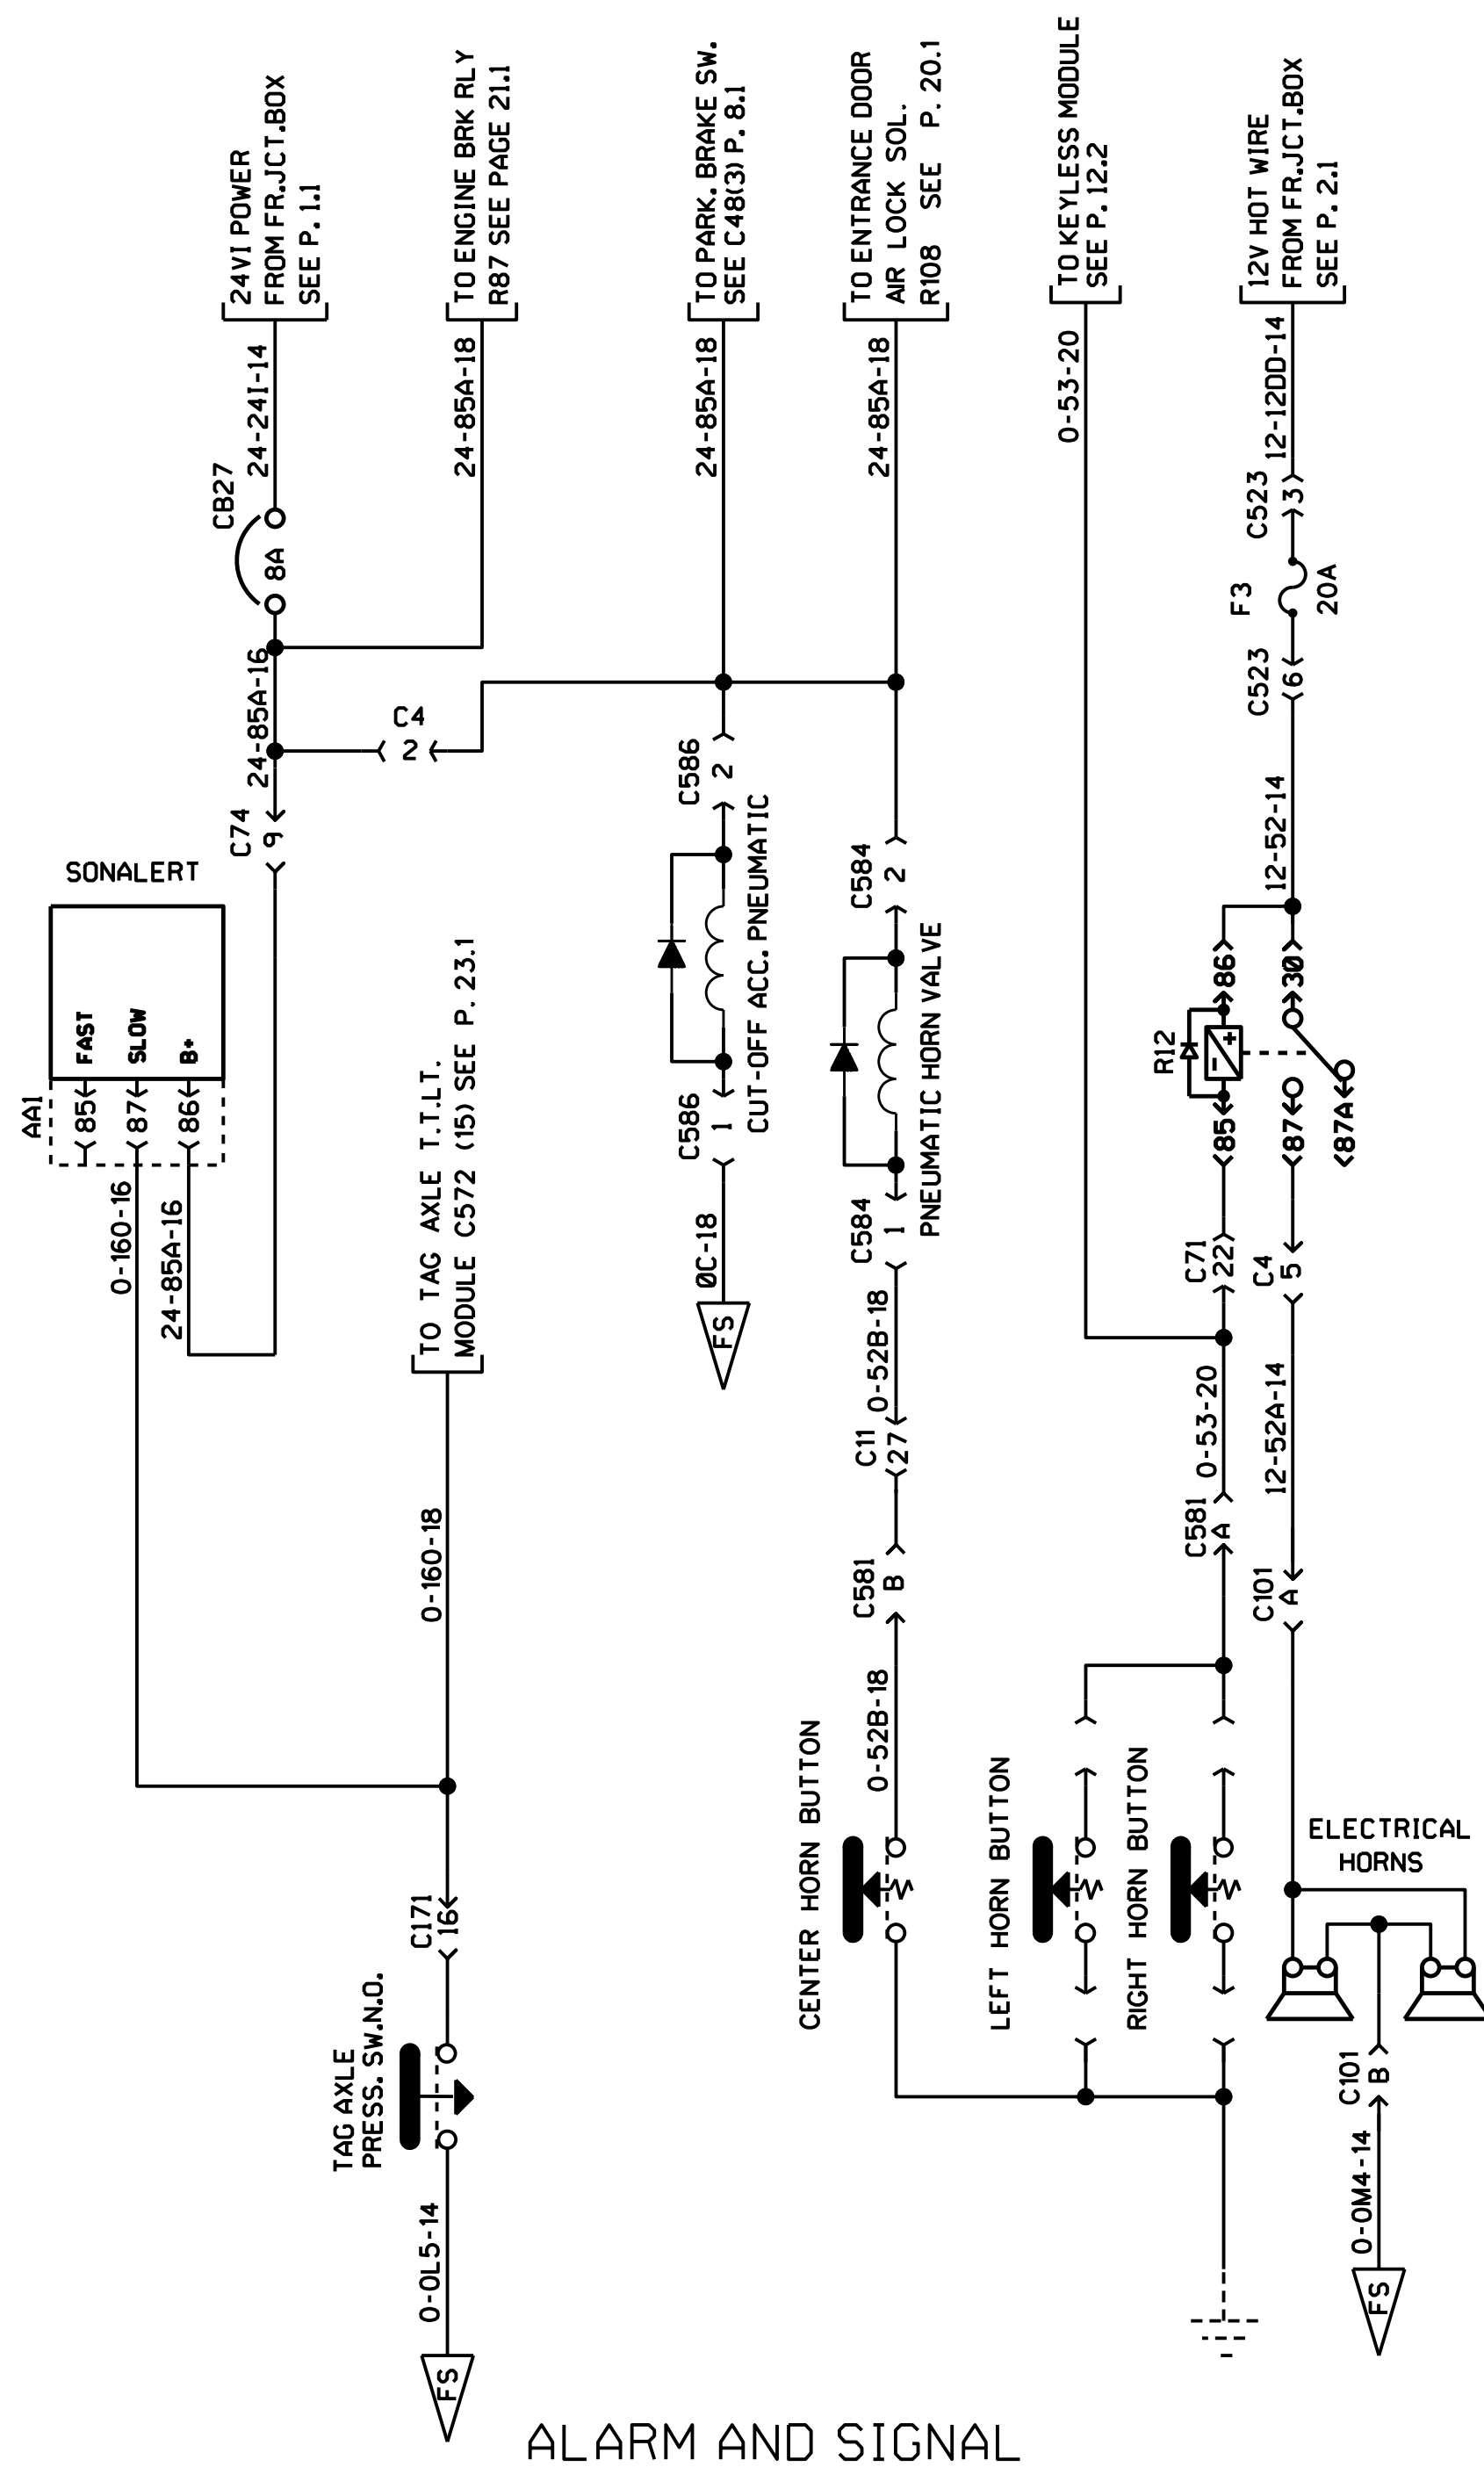


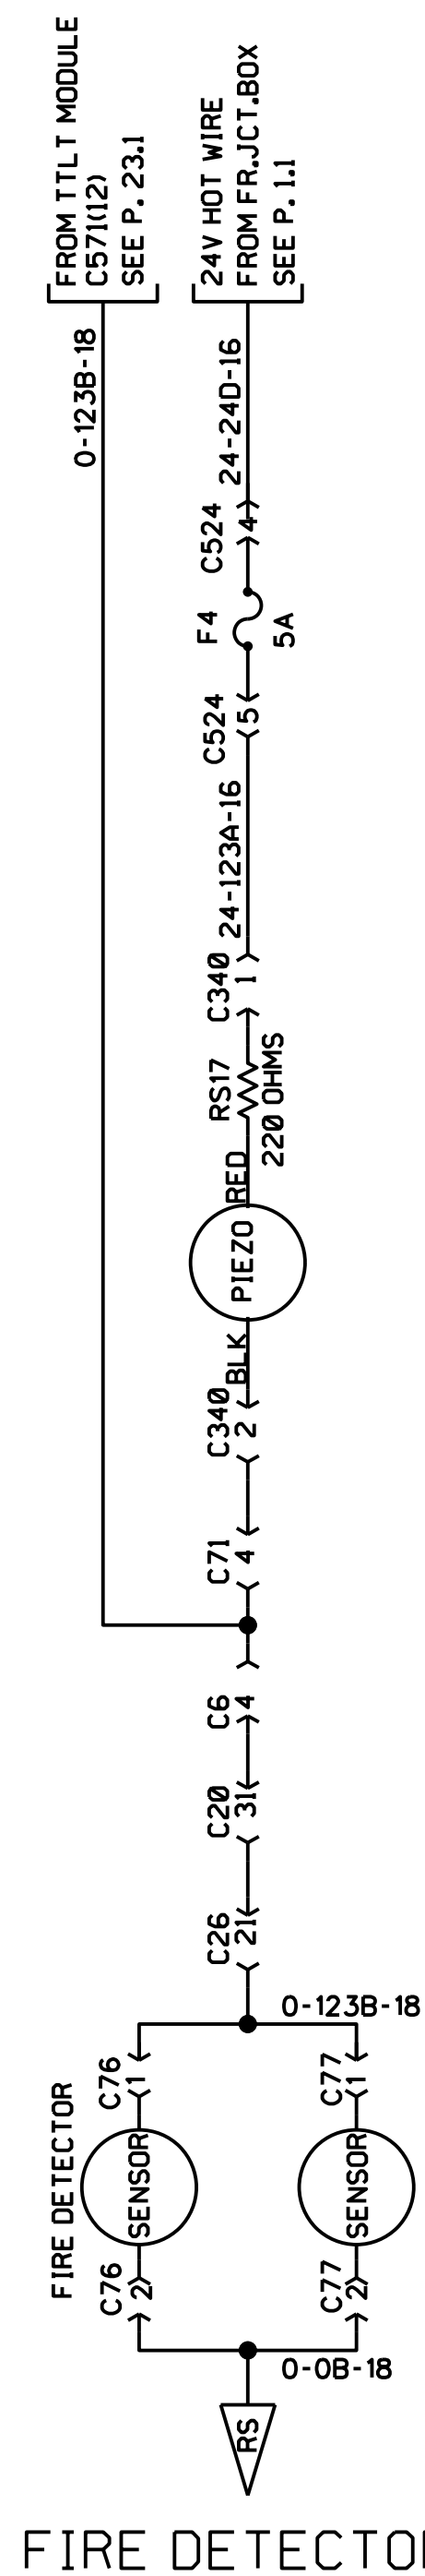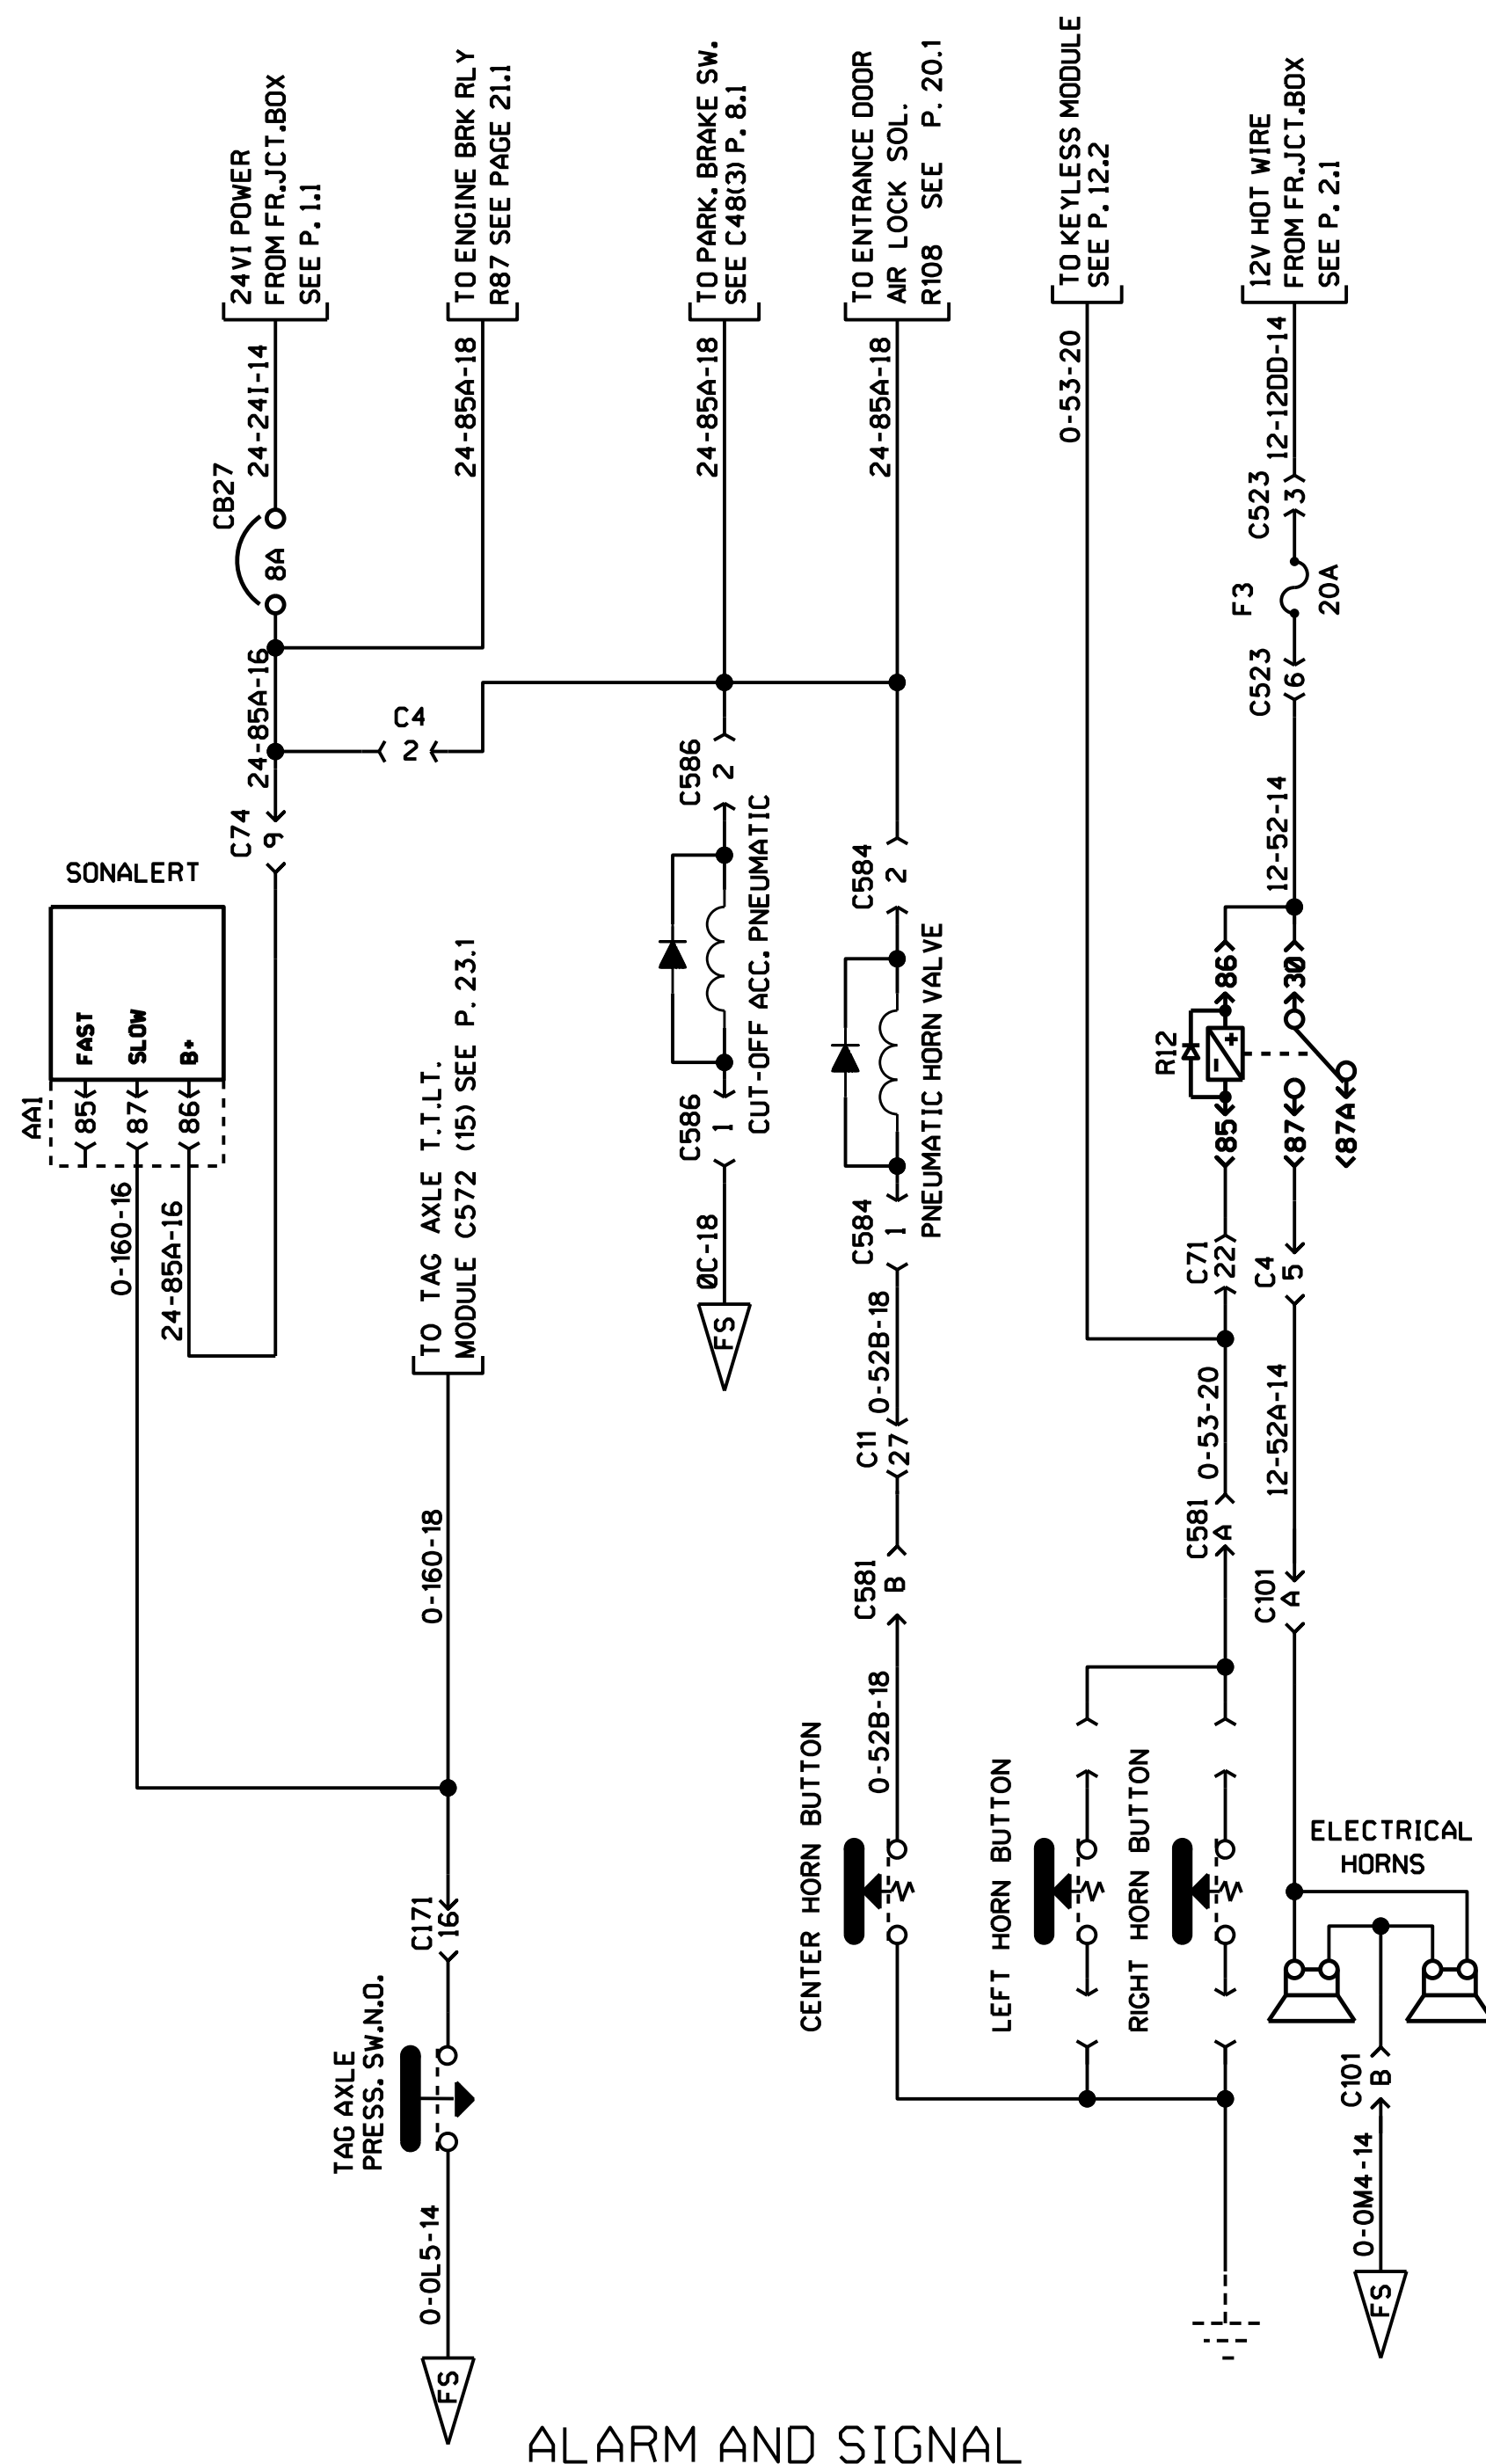

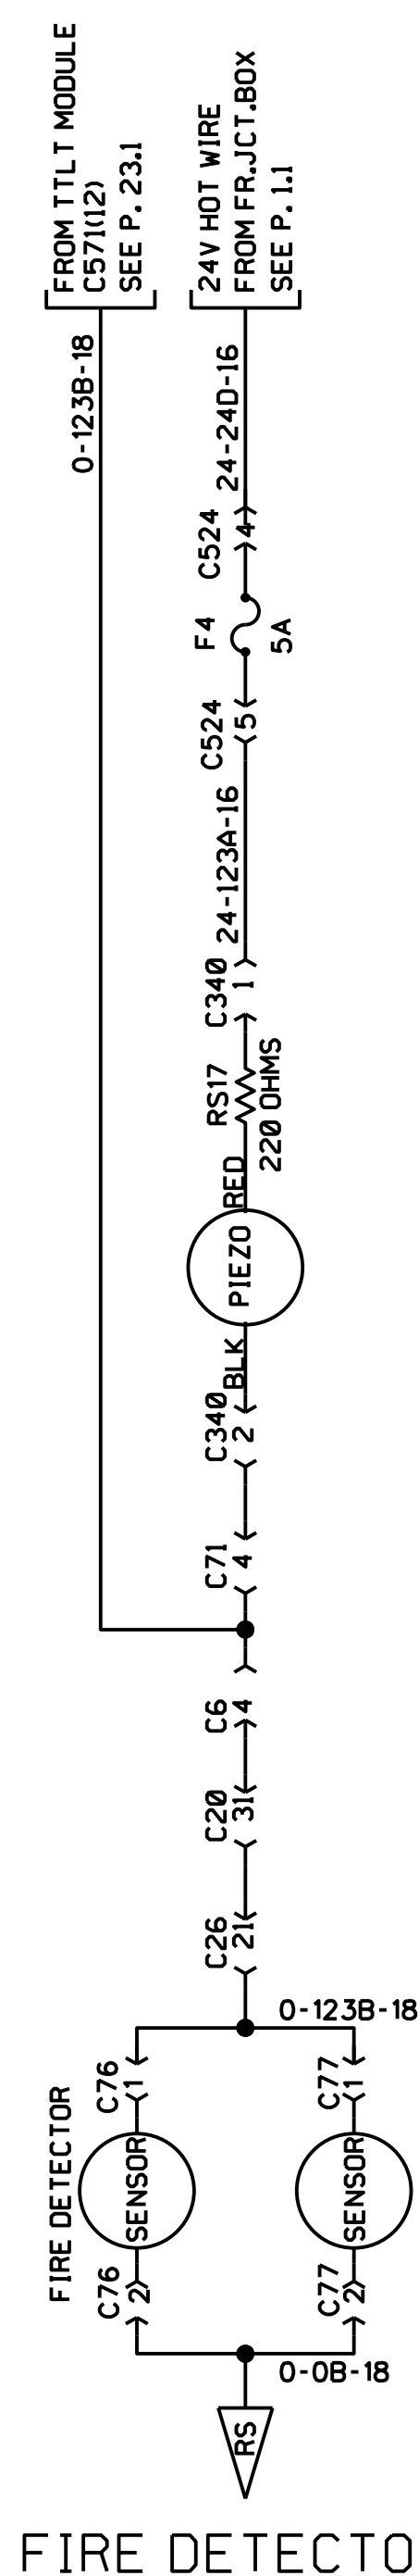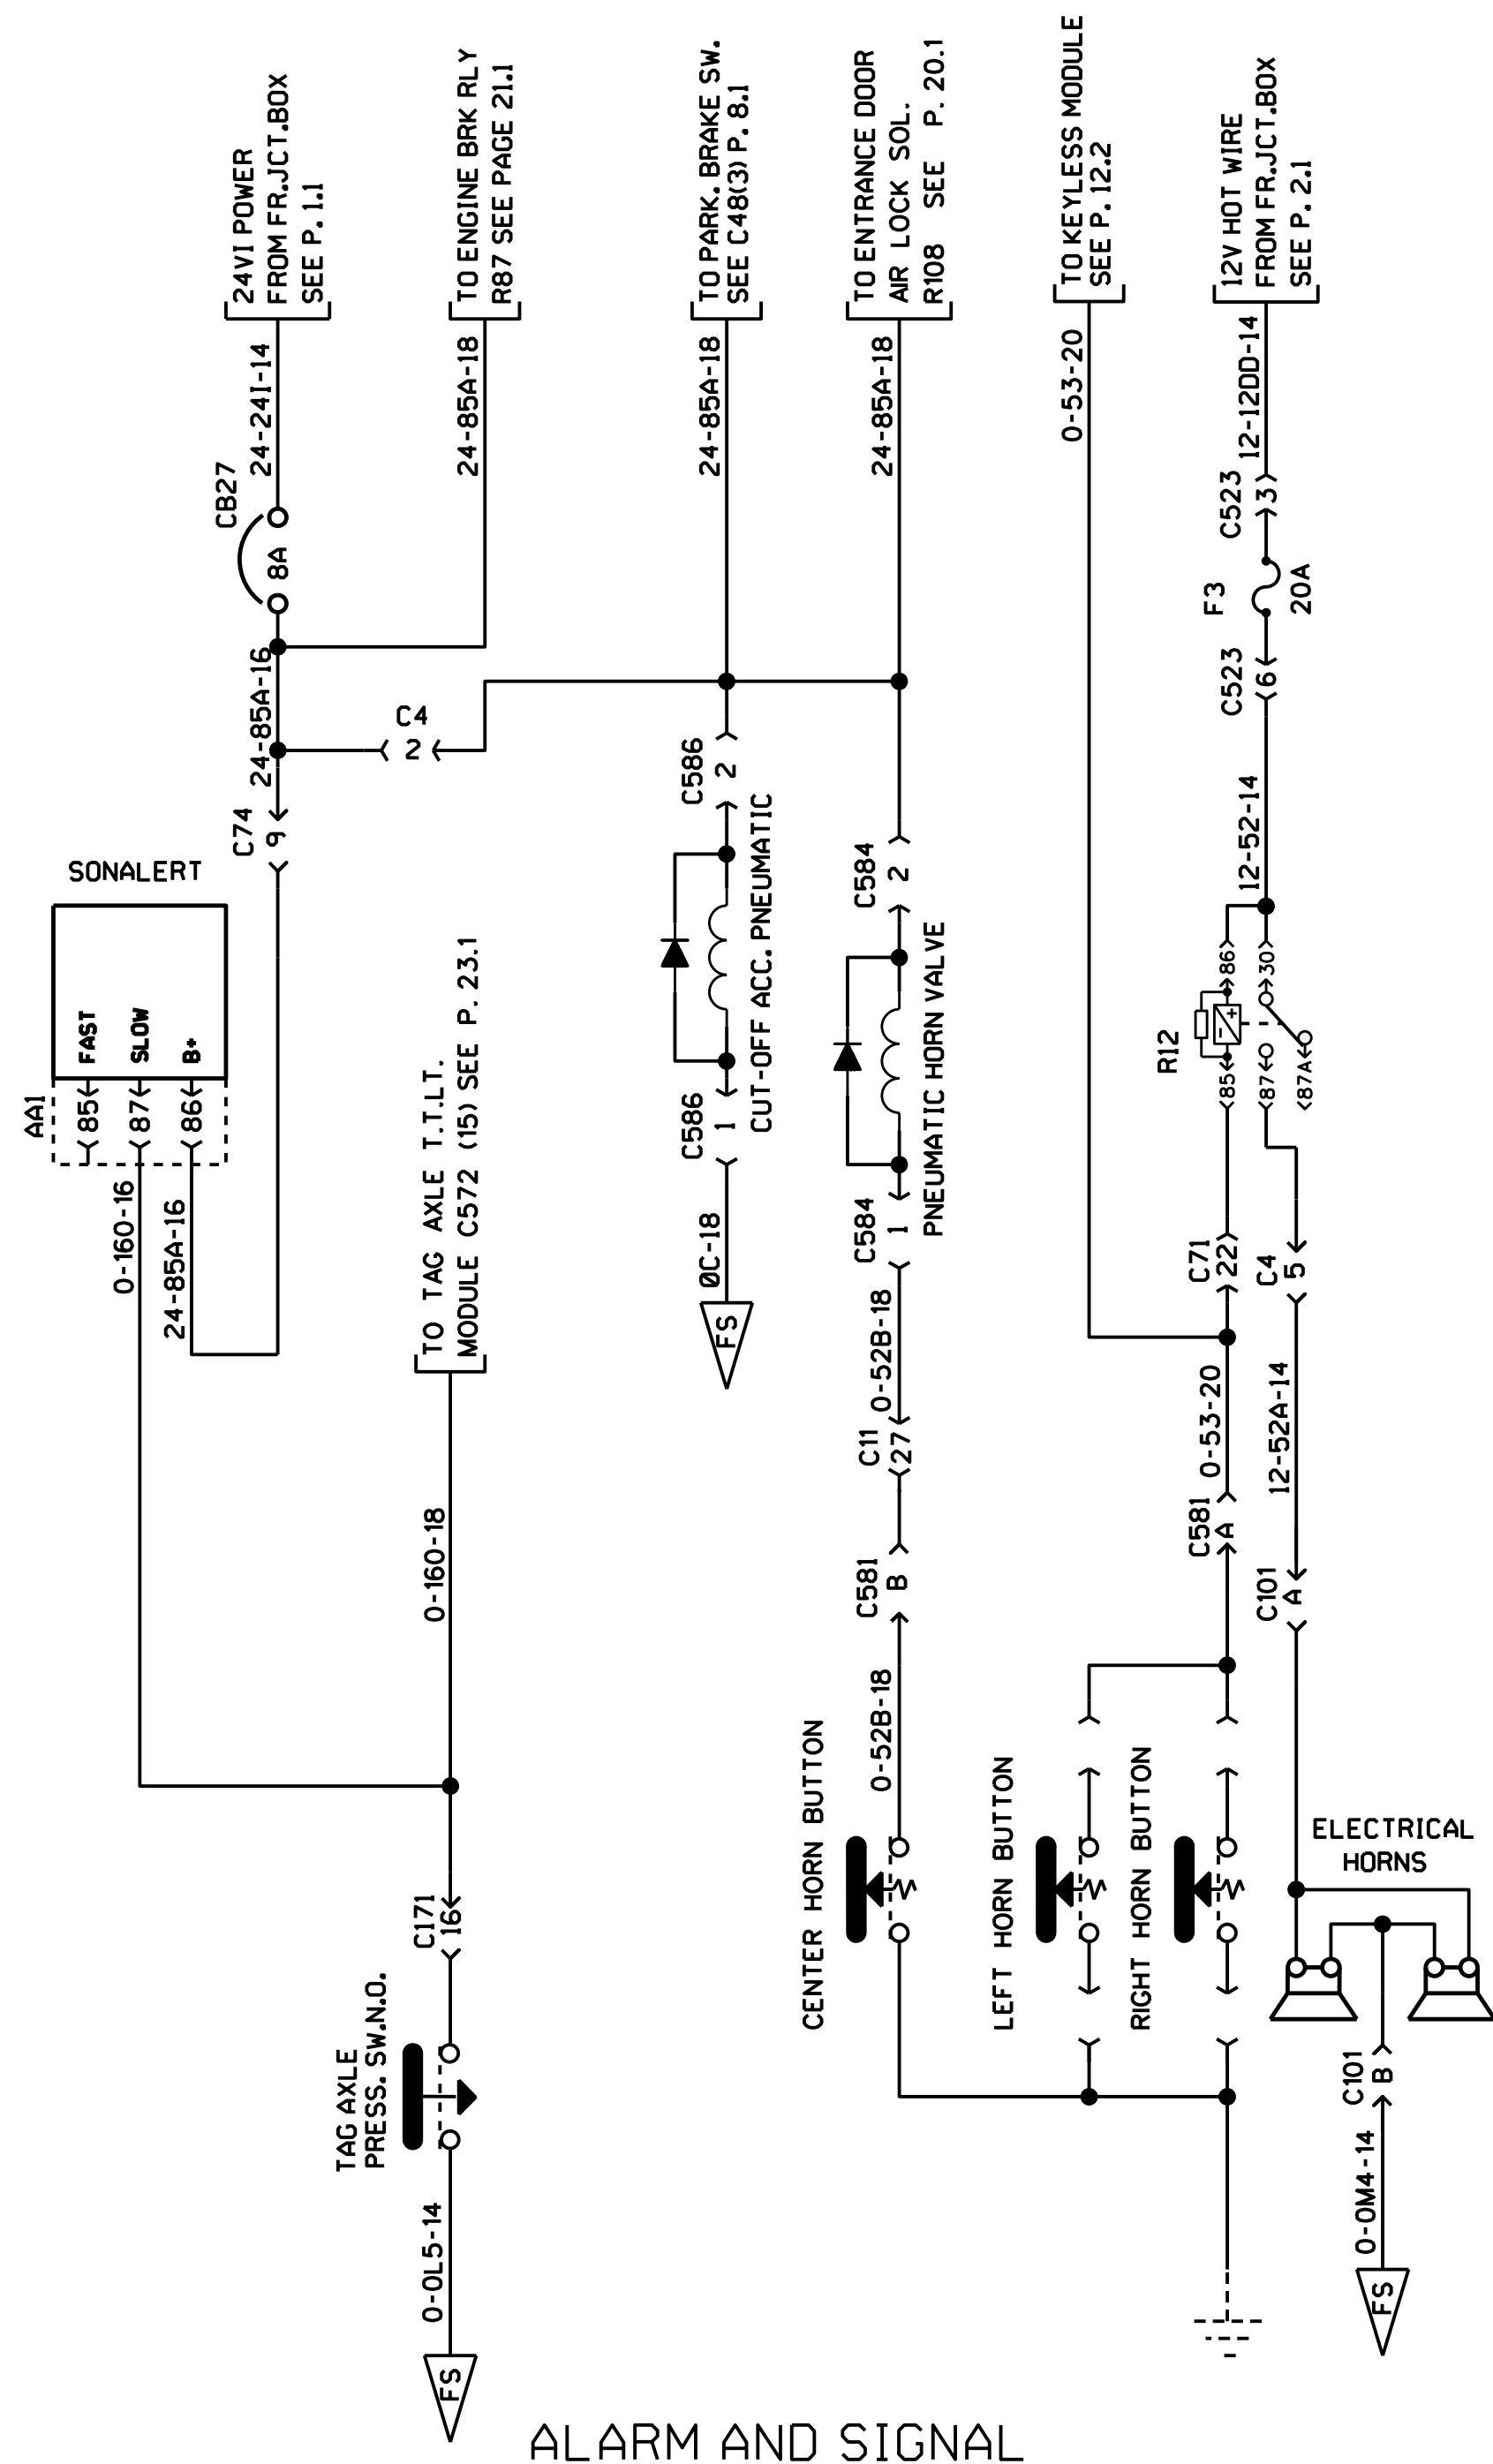


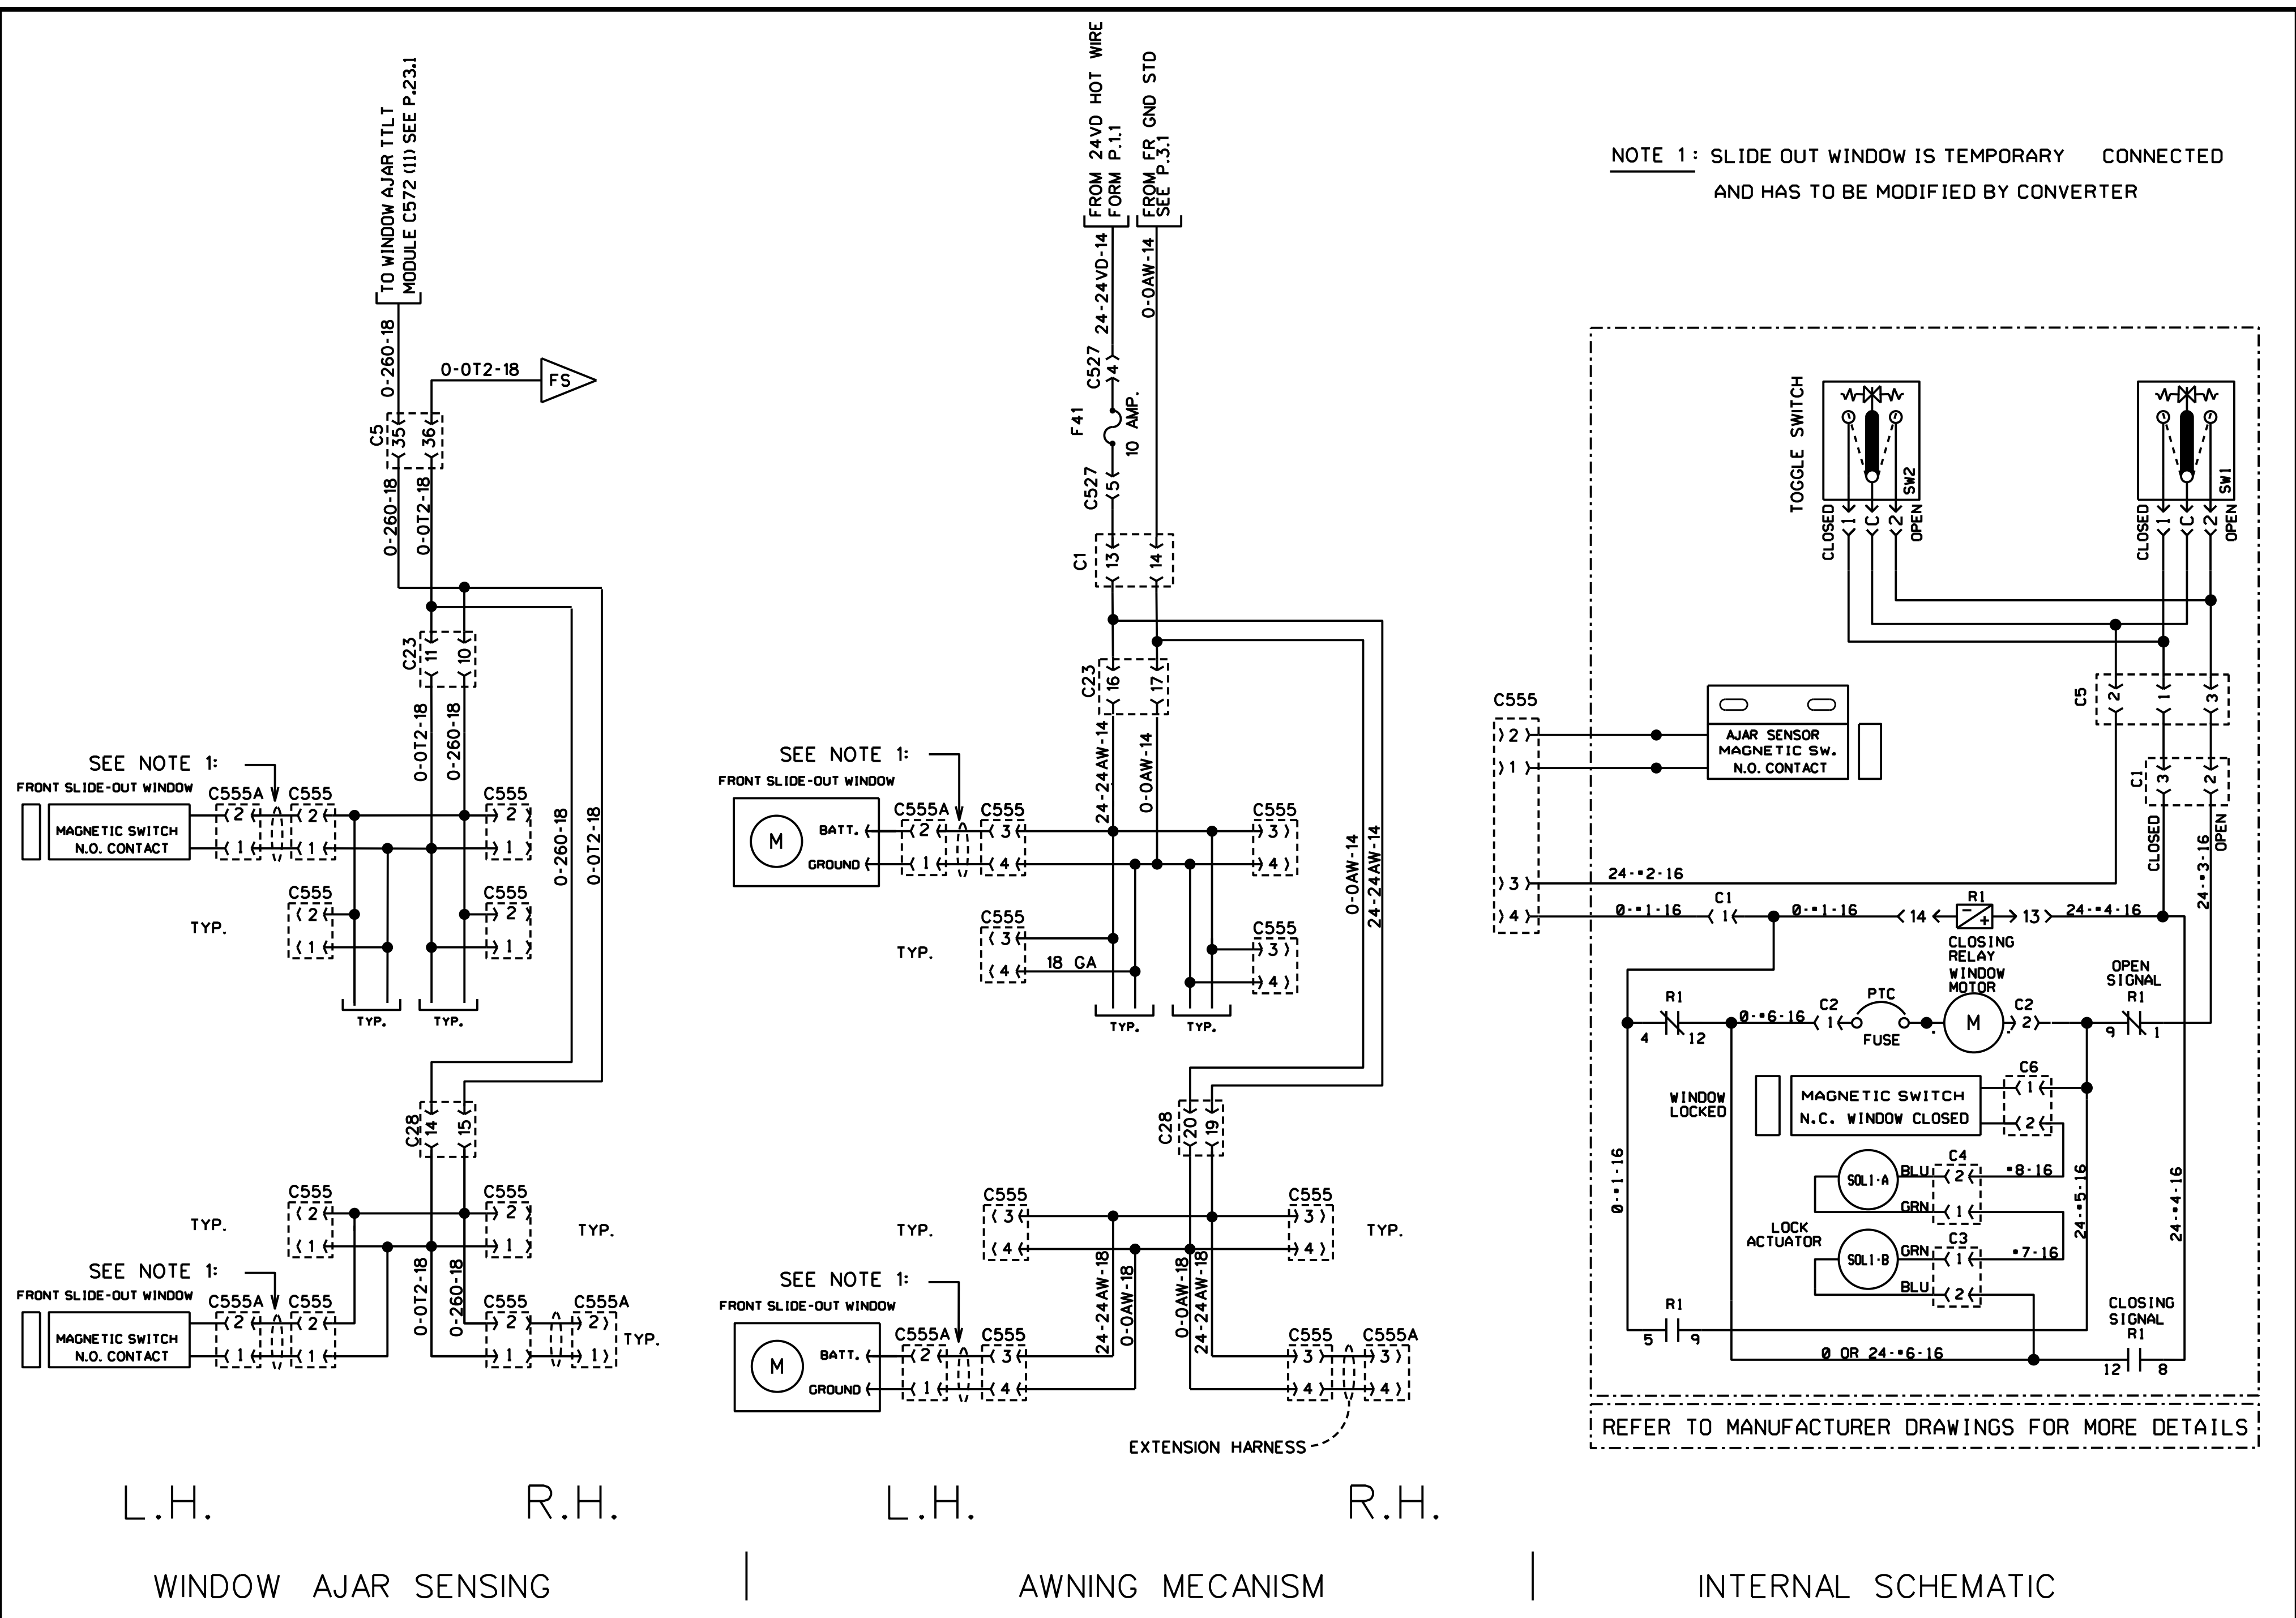

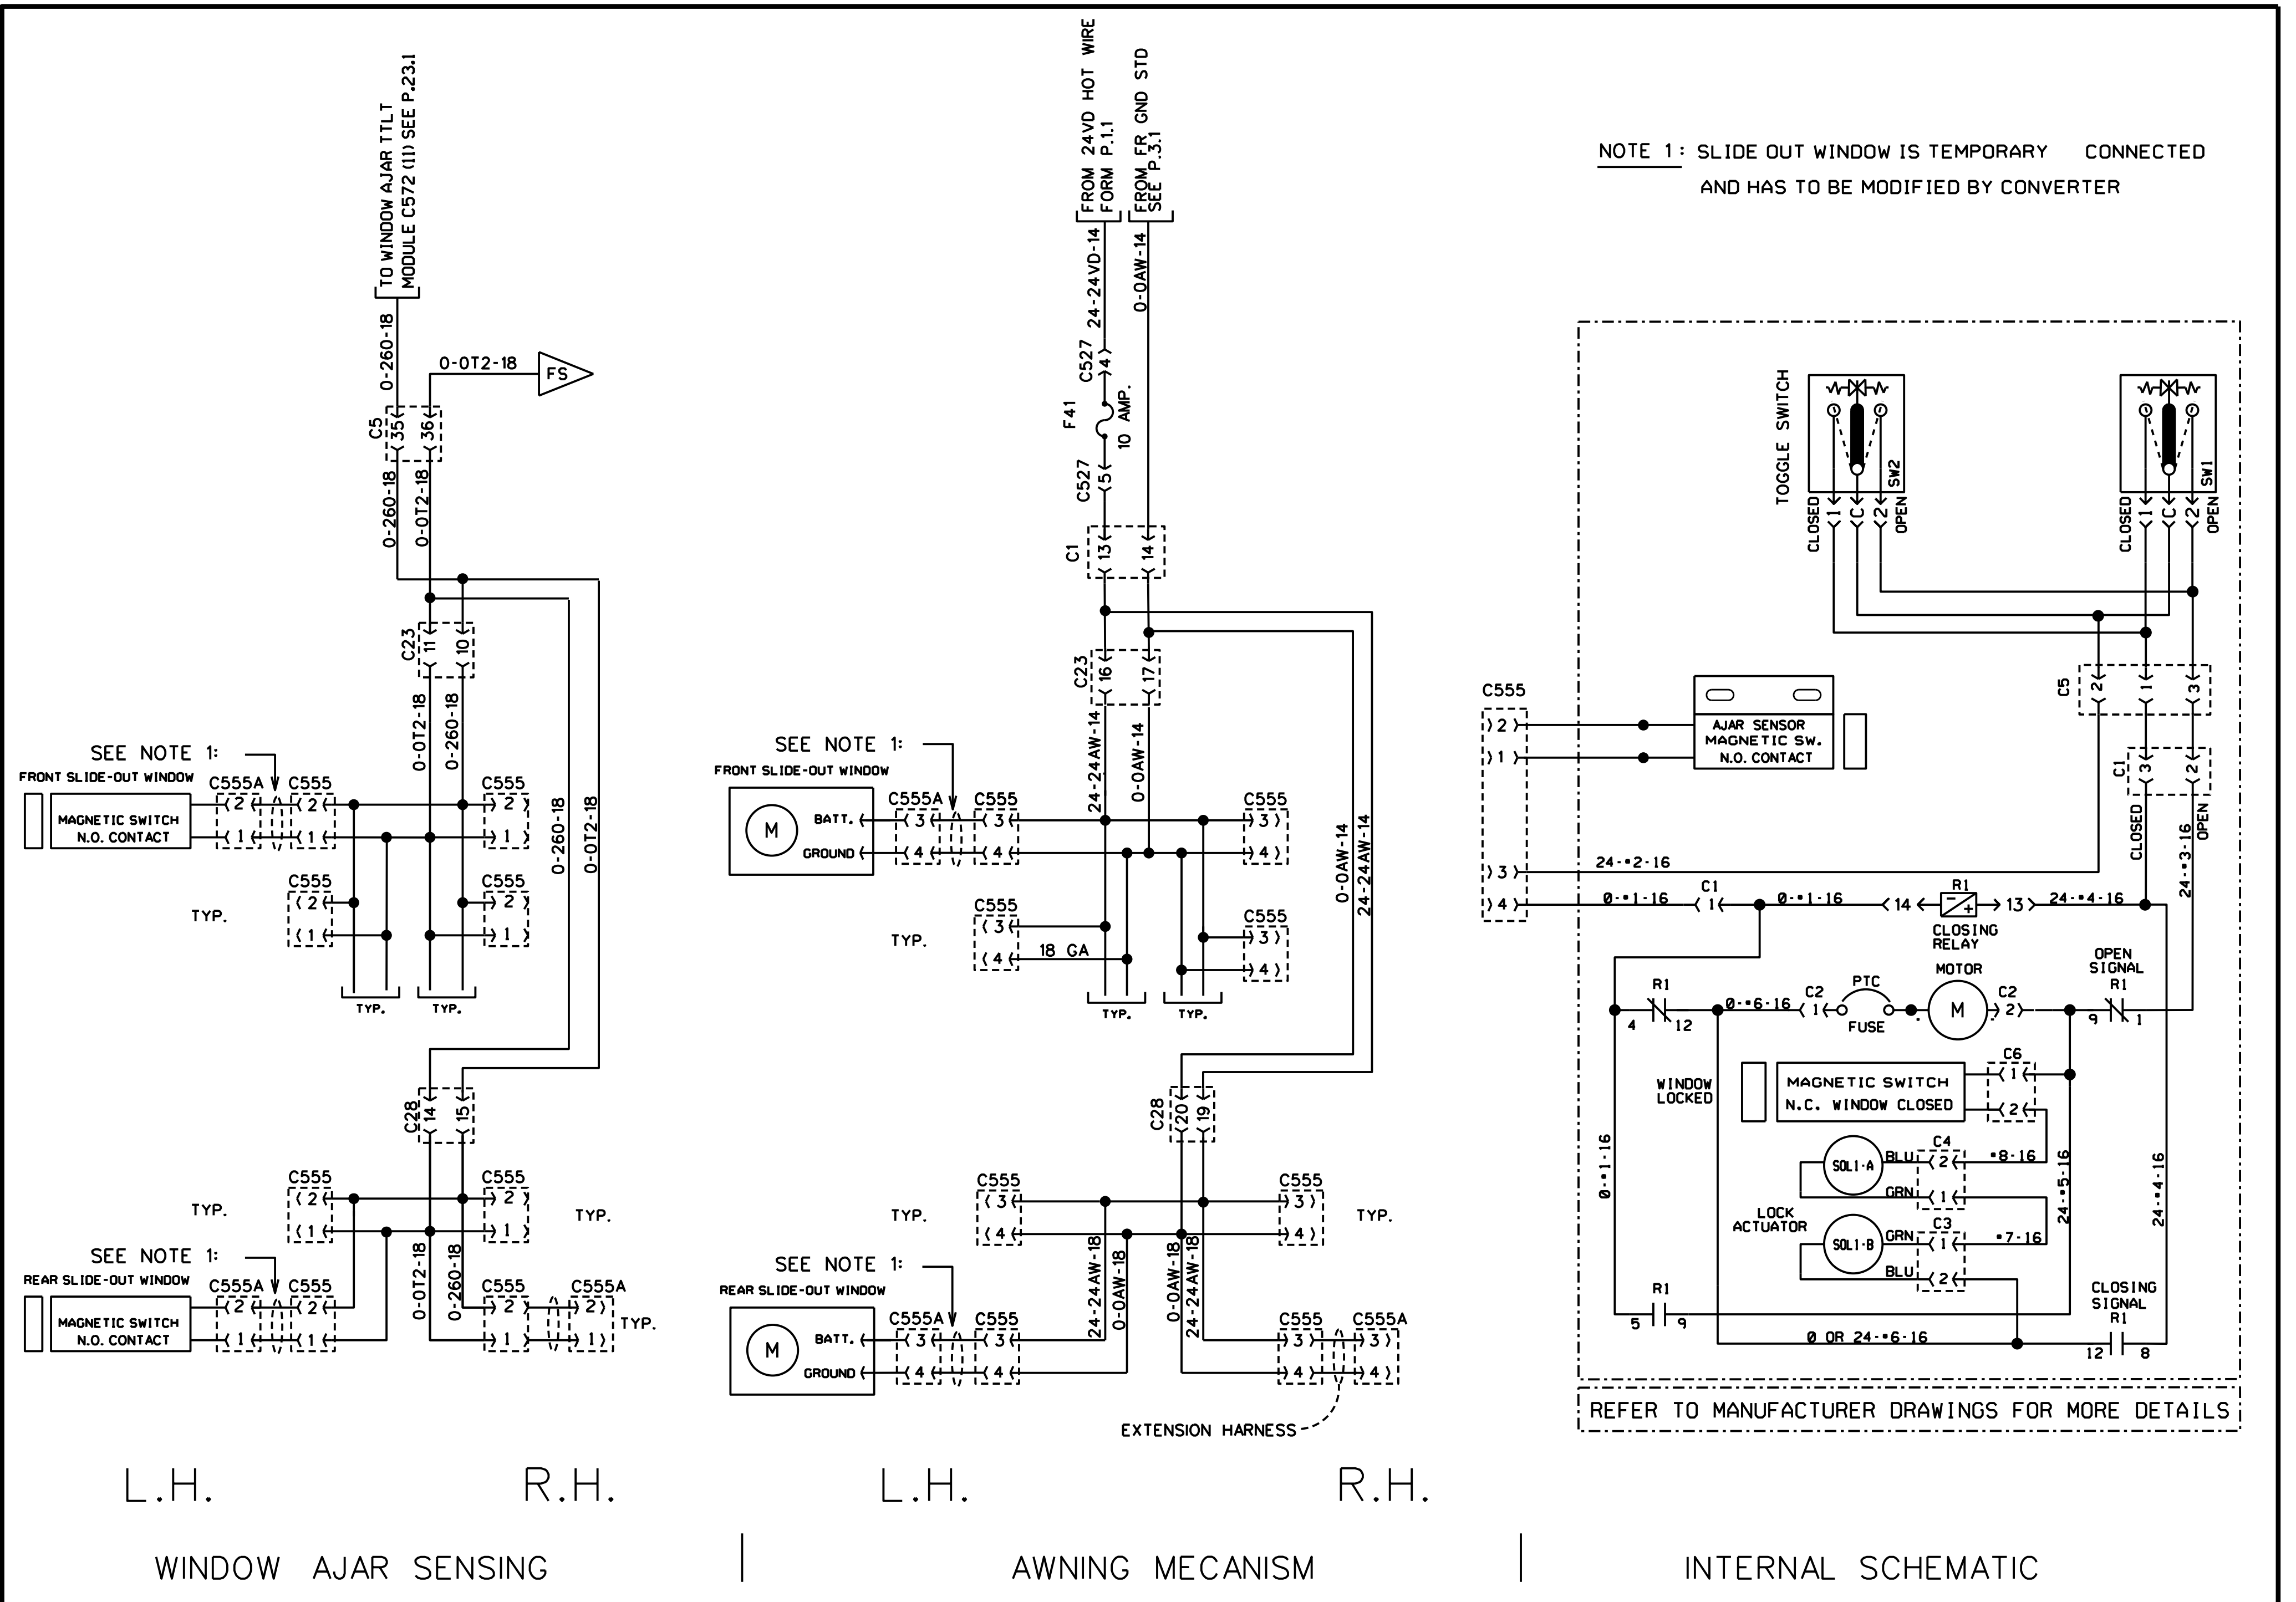


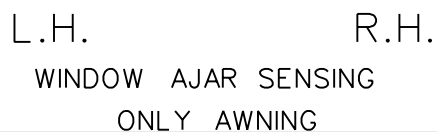


FOR INTERNAL SHEMATIC
SEE P 7.4 FOR AWNING WINDOW
P 7.5 FOR SLIDING WINDOW

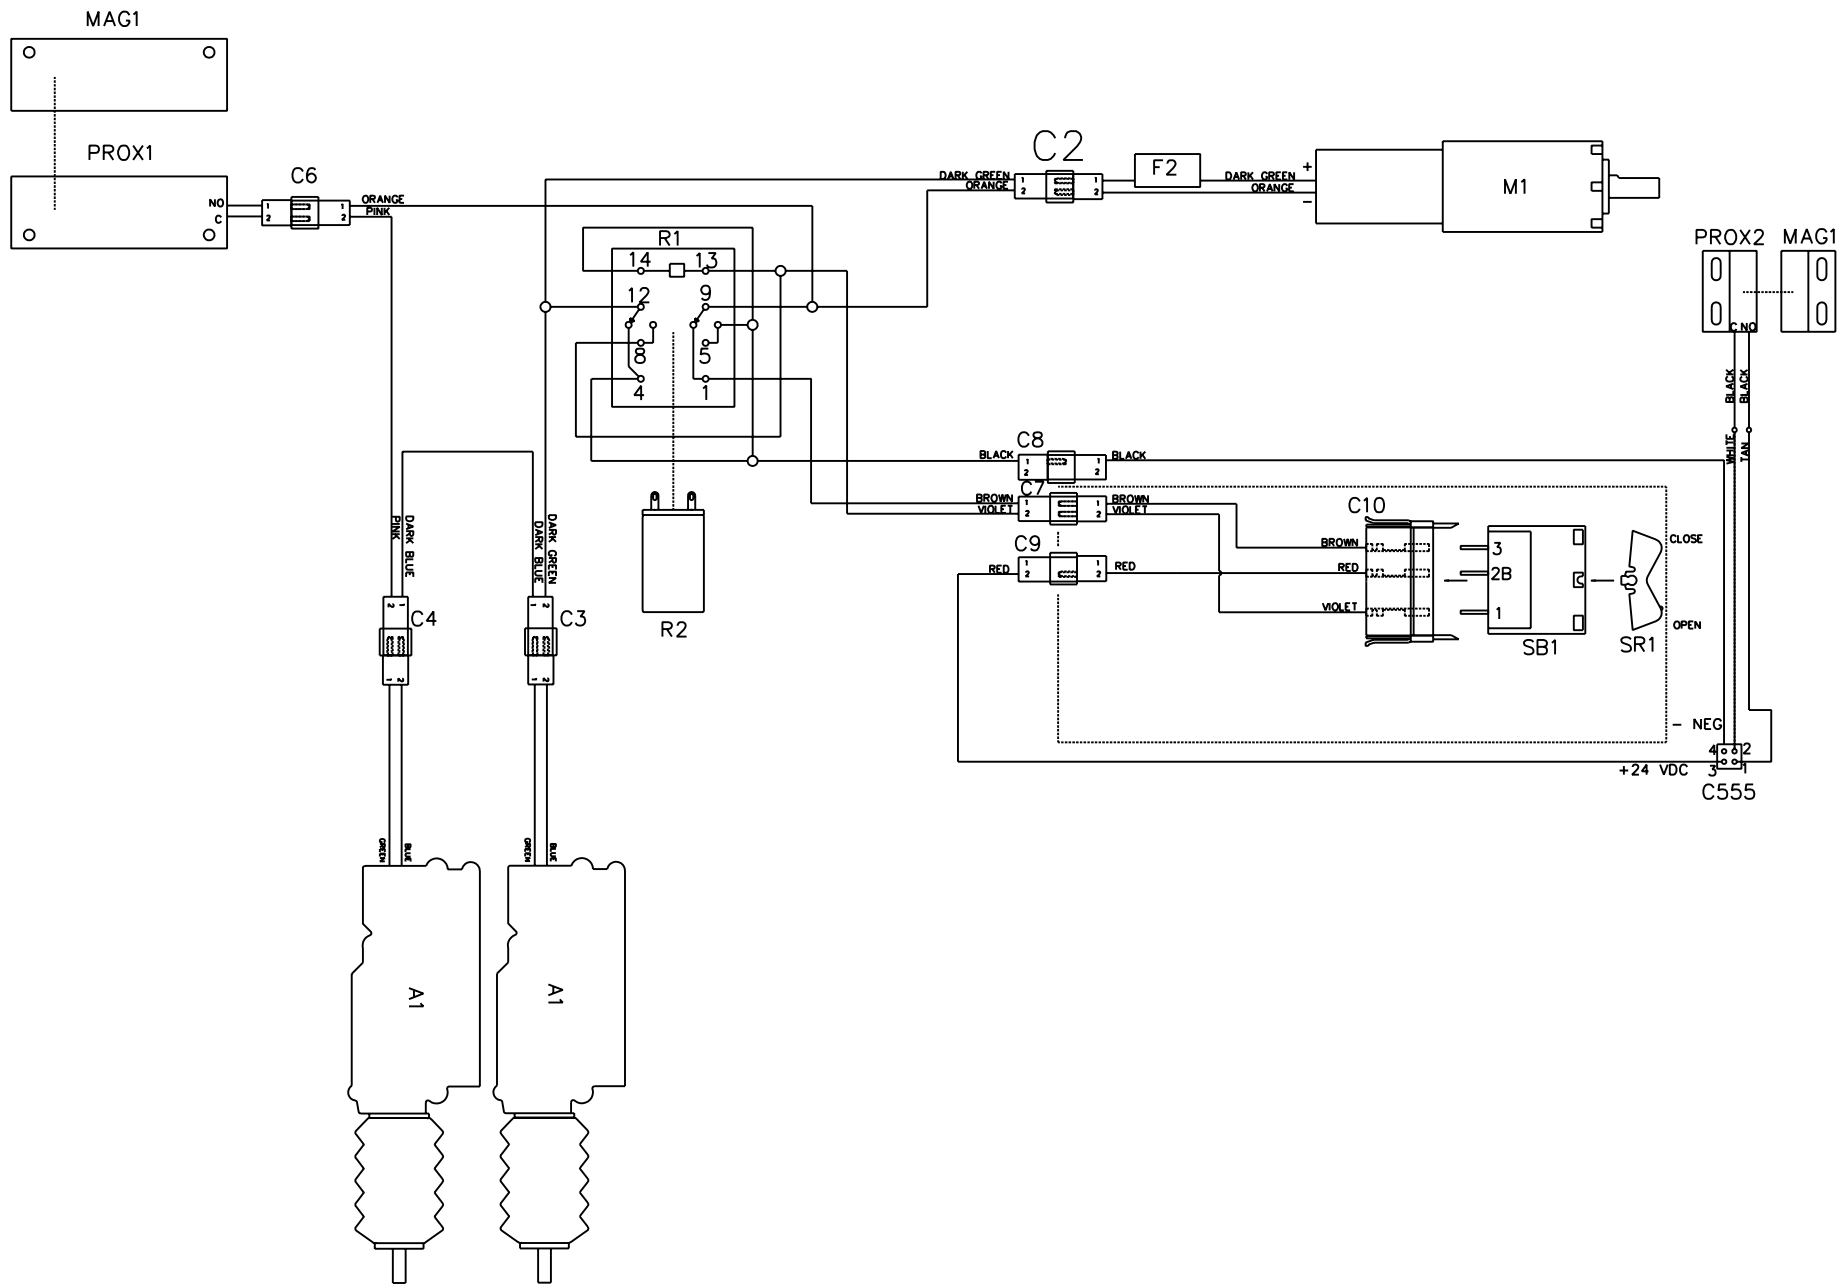



INTERNAL SCHEMATIC AWNING WINDOW

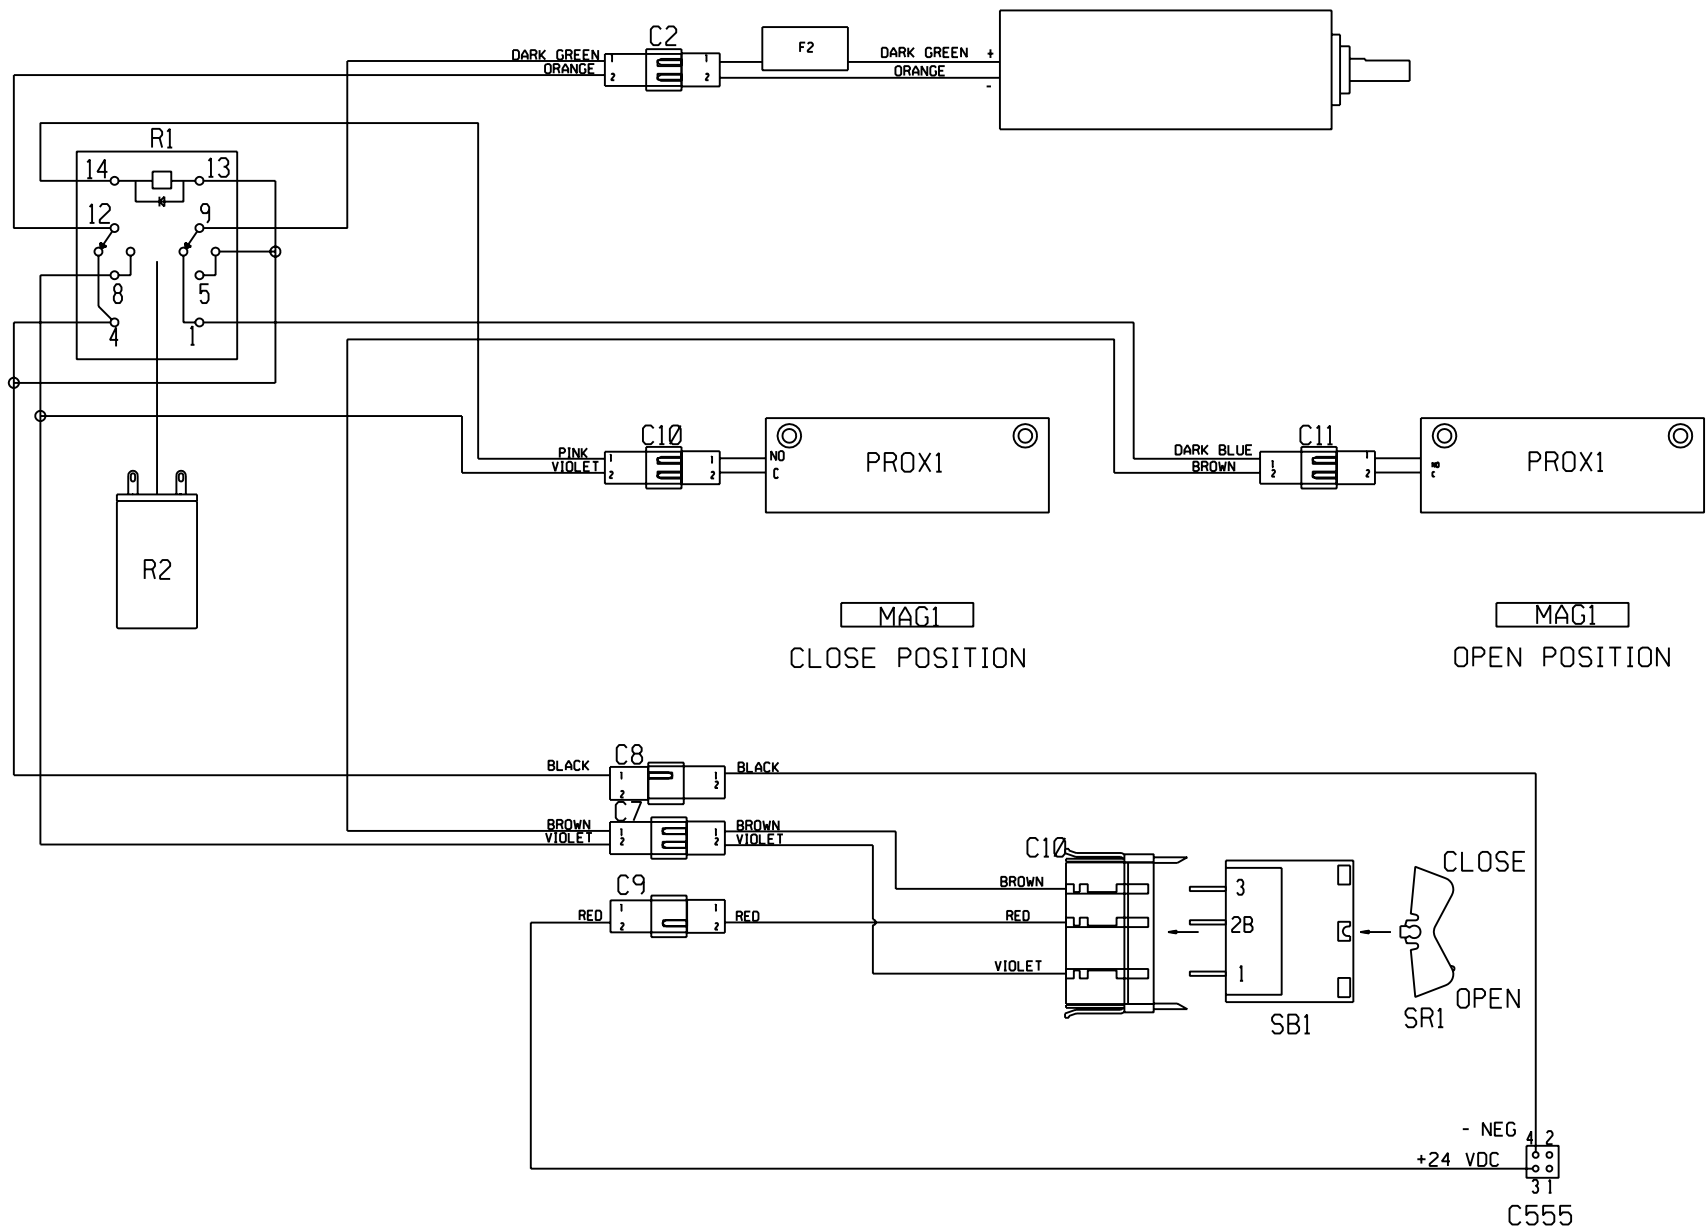



INTERNAL SCHEMATIC SLIDING WINDOW

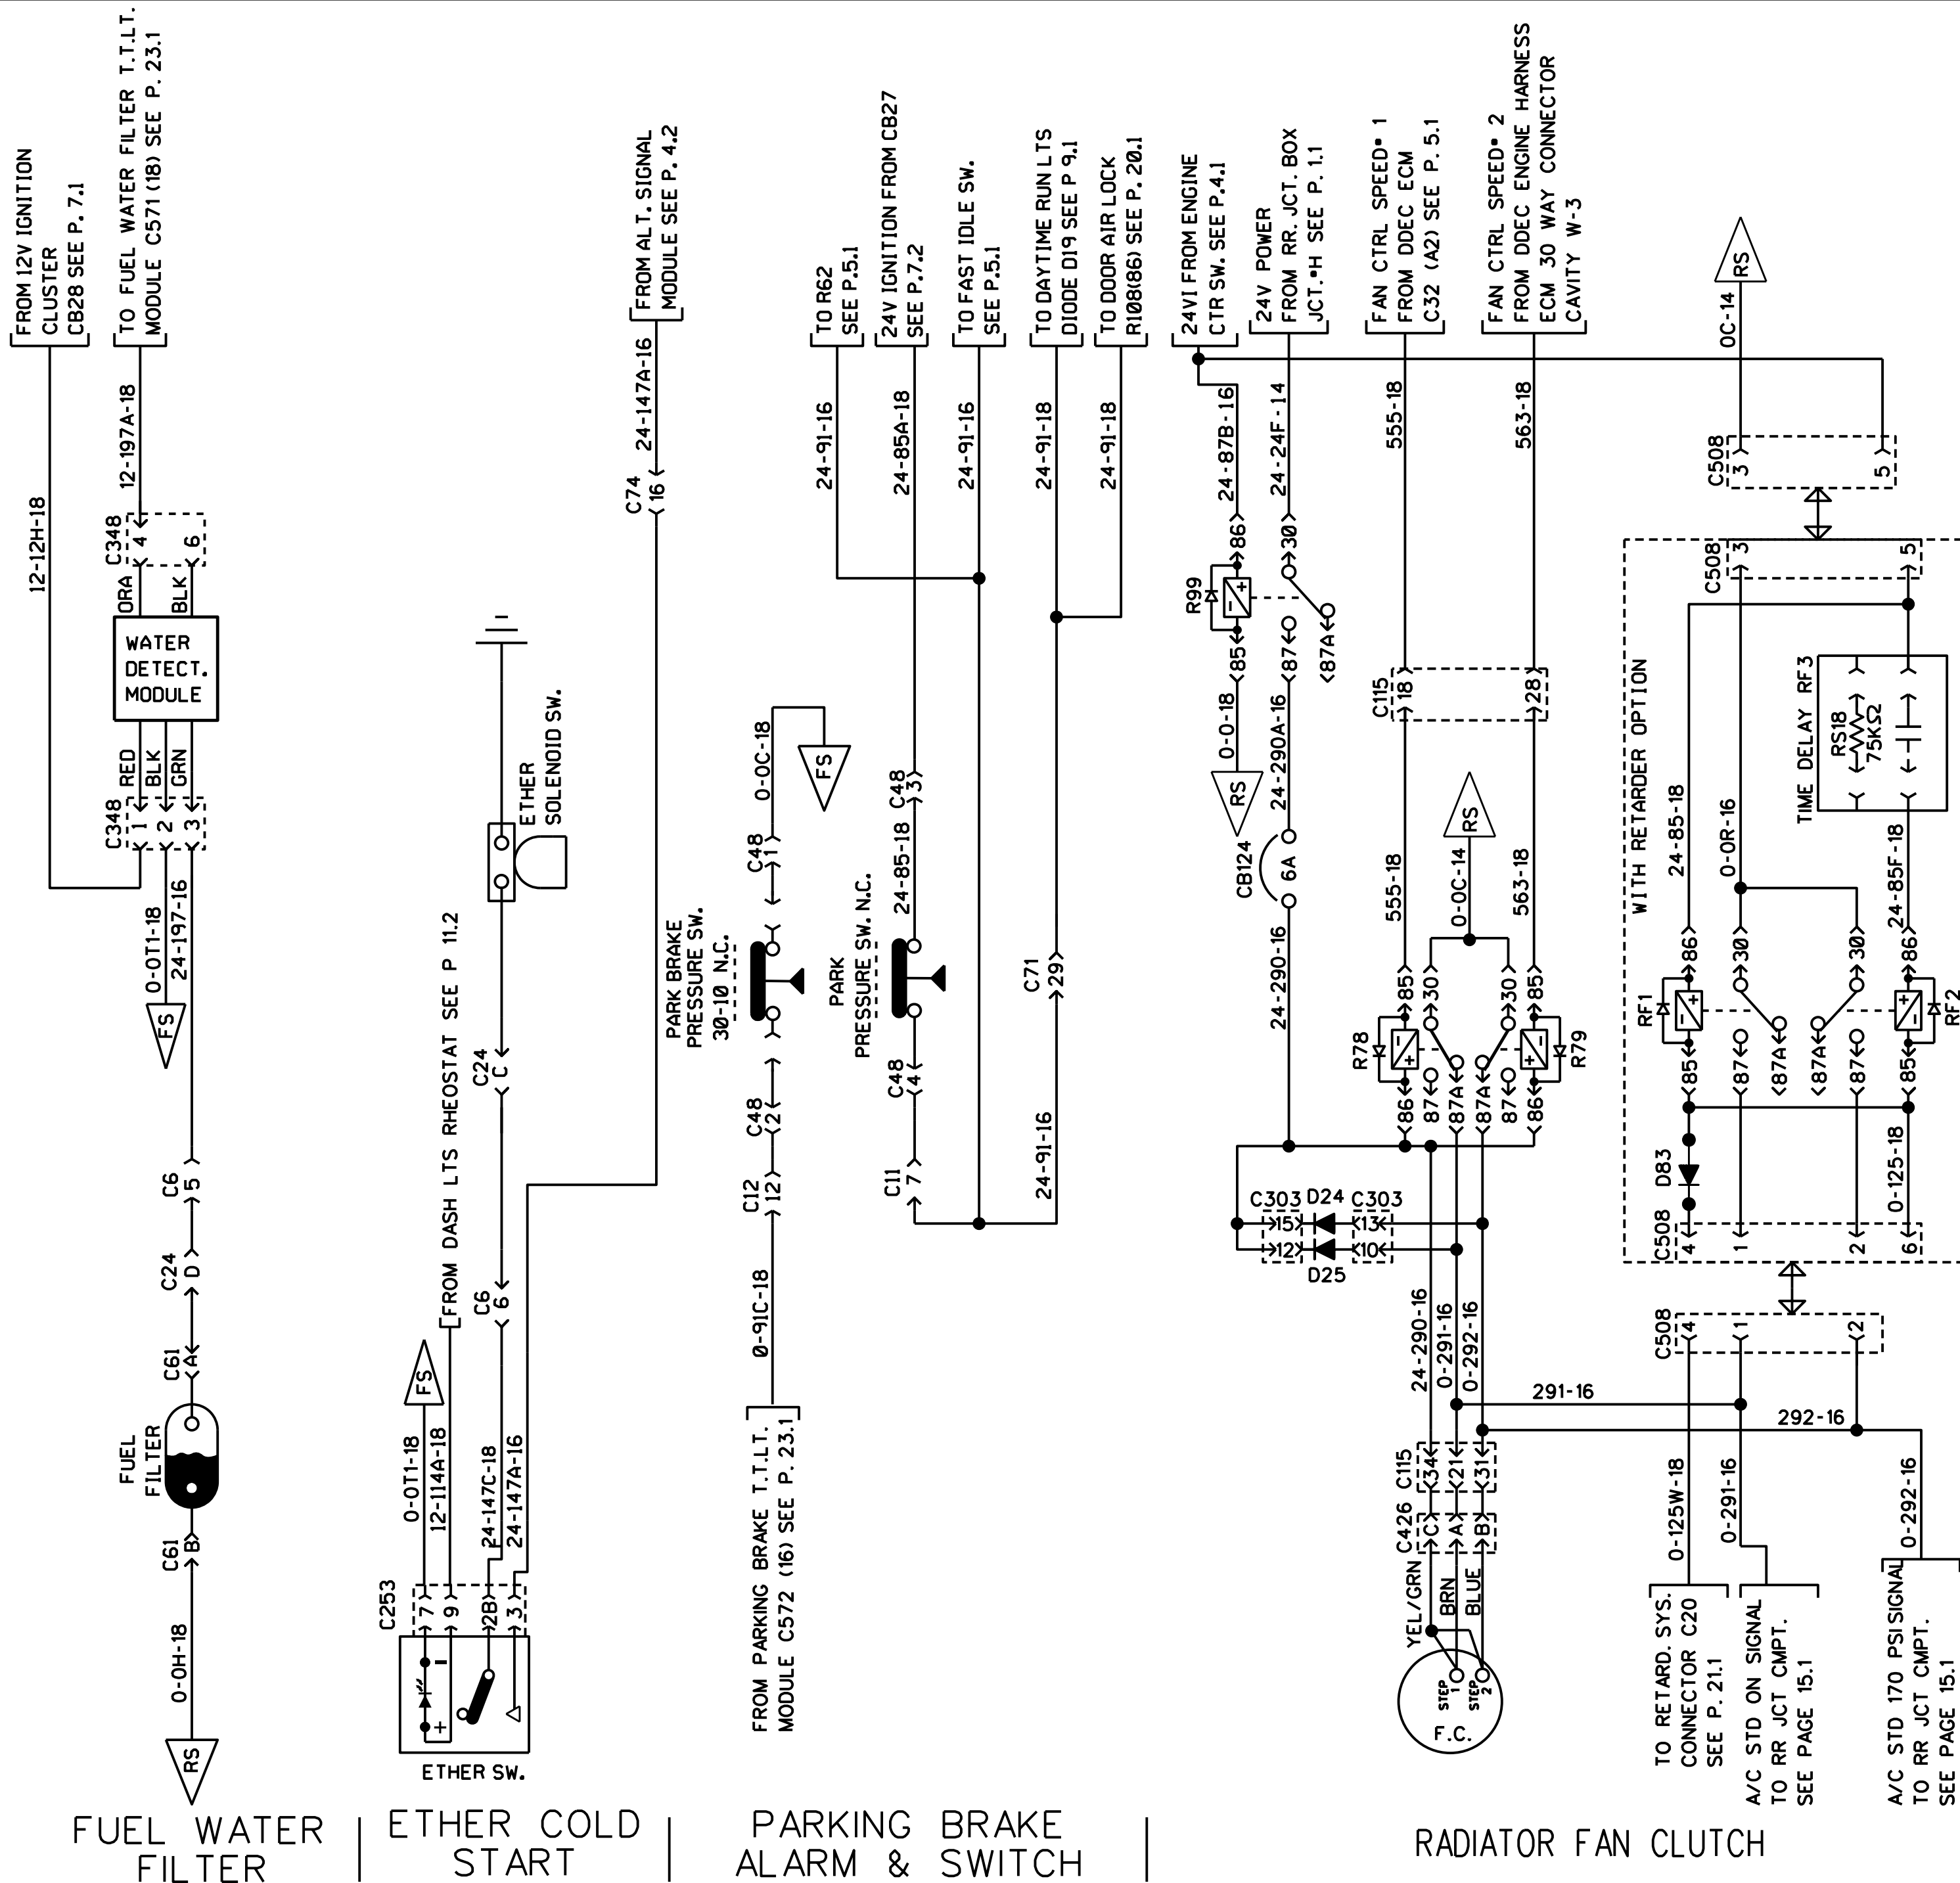


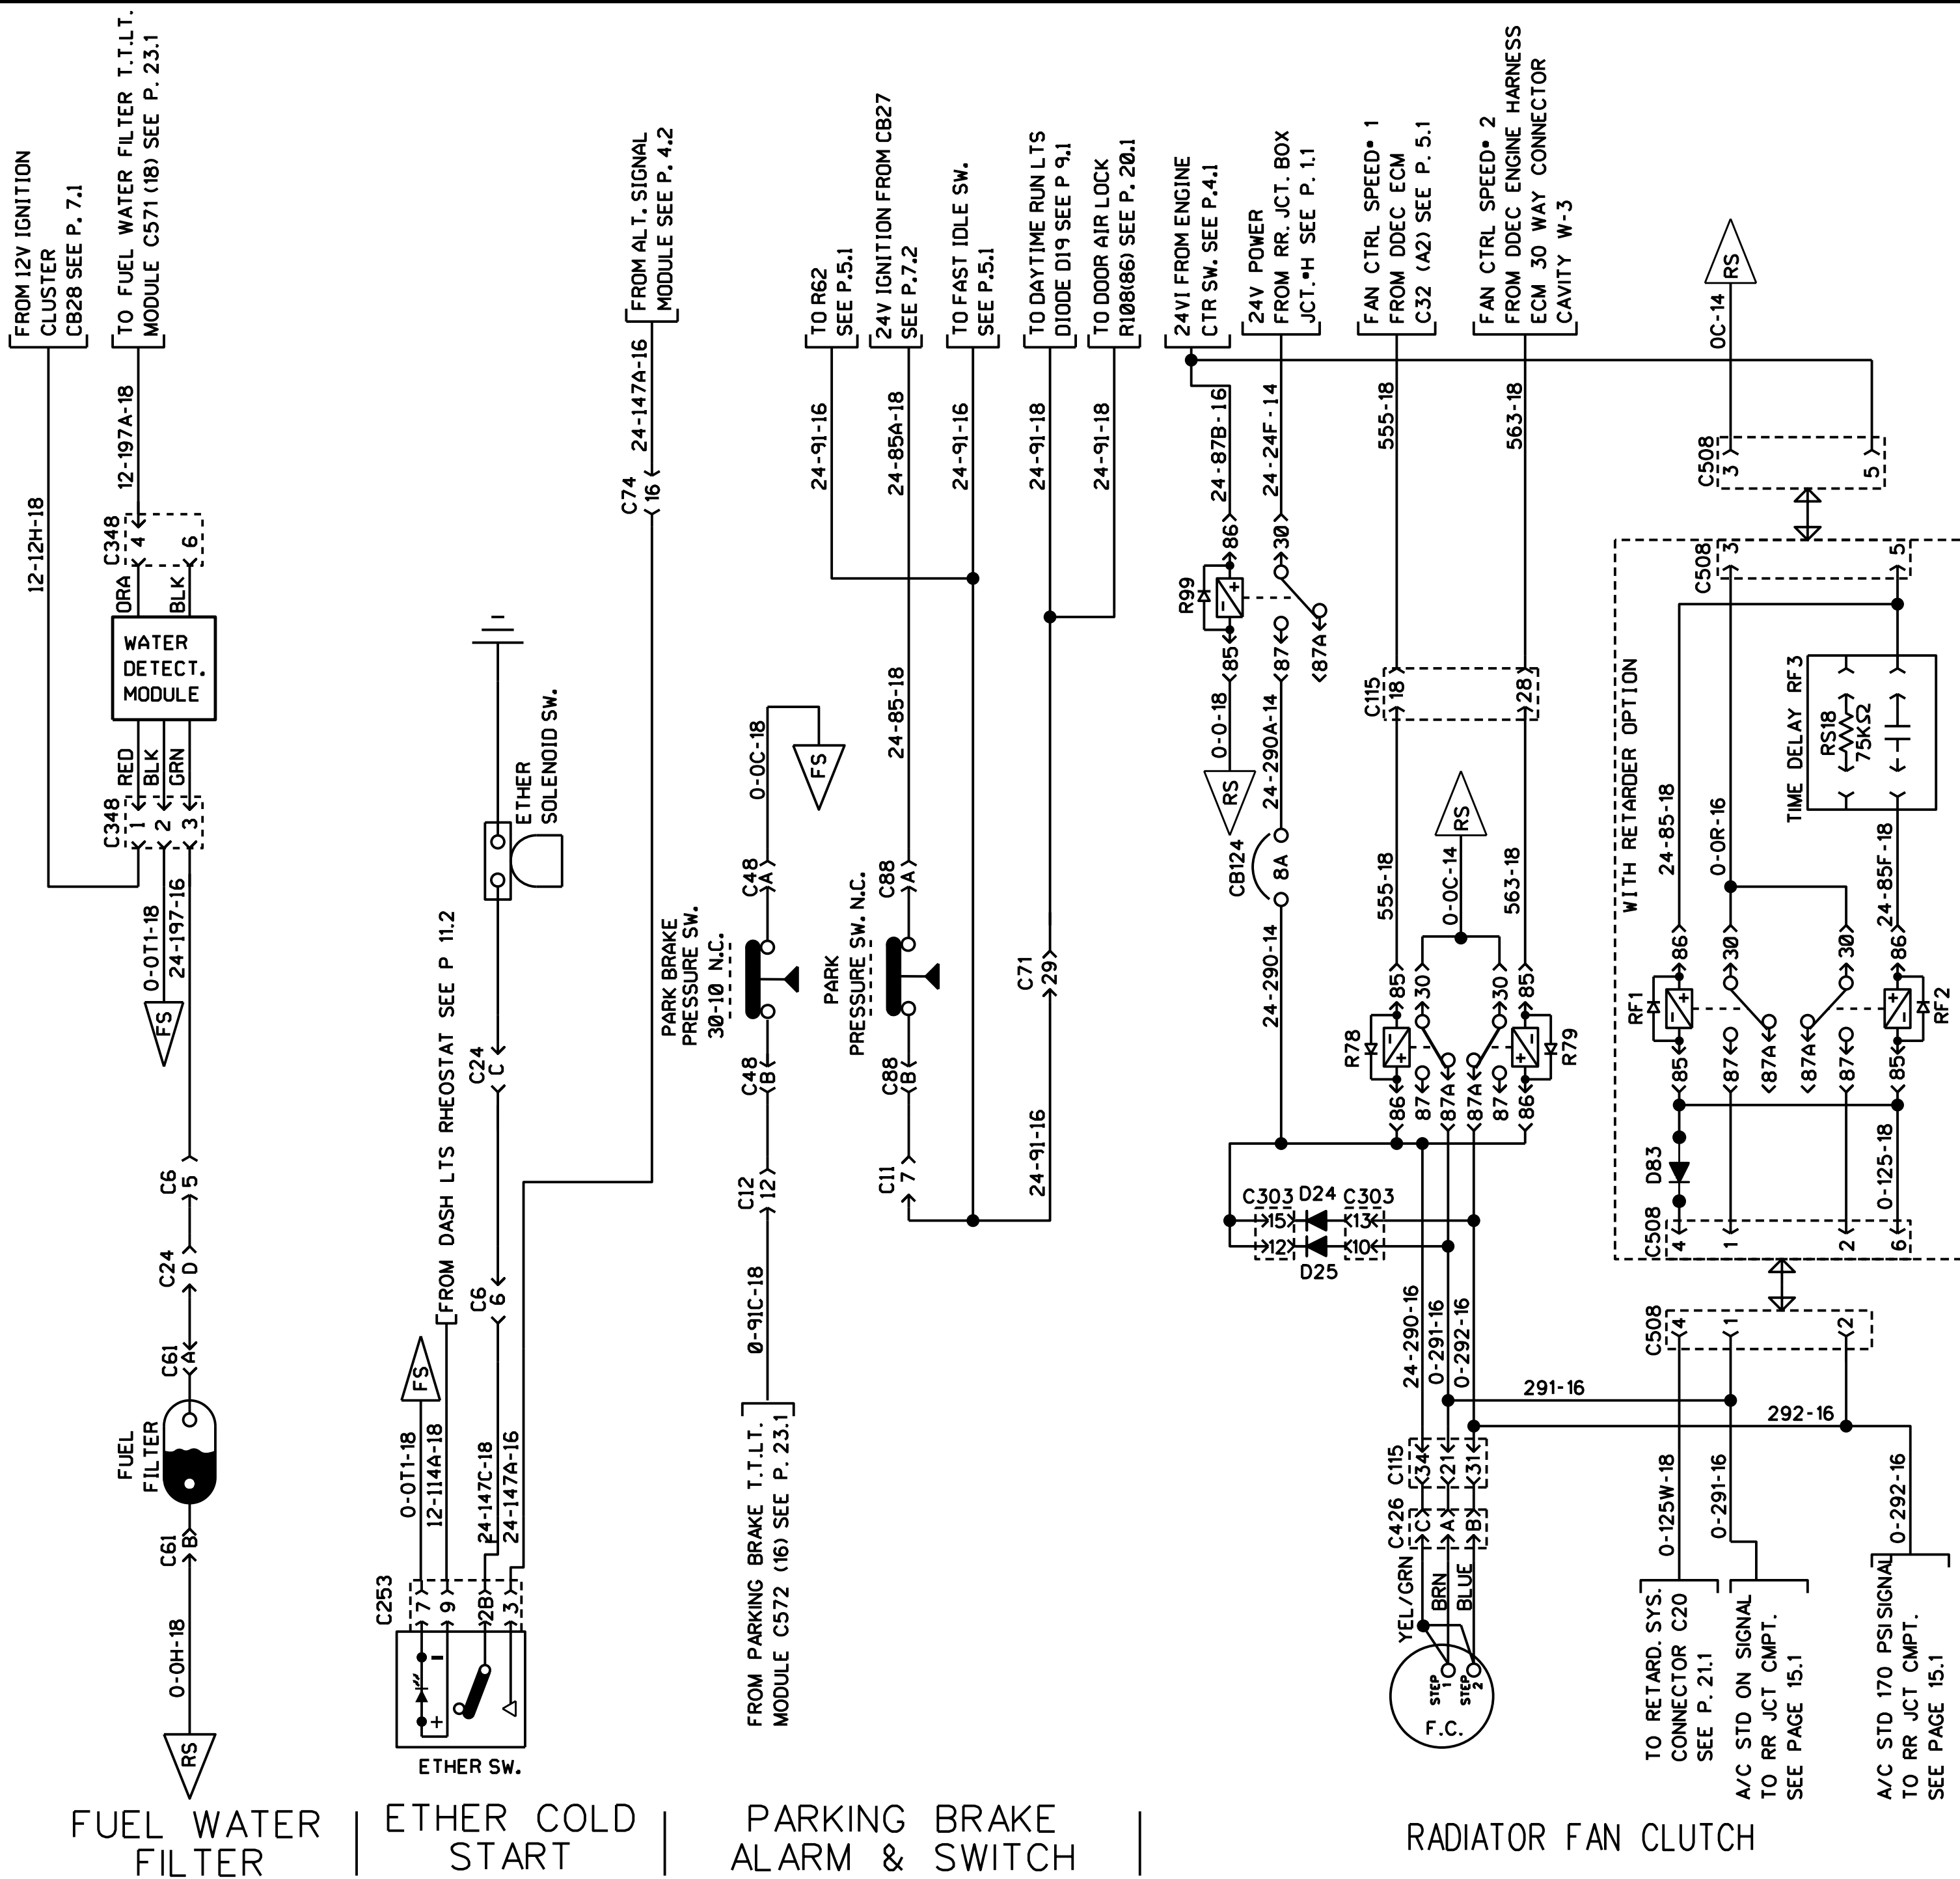


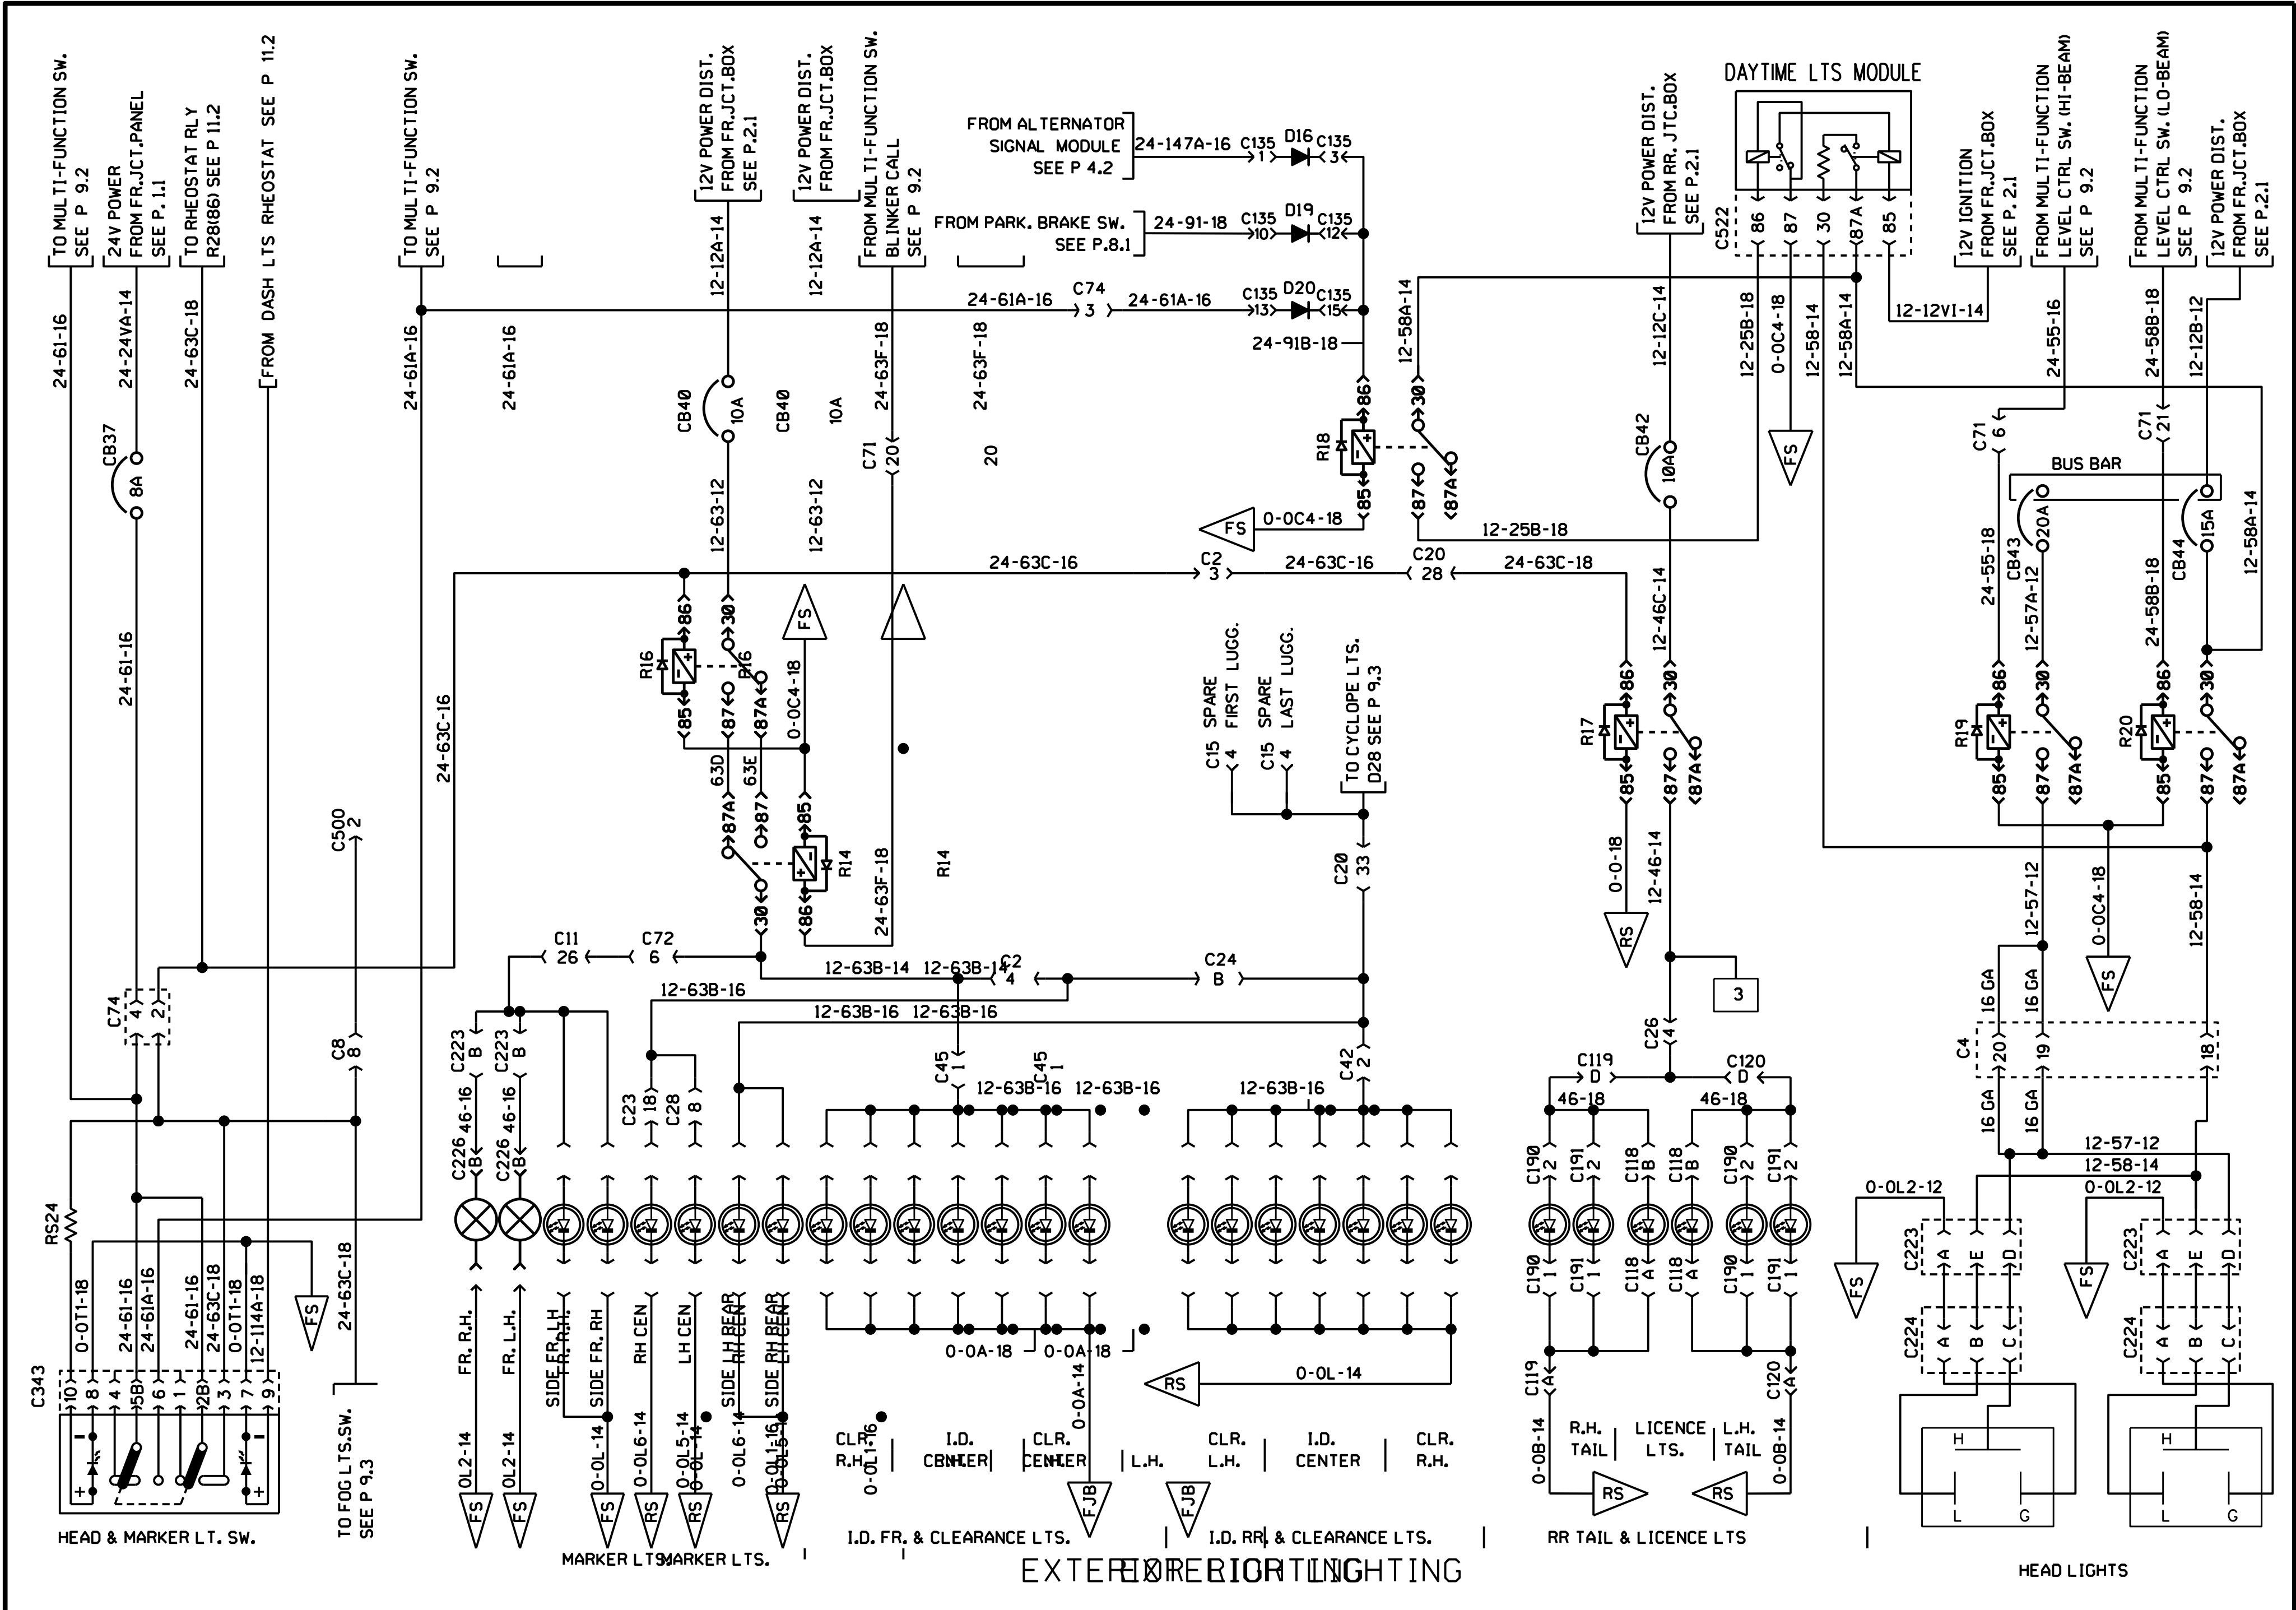


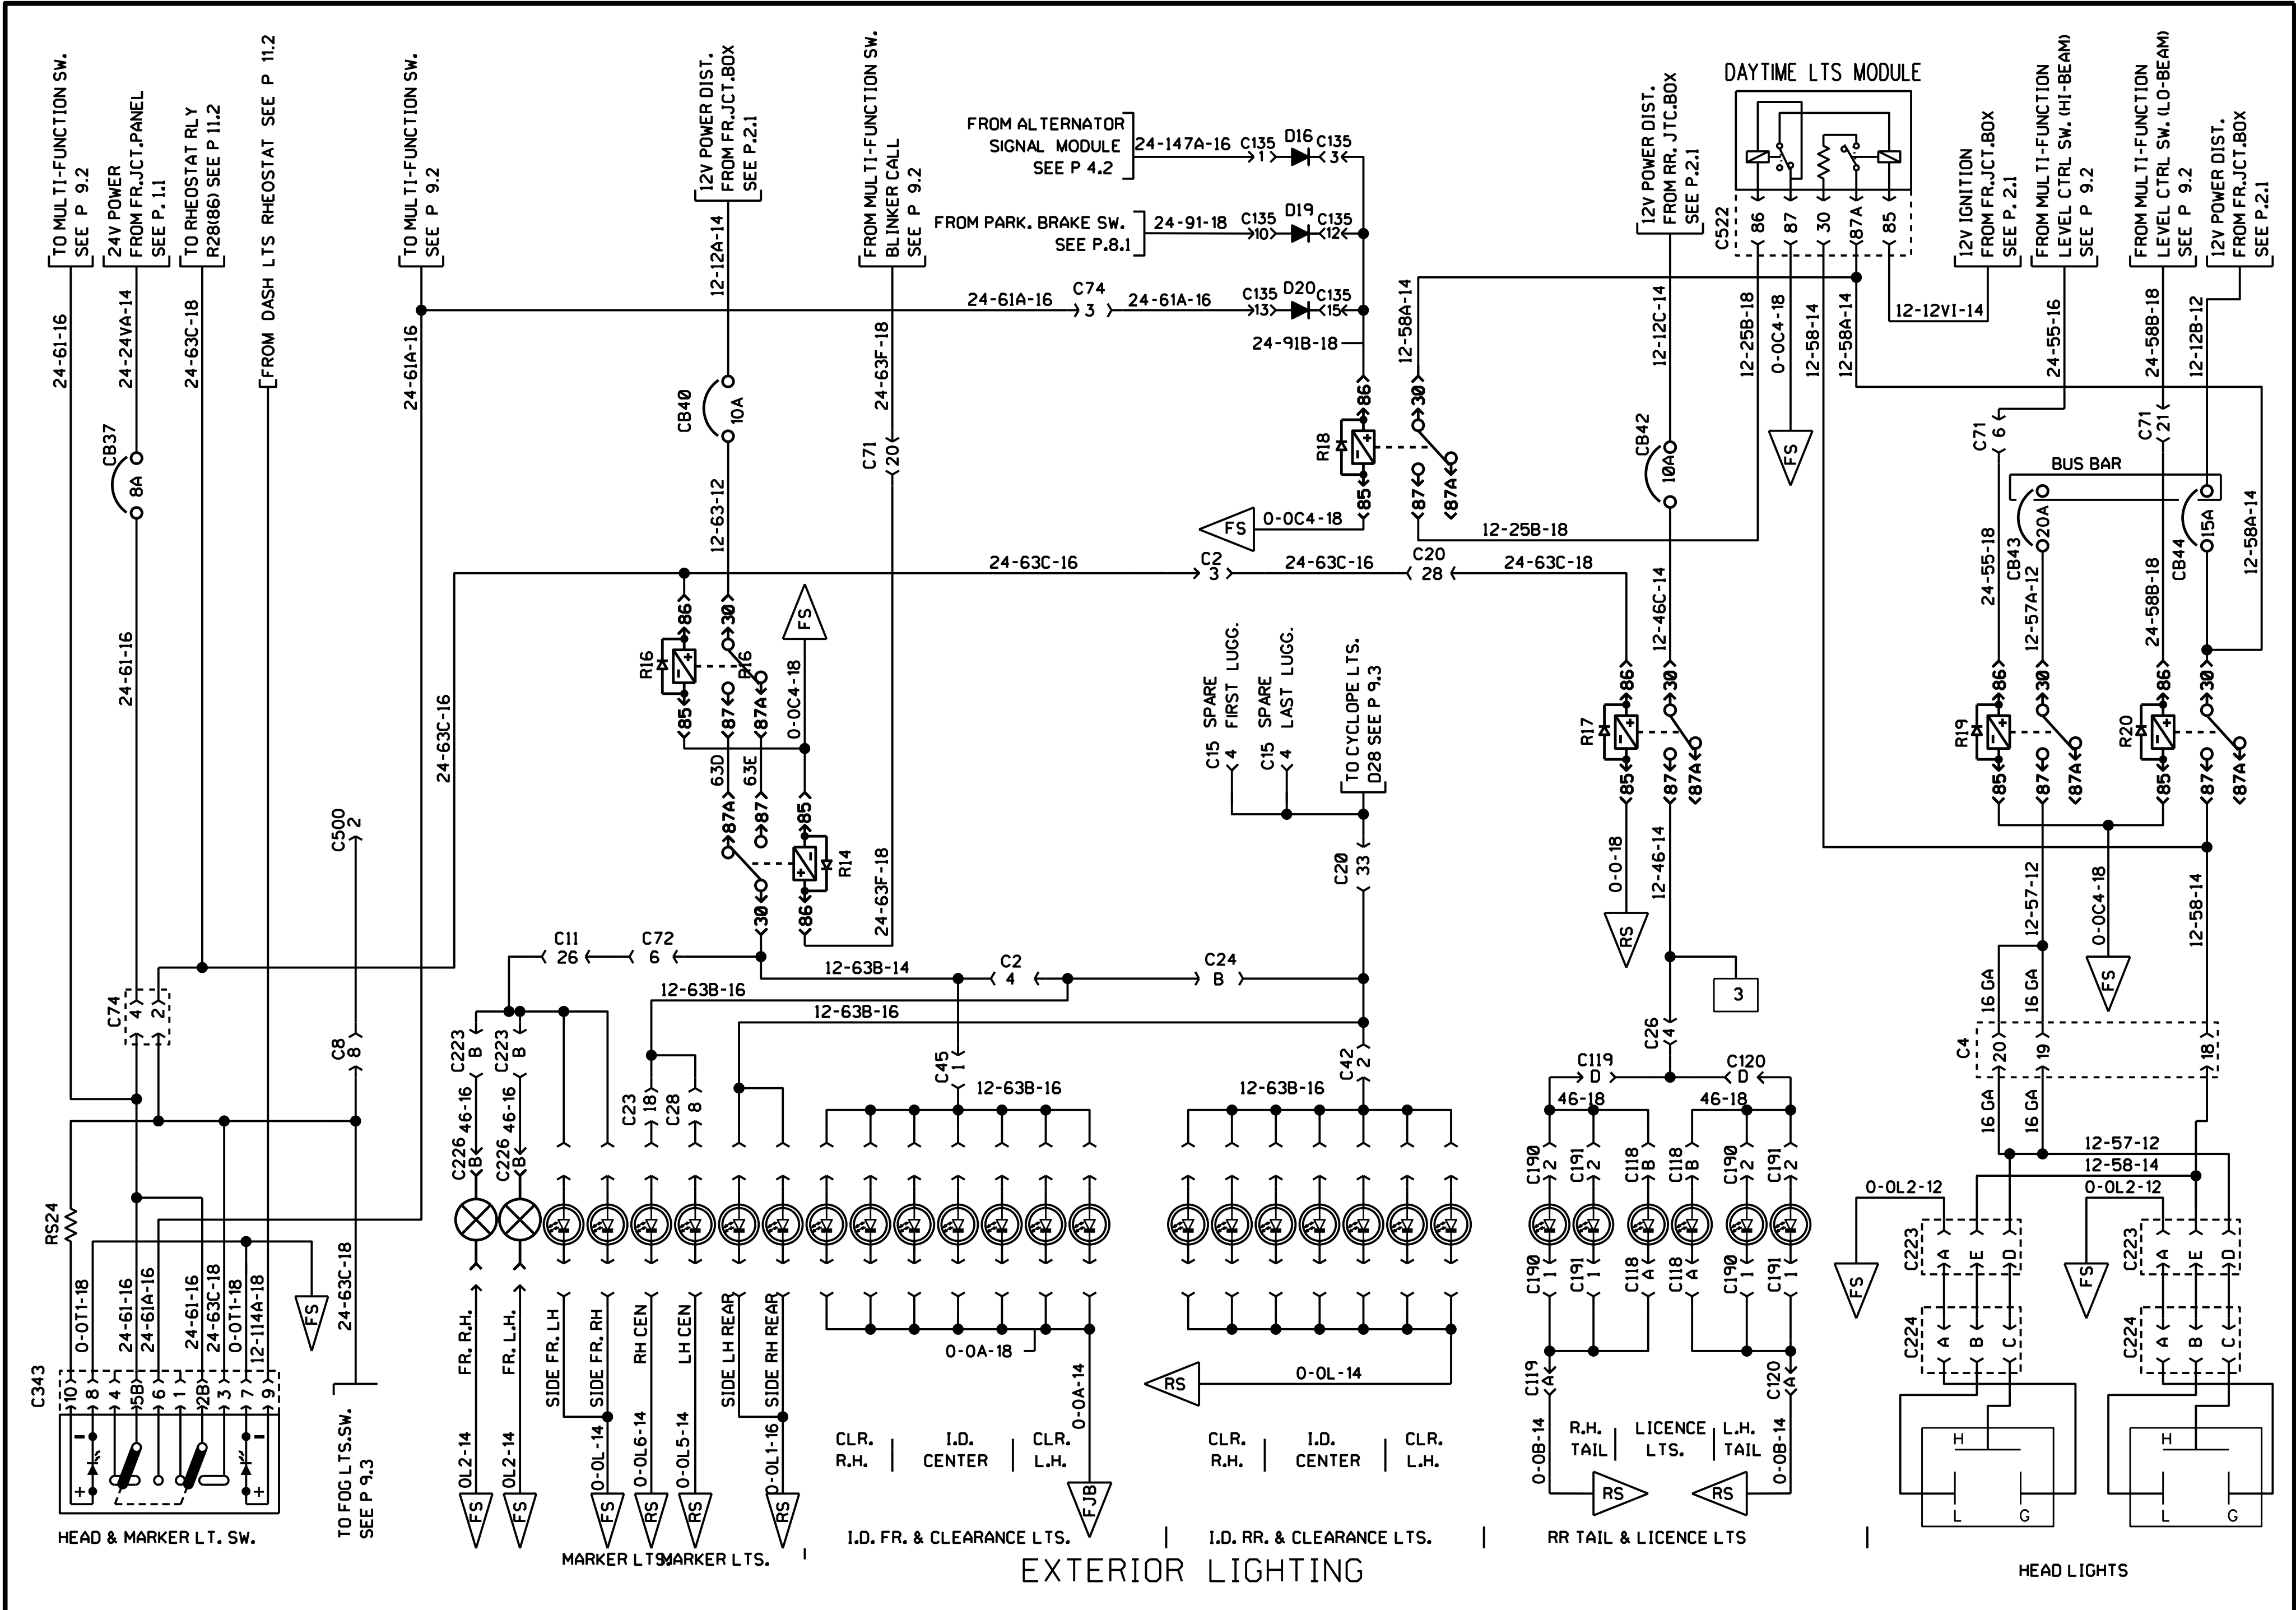


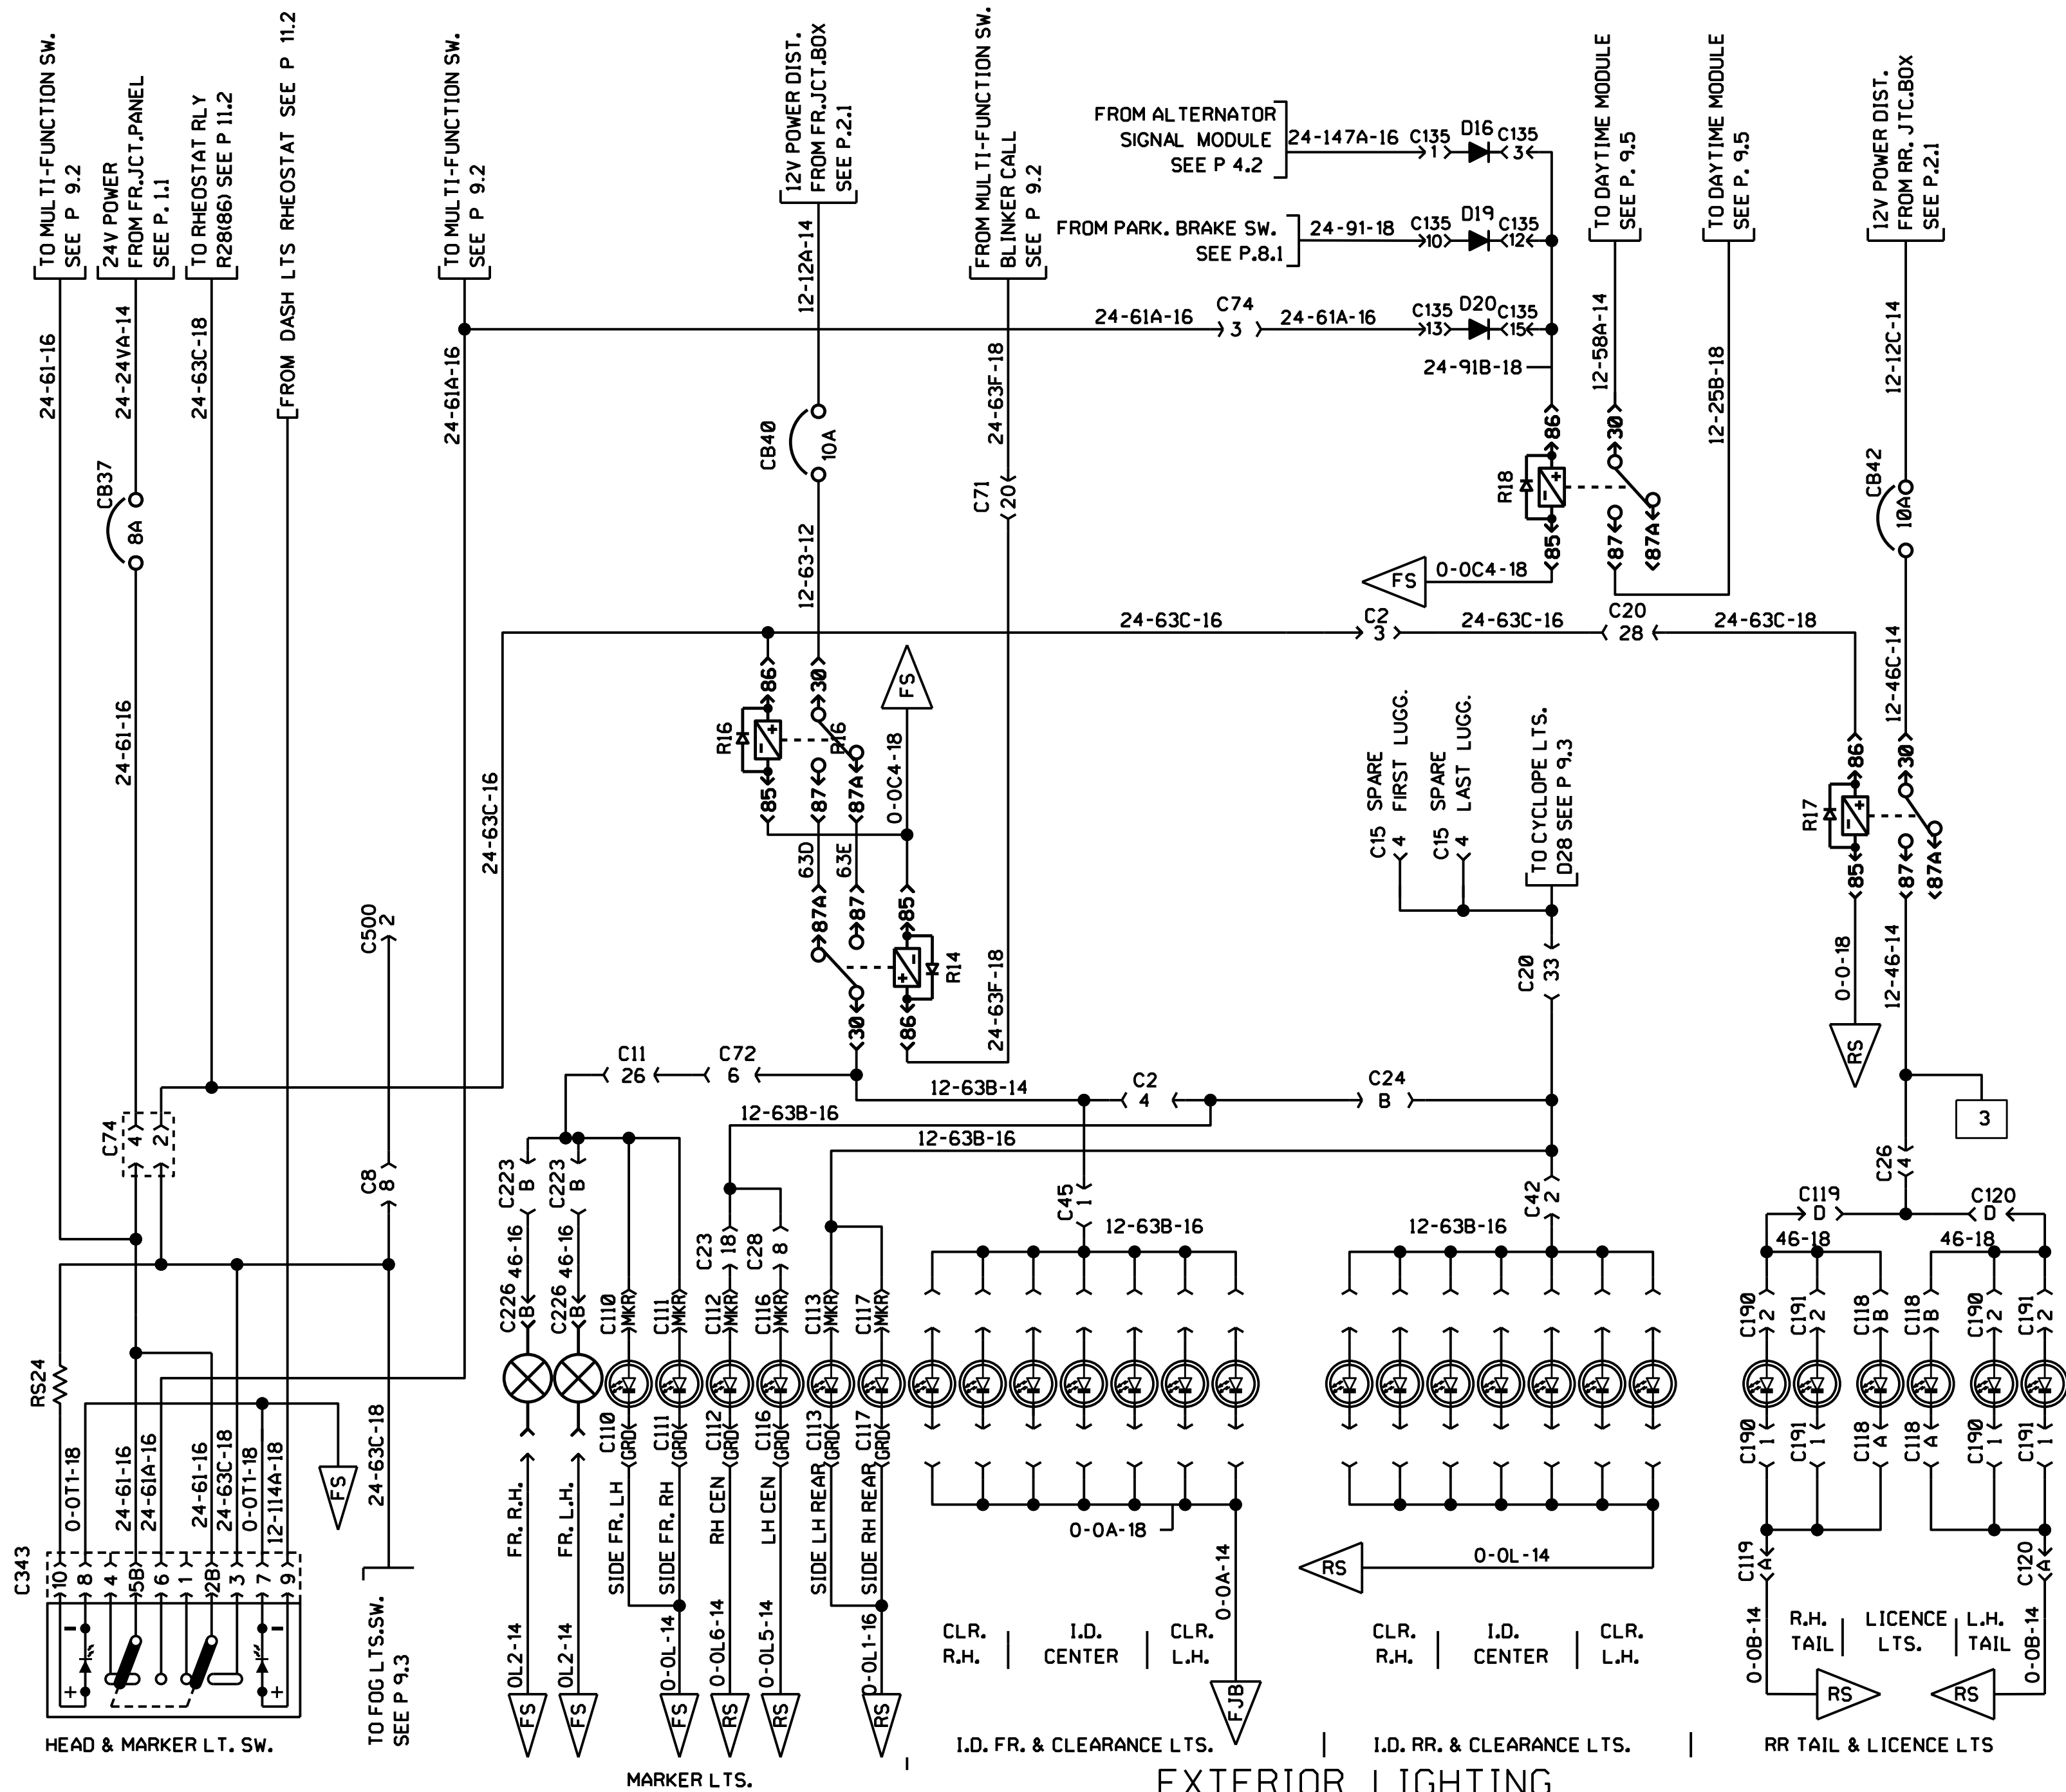  


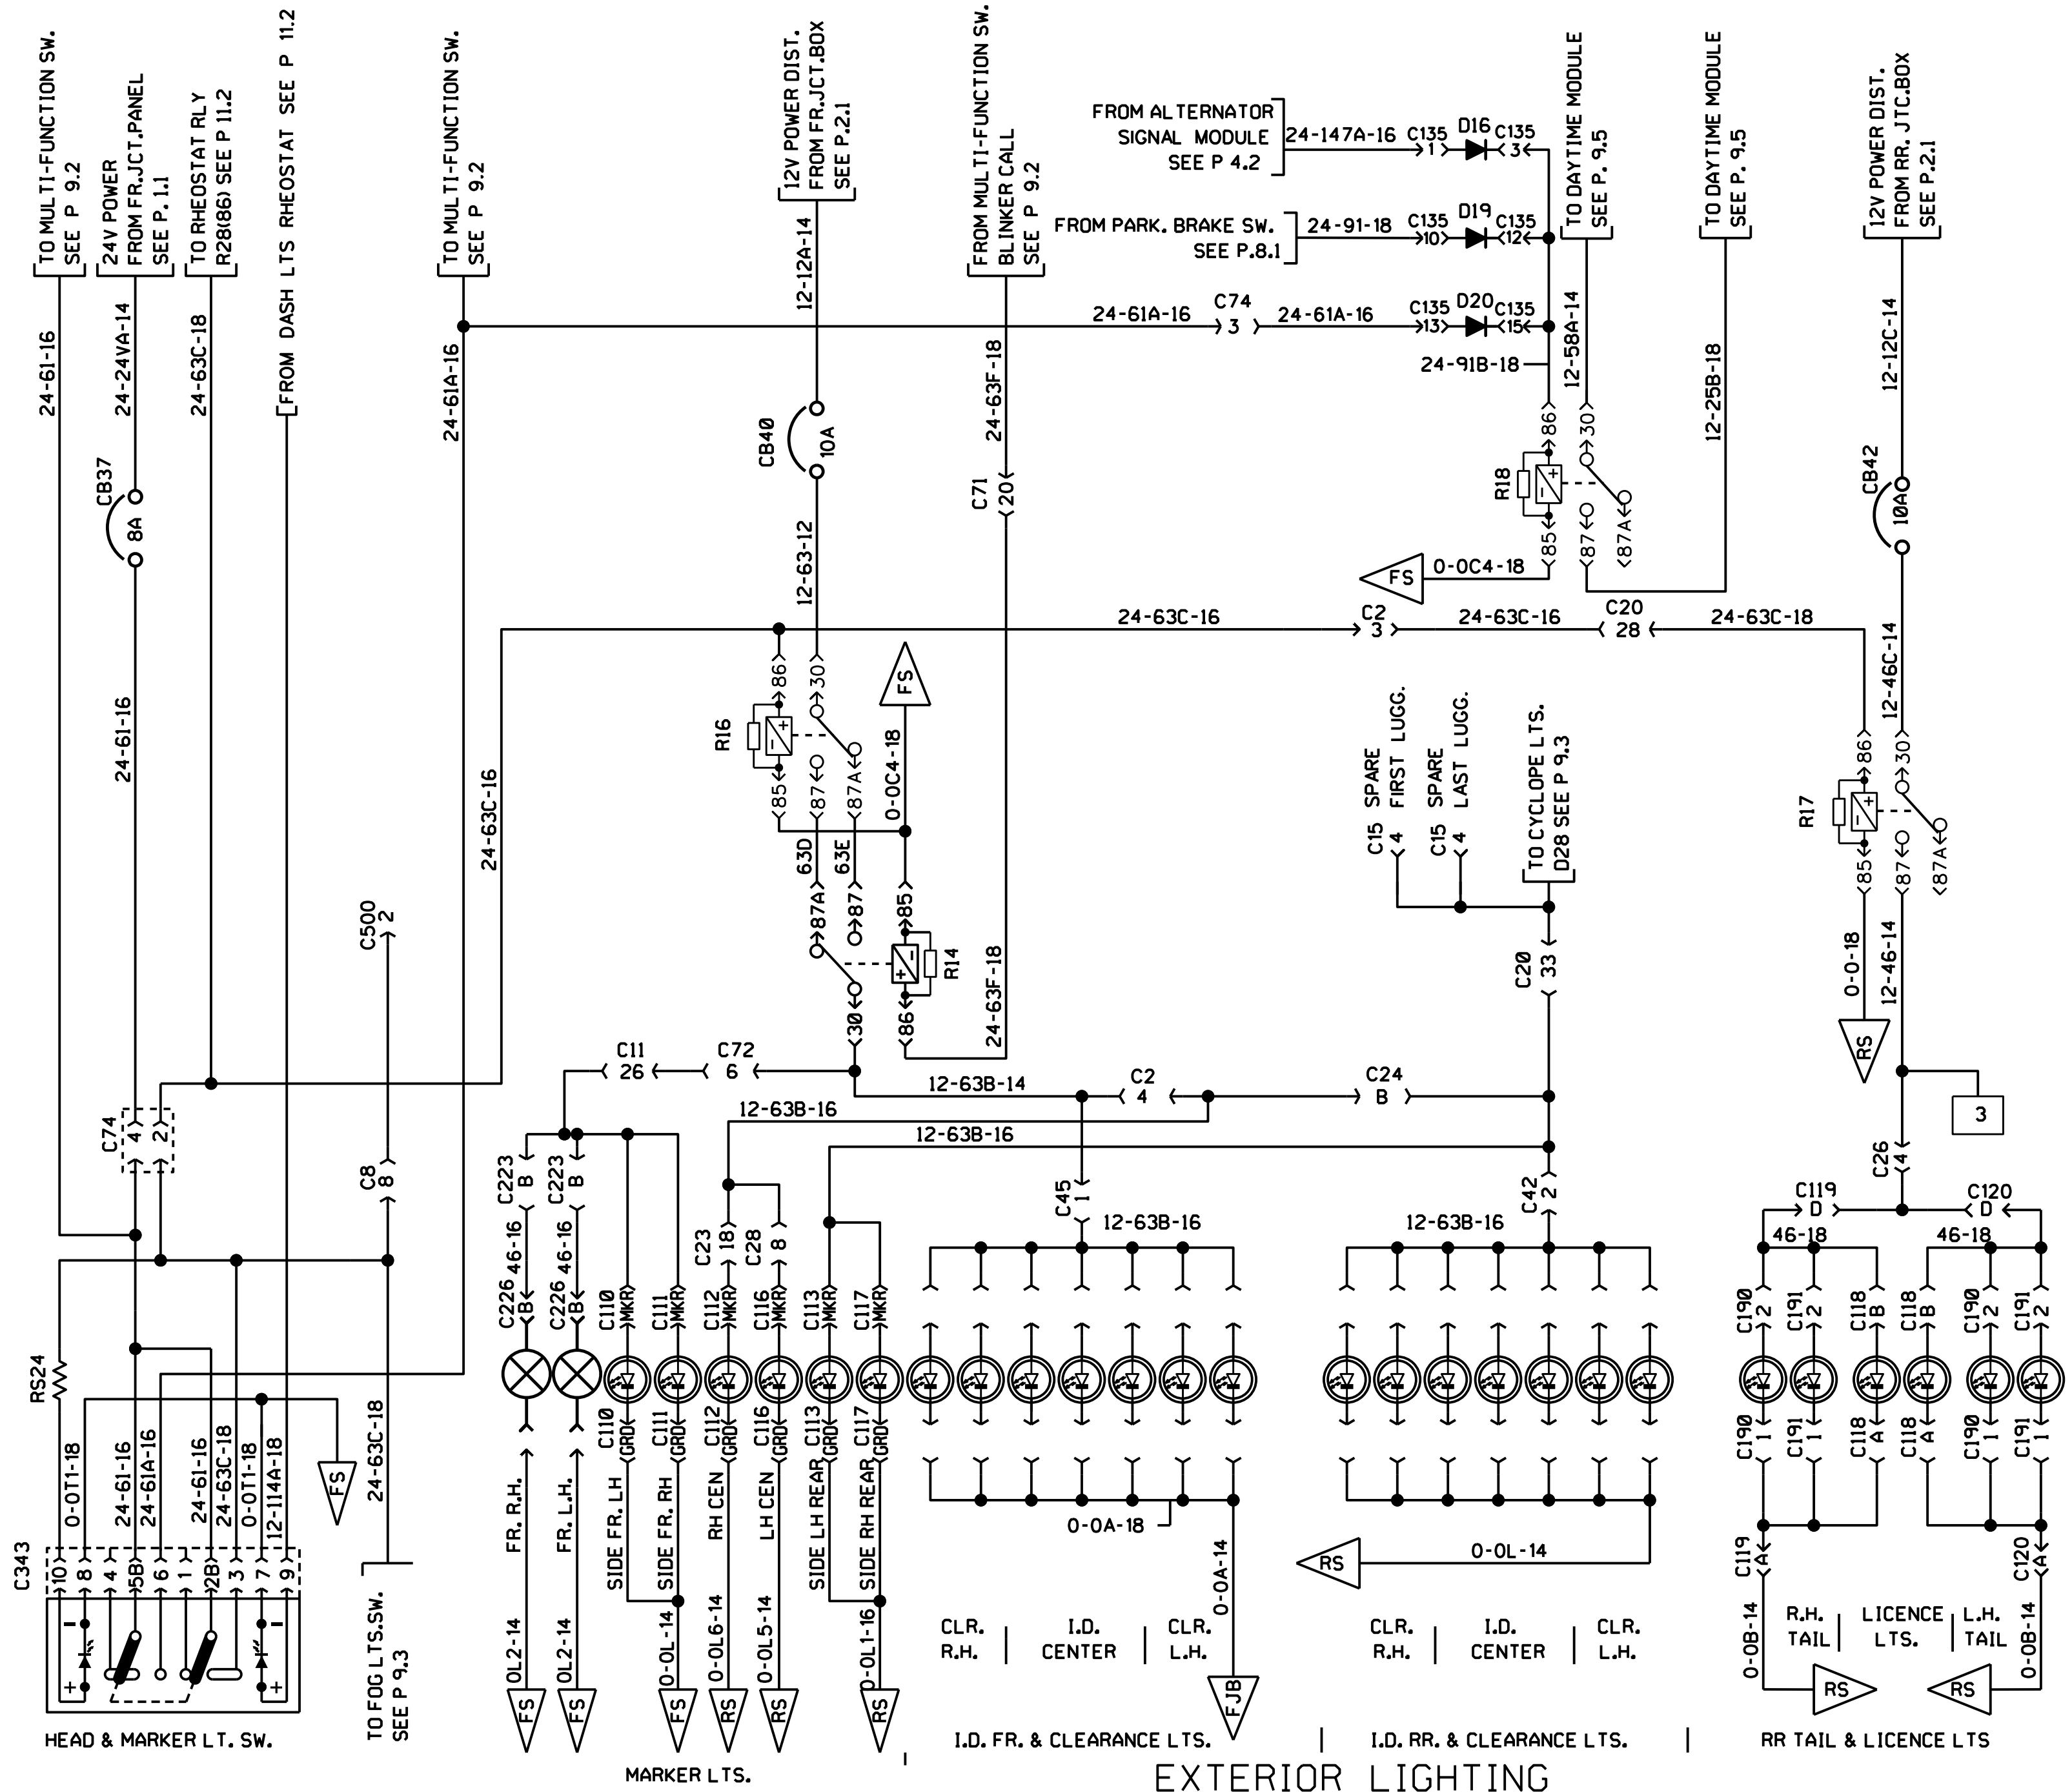


 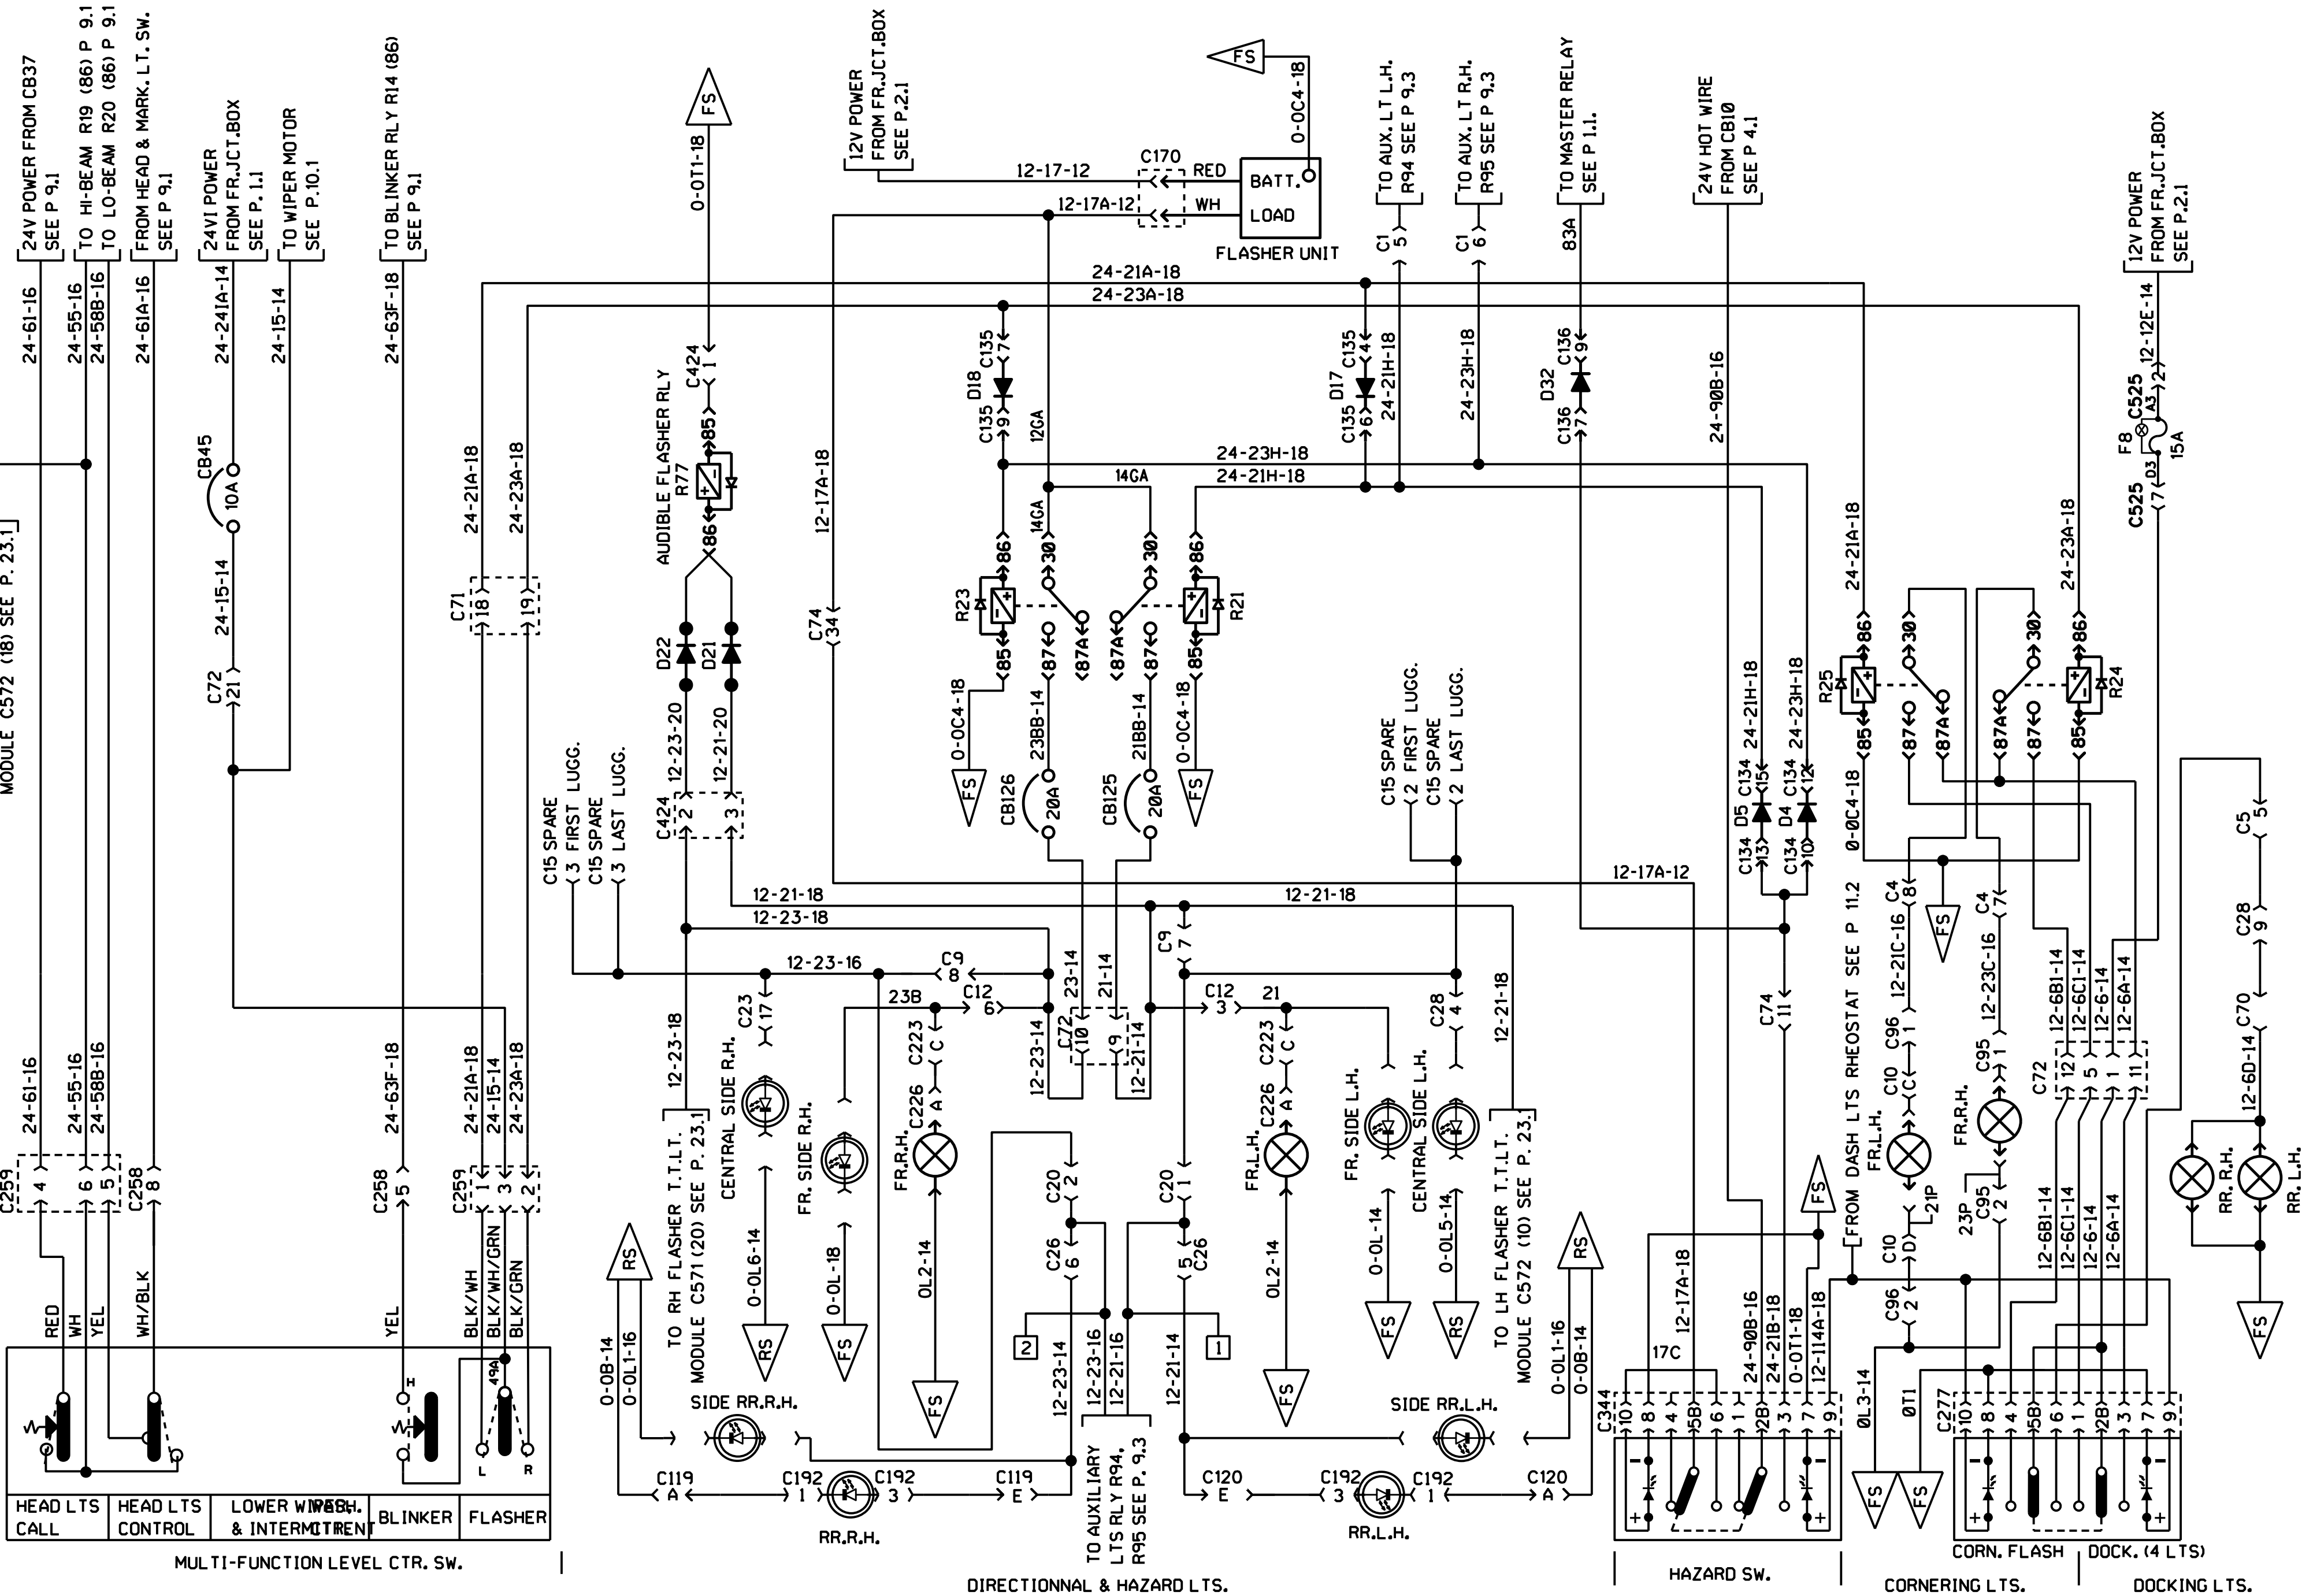


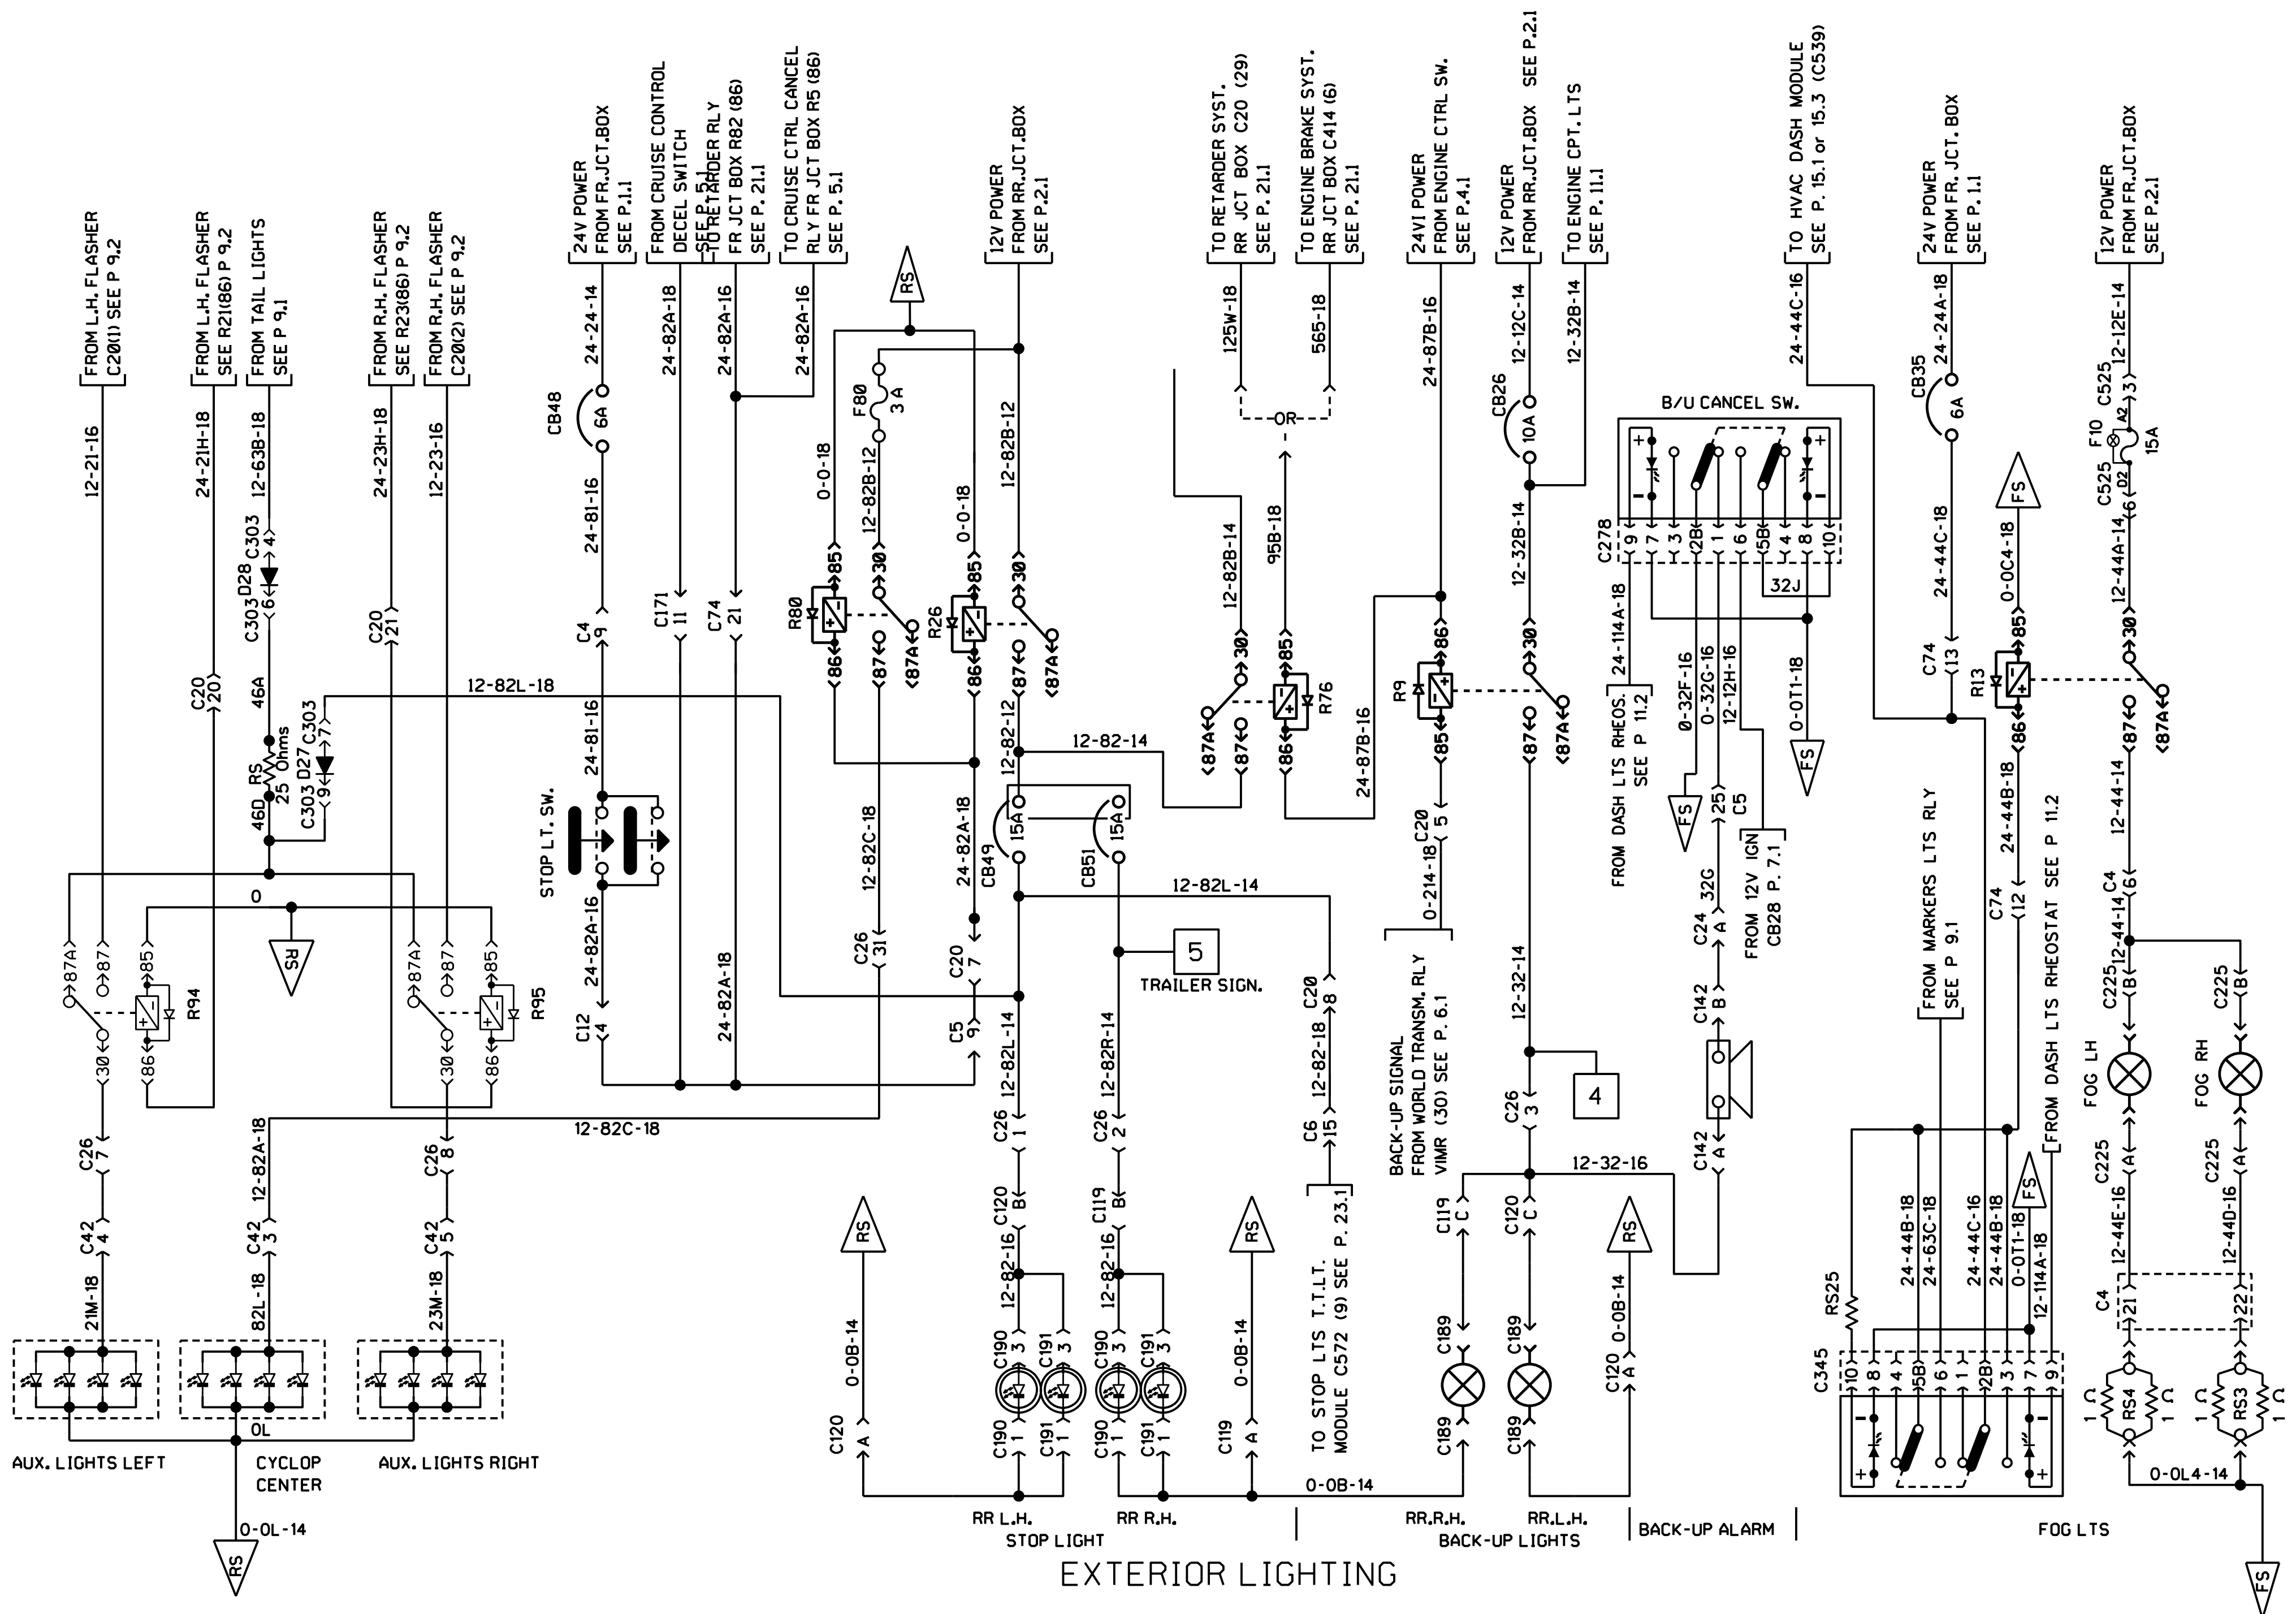







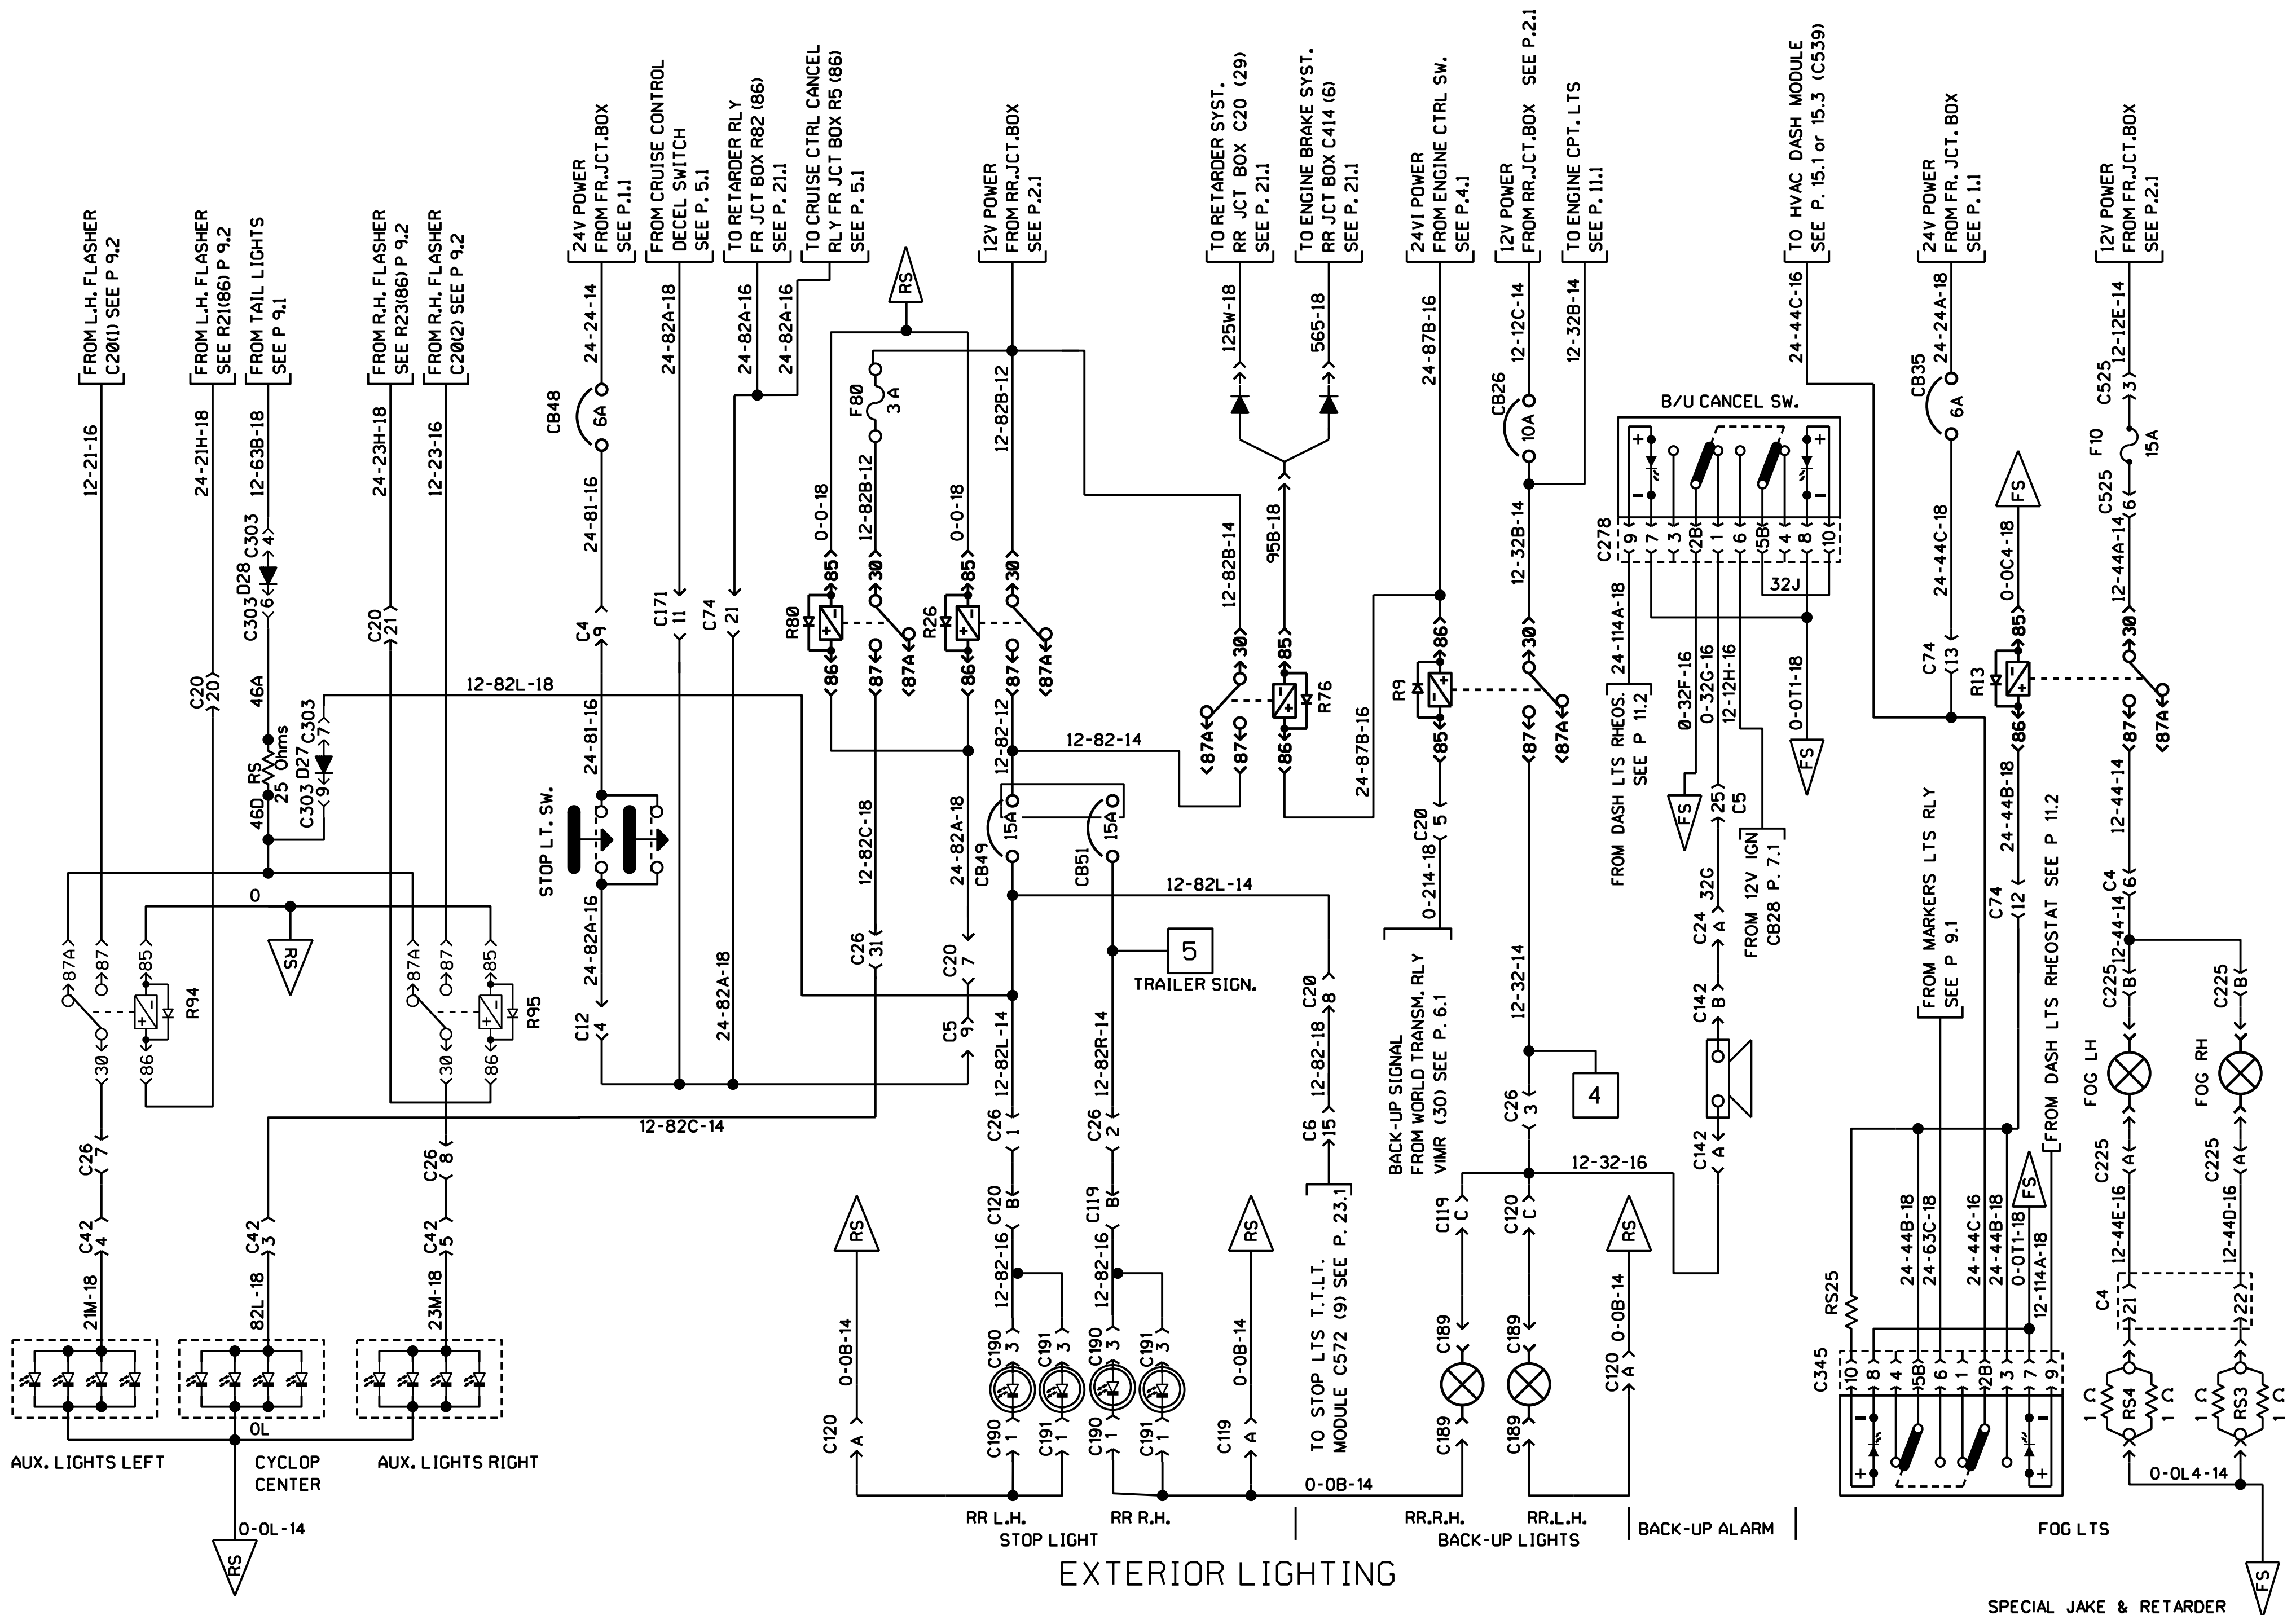



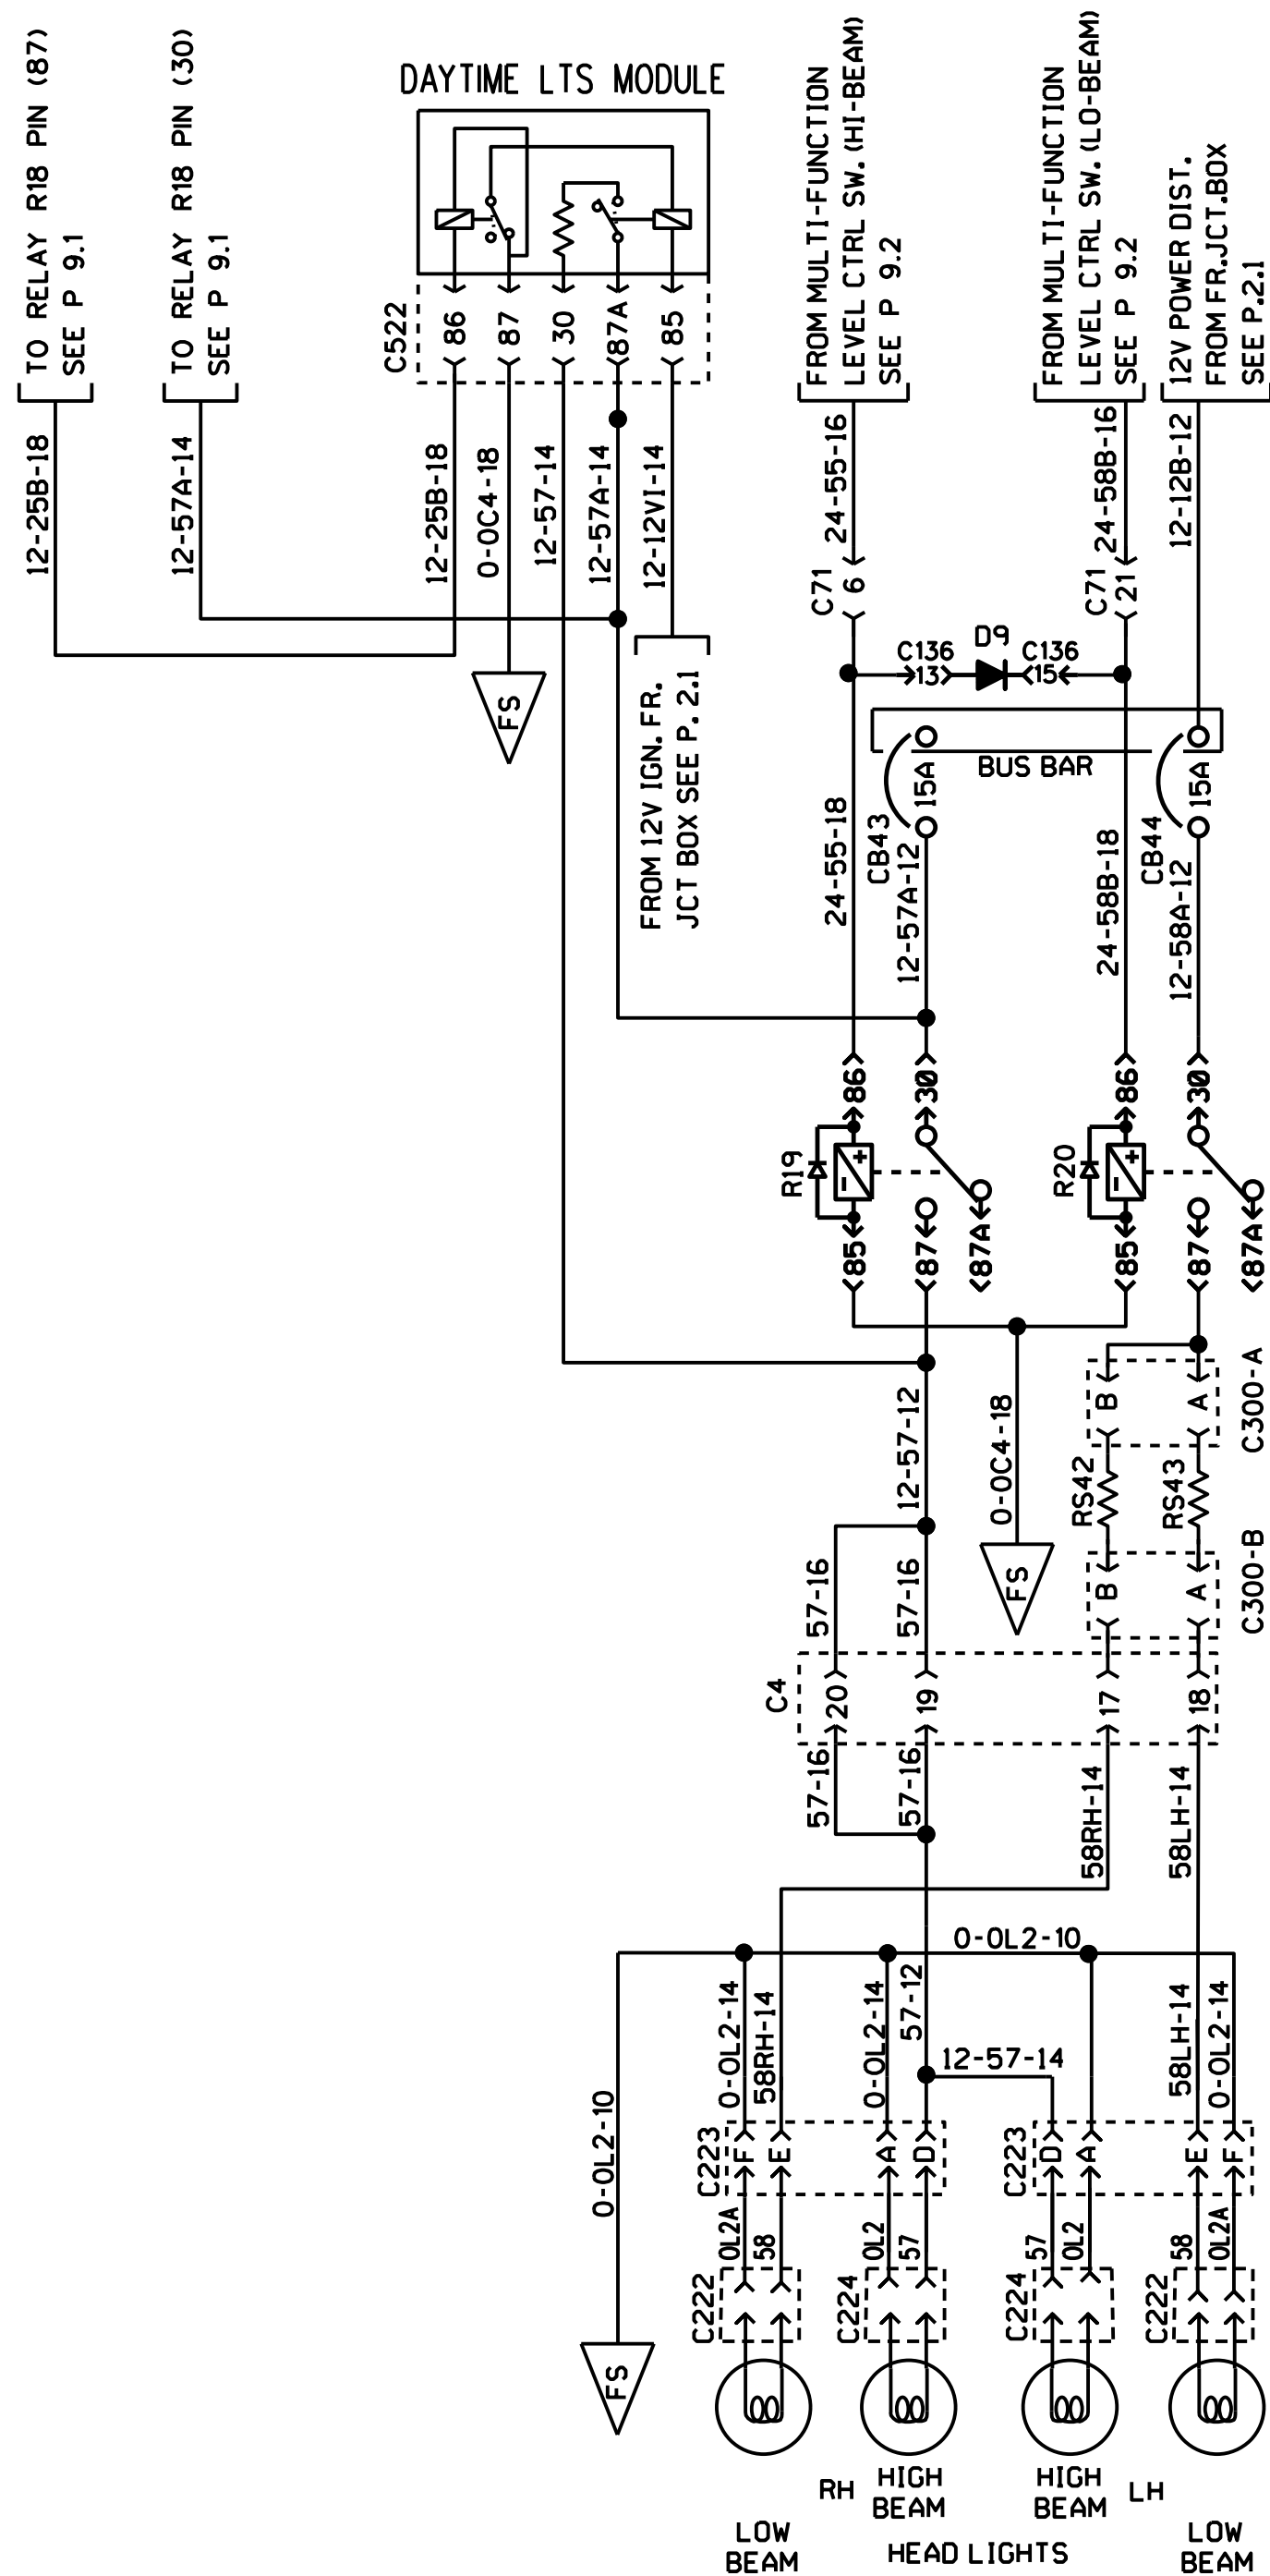


HALOGEN - STANDARD

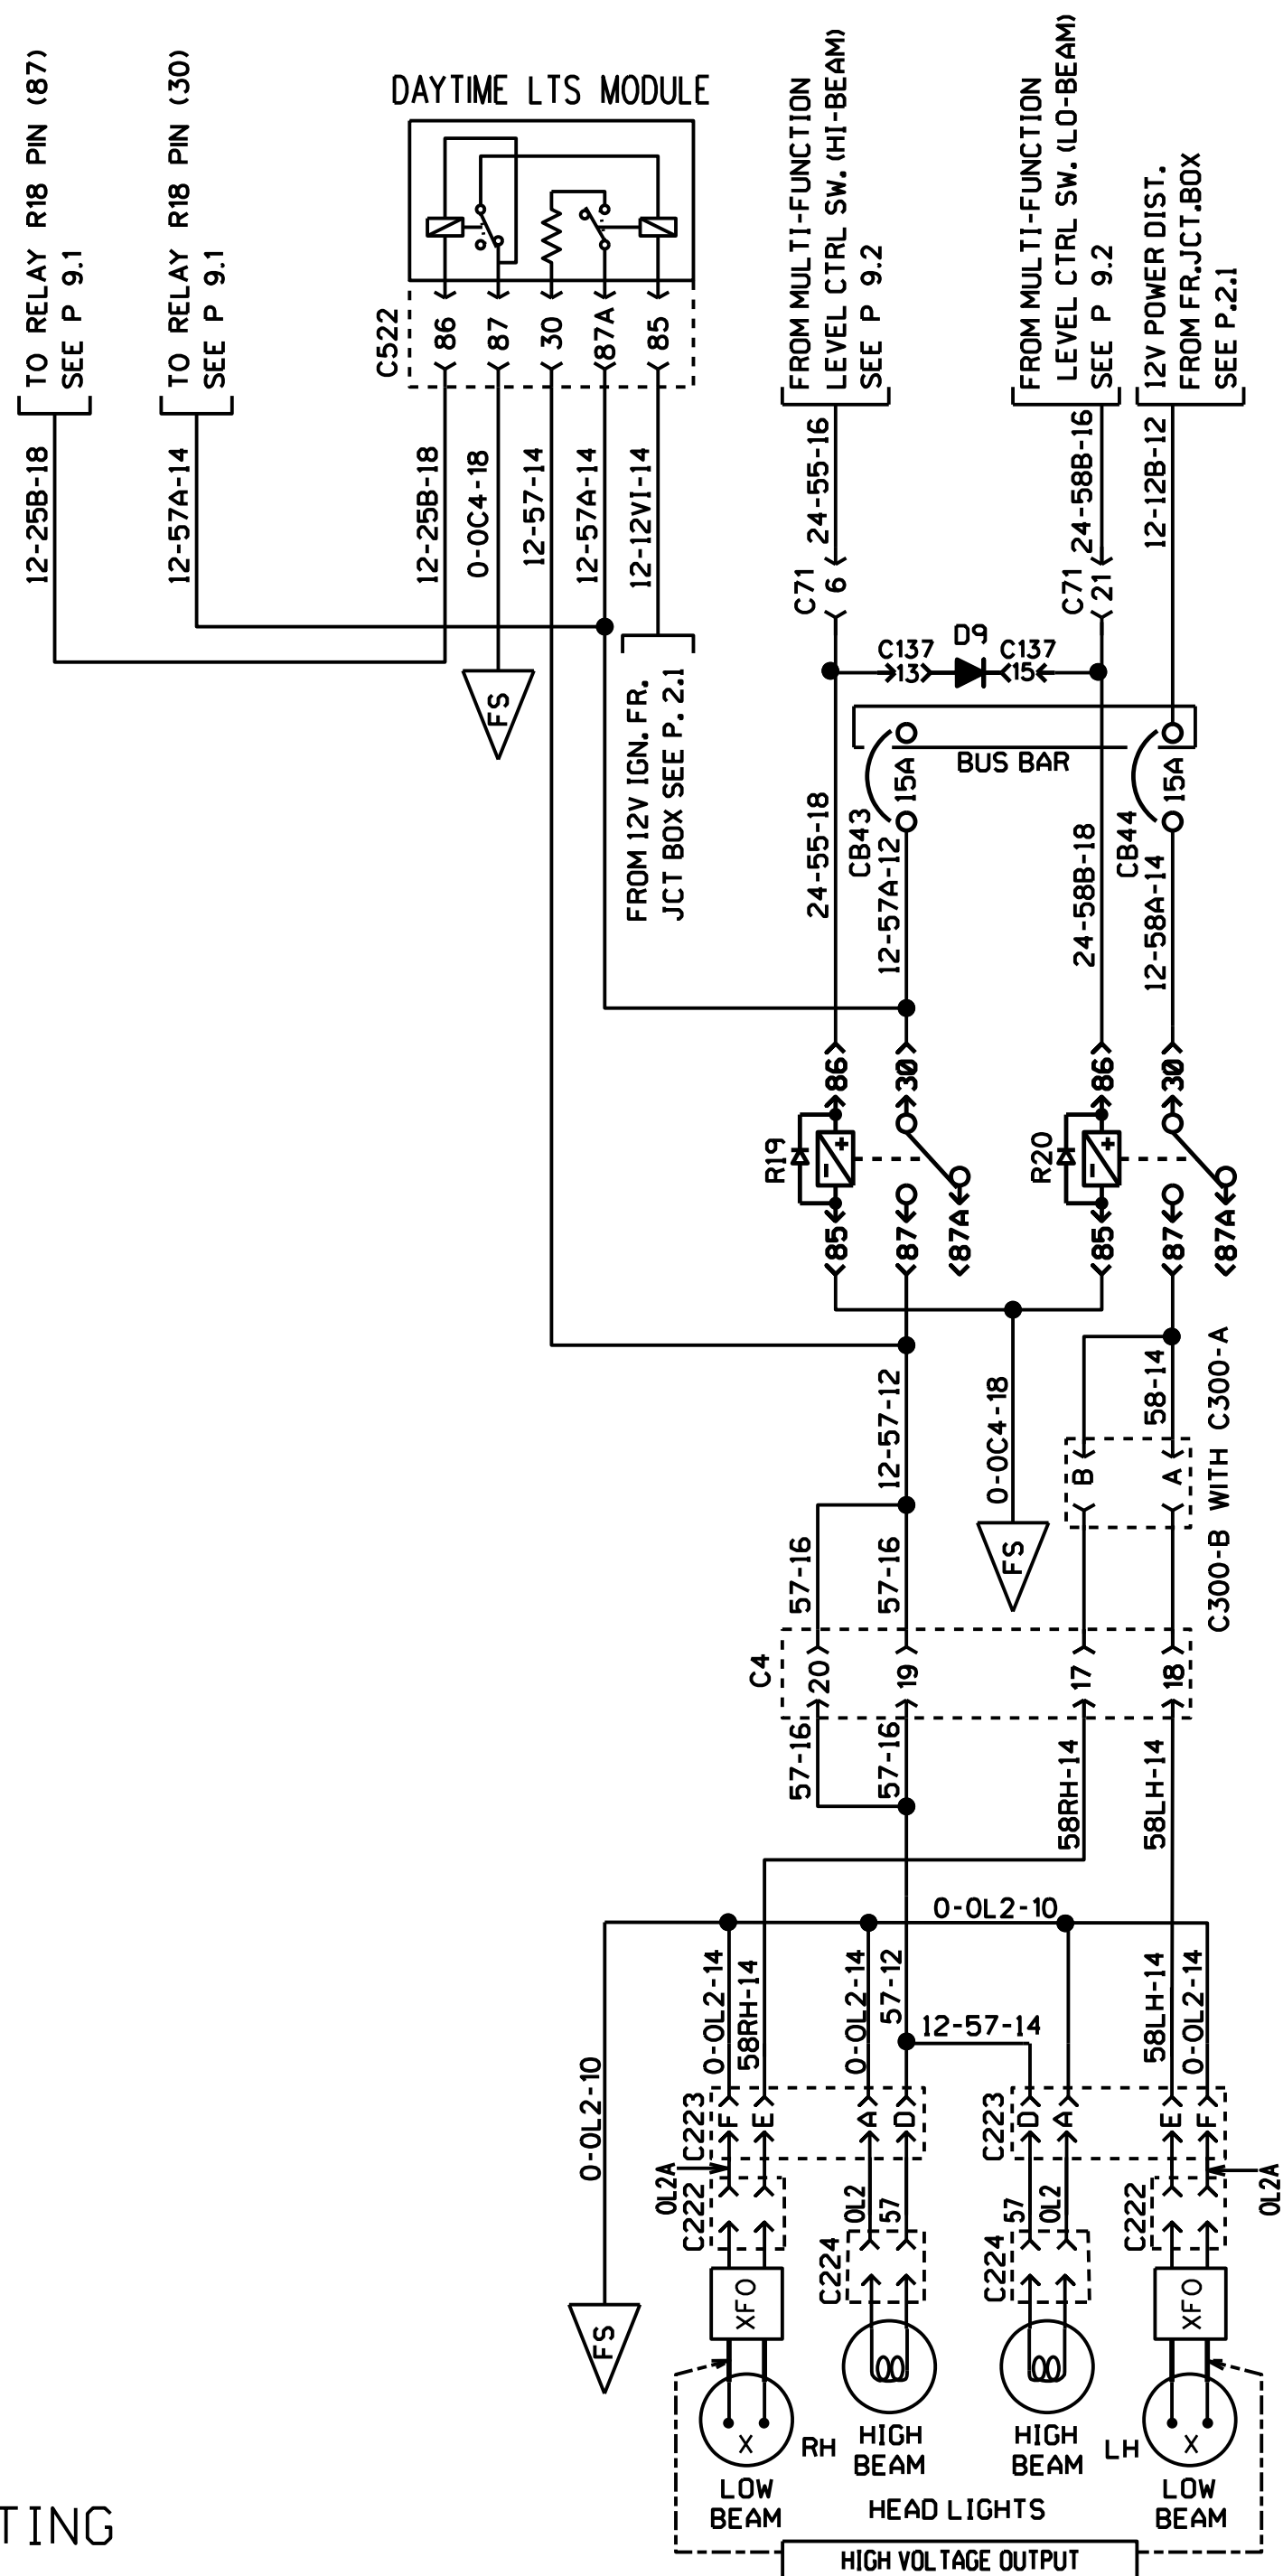


XENON LAMPS - OPTION




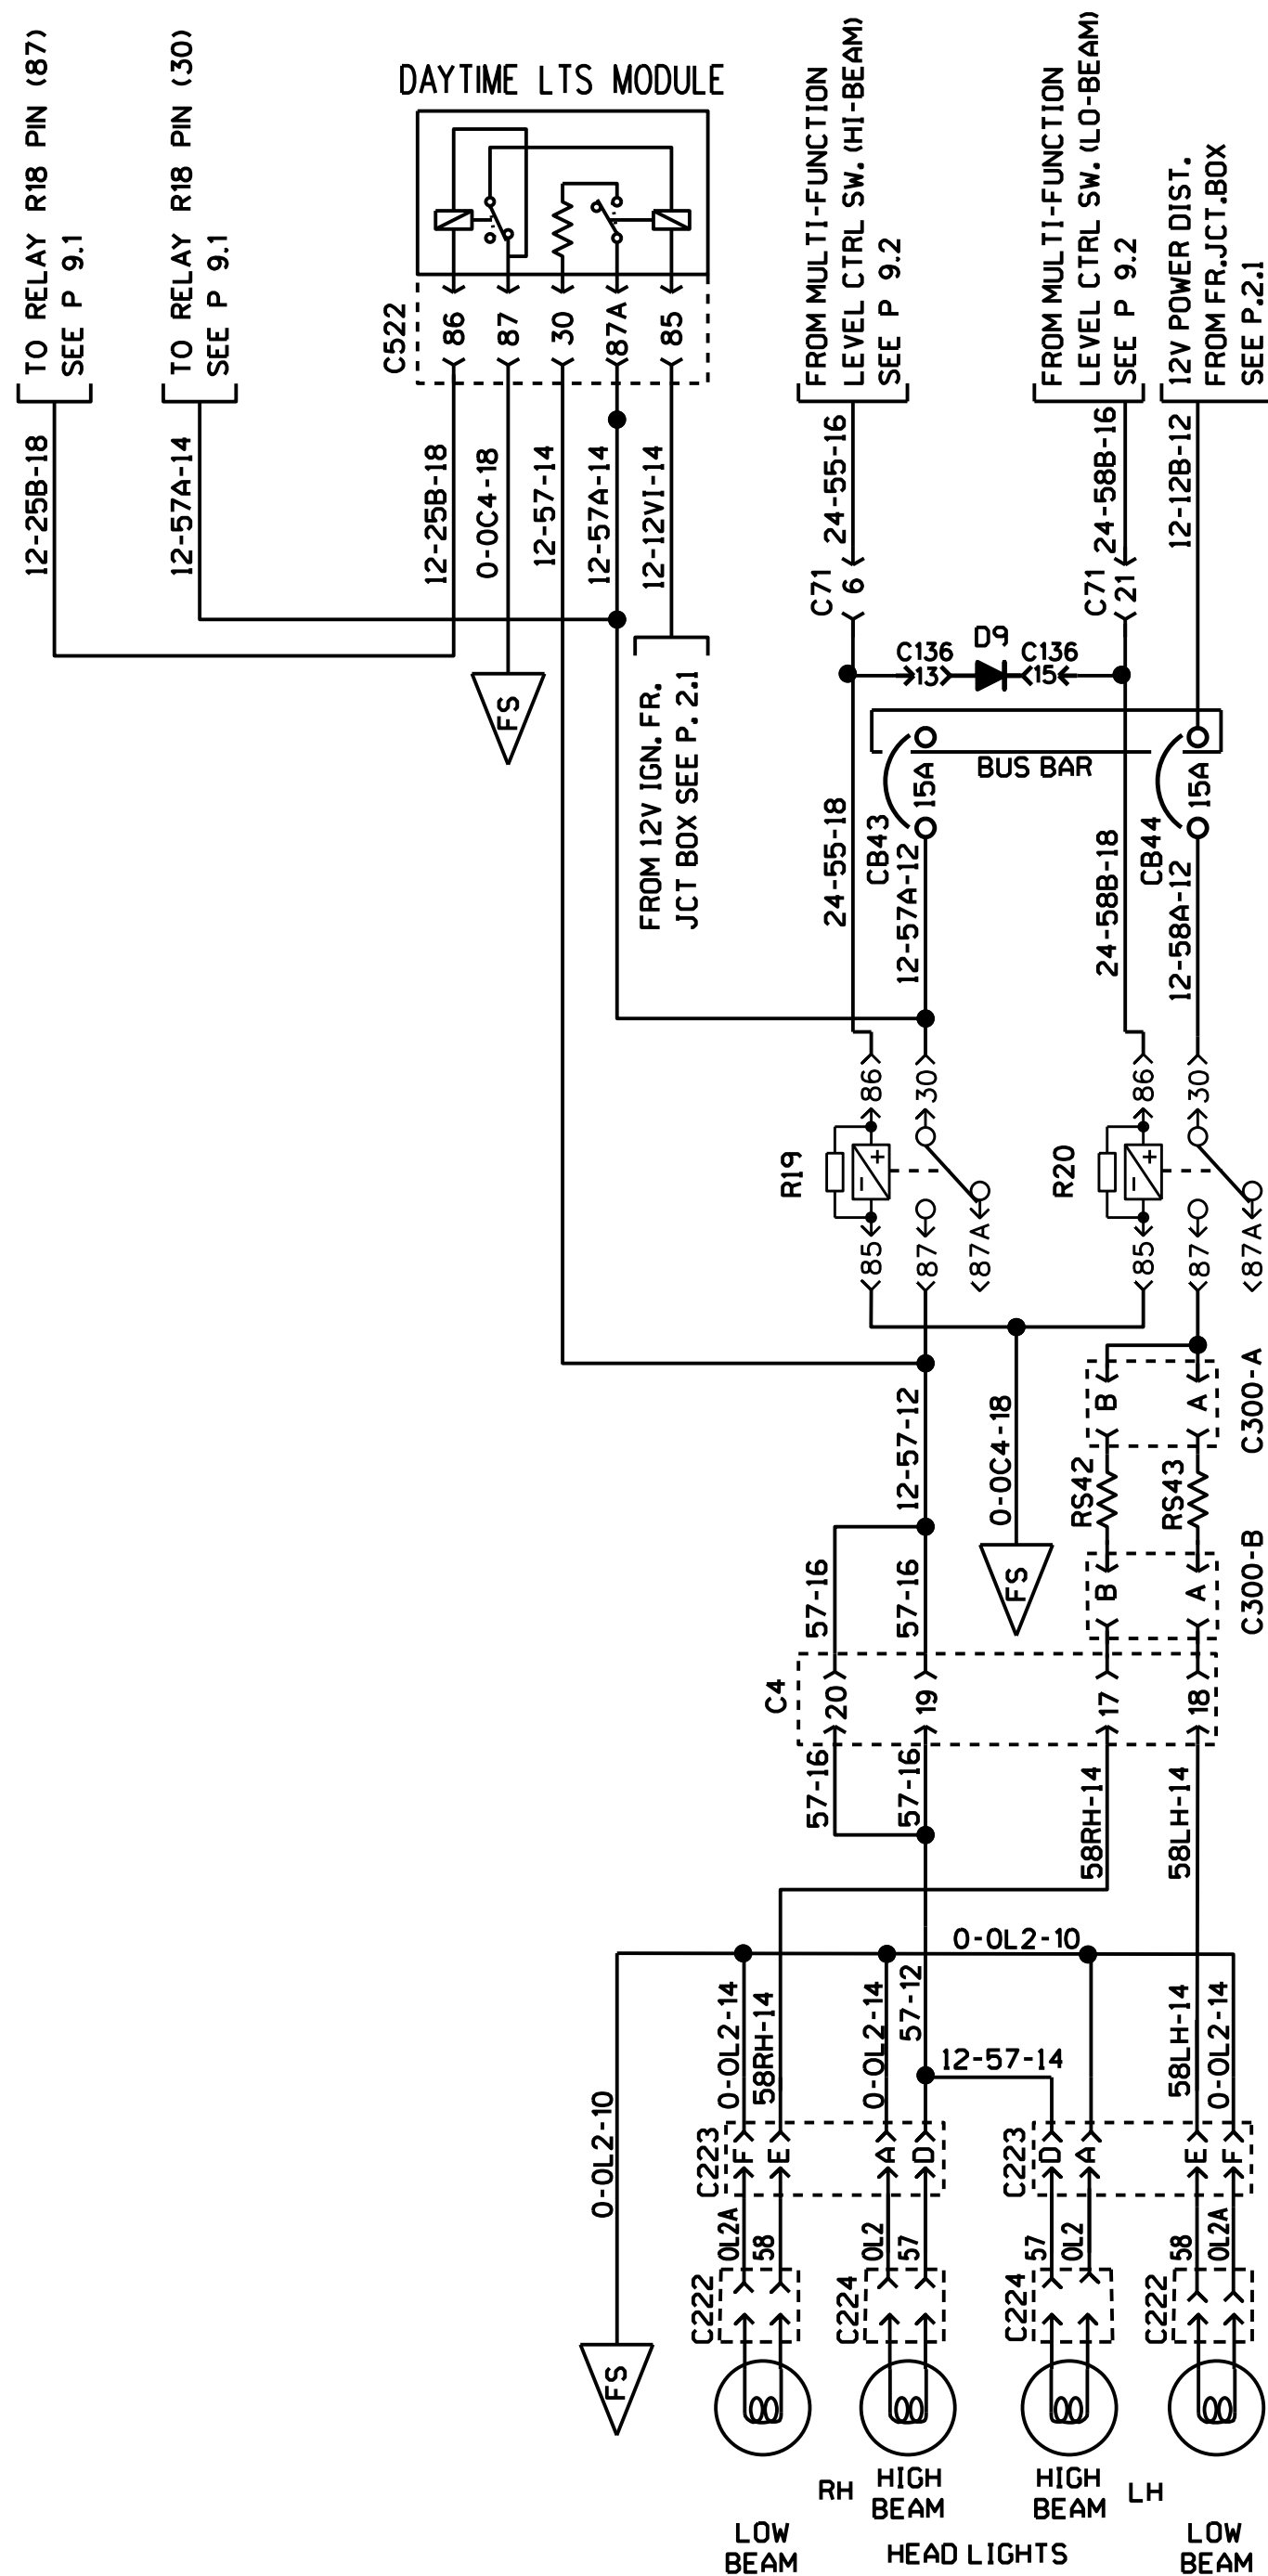


HALOGEN - STANDARD

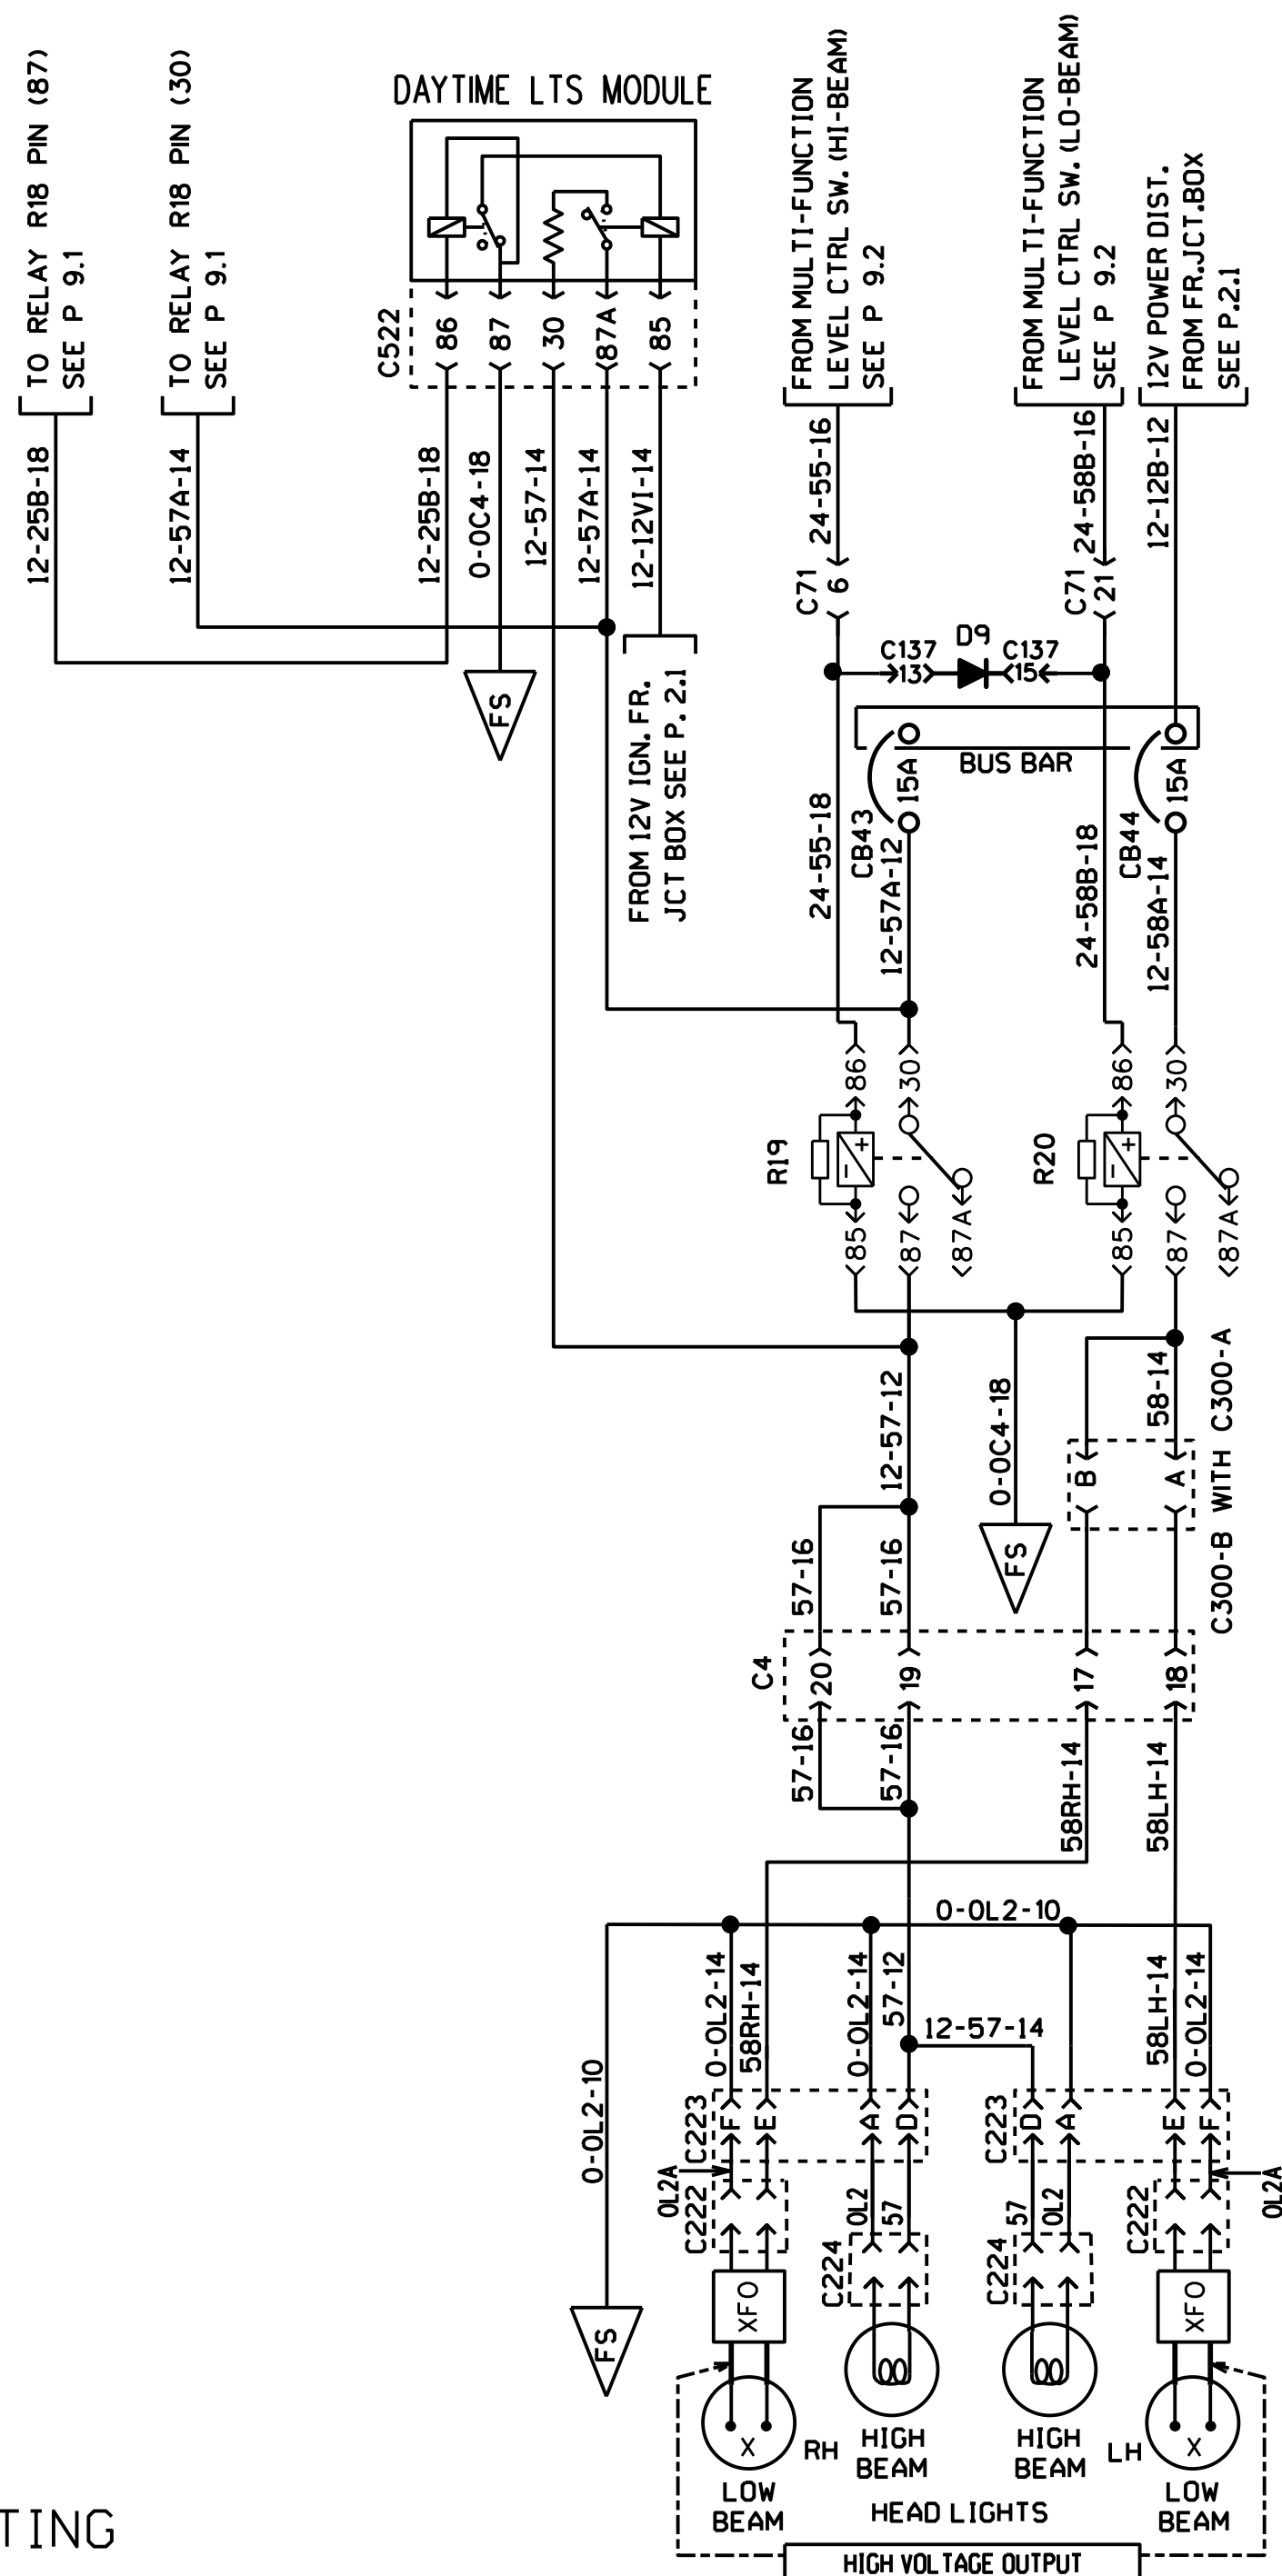


XENON LAMPS - OPTION

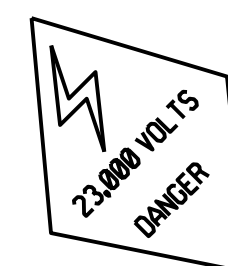

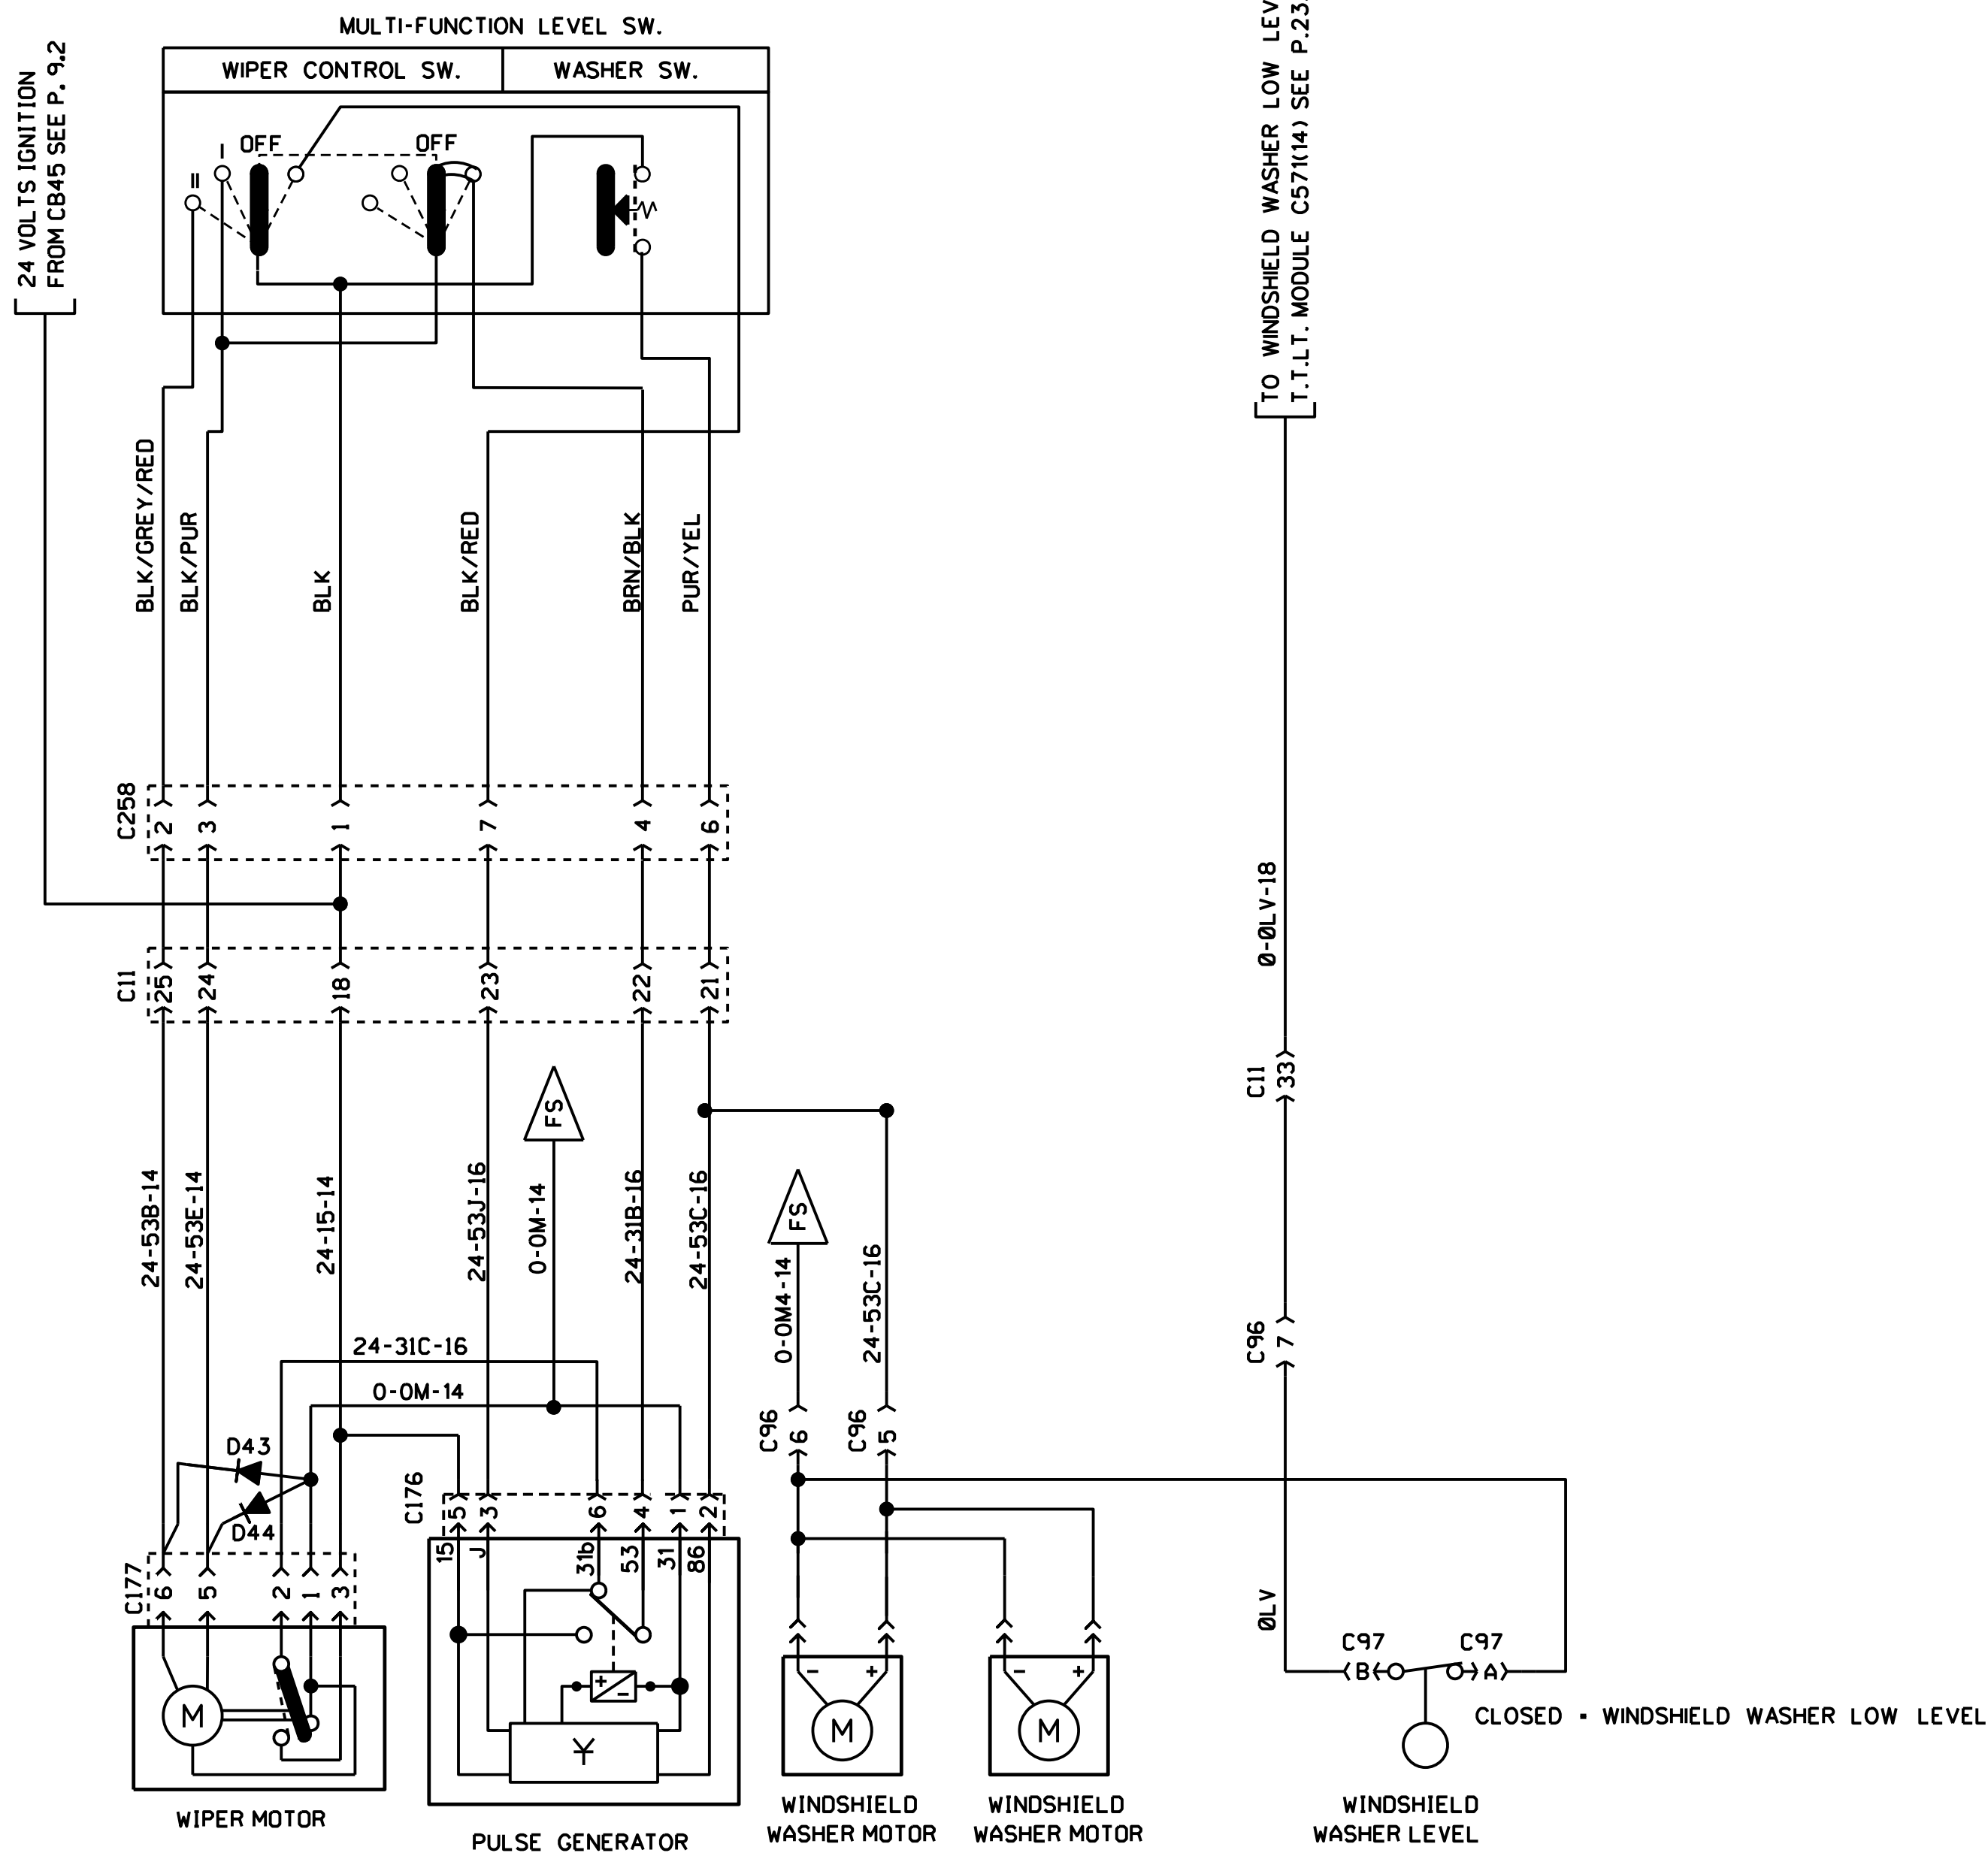

WINDSHIELD WIPER AND WASHER

24 VOLTS IGNITION
FROM CB45 SEE P. 9.2

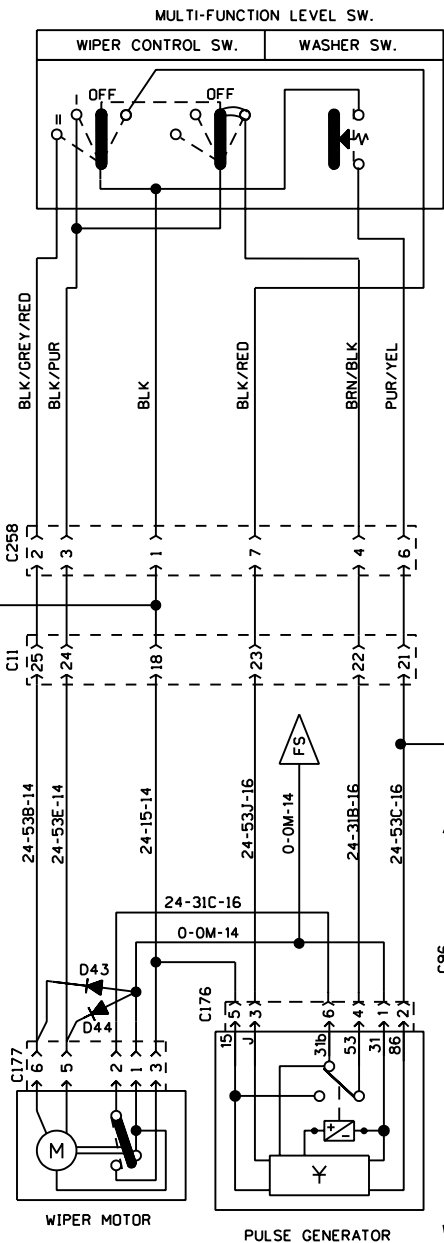

WINDSHIELD WIPER AND WASHER

TO WINDSHIELD WASHER LOW LEVEL
T.T.L.T. MODULE C57(14) SEE P.23.1

C11


C96

C97


C97

C97

C97

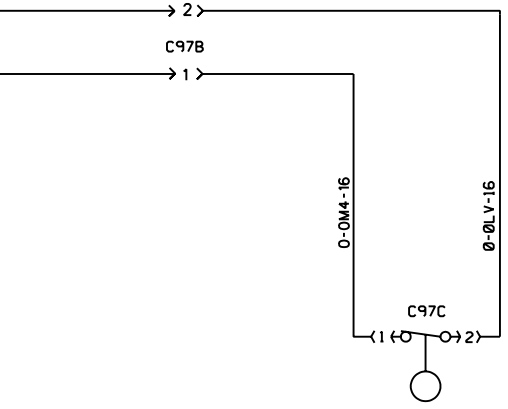

CLOSED - WINDSHIELD WASHER LOW LEVEL

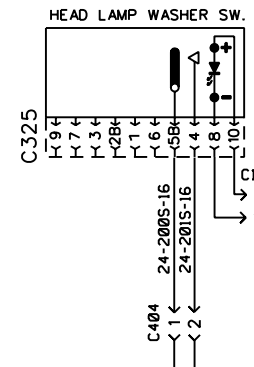



CLOSED - HEAD LAMP WASHER LOW LEVEL



HEAD LAMP CLEANING SYSTEM











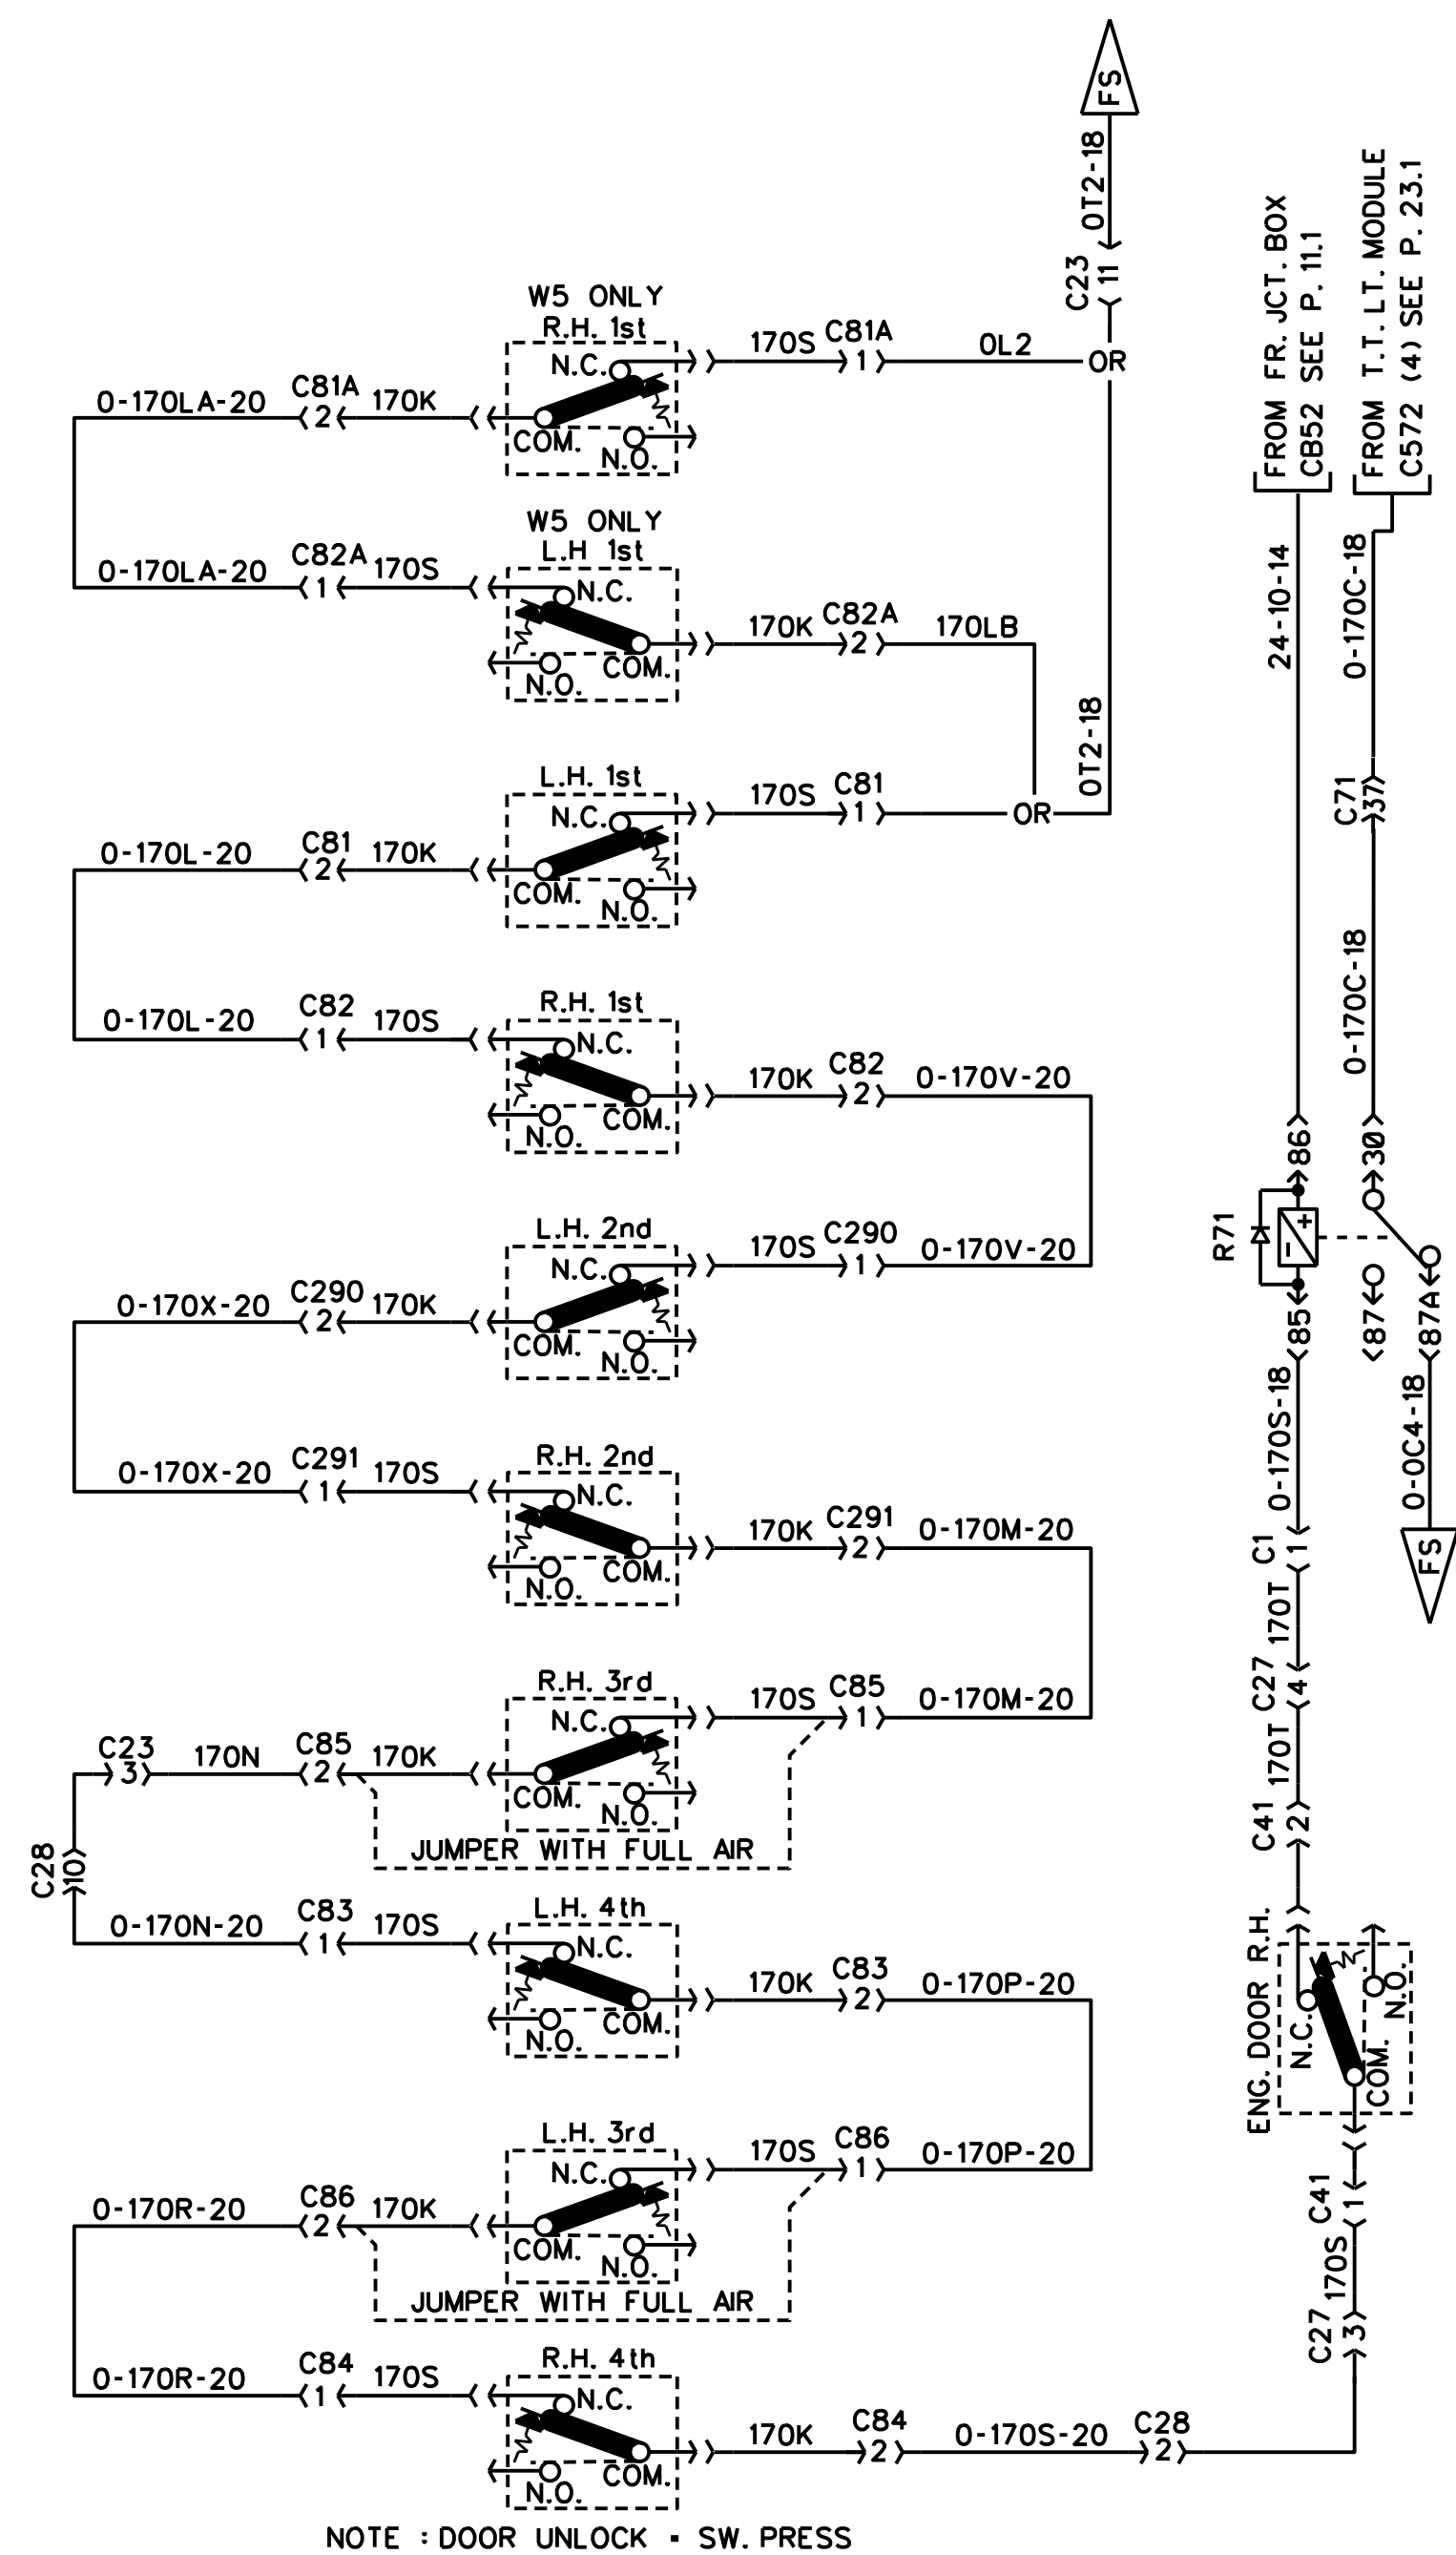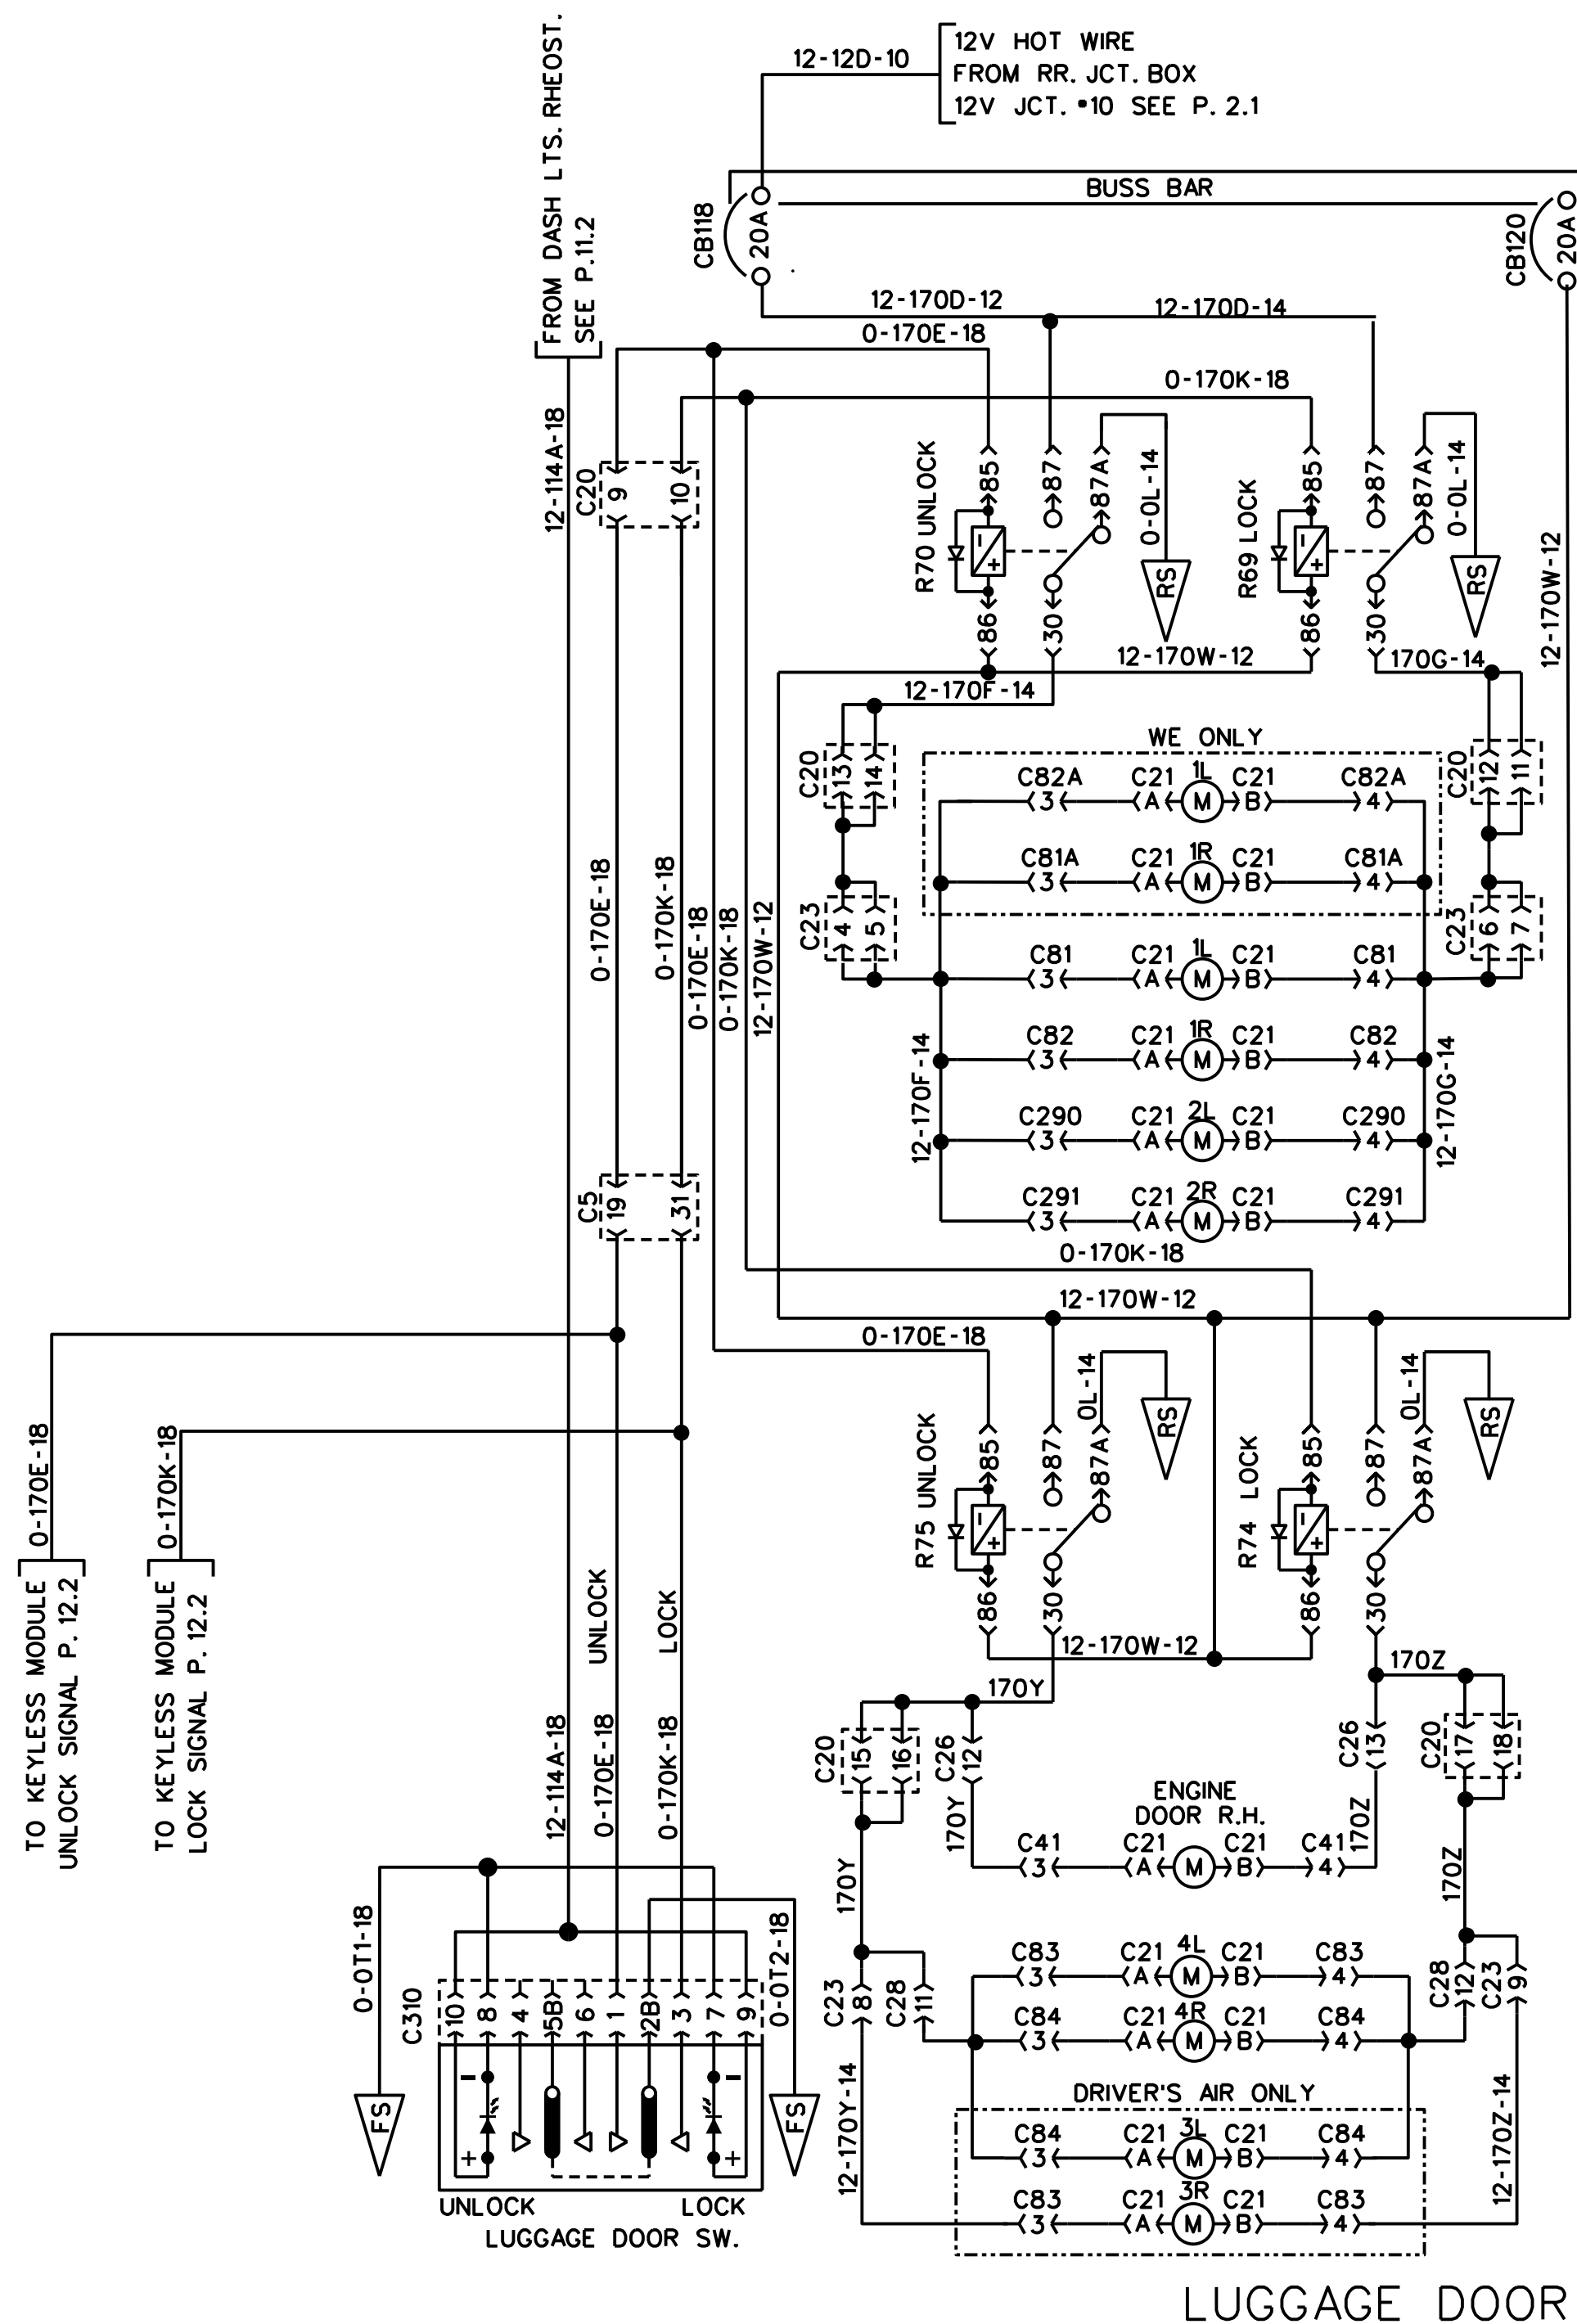


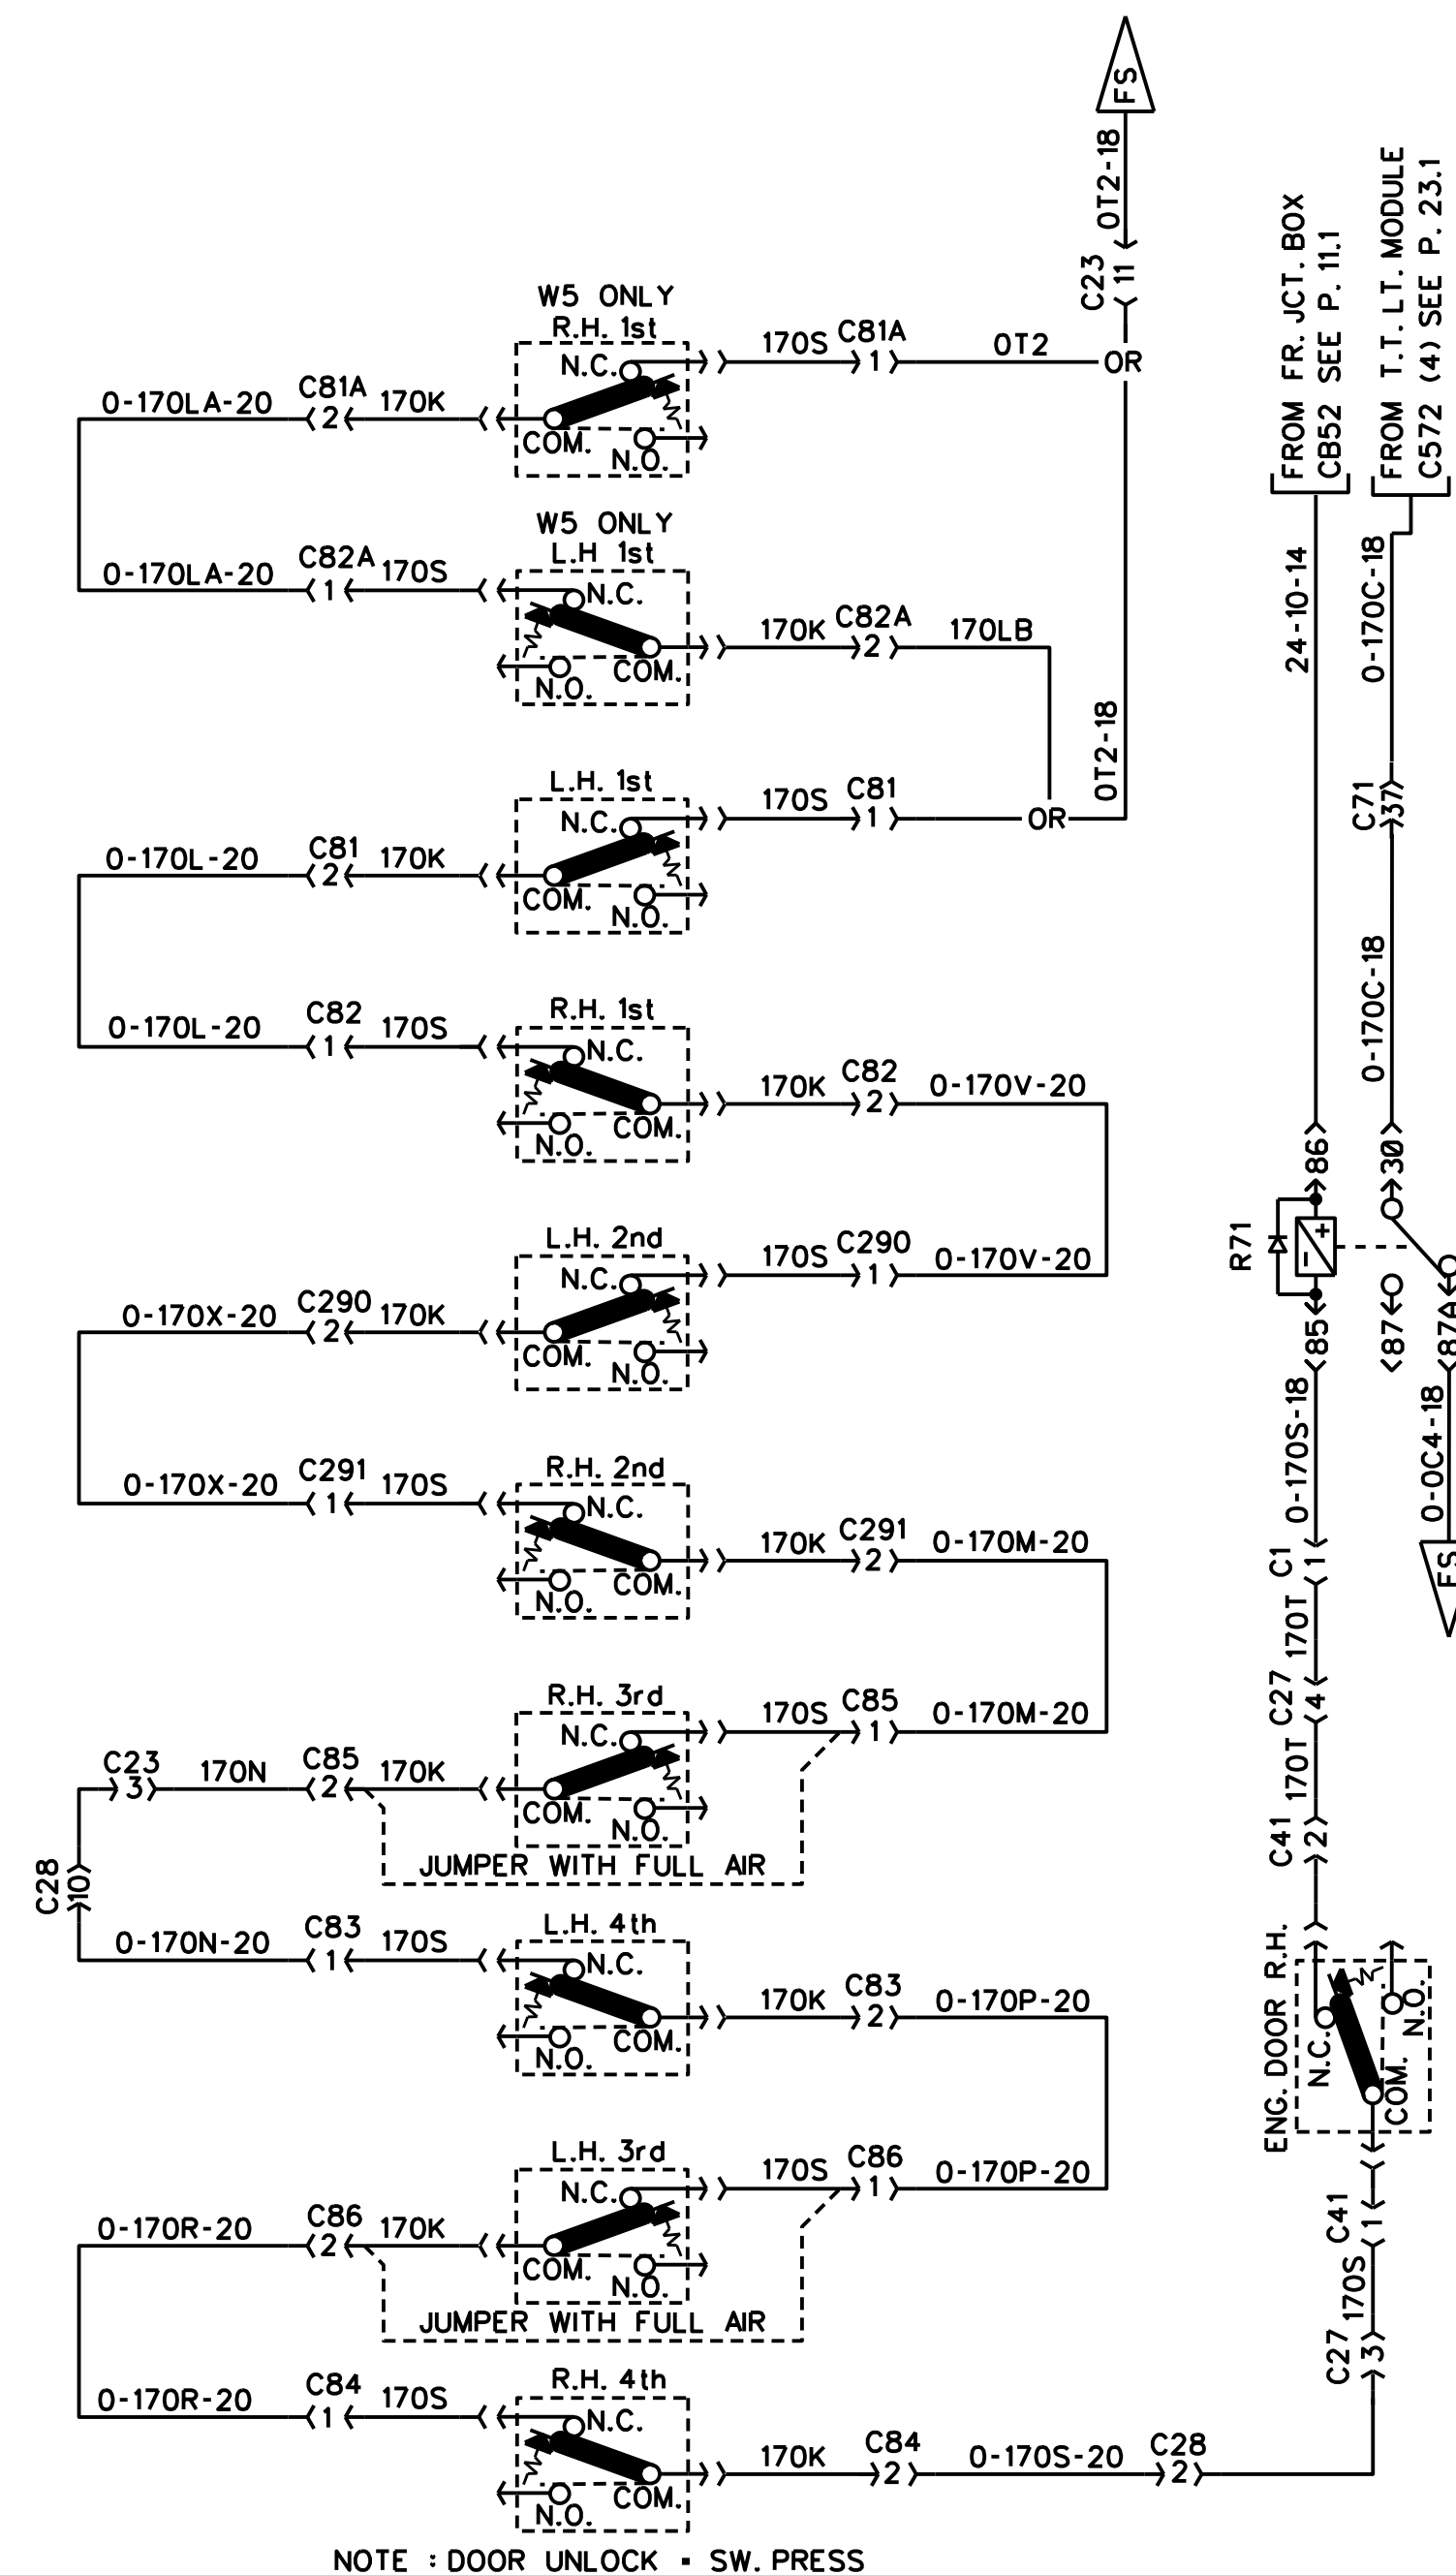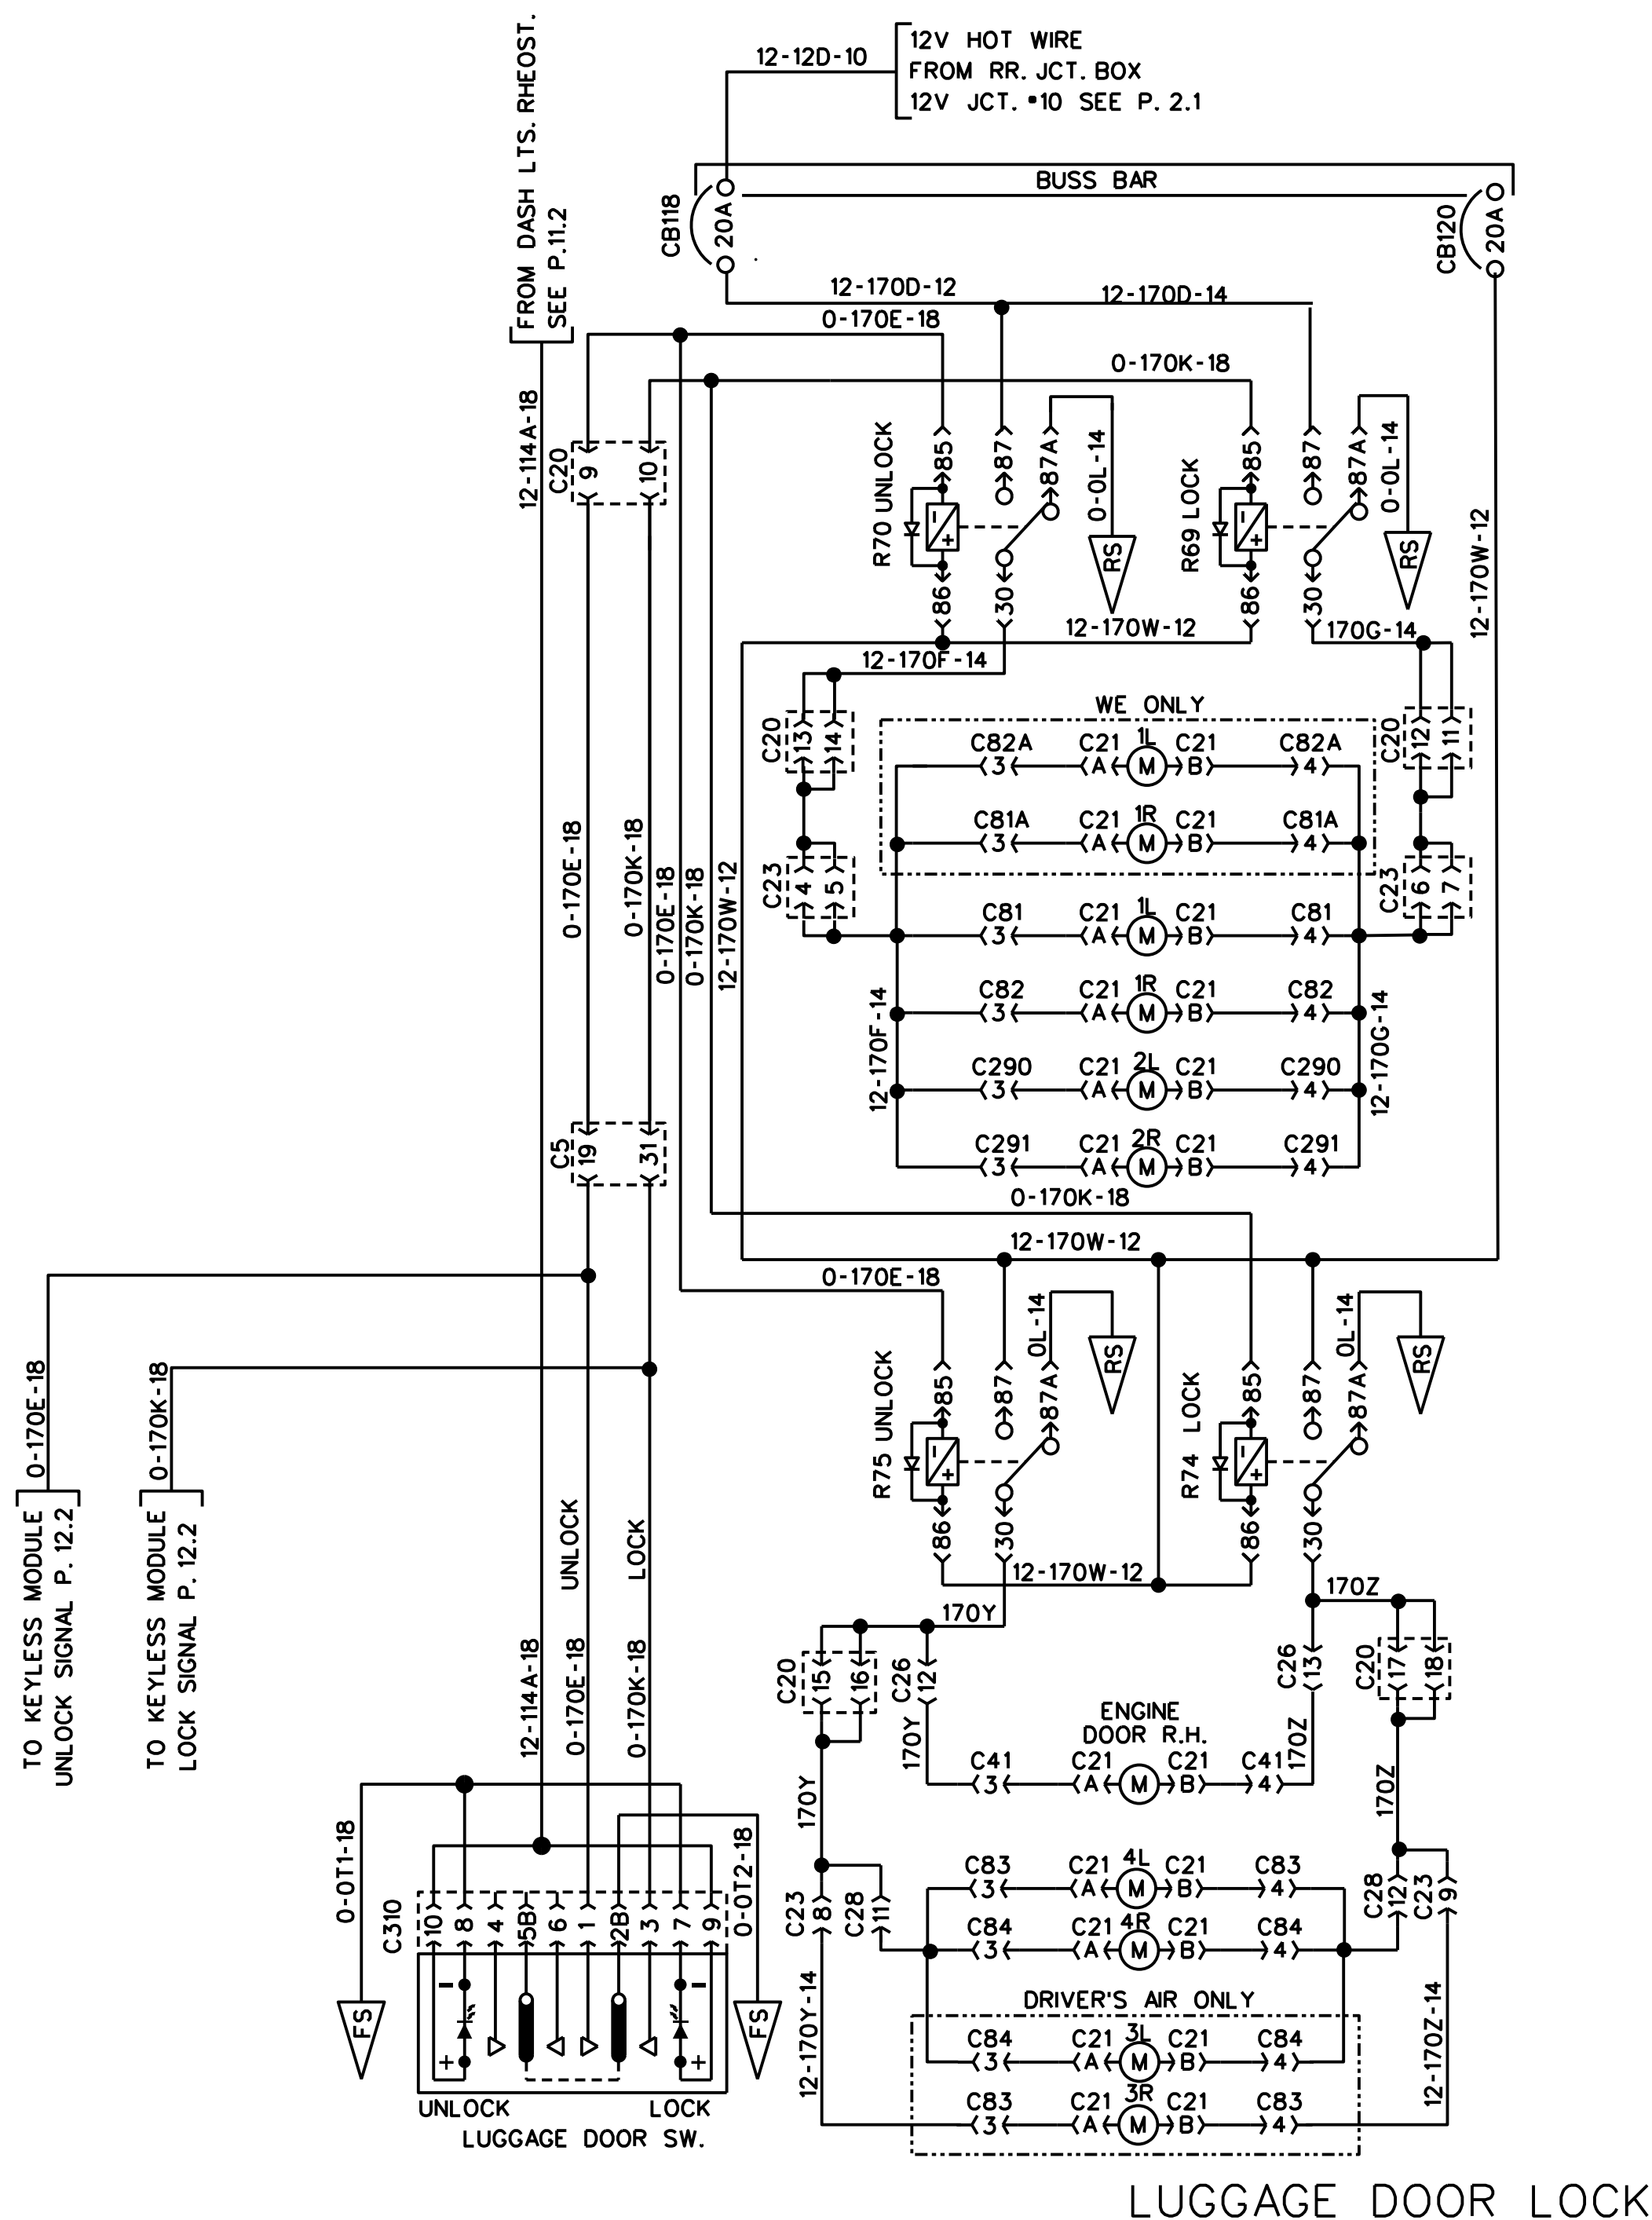

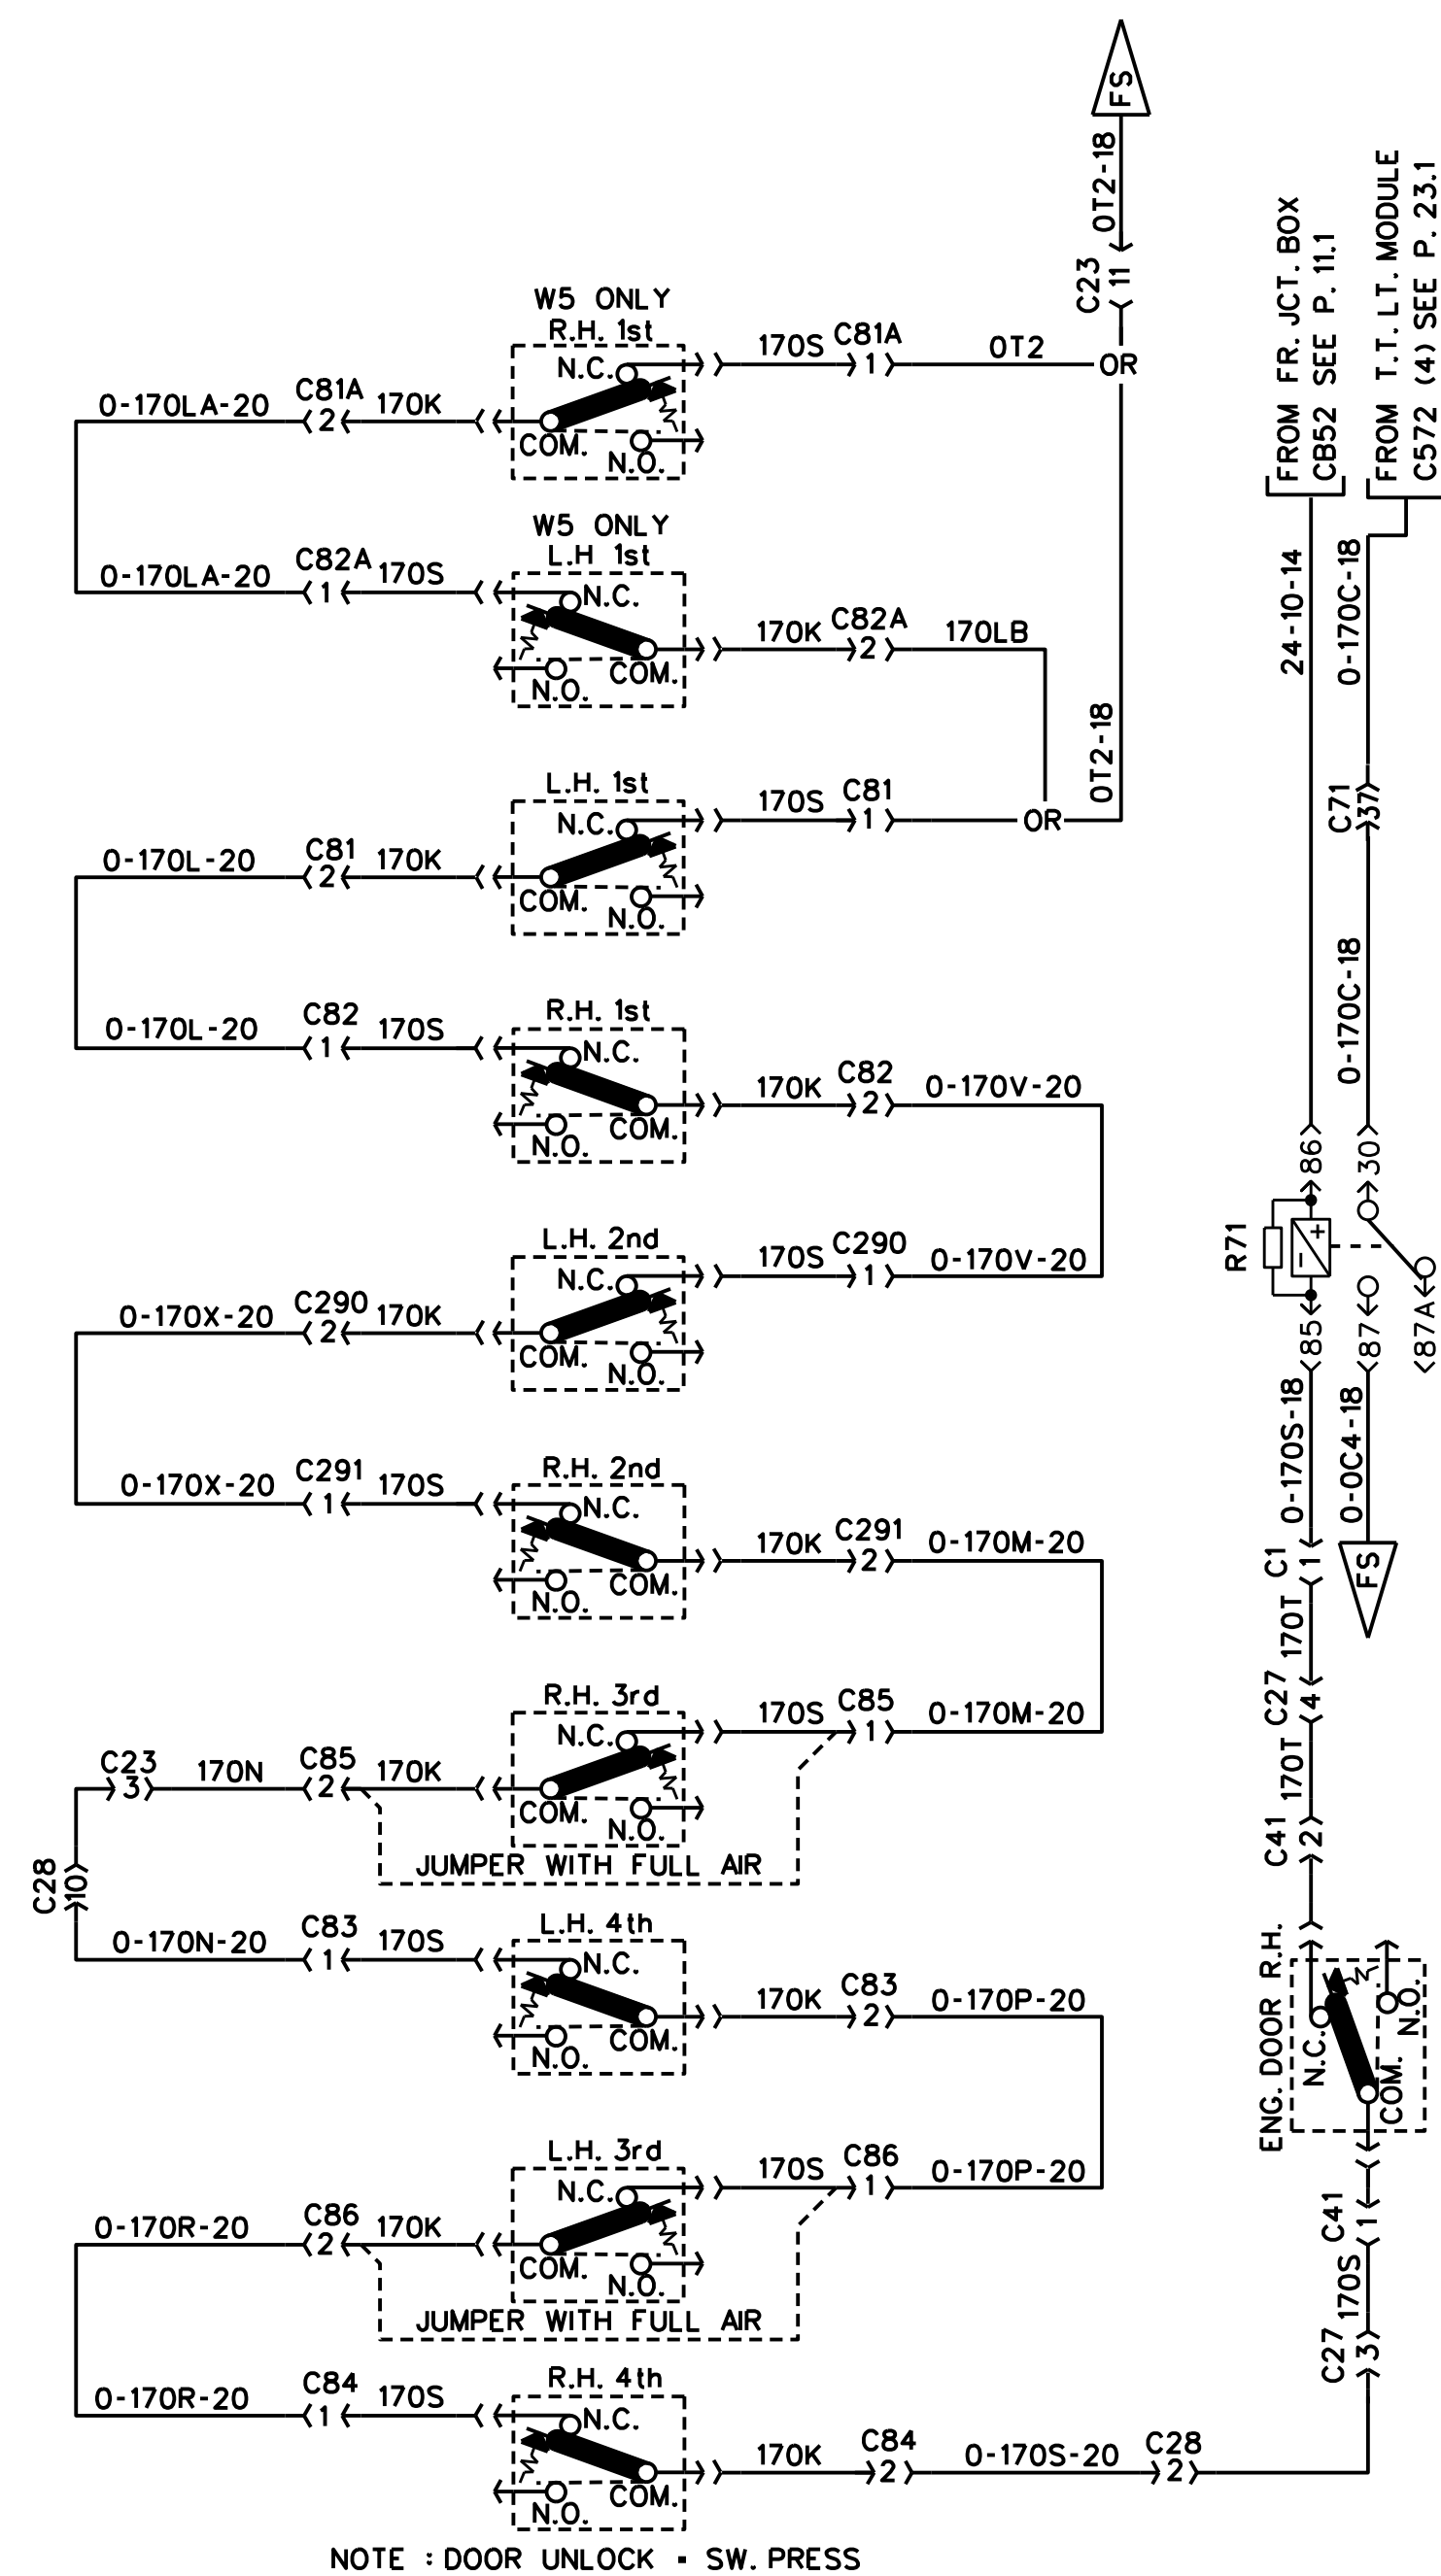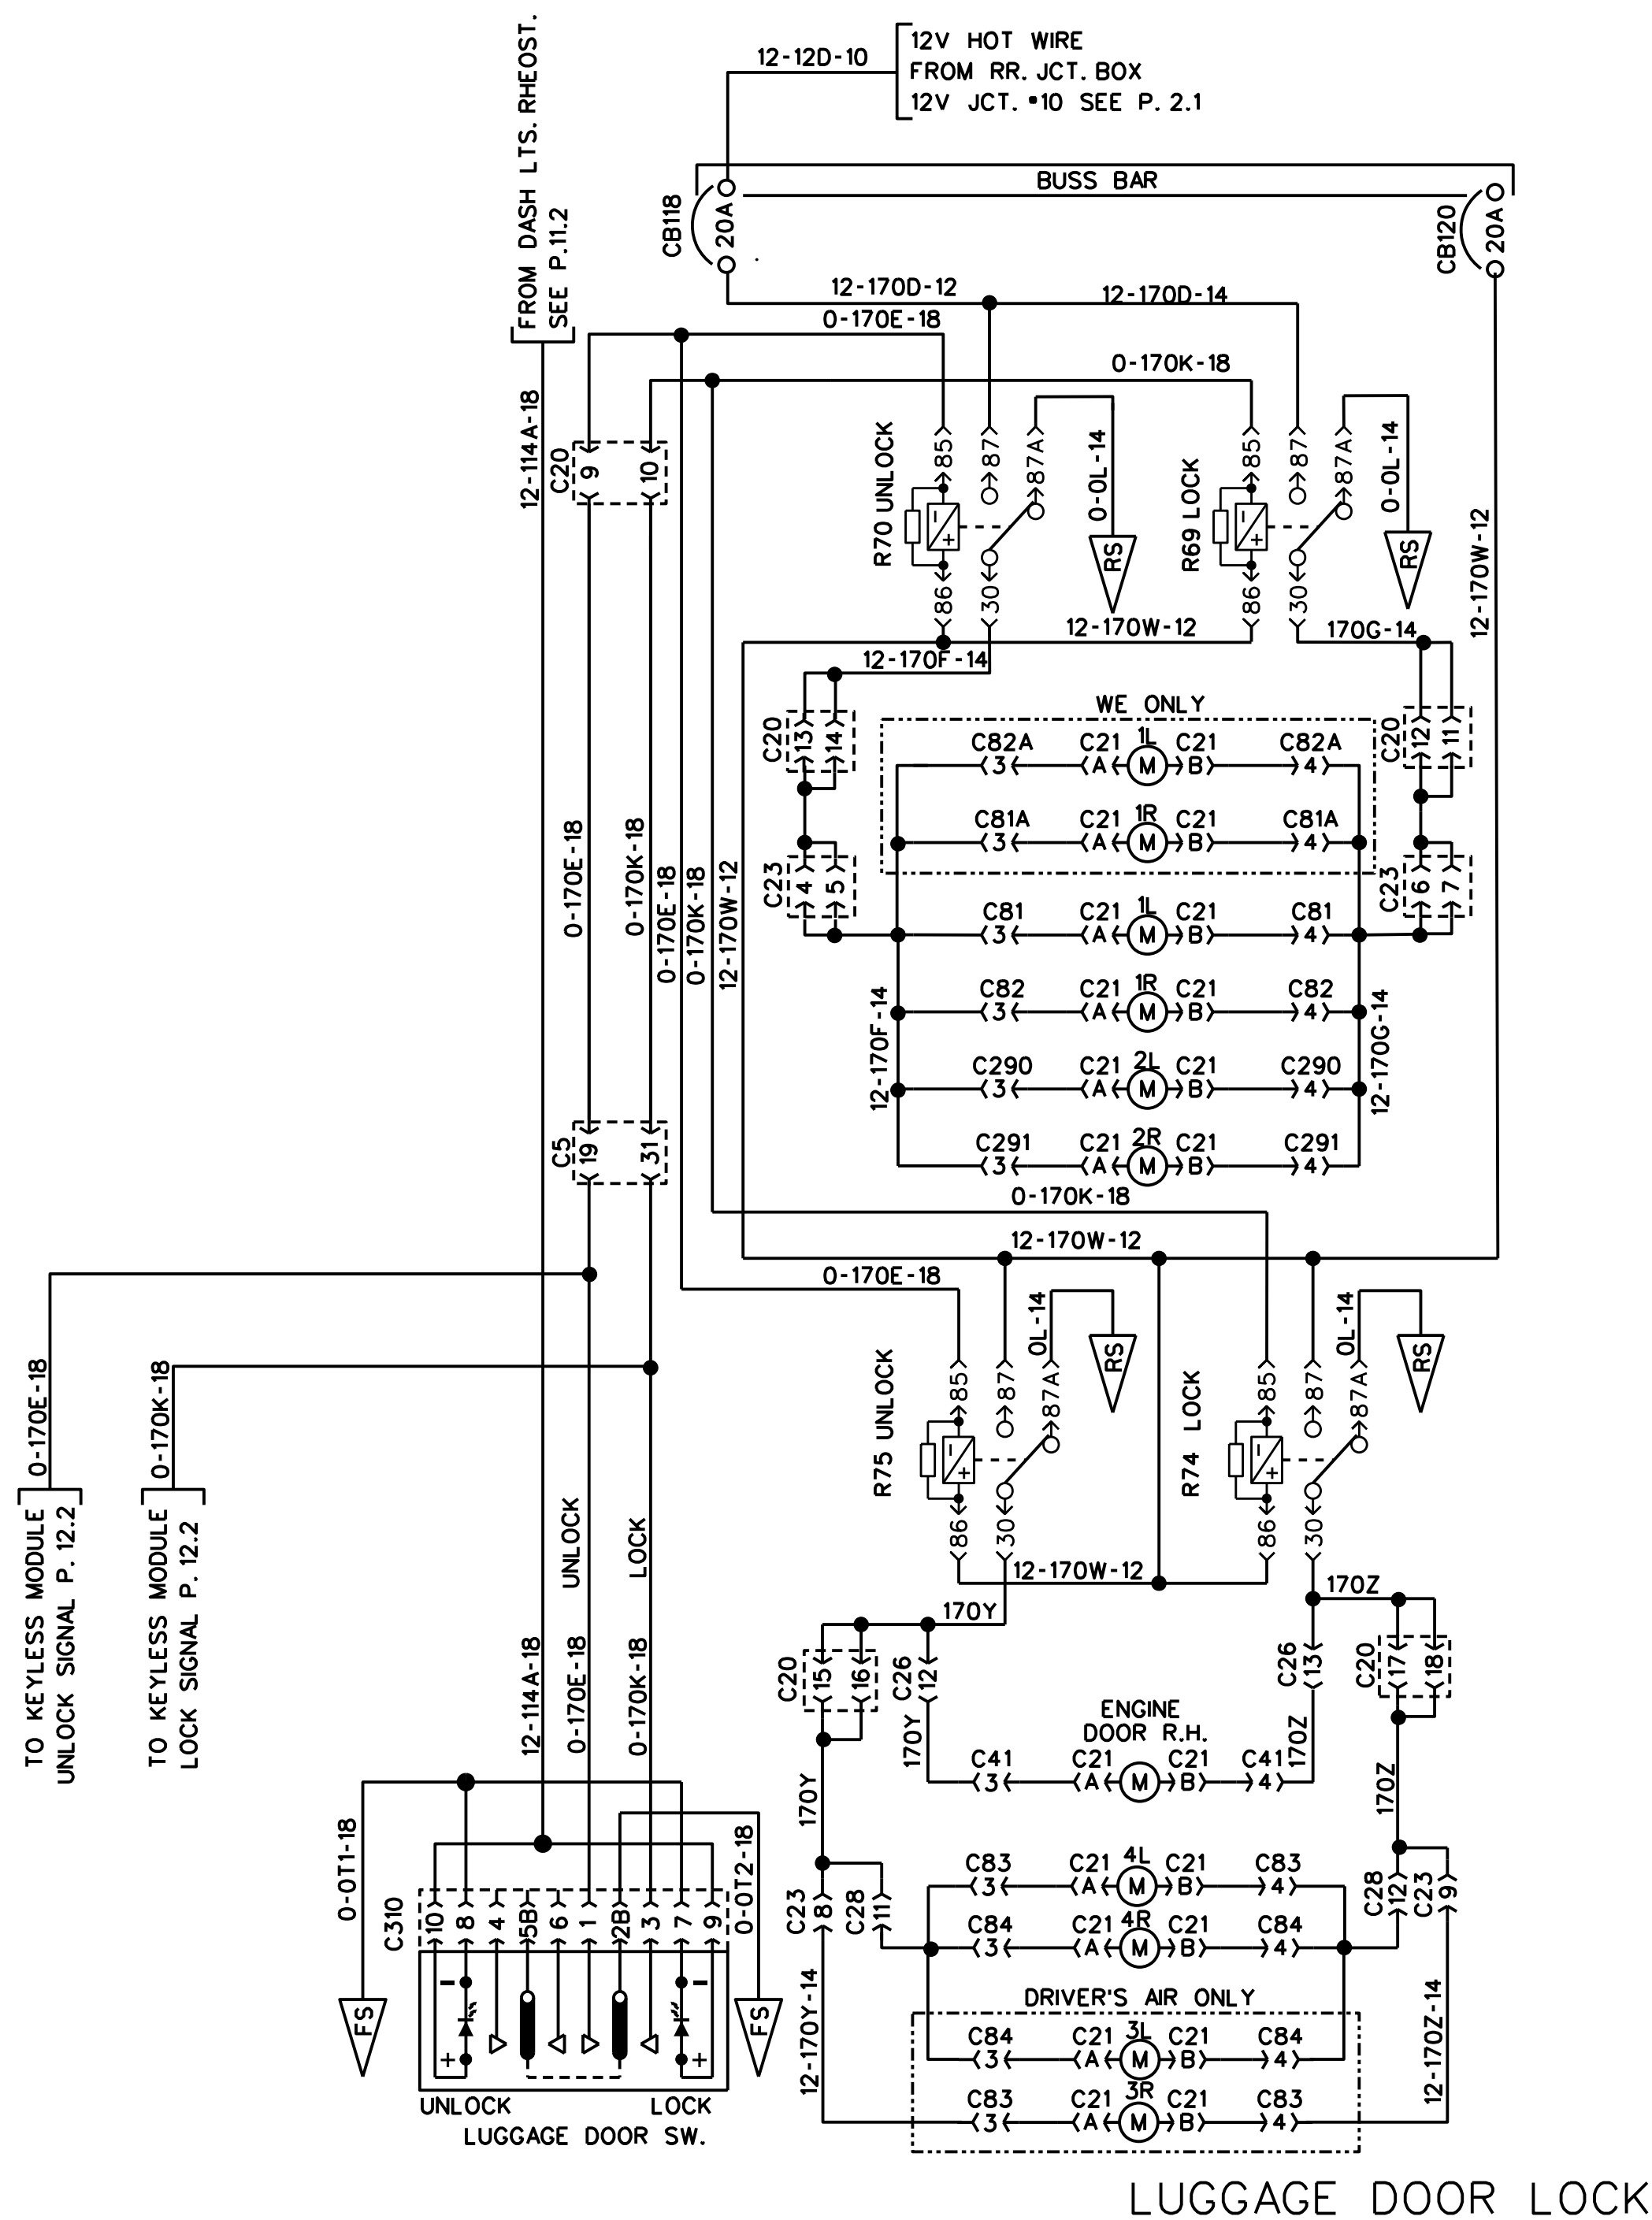


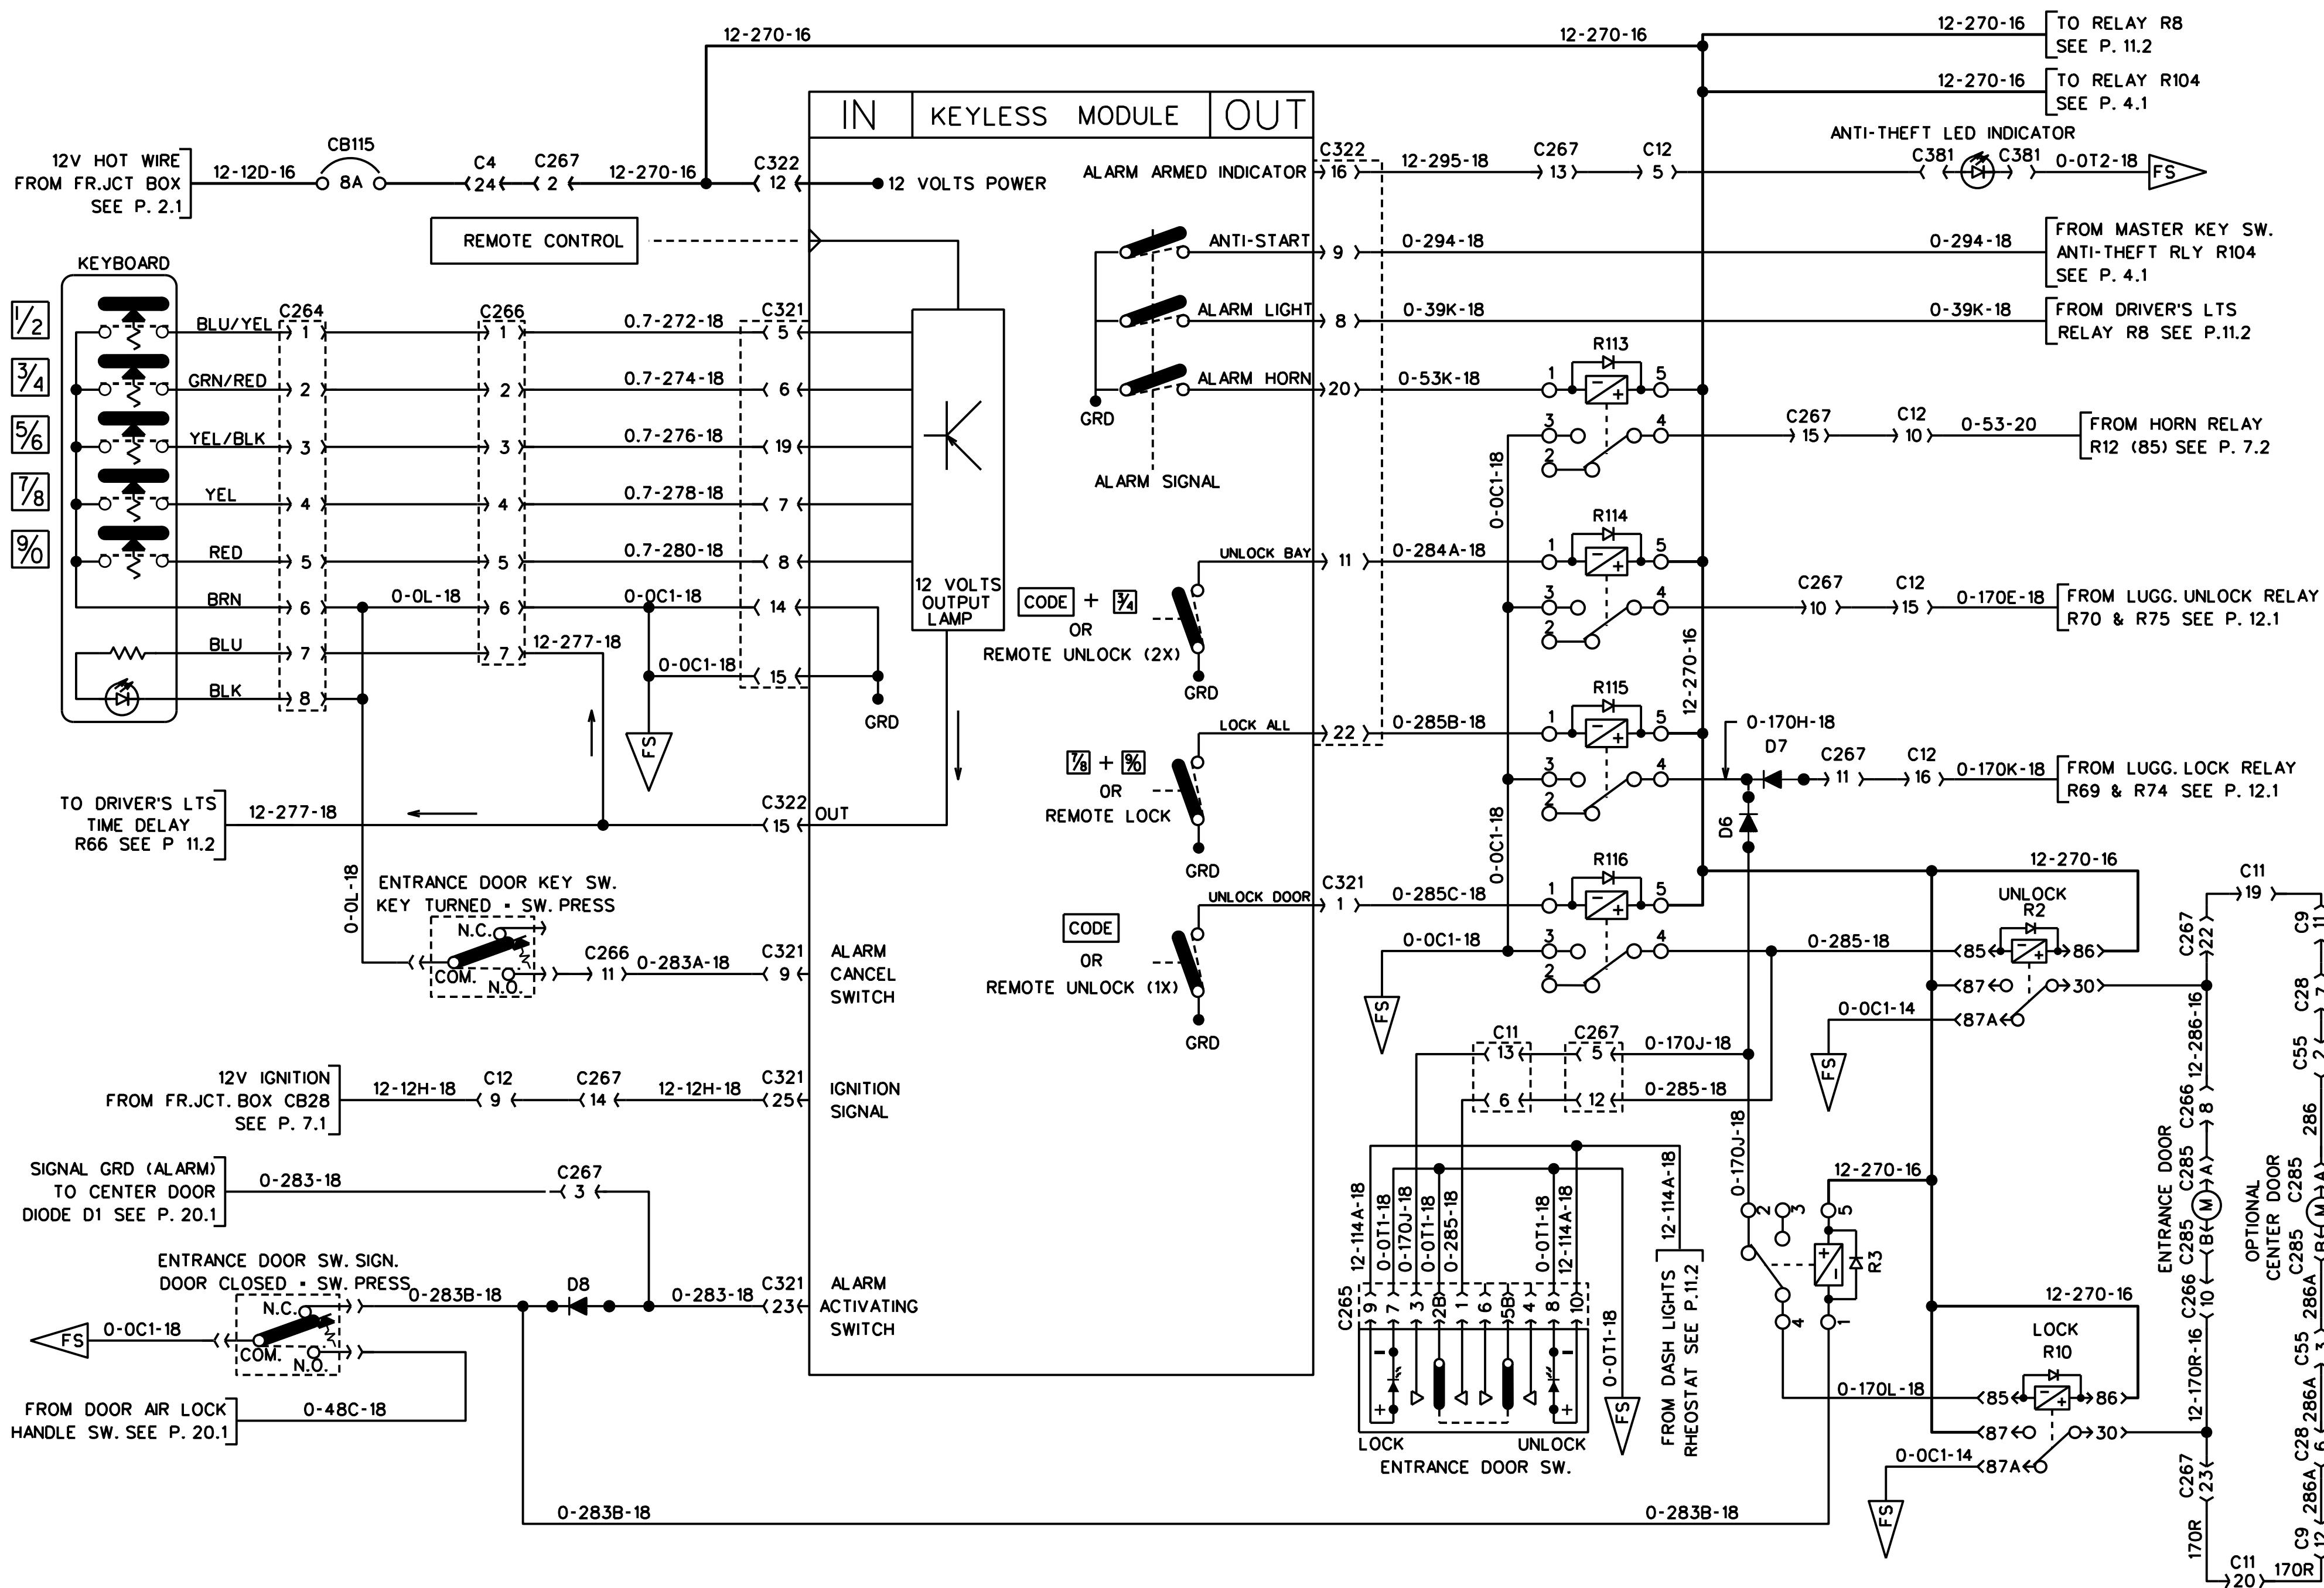

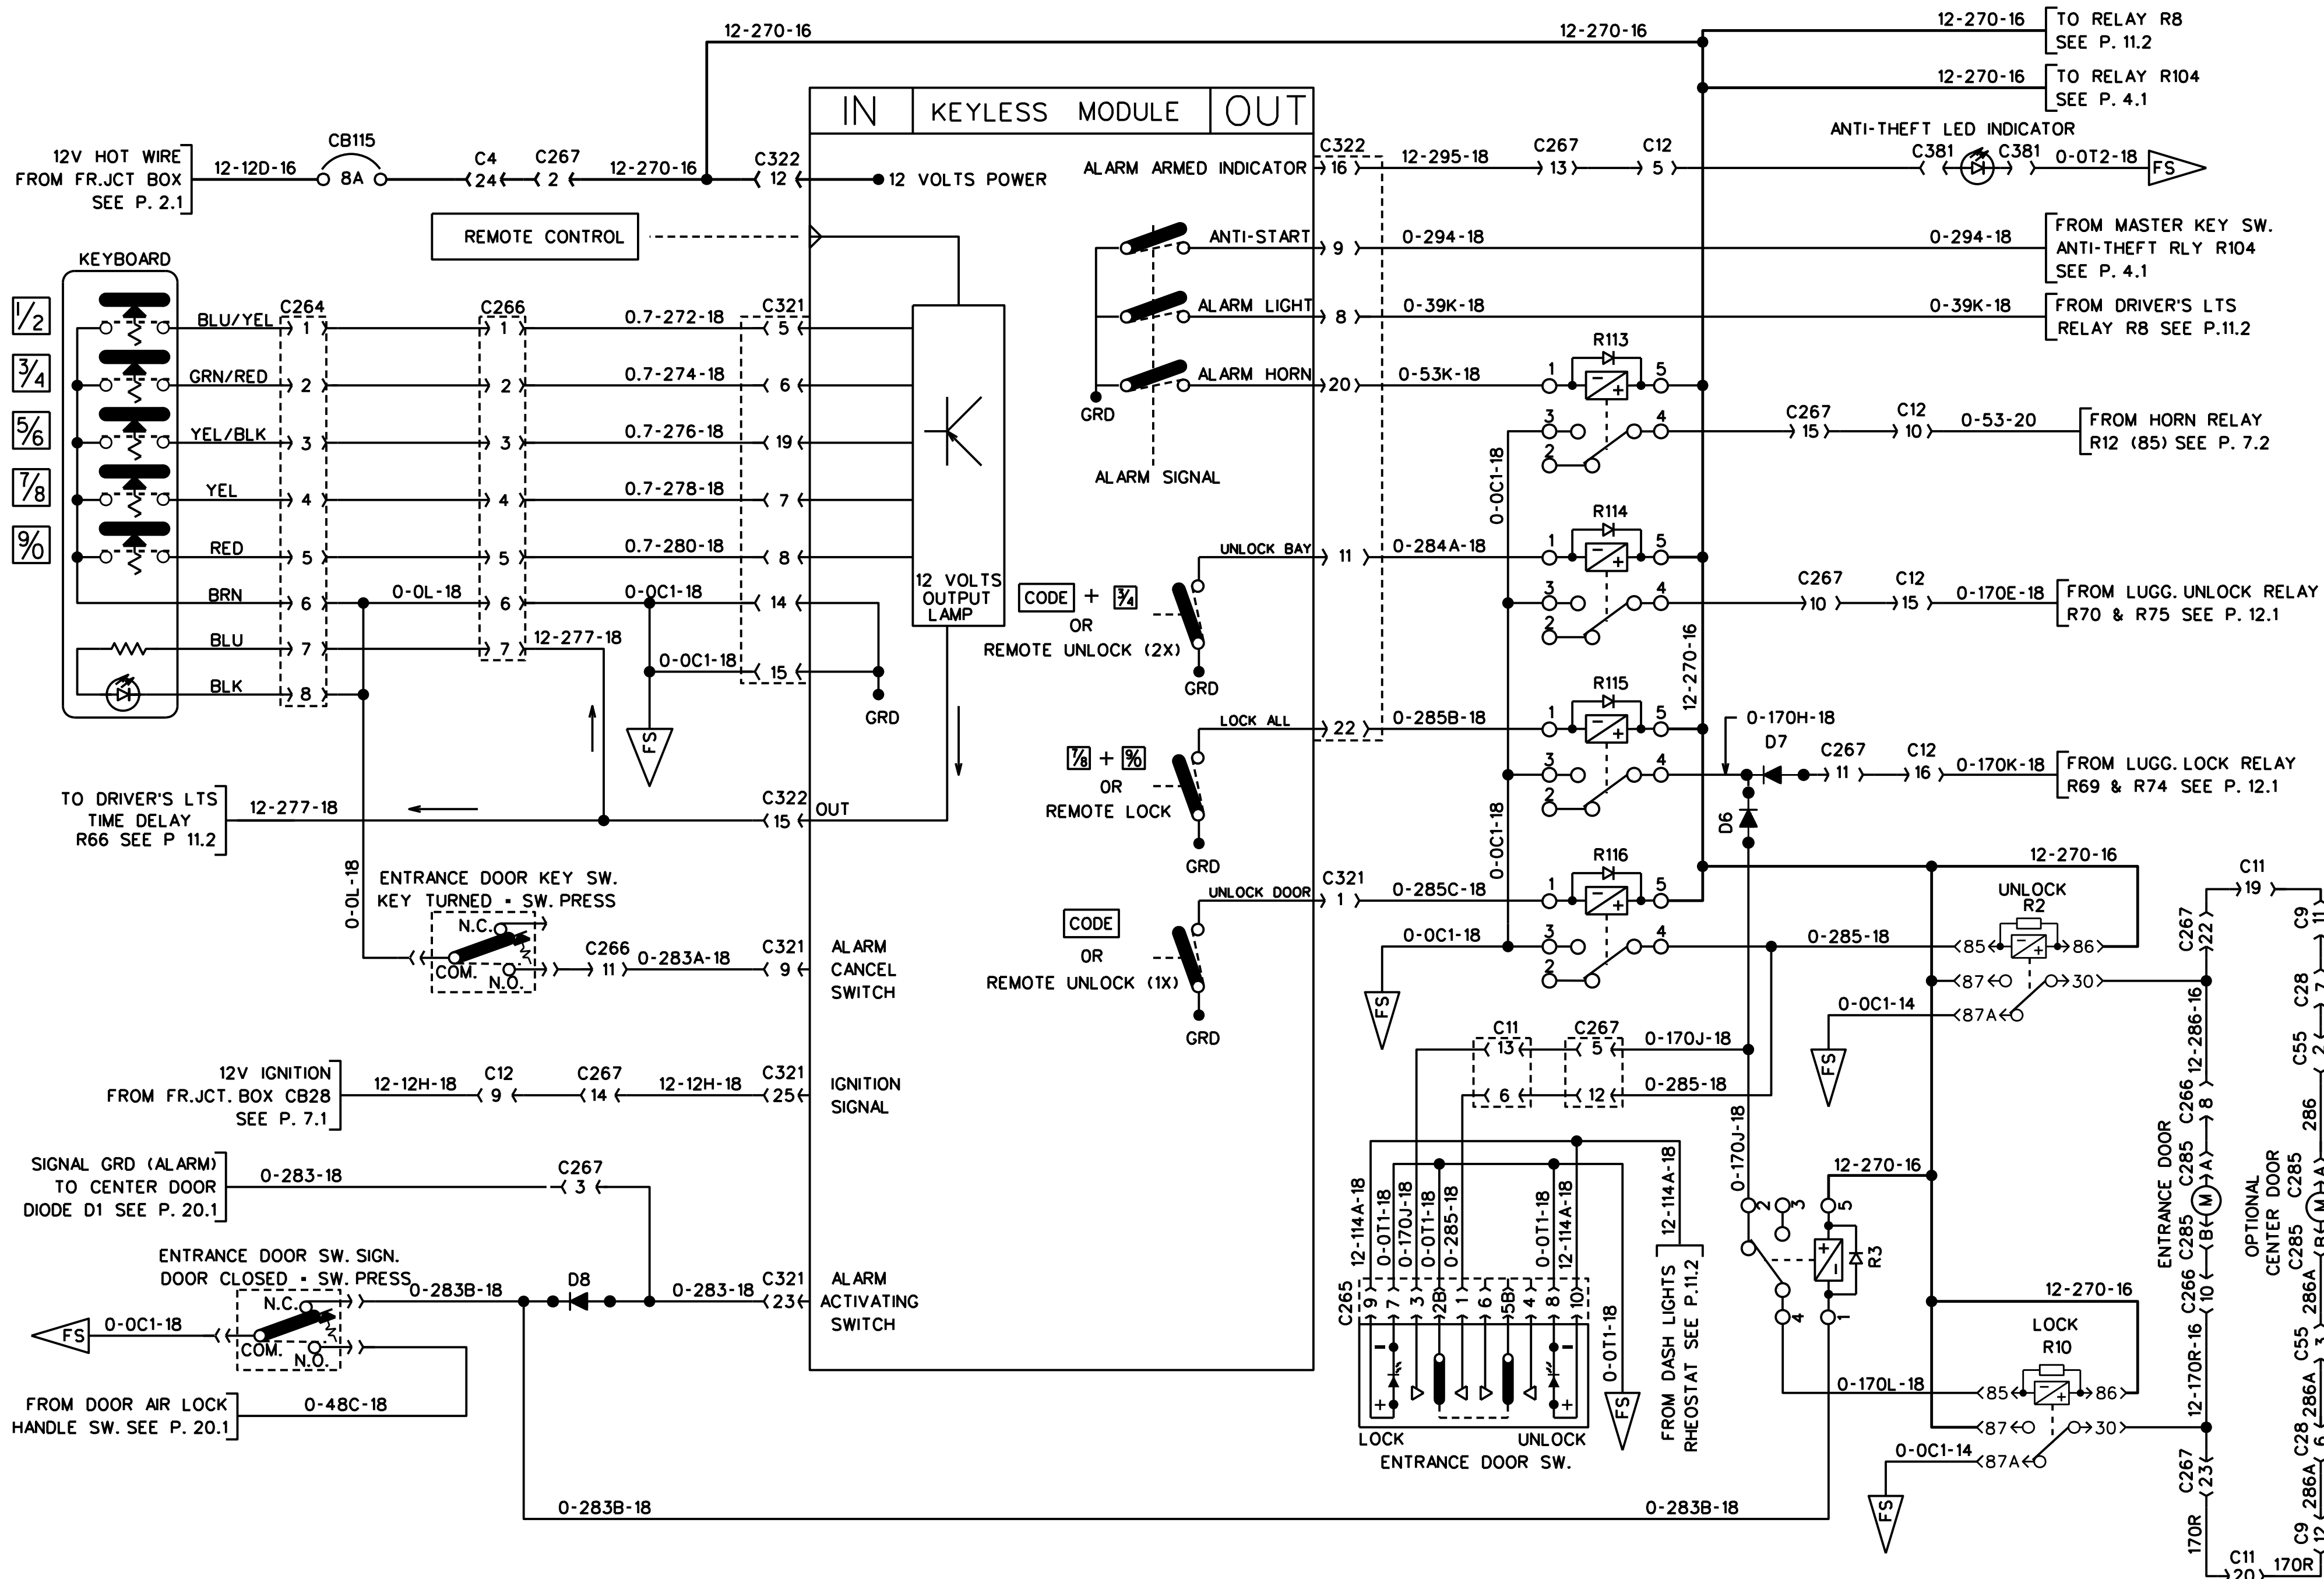


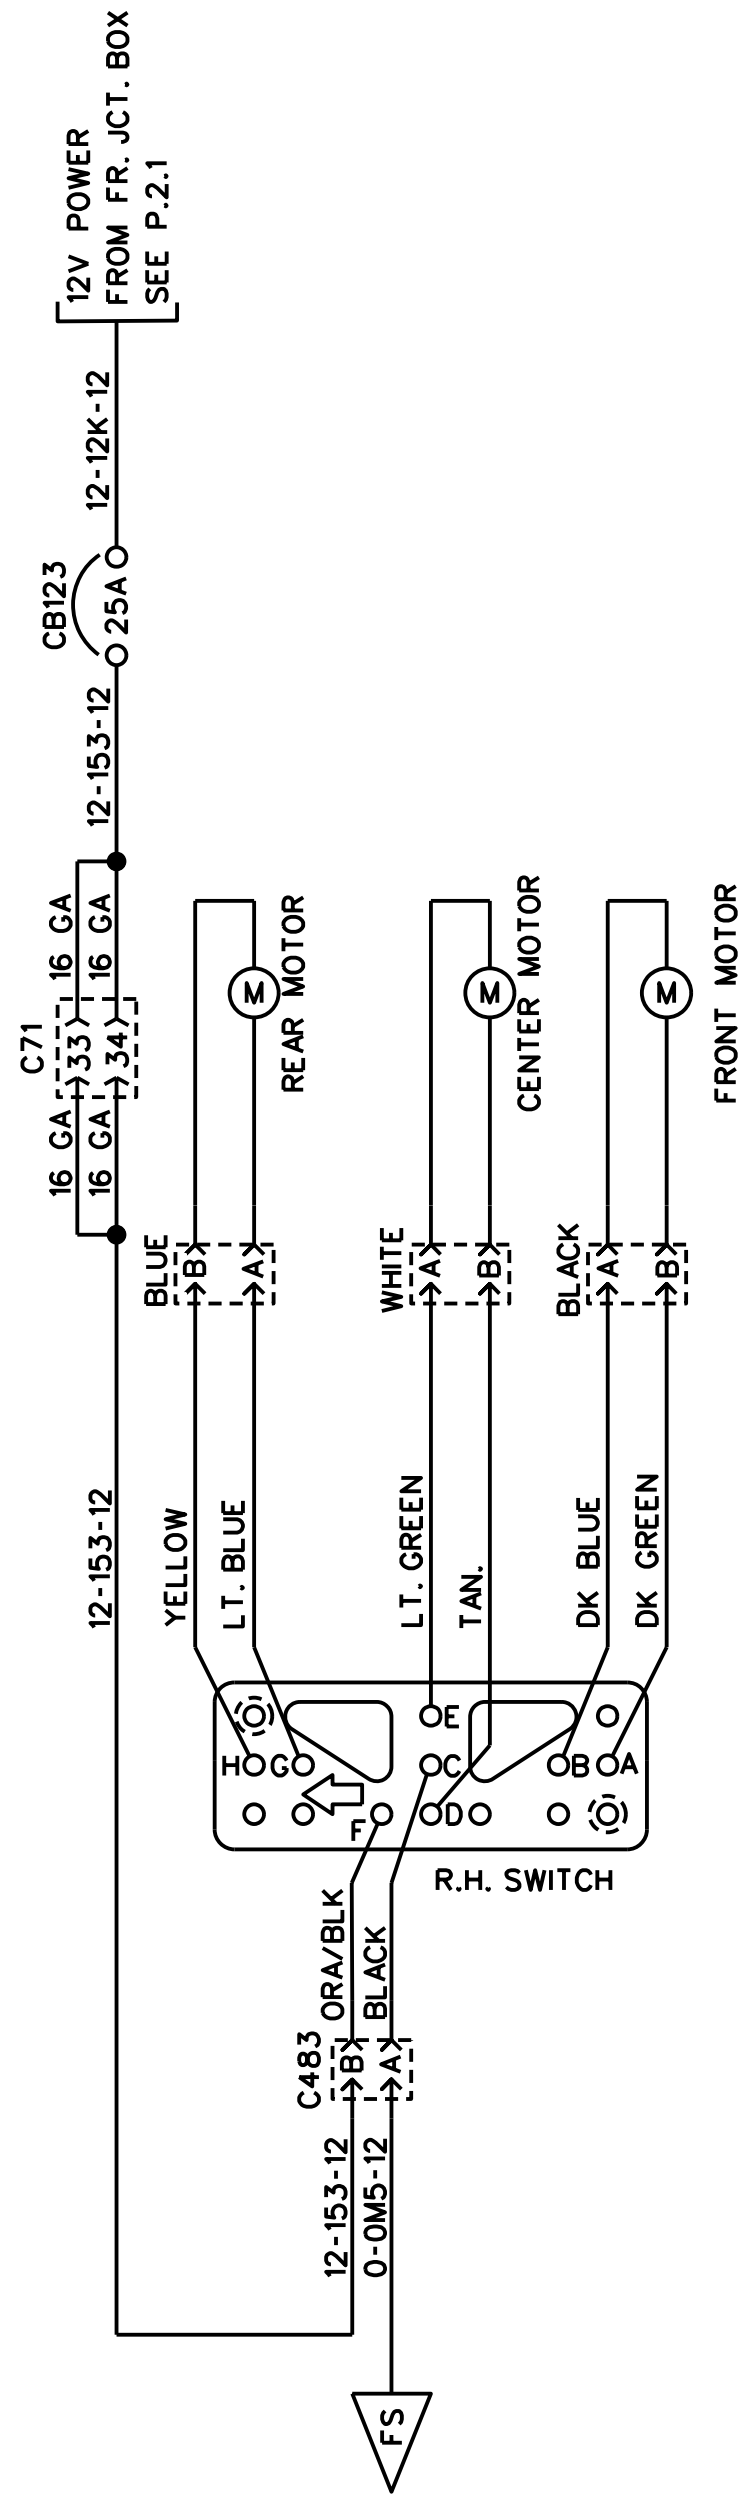



DRIVER'S SEAT ELECT. ADJ.

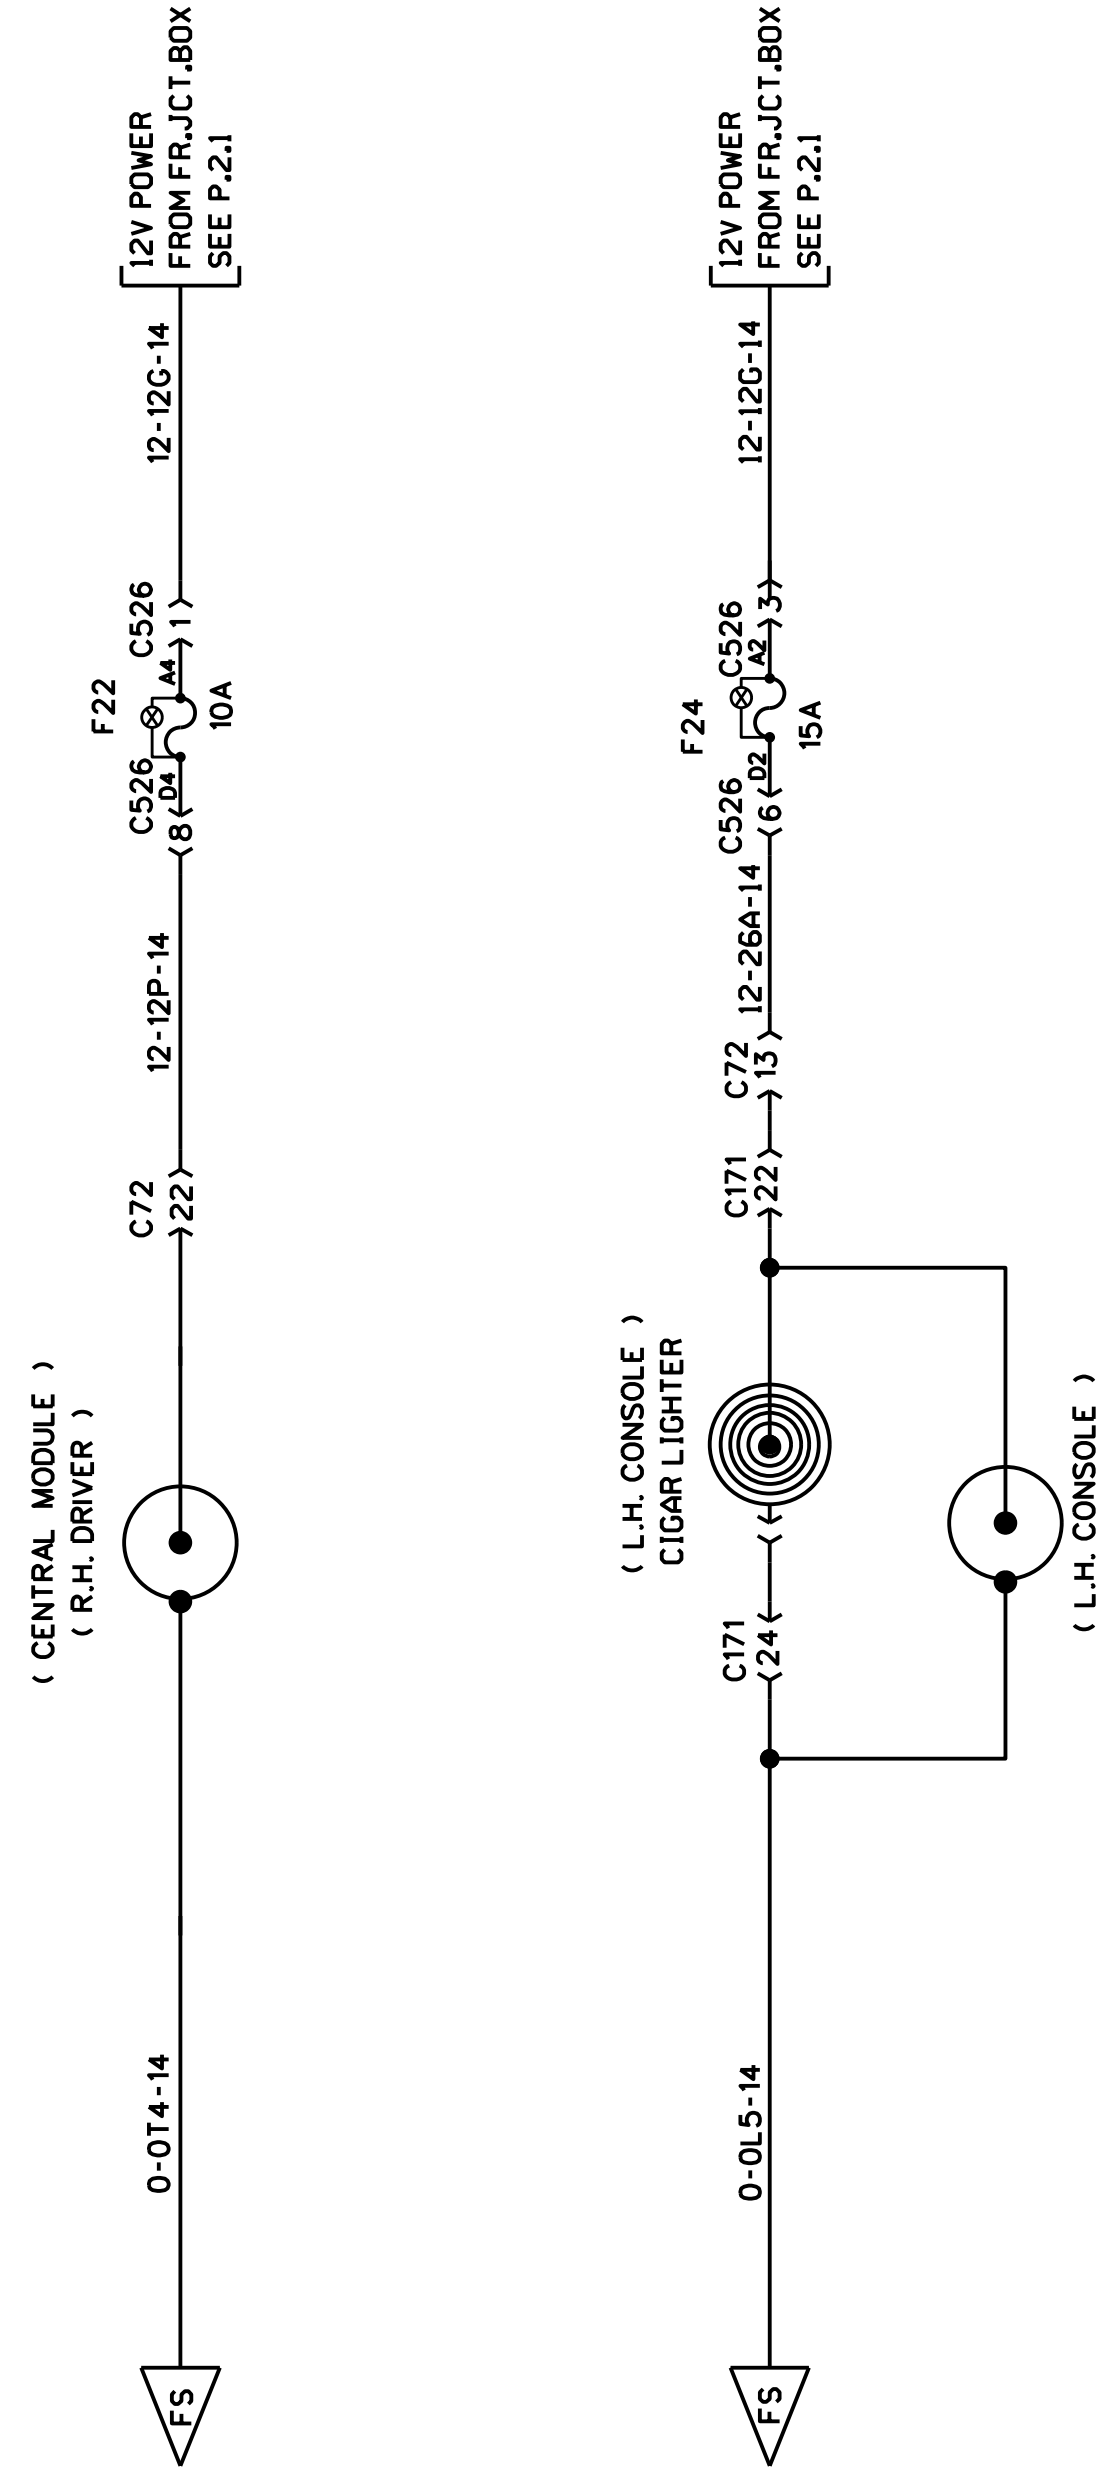

POWER 12 VOLT OUTLET




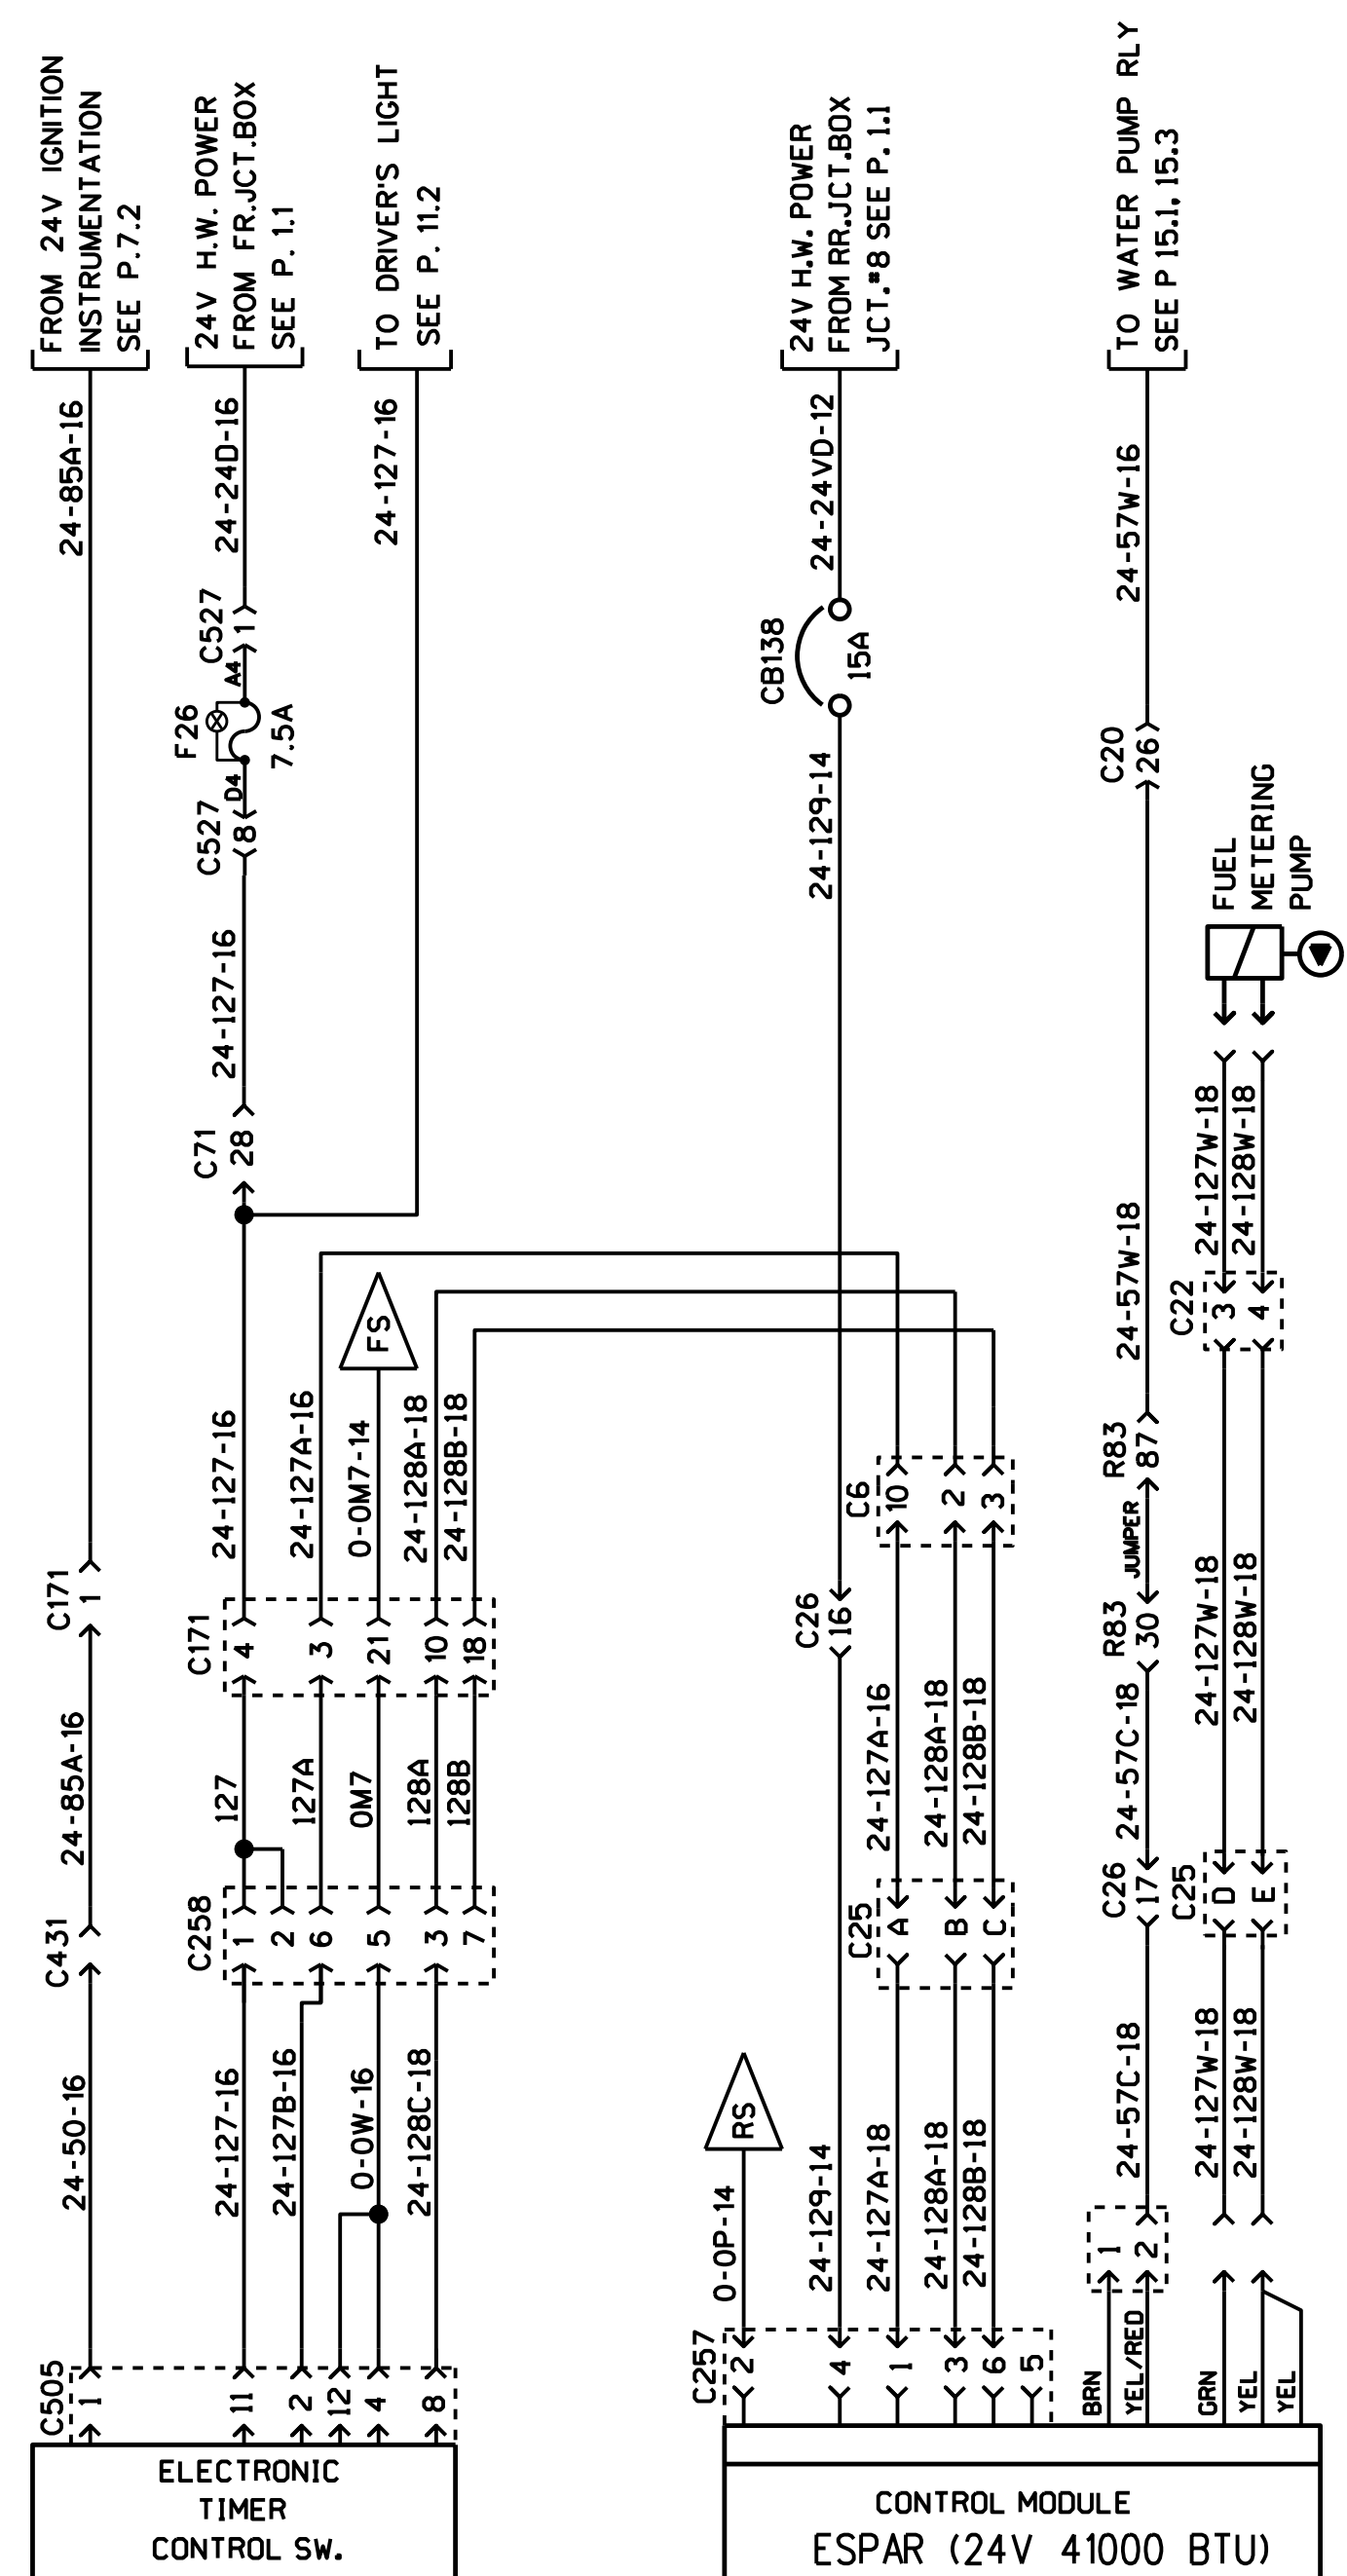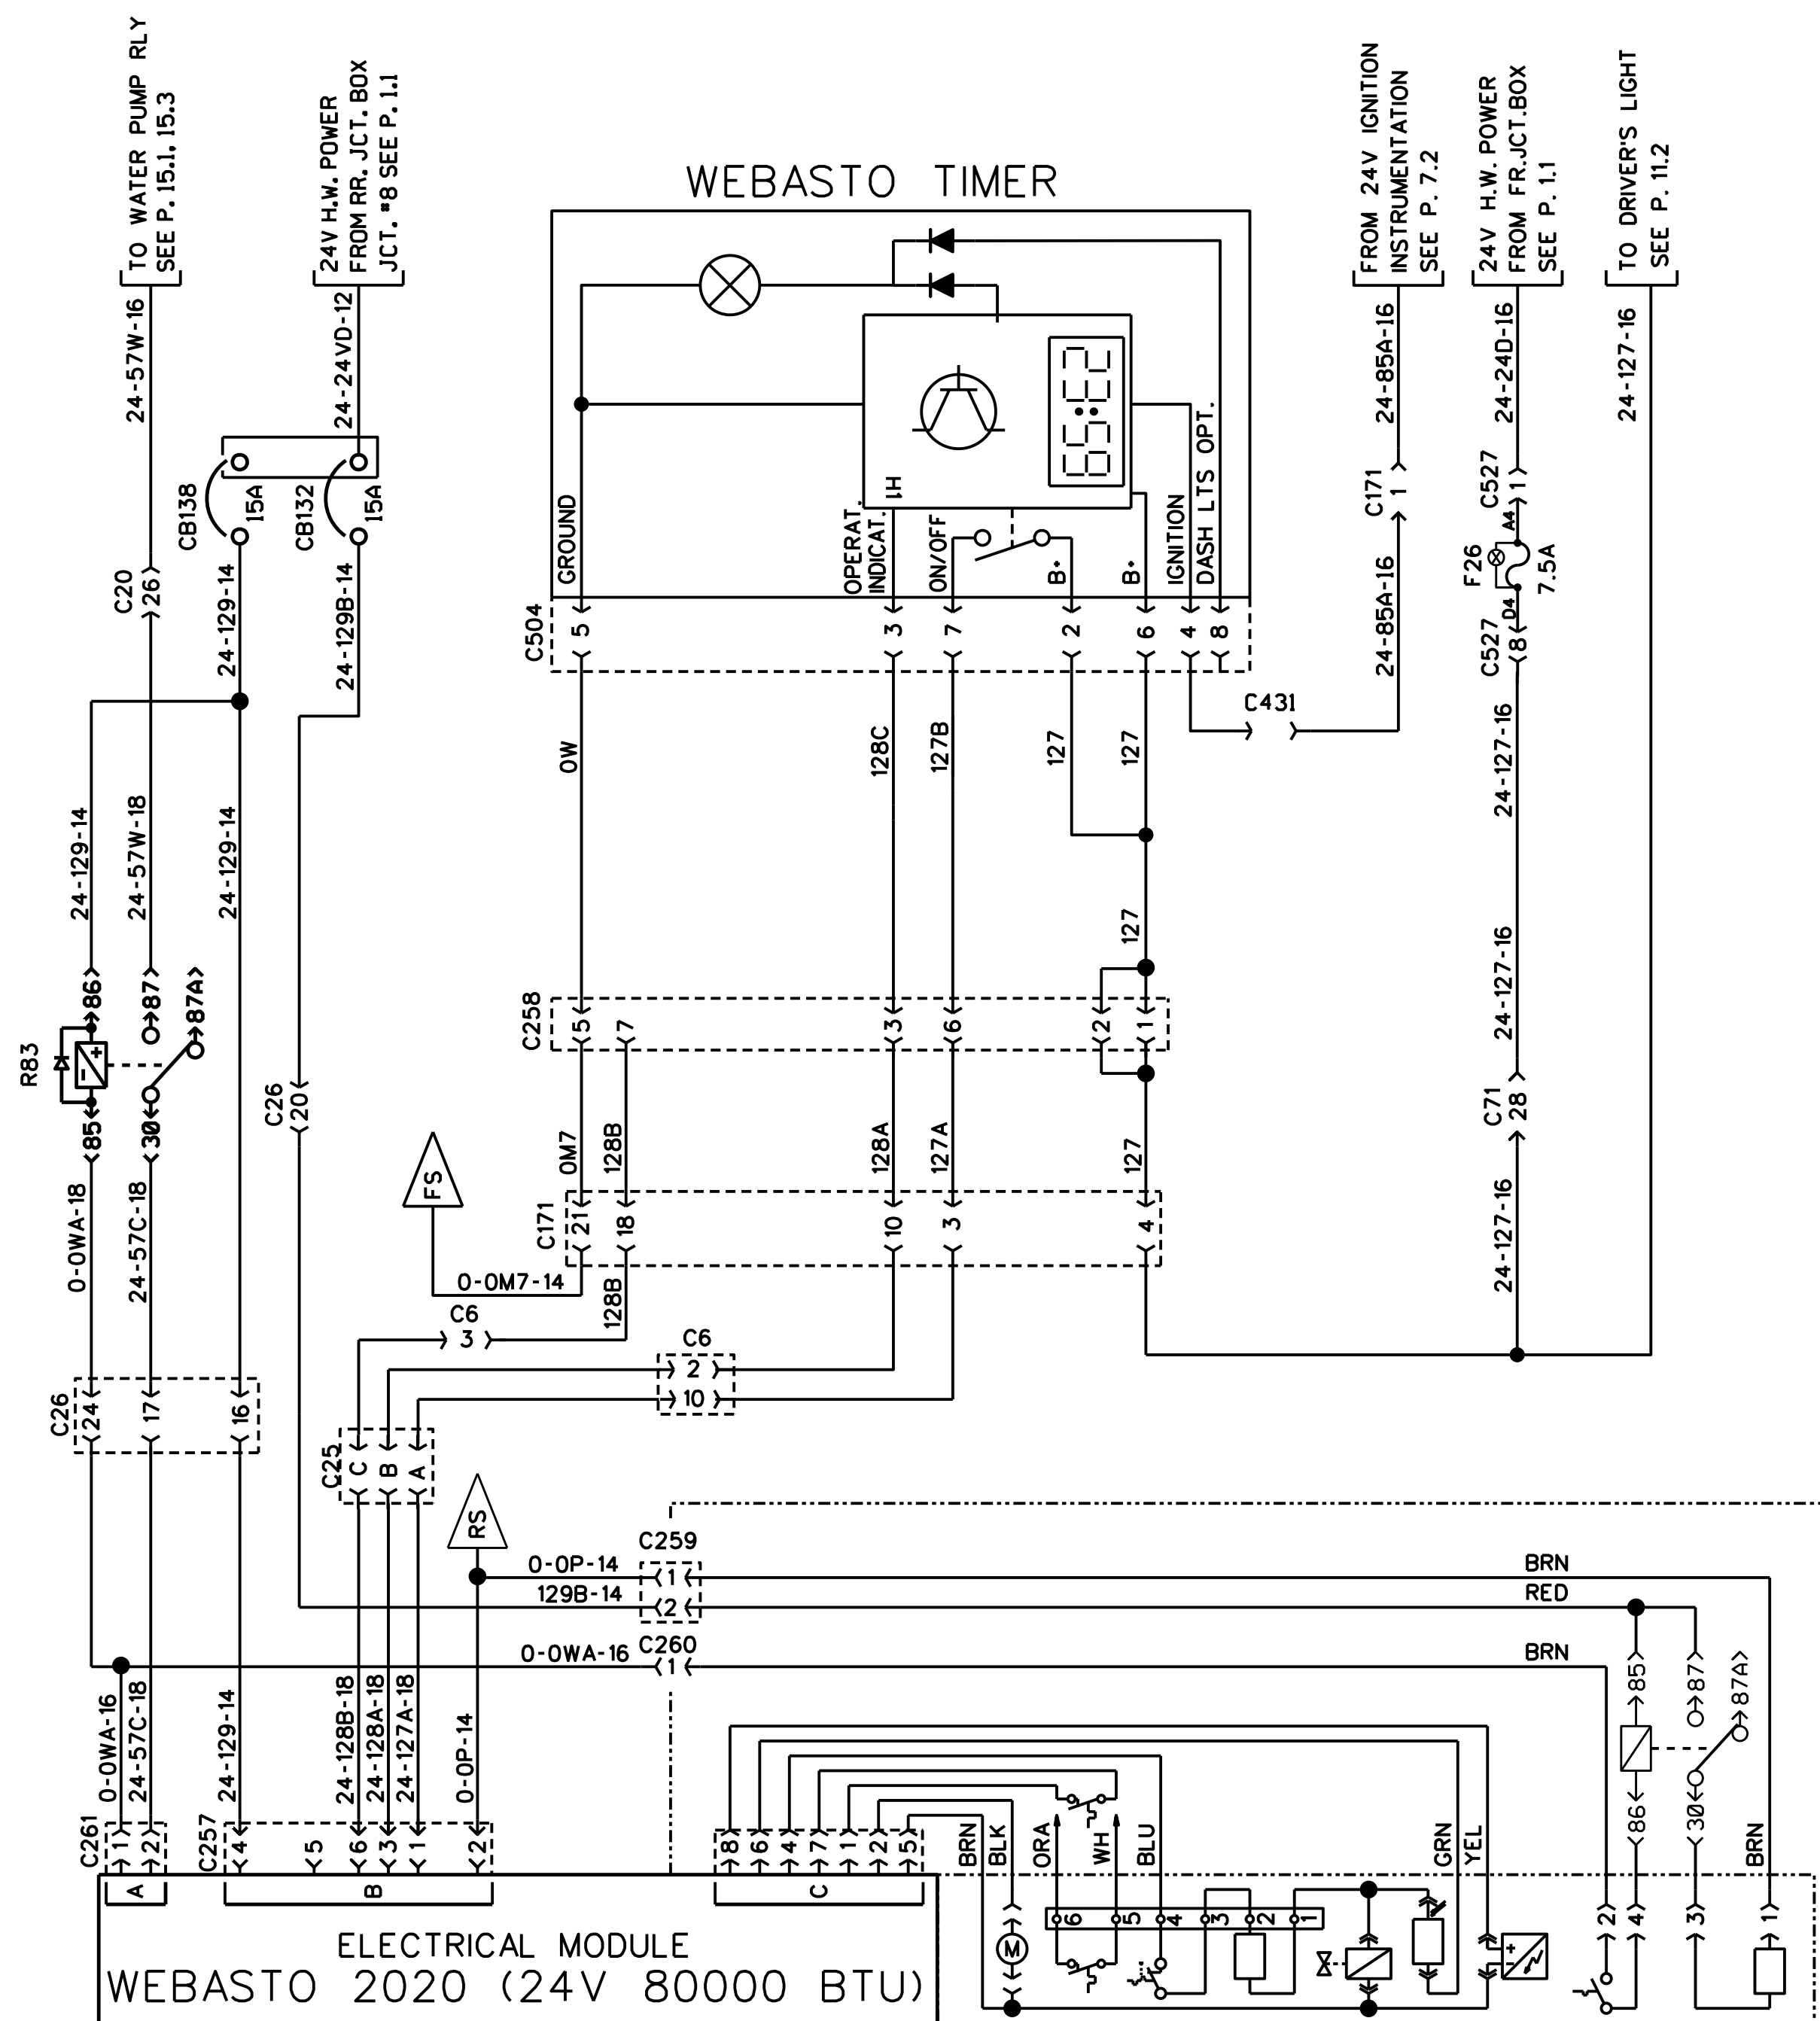


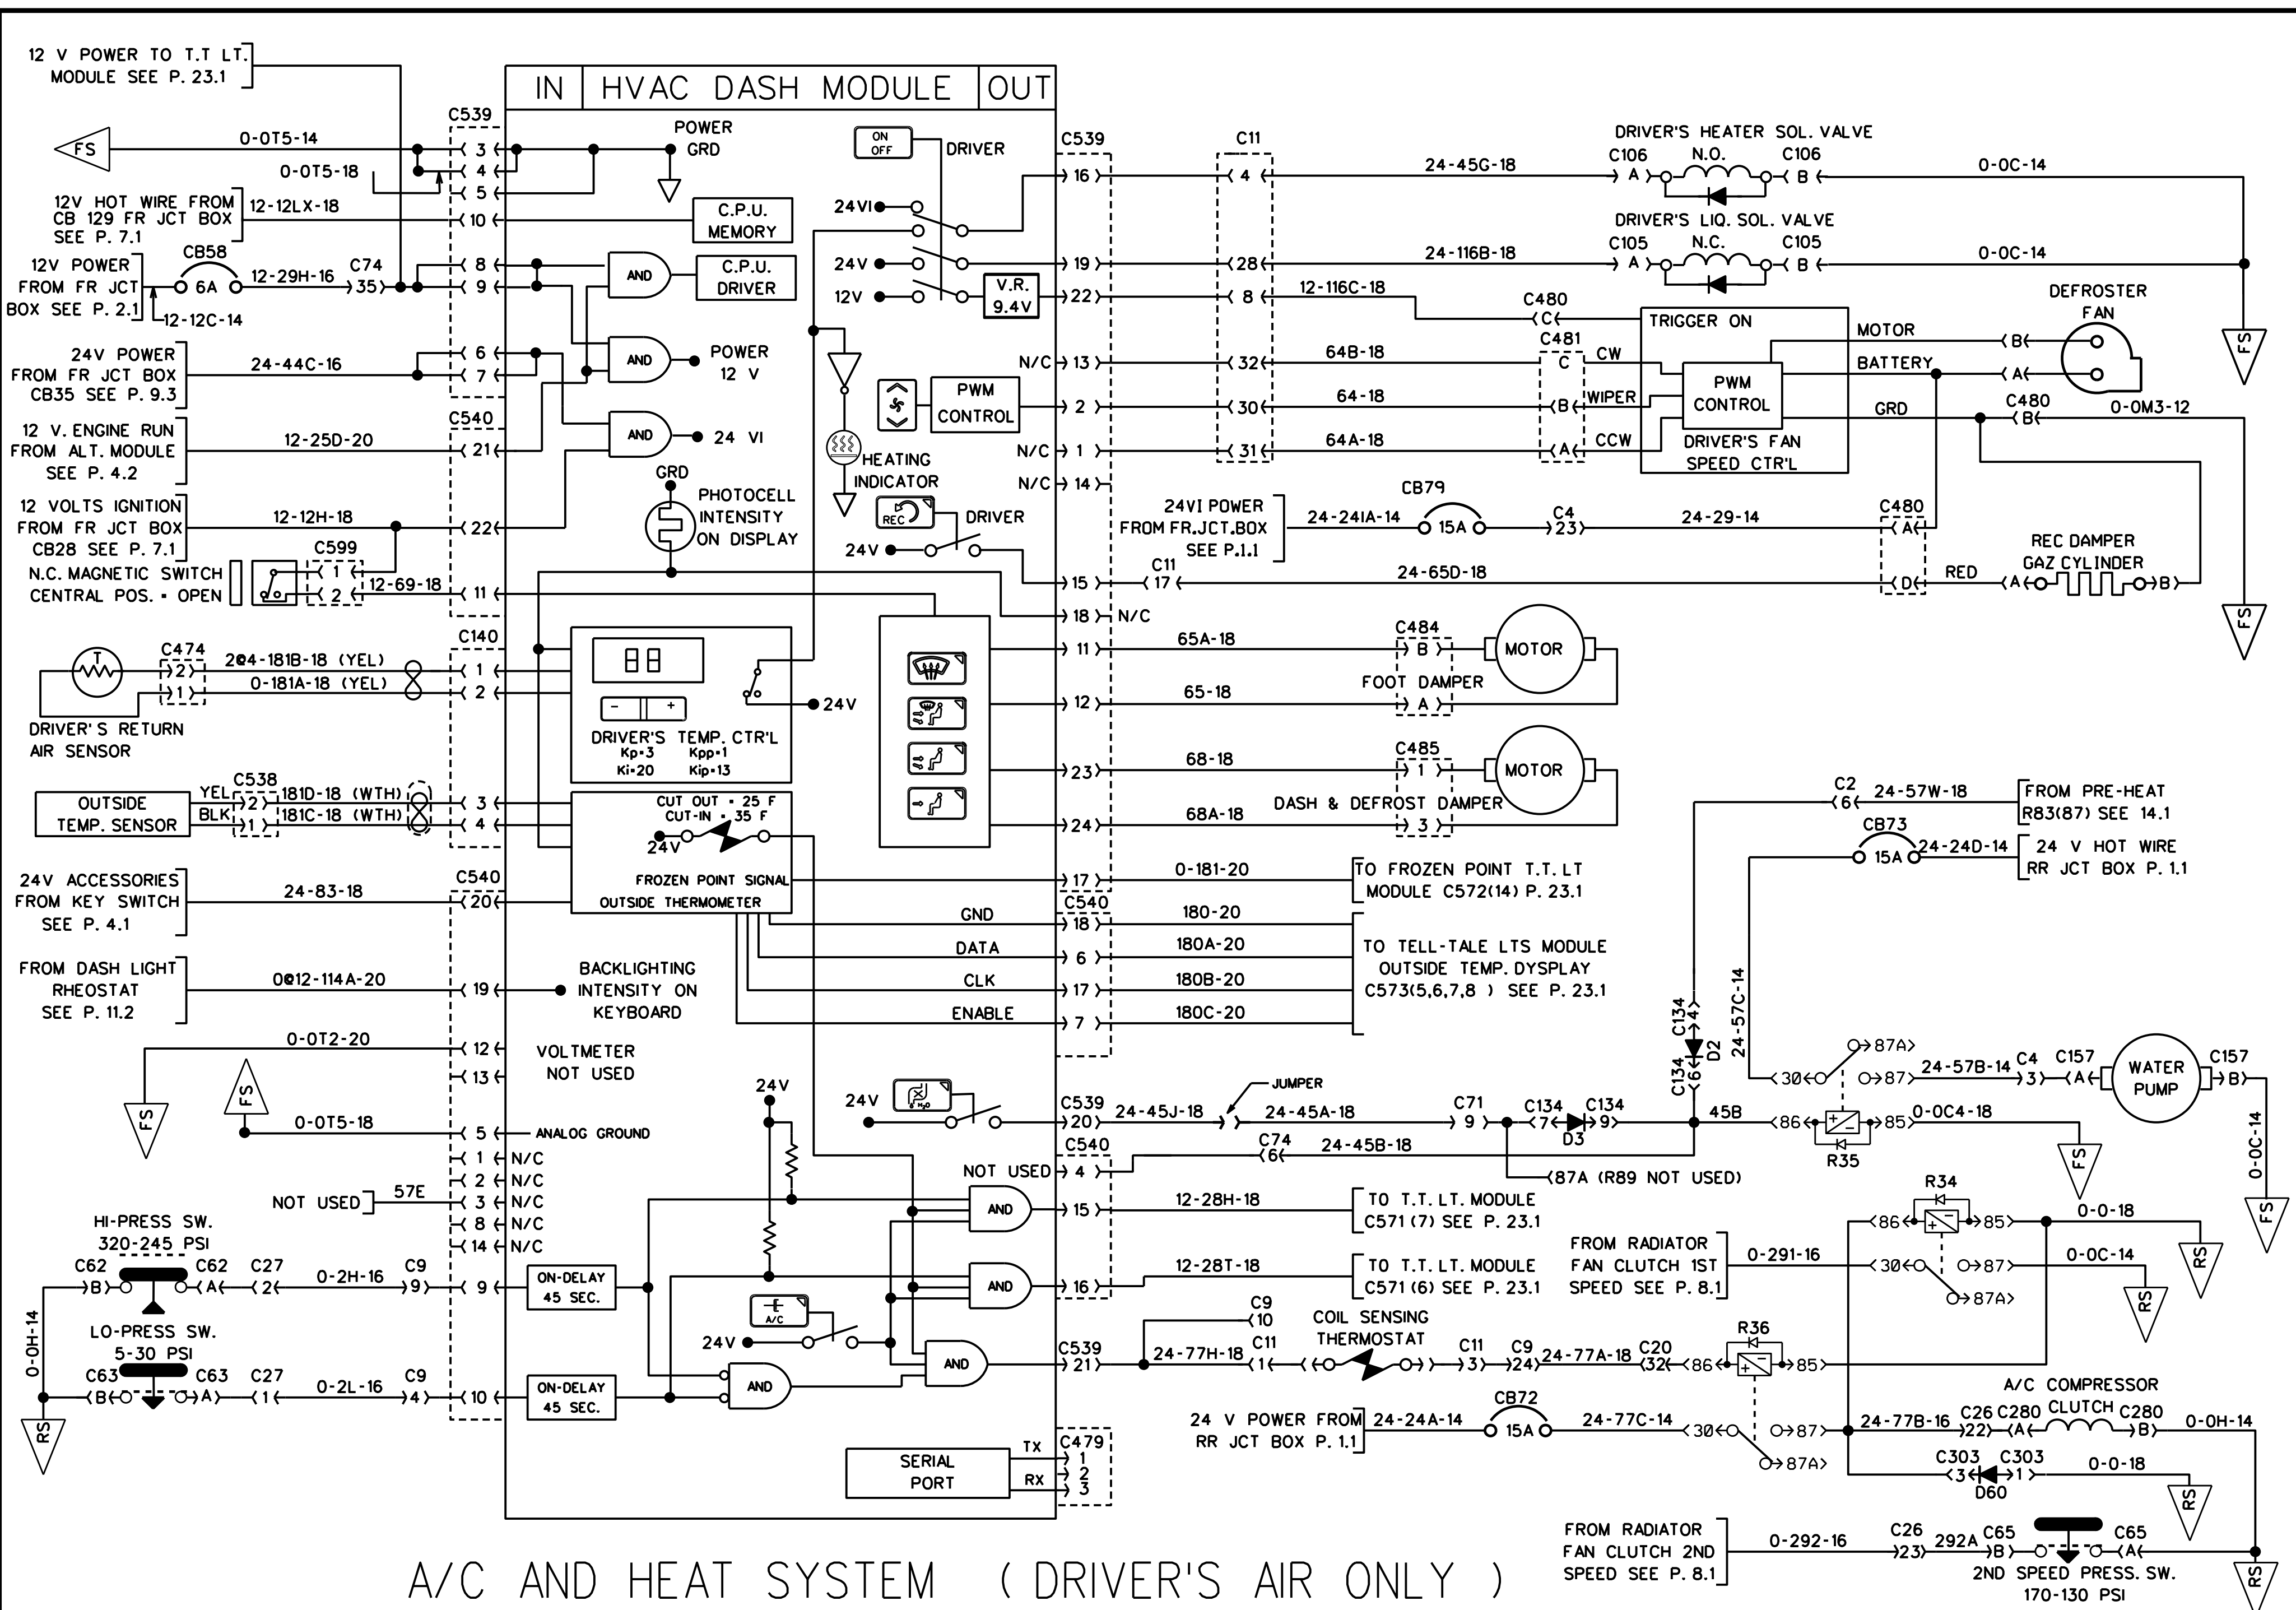


A/C AND HEAT SYSTEM (DRIVER'S AIR ONLY)



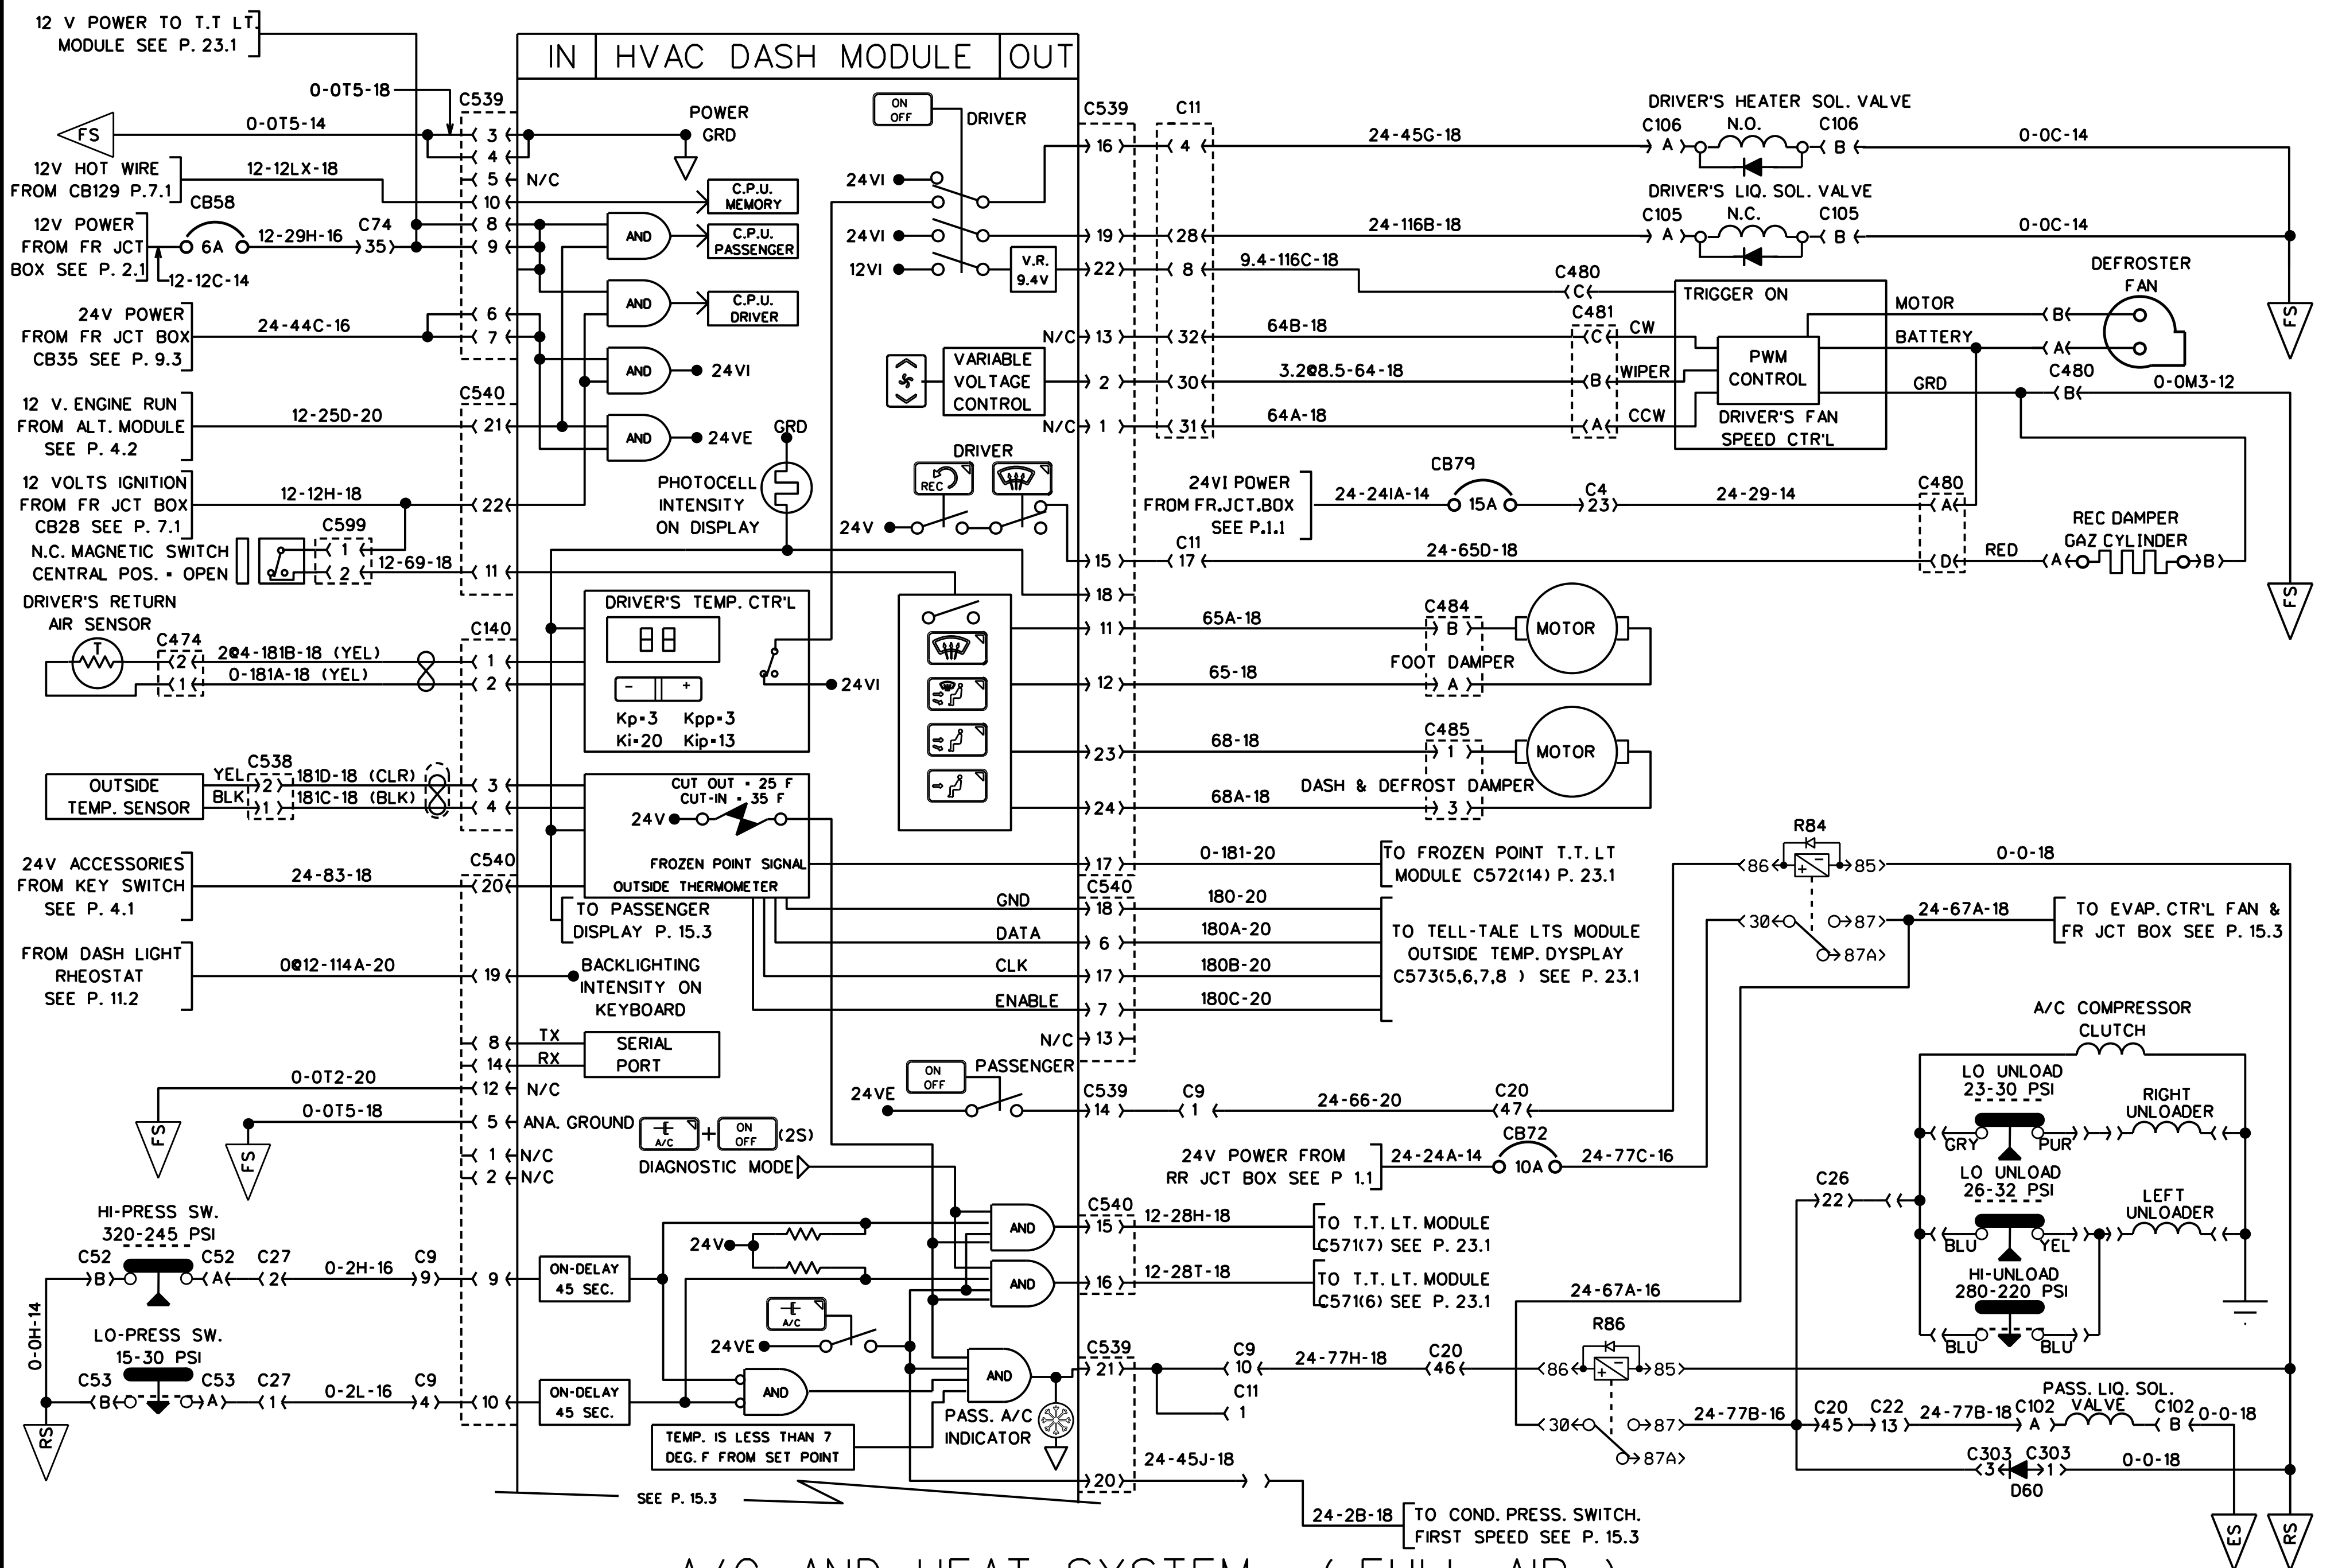


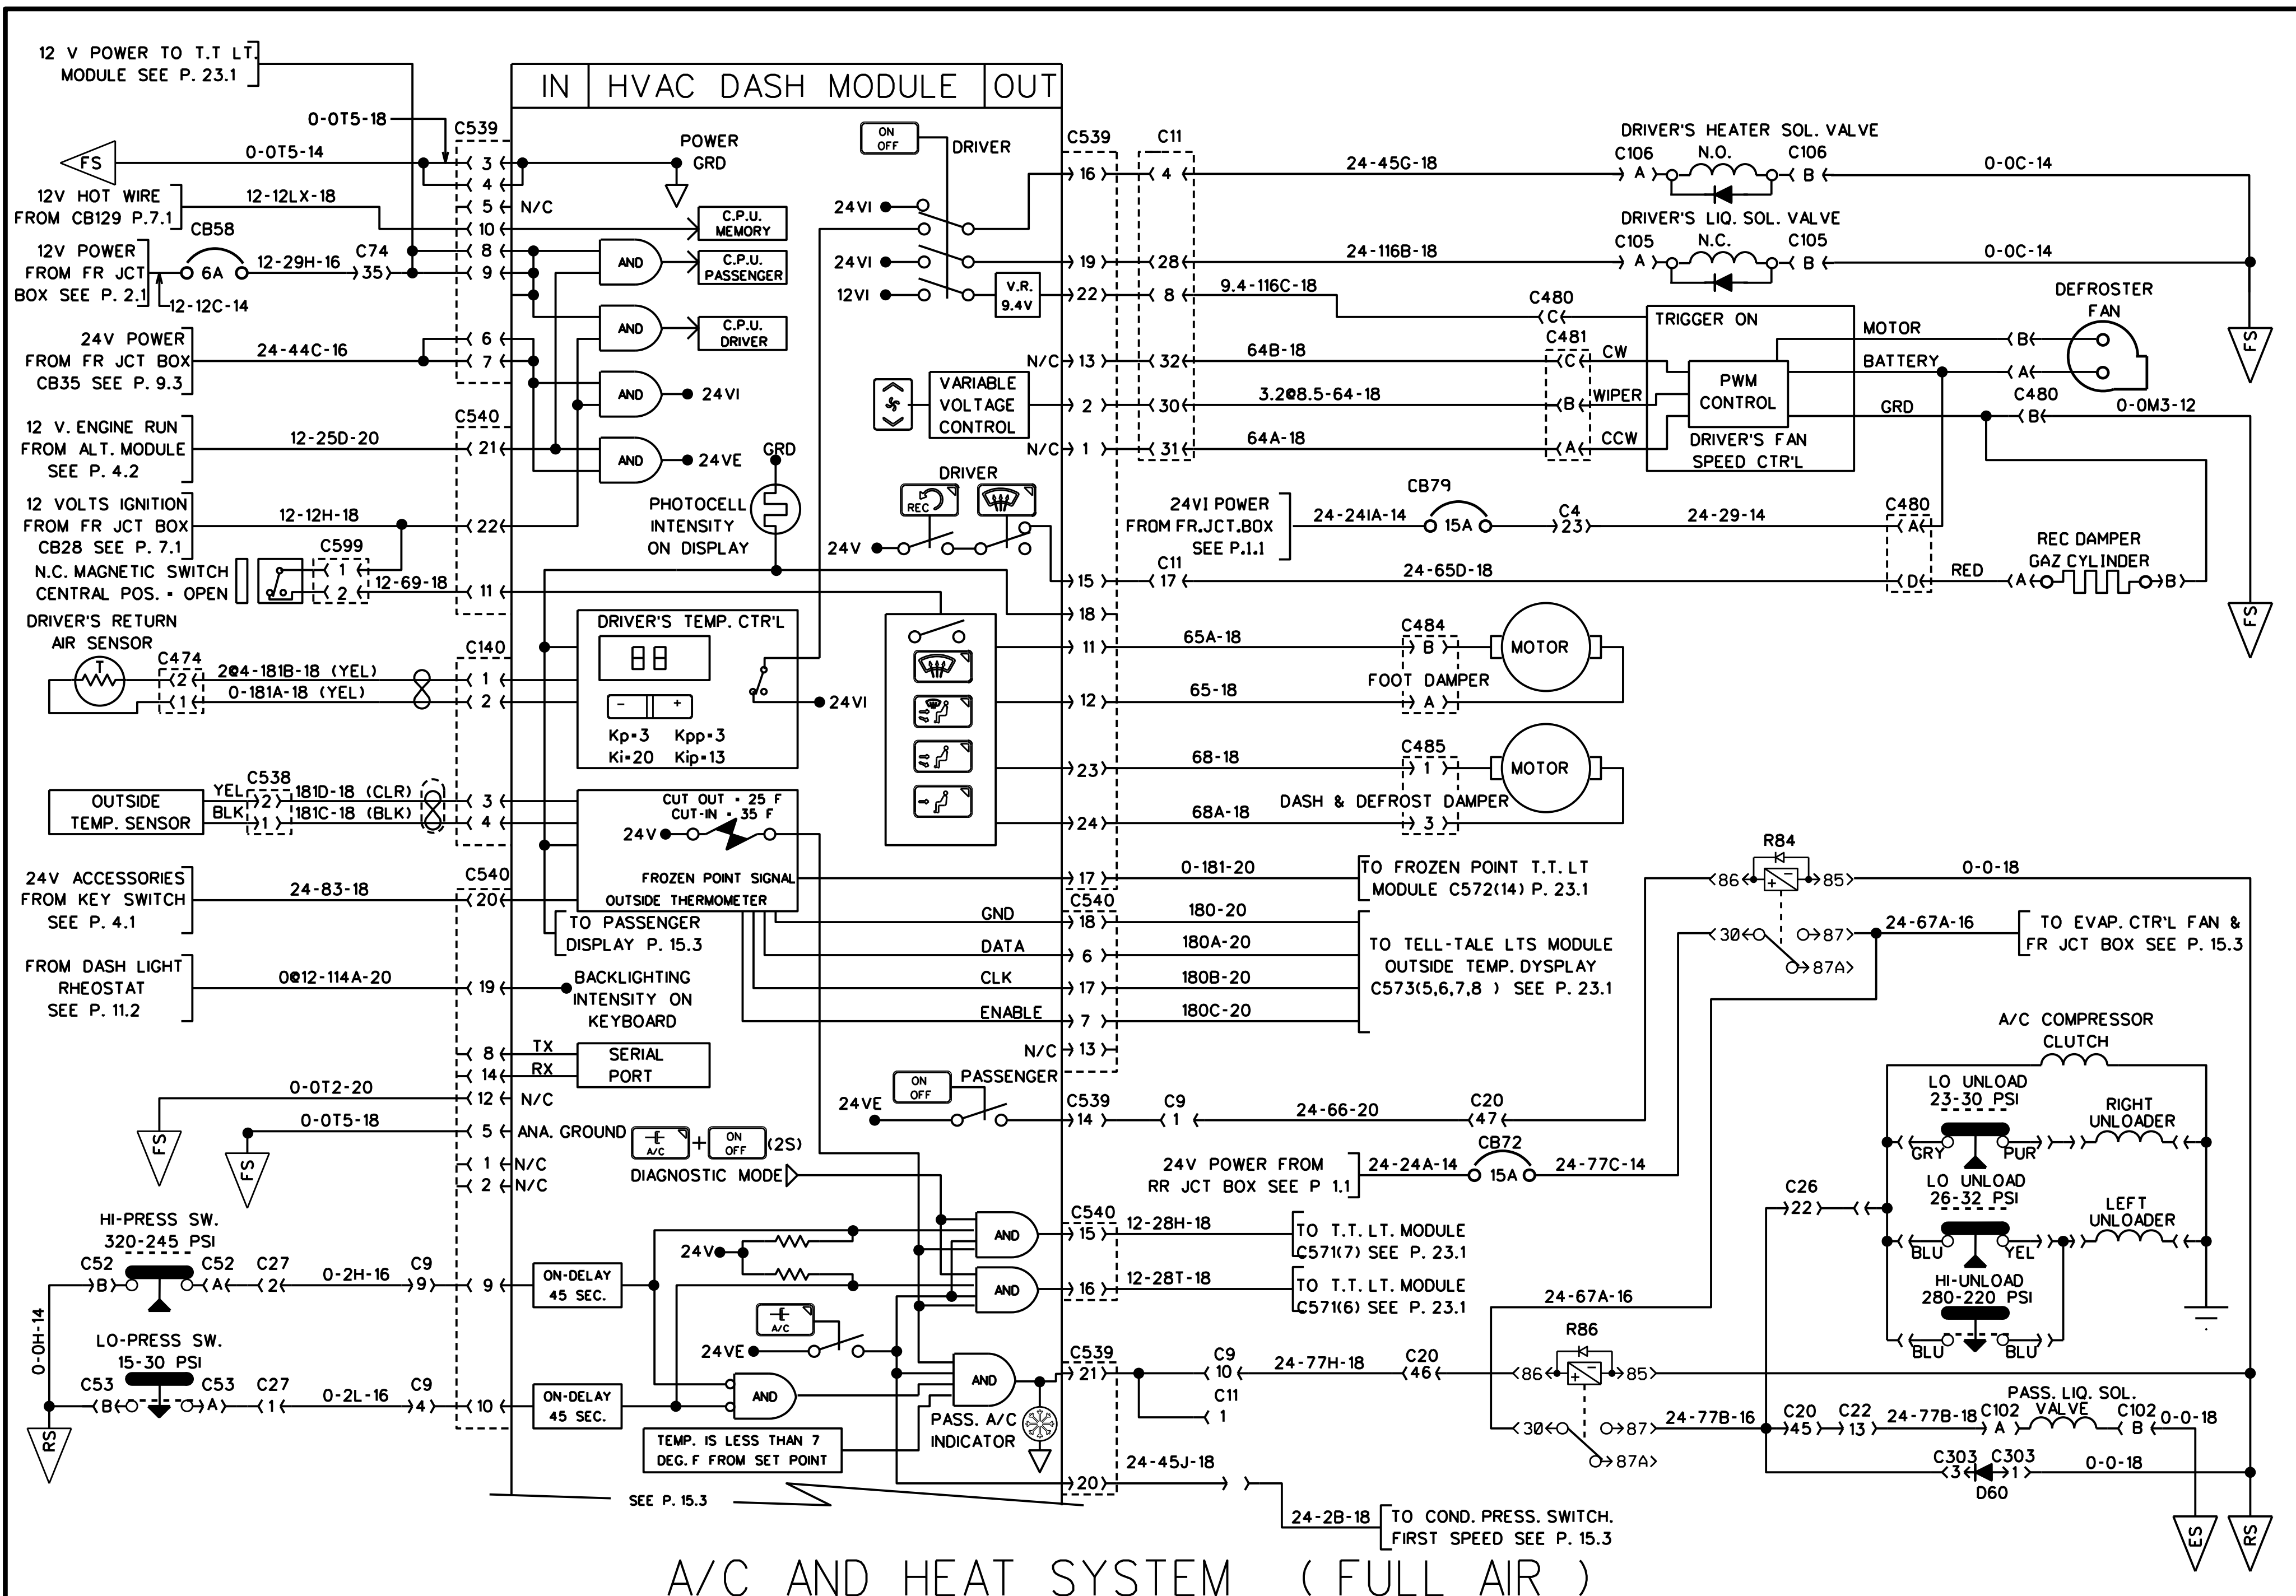

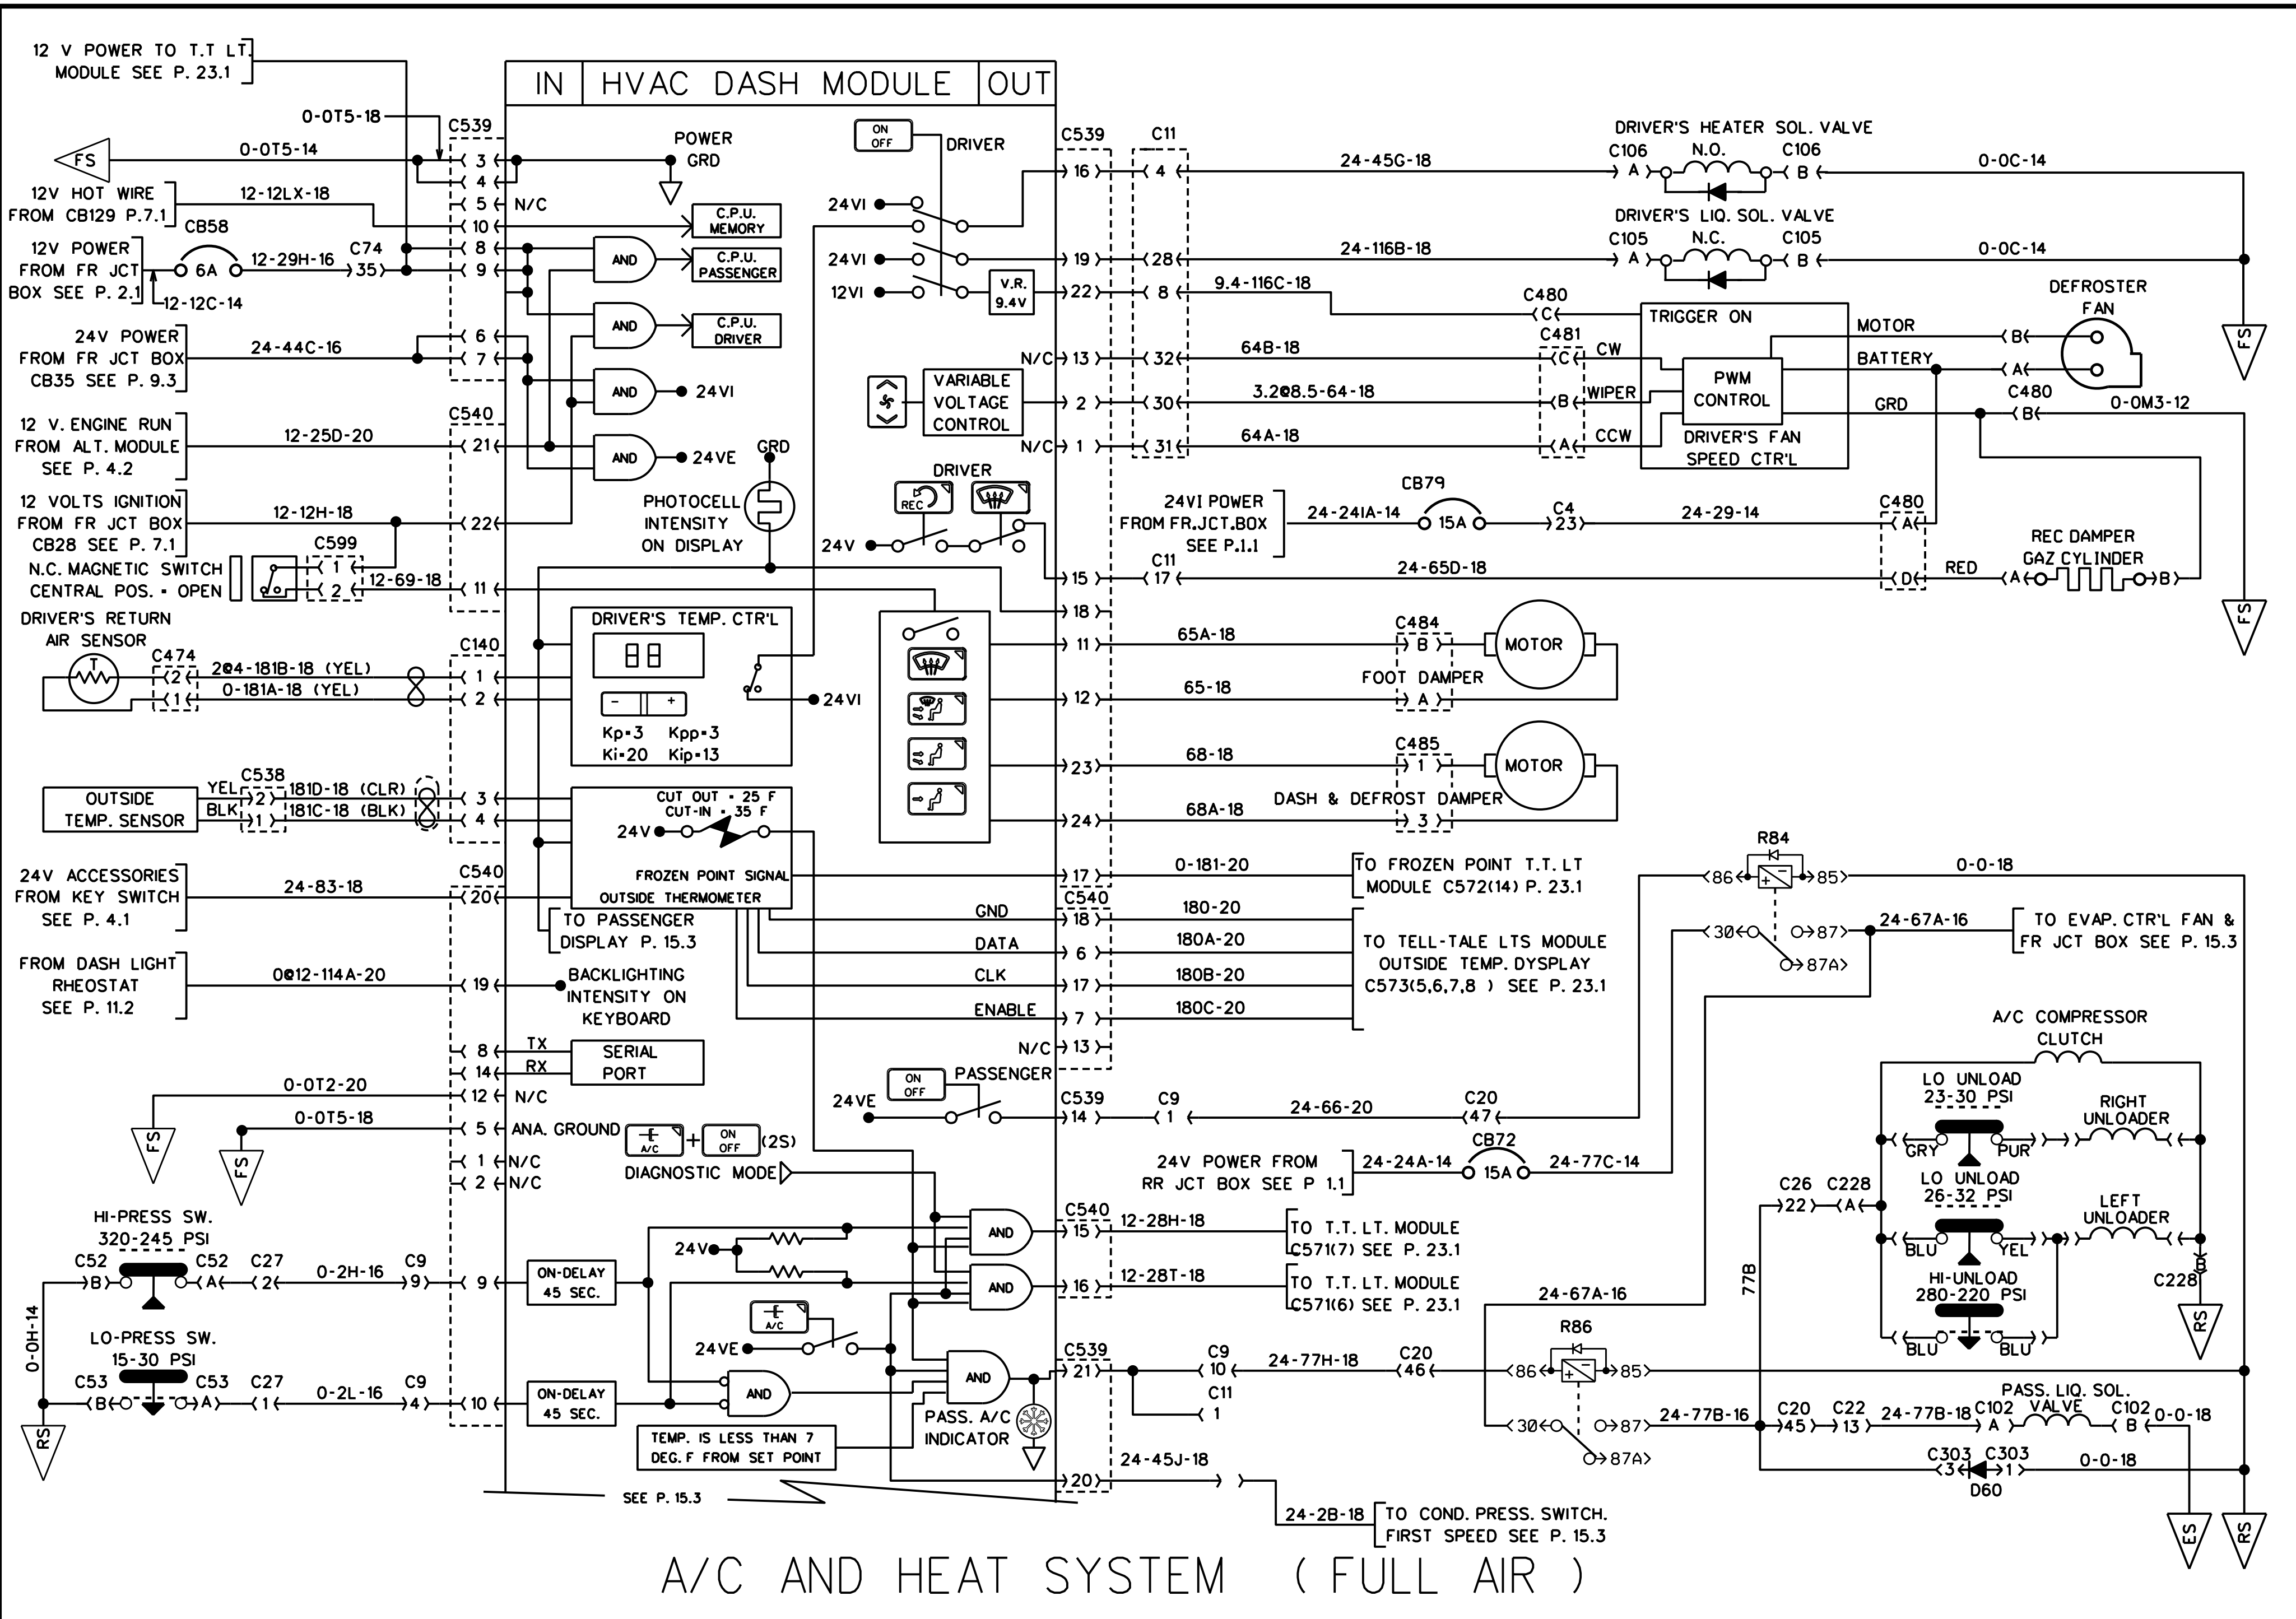






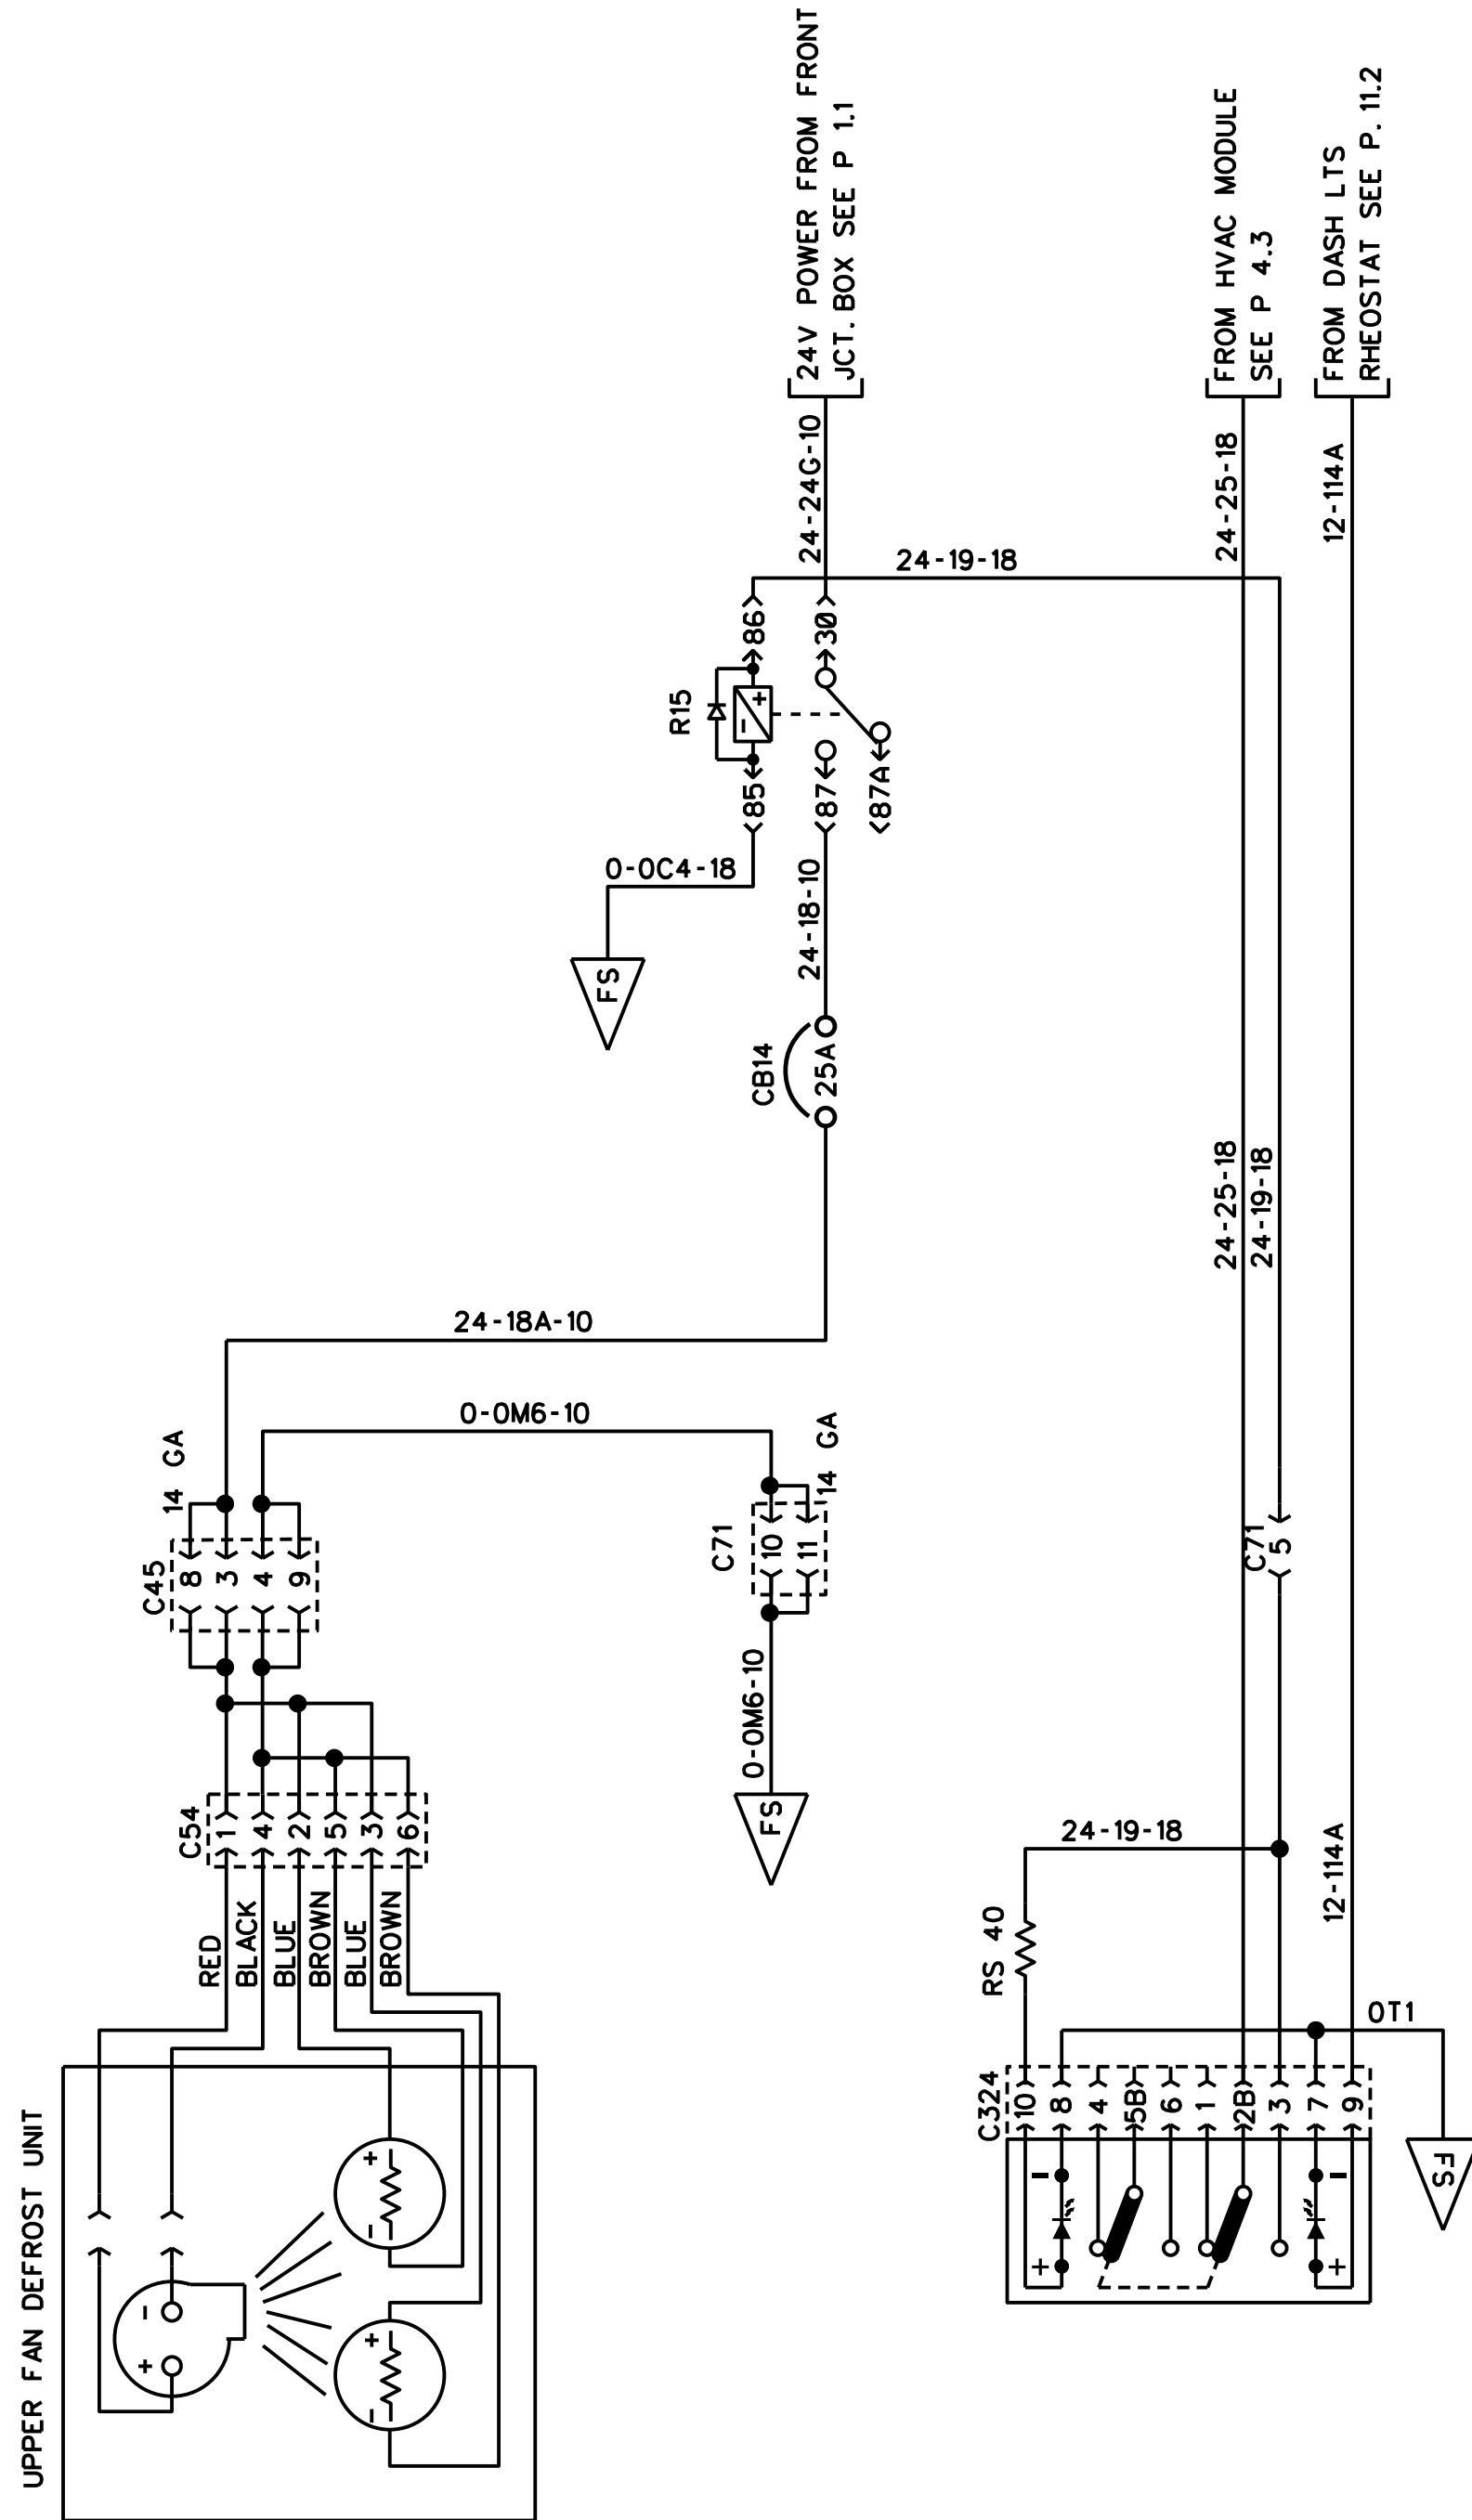



UPPER WINDSHIELD FAN DEFROST

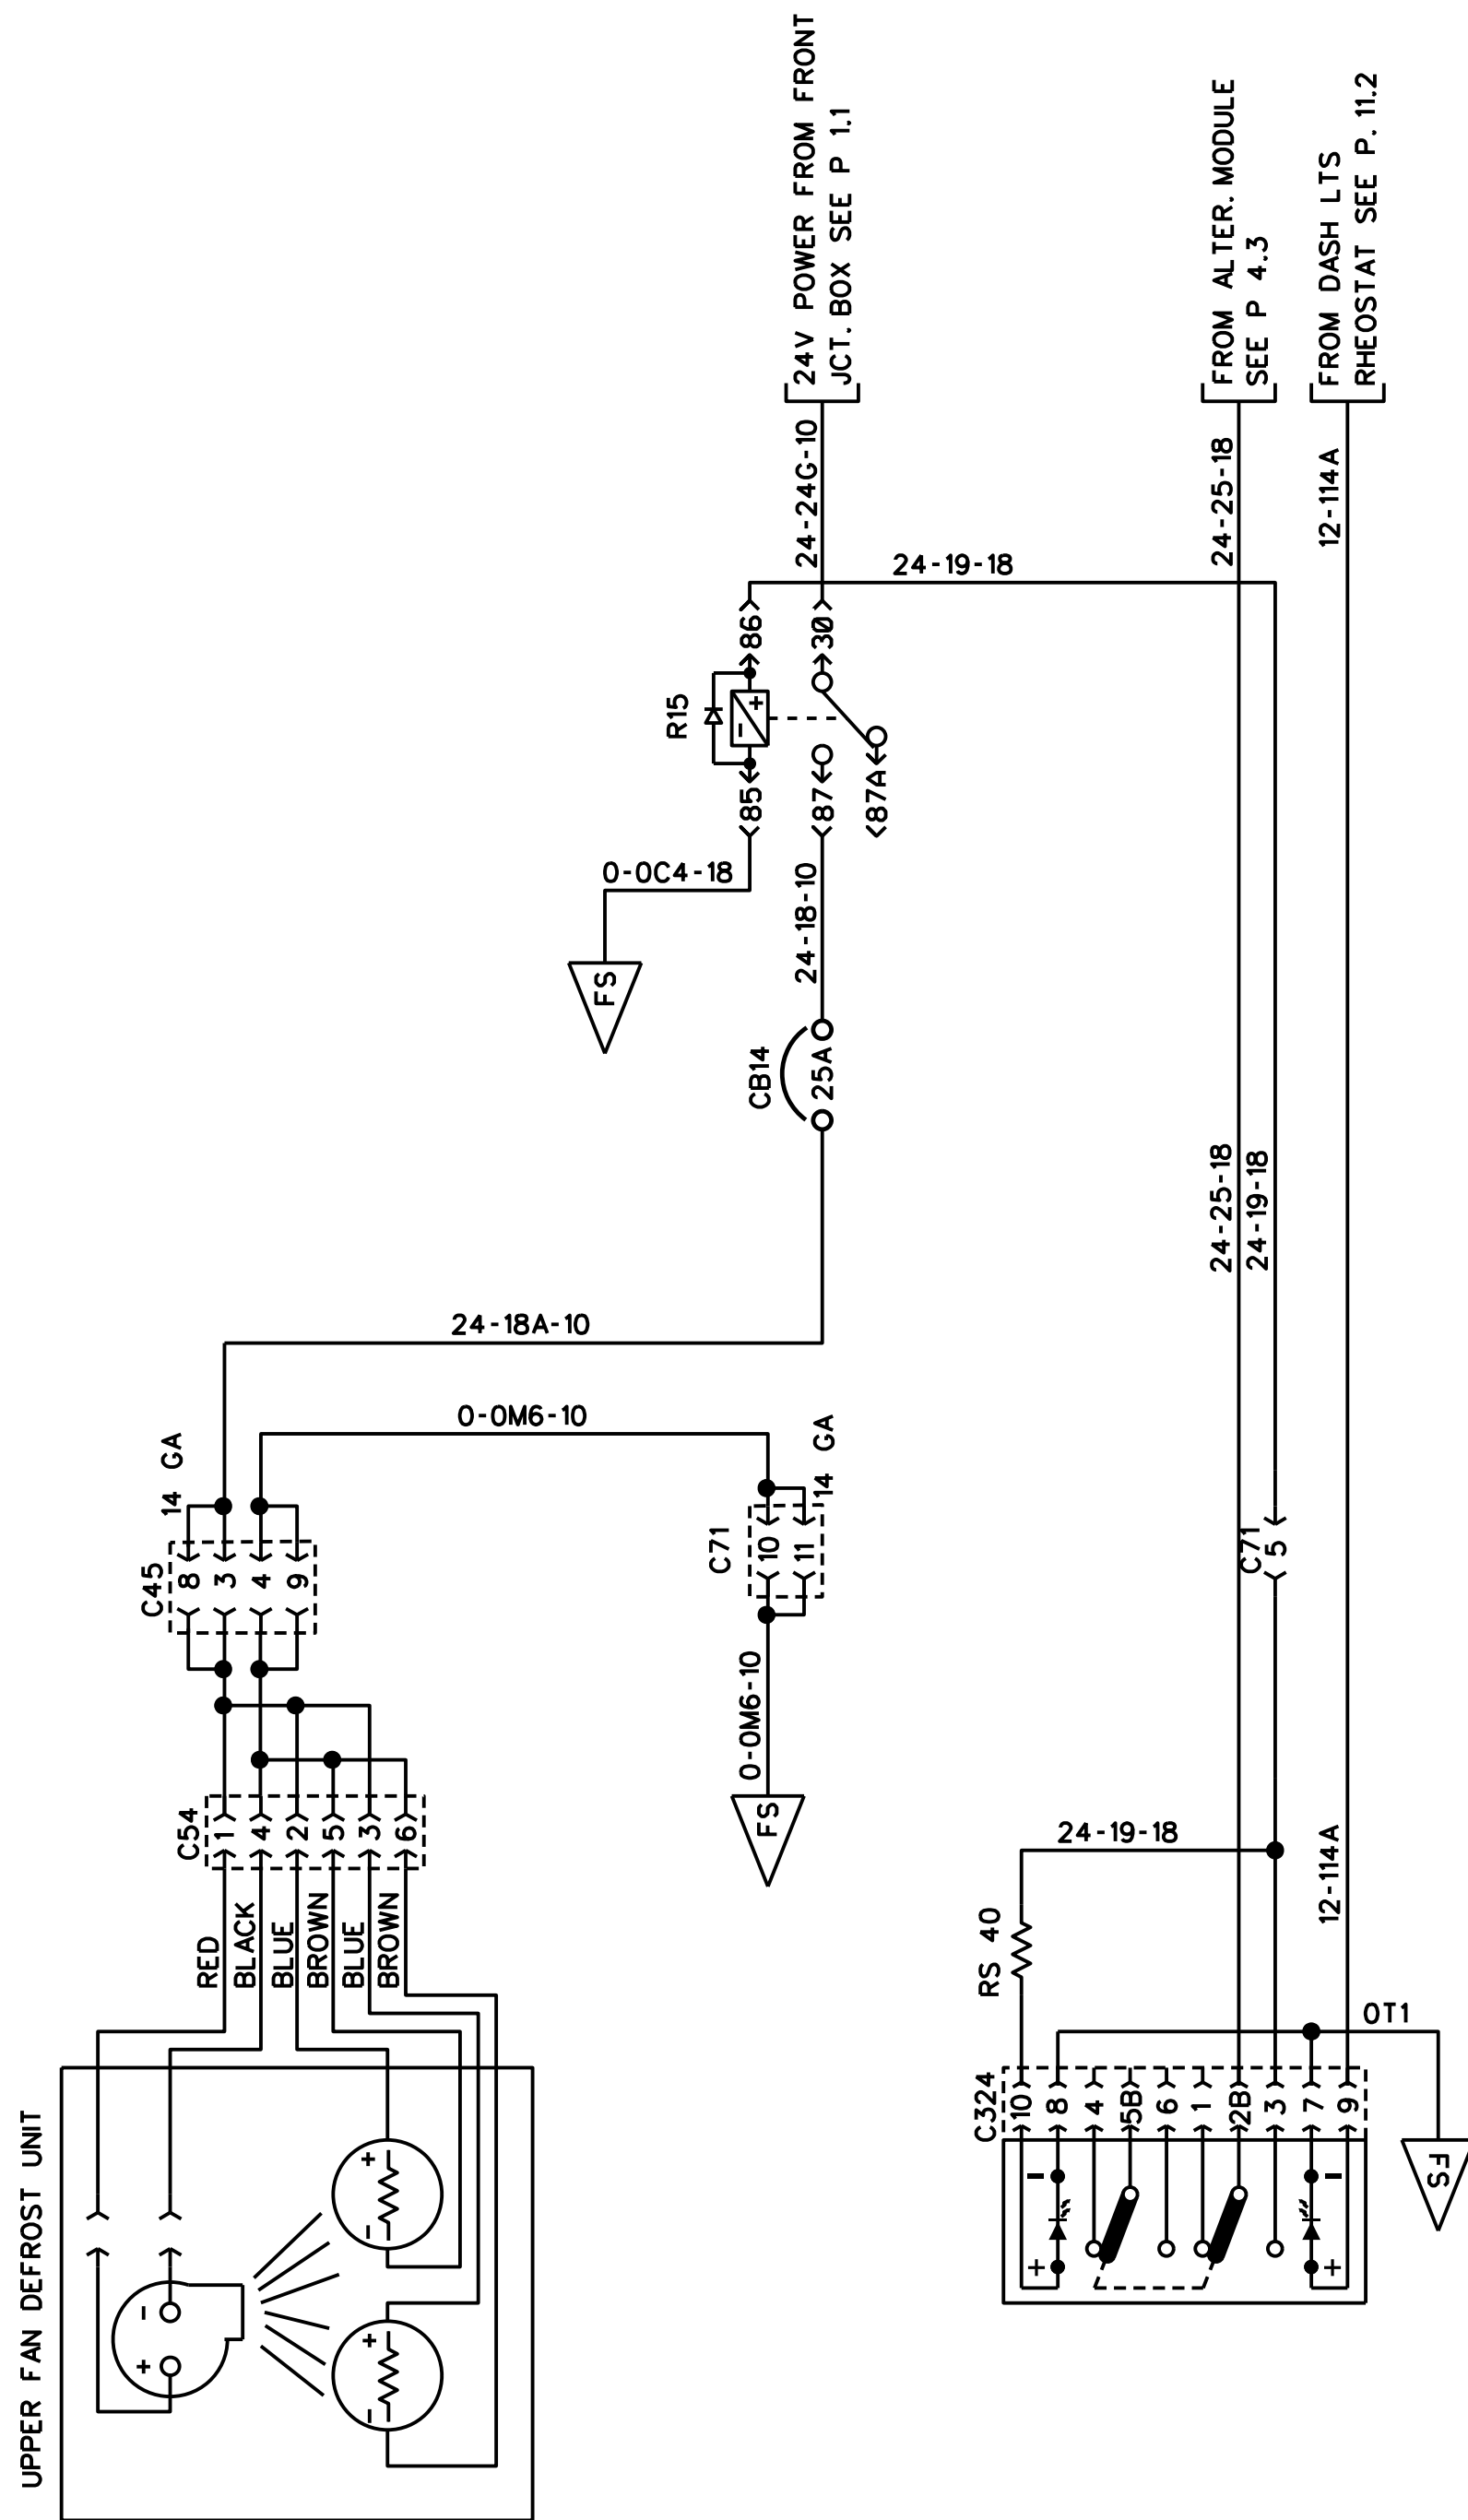

UPPER WINDSHIELD FAN DEFROST


ADJUST FLAT & CONVEX LH MIRROR SWITCH

ADJUST FLAT & CONVEX RH MIRROR SWITCH

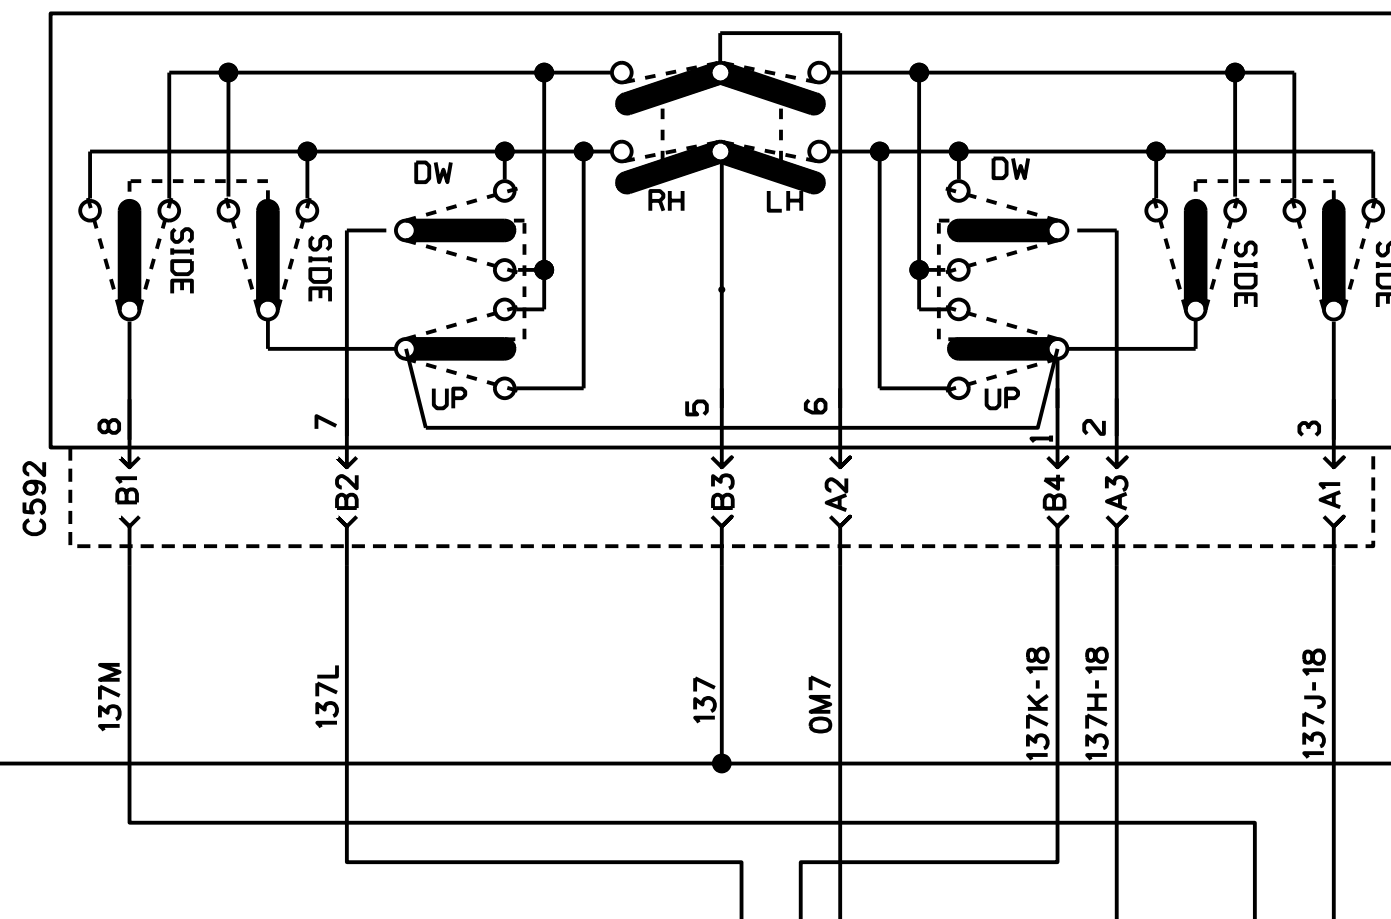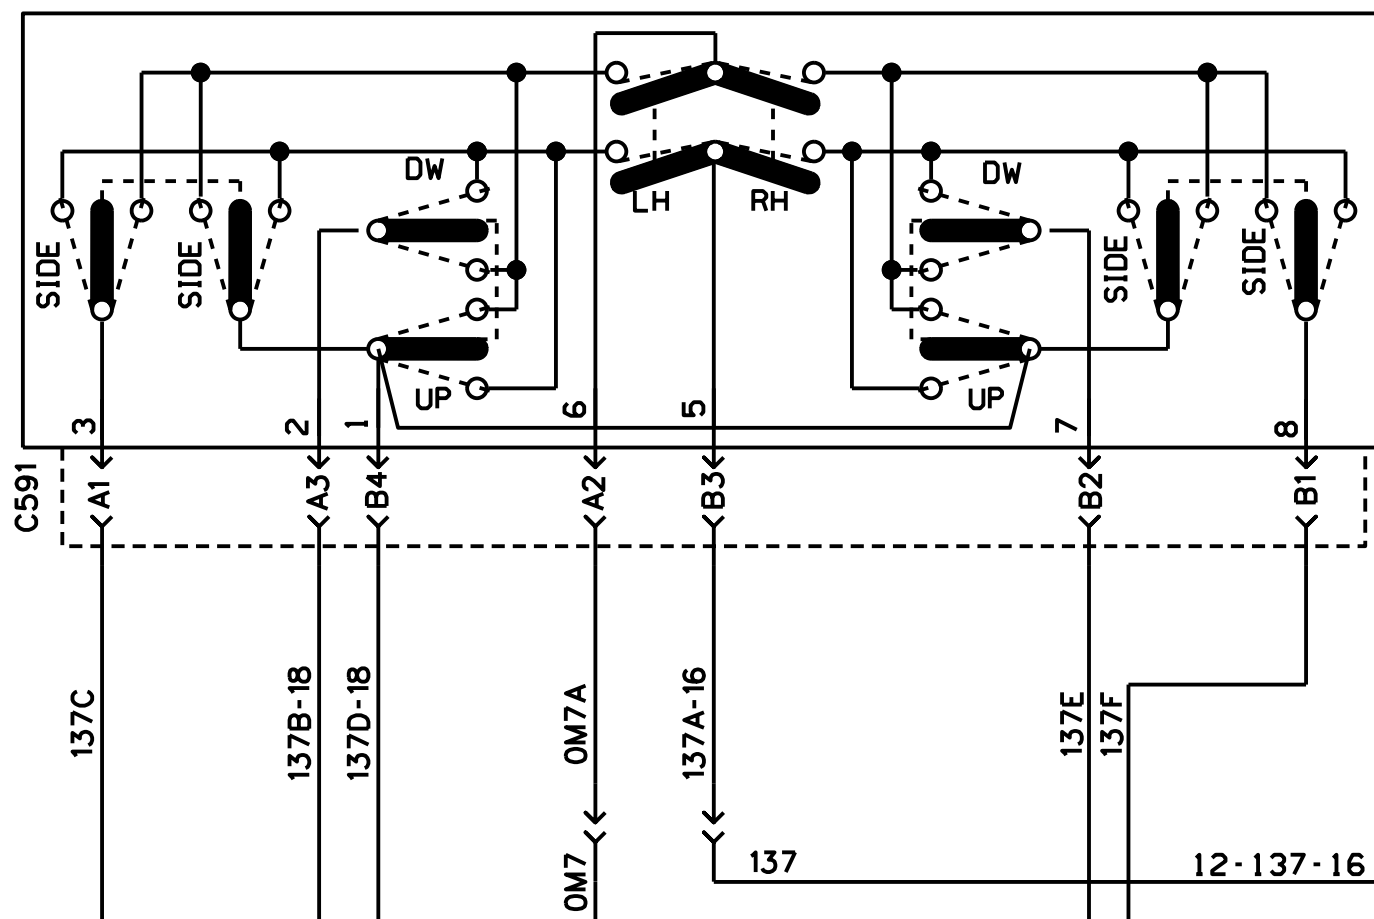



CONVEX MIRROR - L.H. - FLAT & HEATED MIRROR

FLAT MIRROR - R.H. - CONVEX MIRROR

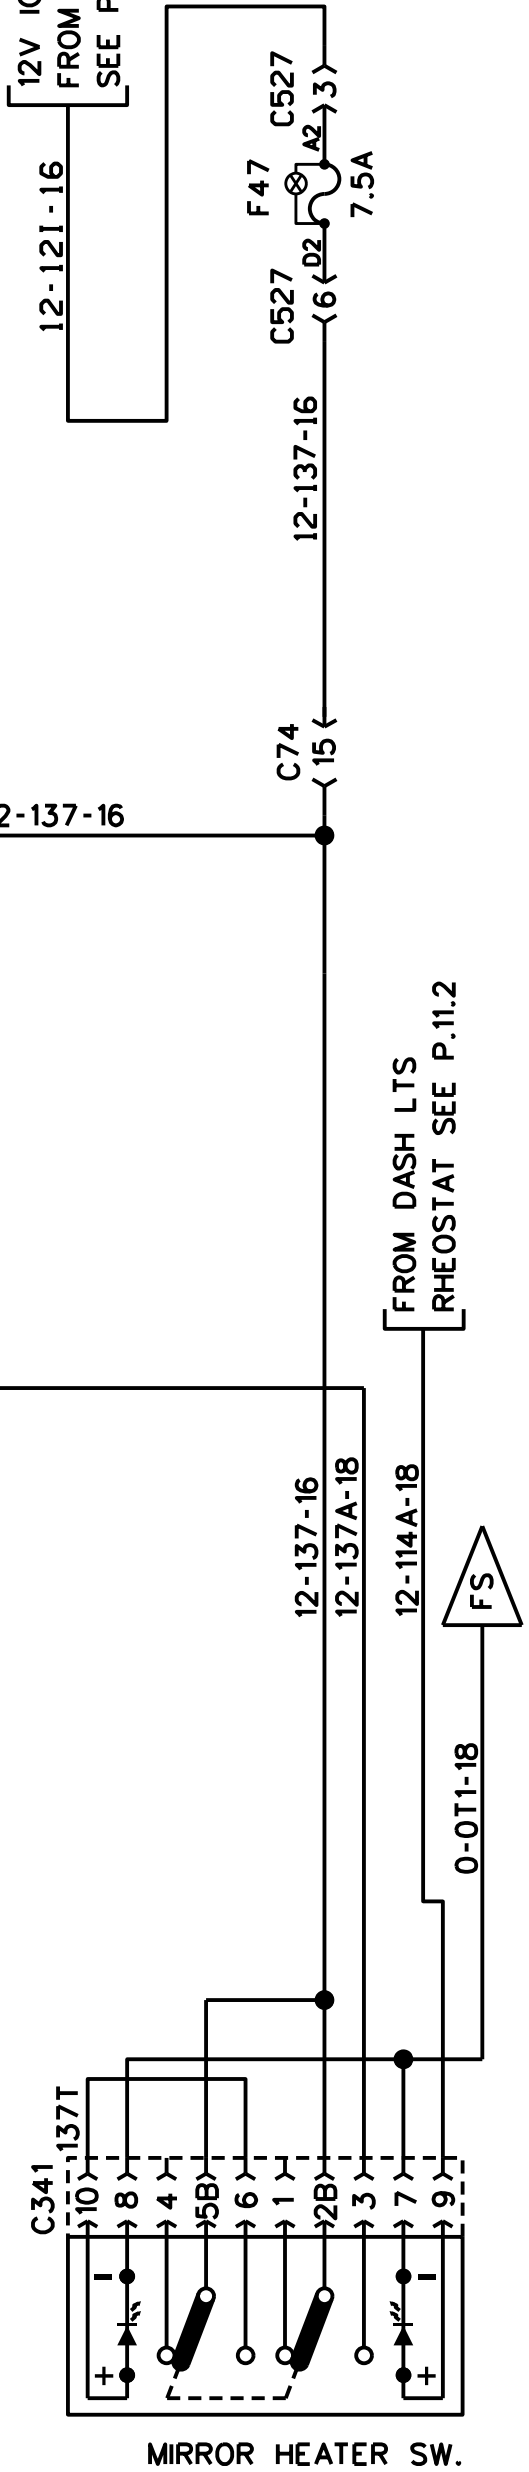

MIRROR HEATER SW.


REAR VIEW MIRROR RAMCO FLAT & CONVEX - 2 ADJUSTMENT SW. & 1 HEATED SW.

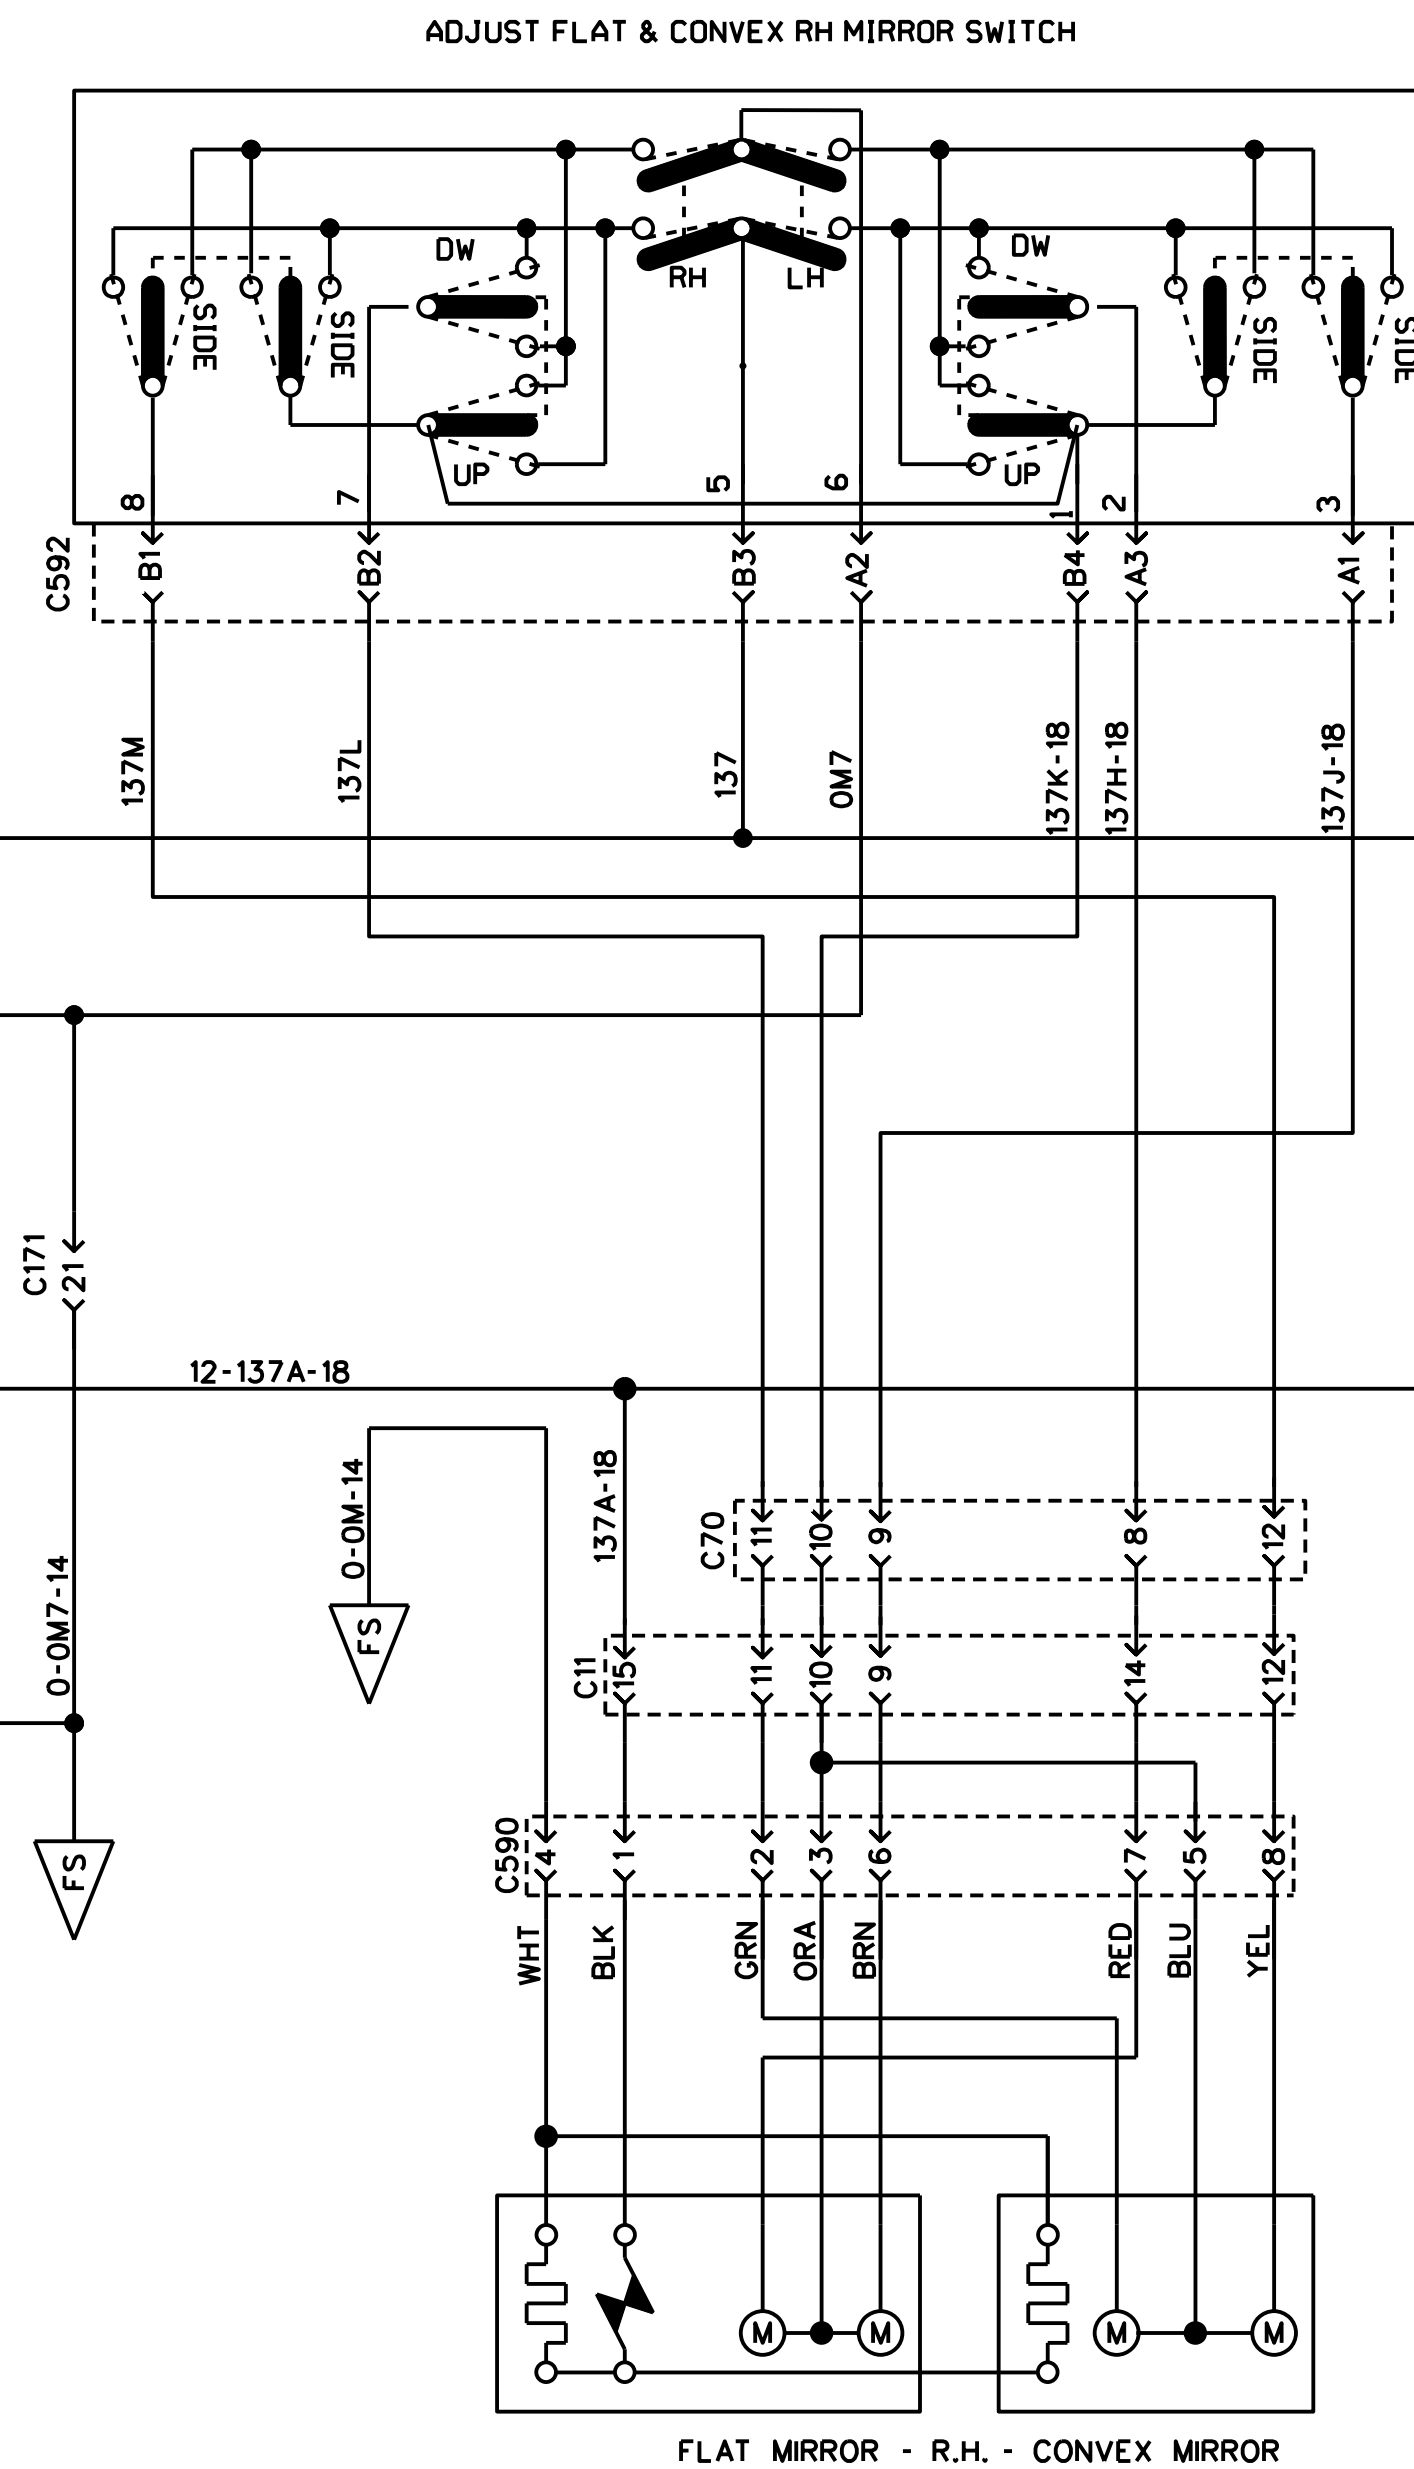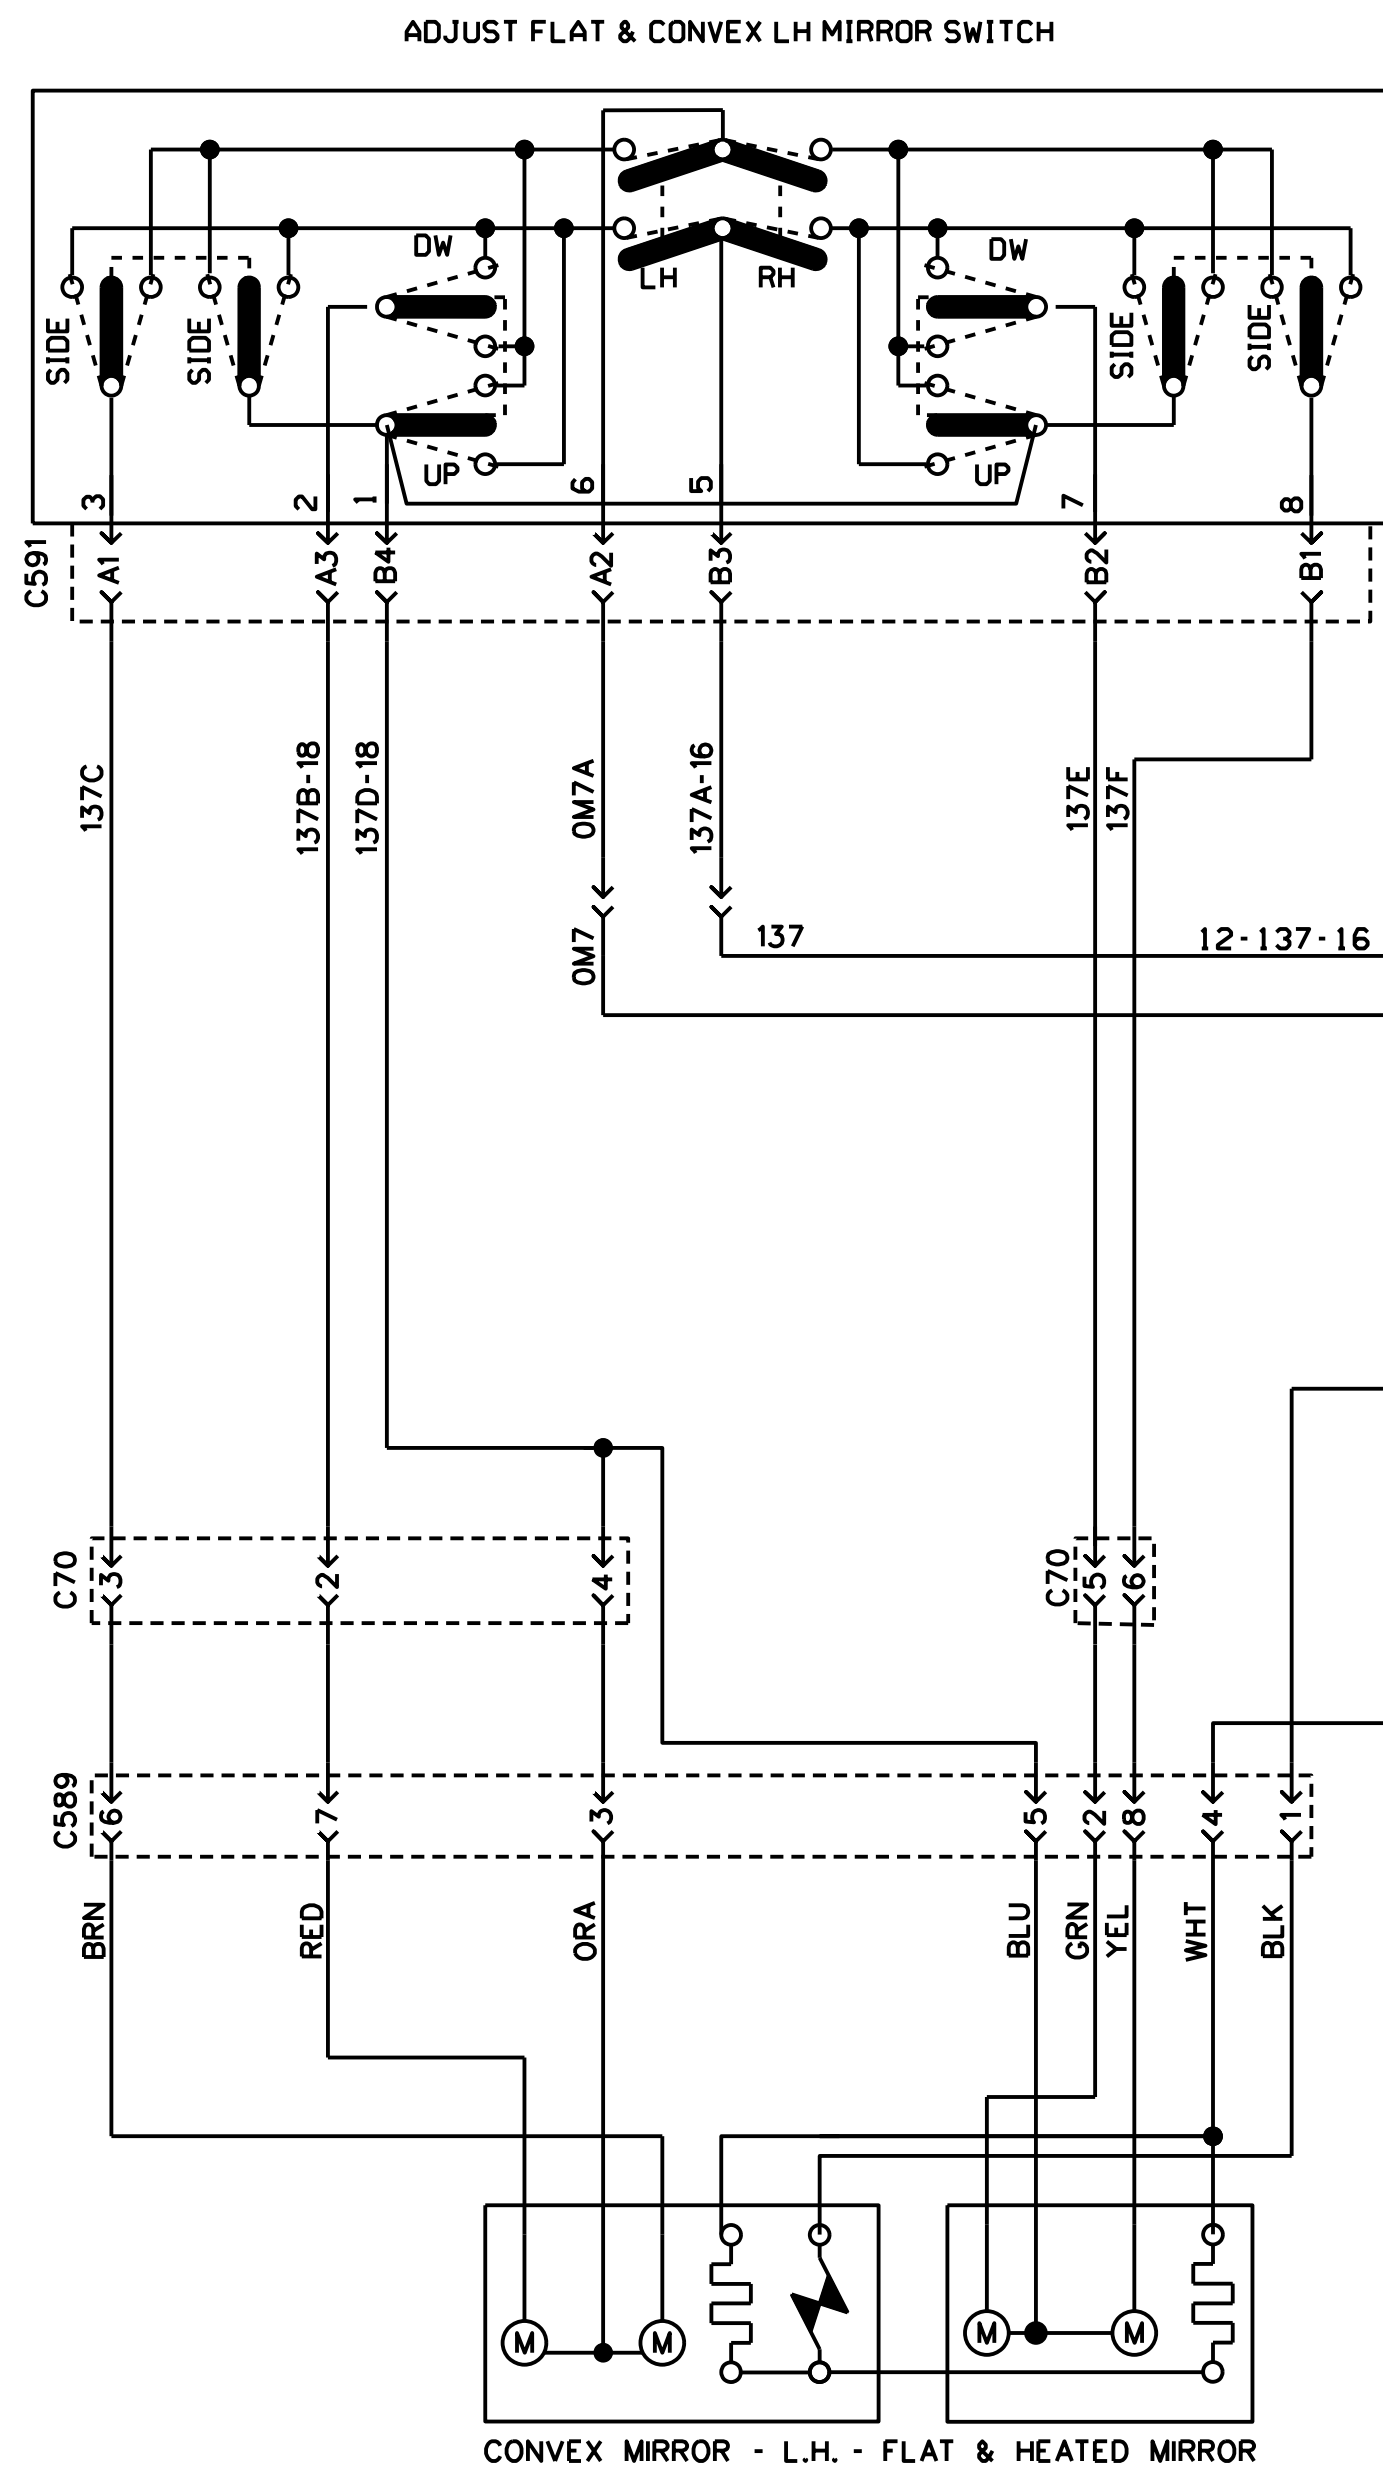


TO CRUISE CTRL. SW.
SEE PAGE 5.1

TO FAST IDLE SW.
SEE PAGE 5.1

12V IGNITION
FROM FR. JCT. BOX
SEE P.2.1

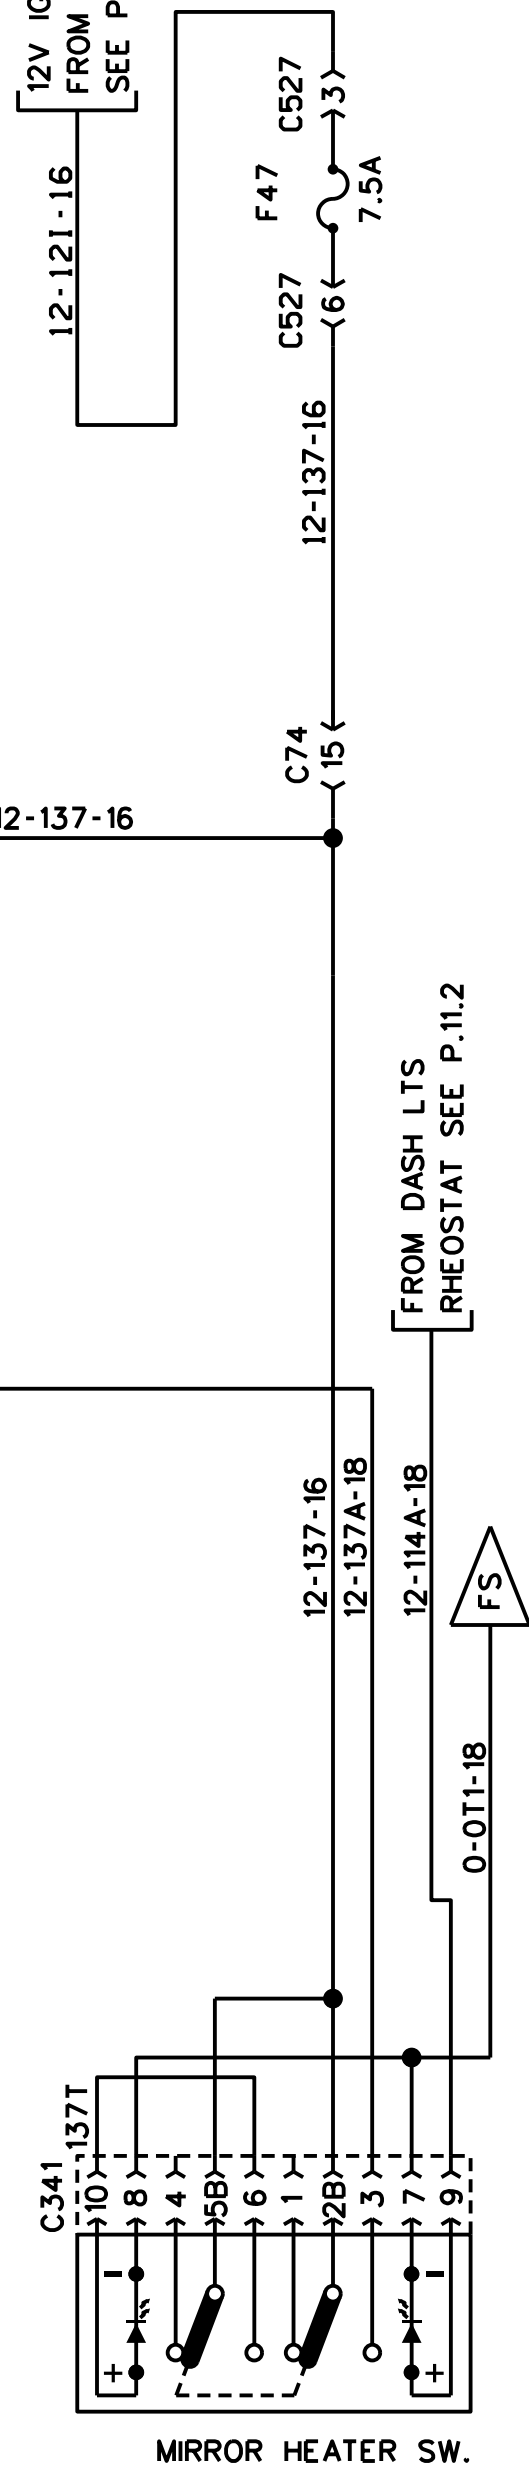

REAR VIEW MIRROR RAMCO FLAT & CONVEX - 2 ADJUSTMENT SW. & 1 HEATED SW.

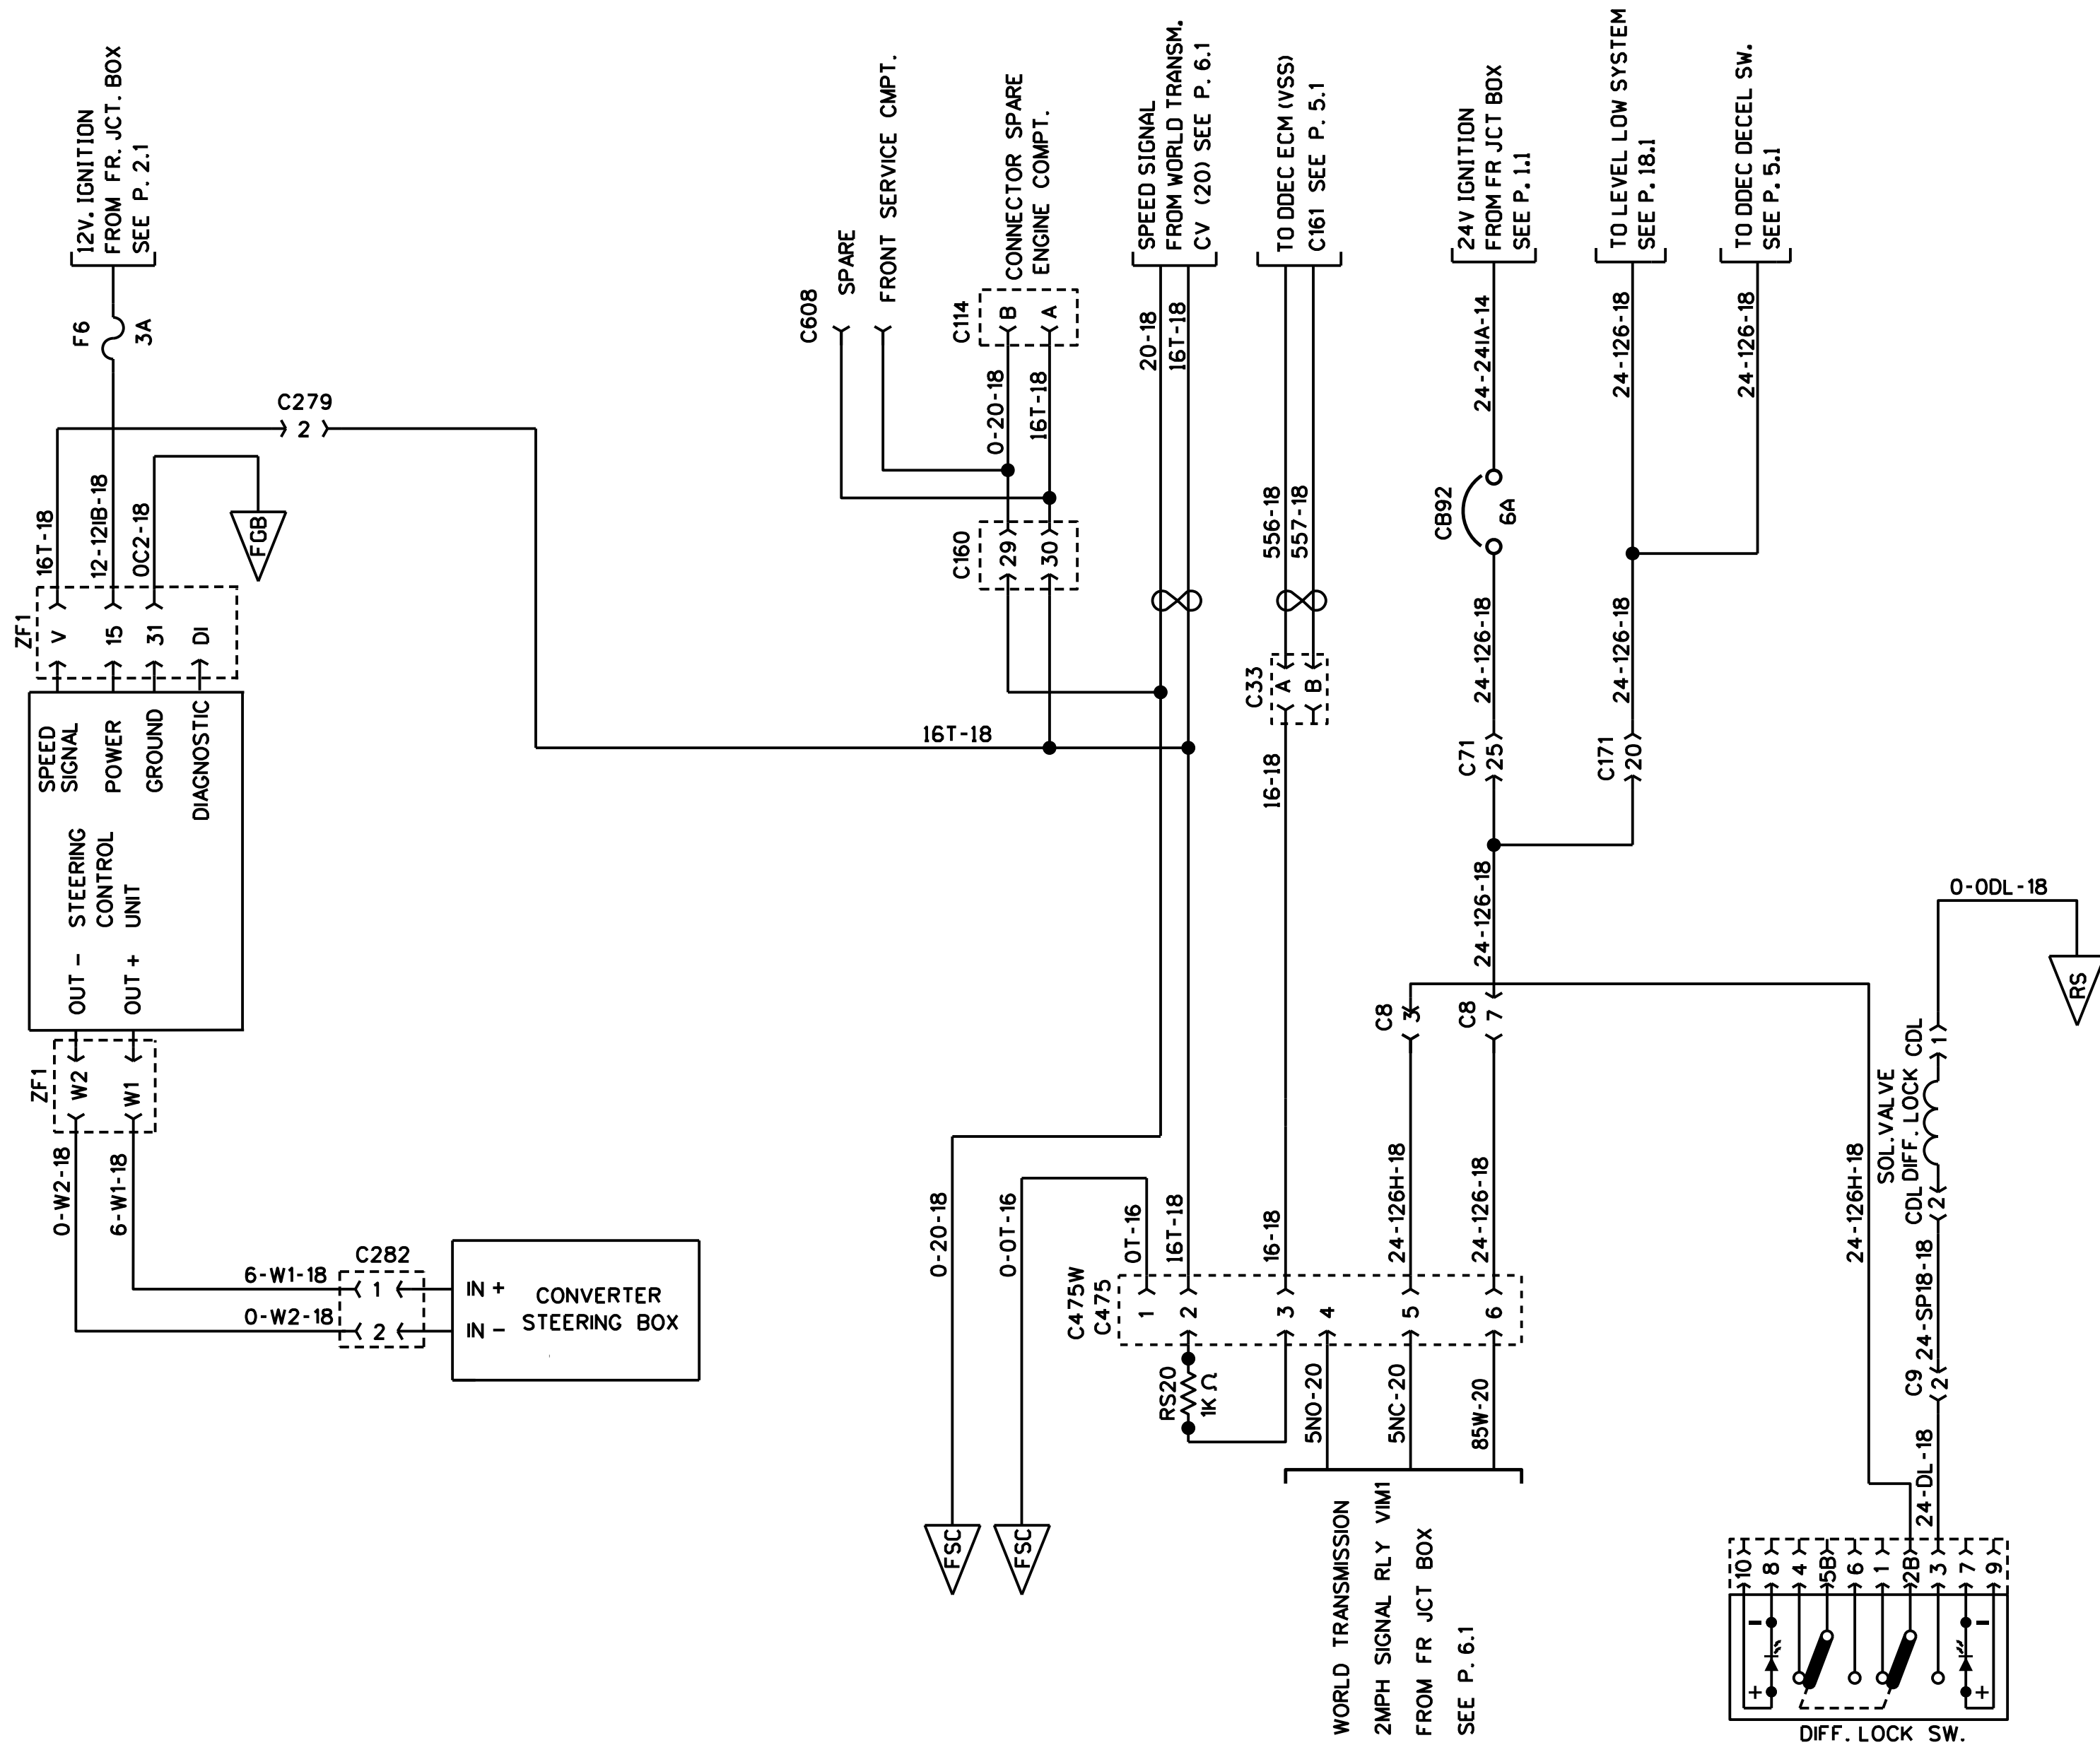

STEERING CONTROL

TRANSMISSION SPEED SIGNAL

DIFFERENTIAL LOCK

PREVOST

WIRING DIAGRAM

NO:

0060994


PAGE: **17.1SP1**

REVISION
00

STEERING CONTROL

TRANSMISSION SPEED SIGNAL


DIFFERENTIEL LOCK

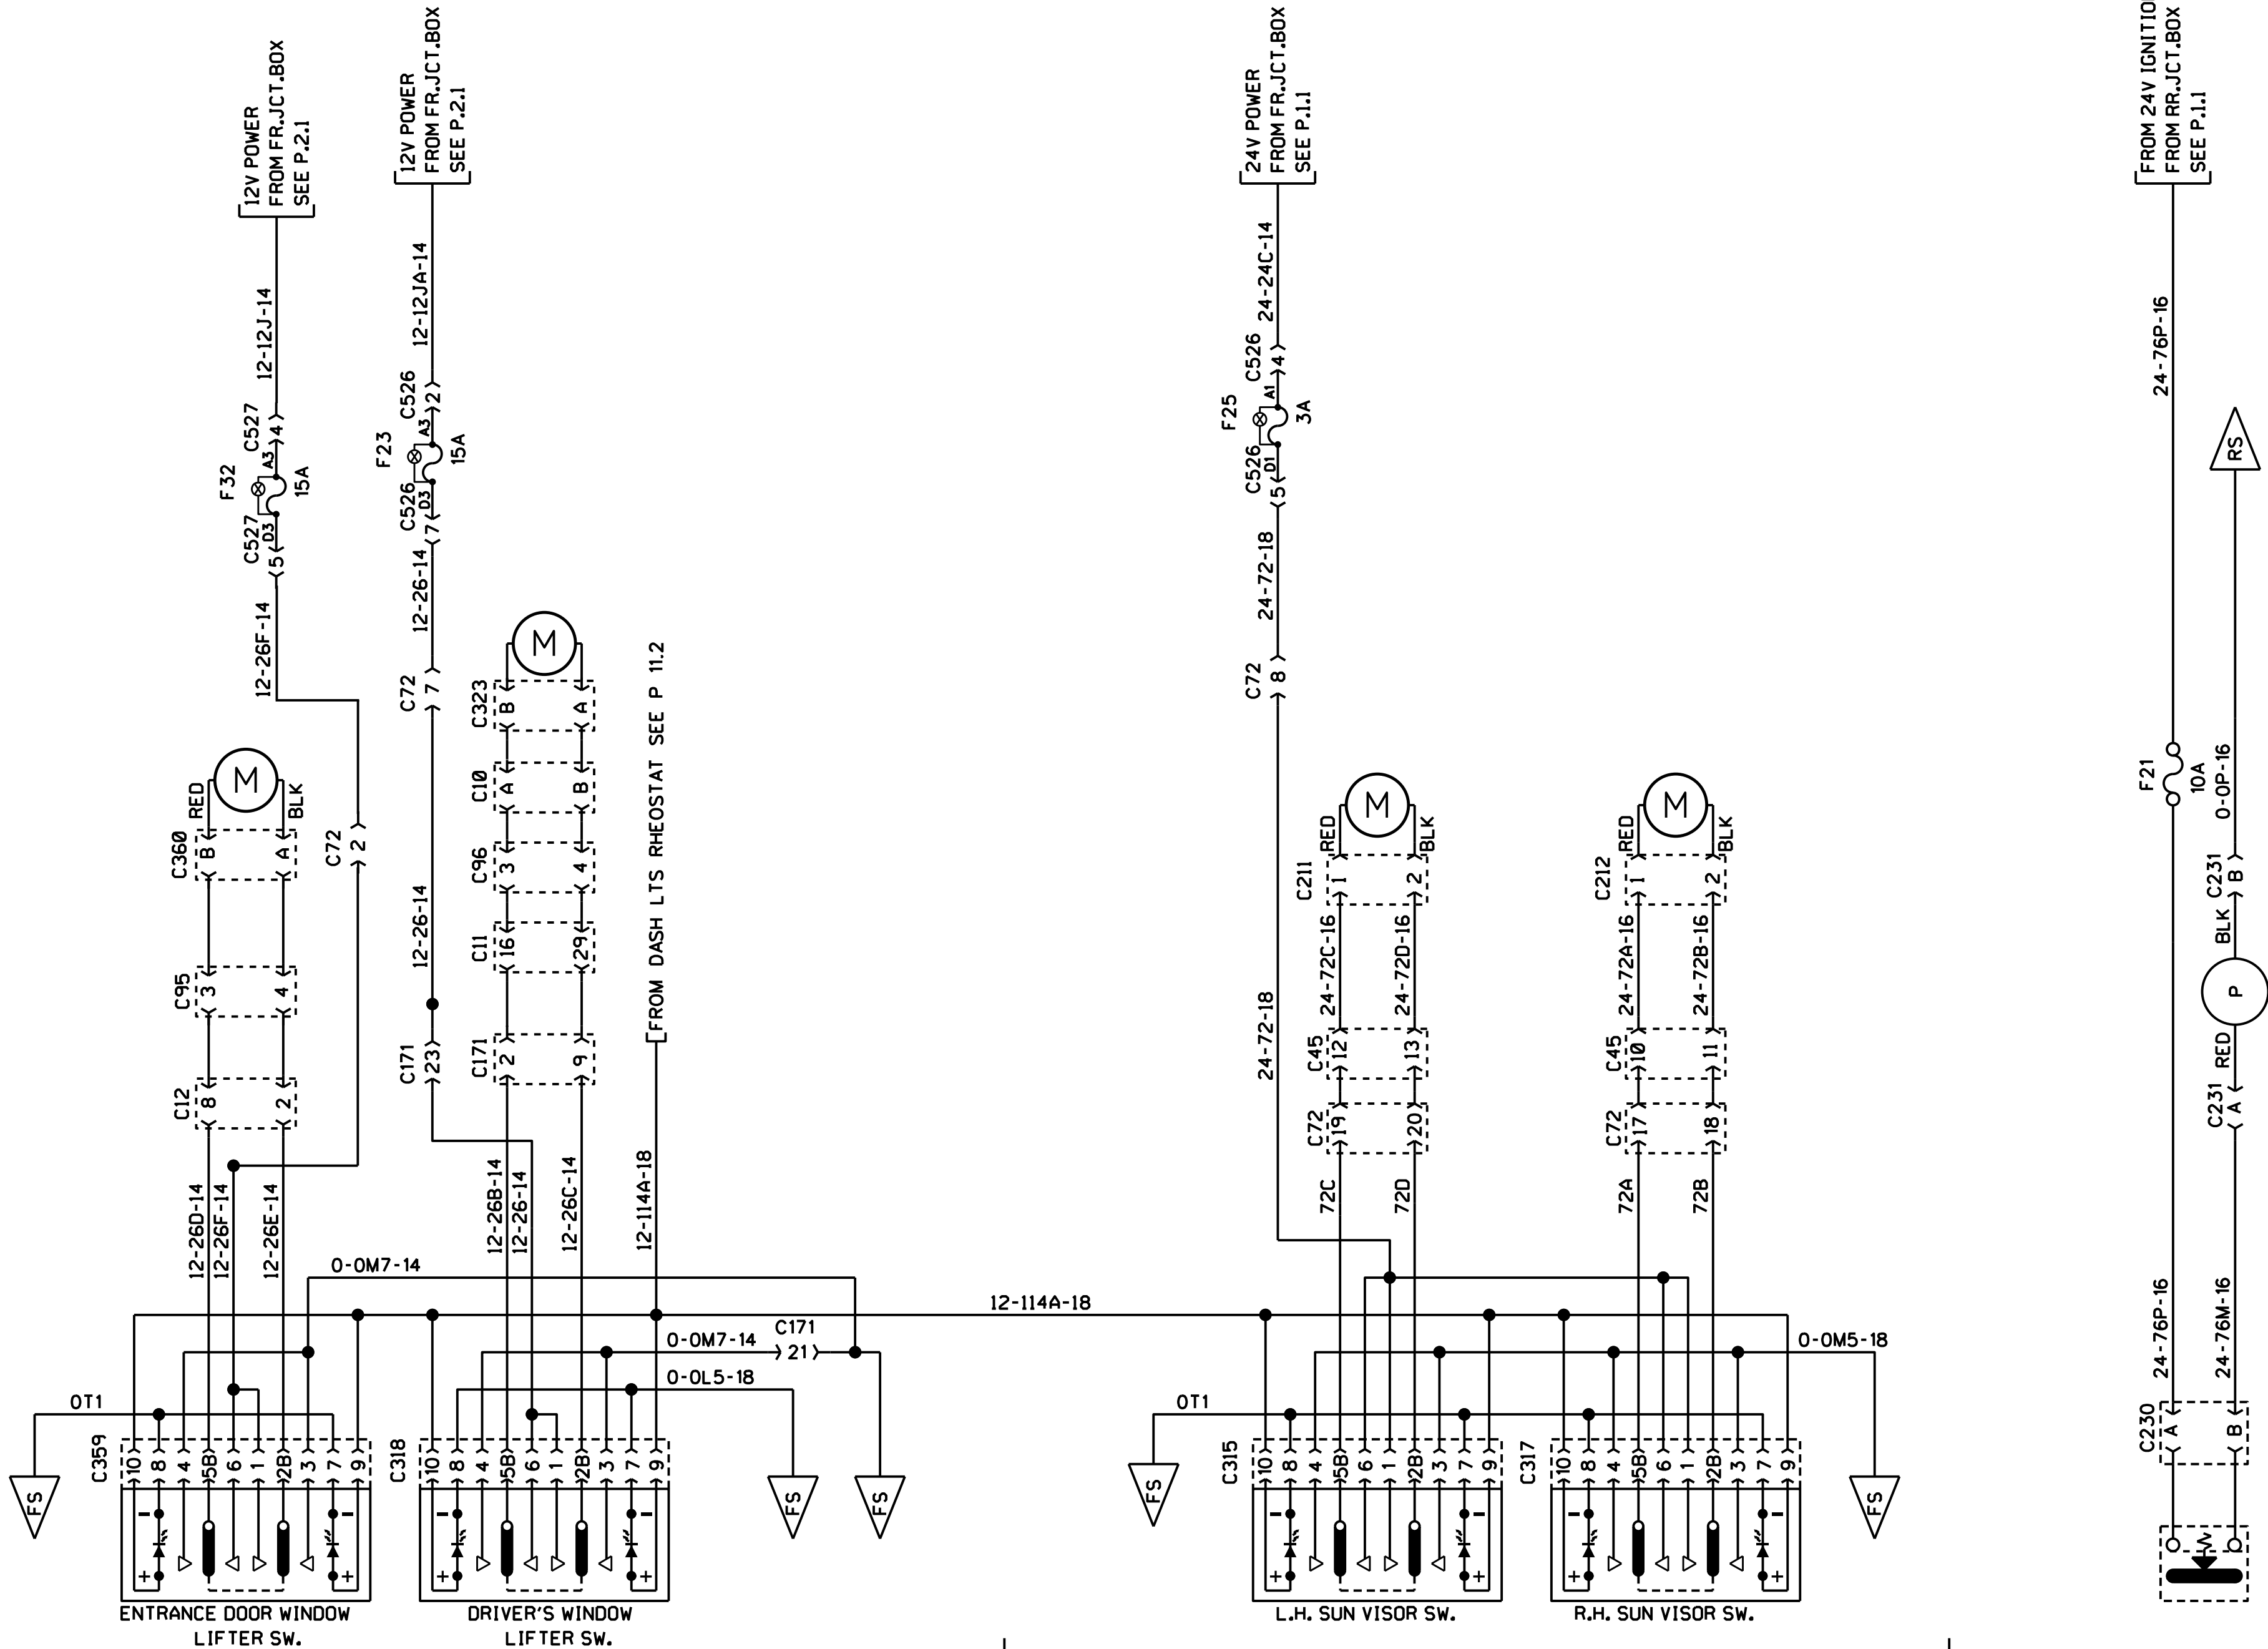

ENTRANCE DOOR AND DRIVER'S WINDOW LIFTER

SUN VISOR

FUEL PRIME PUMP

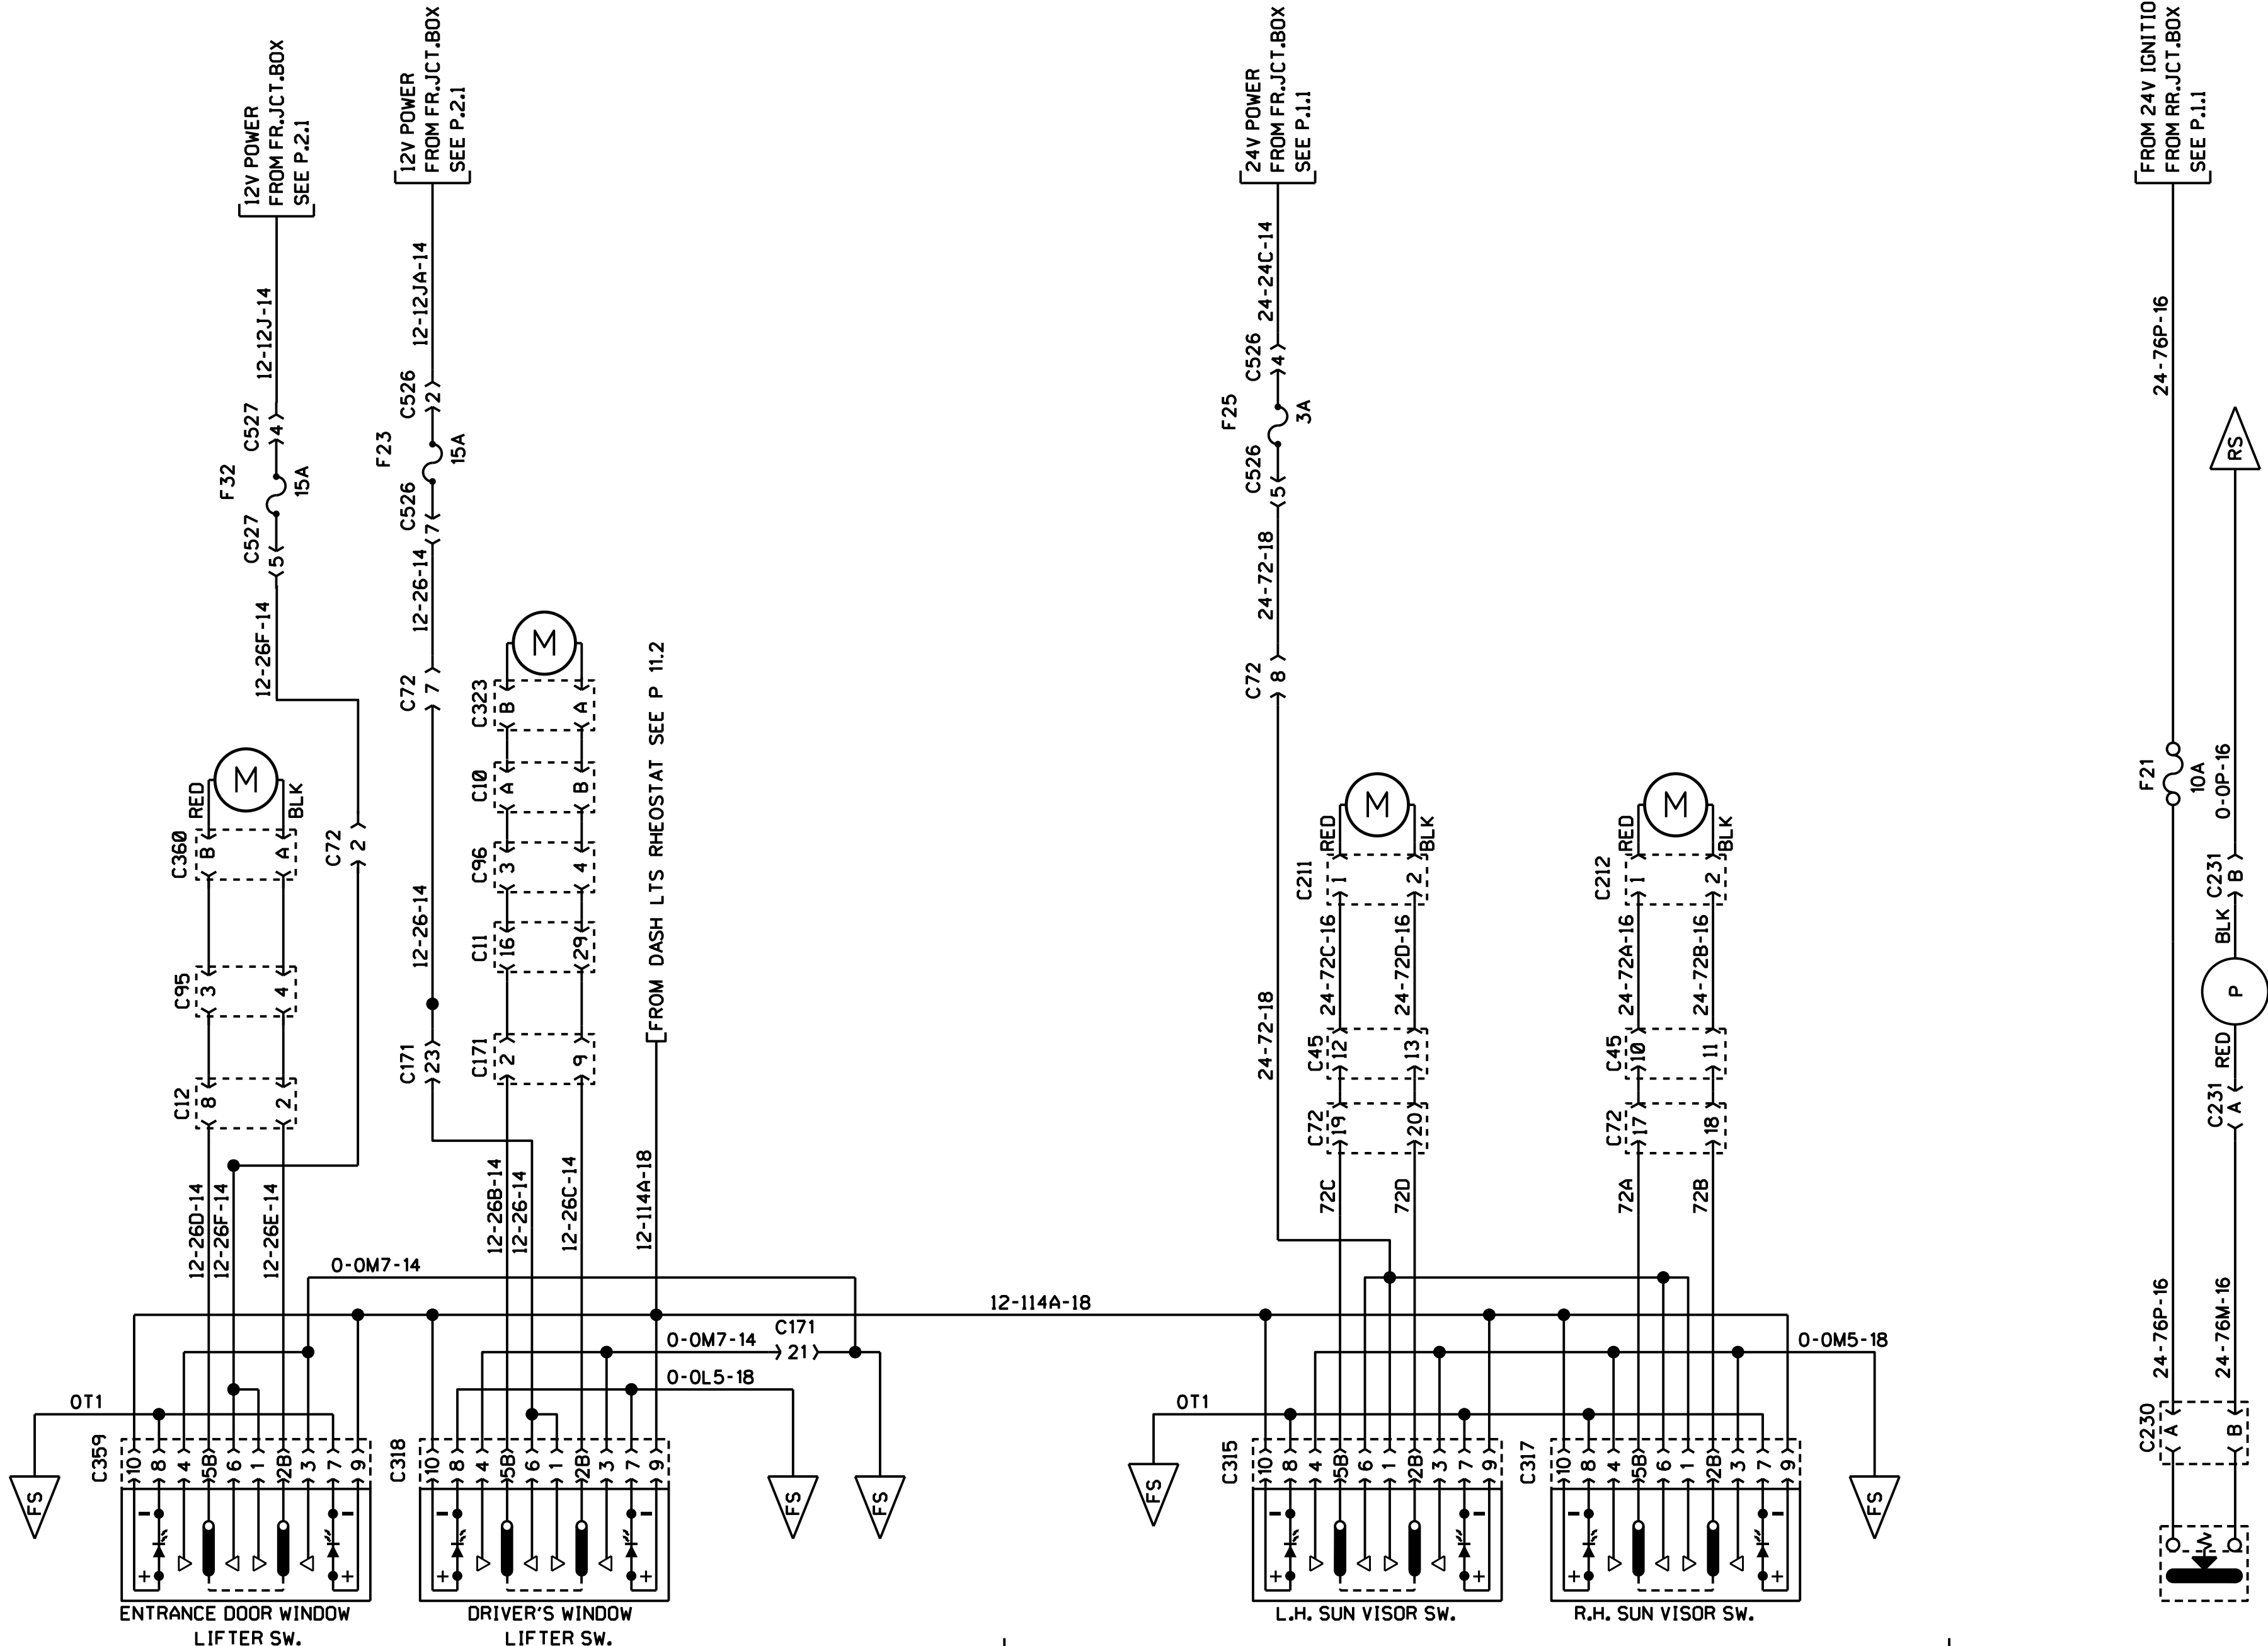

ENTRANCE DOOR AND DRIVER'S WINDOW LIFTER


SUN VISOR

FUEL PRIME PUMP







ENGINE BLOCK HEATER


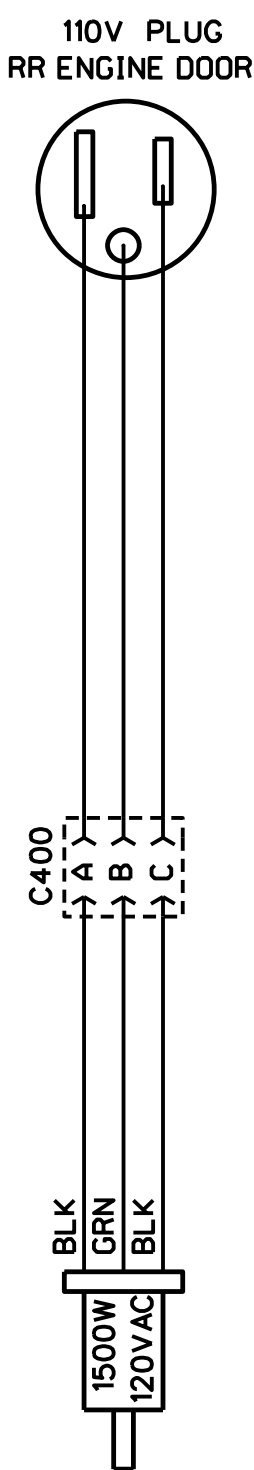



ENTRANCE DOOR AIR LOCK


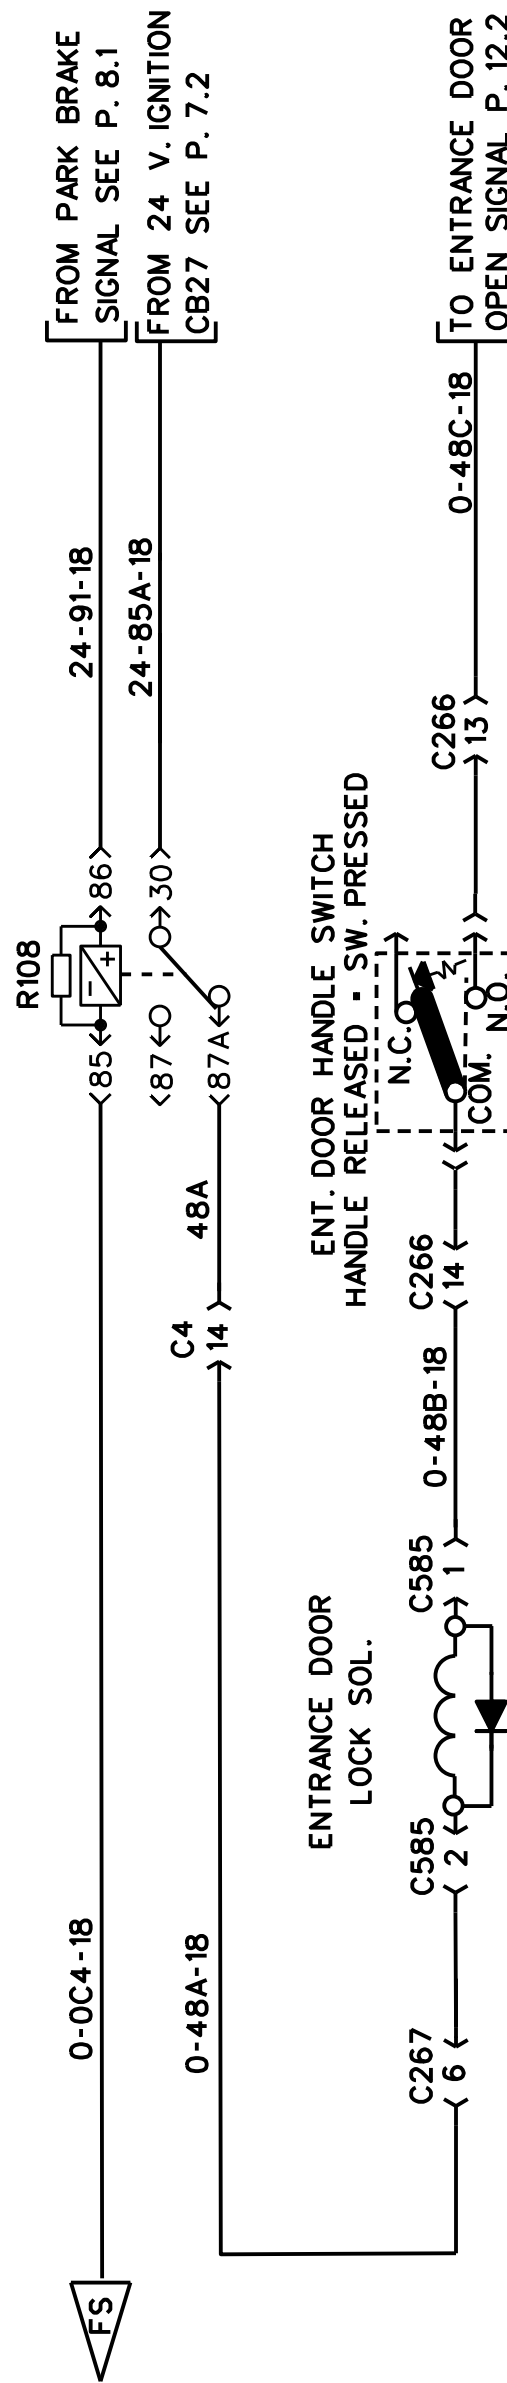




CENTER DOOR
AIR LOCK


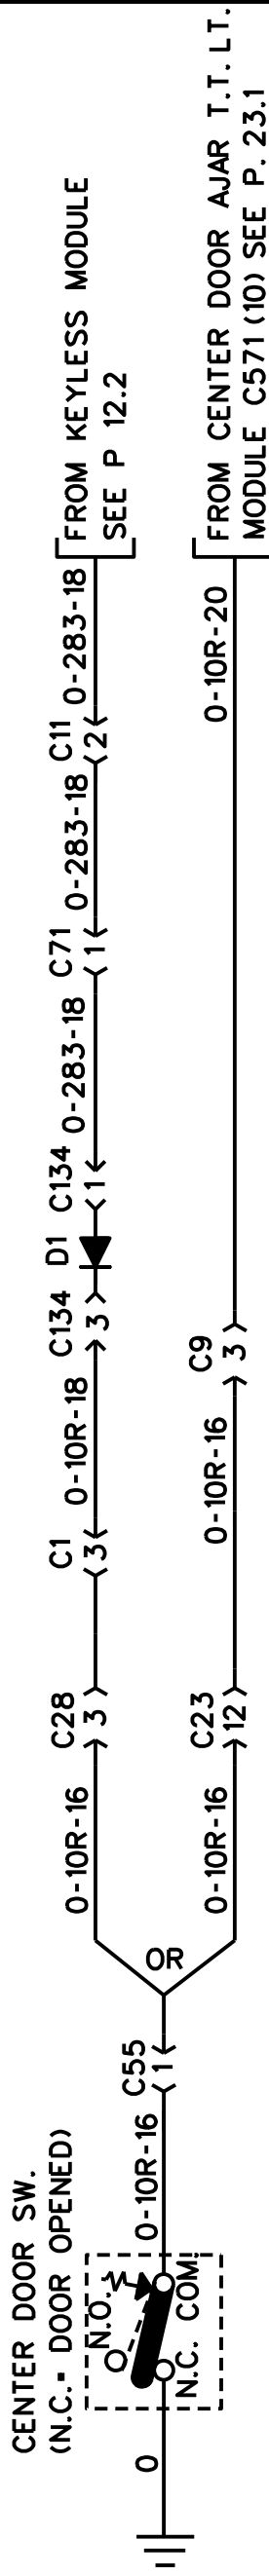


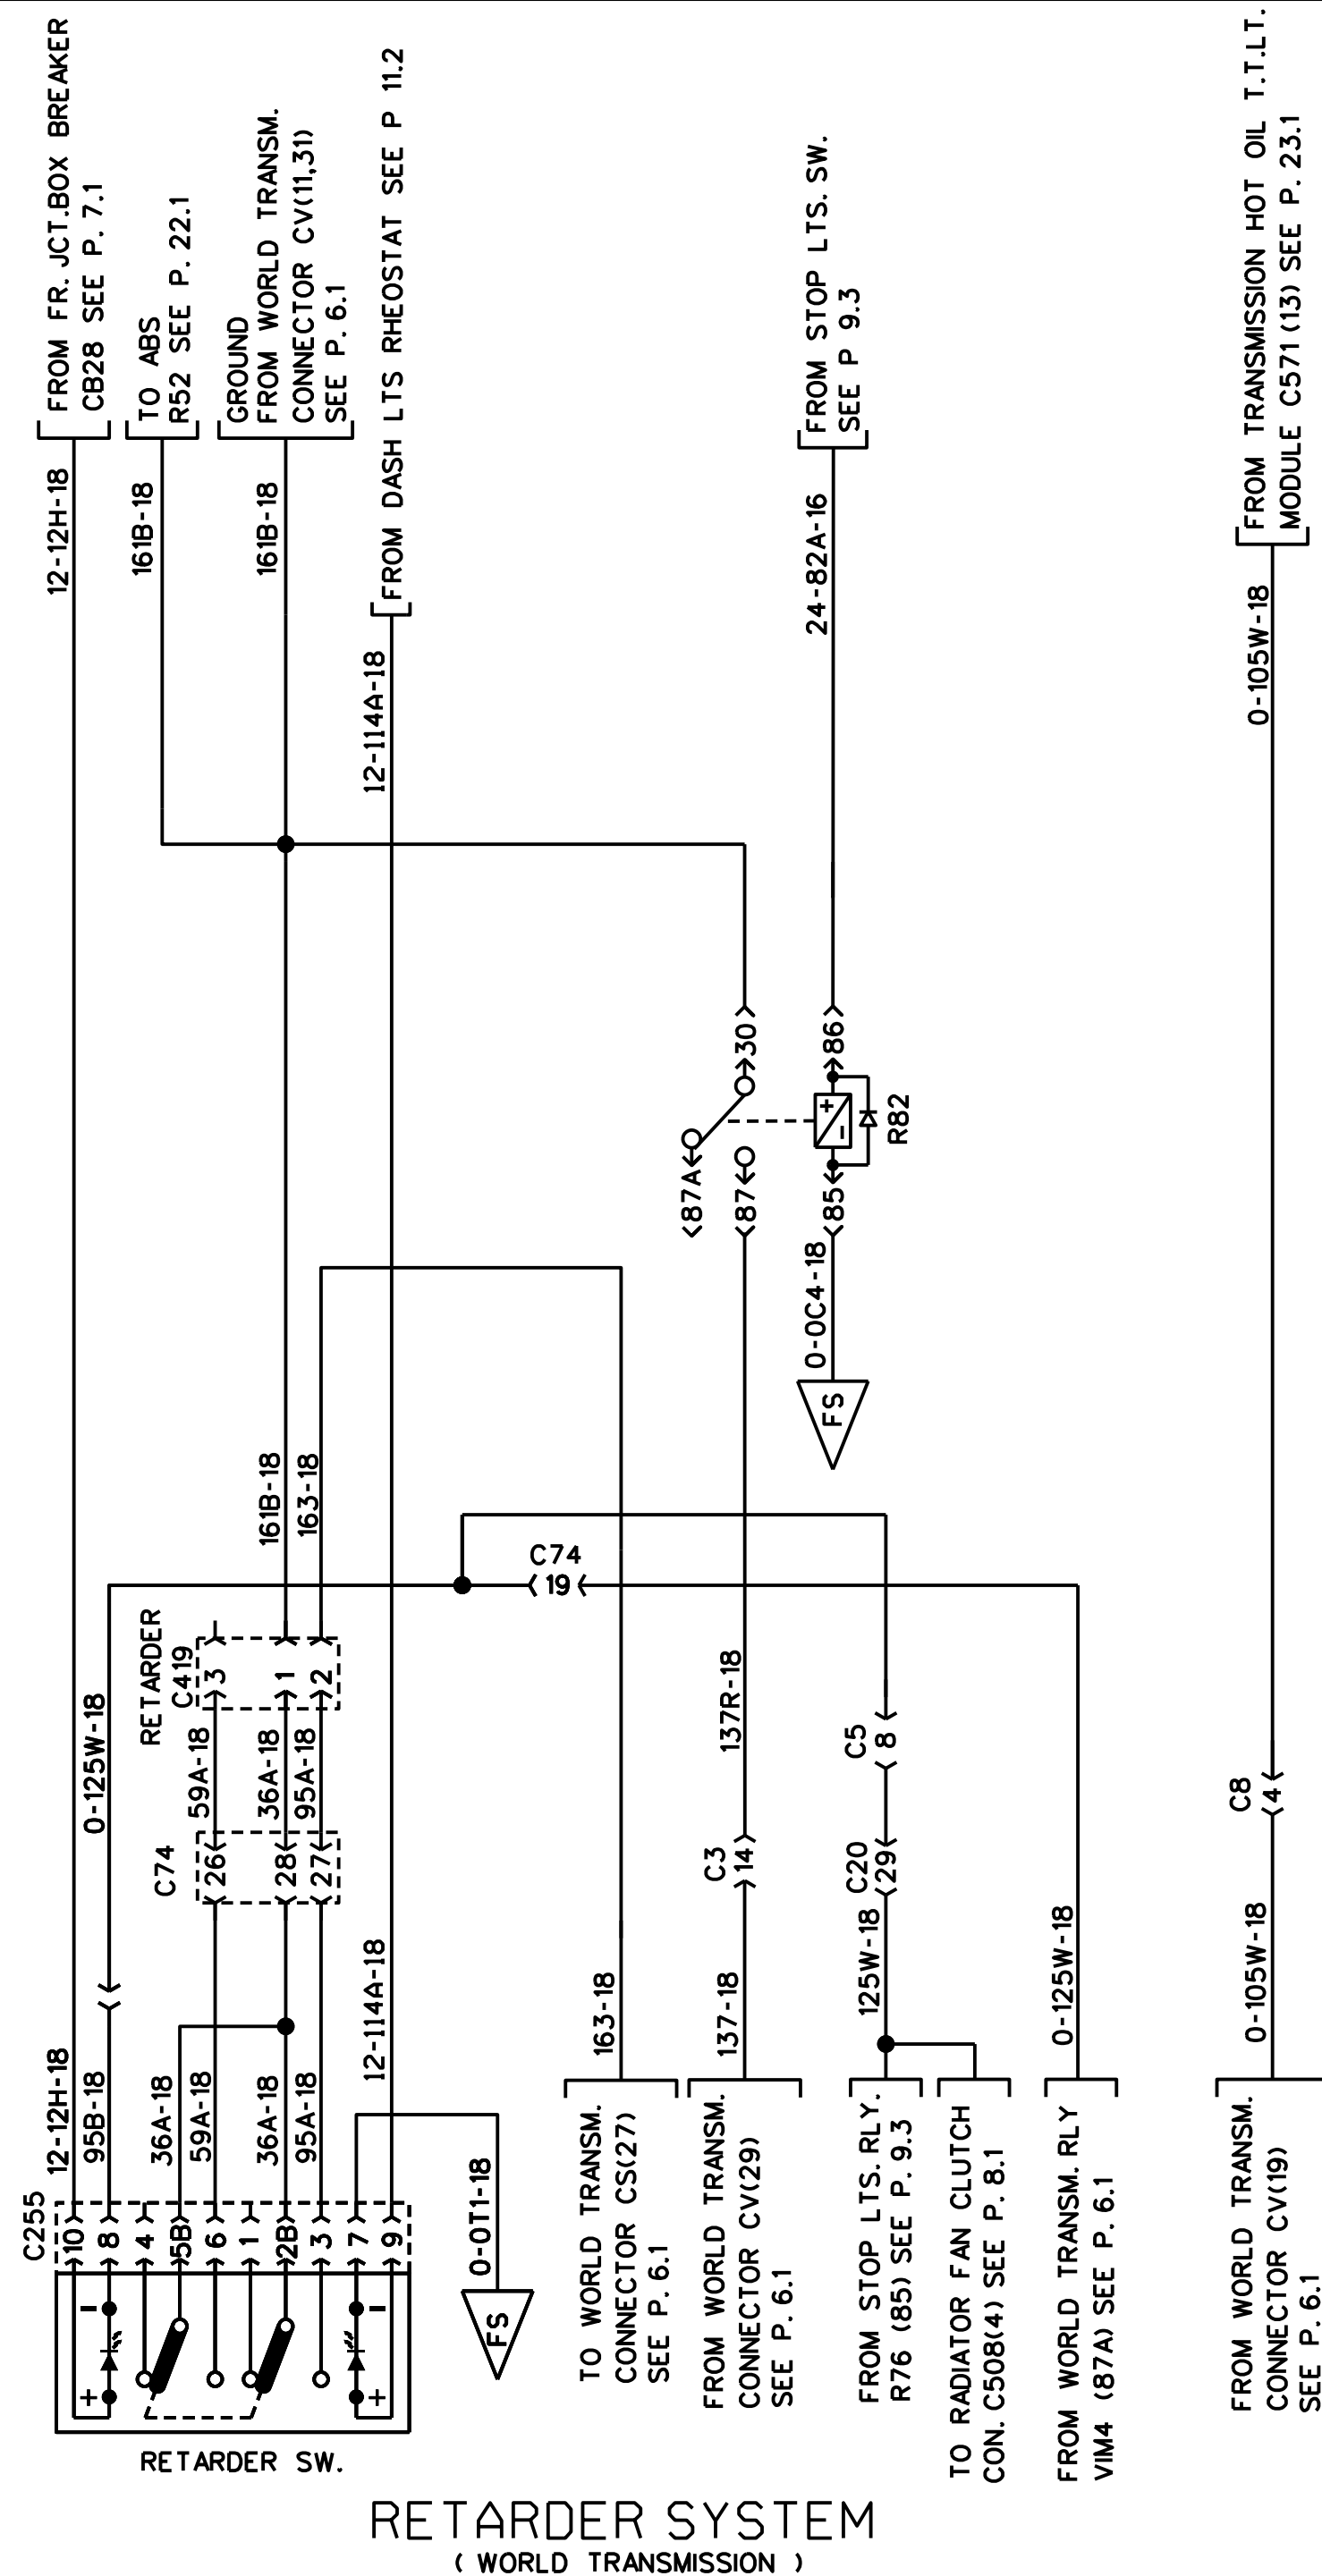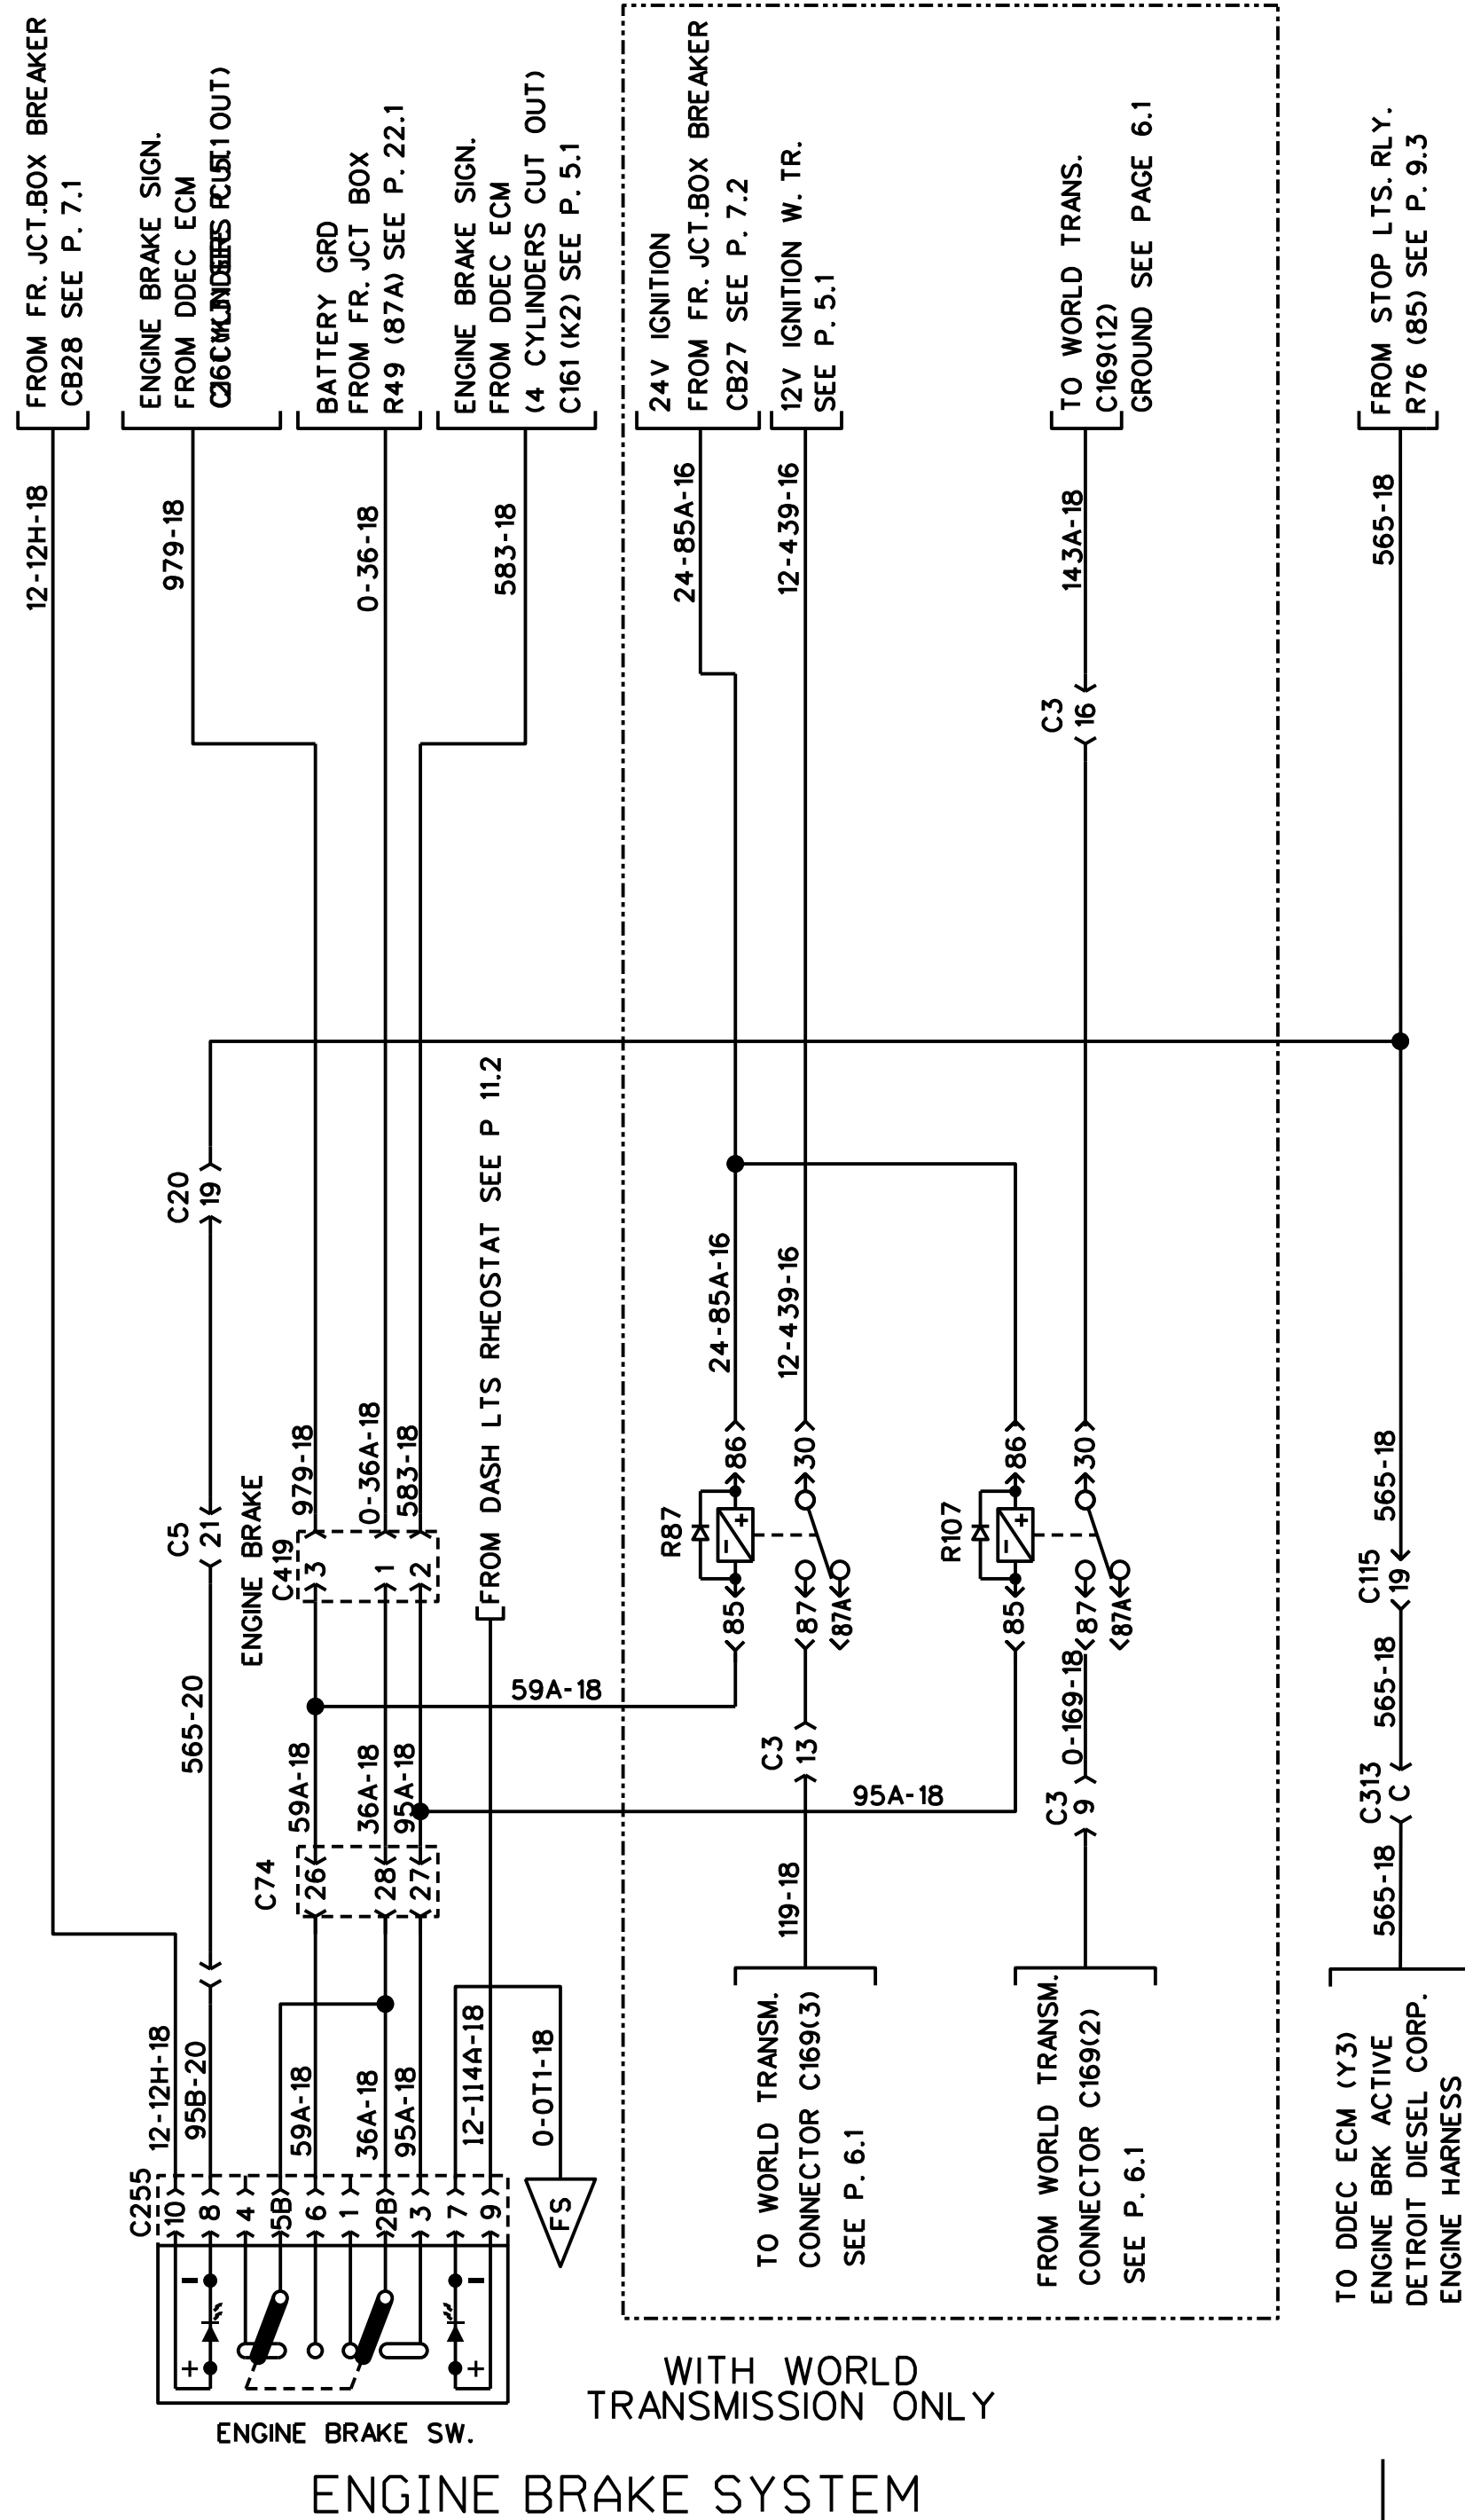



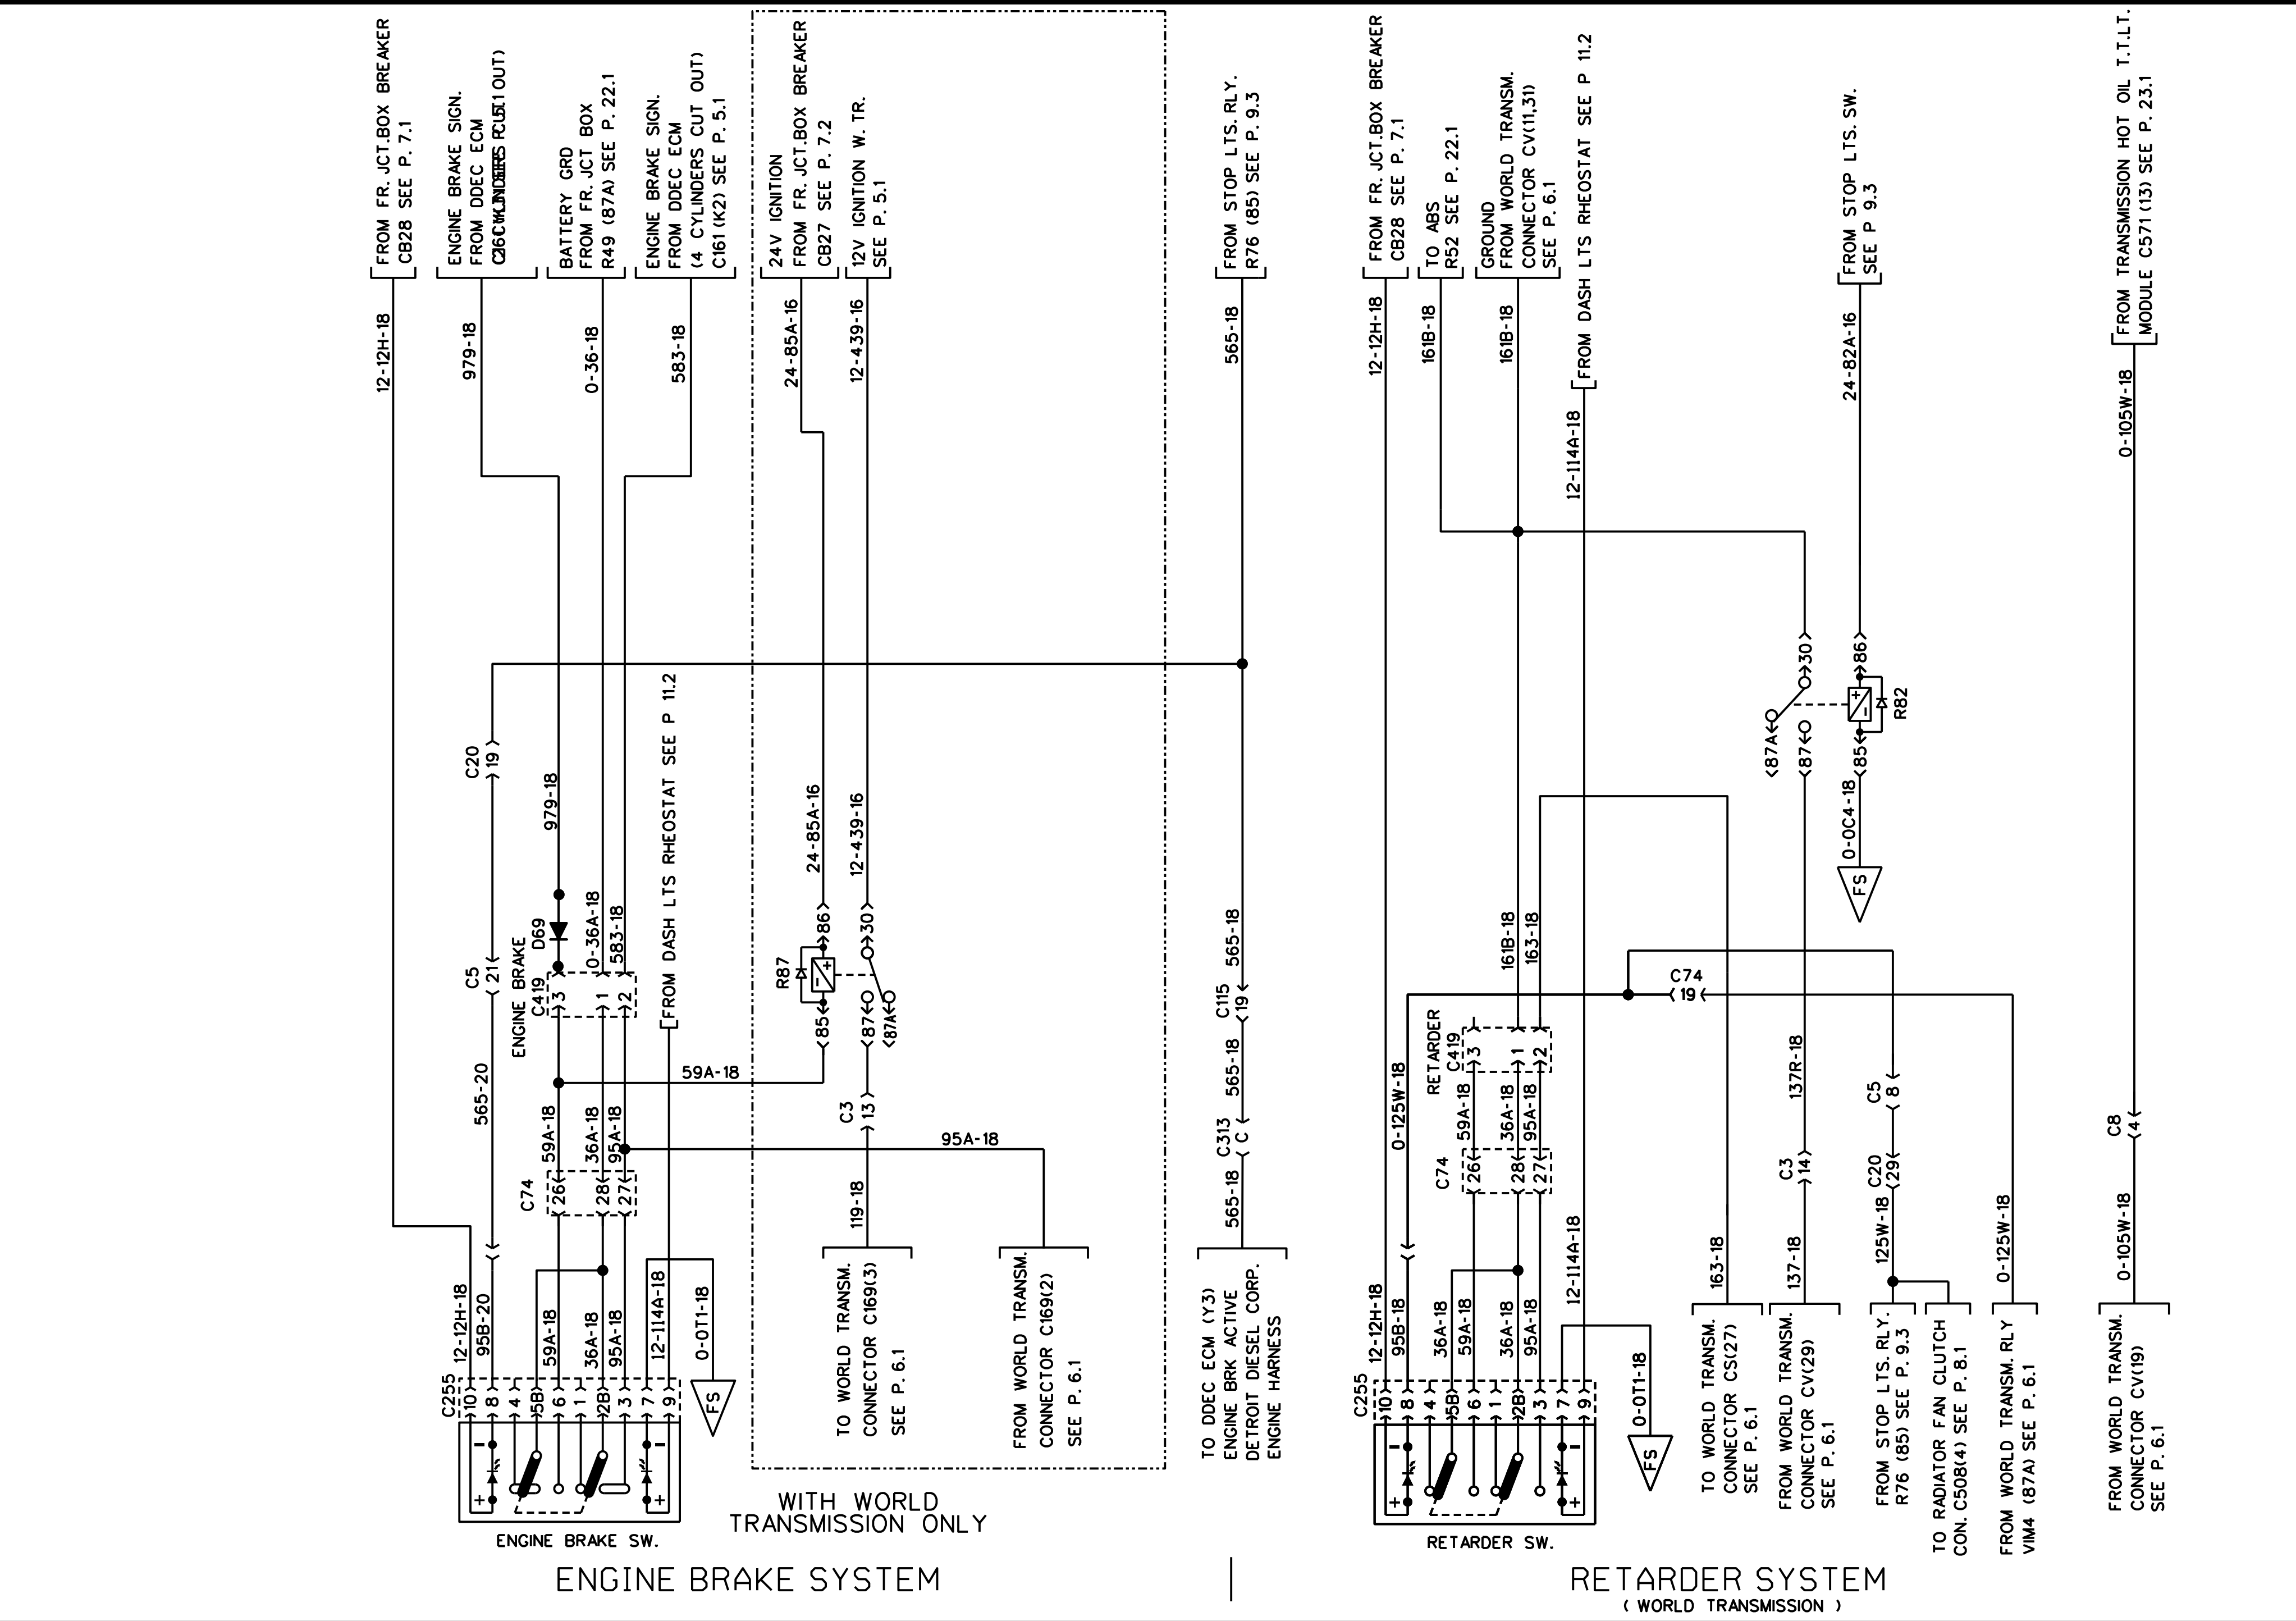


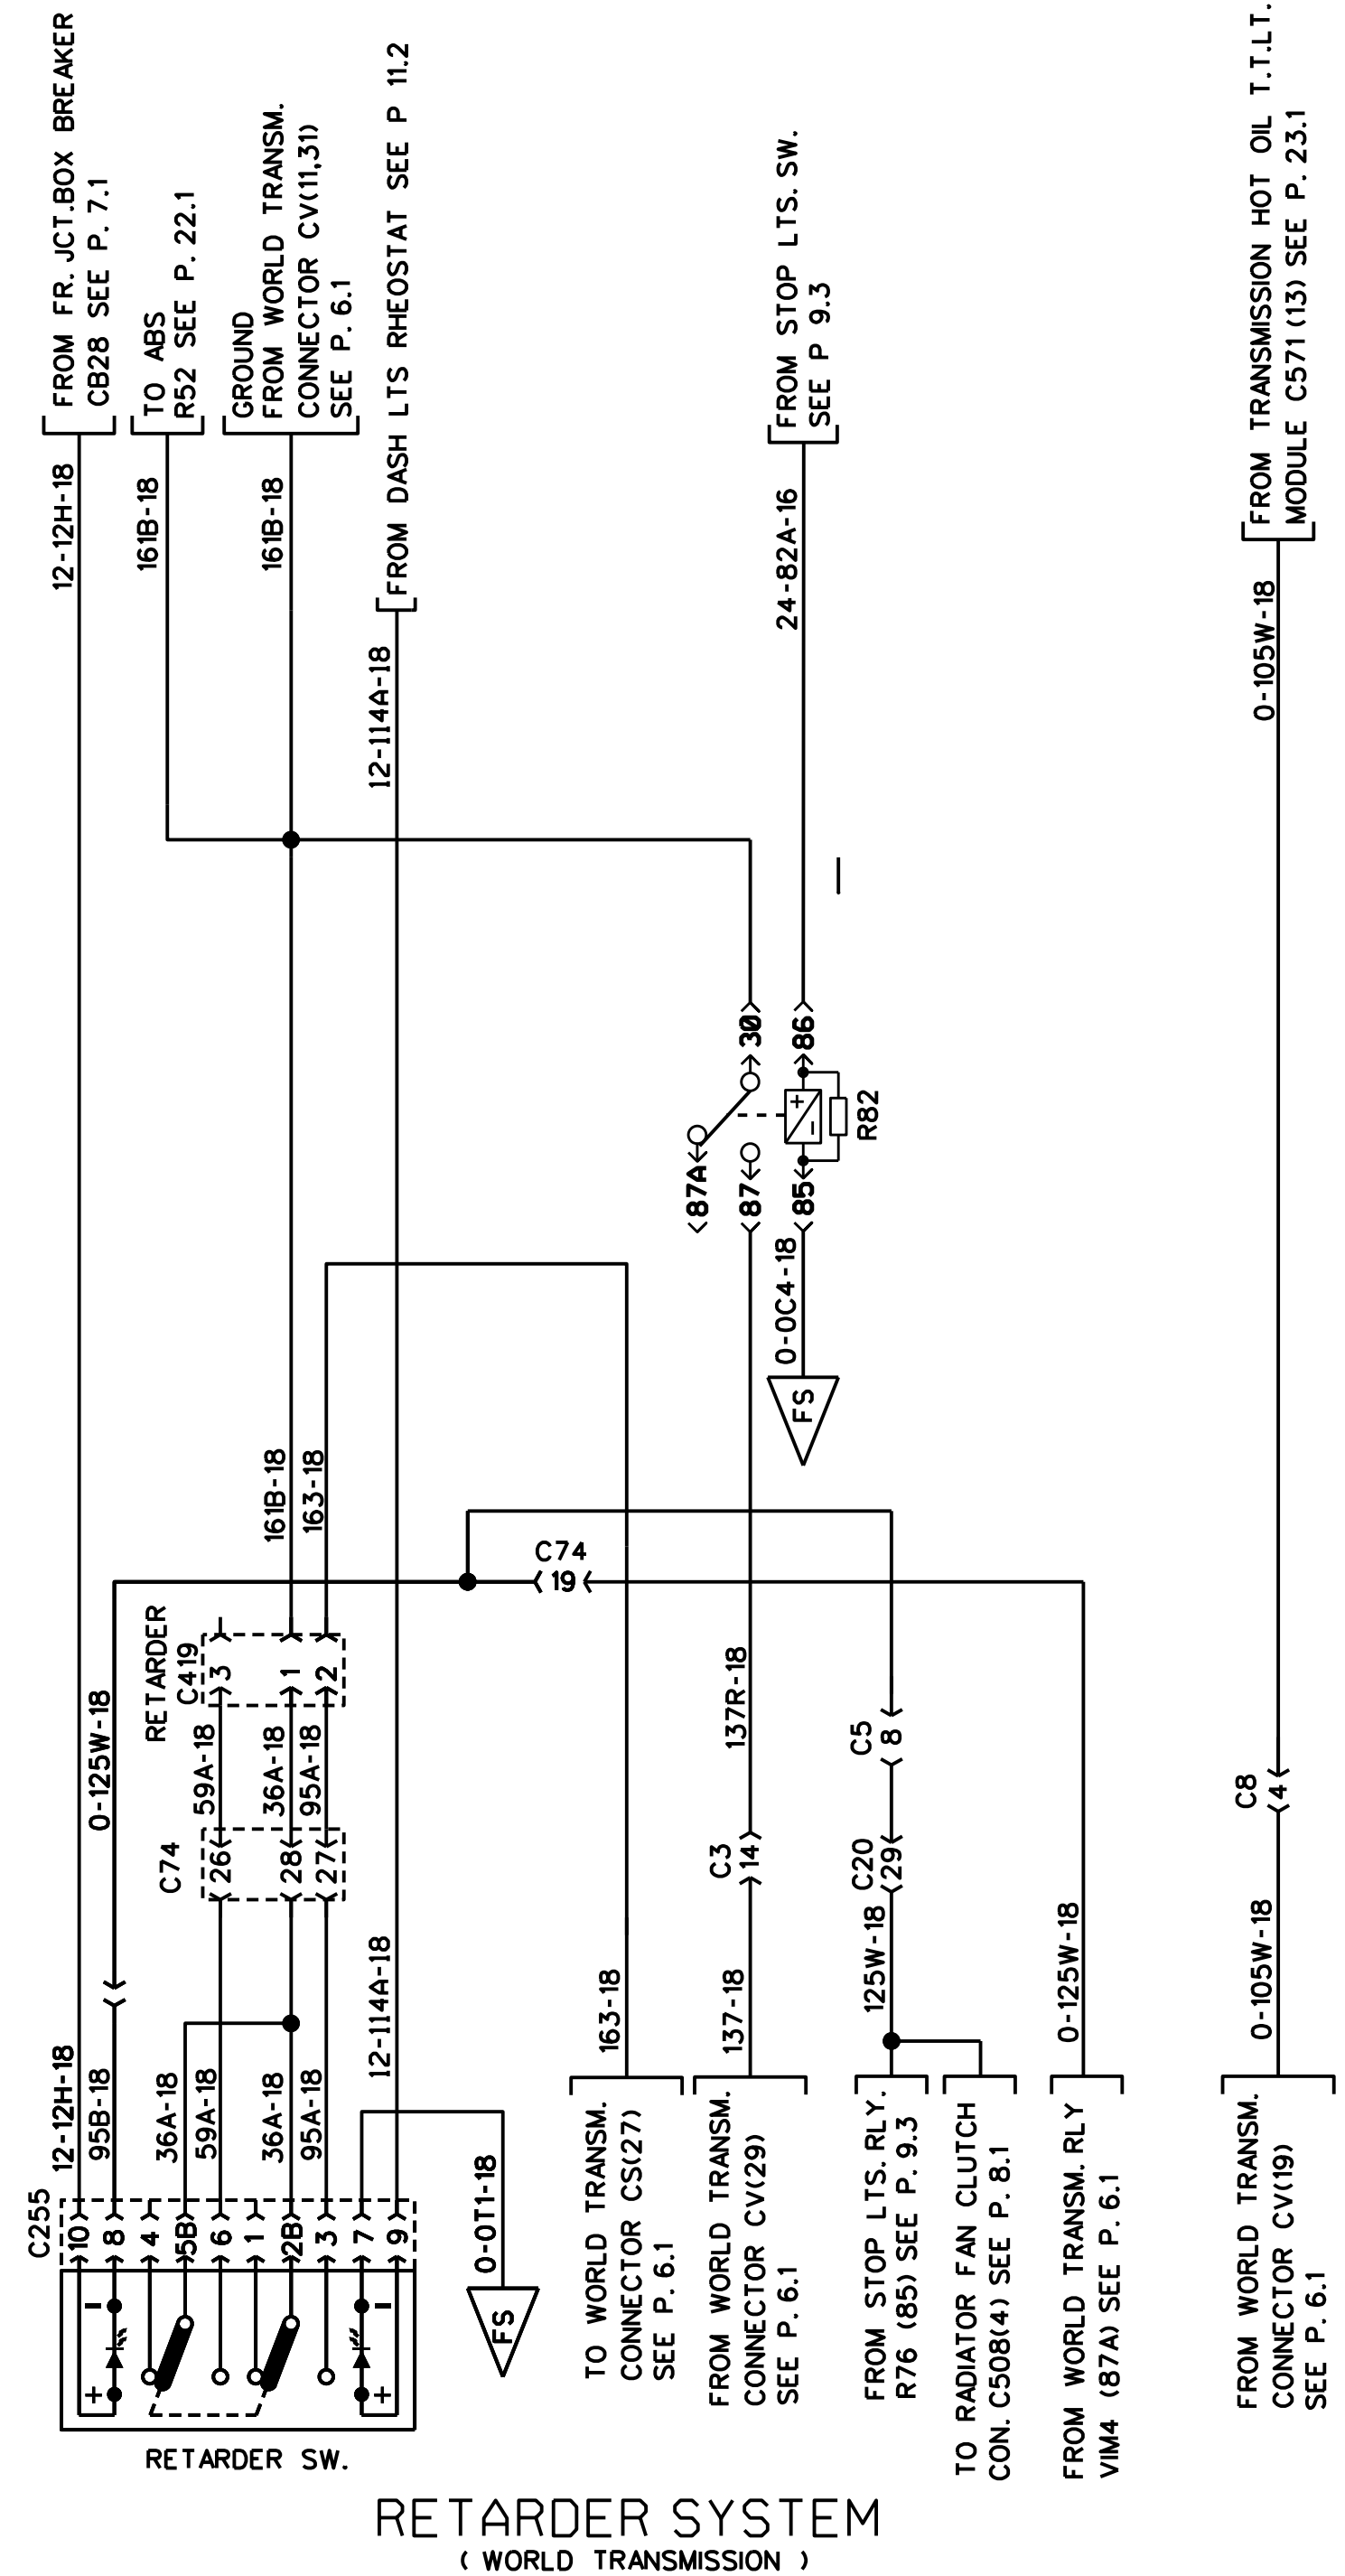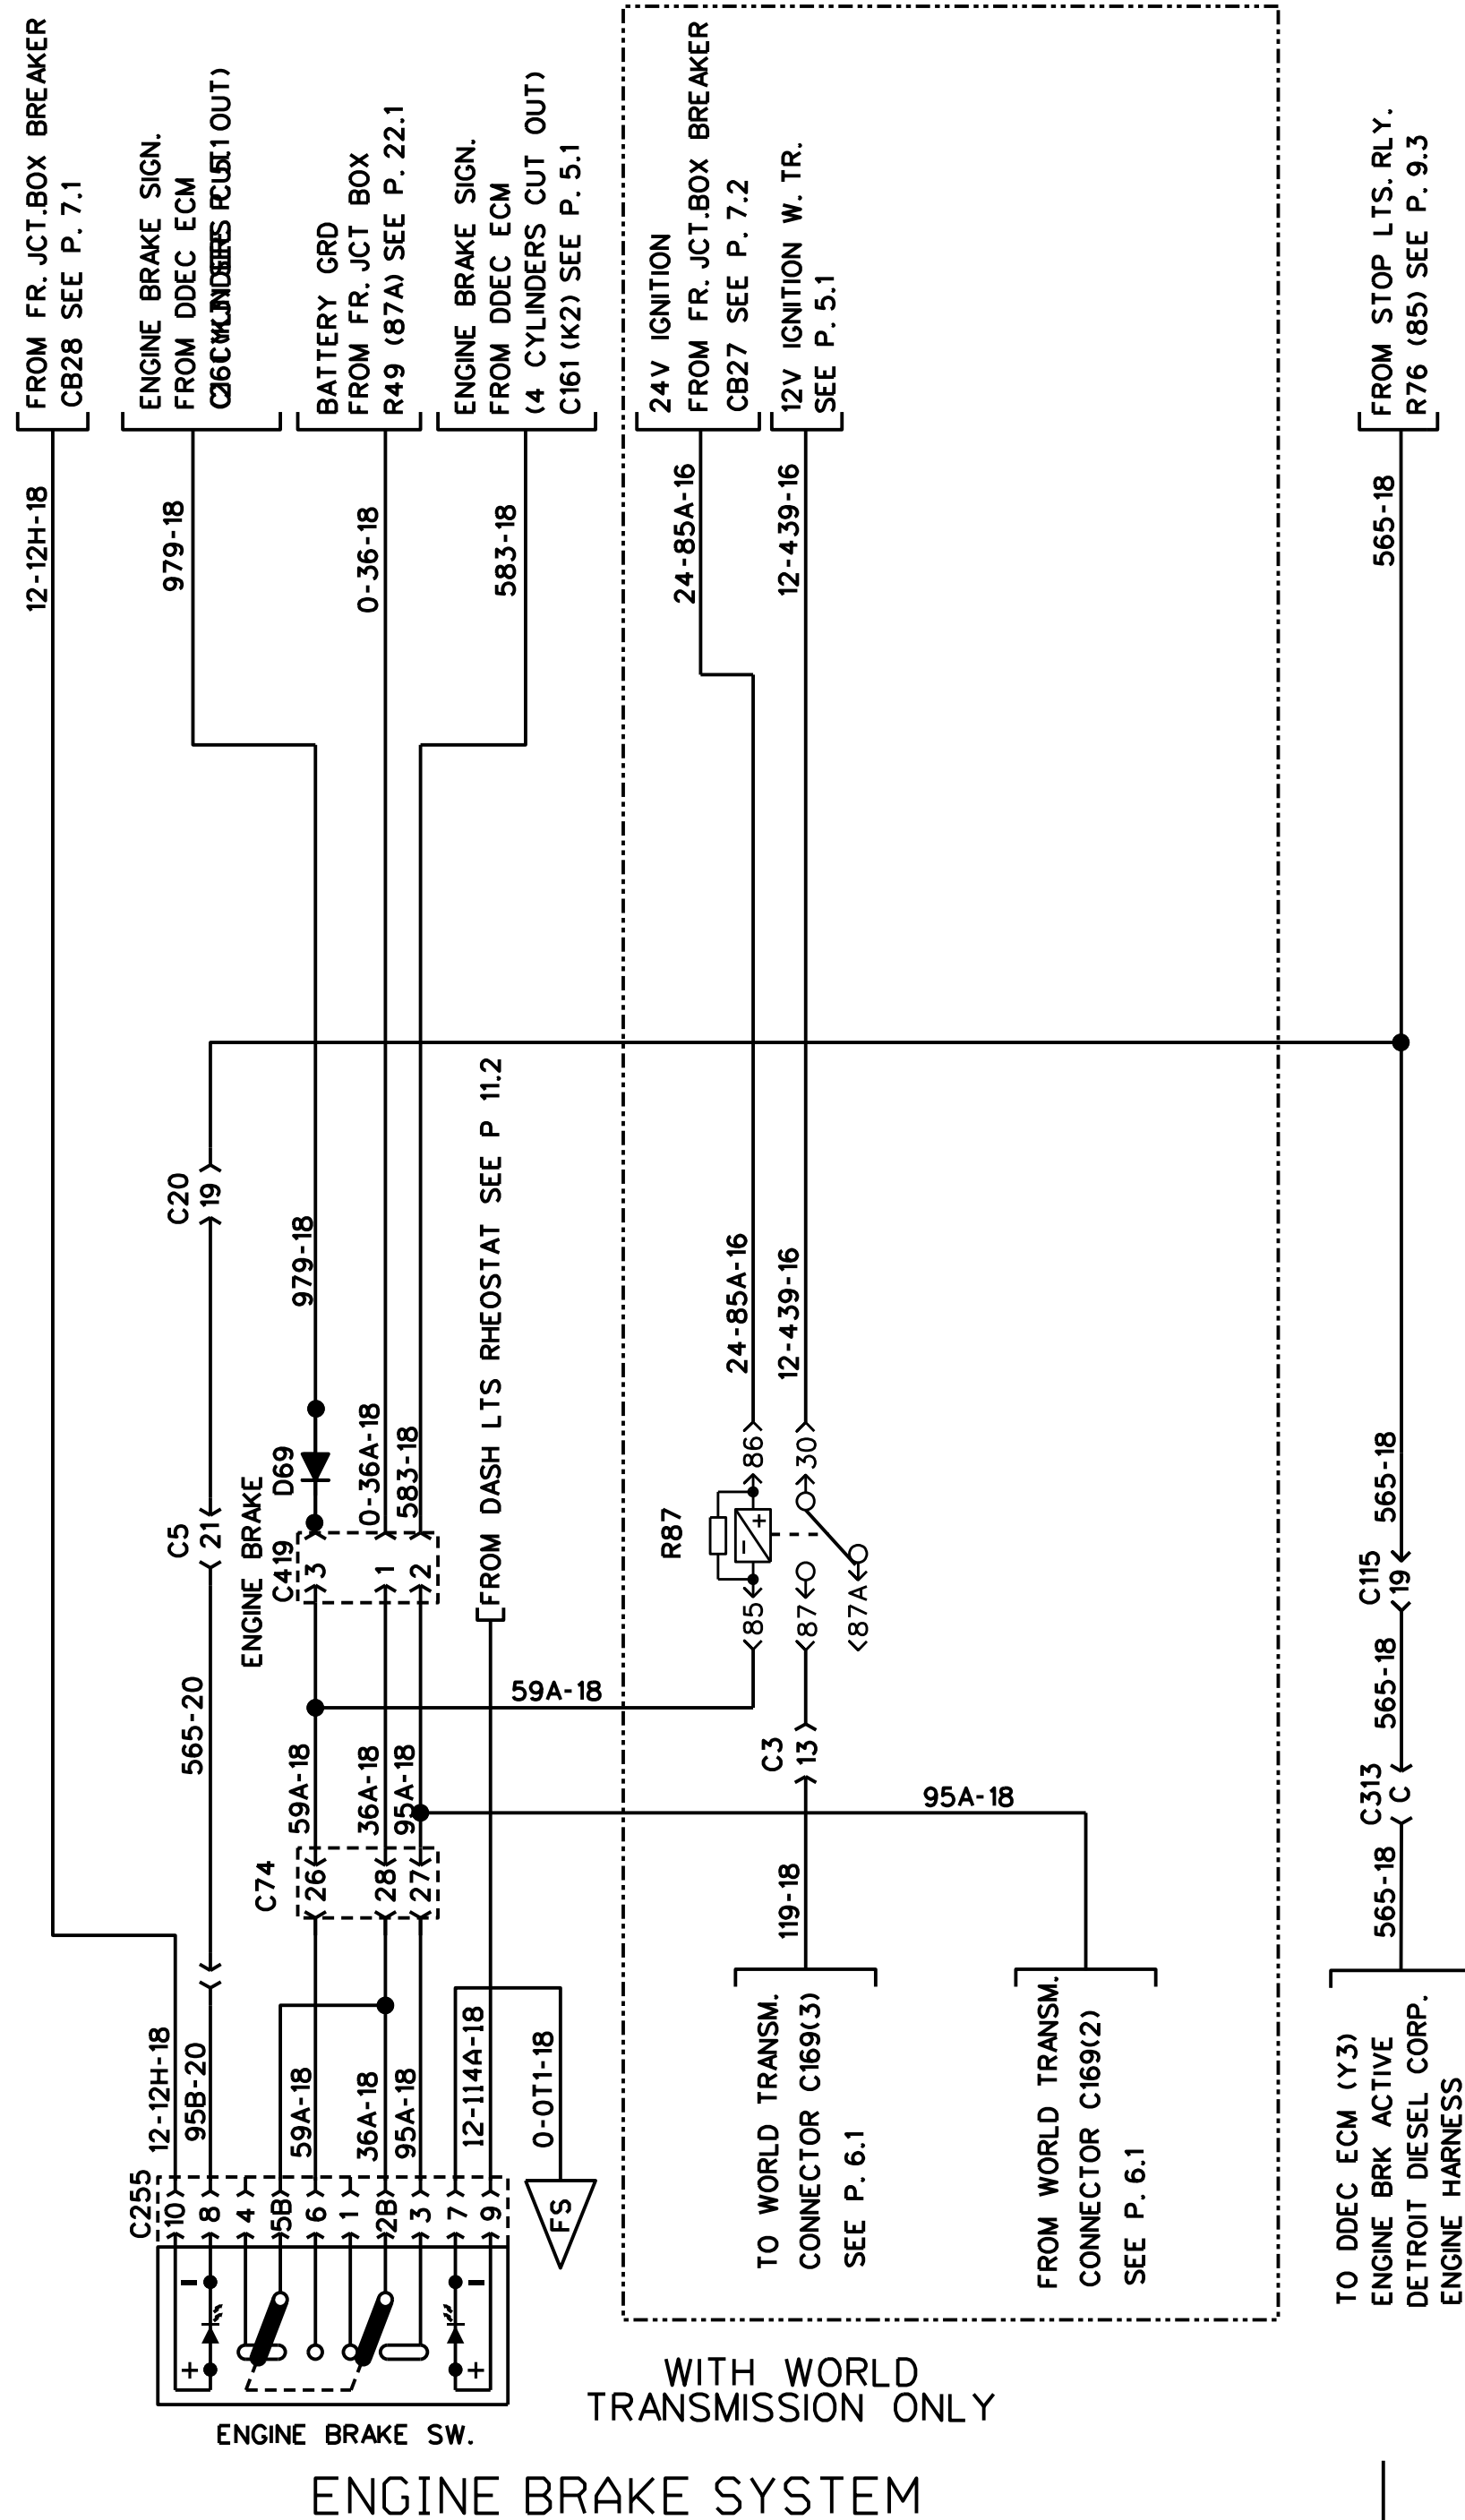


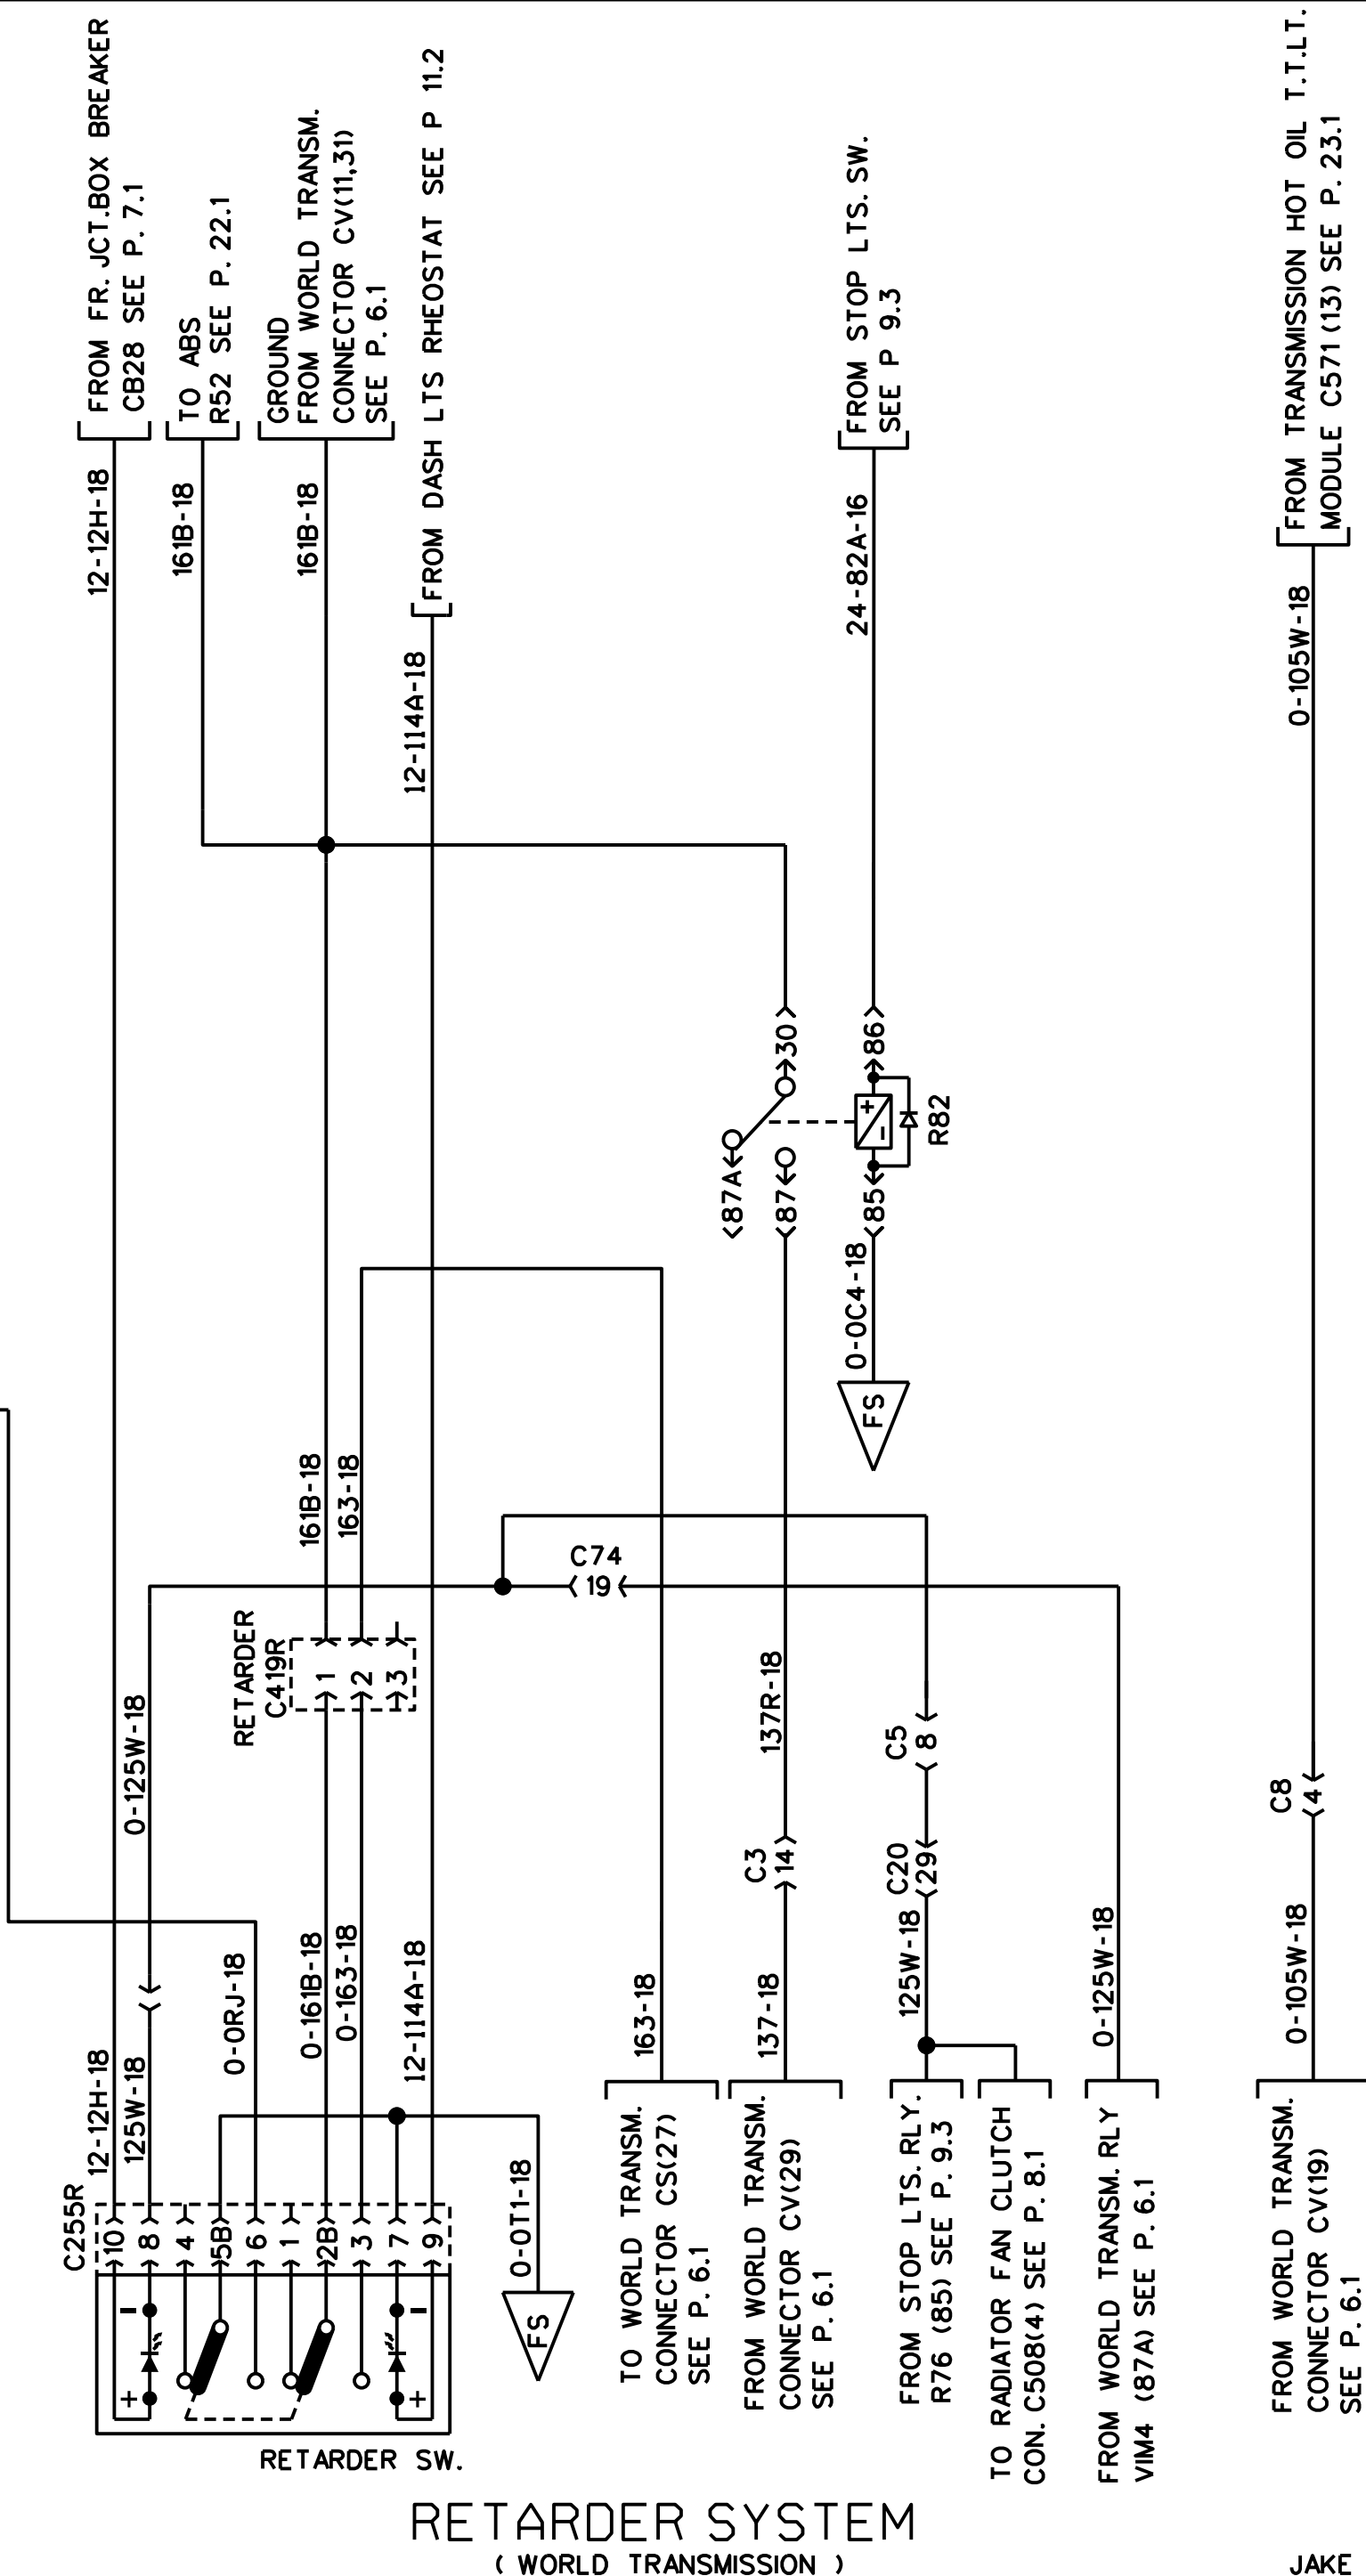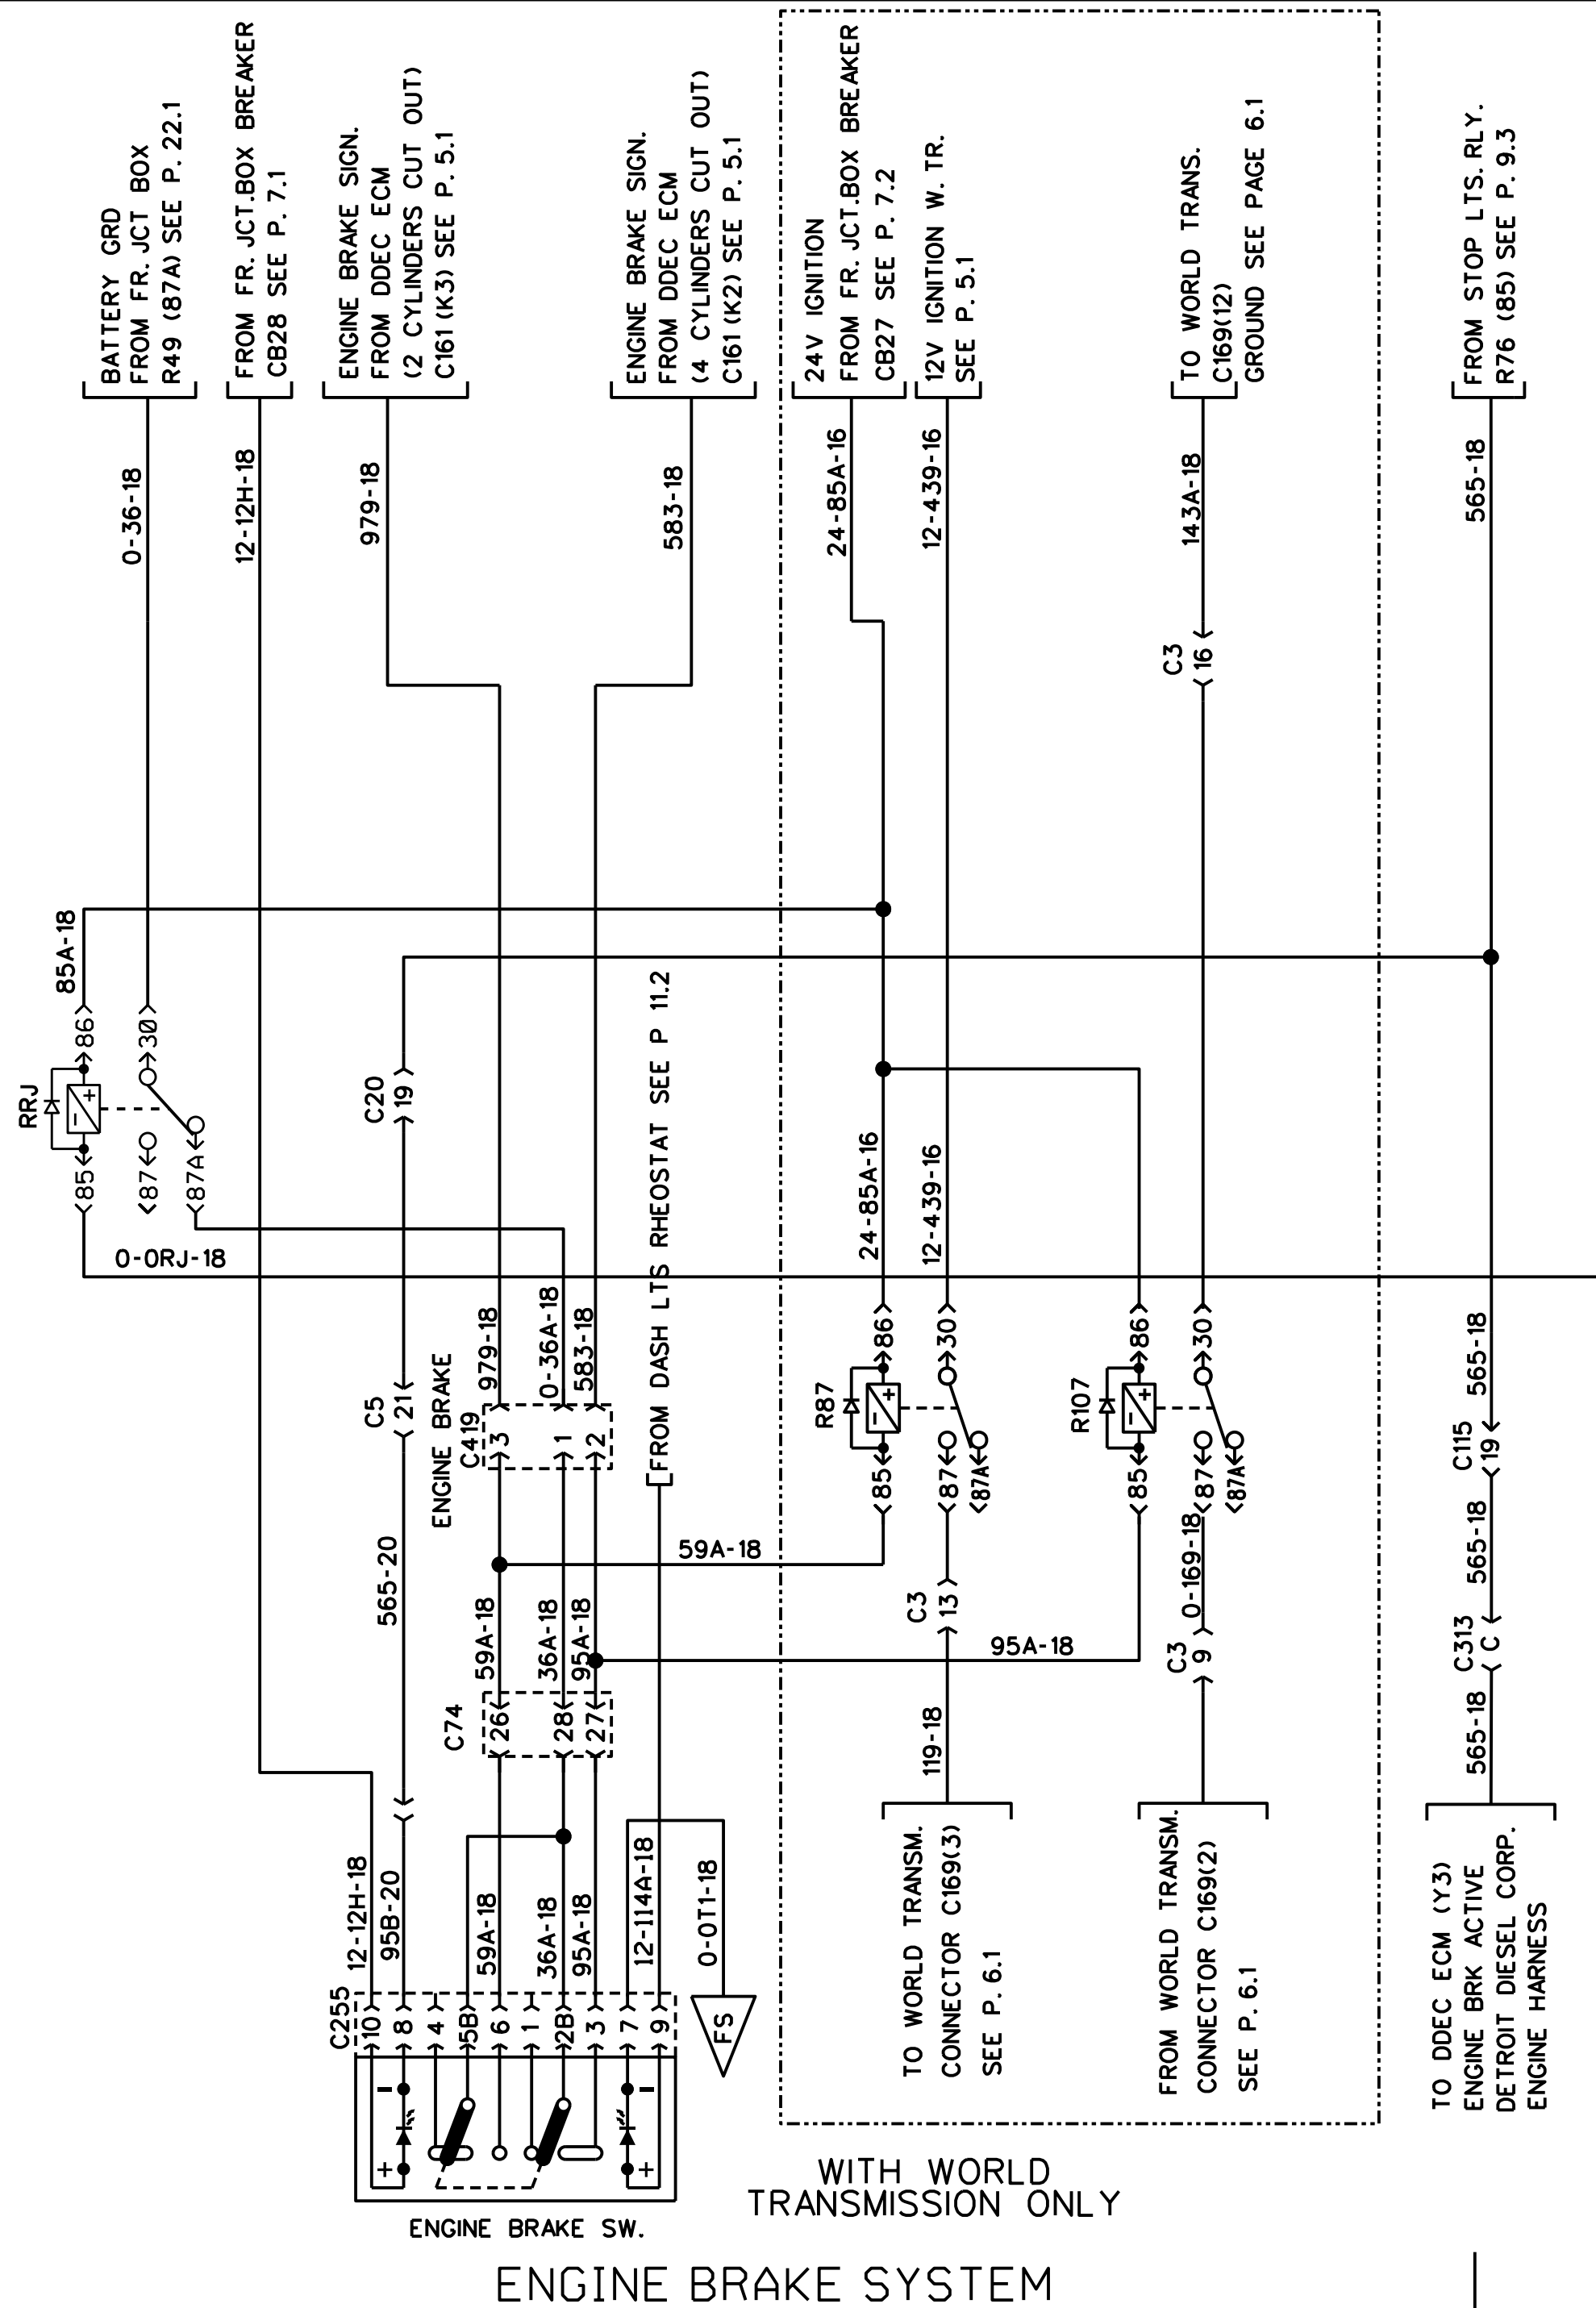


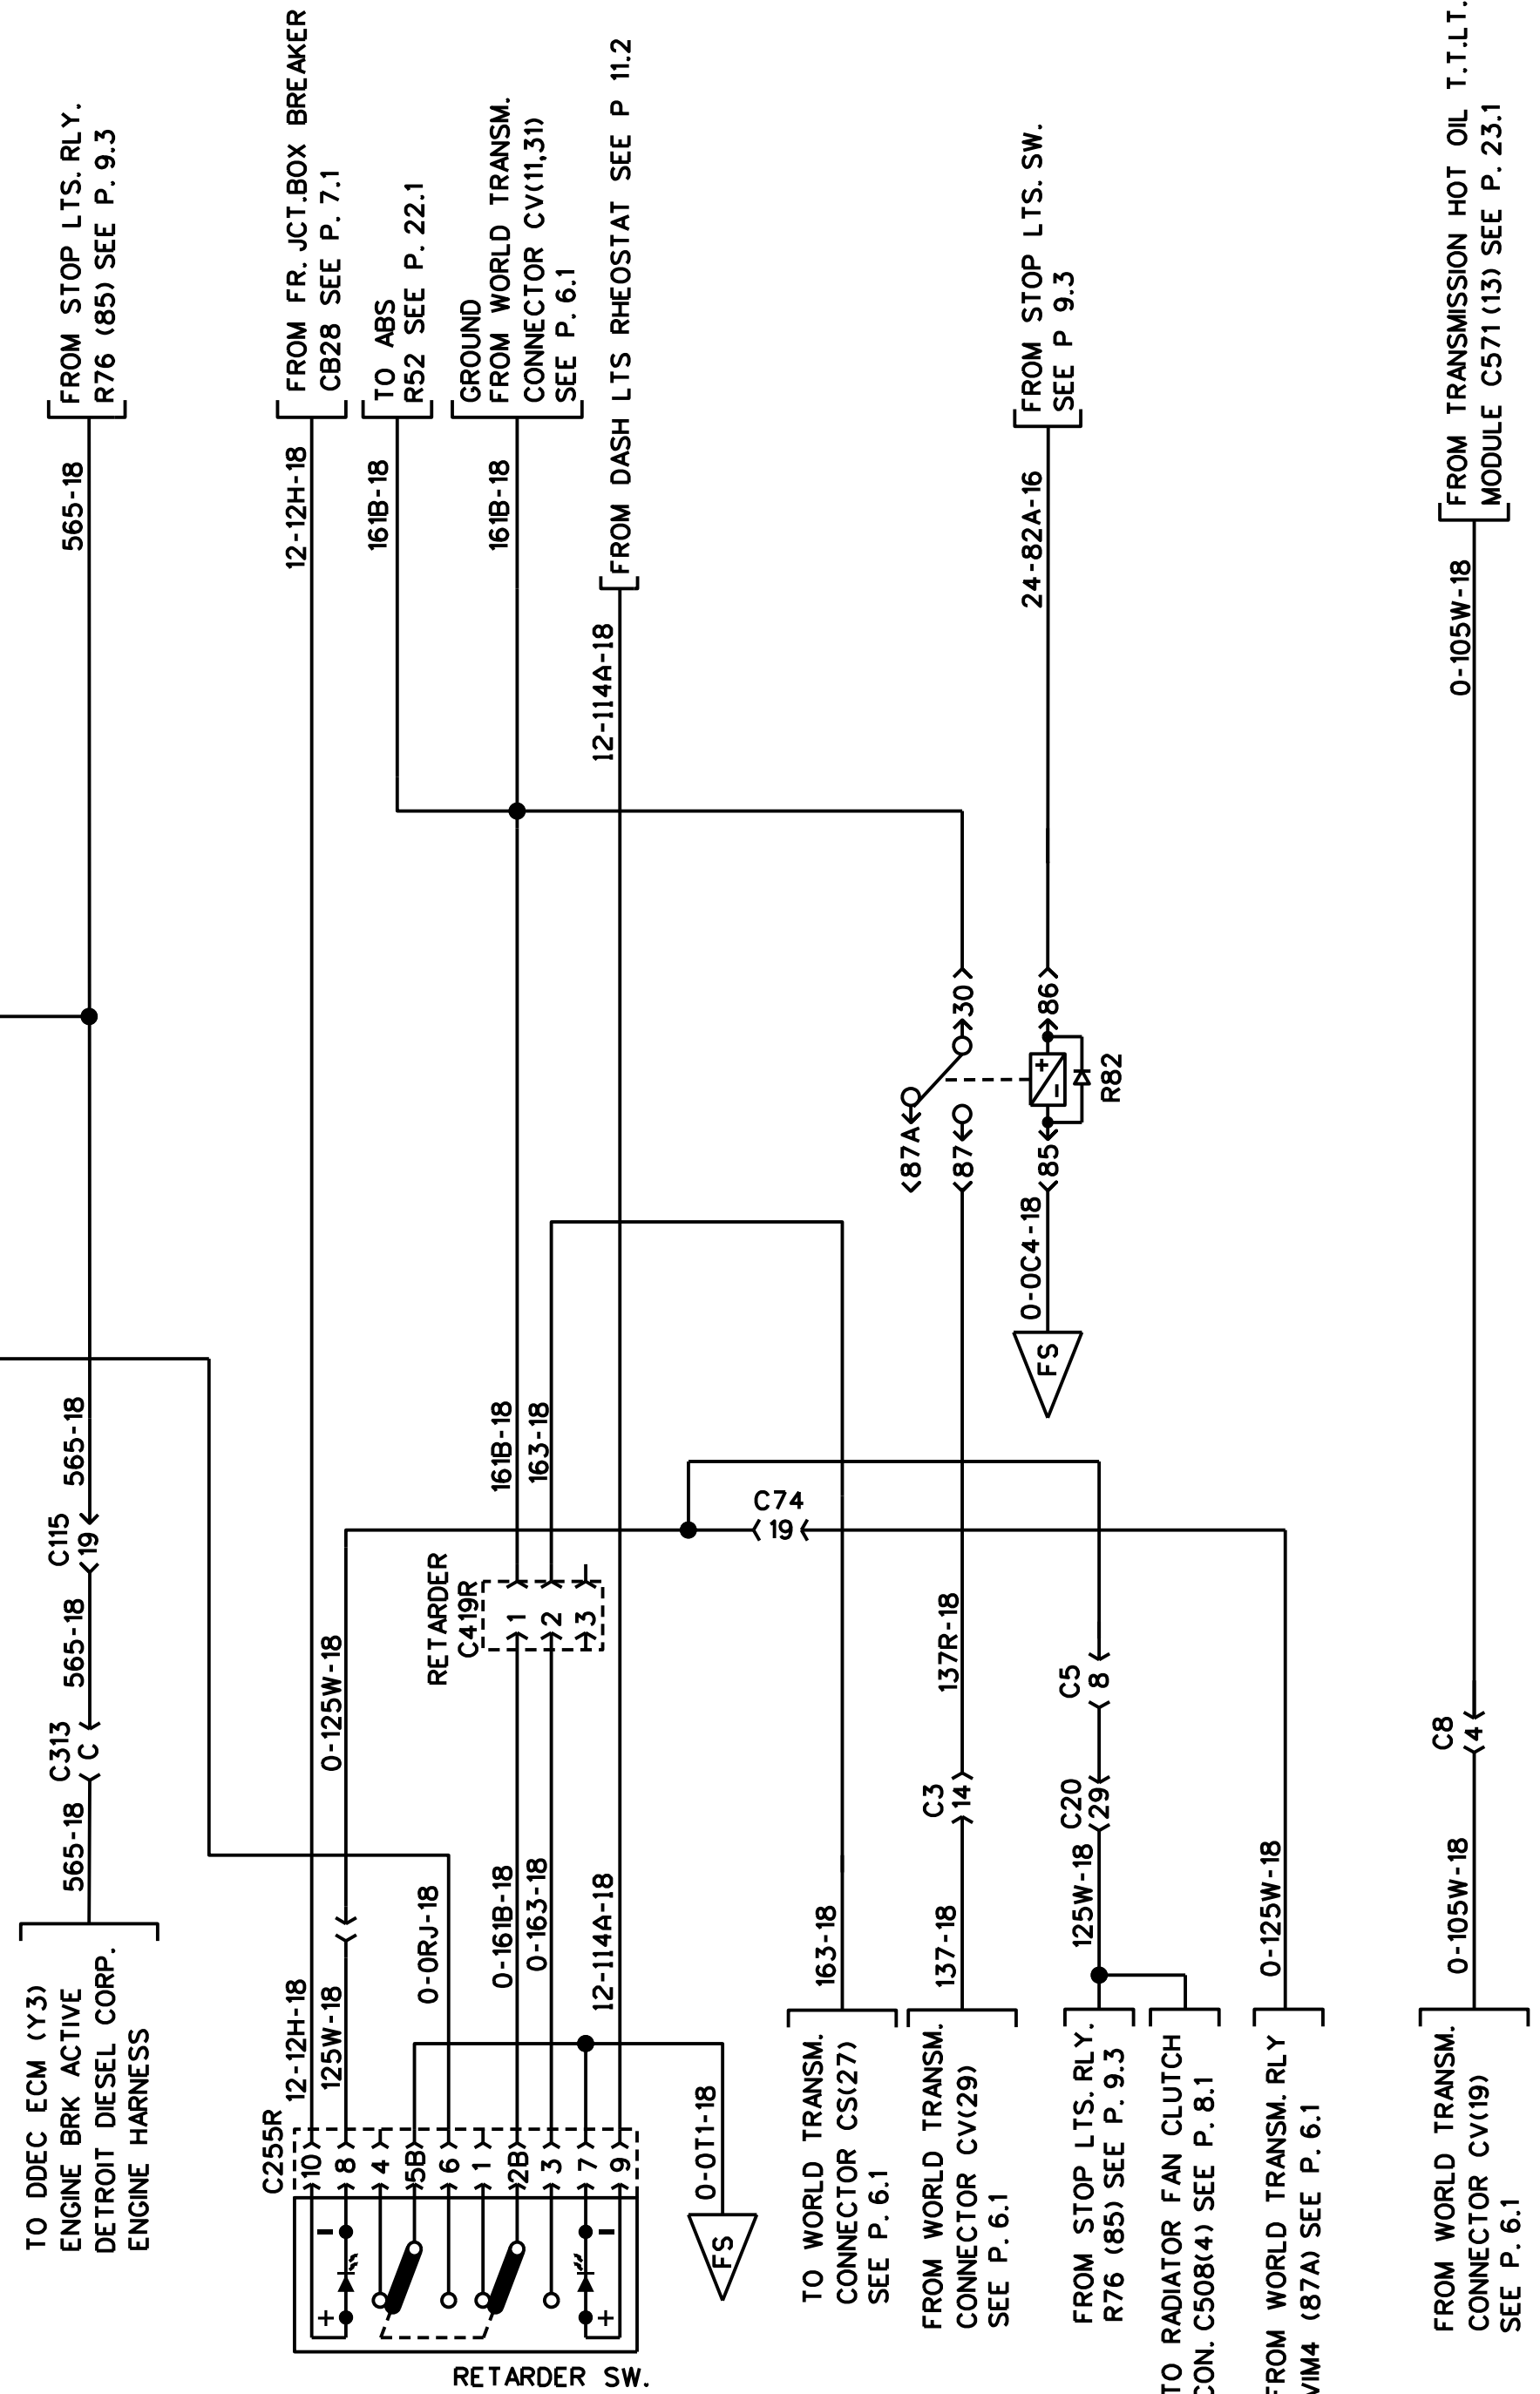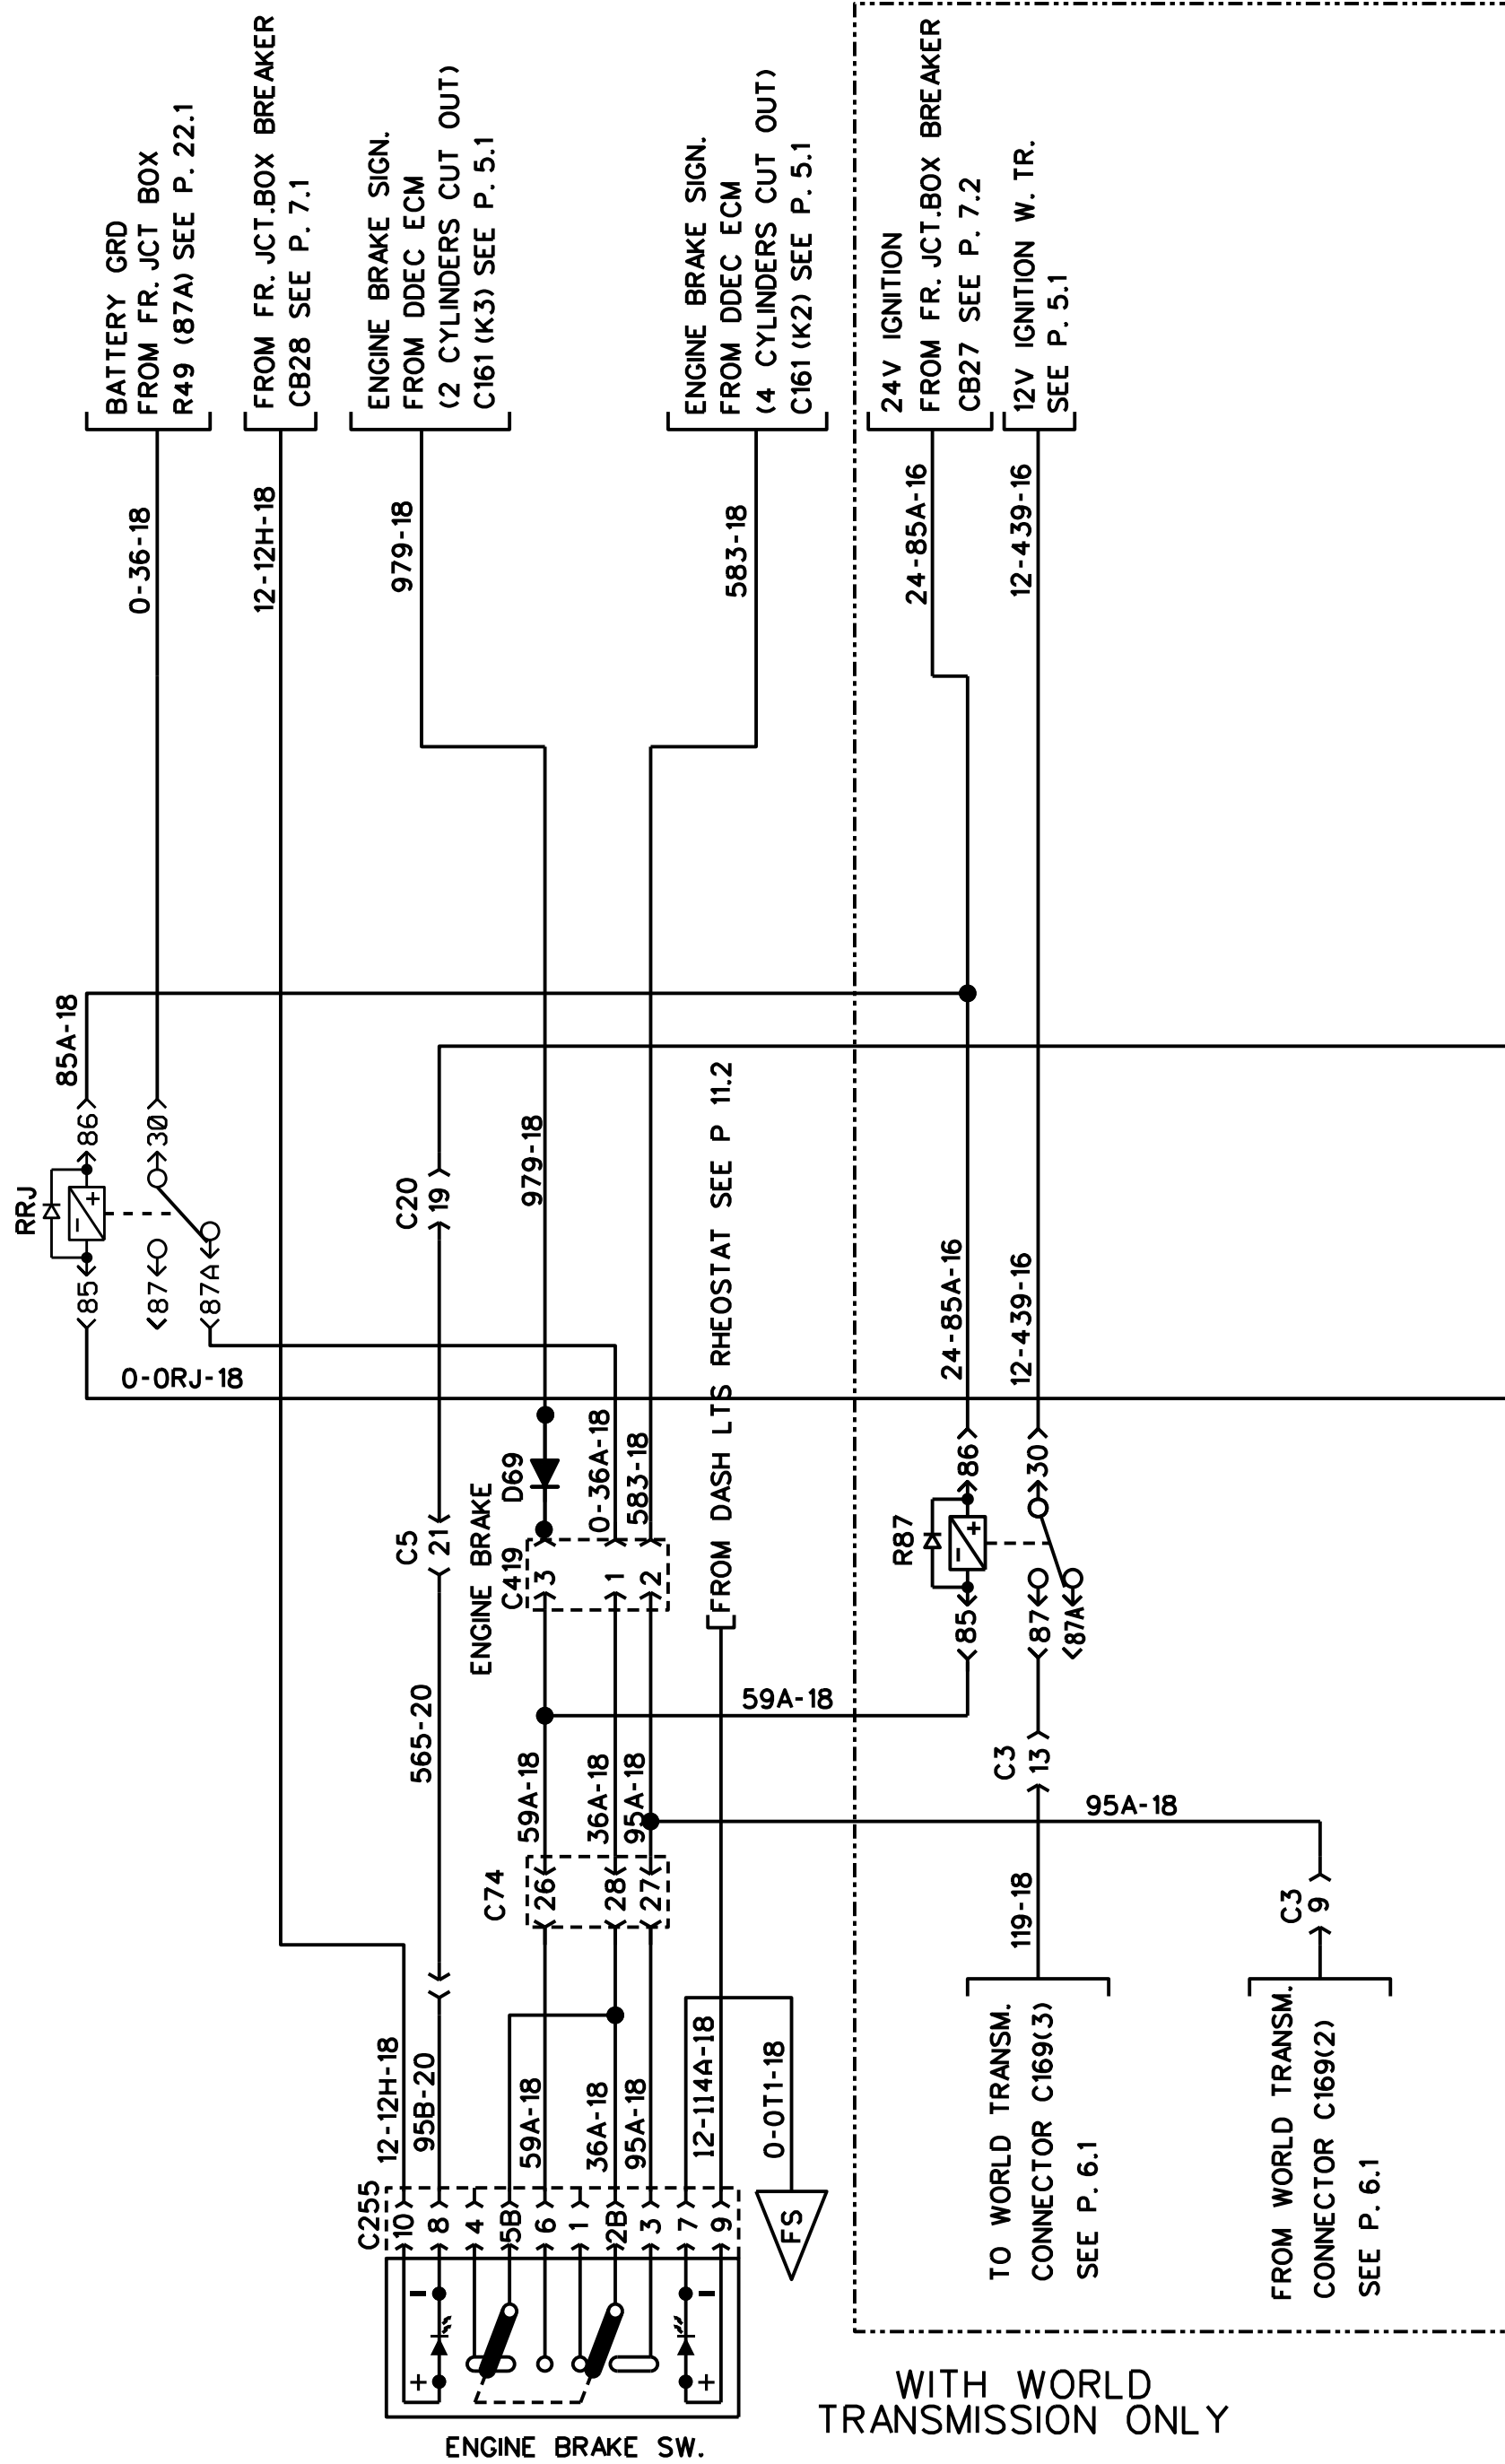

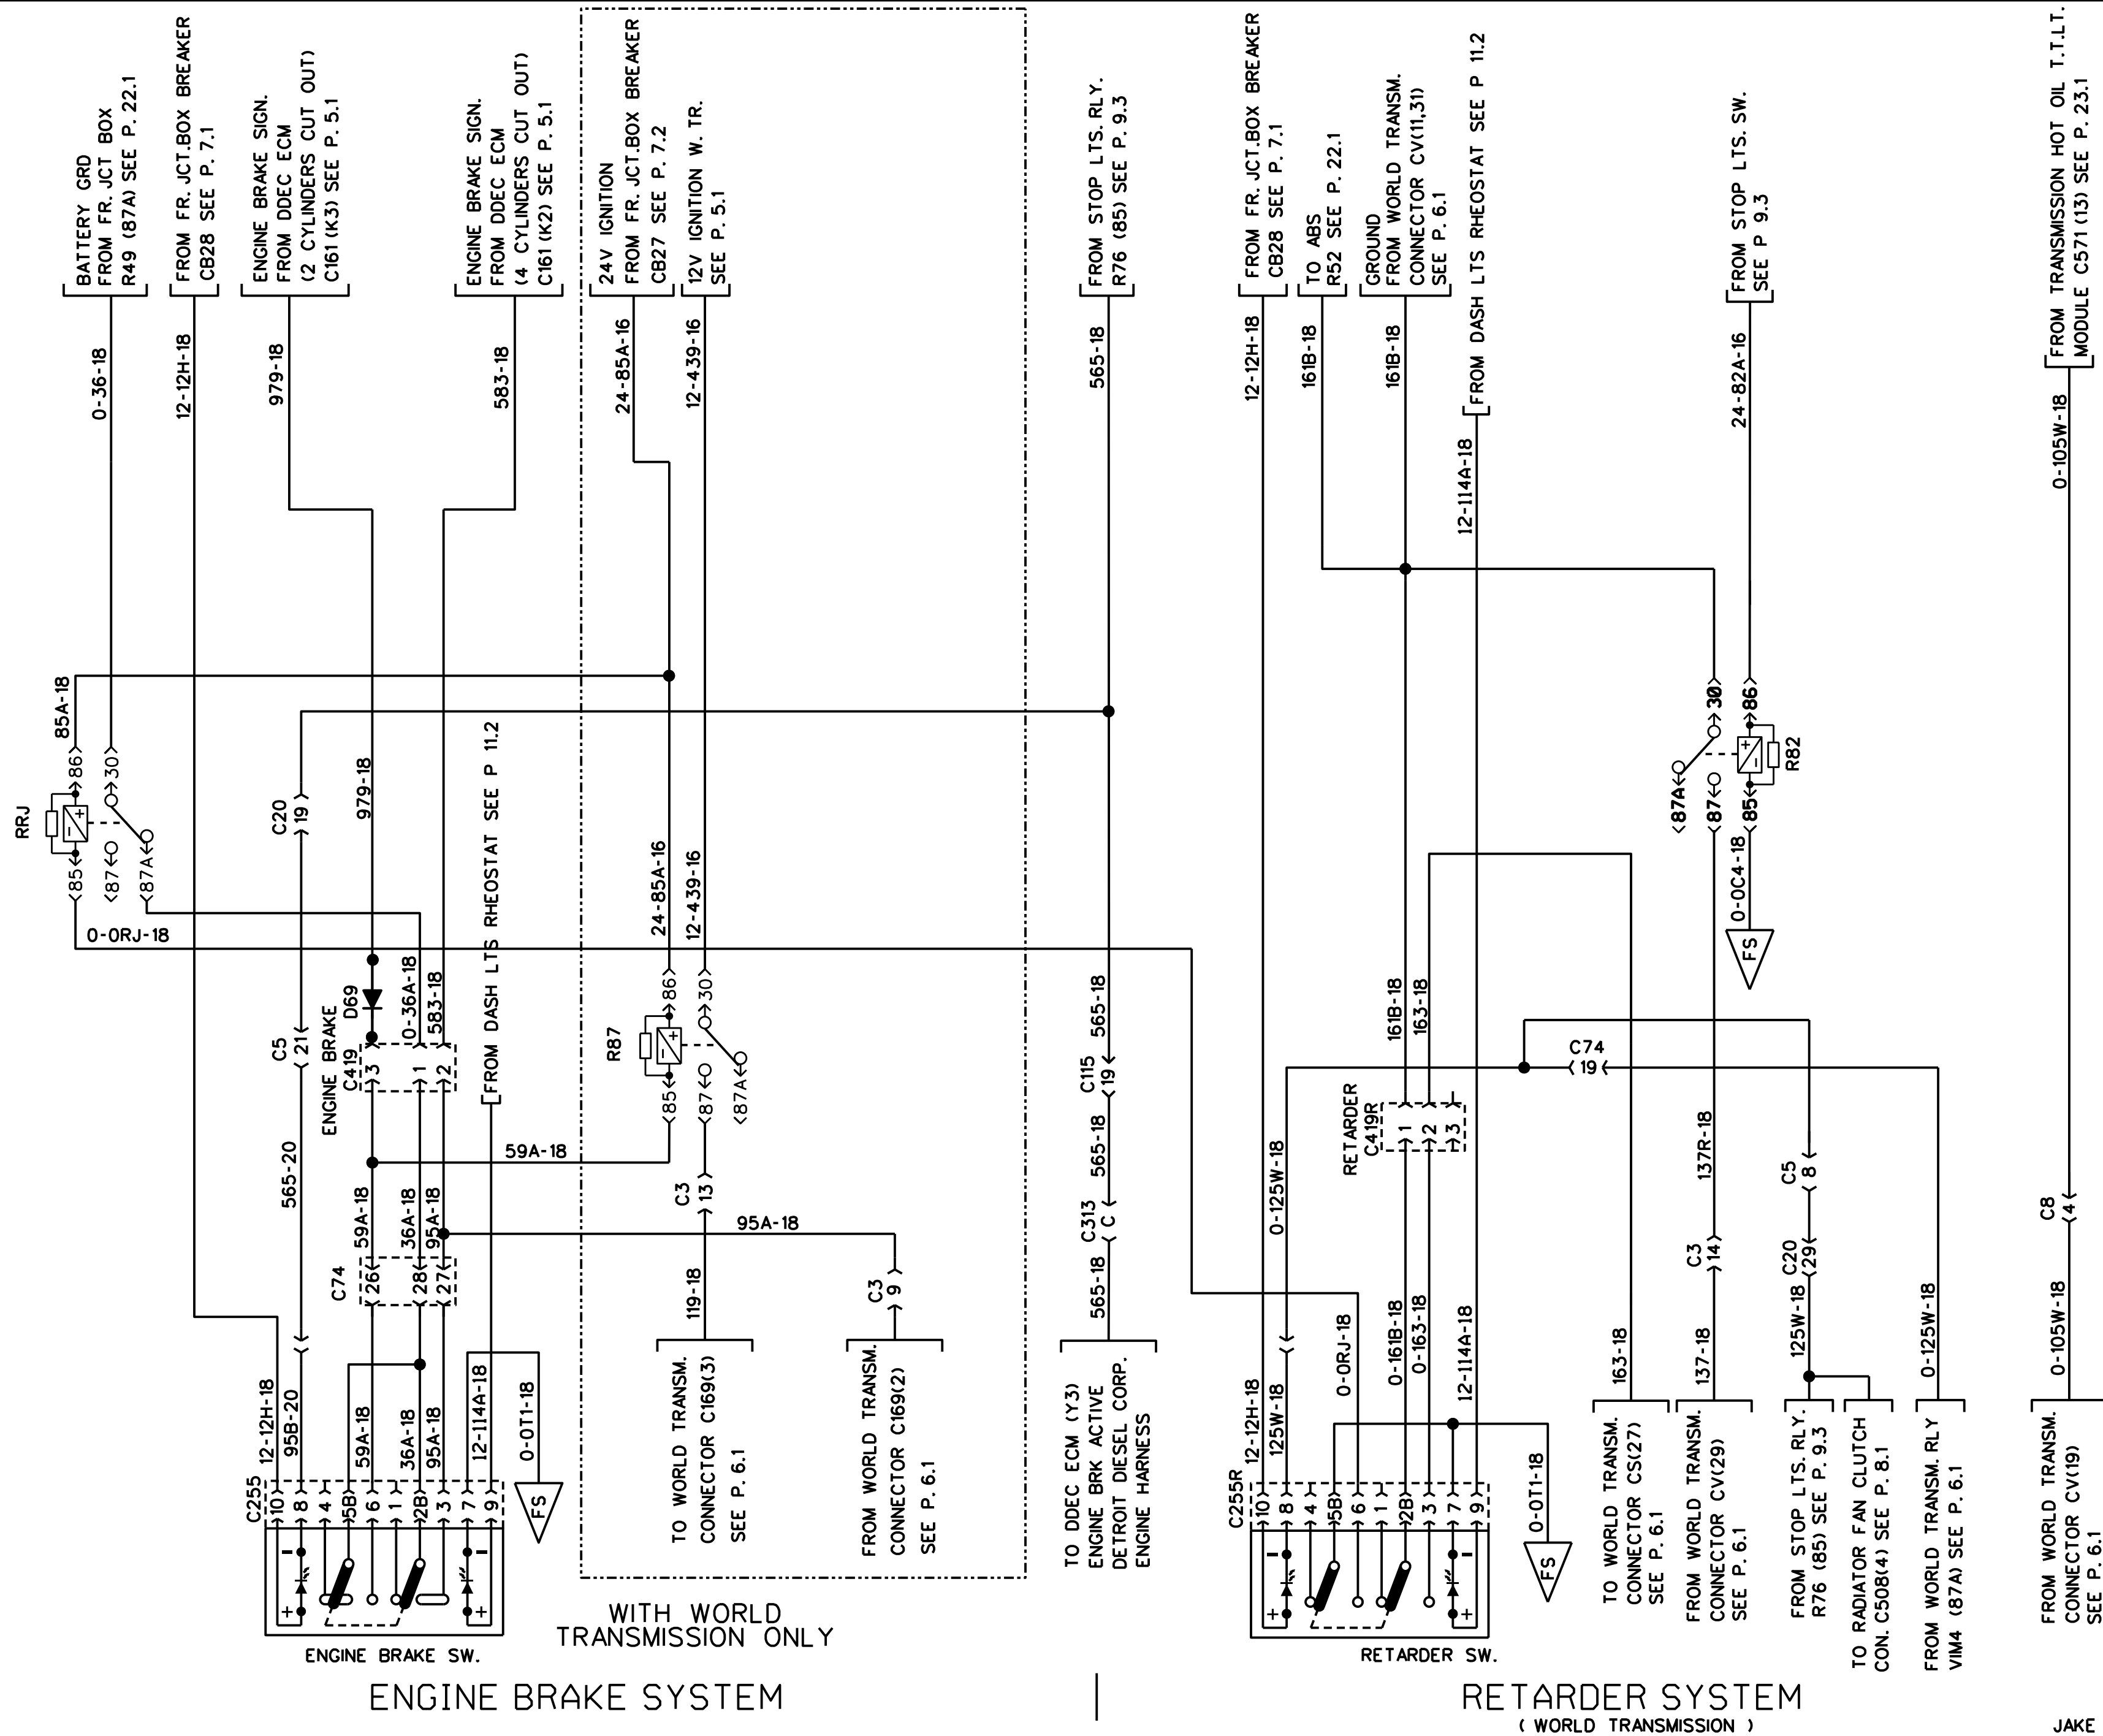


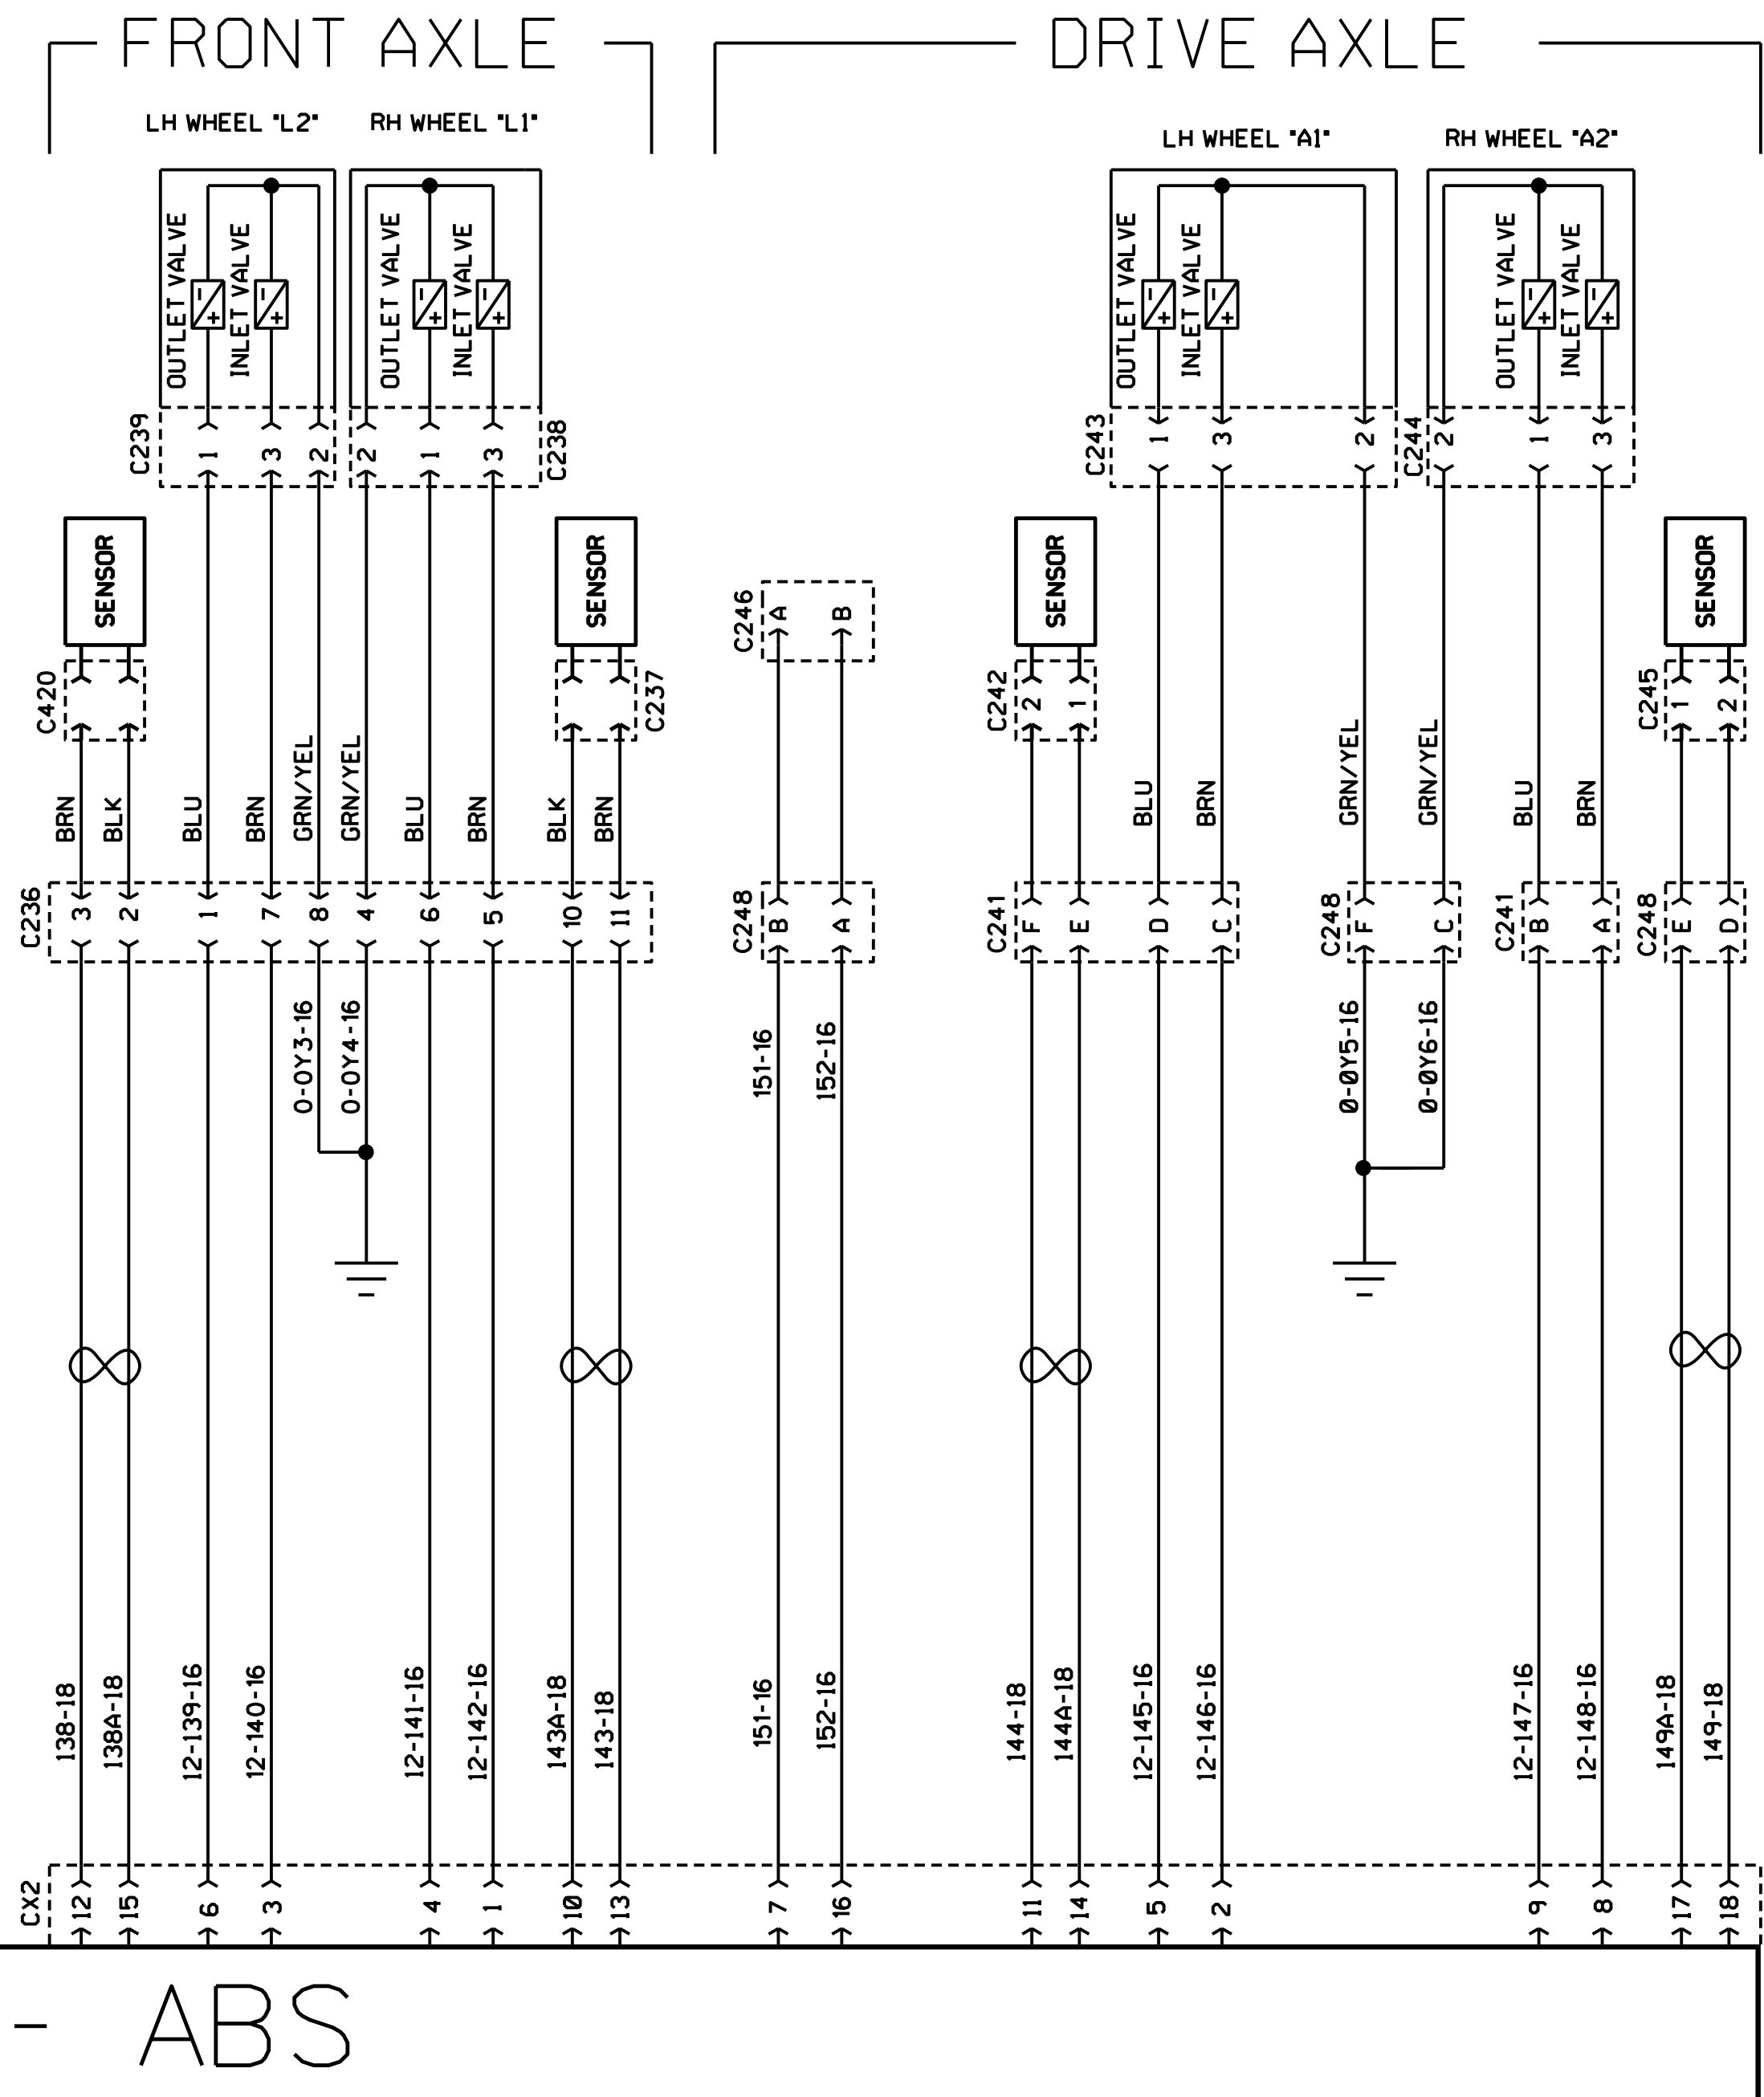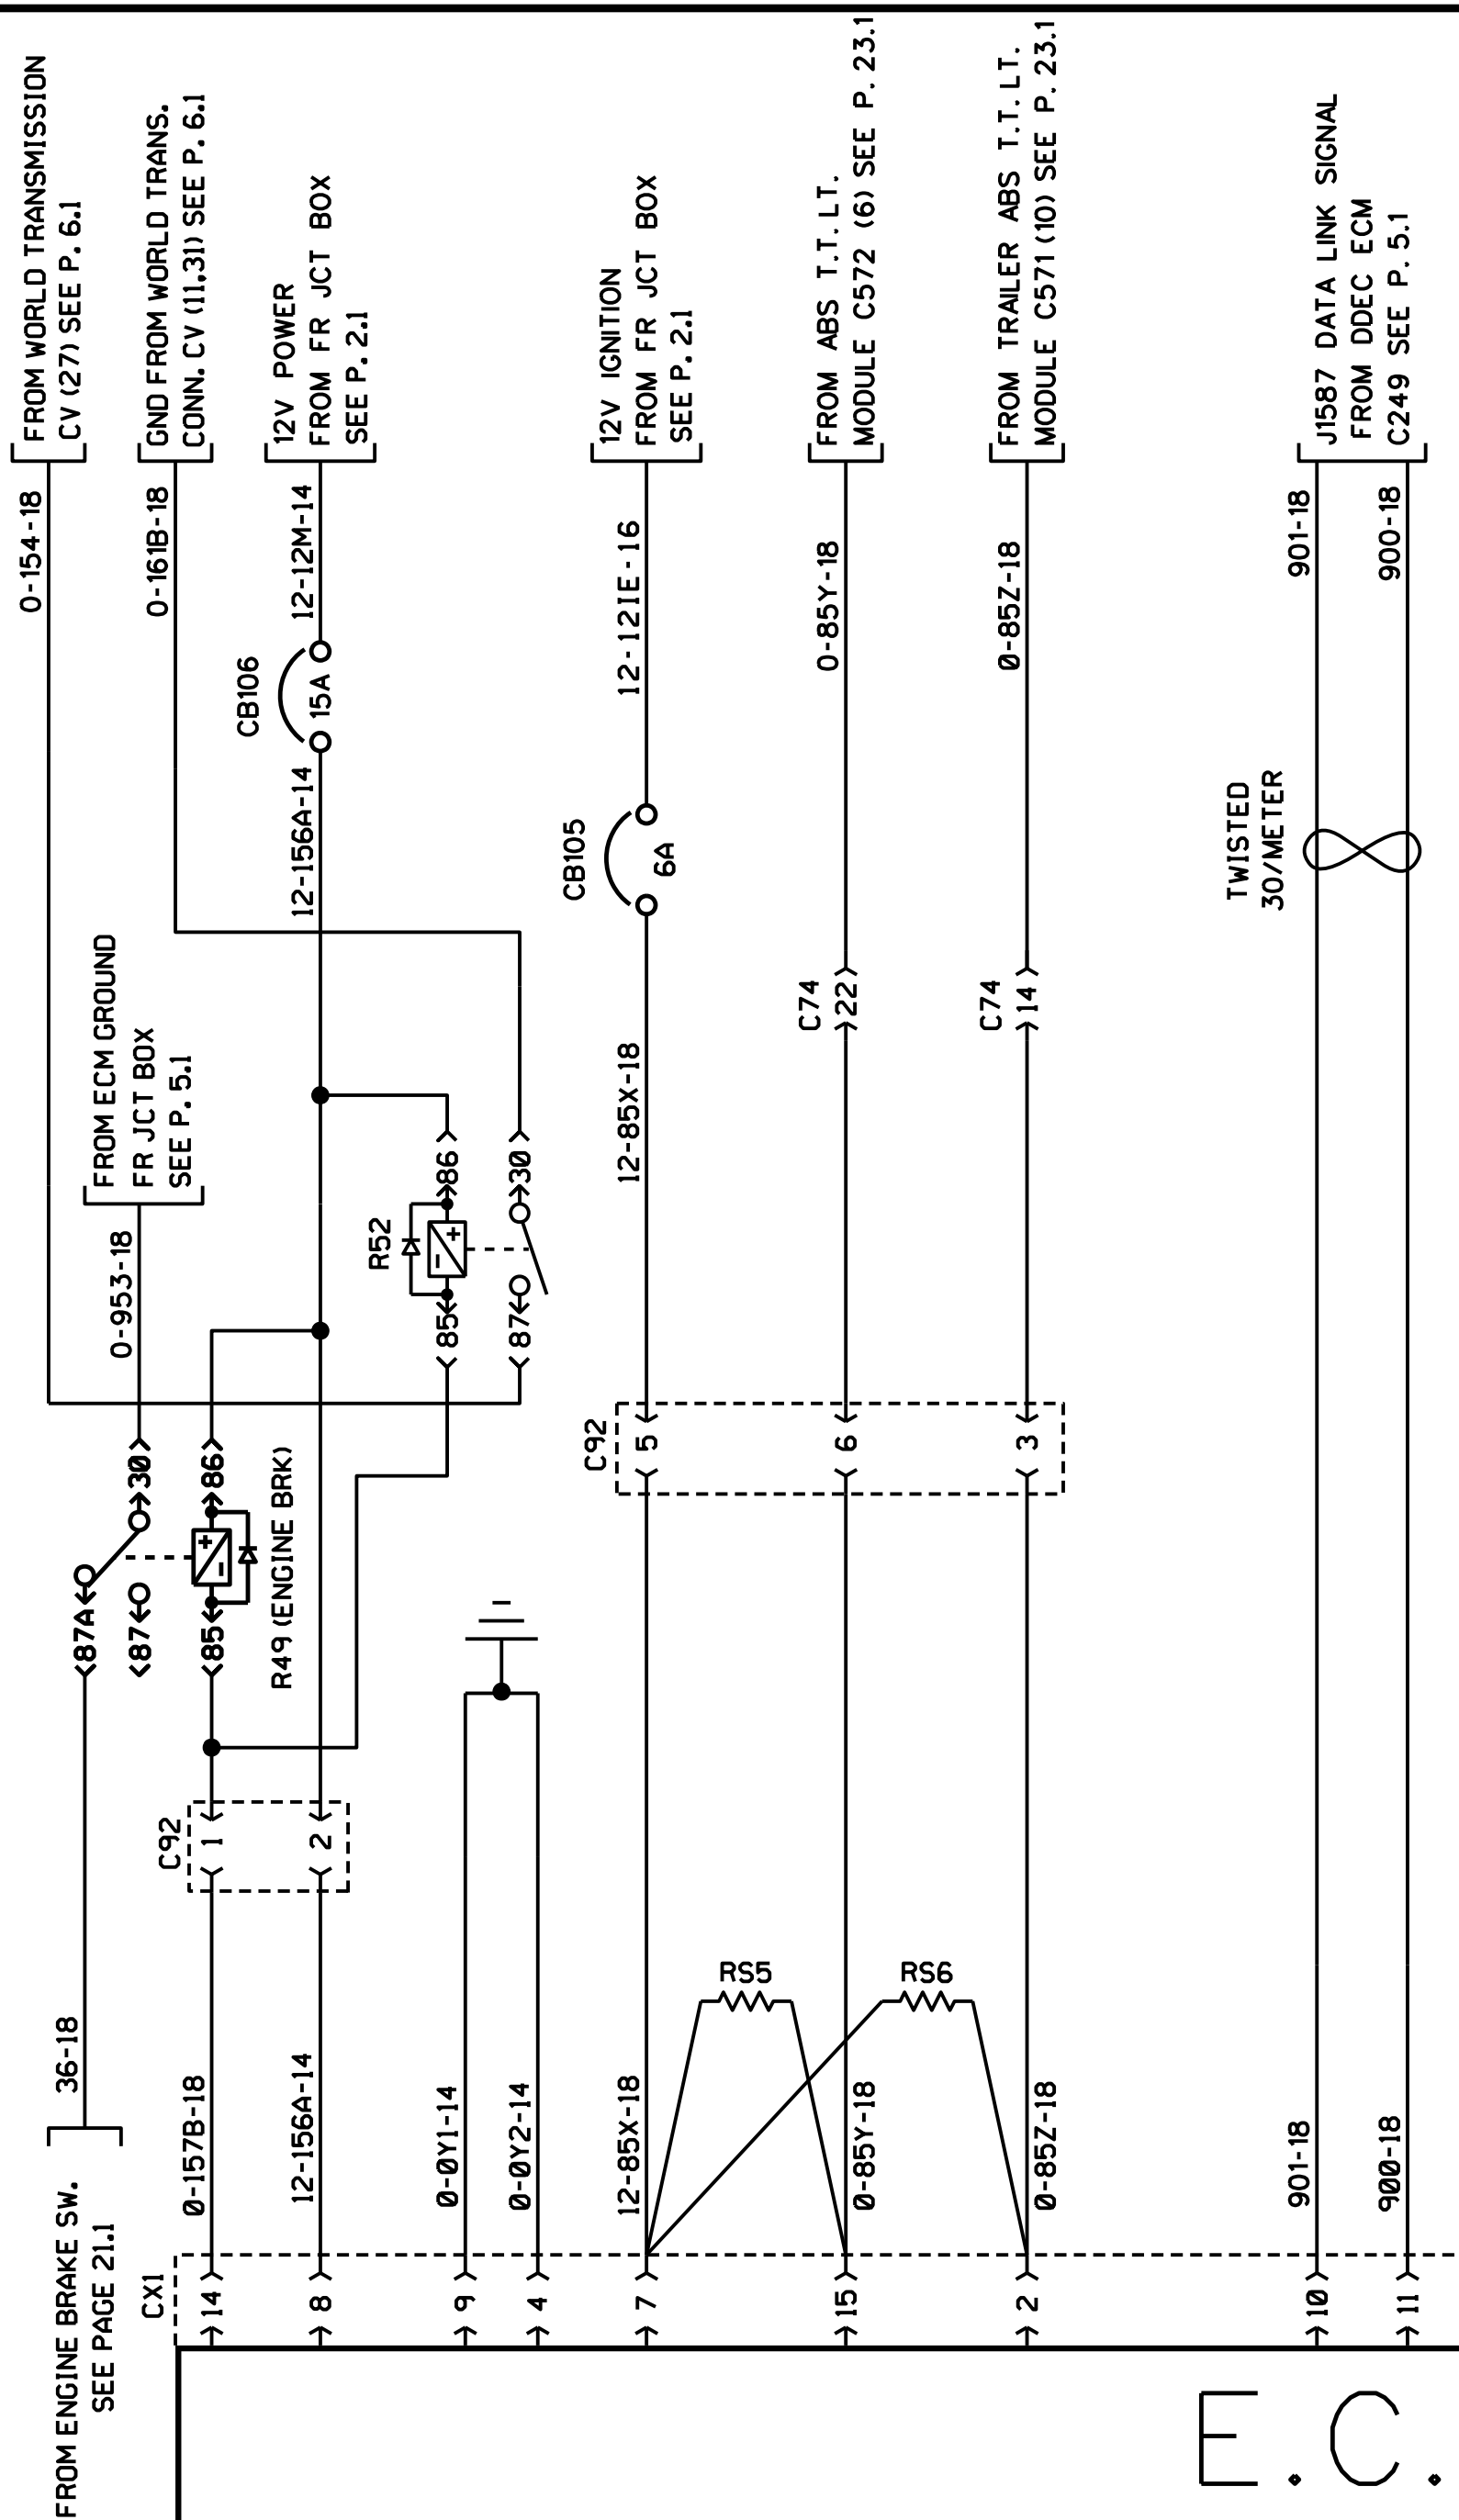

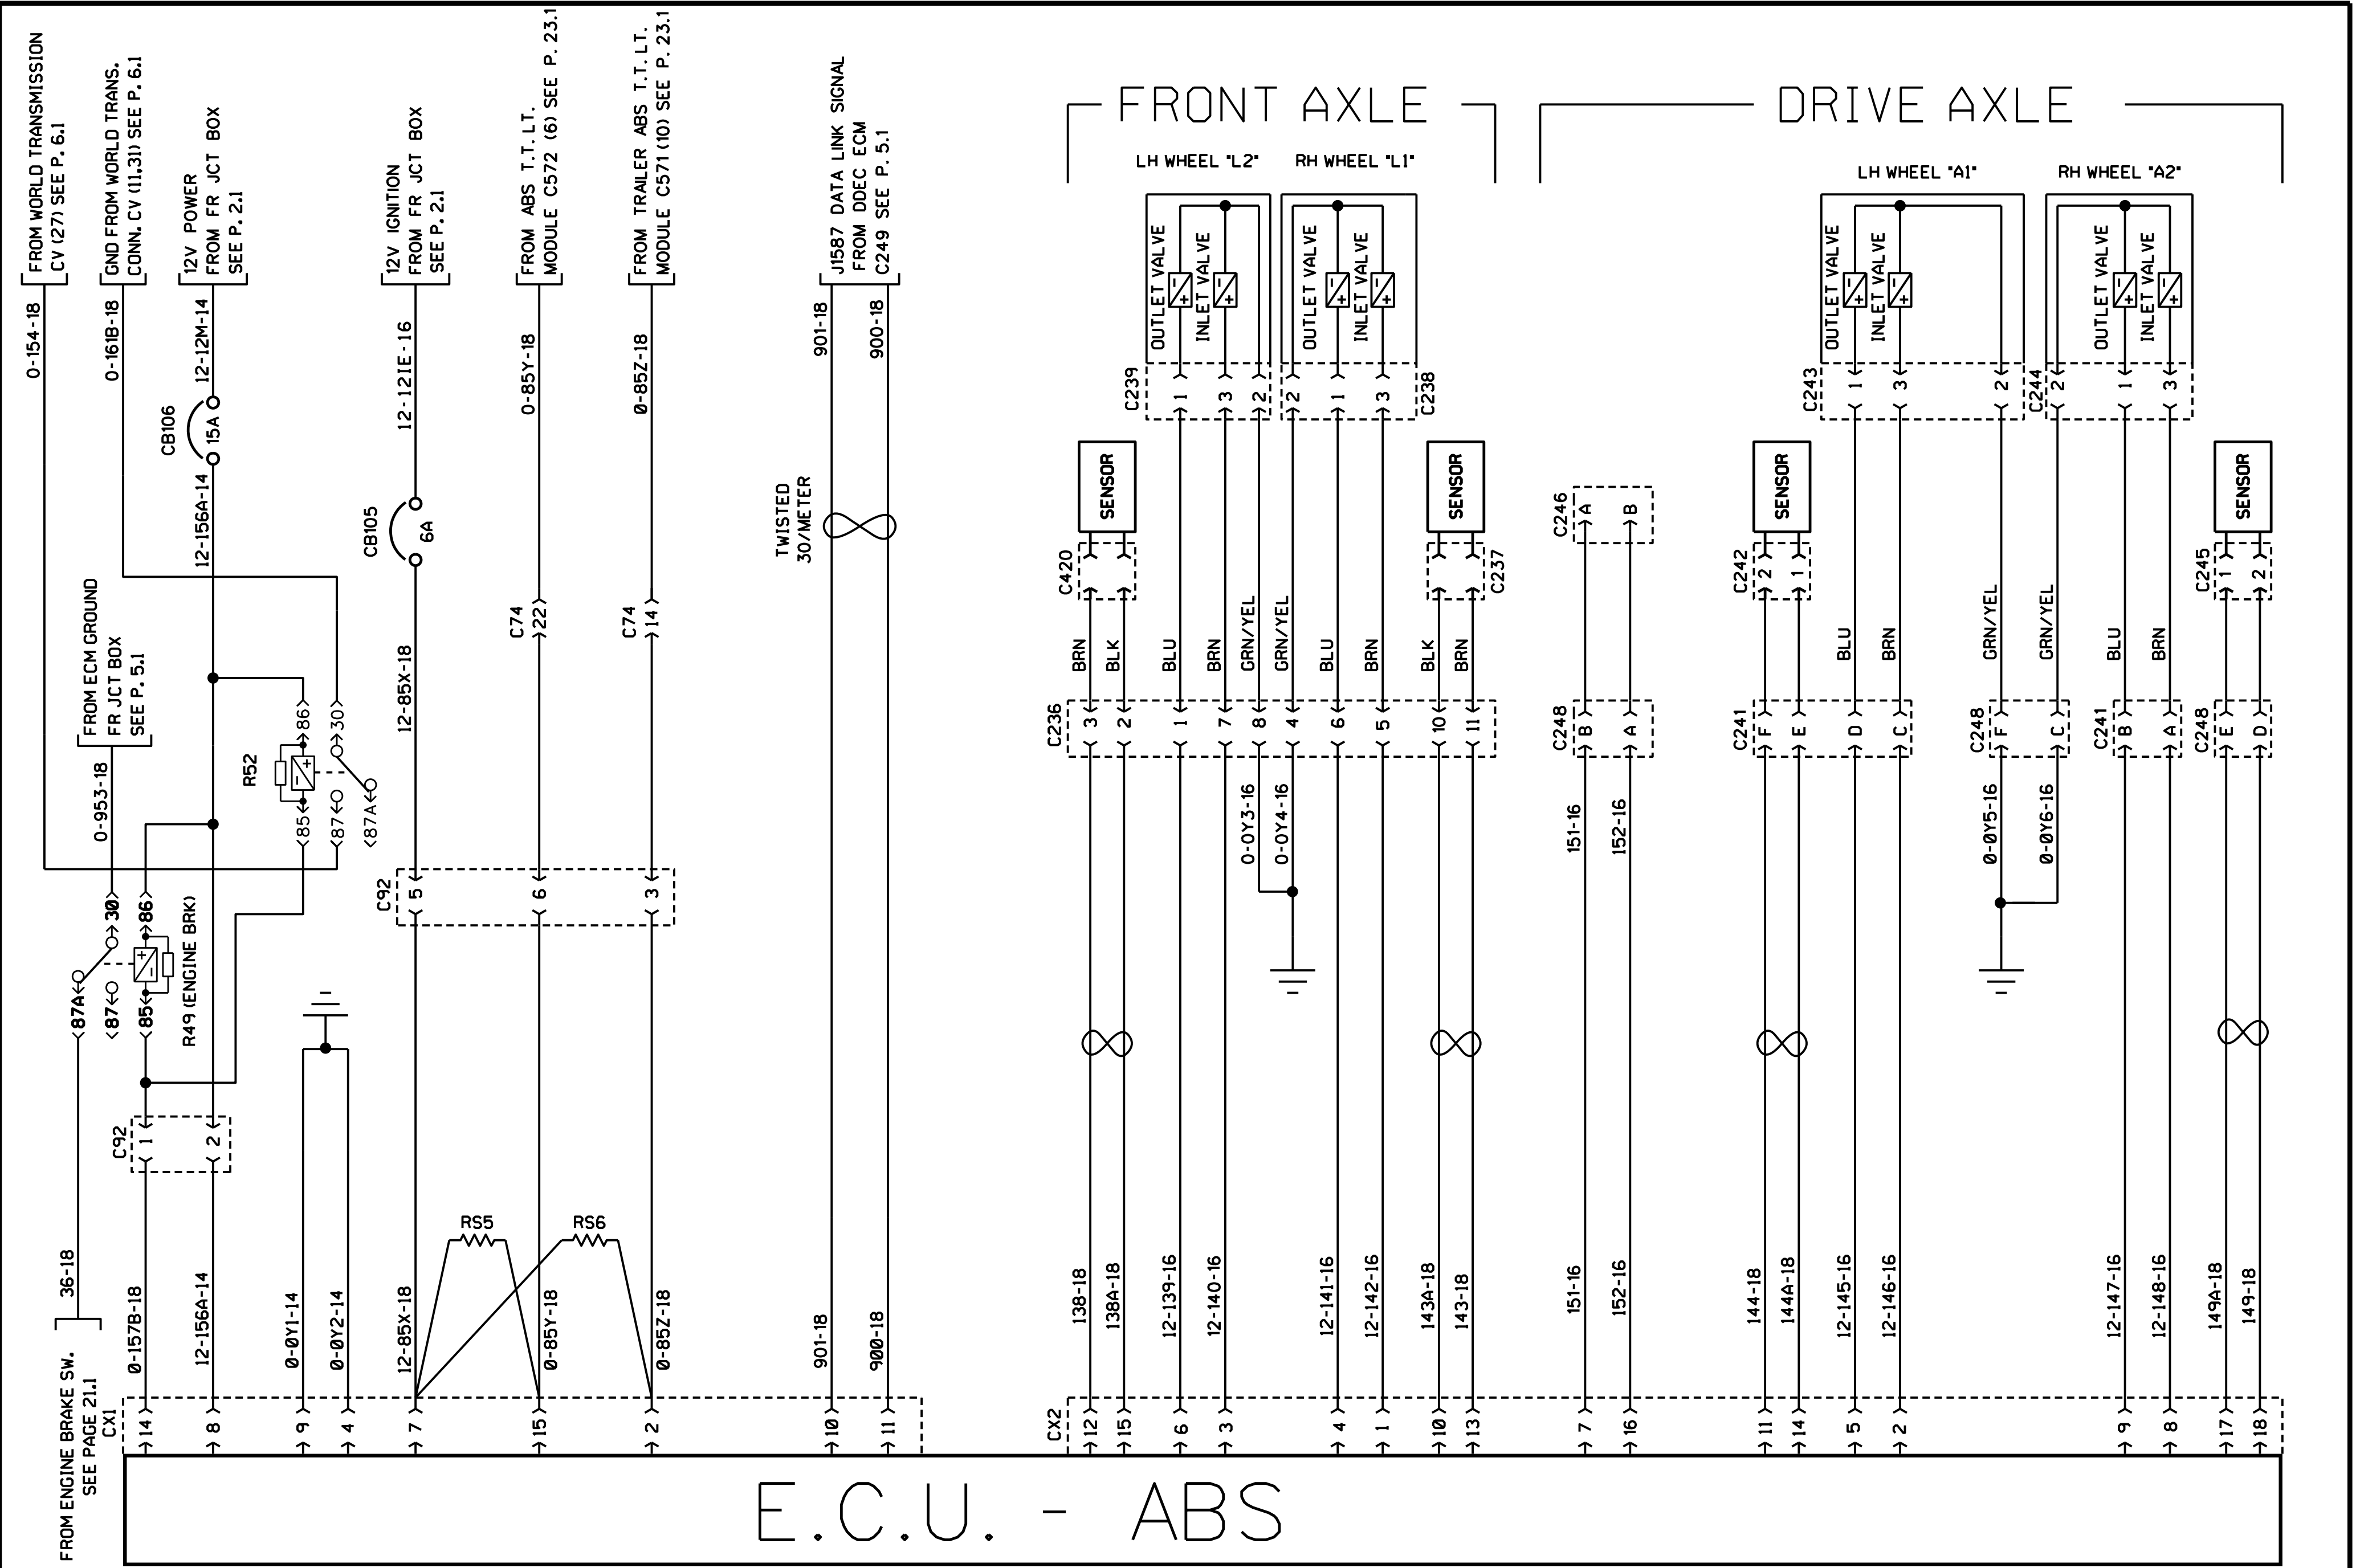

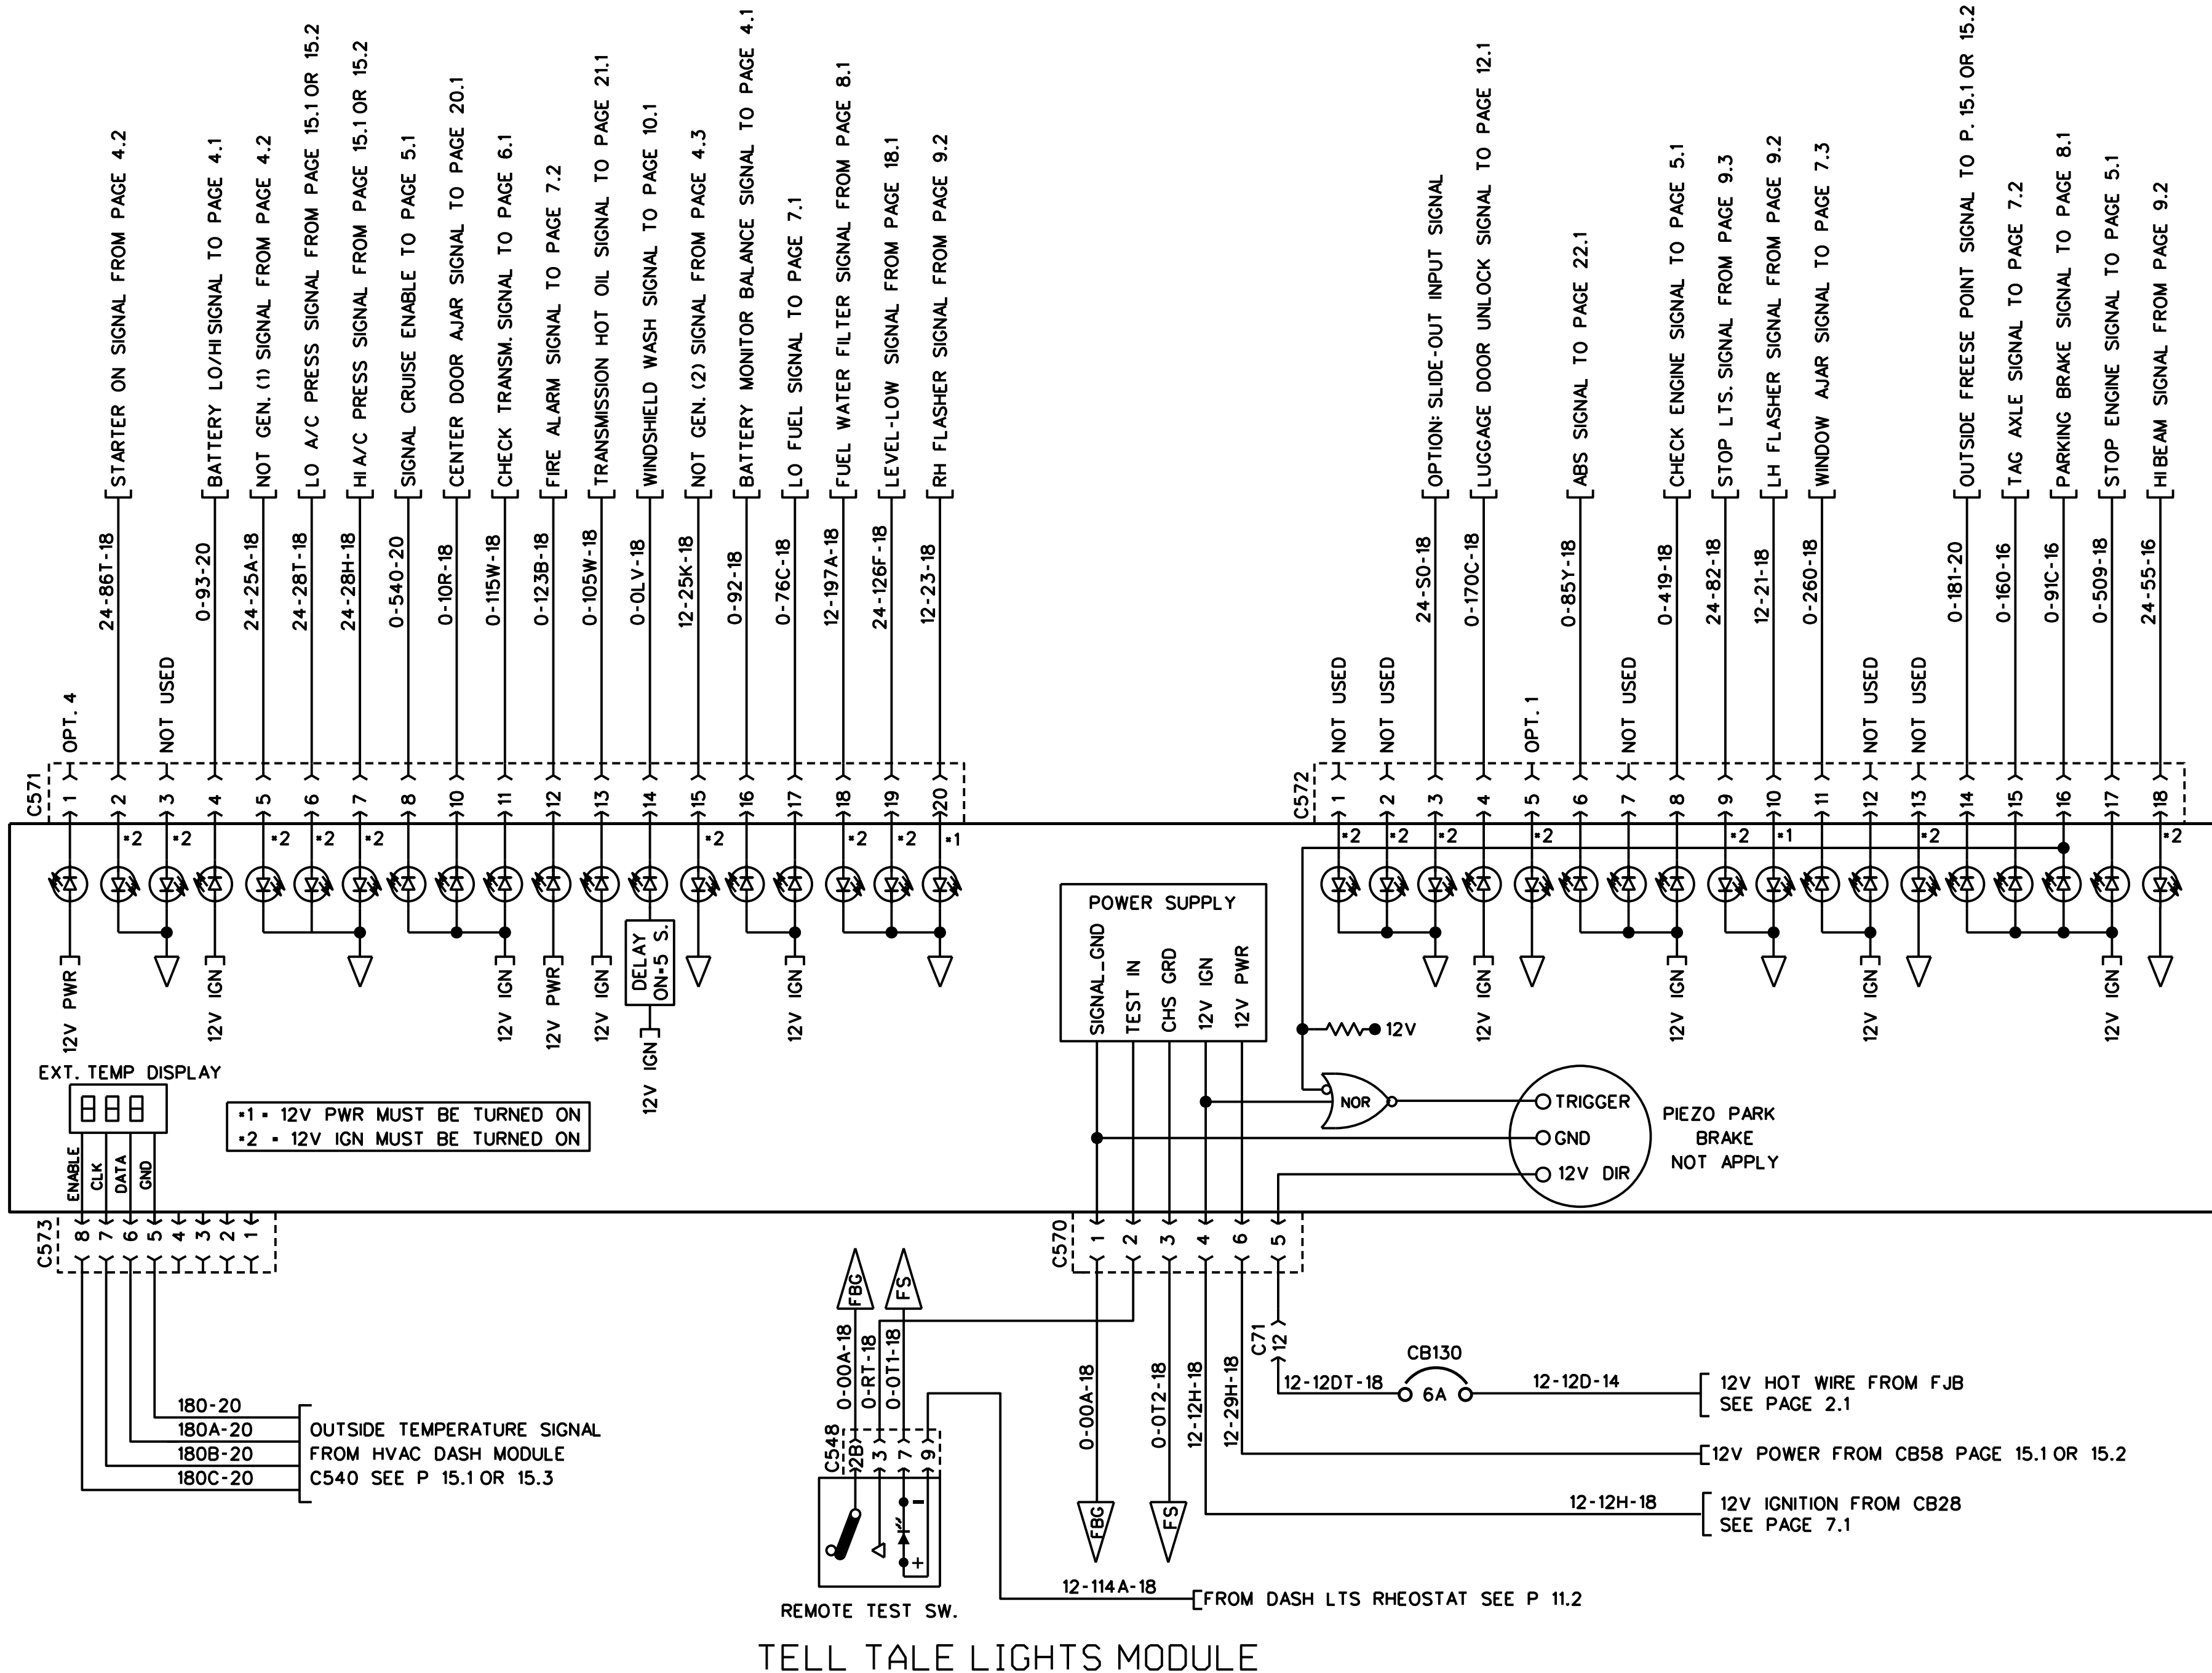



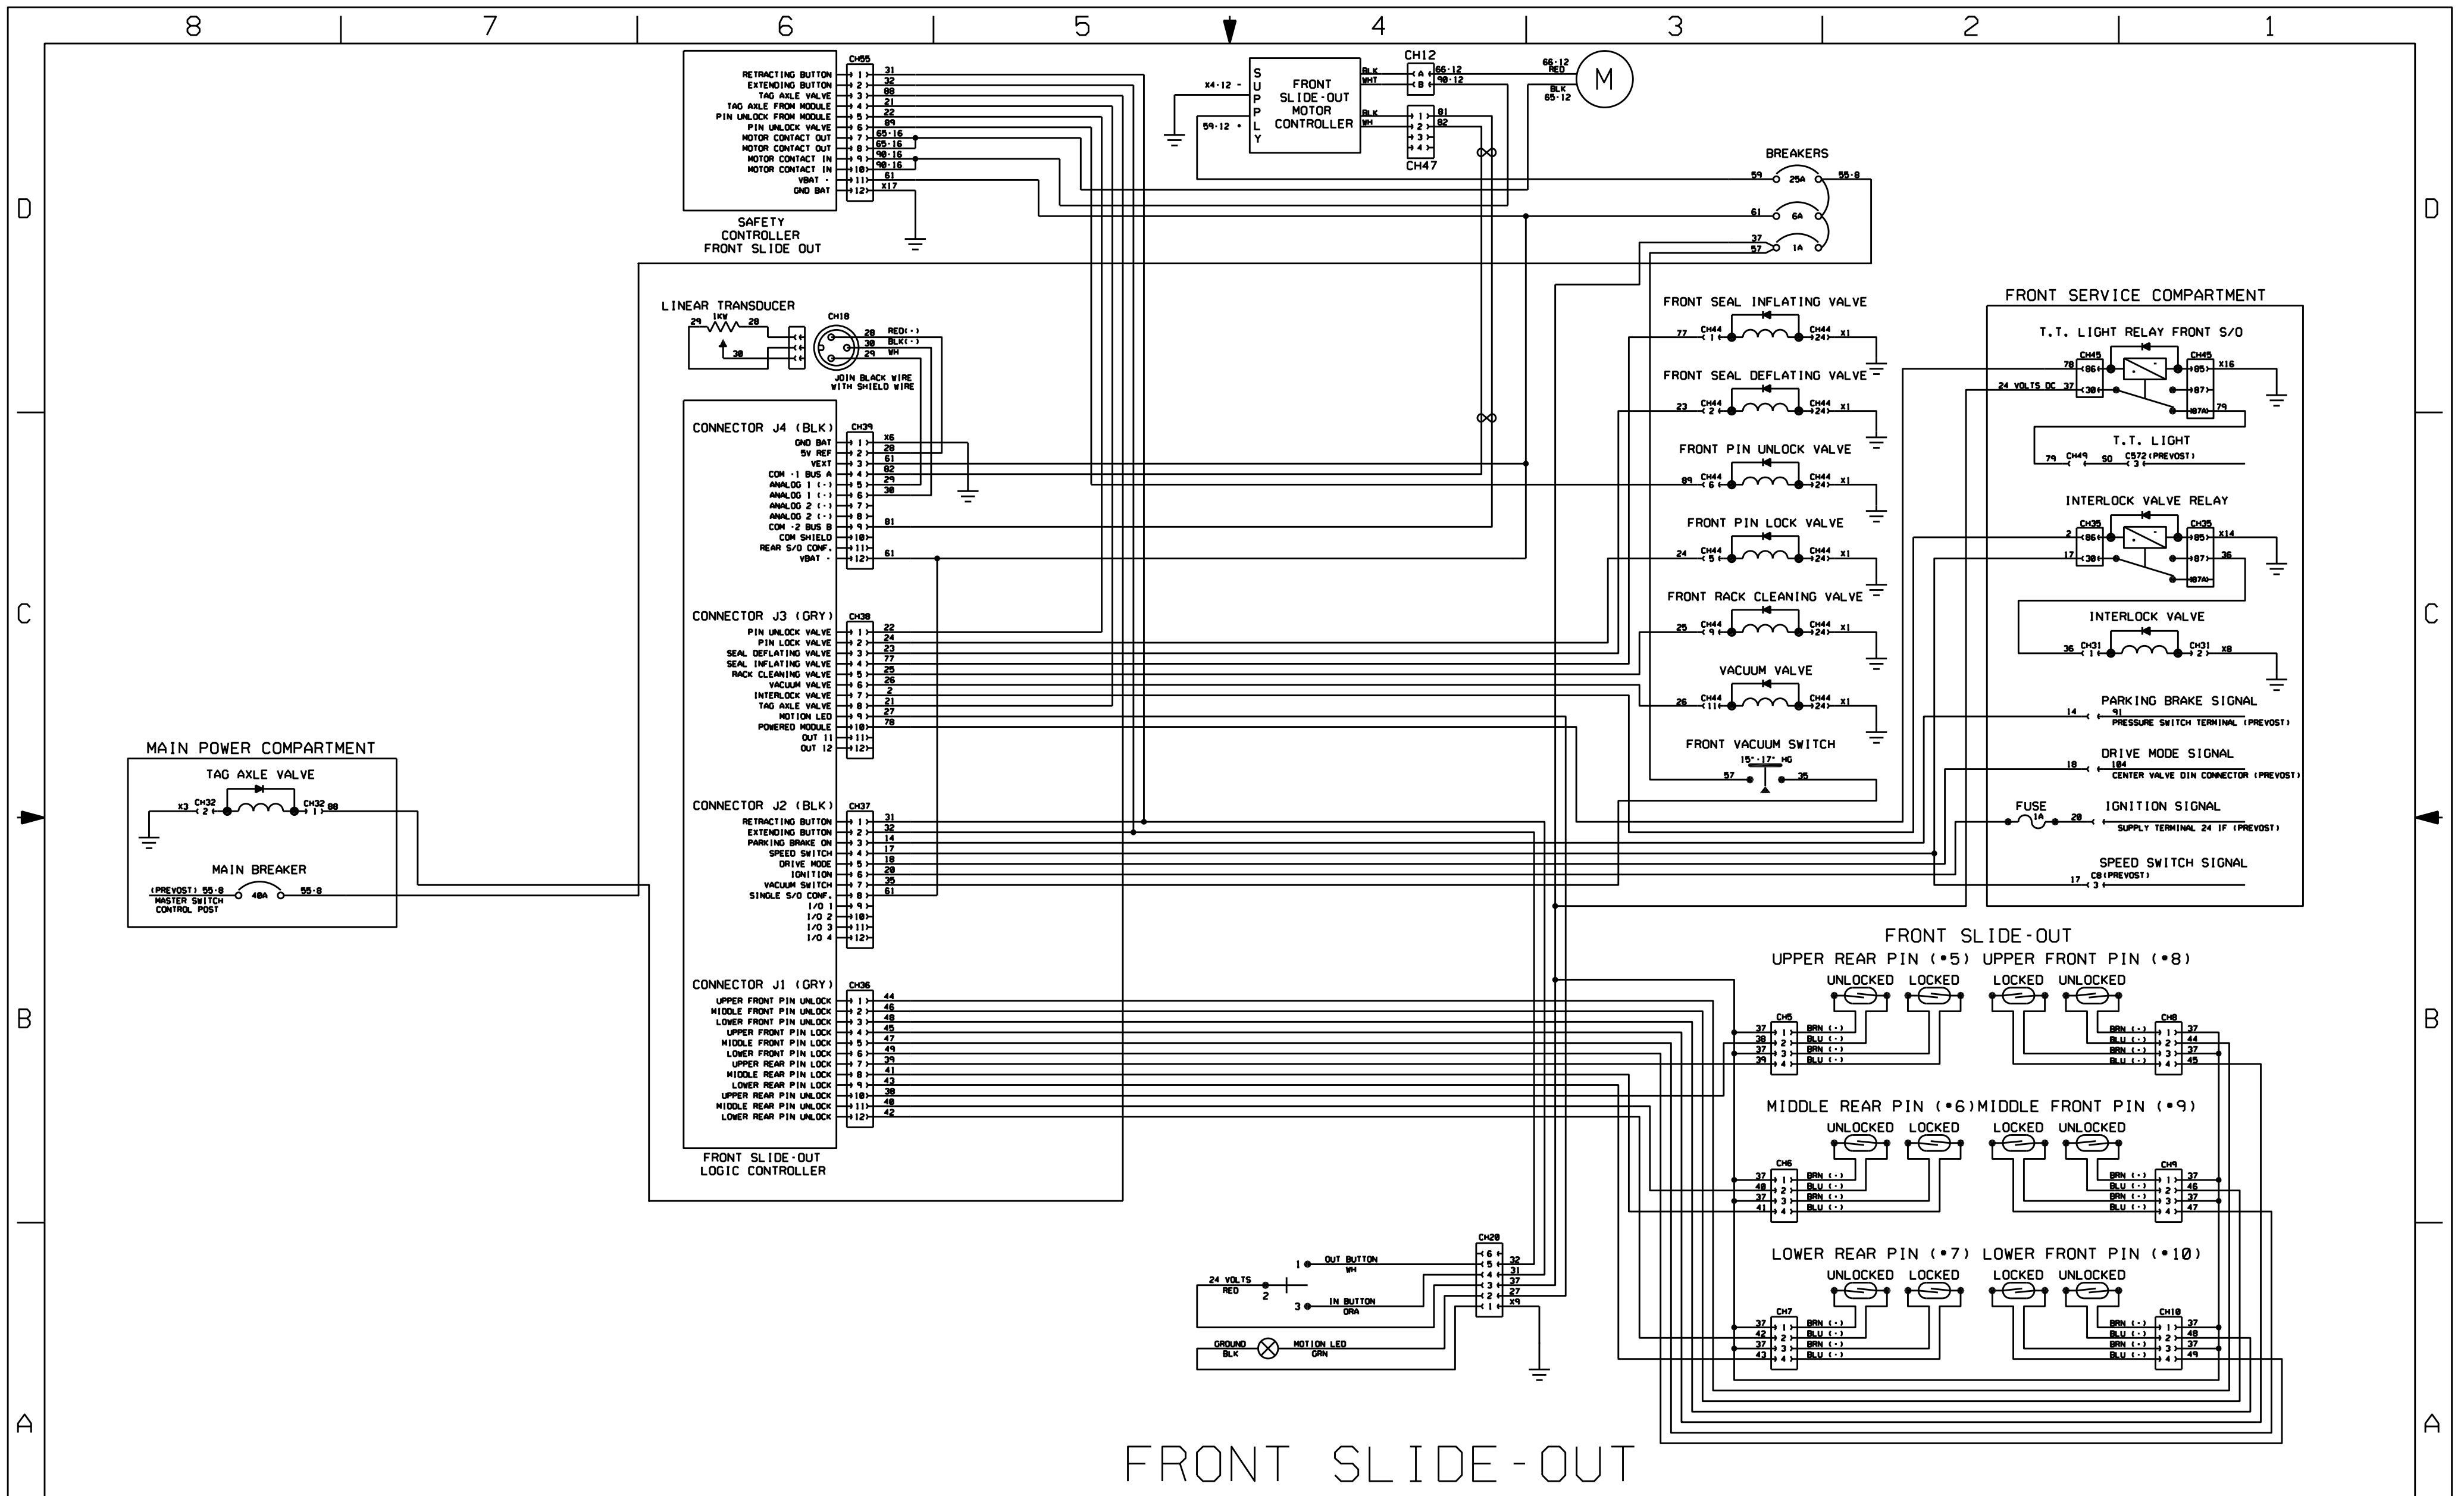


PREVOST

WIRING DIAGRAM

NO: 0060994

PAGE: 24.1

REVISION 04

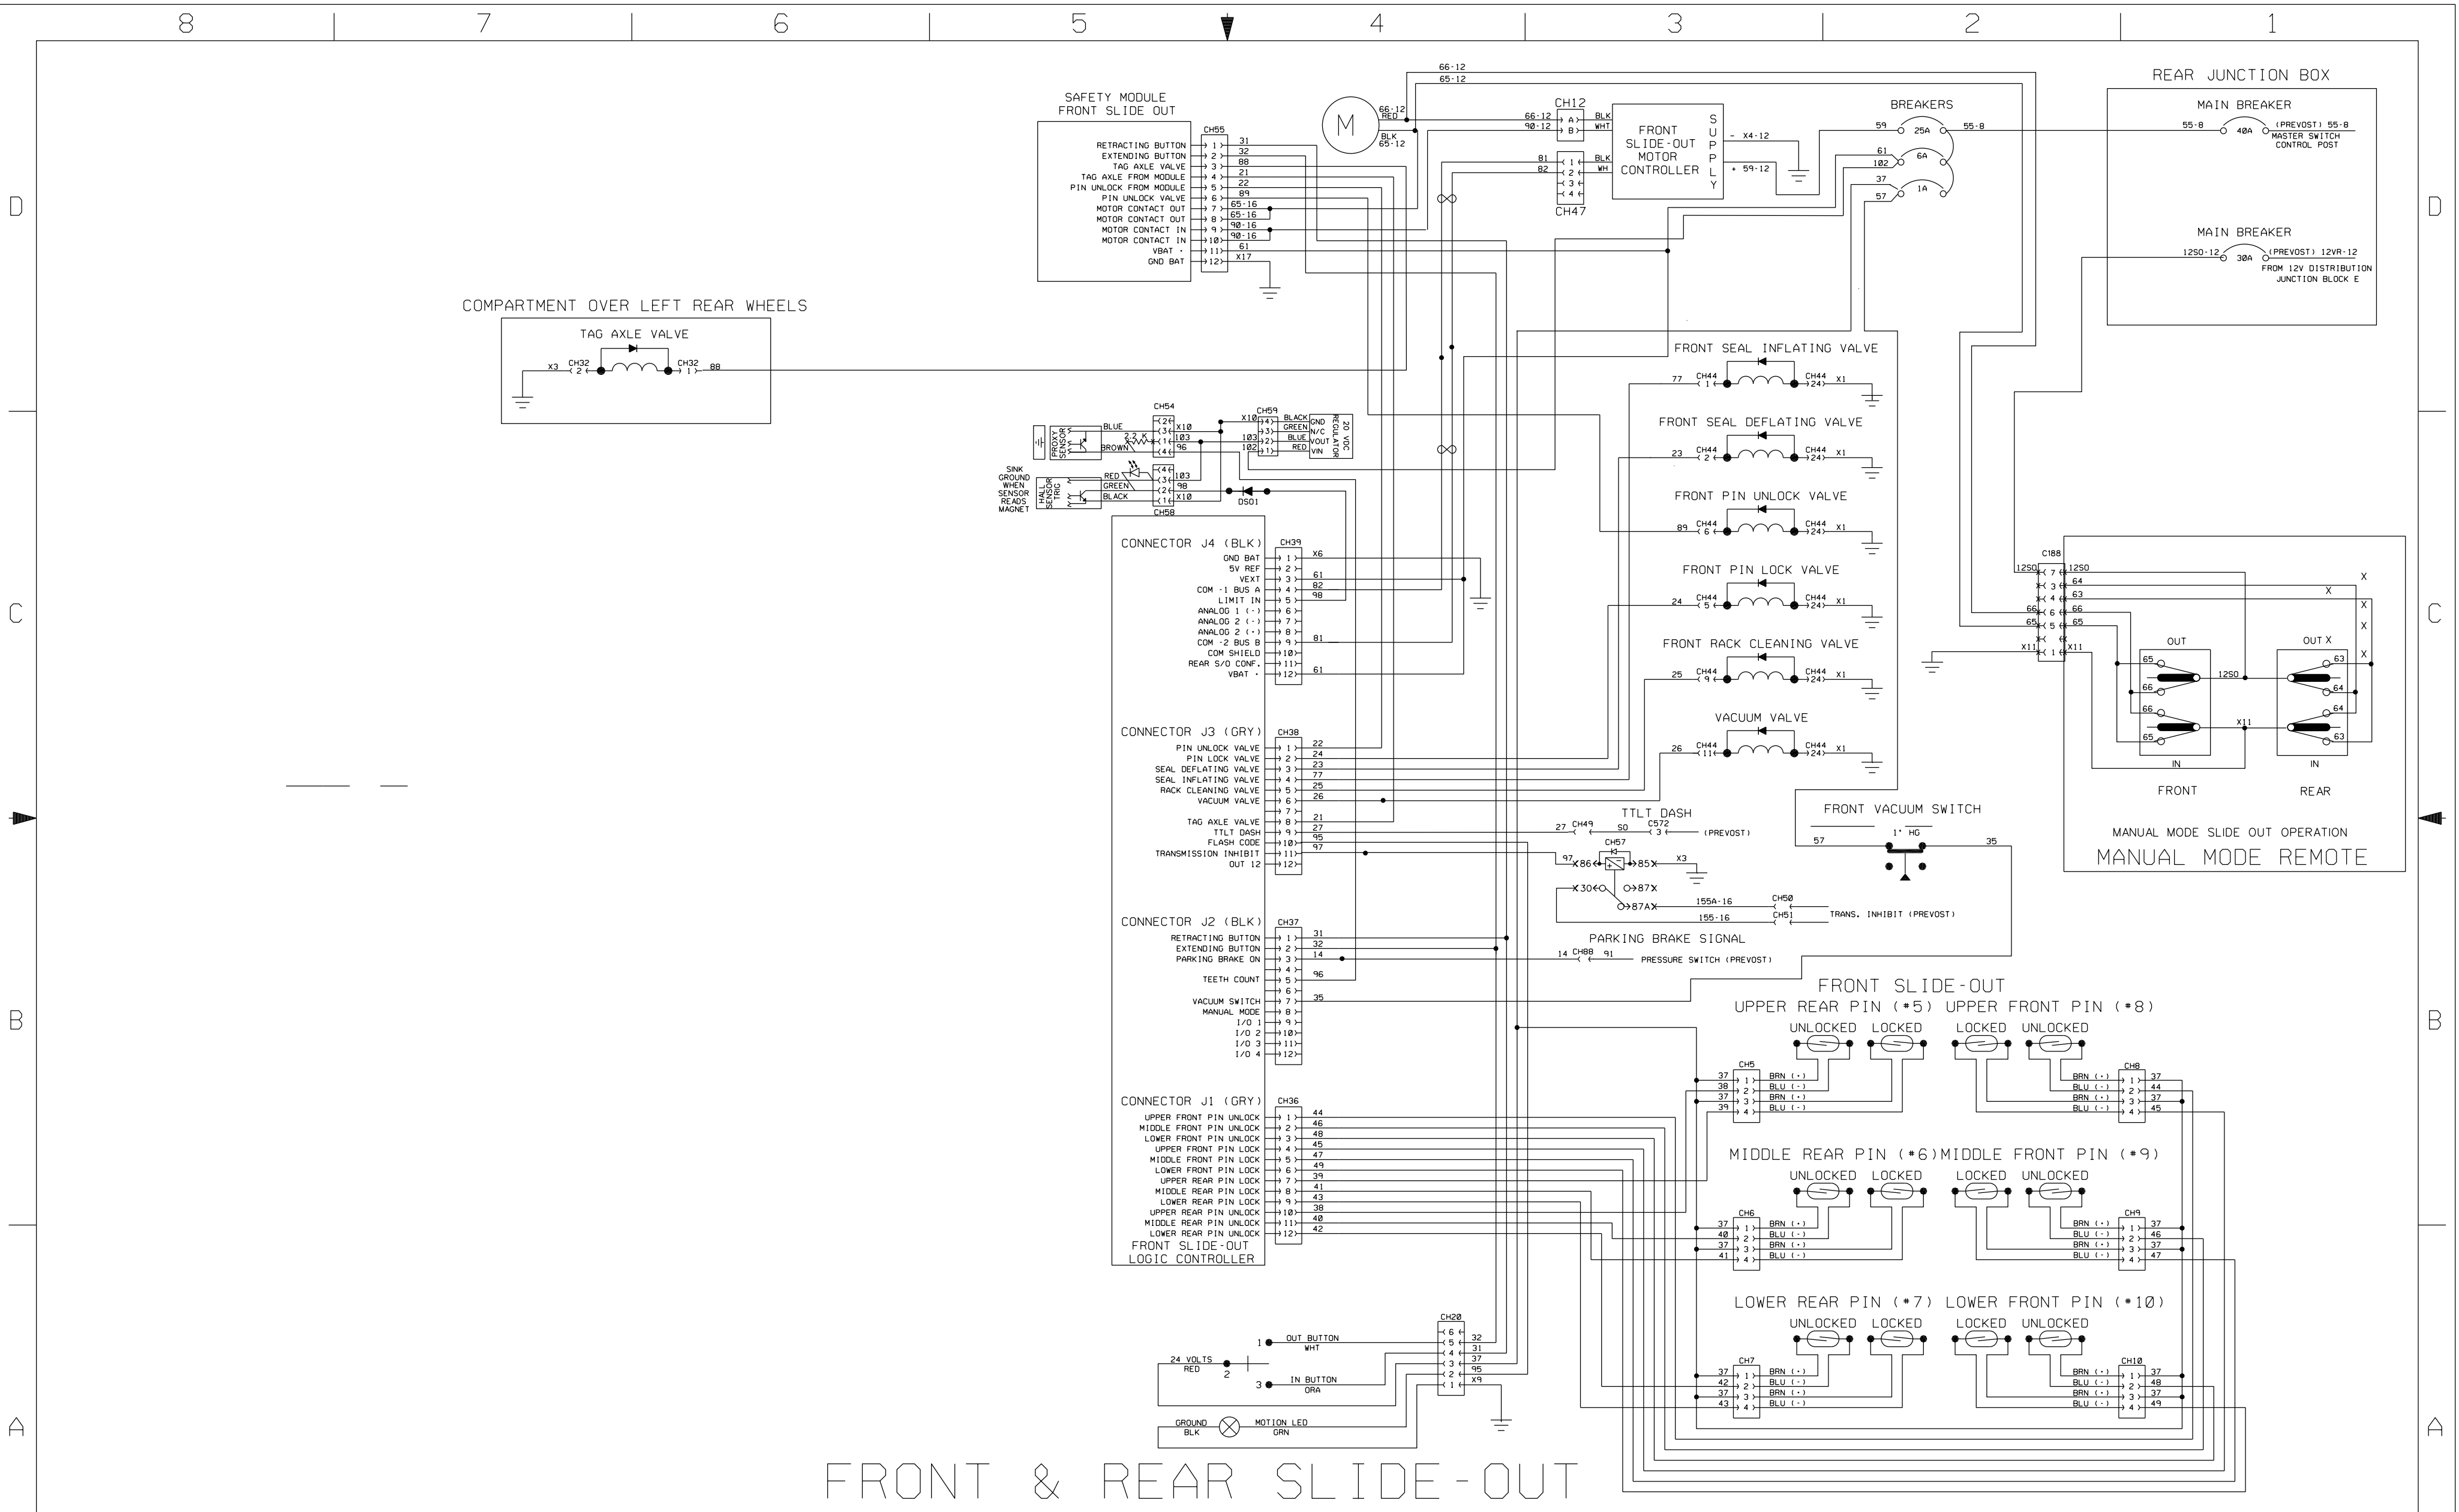

FRONT & REAR SLIDE-OUT

PREVOST



WIRING DIAGRAM

NO:


0060994

PAGE: 24.1

 REVISION 08

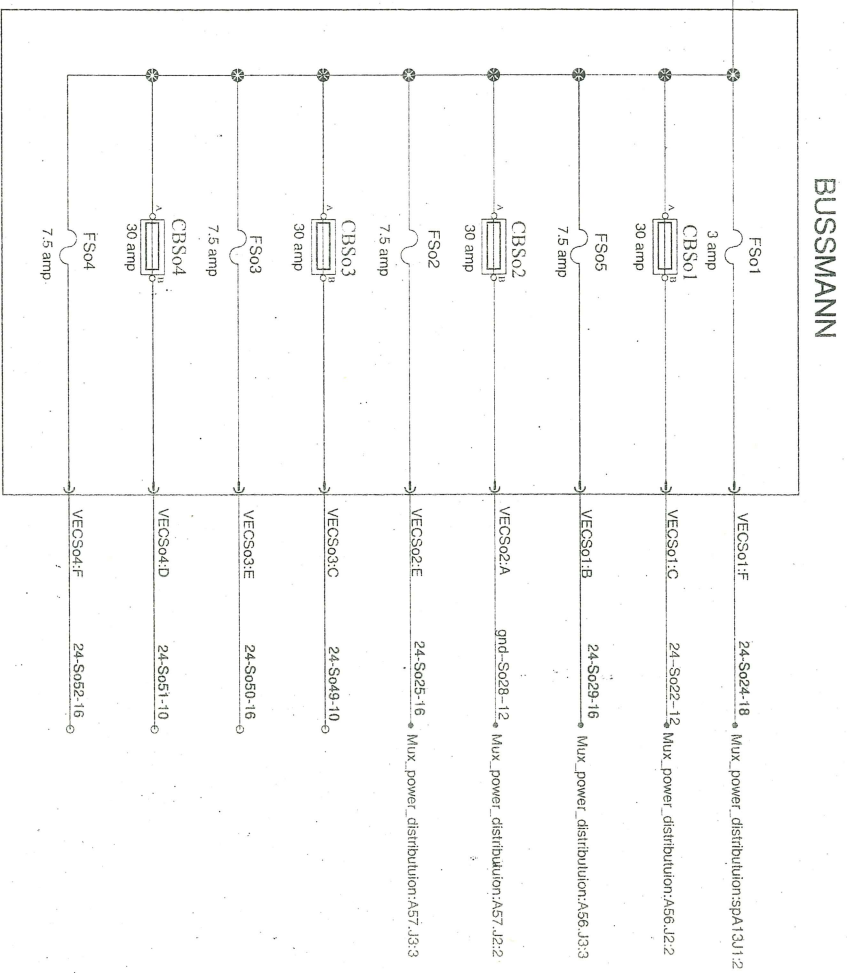


MULTIPLEX SLIDE-OUT 24V POWER DISTRIBUTION

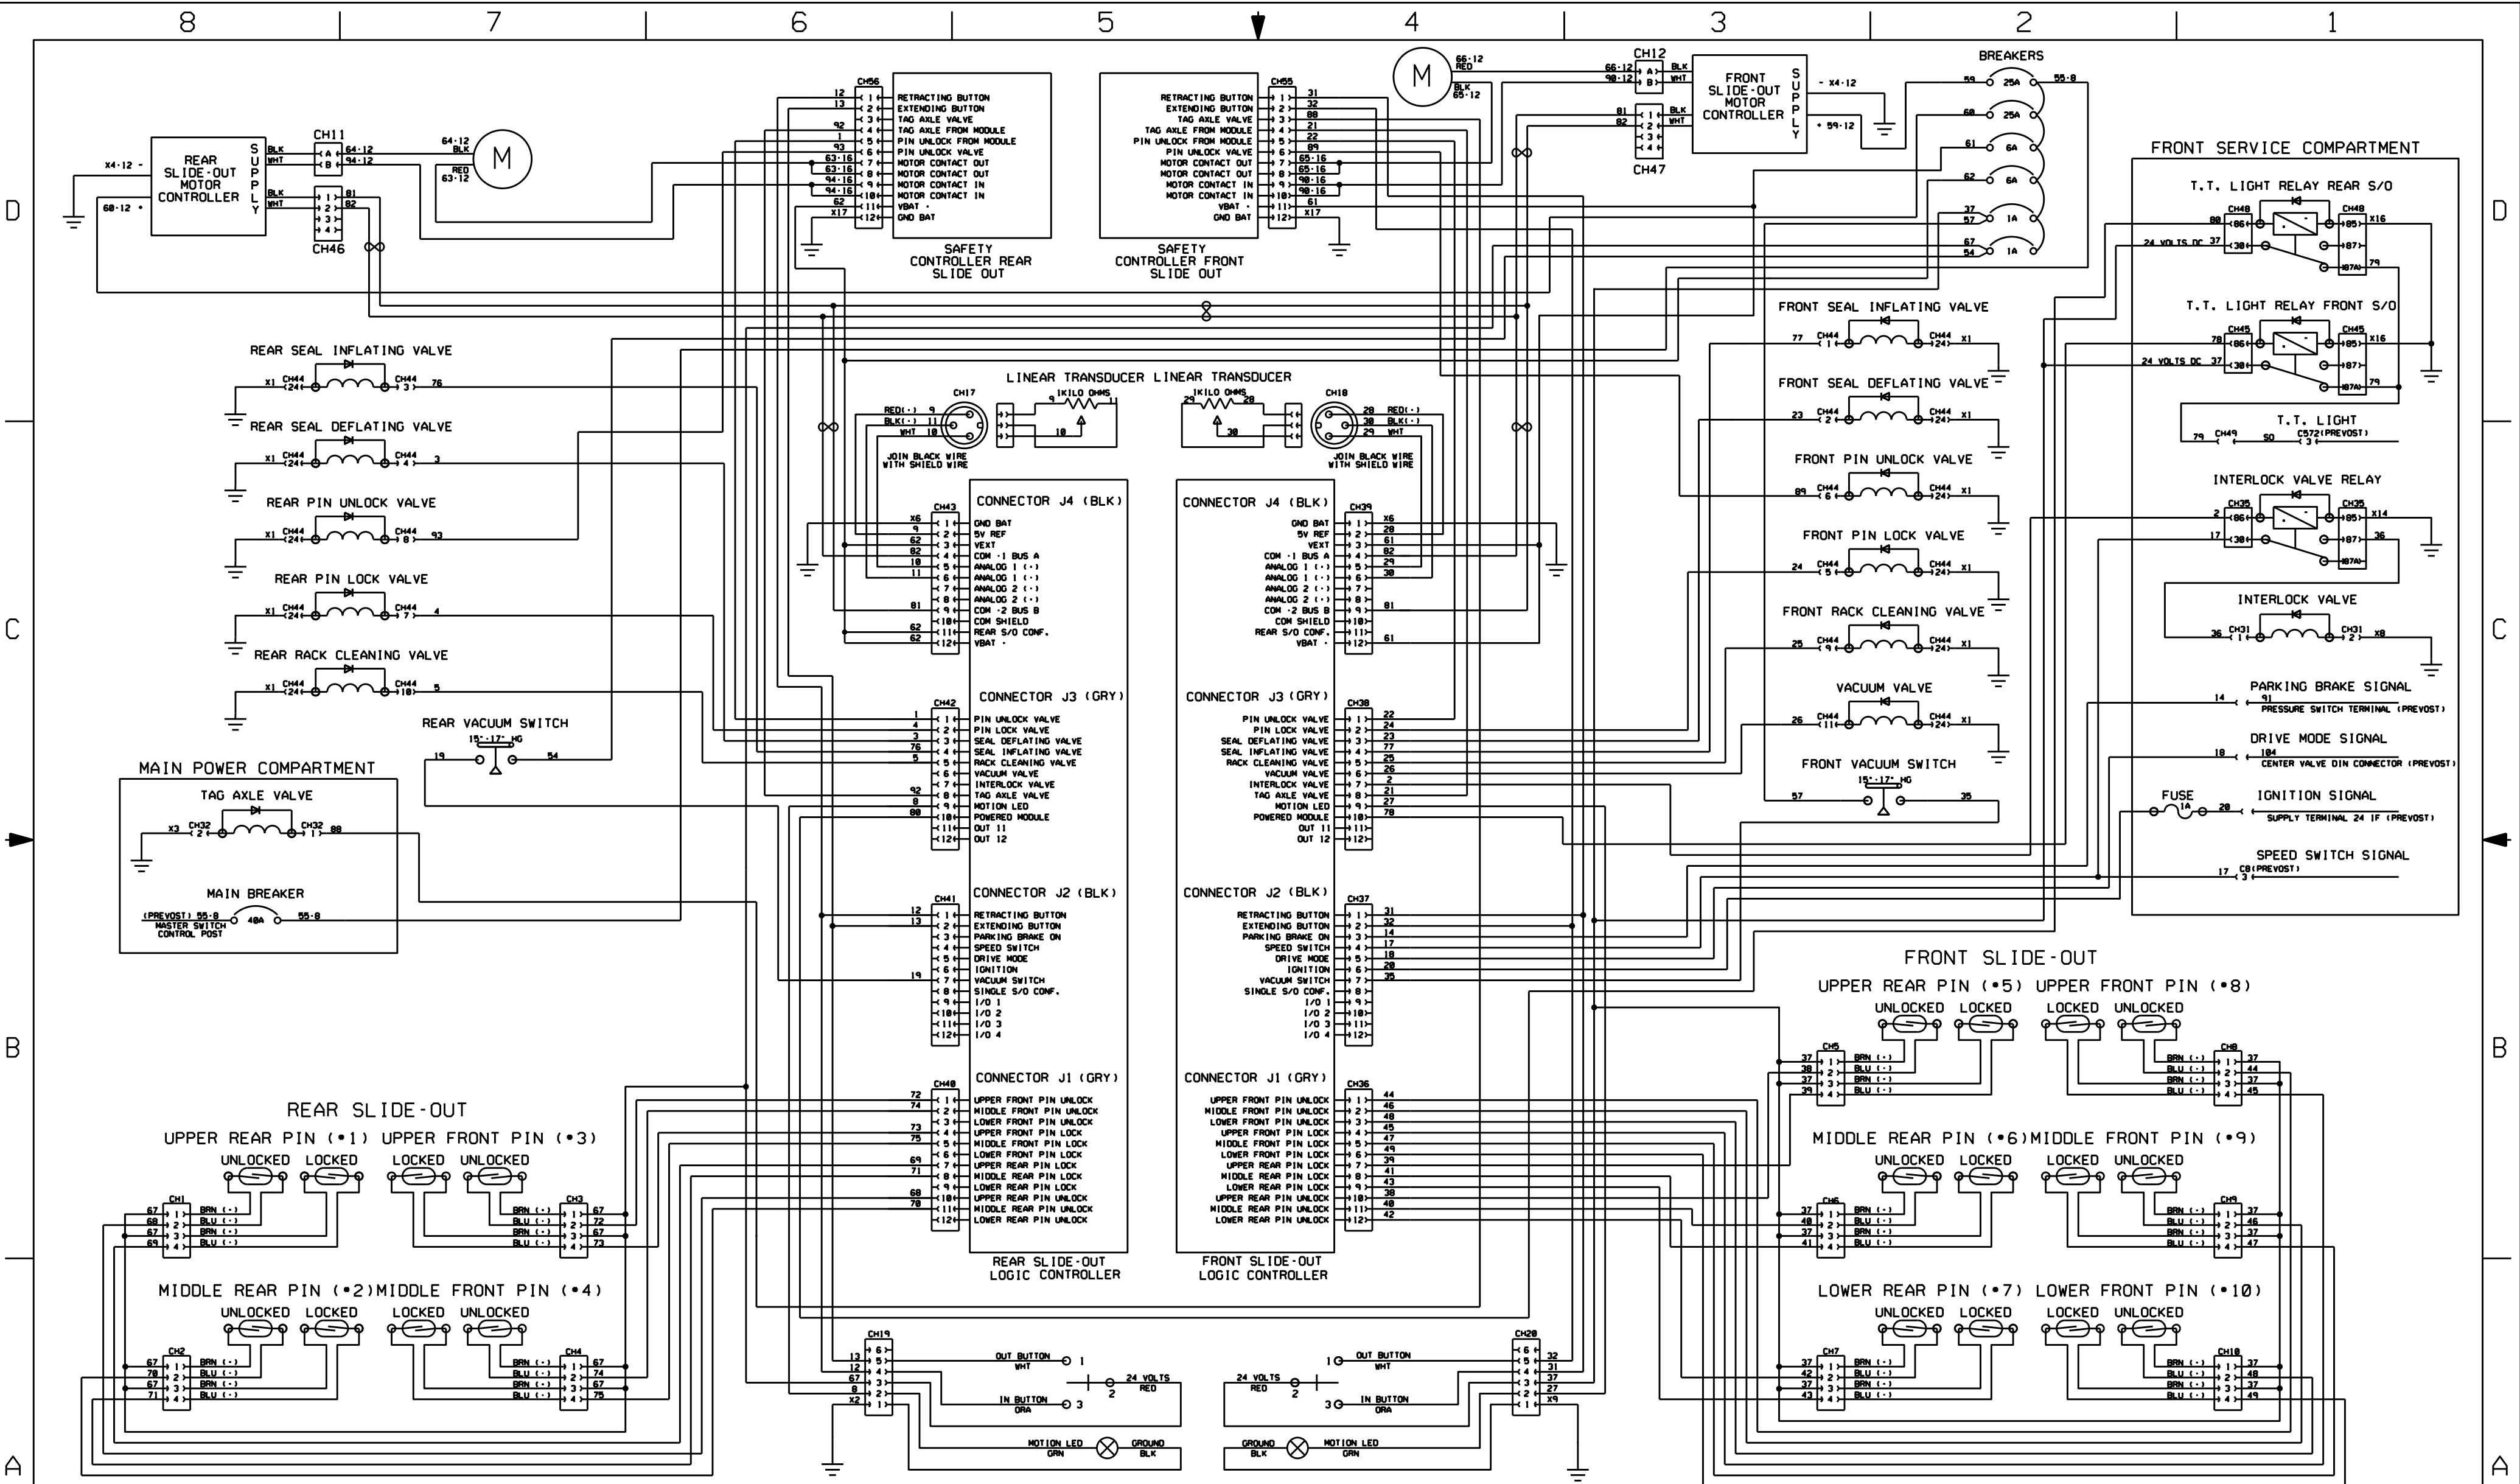

FRONT & REAR SLIDE - OUT

PREVOST

WIRING DIAGRAM

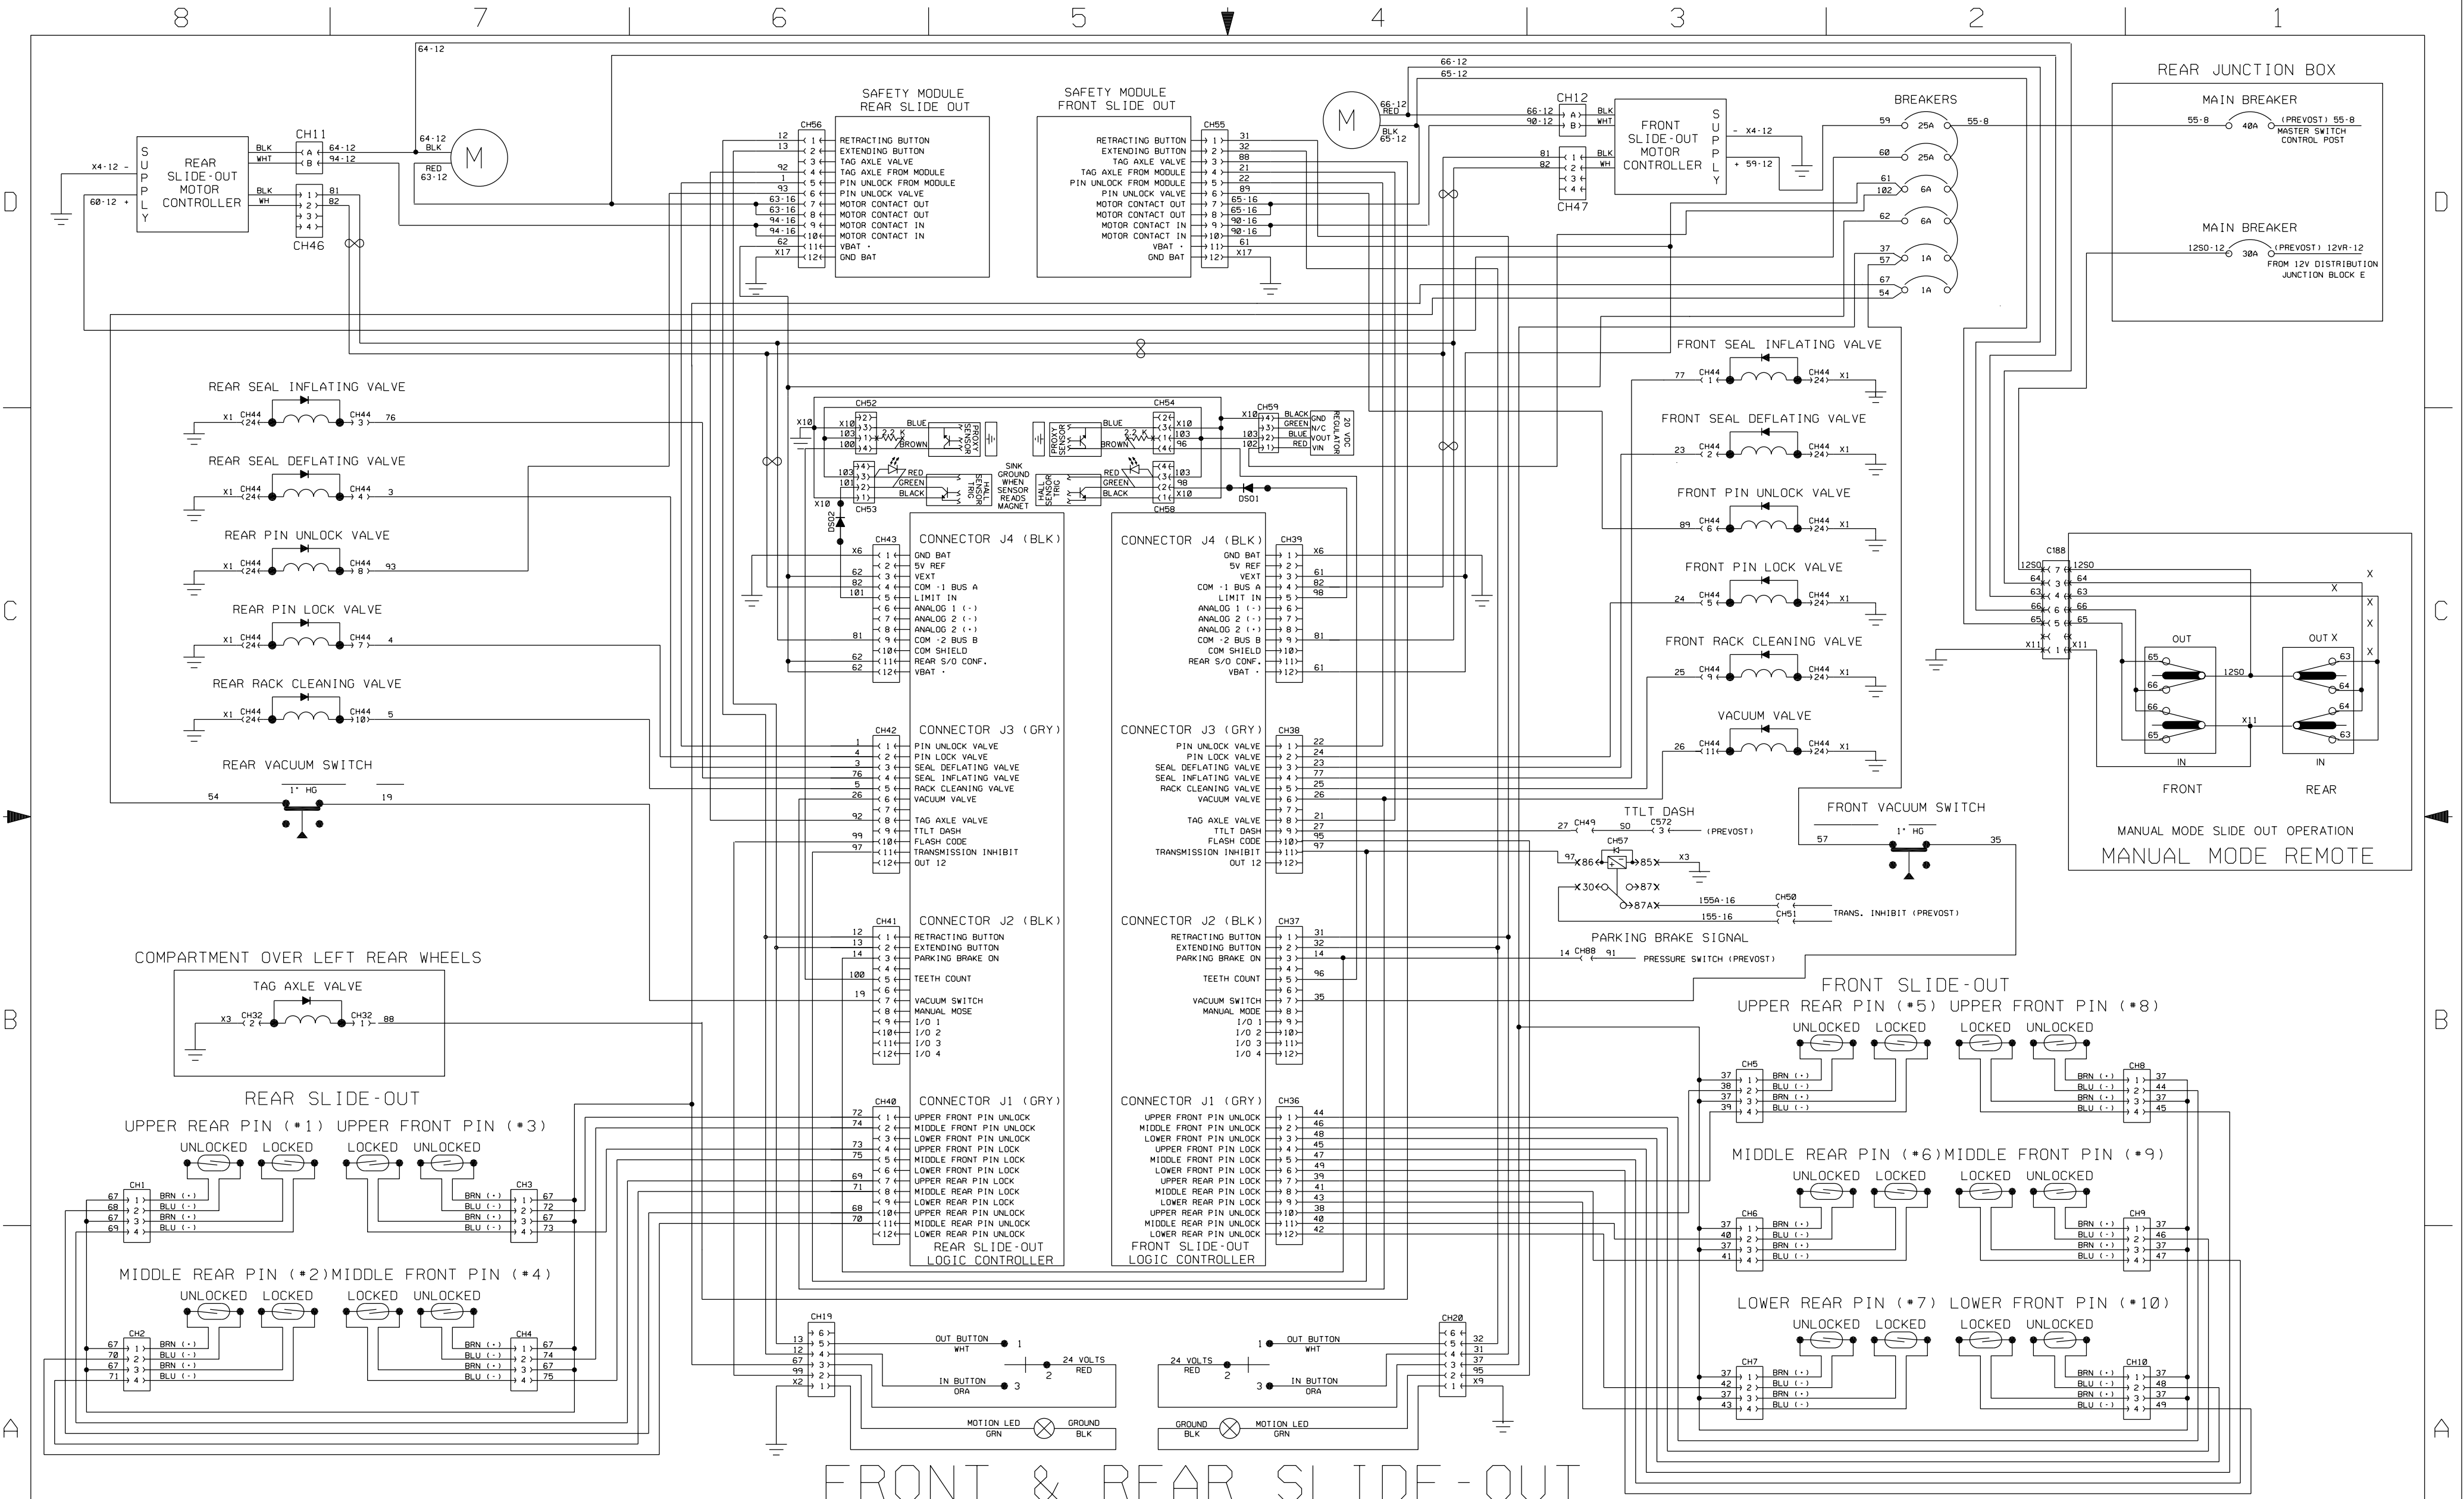

FRONT & REAR SLIDE-OUT

PREVOST

WIRING DIAGRAM


NO:

0060994

PAGE:

24.2

REVISION
08

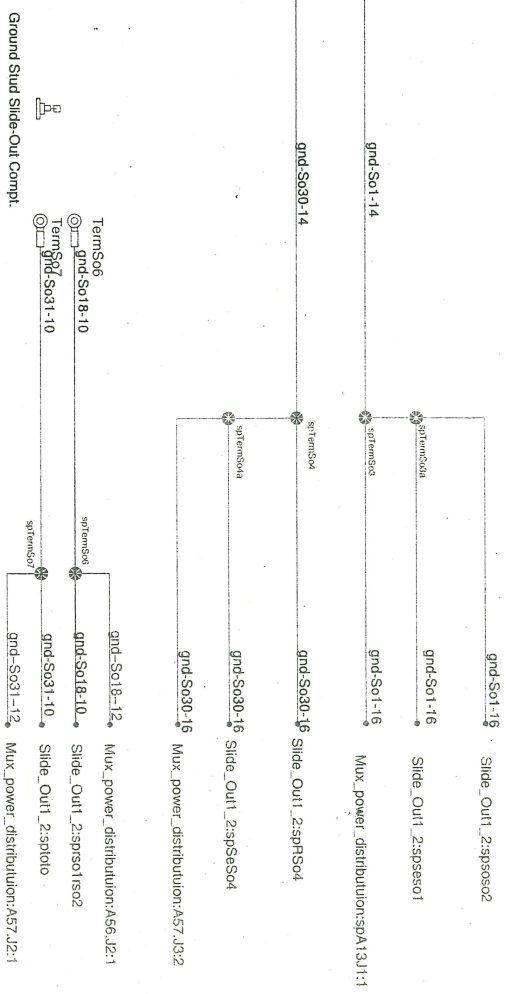

MULTIPLEX SLIDE-OUT GROUND DISTRIBUTION

PREVOST®

WIRING DIAGRAM

No:D060994

Page:24.2

Rev:13

0

1

2


3

4


A36
CECM
24V

JB28
24-S060-18
0-S015-18
Dash Led
CS01:2
Trans Inhibit
CS01:3

MULTIPLEX SLIDE OUT #1

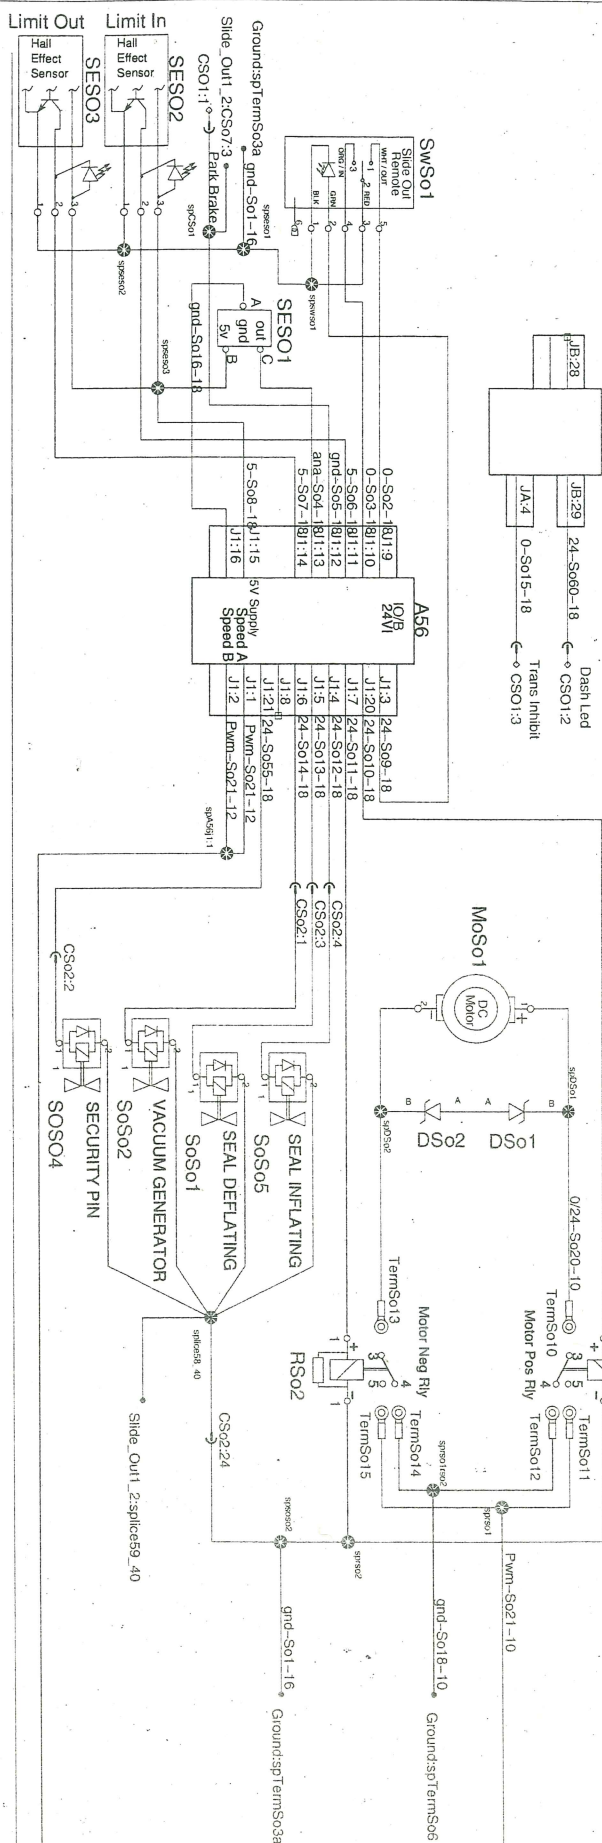

MULTIPLEX SLIDE OUT #2

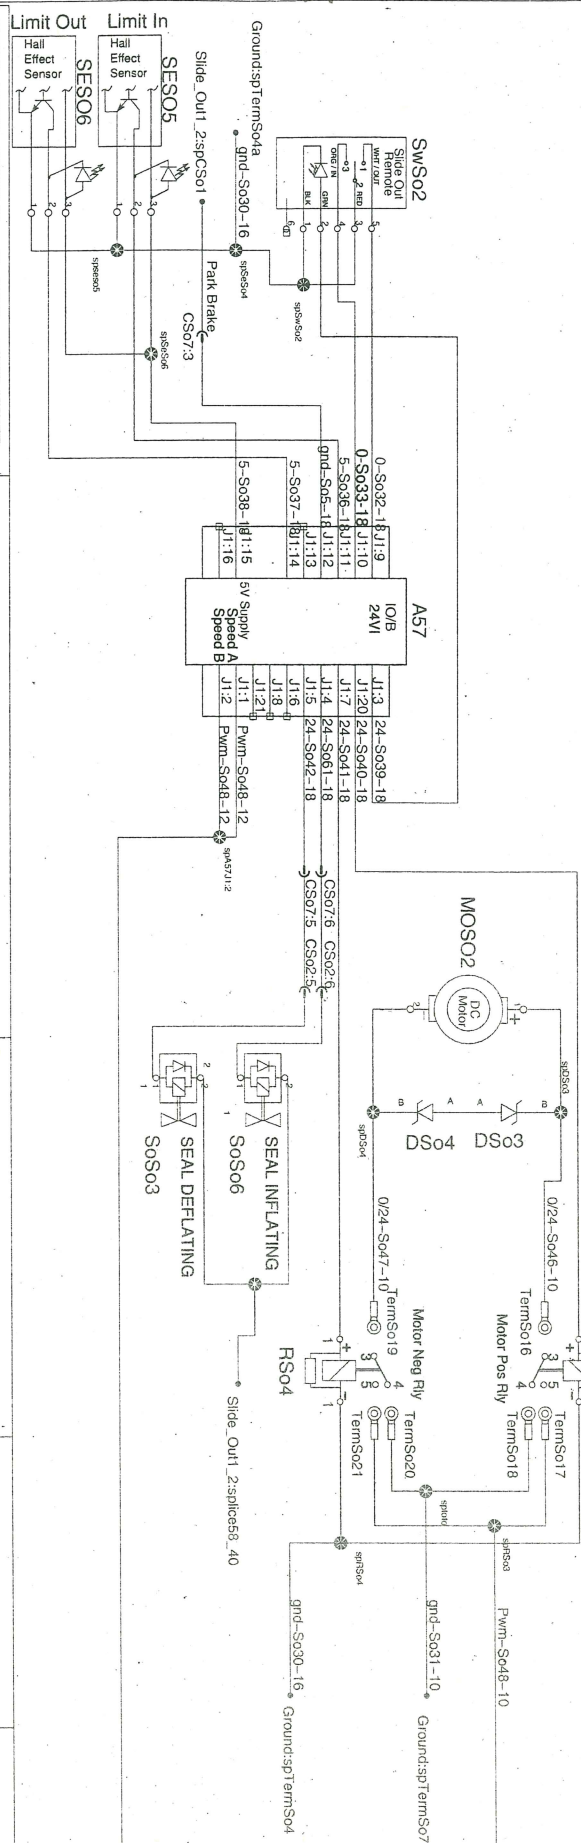

PREVOST®

WIRING DIAGRAM

No:D060994


Page:24.3

Rev:13

0 1 2 3 4


Multiplex Can, J1587 Network and Addressing

Can-H = Yellow = Pin 2
Can-L = Green = Pin 1

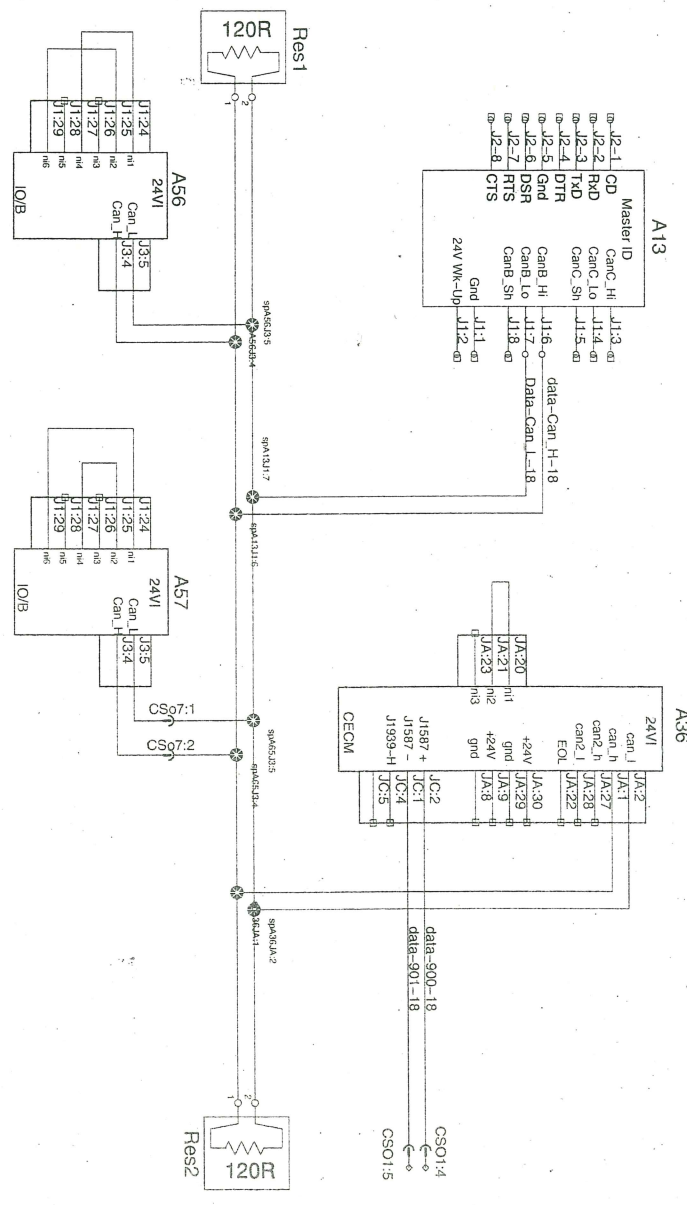

0 1 2 3 4



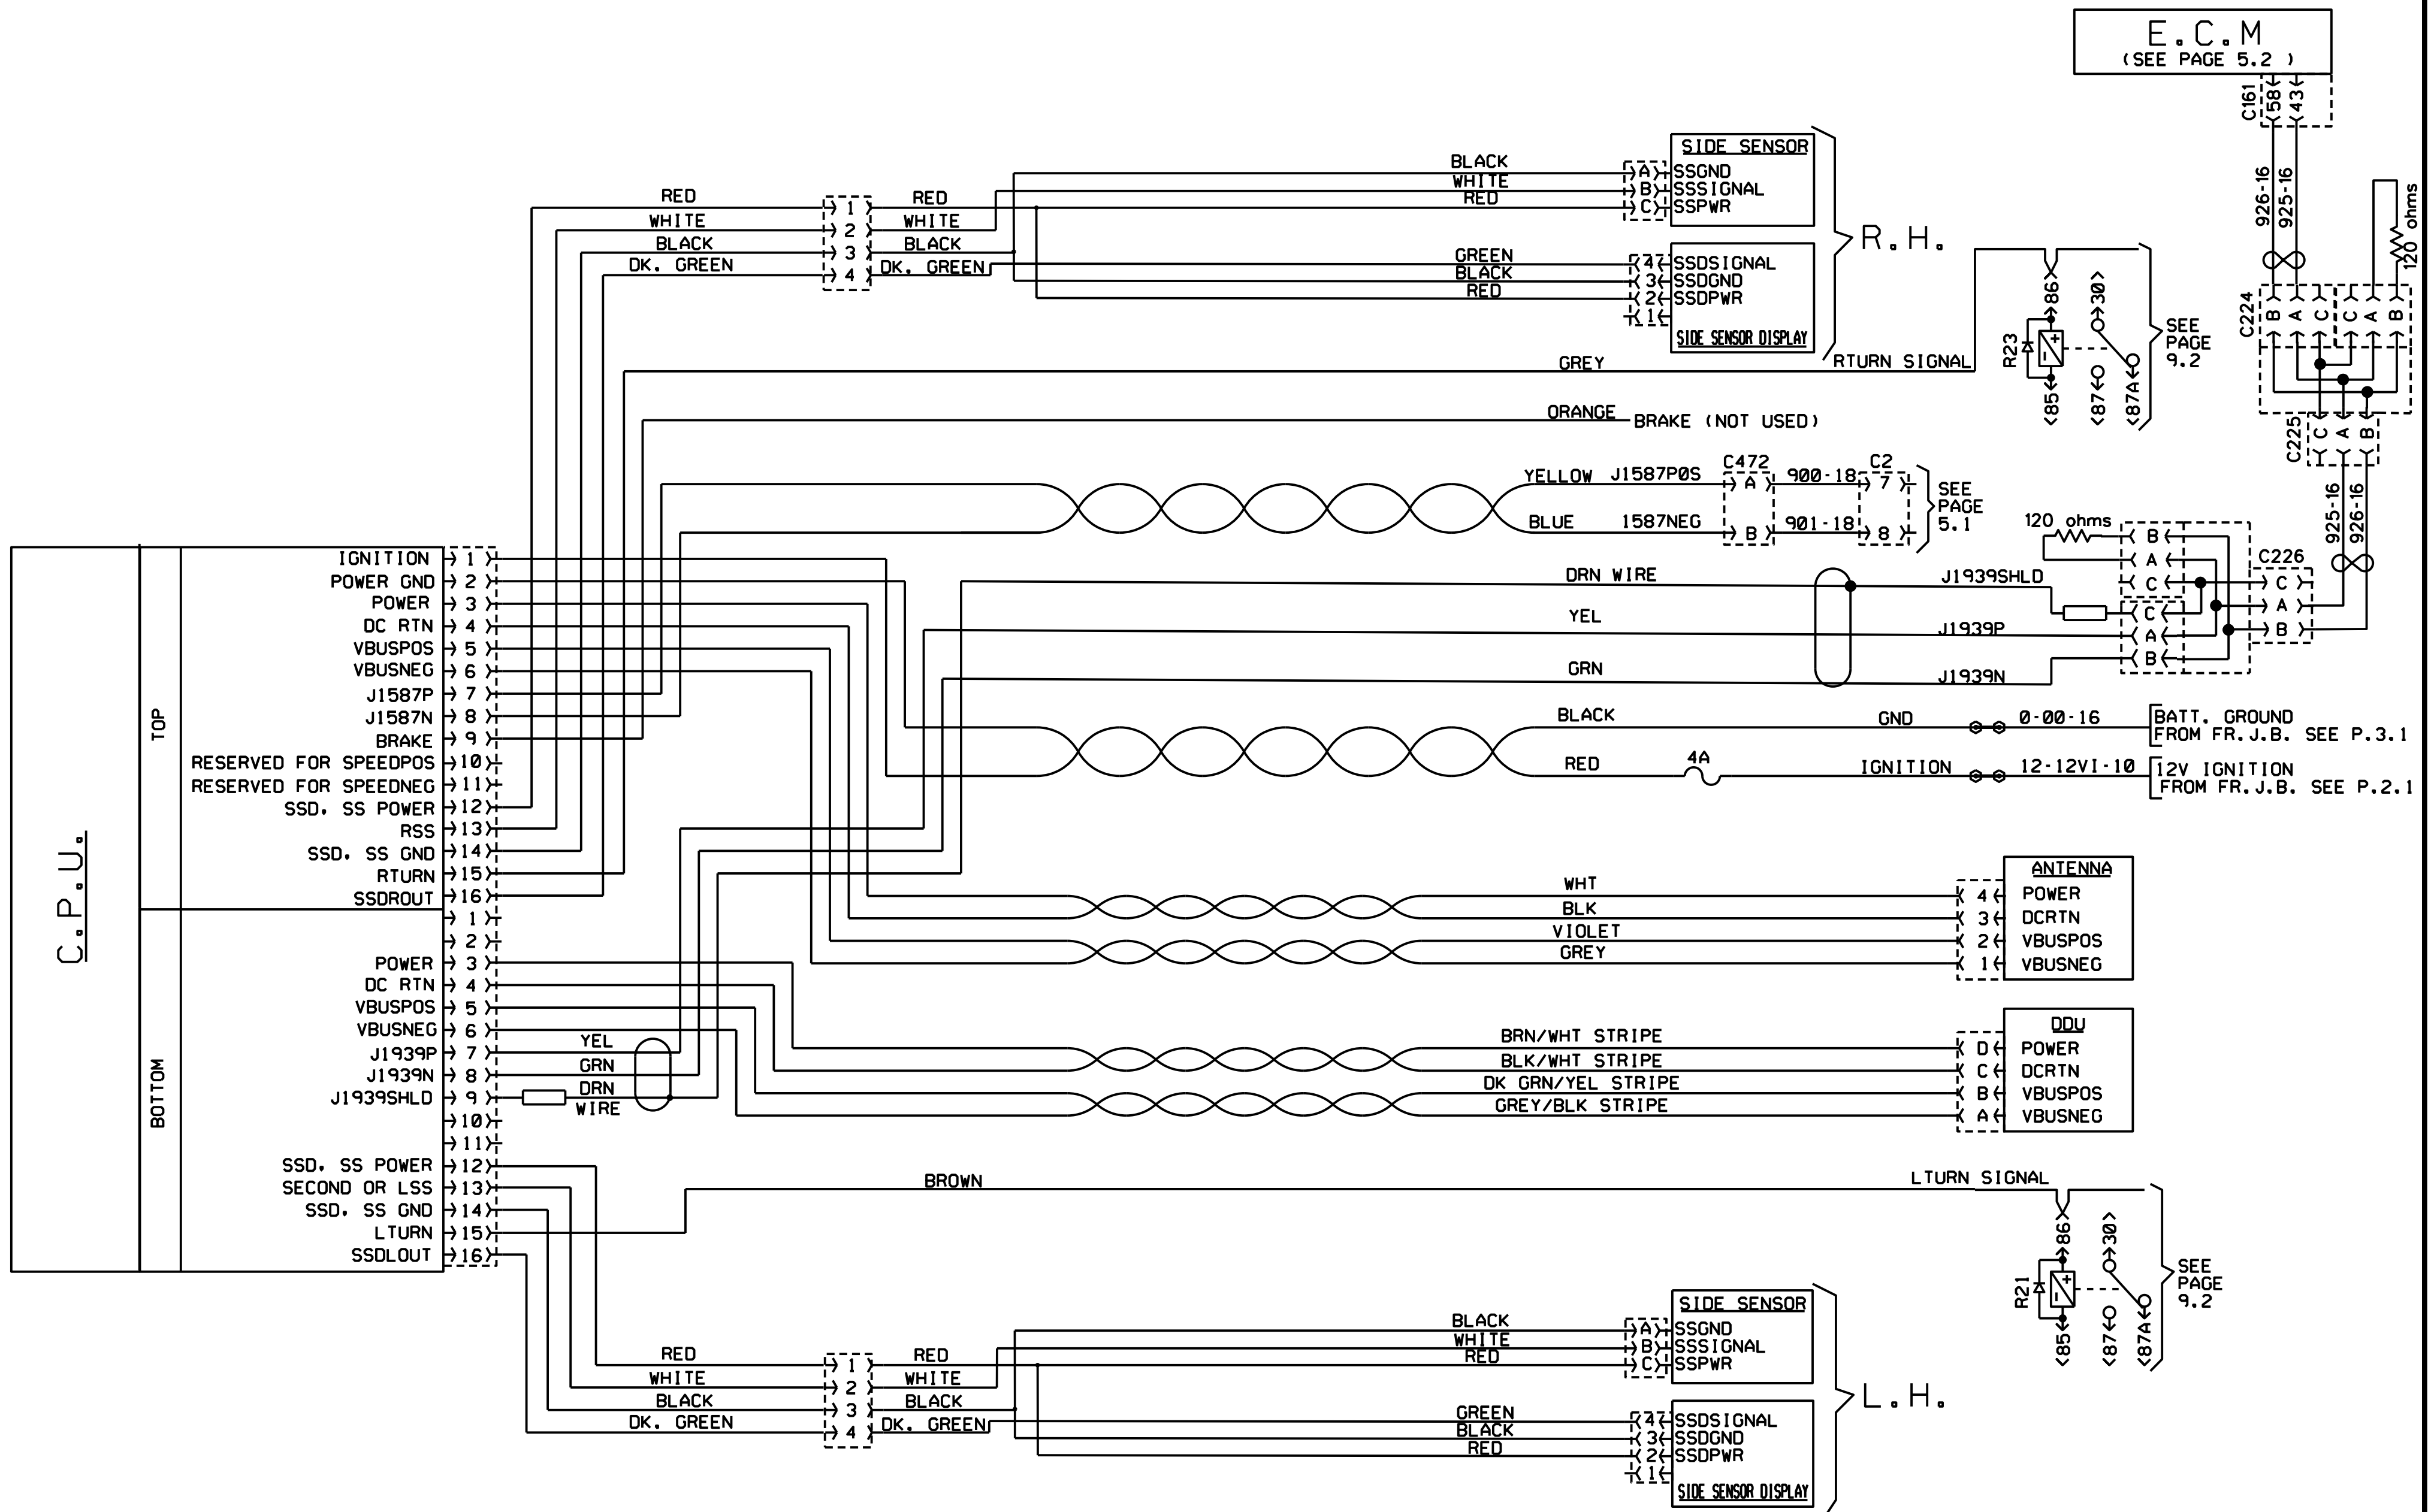

VORAD SMART CRUISE SYSTEM