
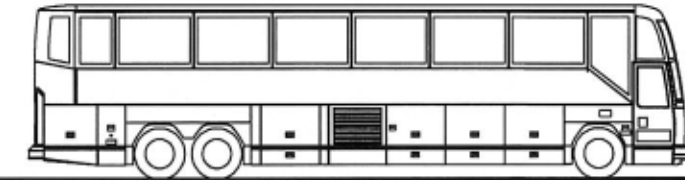


WIRING DIAGRAM

PREVOST

H3-41 & H3-45 BUS

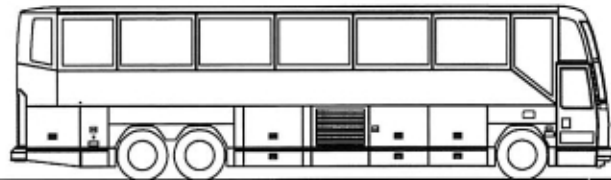

REFERENCE:

MODEL 97.5

NO:

D060882

EFF. W/ OC#

96080

PRIOR TO / OC#

EFF. W/ VEH.#

V1718, V1779 ...

PRIOR TO / VEH.#

DR.

MARTIN
LAFLAMME

DATE:

96-10-04

CK.

ROCH
CHAMPAGNE


APPR.


ROLAND
LAPOINTE


REV.	DATE	DESCRIPTION	PAGE	BY	CK.	APPR.
01	97-01-08	UPDATE PAGES : H, L, 2, 7, 8, 11.1, 11.4, 26.1, 26.2, 28 & NEW PAGE 11.5	← SEE	MH	h	R
02	97-02-05	ENTRANCE DOOR/DAMPER EFF. W/V1821 OC#97013	C, F, I, 13.1, 16	MH	h	R
03	97-03-27	RELAY MAGNETIC & RESISTOR A/C EFF. W/V1718, V1779... OC#97033	I, 13.2	MH	h	R
		ESPAR TIMER EFF. W/V1961 OC#97022	26.1, G3	MH	h	R
		UPDATE PAGES : B1, C, G1, G2, G4, H, 4, 9.1, 9.3, 10, 13.1, 18, 19, 20.1, 26.2, 27	← SEE	MH	h	R
04	97-04-15	FRESH AIR THERMOSTAT EFF. W/V1847 OC#97015	C, 13.1	MH	h	R
05	97-10-14	FRESH AIR THERMOSTAT ON COMPRESSEUR CLUTCH EFF. W/ W2204 OC#97135	C, G1, G2, G3, G4, I, 13.1	JR	MH	R
06	97-10-23	NEW VOLTAGE REGULATOR EFF. W/ W2218 OC#97104	4	S.G.	JR	R
07	98-02	CUT OUT COMPRESSEUR WITH THERMOSTAT WB-98-07 EFF. V1779 A W2204	P 13.1	JR	JR	R
08	98-02	CUT OUT COMPRESSEUR WITH THERMOSTAT WB-98-07 EFF. W2205 A W2285	P 13.1	JR	JR	R
09	98-03	KIT TO ADD NIGHT LIGHT IN LAVATORY OC 98034 AVAILABLE FOR V1779 AT W2284	P.17	JR	JR	R
10	98-05	KIT TO ADD A LAVATORY FAN OC 98063 WB 98-21 EFF. V1779 TO W2284	P.23	JR	JR	R
11	98-09	LIQ. SOL. VALVE ADDED ON PASSENGER A/C SYSTEM WB 98-33 EFF. V1779 TO W2204	P13.1	JR	JR	R
		UPDATE ENTRANCE DOOR	P.16	JR	JR	R
12	98-09	LIQ. SOL. VALVE ADDED ON PASSENGER A/C SYSTEM WB 98-33 EFF. W2205 TO W2284	P13.1	JR	JR	R
13	00-04	KIT TO MODIFY PASSENGER FRESH AIR DAMPER OC #00061 EFF. W1779 TO W2204	P13.1	JR	JR	R
14	00-04	KIT TO MODIFY PASSENGER FRESH AIR DAMPER OC #00061 EFF. W2205 TO W2284	P13.1	JR	JR	R

WIRING DIAGRAM INDEX


A A/C & HEAT SYSTEM	Page: 13	ENGINE BREAKE SYSTEM	Page: 19	P PARKING BREAKE SWITCH	Page: 8
AIR DRYER	Page: 8	ENGINE CONTROL	Page: 4	PASSENGER CHIME	Page: 12
ALARM & SIGNAL	Page: 7	ENTRANCE DOOR SEDAN	Page: 16	POWER 12V OUTLET	Page: 14
ABS	Page: 21	ETHER COLD START	Page: 8	PRODRIVER	Page: 8
ARRANGEMENT - CABLE	Page: B	EXTERIOR LIGHTIHG	Page: 9		
ARRANGEMENT - HARNESS	Page: C			R RETARDER - WORLD TRANSM.	Page: 19
ARRANGEMENT - SPARE WIRE	Page: D	F FAN-CLUTCH RADIATOR	Page: 8		
		FAST IDLE - DDEC	Page: 5	S SOUND & VIDEO SYSTEM	Page: 20
B BACK-UP ALARM	Page: 9.3	FIRE DETECTOR	Page: 7	SPEEDOMETER (VDO)	Page: 15
BACK-UP MONITOR	Page: 27	FRONT DESTINATION SIGN	Page: 17	SUN VISOR	Page: 14
		FUEL WATER FILTER	Page: 8		
C CHARGING SYSTEM	Page: 4	FUEL PRIME PUMP	Page: 12	T TACHOGRAPH-ELECTRONIC	Page: 15
CIGAR LIGHTER	Page: 14			TACHOMETER (VDO)	Page: 15
CODE - CIRCUIT NUMBER	Page: E	G GALLEY ACCESSORIES	Page: 23	TELL TALE LIGHT MODULES	Page: 28
CODE - CIRCUIT BREAKER	Page: F	GROUND SYSTEM	Page: 3	THERMOMETER-DIGITAL	Page: 28
CODE - CONNECTOR	Page: G			TRANSMISSION - MANUAL	Page: 22
CODE - DIODE	Page: H	H HIGH BUOY	Page: 18	TRANSMISSION - WORLD	Page: 6
CODE - RELAY	Page: I	HOTESS CHIME	Page: 12		
CODE - RESISTOR	Page: J			W WATER HEATER PRE-HEAT	Page: 26
CODE - WIRING KEY	Page: K	I INTERIOR LIGHTING	Page: 11	WATER TANK HEATER LAVATORY	Page: 12
CODE - FUSE	Page: L	INTERCOM	Page: 27	WHEEL CHAIR LIFT - RICHON 9000	Page: 25.2
CODE - MODULE	Page: M			WHEEL CHAIR LIFT - STEW. & STEV.	Page: 25.1
CRUISE CONTROL - DDEC	Page: 5	K KNEELING SYSTEM	Page: 18	WINDSHIELD (UP) FAN DEFROSTOR	Page: 22
				WINDSHIELD (UP) HEATED	Page: 22
D DDEC III	Page: 5	L LAVATORY	Page: 17	WIPER & WASHER	Page: 10
DIGITAL CLOCK	Page: 14	LOW BUOY	Page: 18		
DISTRIBUTION 12V	Page: 2	LUGGAGE DOOR LOCK	Page: 19		
DISTRIBUTION 24V	Page: 1	LAVATORY FAN	Page: 23		
DRIVER'S WINDOW LIFTER	Page: 14				
E ENGINE BLOCK HEATER	Page: 12	M MIRROR-REAR VIEW	Page: 24		

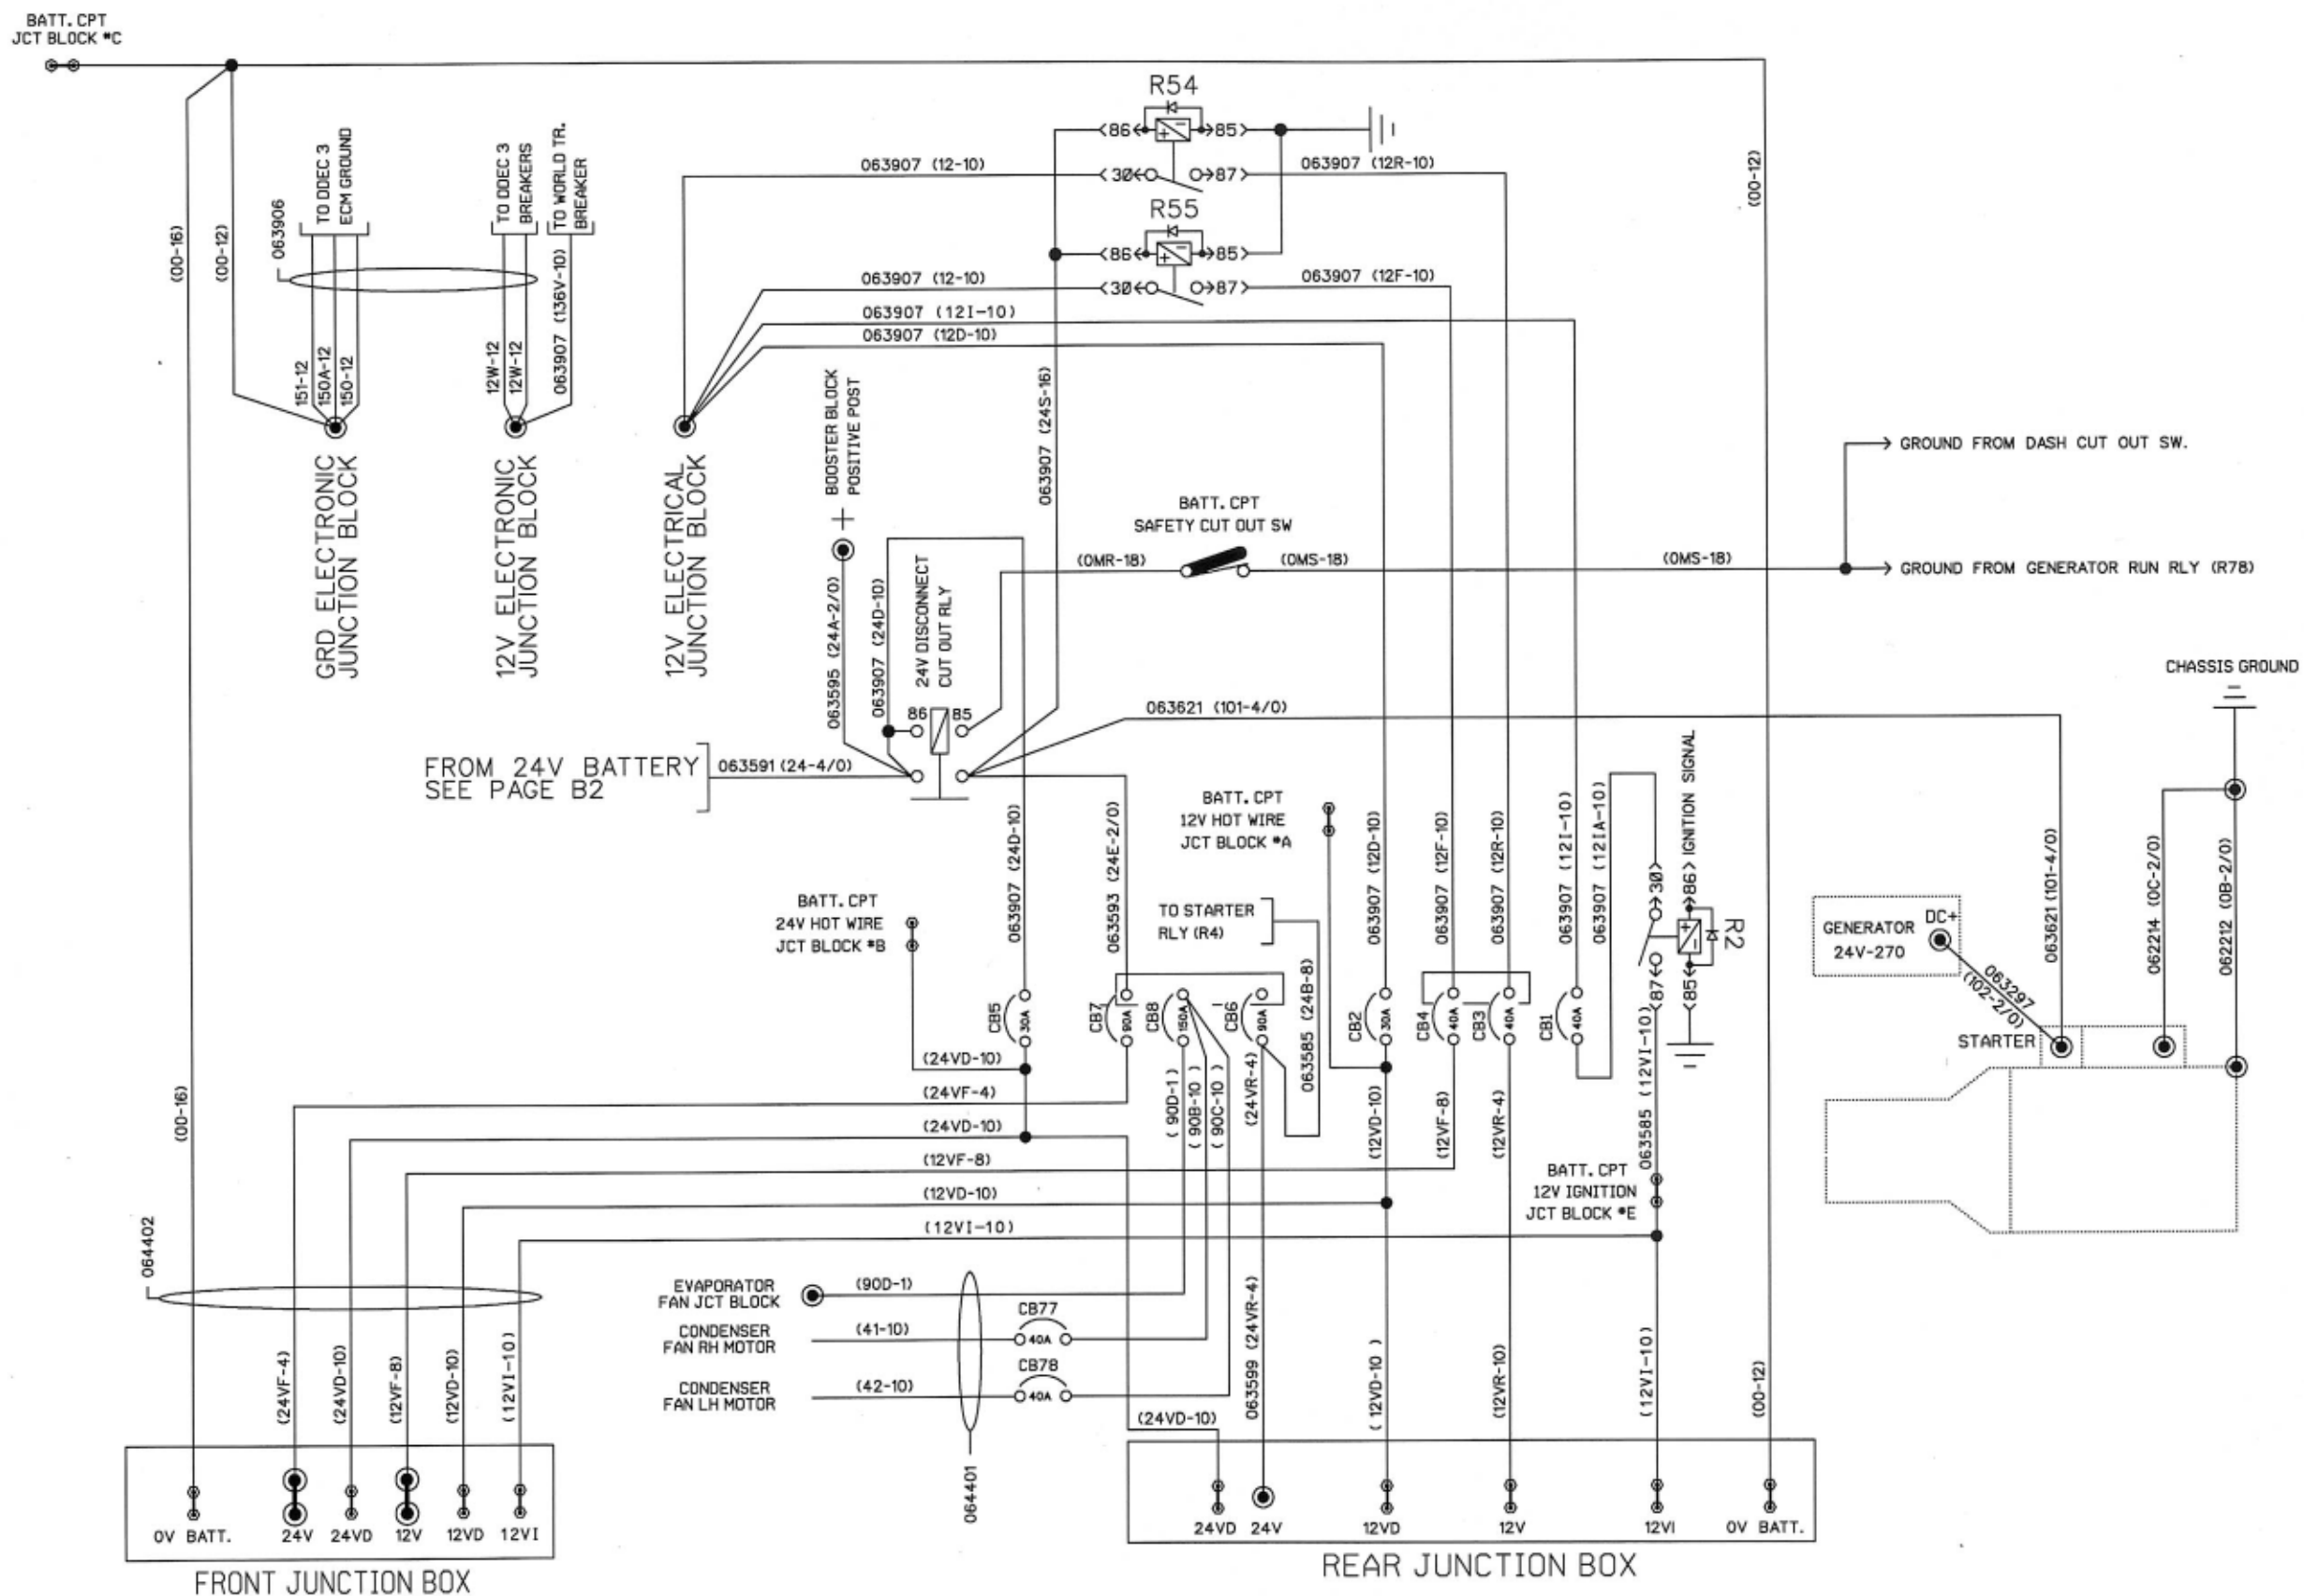

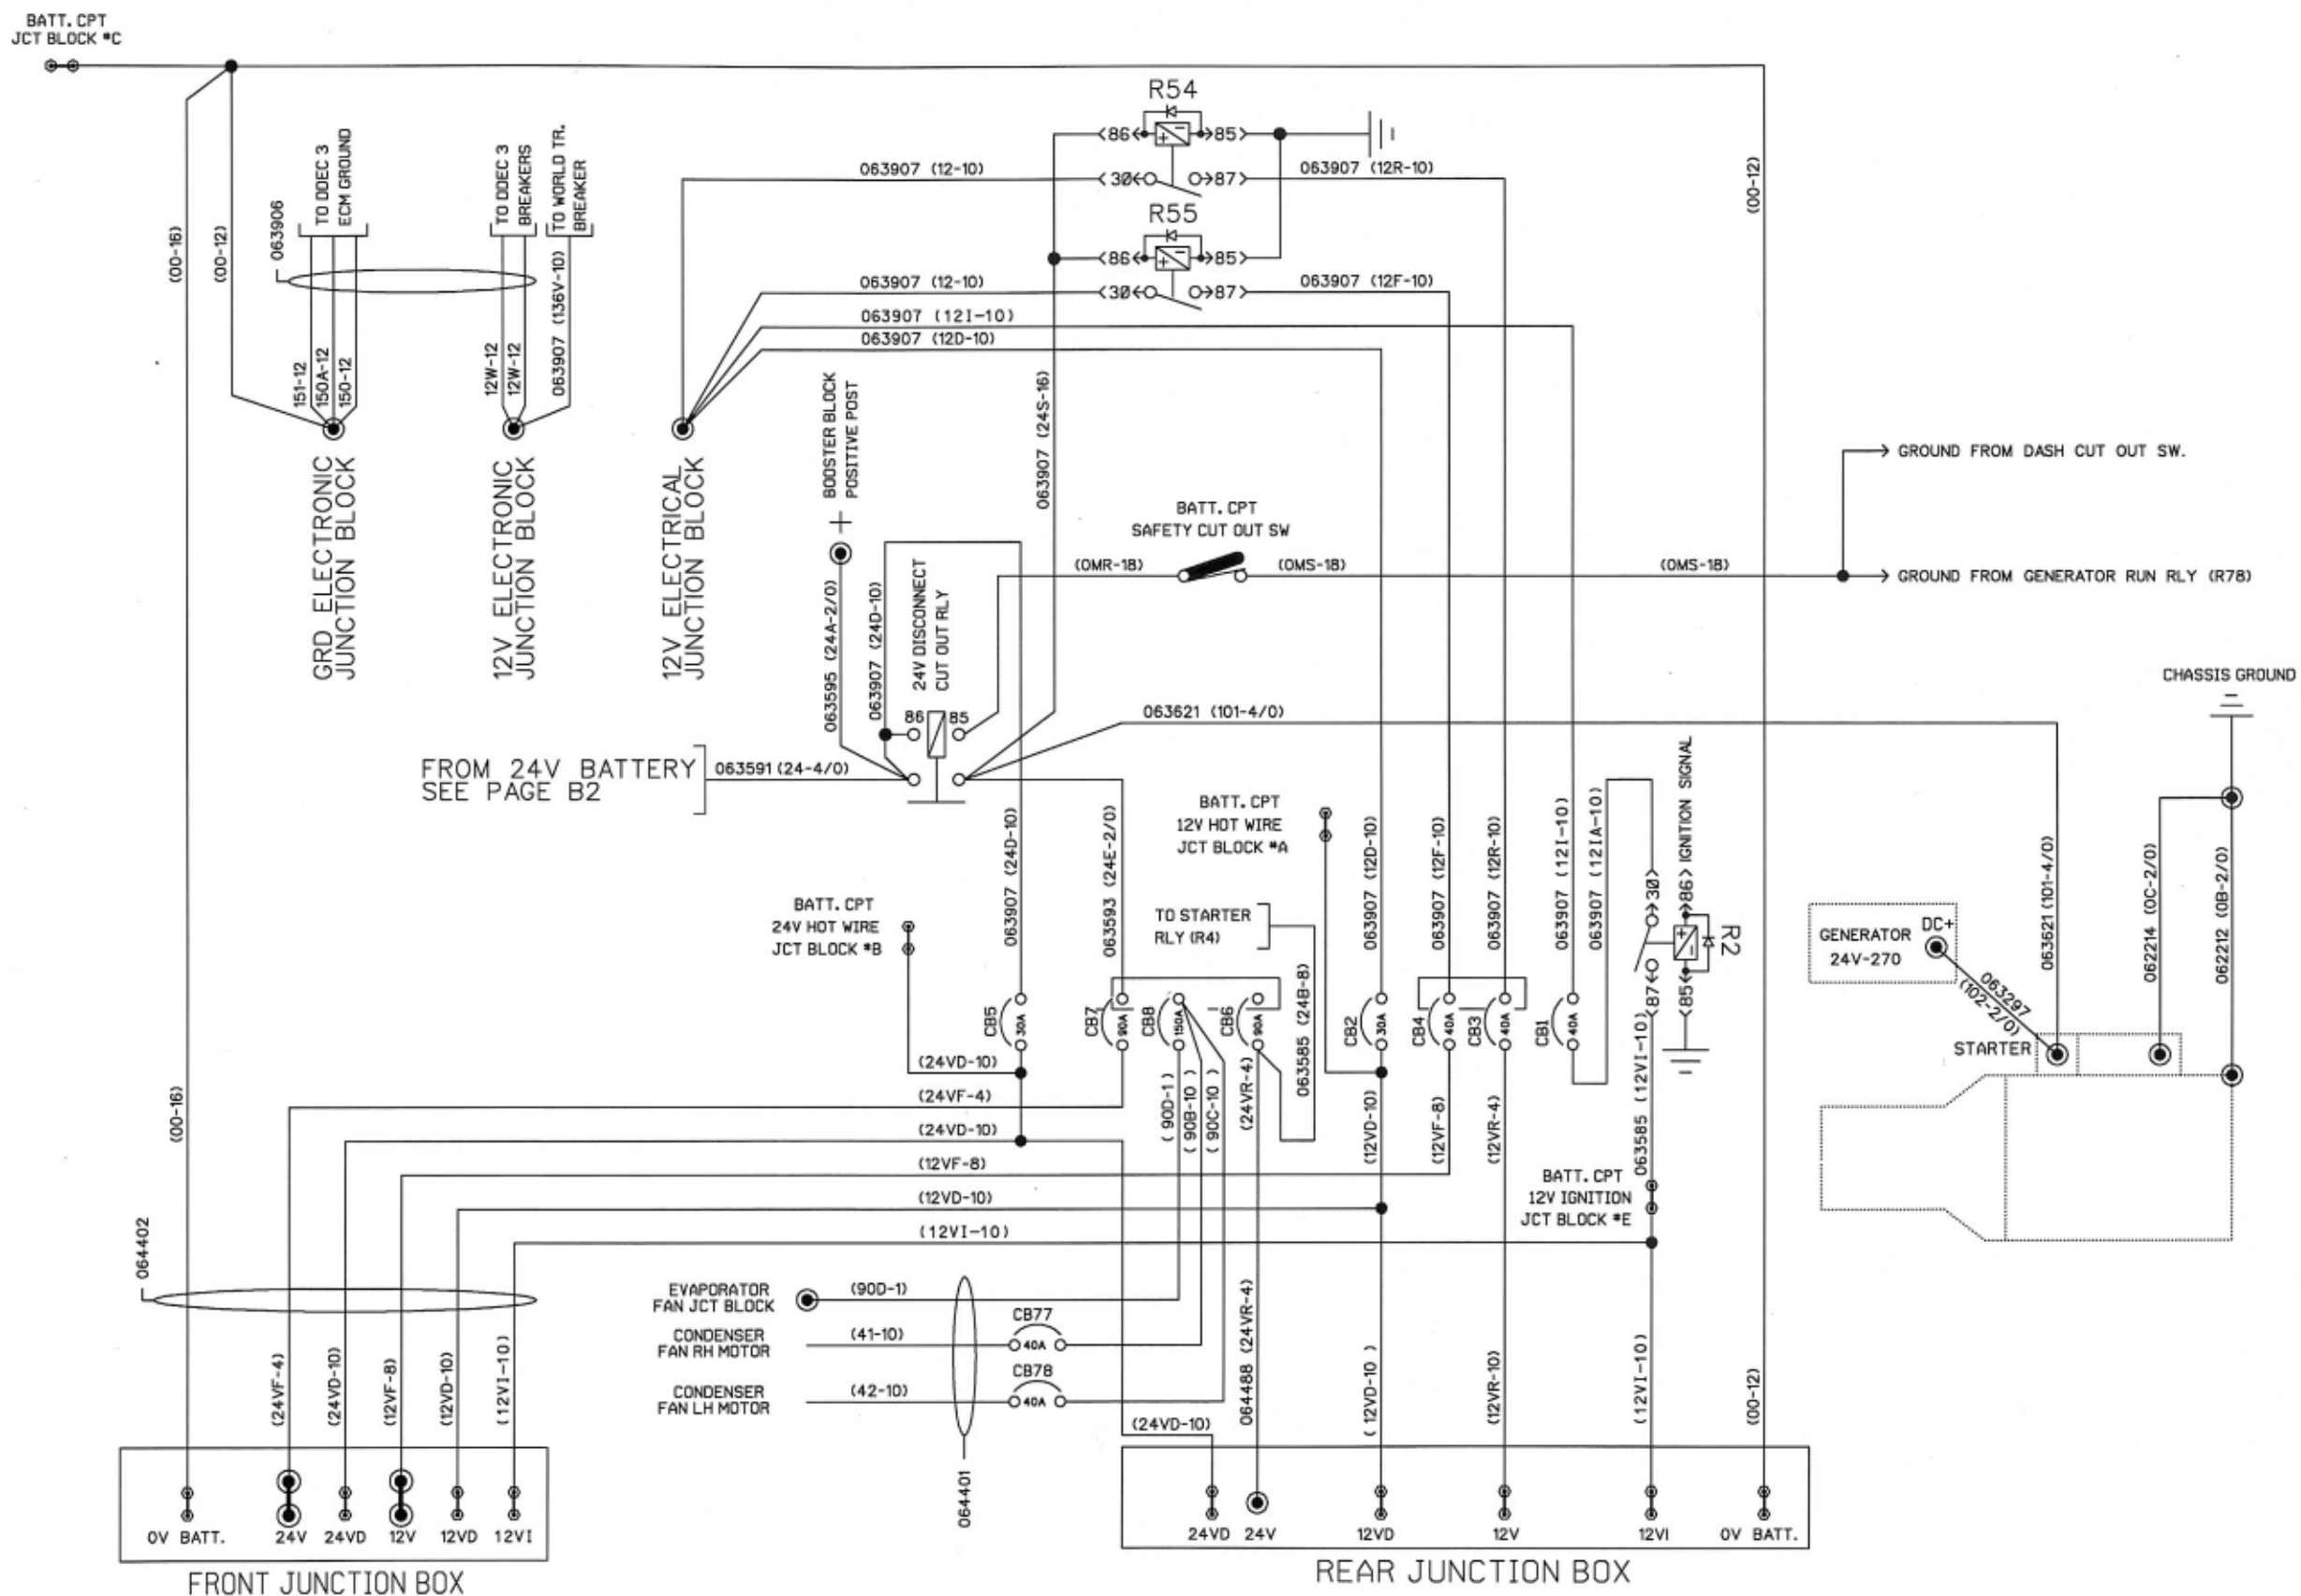


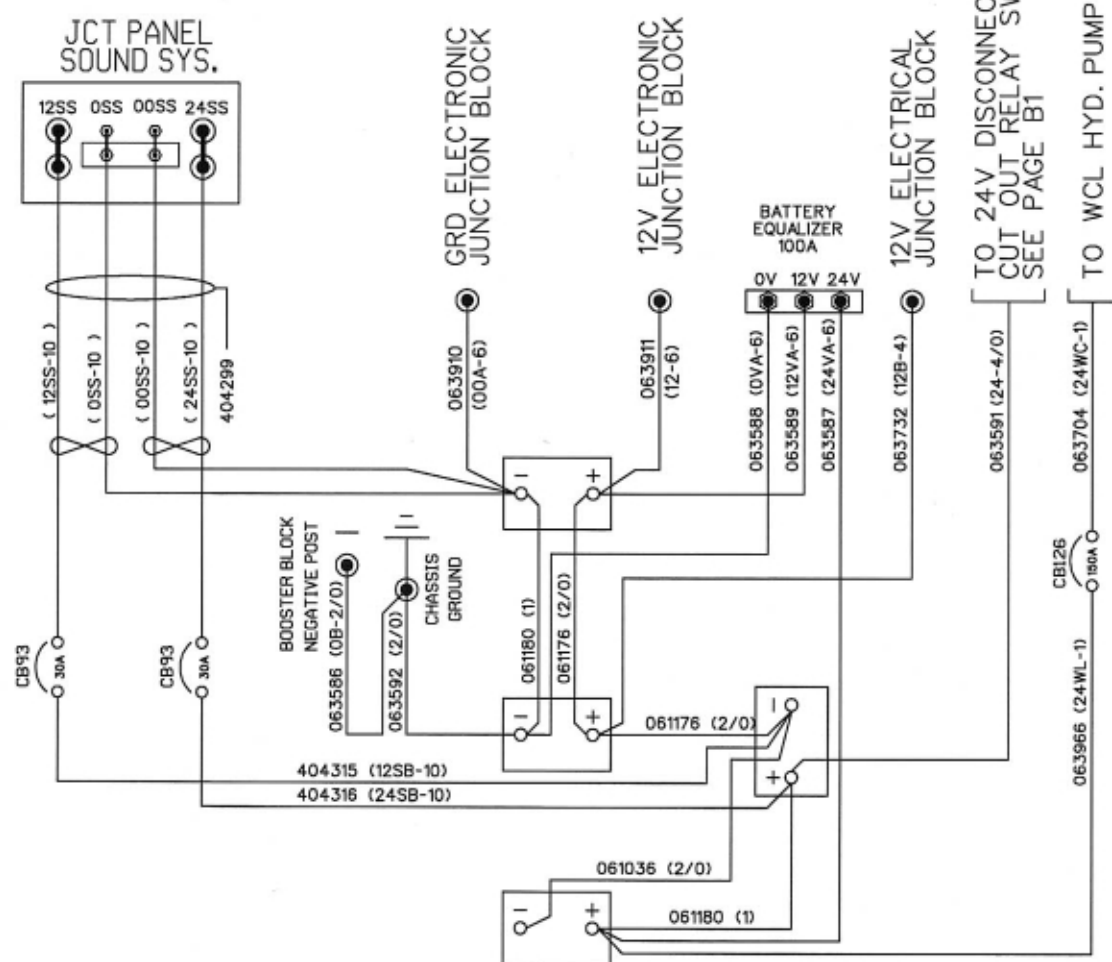



STANDARD BATTERIES

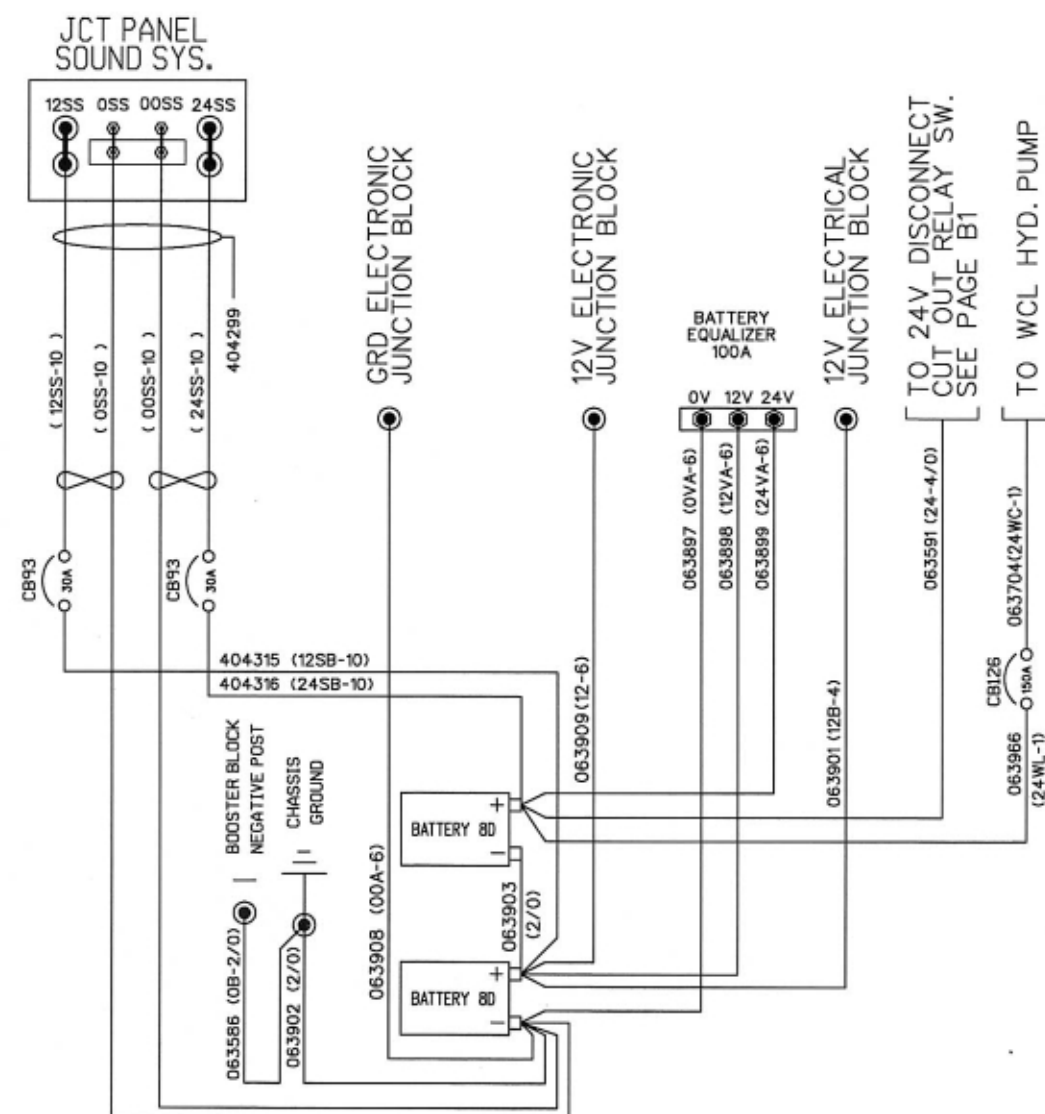



8D BATTERIES

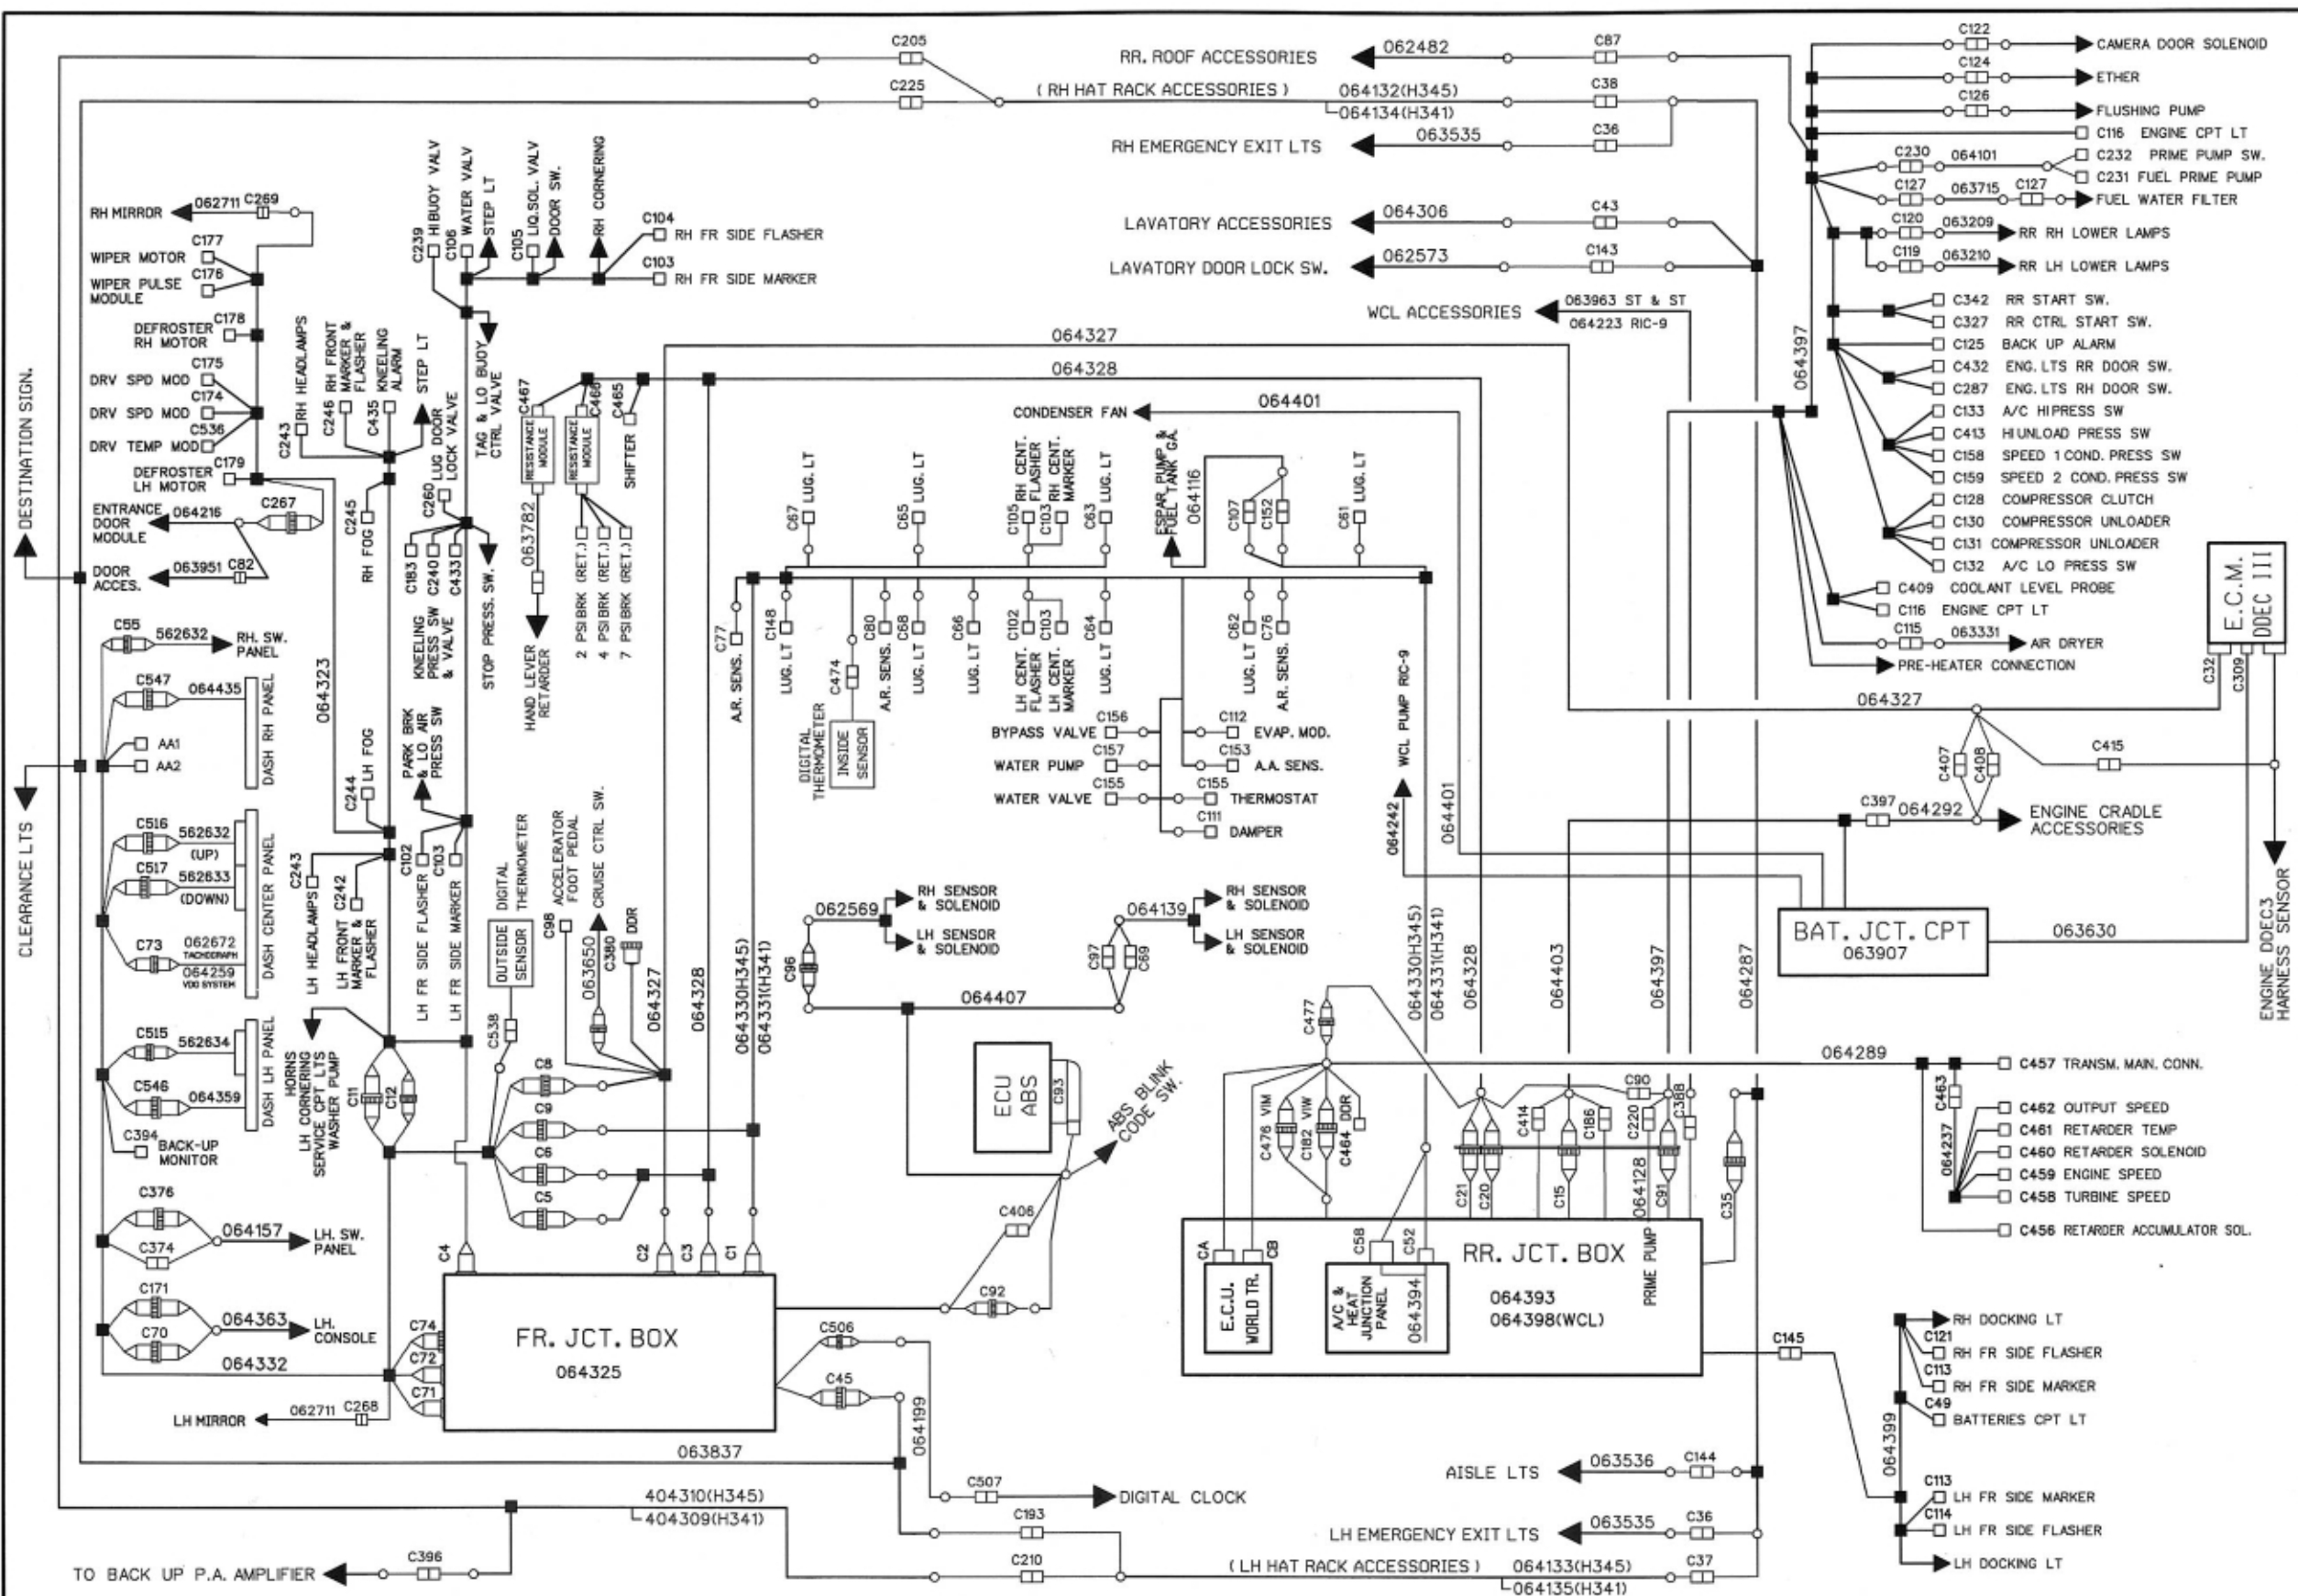

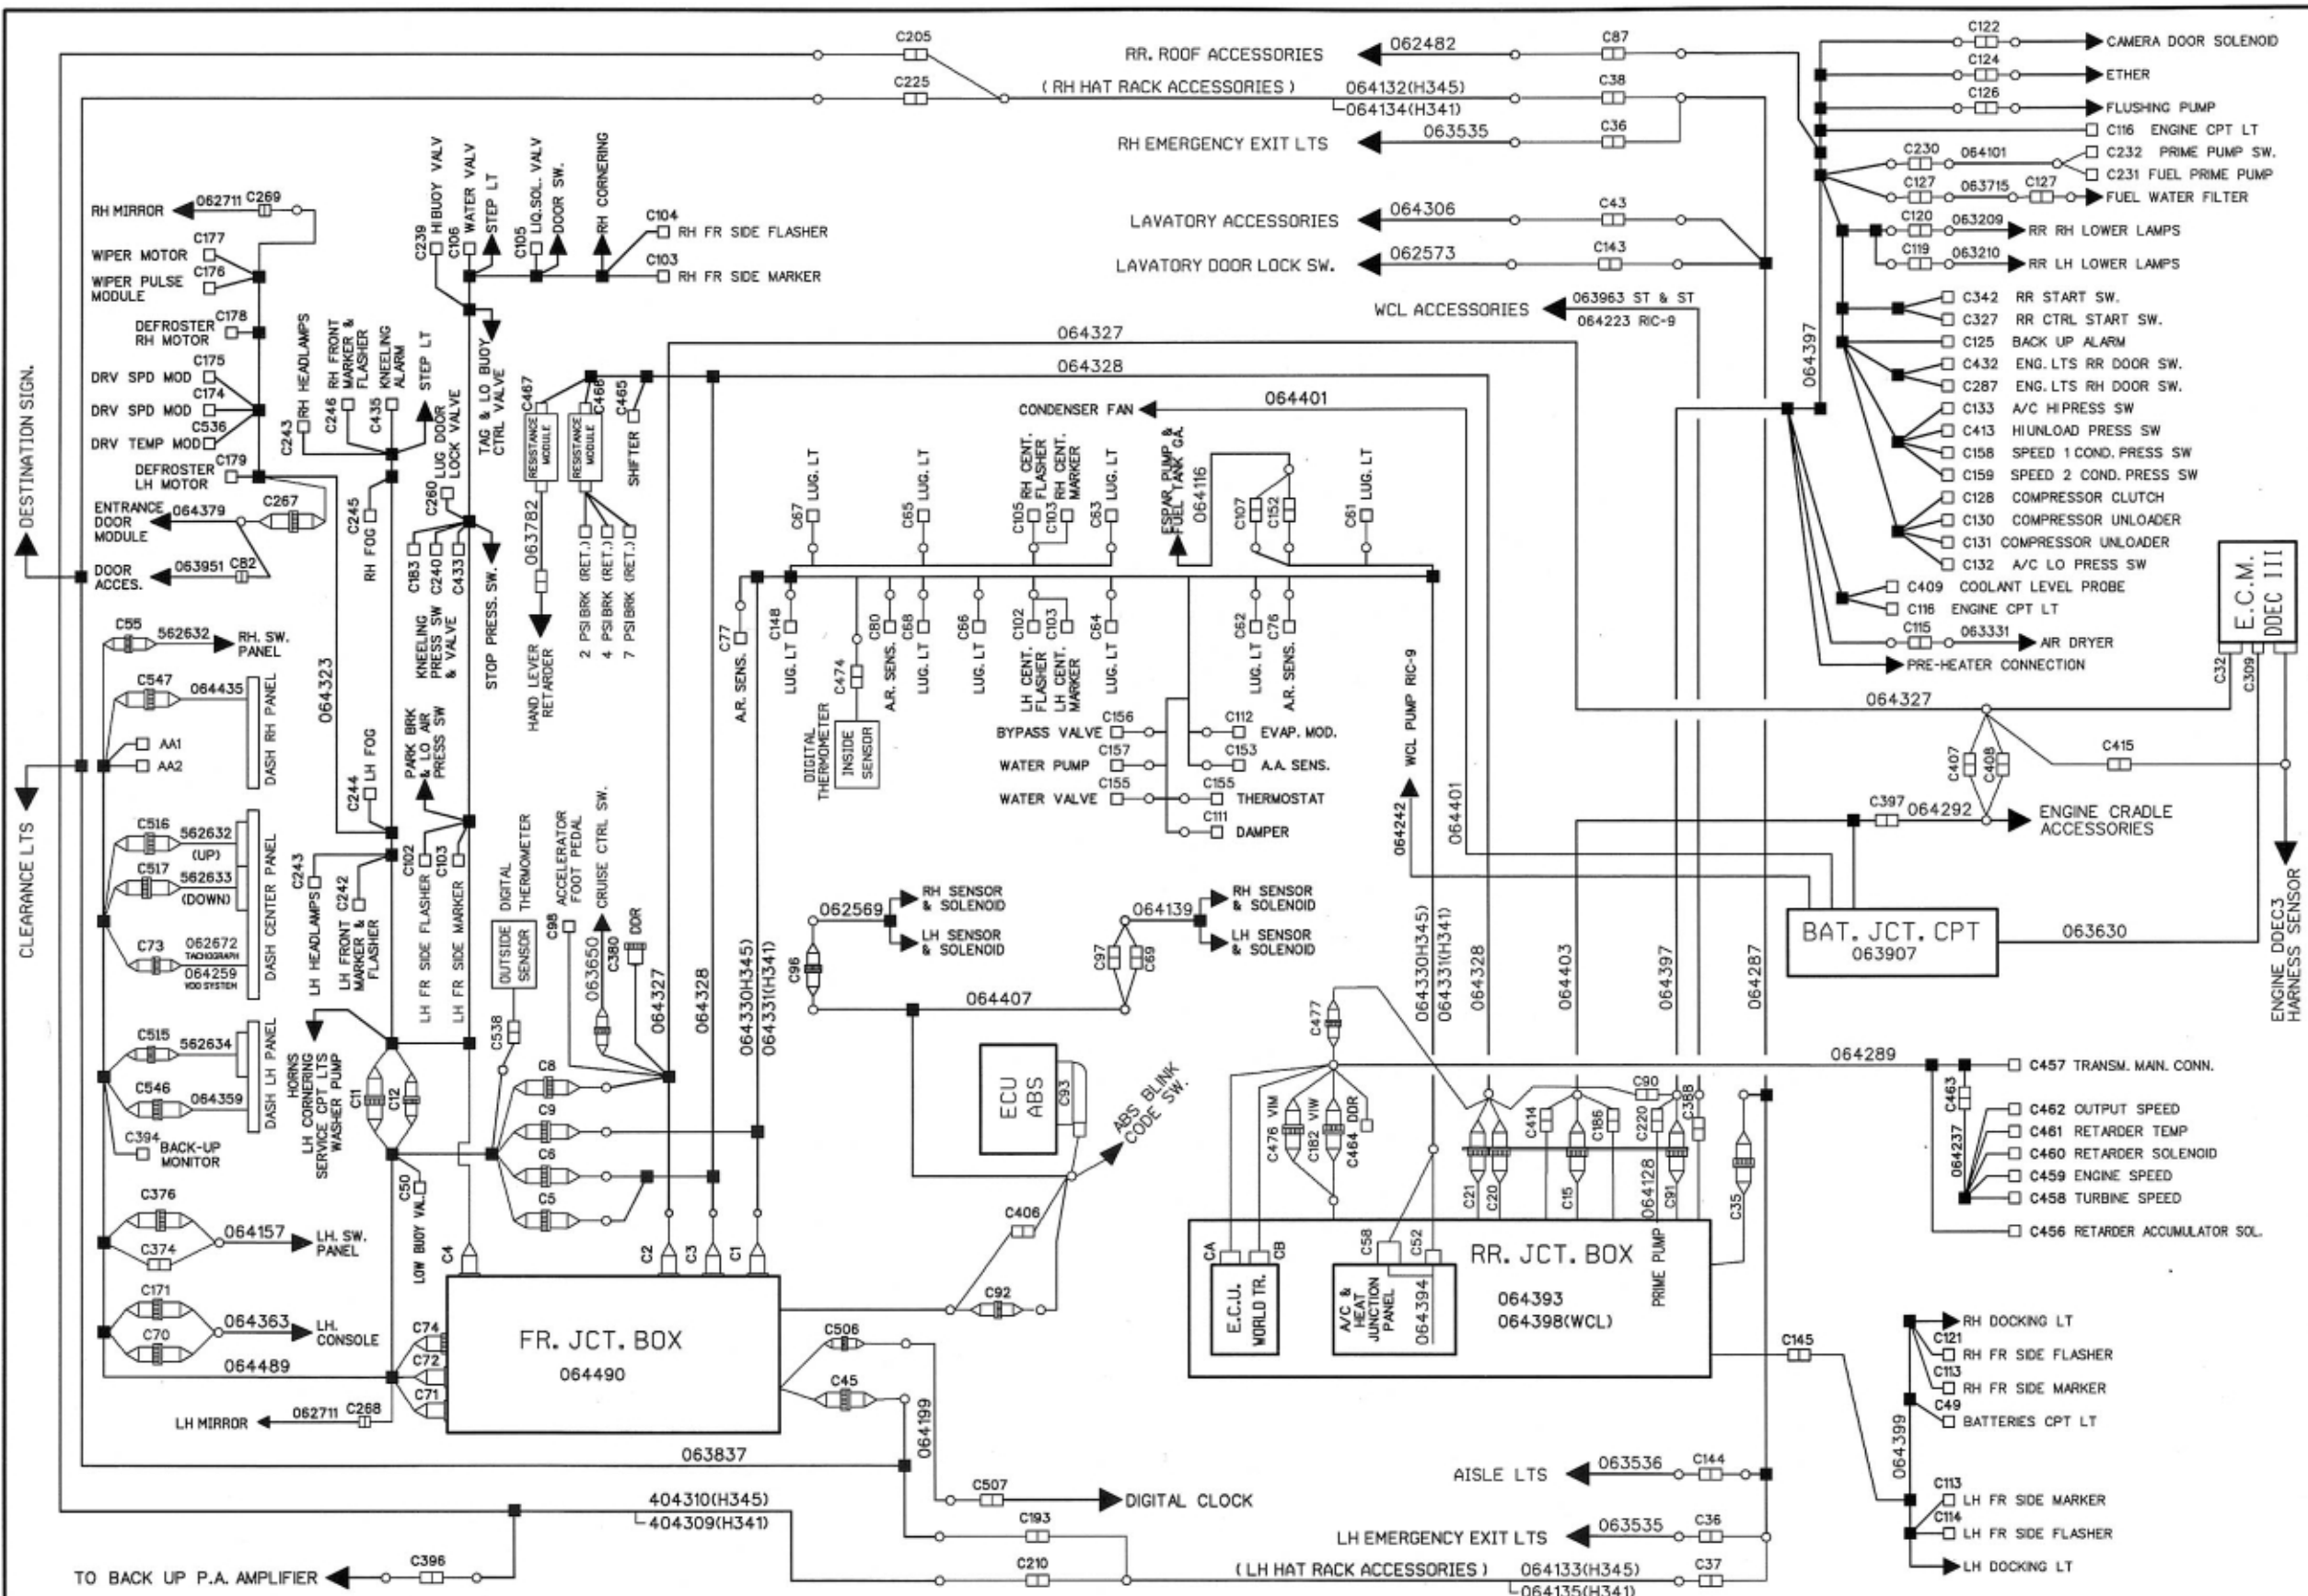

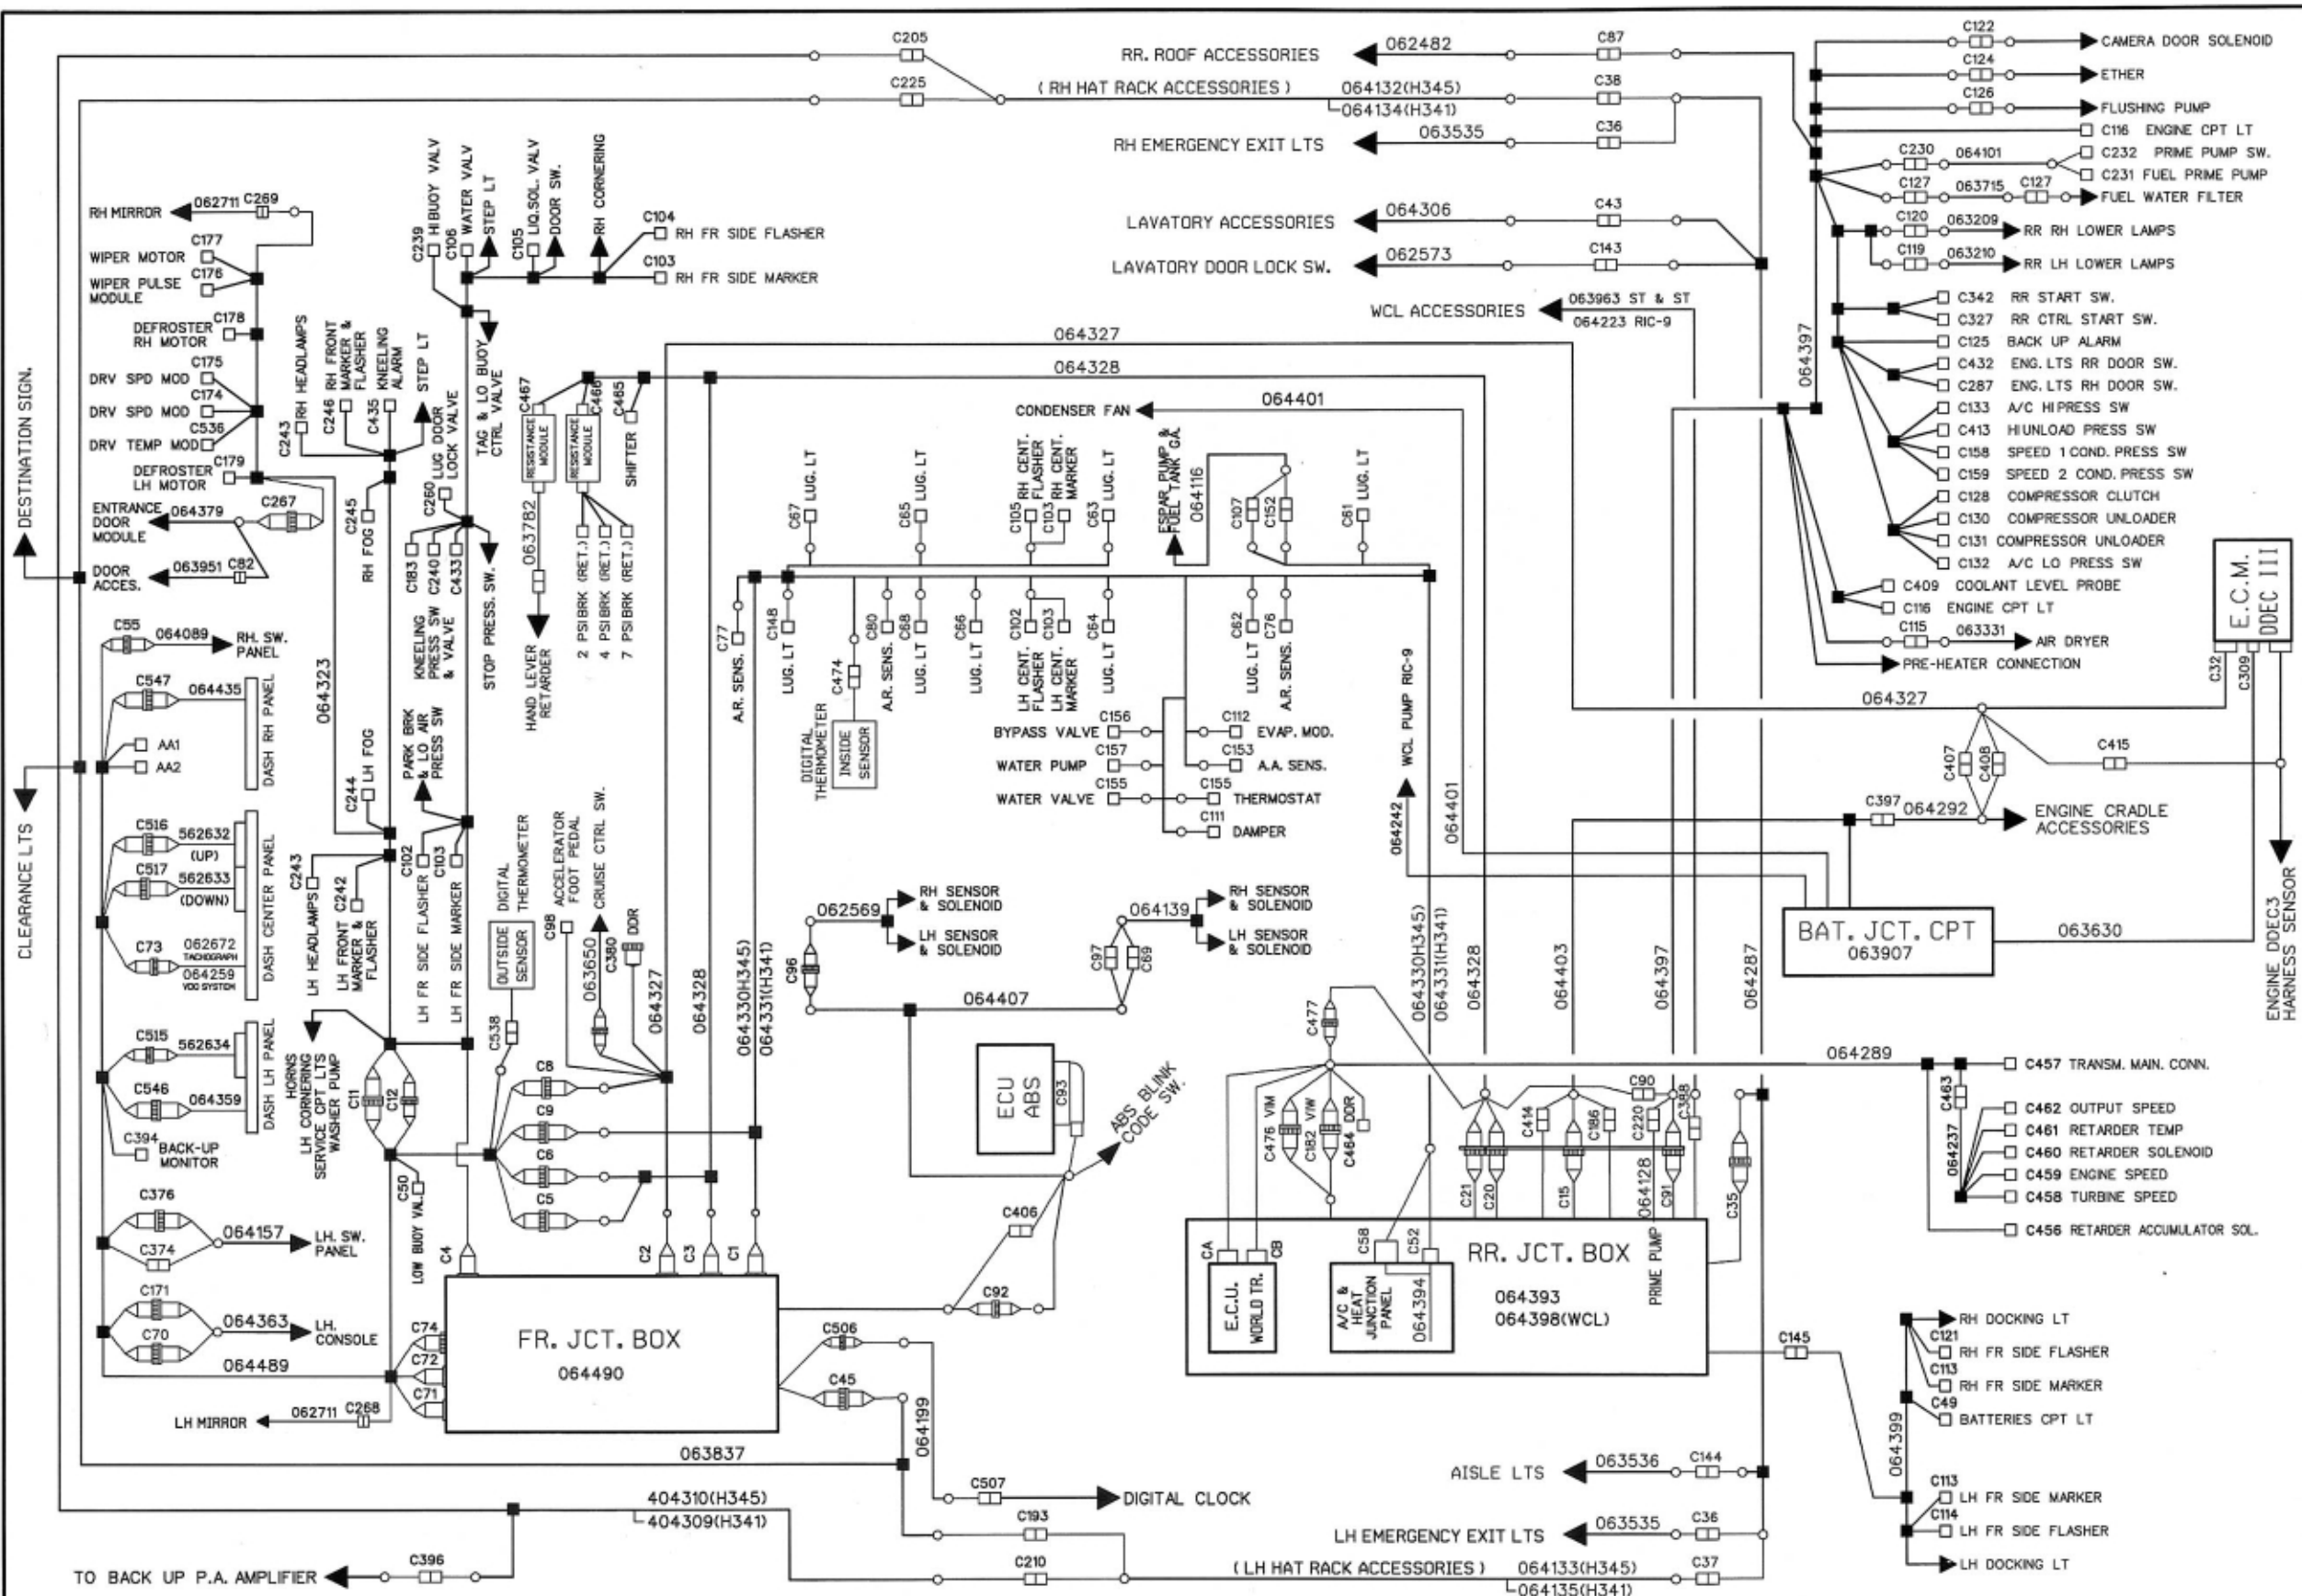

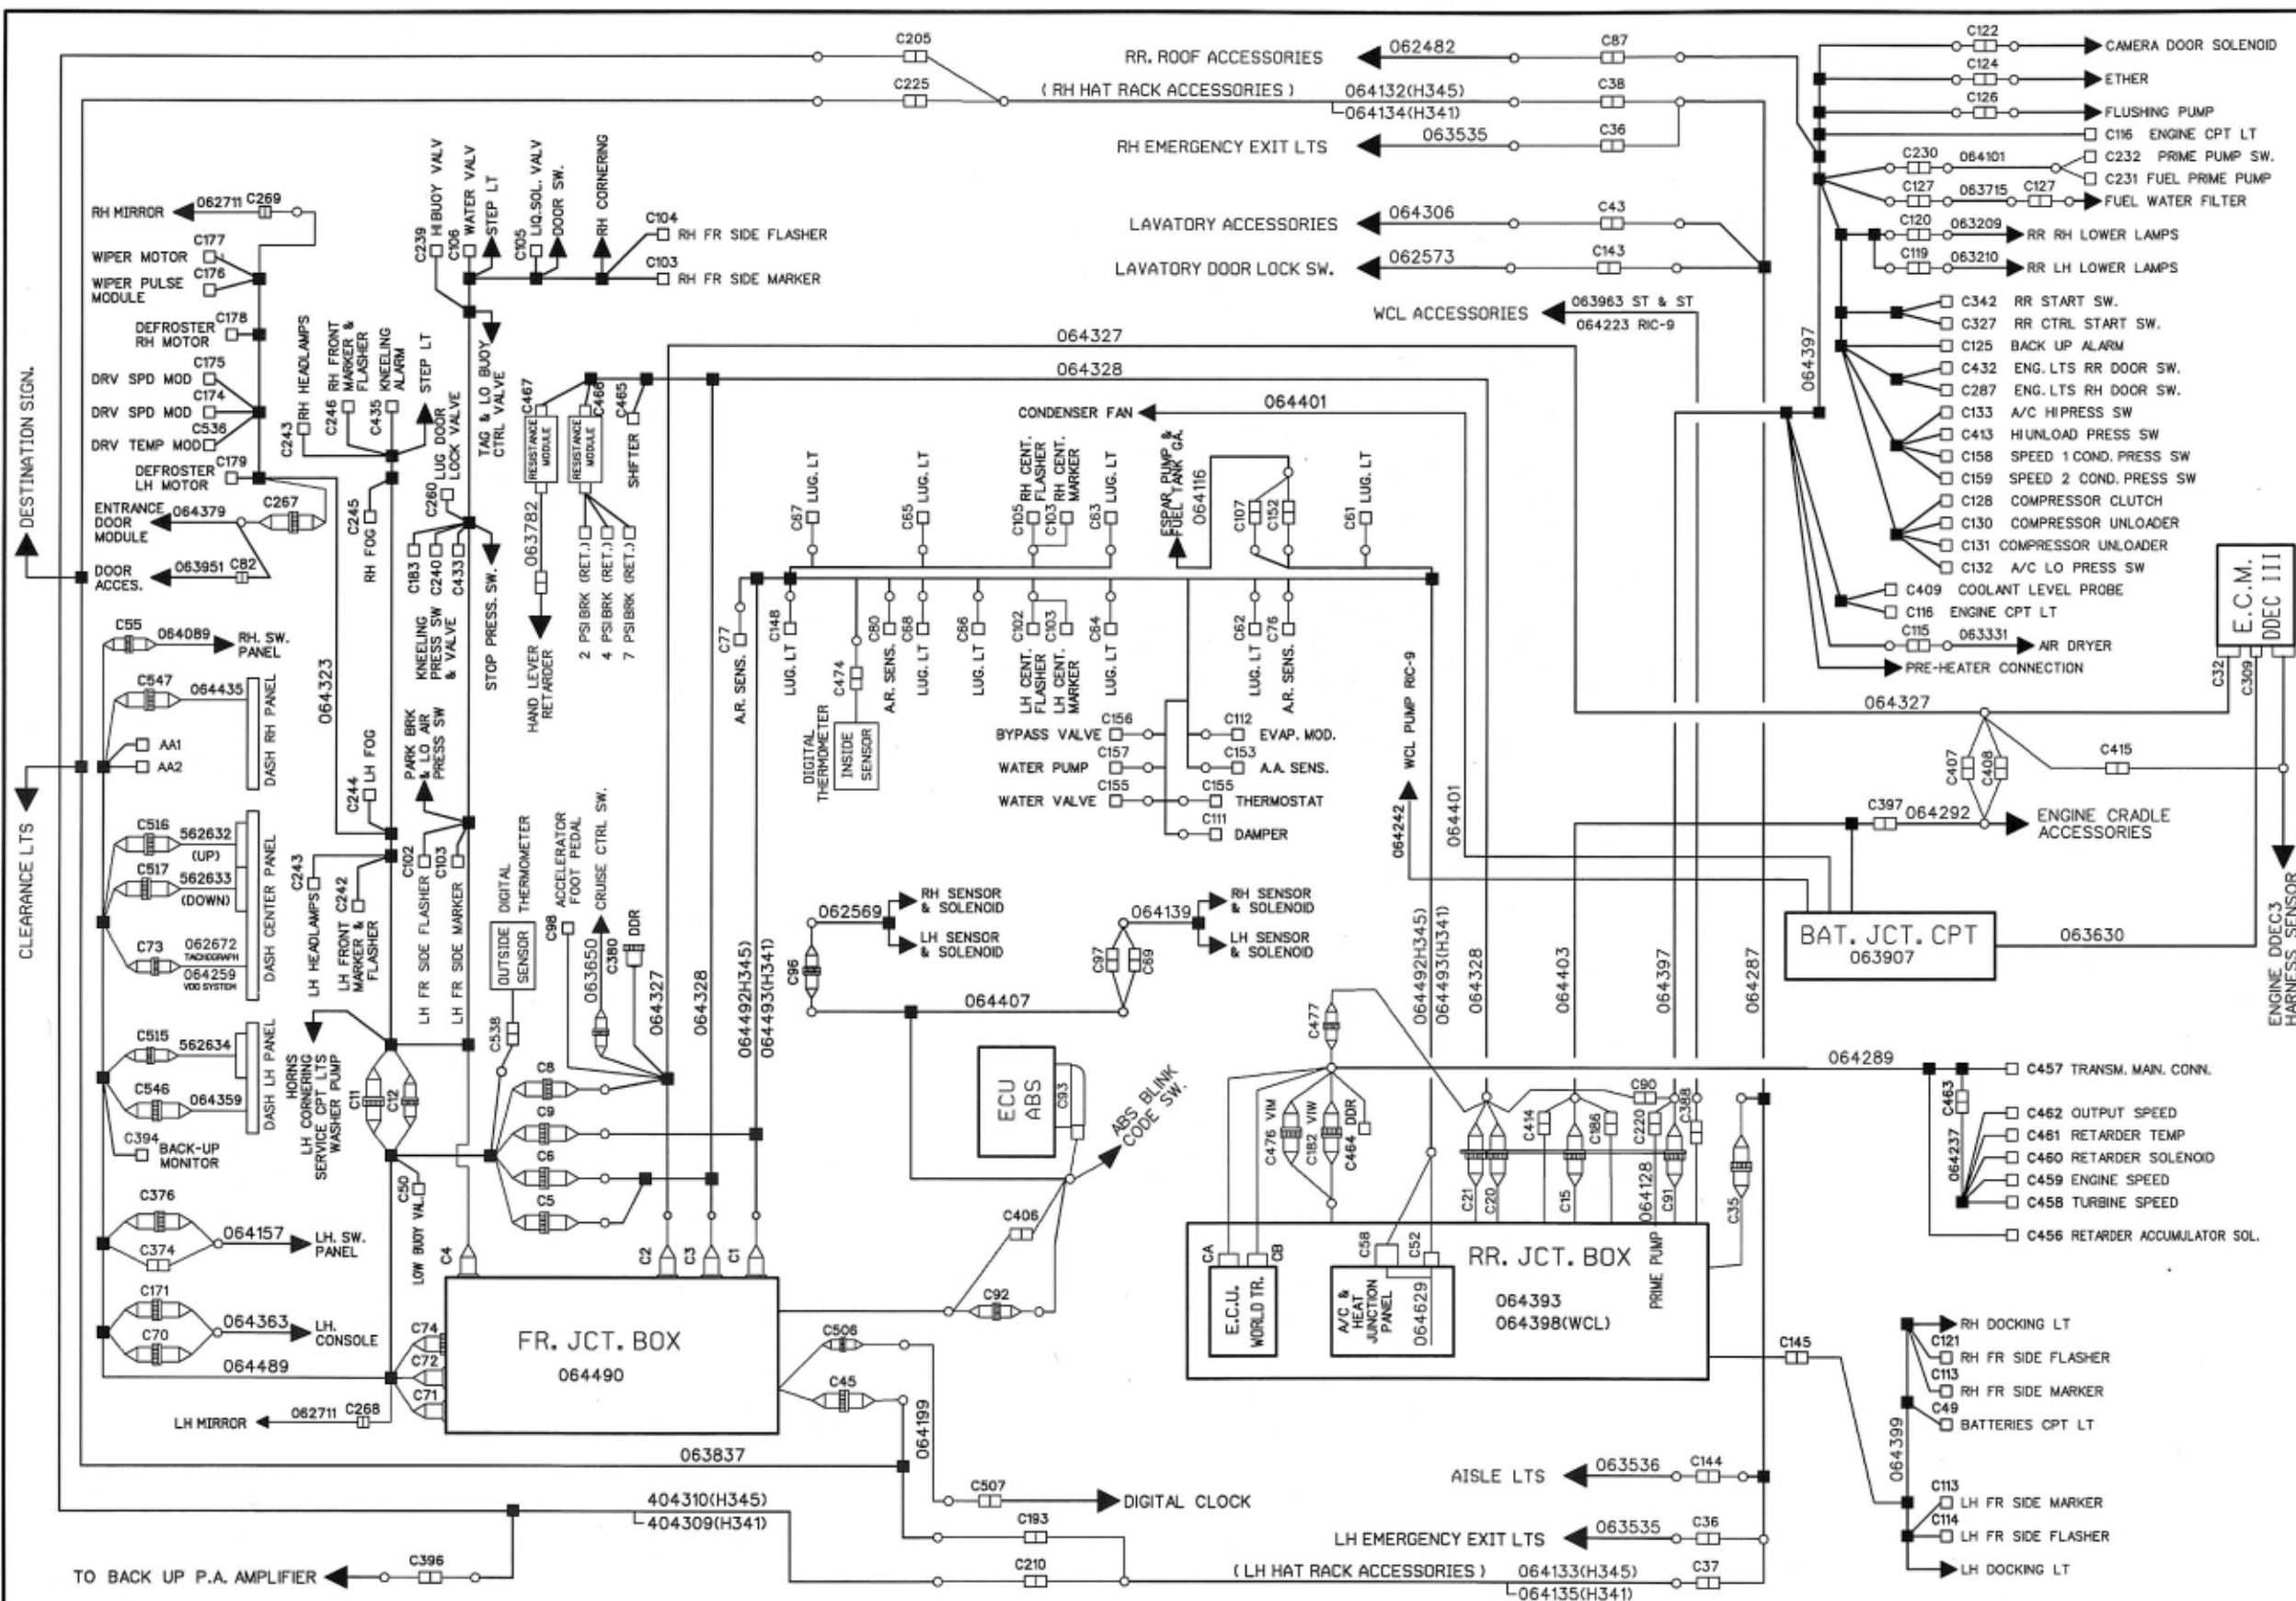

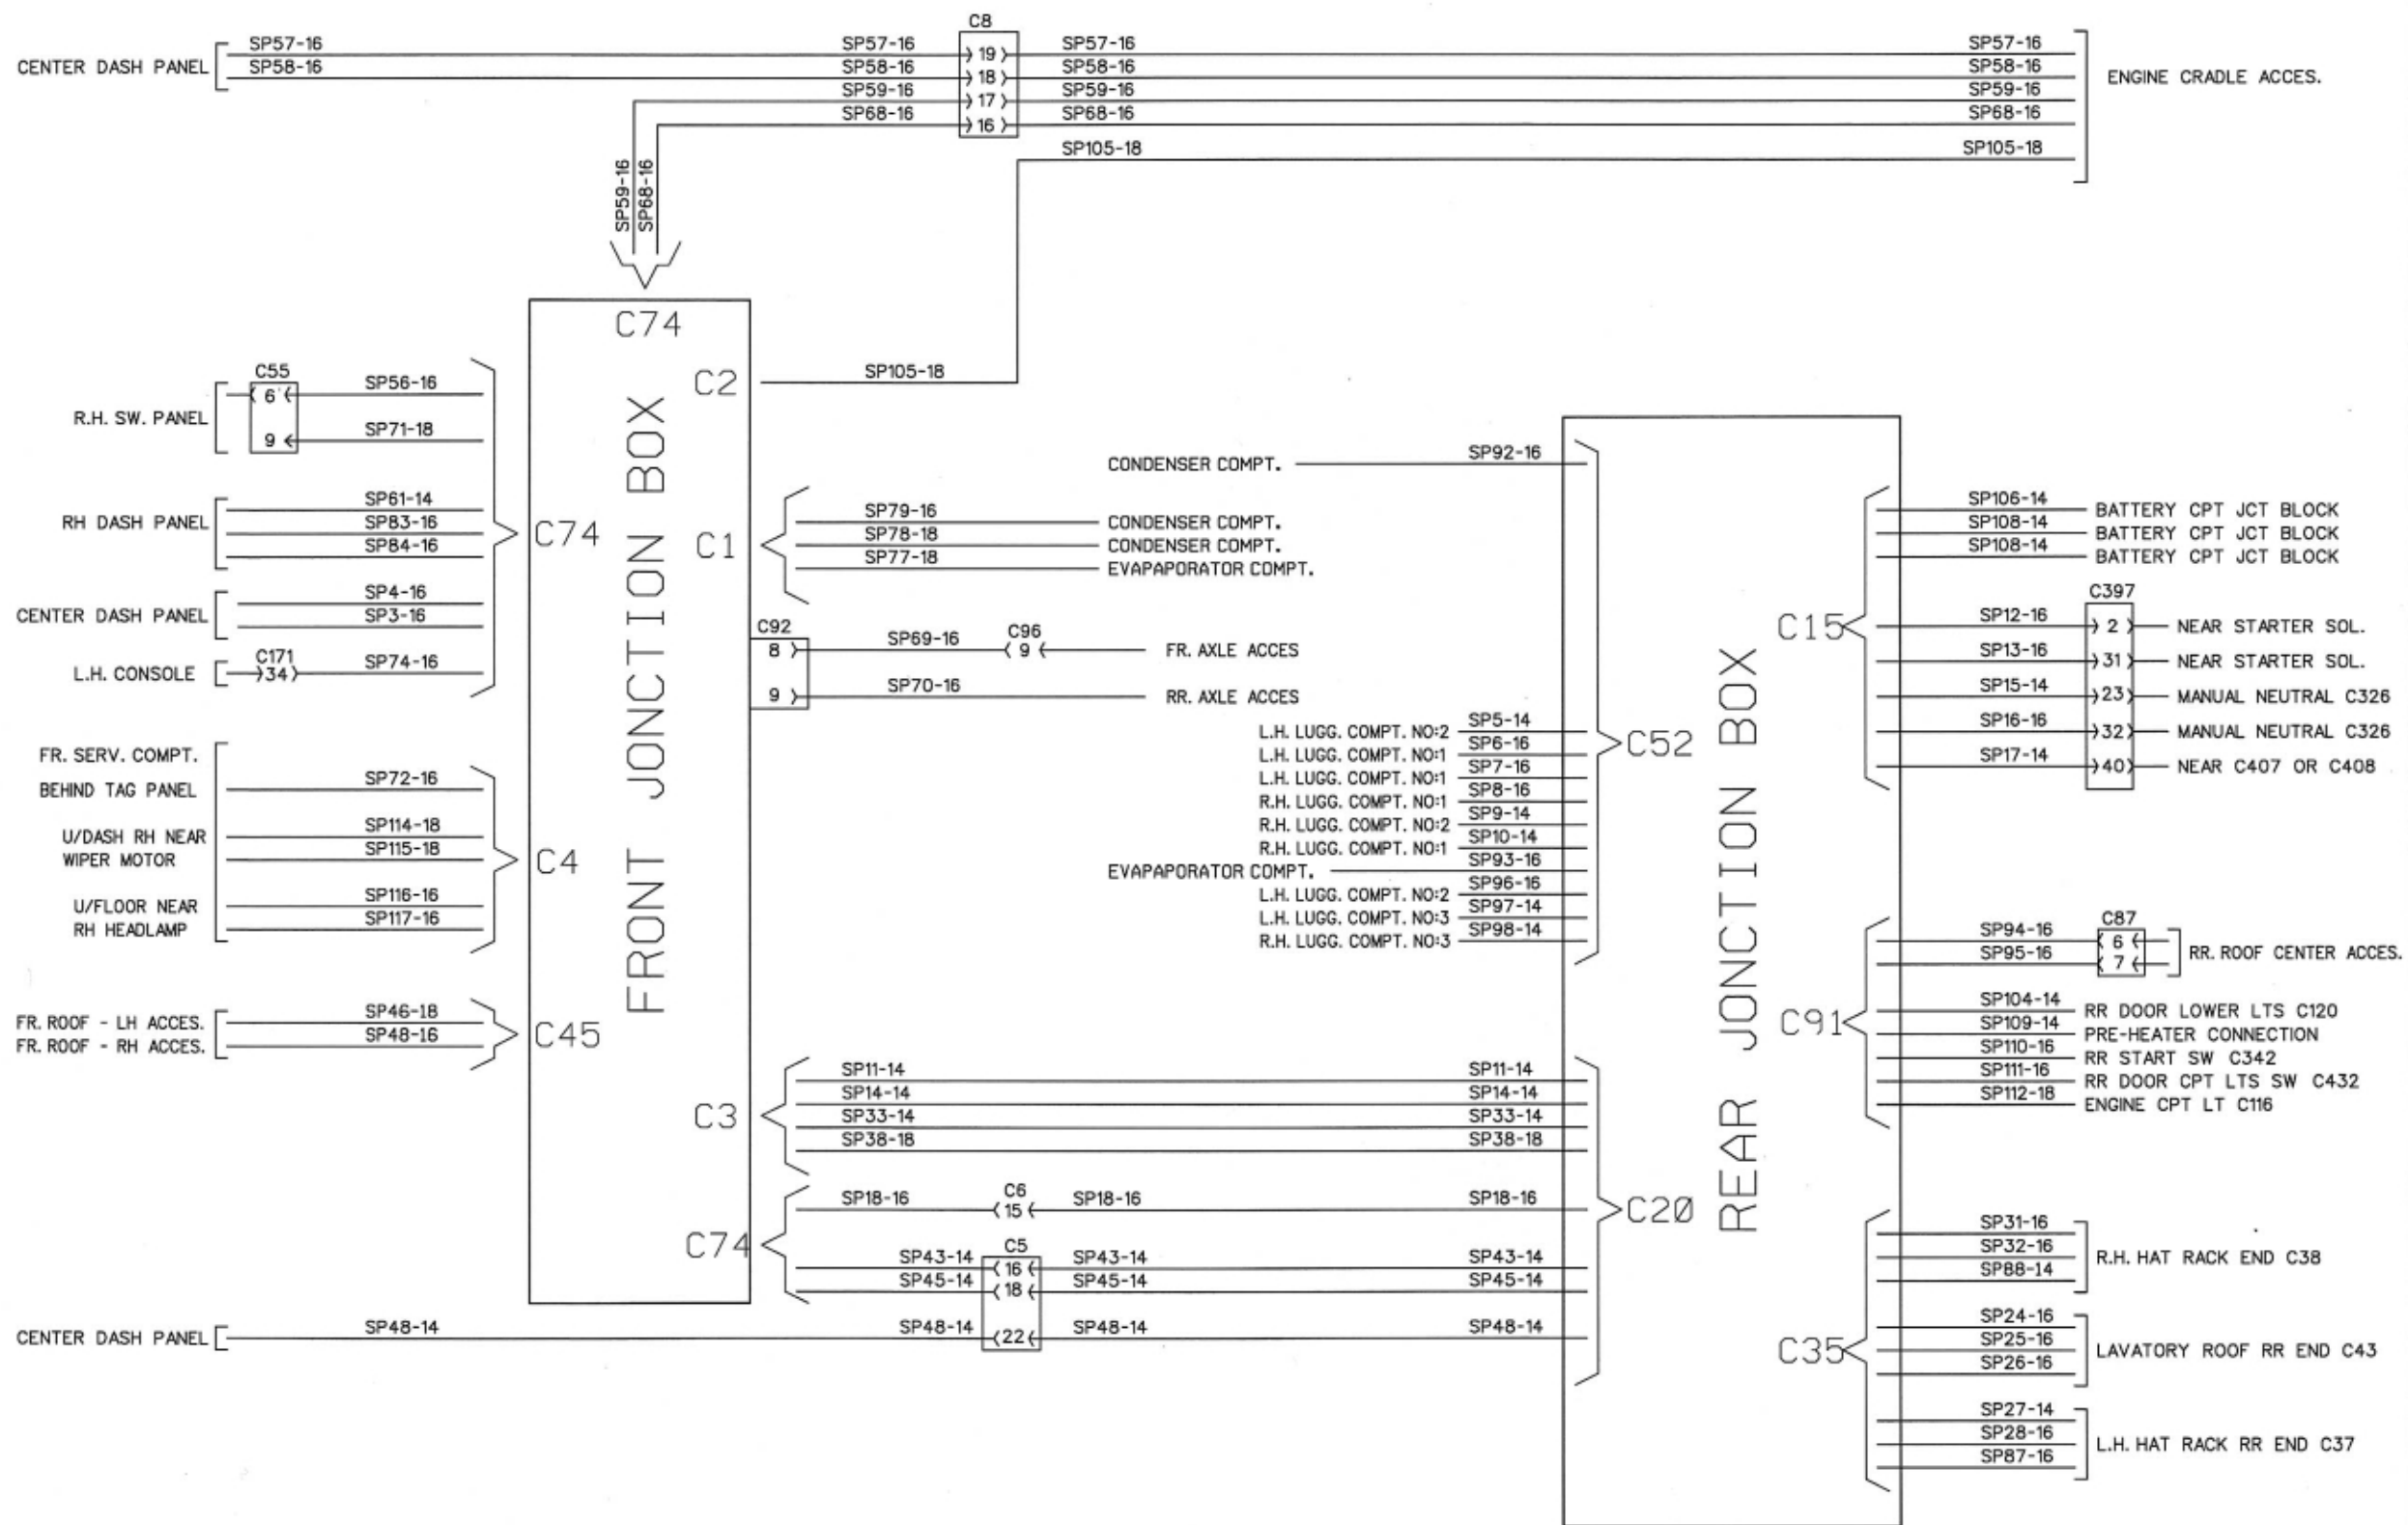

CIRCUIT NUMBER CODE

No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION
B A	INTERIOR LTS-110V FLUORESCENT	S P 15	SPARE-RJB TO ENGINE	S P 115	SPARE-FJB TO U/DASH WIPER	0 M 4	FS - ELECTRICAL MOTOR GRD
B B	INTERIOR LTS-110V FLUORESCENT	S P 16	SPARE-RJB TO ENGINE	S P 116	SPARE-FJB TO U/DASH FLOOR	0 M 5	FS - ELECTRICAL MOTOR GRD
D 1	SOUND SYSTEM-FR RH SPEAKER	S P 17	SPARE-RJB TO ENGINE	S P 117	SPARE-FJB TO U/DASH FLOOR	0 M 6	FS - FJB GRD
D 2	SOUND SYSTEM-FR RH SPEAKER	S P 18	SPARE-FJB TO RJB	W C	A/C & HEAT SYST-EVAP CTR SIGN	0 M 7	FS - ELECTRICAL MOTOR GRD
D 3	SOUND SYSTEM-RR RH SPEAKER	S P 24	SPARE-RJB TO LAVATORY ROOF	Y C	INTERIOR LTS-110V FLUORESCENT	0 M	RS - ENGINE CPT ACCES. GRD
D 4	SOUND SYSTEM-RR RH SPEAKER	S P 25	SPARE-RJB TO LAVATORY ROOF	Y D	INTERIOR LTS-110V FLUORESCENT	0 M R	24V DISC. SW. RLY GRD SIGNAL
D 5	SOUND SYSTEM-RR RH SPEAKER	S P 26	SPARE-RJB TO LAVATORY ROOF	0	BC - BAT. CPT CHASSIS GRD	0 M S	24V DISC. SW. RLY GRD SIGNAL
D 6	SOUND SYSTEM-RR RH SPEAKER	S P 27	SPARE-RJB TO LH HAT RACK	0	CONDENSER CPT GRD	0 N	RS - ENGINE CPT ACCES. GRD
D 7	SOUND SYSTEM-RR RH SPEAKER	S P 28	SPARE-RJB TO LH HAT RACK	0	RS - RR JCT BOX RLY GRD	0 P	RS - ENGINE CPT ACCES. GRD
D 8	SOUND SYSTEM-RR RH SPEAKER	S P 31	SPARE-RJB TO RH HAT RACK	0	GALLEY GRD	0 R	FS - SOUND SYS. JCT PANEL GRD
D 3 4	SOUND SYSTEM-RR RH SPEAKER	S P 32	SPARE-RJB TO RH HAT RACK	0 A	BC - SHIELD GRD	0 R	RS - RJB GRD
D 6 7	SOUND SYSTEM-RR RH SPEAKER	S P 33	SPARE-FJB TO RJB	0 A	RS - RR JCT BOX RLY GRD	0 R	RS - ENGINE CPT ACCES. GRD
G 1	SOUND SYSTEM-RR LH SPEAKER	S P 38	SPARE-FJB TO RJB	0 A	FRS - FR ROOF ACCES. GRD	0 R E	RADIO & CTRL HEAD CHASSIS GRD
G 2	SOUND SYSTEM-FR LH SPEAKER	S P 43	SPARE-FJB TO RJB	0 A	RS - LUG. CPT ACCES. GRD	0 R H	RS - RR END LAMPS RH GRD
G 3	SOUND SYSTEM-FR LH SPEAKER	S P 45	SPARE-FJB TO RJB	0 A A	RS - VOLTAGE REGULATOR GRD	0 S 2	SOUND SYSTEM RADIO GRD
G 4	SOUND SYSTEM-RR LH SPEAKER	S P 46	SPARE-RJB TO LH FR ROOF	0 B	EC - ENGINE GRD	0 S 3	SOUND SYSTEM VIDEO GRD
G 5	SOUND SYSTEM-RR LH SPEAKER	S P 48	SPARE-RJB TO DASH CENTER PANEL	0 B	FRS - FR ROOF HEAT WIND GRD	0 S S	SOUNS SYSTEM BATT. GRD
G 6	SOUND SYSTEM-RR LH SPEAKER	S P 56	SPARE-ENGINE TO RH SW PANEL	0 B	RS - LUG. CPT ACCES. GRD	0 T	FS - DASH ACCES. GRD
G 7	SOUND SYSTEM-RR LH SPEAKER	S P 57	SPARE-DASH CENTER PANEL TO ENG.	0 B E	RJB - BAT. EQUAL. BAT GRD	0 T 1	FS - DASH ACCES. GRD
G 8	SOUND SYSTEM-RR LH SPEAKER	S P 58	SPARE-DASH CENTER PANEL TO ENG.	0 C	EC - STARTER MOTOR GRD	0 T 2	FS - DASH ACCES. GRD
G 3 4	SOUND SYSTEM-RR LH SPEAKER	S P 59	SPARE-FJB TO ENGINE	0 C	FS - SERV. CPT ACCES. GRD	0 T 3	FS - DASH ACCES. GRD
G 6 7	SOUND SYSTEM-RR LH SPEAKER	S P 61	SPARE-FJB TO DASH RH PANEL	0 C	BC - FAN CONDENSER GRD	0 T 4	FS - DASH ACCES. GRD
L 1 A	INTERIOR LTS-110V FLUORESCENT	S P 68	SPARE-FJB TO ENGINE	0 C R	24V DISC. SW. RLY GRD SIGNAL	0 V	RR JCT BOX CPT GRD STUD
L 1 B	INTERIOR LTS-110V FLUORESCENT	S P 69	SPARE-FJB TO FR AXLE	0 C S	24V DISC. SW. RLY GRD SIGNAL	0 V A	BATTERY TO EQUALISER 0V
L 2 A	INTERIOR LTS-110V FLUORESCENT	S P 70	SPARE-FJB TO FR AXLE	0 C 1	FS - SERV. CPT ACCES. GRD	0 W	FS - HEATED WINDSHIELD
L 2 B	INTERIOR LTS-110V FLUORESCENT	S P 71	SPARE-FJB TO RH SW PANEL	0 C 2	FS - SERV. CPT ACCES. GRD	0 W	RS - RR JCT BOX (WCL) GRD
L 8	ENG. BLK & WATER TANK-HEATER	S P 72	SPARE-FJB TO FR SERV CPT	0 C 3	FS - SERV. CPT ACCES. GRD	0 W C	RS - RR JCT BOX GRD (WCL)
L 9	ENG. BLK & WATER TANK-HEATER	S P 74	SPARE-FJB TO LH CONSOLE	0 D	BC - FAN CONDENSER GRD	0 X	RS - RR JCT BOX GRD
L 0	110V RECEPTACLE- 110V FLUOR.	S P 77	SPARE-FJB TO EVAPORATOR CPT	0 D	RS - HAT RACK ACCES. LH GRD	0 Y	ABS FR JCT BOX CPT GRD STUD
L 1	110V RECEPTACLE- 110V FLUOR.	S P 78	SPARE-FJB TO CONDENSER CPT	0 D F	RS - RR SIDE FLASH & MARK GRD	0 Y	RR JCT BOX GRD
L 2	110V RECEPTACLE- 110V FLUOR.	S P 79	SPARE-FJB TO CONDENSER CPT	0 D R	RS - RJB DOCKING LT RESISTORS	0 Y 1	ABS FR JCT BOX CPT GRD STUD
R A	INTERIOR LTS-110V FLUORESCENT	S P 87	SPARE-RJB TO LH HAT RACK	0 E	RS - HAT RACK ACCES. LH GRD	0 Z	RR JCT BOX CPT GRD STUD
R B	INTERIOR LTS-110V FLUORESCENT	S P 88	SPARE-RJB TO RH HAT RACK	0 F	RS - HAT RACK ACCES. RH GRD	0 0	FJB & RJB BATT. GRD
S H 1	SHIELD CHASSIS GRD	S P 92	SPARE-RJB TO CONDENSER CPT	0 G	RS - HAT RACK ACCES. RH GRD	0 0 A	FBG - T.T.LT. MODULES BATT. GRD
S H 2	SHIELD CHASSIS GRD	S P 93	SPARE-RJB TO EVAPORATOR CPT	0 H	RS - LAVATORY ACCES. GRD	0 0 Y	FS - ABS MODULLE BATT. GRD
S H 3	SHIELD CHASSIS GRD	S P 94	SPARE-RJB TO RR ROOF	0 J	FS - LH CONSOLE SW GRD	0 0 S S	SOUND SYSTEM BATT. GRD
S H 4	SHIELD CHASSIS GRD	S P 95	SPARE-RJB TO RR ROOF	0 J	RS - RR ROOF ACCES. GRD	1	TACHO SYSTEM - RPM SIGNAL +
S P 2	SPARE-FJB TO FR SERV CPT	S P 96	SPARE-RJB TO LUGG CPT #2	0 K	RS - RR ROOF ACCES. GRD	2 A	A/C & HEAT SYSTEM-COOL 1 SIGN
S P 3	SPARE-FJB TO CENTER DASH	S P 97	SPARE-RJB TO LUGG CPT #3	0 K	RS - RJB A/C JCT PANEL GRD	2 B	A/C & HEAT SYSTEM-COOL SIGN
S P 4	SPARE-FJB TO CENTER DASH	S P 98	SPARE-RJB TO LUGG CPT #3	0 L	FS - FR SERVICE CPT LTS GRD	2 H	A/C & HEAT SYSTEM-HI PRESS SW
S P 5	SPARE-RJB TO LUGG CPT #2	S P 104	SPARE-RJB TO ENGINE CPT	0 L 1	FS - FR SERVICE CPT LTS GRD	2 H L	A/C & HEAT SYSTEM-LO & HI PRESS SW
S P 6	SPARE-RJB TO LUGG CPT #1	S P 105	SPARE-FJB TO ENGINE	0 L 2	FS - FR SERVICE CPT LTS GRD	2 L	A/C & HEAT SYSTEM-LO PRESS SW
S P 7	SPARE-RJB TO LUGG CPT #1	S P 106	SPARE-RJB TO BATT. CPT.	0 L 3	FS - FJB GRD	4	HOSTESS & PASSENGER CHIME
S P 8	SPARE-RJB TO LUGG CPT #1	S P 107	SPARE-RJB TO BATT. CPT.	0 L 4	FS - FJB GRD	4 A	HOSTESS & PASSENGER CHIME
S P 9	SPARE-RJB TO LUGG CPT #2	S P 108	SPARE-RJB TO BATT. CPT.	0 L 5	FS - CIGAR LIGHTER	4 B	PASSENGER CHIME
S P 10	SPARE-RJB TO LUGG CPT #1	S P 109	SPARE-RJB TO ENGINE CPT.	0 L	RS - ENGINE CPT ACCES. GRD	4 C	HOSTESS CHIME
S P 11	SPARE-FJB TO RJB	S P 110	SPARE-RJB TO ENGINE CPT.	0 L	ENTRANCE DOOR (SEDAN) GRD	5	INTERIOR LTS-AISLE & EMERG. EXIT
S P 12	SPARE-RJB TO ENGINE	S P 111	SPARE-RJB TO ENGINE CPT.	0 L H	RS - RR END LAMPS LH GRD	5	UPPER WINDSHIELD DEFROSTER
S P 13	SPARE-RJB TO ENGINE	S P 112	SPARE-RJB TO ENGINE CPT.	0 M	FS - ELECTRICAL MOTOR GRD	5 D	UPPER WINDSHIELD DEFROSTER
S P 14	SPARE-FJB TO RJB	S P 114	SPARE-FJB TO U/DASH WIPER	0 M 3	FS - ELECTRICAL MOTOR GRD	5 E	UPPER WINDSHIELD DEFROSTER

CIRCUIT NUMBER CODE

No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION
5 N	INTERIOR LTS-EMERGENCY EXIT	12 I F	FR JCT BOX 12V IGNITION	24	BAT CPT 24V BATTERY	24 W C	BATT.CPT TO HYD. PUMP (WCL)
5 N C	SPEED SIGNAL LOWER 5MPH	12 P	LH CONSOLE POWER OUTLET	24	FR JCT BOX 24V DISC SW	24 W L	24V BATTERY-HYD. PUMP (WCL)
5 N O	SPEED SIGNAL HIGHER 5MPH	12 R	BAT CPT 12V DISC RLY TO RJB	24 A	BOOSTER BLOCK 24V DISC SW	25	12VAC GEN RLY ON SIGNAL
6	INTERIOR LTS-AISLE	12 R	MEMORY BATTERY RADIO	24 A	FR JCT BOX 24V DISC SW	25	12VAC GEN RLY ON SIGNAL
7 B	ENTRANCE DOOR (SEDAN)	12 S	SOUND SYSTEM 12V RADIO	24 A	RR JCT BOX 24V DISC SW	25 A	NOT GENERATOR-WARNING LT
7 D	ENTRANCE DOOR (SEDAN)	12 S1	SOUND SYSTEM 12V RADIO	24 B	24V STARTER RLY FEEDING	25 B	EXTERIOR LTS-DAYTIME RUN LTS
7 D A	ENTRANCE DOOR (SEDAN)	12 S2	SOUND SYSTEM 12V RADIO	24 B	FR JCT BOX 24V DISC SW	26	CIGAR LIGHTER
9	INTERIOR LTS-ENGINE CPT	12 S B	SOUND SYSTEM 12V FEEDING	24 B	RR JCT BOX 24V DISC SW	26	DRIVER'S WINDOW LIFTER
9 A	INTERIOR LTS-ENGINE CPT	12 S S	SOUND SYSTEM 12V FEEDING	24 B E	RJB CPT-BAT EQ MONITOR HOT WIRE	26 B	DRIVER'S WINDOW LIFTER
9 B	INTERIOR LTS-ENGINE CPT	12 V A	BATTERY TO EQUALIZER 12V	24 C	FR JCT BOX 24V DISC SW	26 C	DRIVER'S WINDOW LIFTER
9 E	INTERIOR LTS-FR SERVICE CPT	12 V D	12V HOT WIRE DISTRIBUTION	24 C	RR JCT BOX 24V DISC SW	27	LAVATORY-EMERGENCY SONALERT
9 F	INTERIOR LTS-FR SERVICE CPT	12 V F	BAT CPT 12V FJB & IC	24 D	BAT CPT 24V HOT WIRE	28 A	A/C & HEAT SYSTEM-HI PRESSURE
10	INTERIOR LTS-LUGGAGE CPT	12 V I	12V IGNITION DISTRIBUTION	24 D	FR JCT BOX 24V HOT WIRE	29	A/C & HEAT SYSTEM-DRIVER'S HTR
10 A	INTERIOR LTS-LUGGAGE CPT	12 V R	BAT CPT 12V DISC RLY TO RJB	24 D	RR JCT BOX 24V HOT WIRE	29 A	A/C & HEAT SYSTEM-DRIVER'S HTR
10 B	INTERIOR LTS-LUGGAGE CPT	12 W	12V BATTERY DDEC III	24 D A	A/C JCT BOX 24V HOT WIRE	29 B	A/C & HEAT SYSTEM-DRIVER'S HTR
10 D	INTERIOR LTS-LUGGAGE CPT	12 W	ENTRANCE DOOR (SEDAN)	24 E	BAT CPT 24V DISC SW	30 A	GALLEY
10 F	INTERIOR LTS-LUGGAGE CPT	12 W A	ENTRANCE DOOR (SEDAN)	24 E	FR JCT BOX 24V DISC SW	31 A	A/C & HEAT SYSTEM-UNLOADER
10 H	INTERIOR LTS-LUGGAGE CPT	12 X	FR JCT BOX 12V DISC SW	24 E	RR JCT BOX 24V DISC SW	31 B	A/C & HEAT SYSTEM-UNLOADER
10 K	INTERIOR LTS-LUGGAGE CPT	12 X2	FR JCT BOX 12V DISC SW	24 F	FR JCT BOX 24V DISC SW	31 B	WIPER & WASHER SYSTEM
10 R	INTERIOR LTS-LUGGAGE DOOR AJAR	12 Y	FR JCT BOX 12V DISC SW	24 F	RR JCT BOX 24V DISC SW	31 C	WIPER & WASHER SYSTEM
11	FR DESTINATION SIGN	13 A	ALARM & SIGNAL-LO AIR PRIM.	24 G	FR JCT BOX 24V DISC SW	31 D	WIPER & WASHER SYSTEM
11 A	FR DESTINATION SIGN	13 B	ALARM & SIGNAL-LO AIR SEC.	24 G	RR JCT BOX 24V DISC SW	31 E	WIPER & WASHER SYSTEM
11 B	FR DESTINATION SIGN	14	LAVATORY-FLUSHING PUMP	24 H	FR JCT BOX 24V DISC SW	31 J	WIPER & WASHER SYSTEM
11 C	FR DESTINATION SIGN	14 A	LAVATORY-FLUSHING PUMP	24 H	RR JCT BOX 24V DISC SW	31 X	WIPER & WASHER SYSTEM
11 D	FR DESTINATION SIGN	15	EXTERIOR LTS-MULTI FUNC LEVEL	24 I	FR JCT BOX 24V IGNITION	32	EXTERIOR LTS-BACK-UP
11 E	FR DESTINATION SIGN	15 A	WIPER & WASHER UPPER WINDSHIELD	24 I	RR JCT BOX 24V IGNITION	32 B	EXTERIOR LTS-BACK-UP
11 K	FR DESTINATION SIGN	16	SPEED - SIGNAL +	24 I A	FR JCT BOX 24V IGNITION	32 C	BACK-UP PWR & SIGNAL
12	12V BAT ELECTRONIC JCT BLOCK	16 A	SPEED - SIGNAL +	24 I A	RR JCT BOX 24V IGNITION	32 D	BACK-UP ALARM
12	BAT CPT 12V BATTERY	16 T	SPEED - SIGNAL +	24 I B	FR JCT BOX 24V IGNITION	32 F	BACK-UP MONITOR
12 A	FR JCT BOX 12V DISC SW	17	EXTERIOR LTS-FLASHER UNIT	24 I B	RR JCT BOX 24V IGNITION	35	ENTRANCE DOOR (SEDAN)
12 A	RR JCT BOX 12V DISC SW	17 A	EXTERIOR LTS-FLASHER UNIT	24 I C	FR JCT BOX 24V IGNITION	35 B	ENTRANCE DOOR (SEDAN)
12 B	12V BAT ELECTRICAL JCT BLOCK	19	DIFFERENTIAL OIL TEMP	24 P	FR JCT BOX 24V DISC SW	35 B B	ENTRANCE DOOR (SEDAN)
12 B	RR JCT BOX 12V DISC SW	20	SPEED - SIGNAL -	24 S	24V DISC SW RLY SIGNAL	35 D	ENTRANCE DOOR (SEDAN)
12 B	FR JCT BOX 12V DISC SW	20 T	SPEED - SIGNAL -	24 S1	SOUND SYSTEM 24V AMPLIFIER	36	JACOB BRAKE SYSREM
12 B E	BAT. EQUALIZER MONITOR	20 W	SPEED - SIGNAL -	24 S2	SOUND SYSTEM 24V AMPLIFIER	36 A	JACOB BRAKE SYSREM
12 C	FR JCT BOX 12V DISC SW	21	EXTERIOR LTS-DIRECTIONNAL LH	24 S3	SOUND SYSTEM 24V VIDEO	38	INTERIOR LTS-24V FLUORESCENT
12 C	RR JCT BOX 12V DISC SW	21 A	EXTERIOR LTS-DIRECTIONNAL RH	24 S4	SOUND SYSTEM 24V VIDEO	38 A	INTERIOR LTS-24V FLUORESCENT
12 D	BAT CPT 12V BATTERY	21 B	EXTERIOR LTS-HAZARD	24 S B	SOUND SYSTEM 24V FEEDING	38 C	INTERIOR LTS-24V FLUORESCENT
12 E	FR JCT BOX 12V DISC SW	21 C	EXTERIOR LTS-CORNERING LH	24 S S	SOUND SYSTEM 24V FEEDING	38 D	INTERIOR LTS-24V FLUORESCENT
12 E	RR JCT BOX 12V DISC SW	21 H	EXTERIOR LTS-DIRECTIONNAL LH	24 T	RR JCT BOX 24V DISC SW	39	INTERIOR LTS-24V LH CONSOLE SW
12 F	BAT CPT 12V FJB & IC	21 K	EXTERIOR LTS-CORNERING	24 V2	RR JCT BOX 24V DISC SW	39 A	INTERIOR LTS-DRIVER'S LTS
12 F	FR JCT BOX 12V DISC SW	21 N	EXTERIOR LTS-CORNERING LH	24 V3	RR JCT BOX 24V DISC SW	41	A/C & HEAT SYSTEM-COND FAN MOT
12 F	RR JCT BOX 12V DISC SW	21 P	EXTERIOR LTS-CORNERING LH	24 V4	RR JCT BOX 24V DISC SW	41 A	A/C & HEAT SYSTEM-COND FAN MOT
12 G	FR JCT BOX 12V DISC SW	23	EXTERIOR LTS-DIRECTIONNAL RH	24 V5	RR JCT BOX 24V DISC SW	41 B	A/C & HEAT SYSTEM-COND FAN MOT
12 J	FR JCT BOX 12V DISC SW	23	EXTERIOR LTS-DIRECTIONNAL RH	24 V D	24V HOT WIRE DISTRIBUTION	42	A/C & HEAT SYSTEM-COND FAN MOT
12 I	12V IGNITION DISTRIBUTION	23 A	EXTERIOR LTS-DIRECTIONNAL RH	24 V F	BAT CPT 24V SW TO FJB & IC	42 A	A/C & HEAT SYSTEM-COND FAN MOT
12 I	RR JCT BOX 12V IGNITION	23 B	EXTERIOR LTS-DIRECTIONNAL RH	24 V A	BATTERY TO EQUALIZER 24V	44	EXTERIOR LTS-FOG
12 I A	12V IGNITION DISTRIBUTION	23 C	EXTERIOR LTS-CORNERING RH	24 V I	RR JCT BOX 24V IGNITION	44 A	EXTERIOR LTS-FOG
12 I A	FR JCT BOX 12V IGNITION	23 N	EXTERIOR LTS-CORNERING RH	24 V R	BAT CPT 24V DISC SW TO RJB	44 B	EXTERIOR LTS-FOG
12 I B	FR JCT BOX 12V IGNITION	23 P	EXTERIOR LTS-CORNERING RH	24 W	RR JCT BOX 24V DISC SW (WCL)	44 C	EXTERIOR LTS-FOG & HAZARD

CIRCUIT NUMBER CODE

No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION
45 B	A/C & HEAT SYSTEM-HEAT SIGN	63 F	EXTERIOR LTS-MARKER BLINKER	86	ENGINE CTR-STARTER SOL SIGN	115 W	WORLD TRANSM-DO NOT SHIFT SIGN
45 D	A/C & HEAT SYSTEM-WATER VALVE	63 H	EXTERIOR LTS-TAIL	86 A	ENGINE CTR-STARTER SOL SIGN	116	WORLD TRANSM-LO SIGNAL SOL. HI
45 E	A/C & HEAT SYSTEM-HEAT 1 SIGN	67	A/C & HEAT SYSTEM	88	ENGINE CTR-RR START SIGNAL	116 B	A/C & HEAT SYSTEM-DRIVER'S HTR
45 G	A/C & HEAT SYSTEM-DRIVER'S HTR	67 A	A/C & HEAT SYSTEM	89	ENGINE CTR-RR START SIGNAL	117	WORLD TRANSM-SPARE INPUT (-)
45 H	A/C & HEAT SYSTEM-DRIVER'S HTR	67 B	A/C & HEAT SYSTEM	90 B	A/C & HEAT SYSTEM-COND FAN MOT	117 A	ALARM & SIGNAL-TRANSM OIL TEMP
45 W	A/C & HEAT SYSTEM-COND. DOOR AJAR	67 C	A/C & HEAT SYSTEM & HEAT WINDS.	90 B	ENGINE CTR-MAST KEY SW FEED	117 A	ALARM & SIGNAL-TRANSM OIL TEMP
46	EXTERIOR LTS-MARKER	67 K	A/C & HEAT SYSTEM-COND FAN CTR	90 C	A/C & HEAT SYSTEM-COND FAN MOT	118	WORLD TRANSM-SPARE INPUT (+)
46 A	EXTERIOR LTS-MARKER	67 L	A/C & HEAT SYSTEM-COND FAN CTR	90 F	CHARG SYST-VOLTAGE REGUL. "B"	119	WORLD TRANSM-ENG BRK INPUT (+)
46 B	EXTERIOR LTS-MARKER	67 V	A/C & HEAT SYSTEM-WATER VALVE	90 H	A/C & HEAT SYSTEM-EVAP FAN MOT	120	WORLD TRANSM-SOL. C1
46 B	EXTERIOR LTS-MARKER	70	INTERIOR LTS-HAT RACK & RR RUN.	90 J	A/C & HEAT SYSTEM-COND FAN MOT	121	WORLD TRANSM-SOL. GRD 2
46 C	EXTERIOR LTS-MARKER	72	SUN VISOR-FEEDING	91	PARKING BRAKE SW SIGNAL	122	A/C & HEAT SYSTEM-DRIVER'S HTR
47	A/C & HEAT SYSTEM-DRIVER'S HTR	72 A	SUN VISOR-RH	91 A	DDEC-FAST IDLE SIGNAL	122	A/C & HEAT SYSTEM-FRESH AIR
48	ENTRANCE DOOR (SEDAN)	72 B	SUN VISOR-RH	91 W	PARK, BRAKE SW SIGN (WCL)	122	WORLD TRANSM-SOL. GRD 4
48 A	ENTRANCE DOOR (SEDAN)	72 C	SUN VISOR-LH	92	BATTERY EQUALIZER-CHECK BALANCE	122 A	A/C & HEAT SYSTEM-FRESH AIR
49	ENTRANCE DOOR (SEDAN)	72 D	SUN VISOR-LH	93	BATTERY EQUALIZER-CHECK LO/HI	123	WORLD TRANSM-NEUTRAL START
49 A	ENTRANCE DOOR (SEDAN)	73	LAVATORY-FEEDING	95 A	ENGINE BRAKE & RETARDER SYSTEM	123 A	ALARM & SIGNAL-FIRE DETECTOR
50	AIR DRYER	74	INTERIOR LTS-READING RH	97	TACHOMETER (-)	123 B	ALARM & SIGNAL-FIRE DETECTOR
52	ALARM & SIGNAL-ELEC. HORN	74 A	INTERIOR LTS-READING RH	100	INTERIOR LTS-GENERAL	124	WORLD TRANSM-THROTTLE (HI)
52 A	ALARM & SIGNAL-ELEC. HORN	74 D	INTERIOR LTS-READING SIGNAL	100 A	INTERIOR LTS-GENERAL	125	WORLD TRANSM-RET. INDICATOR
53	ALARM & SIGNAL-ELEC. HORN	75	INTERIOR LTS-READING LH	100 B	INTERIOR LTS-GENERAL	125	GALLEY LAMP
53 A	WIPER & WASHER SYSTEM	75 A	INTERIOR LTS-READING LH	101	24V STARTER SOL FEEDING	125 T	GALLEY LAMP
53 B	WIPER & WASHER SYSTEM	76	FUEL TANK GAUGE	101	WORLD TRANSM-LO SIGN SOL. LO	125 W	WORLD TRANSM-RET. INDICATOR
53 C	WIPER & WASHER SYSTEM	76 B	LOW FUEL LT & ETHER COLD START	102	24V STARTER TO GENERATOR	126	KNEELING SYSTEM
53 E	WIPER & WASHER SYSTEM	76 C	LOW FUEL LT	102	WORLD TRANSM-SOL. GRD 1	126 A	KNEELING SYSTEM
53 J	WIPER & WASHER SYSTEM	76 P	FUEL PRIME PUMP	102	WORLD TRANSM-SOL. C3	126 B	KNEELING SYSTEM
55	EXTERIOR LTS-HI BEAM	76 M	FUEL PRIME PUMP	103	LOW BUOY	126 C	KNEELING SYSTEM
57	EXTERIOR LTS-HI BEAM	77	A/C & HEAT SYSTEM-HI PRESSURE	104	WORLD TRANSM-SOL. FORWARD	126 D	KNEELING SYSTEM
57 A	A/C & HEAT SYSTEM-WATER PUMP	77 A	A/C & HEAT SYSTEM-DRIVER'S HTR	105	WORLD TRANSM-RETARDER & SUMP	126 E	KNEELING SYSTEM
57 A	EXTERIOR LTS-HI BEAM	77 B	A/C & HEAT SYSTEM-COMPRESSOR	105 W	WORLD TRANSM-RETARDER & SUMP	126 F	KNEELING SYSTEM
57 B	A/C & HEAT SYSTEM-WATER PUMP	77 C	A/C & HEAT SYSTEM-COMPRESSOR	106	WORLD TRANSM-OIL LEVEL HI	126 G	KNEELING SYSTEM
57 C	PRE-HEAT WATER HEATER	77 H	A/C & HEAT SYSTEM-COMPRESSOR	107	CHARG SYST-VOLTAGE REGUL. "F"	126 H	KNEELING SYSTEM
57 CA	A/C & HEAT SYSTEM-HEAT SIGN	81	EXTERIOR LTS-STOP SW	107	WORLD TRANSM-LOCKUP SOL. HI	126 K	KNEELING SYSTEM
57 CC	A/C & HEAT SYSTEM-HEAT SIGN	82	EXTERIOR LTS-STOP SIGNAL	108	WORLD TRANSM-REM. PWR WAKE UP	126 P	KNEELING SYSTEM
58	EXTERIOR LTS-LO BEAM	82 A	EXTERIOR LTS-STOP SIGNAL	109	WORLD TRANSM-RET. SOL. LO	126 R	KNEELING SYSTEM
58 A	EXTERIOR LTS-LO BEAM	82 B	EXTERIOR LTS-STOP LTS	110	ALARM & SIGNAL-WATER TEMP	126 W	5 MPH N.C. SIGNAL (WCL)
58 B	EXTERIOR LTS-LO BEAM	82 K	EXTERIOR LTS-STOP PARK BRK	110	WORLD TRANSM-LOCKUP SOL. LO	126 S	KNEELING SYSTEM
58 E	EXTERIOR LTS-LO BEAM	82 L	EXTERIOR LTS-LH STOP	111	WORLD TRANSM-SOL. C6	126 T	KNEELING SYSTEM
59 A	JACOB BRAKE SYSTEM	82 R	EXTERIOR LTS-LH STOP	112	WORLD TRANSM-SPARE OUTPUT (+)	127	WORLD TRANSM-LUBE PRESS SW.
61	EXTERIOR LTS-24V FEED SW	83	ENGINE CTR-KEY SW ACCES SIGN	113	ALARM & SIGNAL-OIL PRESS	127	PRE-HEAT WATER HEATER
61 A	EXTERIOR LTS-HEAD SIGNAL	84	ENGINE CTR-KEY SW ACCES SIGN	113	WORLD TRANSM-REVERSE WARNING	127 A	PRE-HEAT WATER HEATER
62	LAVATORY-OCCUPIED LT	85	ENGINE CTR-KEY SWIGNITION SIGN	114	INTERIOR LTS-DASH LT REGUL.	127 B	PRE-HEAT WATER HEATER
62 A	LAVATORY-FLUOR LT	85	24V IGNITION SIGNAL	114	WORLD TRANSM-SPARE OUTPUT (-)	127	WORLD TRANSM-RETARDER FEED SOL.
62 B	LAVATORY-FLUOR LT	85 A	24V IGN DASH INSTRUMENTATION	114 A	INTERIOR LTS-DASH LT	127 S	PRE-HEAT WATER HEATER
62 E	LAVATORY-OCCUP & FLUOR LT	85 B	ENGINE CTR-24V IGNITION	114 B	INTERIOR LTS-DASH LT REGUL.	127 W	PRE-HEAT WATER HEATER
63	EXTERIOR LTS-CLEARANCE	85 C	PARKING BRAKE SWITCH	114 D	INTERIOR LTS-DASH LT REGUL.	128	PRE-HEAT WATER HEATER
63 A	EXTERIOR LTS-CLEARANCE	85 F	ENGINE CTR-ENGINE CTR SW IGN	114 E	INTERIOR LTS-DASH LT REGUL.	128 A	PRE-HEAT WATER HEATER
63 B	EXTERIOR LTS-CLEARANCE	85 F	LO AIR SONALERT	115	ALARM & SIGNAL-TAG PRESS	128 B	PRE-HEAT WATER HEATER
63 C	EXTERIOR LTS-MARKER SIGNAL	85 W	24V IGN ANTI SKID	115	DDEC III-COOLANT LEVEL	128 W	PRE-HEAT WATER HEATER
63 D	EXTERIOR LTS-MARKER & TAIL	85 X	24V IGN ANTI SKID	115	WORLD TRANSM-DO NOT SHIFT SIGN	128	WORLD TRANSM-SOL. C2
63 E	EXTERIOR LTS-CLEARANCE	85 Y	ANTI SKID-WARNING LT	115 C	DDEC III-COOLANT LEVEL	129	PRE-HEAT WATER HEATER

CIRCUIT NUMBER CODE

No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION
129	WORLD TRANSM-SOL. C5	144 A	ABS SYSTEM	165 D	A/C & HEAT SYSTEM-TRANSMITER	300	DOOR AJAR MAGN.SW. (WCL)
130	WORLD TRANSM-SOL. GRD 3	145	ABS SYSTEM	166 B	A/C & HEAT SYSTEM-EVAP. MOD.	300 A	POWER SYSTEM SW. (WCL)
131	WORLD TRANSM-SOL. C4	146	ABS SYSTEM	167	A/C & HEAT SYSTEM-TEMP. CTR	300 B	DOOR AJAR ALARM (WCL)
132	WORLD TRANSM-ENG BRK OUTPUT (-)	146	WORLD TRANSM-IGNITION SENSE	167 A	A/C & HEAT SYSTEM-TEMP. CTR	301	POWER SYSTEM SW. (WCL)
132 W	WORLD TRANSM-ENG BRK OUTPUT (-)	146 W	WORLD TRANSM-12V IGNITION	168	A/C & HEAT SYSTEM-HUMIDISTAT	302	DOOR AJAR T.T.L.T. (WCL)
133	GALLEY-HEAT CONTAINERS	146 X	WORLD TRANSM-12V IGNITION	168	WORLD TRANSM-SER. INTERFACE (+)	302 A	DOOR AJAR ALARM SIGN.(WCL)
133 A	GALLEY-HEAT CONTAINERS	147	ABS SYSTEM	168 A	A/C & HEAT SYSTEM-HUMIDISTAT	302 B	DOOR AJAR MAGN.SW. (WCL)
133 B	GALLEY-HEAT CONTAINERS	147	ETHER COLD START	170	LUGGAGE DOOR LOCK	303	REMOTE WALL SW. DWN (WCL)
133 C	GALLEY-HEAT CONTAINERS	147	WORLD TRANSM-OIL TEMP	170 C	LUGGAGE DOOR LOCK	304	REMOTE WALL SW. UP (WCL)
133	WORLD TRANSM-RET. ACTUATOR HI	147 C	ETHER COLD START	170 E	LUGGAGE DOOR LOCK	305	PARK. BRAKE SOL. VALVE (WCL)
134	GALLEY-HEAT CONTAINERS	148	ABS SYSTEM	170 H	LUGGAGE DOOR LOCK	305 A	PARK. BRAKE SAFETY SW. (WCL)
134 A	GALLEY-HEAT CONTAINERS	148	WORLD TRANSM-OUTPUT SPEED LO	181 A	THERMOMETER INSIDE SENSOR	306	CONTROL SYSTEM (WCL RICON)
134	WORLD TRANSM-RET. APPLY SOL. HI	149	ABS SYSTEM	181 B	THERMOMETER INSIDE SENSOR	307	CONTROL SYSTEM (WCL RICON)
135	A/C & HEAT SYSTEM-AIR SENSOR	149	WORLD TRANSM-TURBINE SPEED HI	181 C	THERMOMETER OUTSIDE SENSOR	308	CONTROL SYSTEM (WCL RICON)
135 A	A/C & HEAT SYSTEM-AIR SENSOR	149 A	ABS SYSTEM	181 D	THERMOMETER OUTSIDE SENSOR	309	CONTROL SYSTEM (WCL RICON)
135 D	A/C & HEAT SYSTEM-AIR SENSOR	150	DDEC III-ECM BATTERY GRD	197	FUEL WATER FILTER	417	DDEC III-LIMIT SPEED GOVERNOR
135 C	A/C & HEAT SYSTEM-AIR SENSOR	150	WORLD TRANSM-ENGINE SPEED LO	197 A	FUEL WATER FILTER	419	DDEC III-CHECK ENGINE LIGHT
135	WORLD TRANSM-ANALOG GRD	150 A	DDEC III-ECM BATTERY GRD	197 B	FUEL WATER FILTER	439	DDEC III-12V IGNITION
135 D	WORLD TRANSM-RETARDER RES MOD	151	ABS SYSTEM	201	WORLD TRANSM-SPARE	440	DDEC III-12V IGNITION
135 C	WORLD TRANSM-RETARDER TEMP	151	DDEC III-ECM BATTERY GRD	202	WORLD TRANSM-SPARE	440 A	DDEC III-12V IGNITION
136	GALLEY-ACCESSORIES	151	WORLD TRANSM-SERIAL COM. B	203	WORLD TRANSM-SPARE	451	DDEC III-A/C FAN CLUTCH
136	WORLD TRANSM-ECU POWER	151 A	ABS SYSTEM	204	WORLD TRANSM-SPARE	505	DDEC III-TACHOMETER DRIVE
136 V	WORLD TRANSM-12V BATTERY	152	ABS SYSTEM	205	WORLD TRANSM-SPARE	509	DDEC III-STOP ENGINE LIGHT
136 W	WORLD TRANSM-12V BATTERY	152 A	ABS SYSTEM	206	WORLD TRANSM-SPARE	510	DDEC III-FAST IDLE SIGNAL
136 X	WORLD TRANSM-12V BATTERY	153	ABS SYSTEM	214	WORLD TRANSM-BACK UP SIGNAL	524	DDEC III-ENGINE BRAKE DISABLE
137	WORLD TRANSM-RETARDER	153	WORLD TRANSM-SPARE INPUT (-)	231	NEUTRAL SIGNAL GRD	525	DDEC III-FAST IDLE SIGNAL
137 A	MIRROR (SPARTAN & RAMCO)	154	ABS SYSTEM	231 A	NEUTRAL COIL RELAY FEED SIGNAL	528	DDEC III-STOP ENG. OVERRIDE
137 B	RR VIEW MIRROR (SPARTAN)	154	WORLD TRANSM-ABS RET. INPUT	231 W	NEUTRAL SIGNAL GRD (WCL)	531	DDEC III-CRUISE CLUTCH RELEASE
137 C	RR VIEW MIRROR (SPARTAN)	155	ABS SYSTEM	240	DDEC III-ECM 12V FEEDING	541	DDEC III-CRUISE SET SW
137 D	RR VIEW MIRROR (SPARTAN)	155	WORLD TRANSM-SPARE INPUT (-)	241	DDEC III-ECM 12V FEEDING	543	DDEC III-CRUISE STOP SW CUT IN
137 E	RR VIEW MIRROR (SPARTAN)	156	ABS SYSTEM	251	DDEC III - PRODRIVER 12V H.W.	544	DDEC III-CRUISE ON/OFF SW
137 G	RR VIEW MIRROR (SPARTAN)	156	WORLD TRANSM-THROTTLE POS.	253	GALLEY-MICROWAVE	545	DDEC III-CRUISE RESUME SW
138	ABS SYSTEM	156 A	ABS SYSTEM	254	GALLEY-12V FRIGO NORCOLD	555	DDEC III-FAN CLUTCH SPEED# 1
138	WORLD TRANSM-RETARDER TEMP	157	ABS SYSTEM	254 A	GALLEY-FRIGO	556	DDEC III-VEHICLE SPEED (+)
138 A	ABS SYSTEM	157	WORLD TRANSM-SPEEDO SIGNAL	255	GALLEY-COFEEMAKER	557	DDEC III-VEHICLE SPEED (-)
139	ABS SYSTEM	157 A	ABS SYSTEM	255 A	GALLEY-COFEEMAKER	563	DDEC III-FAN CLUTCH SPEED# 2
139	WORLD TRANSM-OUTPUT SPEED HI	157 B	ABS SYSTEM	257	WINDSHIELD HEATED	564	DDEC III-DIGITAL OUTPUT
140	ABS SYSTEM	158	WORLD TRANSM-DIMMER	257 A	WINDSHIELD HEATED	565	DDEC III-ENGINE BRAKE ACTIVE
140	WORLD TRANSM-OUTPUT SPEED LO	160	ALARM & SIGNAL-TAG PRESS SW	257 B	WINDSHIELD HEATED	583	DDEC III-ENGINE BRAKE 4 CYL.
141	ABS SYSTEM	160	WORLD TRANSM-SER. INTERFACE (-)	257 C	WINDSHIELD HEATED	900	DDEC III-DATA LINK (+)
141	WORLD TRANSM-ENGINE SPEED HI	161	WORLD TRANSM-SIGNAL GRD	257 D	WINDSHIELD HEATED SPARE	901	DDEC III-DATA LINK (-)
142	ABS SYSTEM	161 B	WORLD TRANSM-SIGNAL GRD	257 E	WINDSHIELD HEATED SPARE	908	DDEC III-HYDRAULIC PWM#1 OUTPUT
142	WORLD TRANSM-SERIAL COM. A	162	WORLD TRANSM-PRESS. SW C3	258	WINDSHIELD HEATED	916	DDEC III-SENSOR SUPPLY (5VDC)
143	ABS SYSTEM	163	WORLD TRANSM-RETARDER ENABLE	258 A	WINDSHIELD HEATED	952	DDEC III-SENSOR RETURN
143	WORLD TRANSM-ECU BATTERY GRD	164	WORLD TRANSM-RET. ACTUATOR SIGN	259	WINDSHIELD HEATED	953	DDEC III-BATTERY GRD
143 A	ABS SYSTEM	165	A/C & HEAT SYSTEM-TRANSMITER	259 A	WINDSHIELD HEATED	979	DDEC III-ENGINE BRAKE 2 CYL.
143 W	WORLD TRANSM-BATTERY GRD	165	WORLD TRANSM-OIL LEVEL SIGNAL	290	FAN CLUTCH RADIATOR		
143 X	WORLD TRANSM-BATTERY GRD	165 A	A/C & HEAT SYSTEM-TRANSMITER	290	FAN CLUTCH RADIATOR		
144	ABS SYSTEM	165 B	A/C & HEAT SYSTEM-TRANSMITER	291	FAN CLUTCH RADIATOR SPD 1		
144	WORLD TRANSM-ECU CHASSIS GRD	165 C	A/C & HEAT SYSTEM-TRANSMITER	292	FAN CLUTCH RADIATOR SPD 2		

CIRCUIT NUMBER CODE

No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION
557	DDEC III-VEHICLE SPEED (+)						
563	DDEC III-FAN CLUTCH SPEED# 2						
564	DDEC III-DIGITAL OUTPUT						
565	DDEC III-ENGINE BRAKE ACTIVE						
583	DDEC III-ENGINE BRAKE 4 CYL.						
900	DDEC III-DATA LINK (+)						
901	DDEC III-DATA LINK (-)						
908	DDEC III-HYDRAULIC PWM#1 OUTPUT						
916	DDEC III-SENSOR SUPPLY (SVDC)						
952	DDEC III-SENSOR RETURN						
953	DDEC III-BATTERY GRD						
979	DDEC III-ENGINE BRAKE 2 CYL.						

PREVOST

WIRING DIAGRAM

NO:

D060882

PAGE:

E5

REVISION
00

CIRCUIT BREAKERS CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 1	2	40A	560703	BAT. CPT.	12V IGNITION
CB 2	1,1	30A	870690	BAT. CPT.	12V HOT WIRE
CB 3	1,1	40A	560703	BAT. CPT.	12V FEED RR. JCT. BOX
CB 4	1,1	40A	560703	BAT. CPT.	12V FEED FR. JCT. BOX
CB 5	1,1	30A	870690	BAT. CPT.	24V HOT WIRE
CB 6	1,1	30A	560298	BAT. CPT.	24V FEED RR. JCT. BOX
CB 7	1,1	30A	560298	BAT. CPT.	24V FEED FR. JCT. BOX
CB 8	1,1	150A	560299	BAT. CPT.	24V EVAPORATOR FAN MOTOR
CB 10	4	8A	561791	RR. JCT. BOX	MASTER KEY SWITCH
CB 16	4	8A	561791	RR. JCT. BOX	ENGINE-RR. CTRL & START SW.
CB 18	4	6A	561790	RR. JCT. BOX	ENGINE-RR. CTRL SW.
CB 19	5	15A	561793	BAT. CPT.	E.C.M. DDEC III 12V POWER
CB 20	5	15A	561793	BAT. CPT.	E.C.M. DDEC III 12V POWER
CB 21	5	6A	561790	BAT. CPT.	E.C.M. DDEC III 12V IGNITION
CB 24	6	20A	561794	BAT. CPT.	WORLD TRANSMISSION 12V POWER
CB 26	9,3	10A	561794	RR. JCT. BOX	BACK-UP LTS
CB 27	7	8A	561792	FR. JCT. BOX	24V IGNITION DASH ACCESSORIES
CB 28	7	6A	561790	FR. JCT. BOX	12V IGNITION DASH ACCESSORIES
CB 34	9,3	10A	561792	RR. JCT. BOX	BACK-UP ALARM
CB 35	9,3	6A	561790	FR. JCT. BOX	FOG & HAZARD DASH SW.
CB 37	9,1	6A	561790	FR. JCT. BOX	HEAD & MULTI-FUNCTION LEVEL SW.
CB 38	9,1	10A	561792	FR. JCT. BOX	FR. MARKER LTS
CB 39	9,1	20A	561794	FR. JCT. BOX	CLEARANCE & IDENTIFICATION LTS
CB 40	9,1	8A	561791	RR. JCT. BOX	FR. CLEARANCE & IDENTIFICATION LTS
CB 41	9,1	8A	561791	RR. JCT. BOX	RR. CLEARANCE & IDENTIFICATION LTS
CB 42	9,1	8A	561791	RR. JCT. BOX	RR. TAIL & LICENCE LTS
CB 43	9,1	20A	561794	FR. JCT. BOX	HEADLAMP (H)
CB 44	9,1	15A	561792	FR. JCT. BOX	HEADLAMP (L)
CB 45	9,2	10A	561792	FR. JCT. BOX	WIPER CTRL. MULTI-FUNCTION LEVEL SW.
CB 46	9,2	20A	561794	FR. JCT. BOX	FLASHER & HAZARD UNIT
CB 48	9,3	6A	561790	FR. JCT. BOX	STOP LTS PRESSURE SW.
CB 49	9,3	15A	561793	RR. JCT. BOX	STOP & CYCLOP LTS
CB 51	10	10A	561792	FR. JCT. BOX	UPPER WIPER CTRL SW.
CB 52	11,1	15A	561793	RR. JCT. BOX	LUGGAGE & DOOR ALARM LTS
CB 57	11,2	8A	561791	FR. JCT. BOX	DASH LTS RHEOSTAT
CB 63	11,4	8A	561791	FR. SERVICE CPT	110V FLUORESCENT LH
CB 64	11,4	8A	561791	FR. SERVICE CPT	110V FLUORESCENT RH
CB 70	13,1	6A	561790	FR. JCT. BOX	A/C & HEAT SW.
CB 71	13,1	10A	561792	RR. JCT. BOX	A/C & HEAT LOGIC PANEL
CB 72	13,1	10A	561792	RR. JCT. BOX	A/C COMPRESSOR CLUTCH
CB 73	13,1	15A	561793	RR. JCT. BOX	WATER PUMP
CB 77	13,2	40A	560703	BAT. CPT.	CONDENSER FAN MOTOR RH
CB 78	13,2	40A	560703	BAT. CPT.	CONDENSER FAN MOTOR LH
CB 79	13,2	15A	561793	FR. JCT. BOX	DRIVERS HTR FAN SPEED CTRL MODULE
CB 85	16	6A	561790	FR. JCT. BOX	ENTRANCE DOOR (SEDAN) & STEP LTS
CB 93	1,2	30A	870690	BAT. CPT.	SOUND SYSTEM 12V FEEDING
CB 94	1,2	30A	870690	BAT. CPT.	SOUND SYSTEM 12V FEEDING
CB 96	20,1	10A	561792	S.S. JCT. PANEL	SOUND SYSTEM AMP/L
CB 97	20,1	10A	561792	S.S. JCT. PANEL	VIDEO SYSTEM
CB 98	20,1	15A	561793	S.S. JCT. PANEL	SOUND SYSTEM BU/P.A. AMP/L
CB 99	20,7	15A	561793	S.S. JCT. PANEL	SOUND SYSTEM RADIO & CD
CB 105	21	6A	561790	FR. JCT. BOX	SEAT AUDIO SYSTEM
CB 106	21	10A	561792	FR. JCT. BOX	E.C.U. ABS
CB 107	21	10A	561792	FR. JCT. BOX	E.C.U. ABS
CB 124	8	6A	561790	RR. JCT. BOX	E.C.U. ABS
CB 126	25,1	150A	560299	BAT. CPT.	RADIATOR FAN CLUTCH
	25,2	90A	560299	BAT. CPT.	WHEEL CHAIR LIFT MOTOR PUMP STE
					WHEEL CHAIR LIFT MOTOR PUMP RICON

PREVOST

WIRING DIAGRAM

NO:

D060882

PAGE:

F

REVISION
00

CIRCUIT BREAKERS CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 1	2	40A	560703	BAT. CPT.	12V IGNITION
CB 2	1.1	30A	870690	BAT. CPT.	12V HOT WIRE
CB 3	1.1	40A	560703	BAT. CPT.	12V FEED RR. JCT. BOX
CB 4	1.1	40A	560703	BAT. CPT.	12V FEED FR. JCT. BOX
CB 5	1.1	30A	870690	BAT. CPT.	24V HOT WIRE
CB 6	1.1	90A	560298	BAT. CPT.	24V FEED RR. JCT. BOX
CB 7	1.1	90A	560298	BAT. CPT.	24V FEED FR. JCT. BOX
CB 8	1.1	150A	560299	BAT. CPT.	24V EVAPORATOR FAN MOTOR
CB 10	4	8A	561791	FR. JCT. BOX	MASTER KEY SWITCH
CB 16	4	8A	561791	RR. JCT. BOX	ENGINE-RR. CTRL & START SW.
CB 18	4	6A	561790	RR. JCT. BOX	ENGINE-FR. CTRL SW.
CB 19	5	15A	561793	BAT. CPT.	E.C.M. DDEC III 12V POWER
CB 20	5	15A	561793	BAT. CPT.	E.C.M. DDEC III 12V POWER
CB 21	5	6A	561790	BAT. CPT.	E.C.M. DDEC III 12V IGNITION
CB 24	6	20A	561794	BAT. CPT.	WORLD TRANSMISSION 12V POWER
CB 26	9.3	10A	561792	RR. JCT. BOX	BACK-UP LTS
CB 27	7	8A	561791	FR. JCT. BOX	24V IGNITION DASH ACCESSORIES
CB 28	7	6A	561790	FR. JCT. BOX	12V IGNITION DASH ACCESSORIES
CB 34	9.3	6A	561792	RR. JCT. BOX	BACK-UP ALARM
CB 35	9.3	6A	561790	FR. JCT. BOX	FOG & HAZARD DASH SW.
CB 37	9.1	6A	561790	FR. JCT. BOX	HEAD & MULTI-FUNCTION LEVEL SW.
CB 38	9.1	10A	561792	FR. JCT. BOX	FR. MARKER LTS
CB 39	9.1	20A	561794	FR. JCT. BOX	CLEARANCE & IDENTIFICATION LTS
CB 40	9.1	8A	561791	FR. JCT. BOX	FR. CLEARANCE & IDENTIFICATION LTS
CB 41	9.1	8A	561791	RR. JCT. BOX	RR. CLEARANCE & IDENTIFICATION LTS
CB 42	9.1	8A	561791	RR. JCT. BOX	RR. TAIL & LICENCE LTS
CB 43	9.1	20A	561794	FR. JCT. BOX	HEADLAMP (HI)
CB 44	9.1	15A	561793	FR. JCT. BOX	HEADLAMP (LO)
CB 45	9.2	10A	561792	FR. JCT. BOX	WIPER CTRL MULTI-FUNCTION LEVEL SW.
CB 46	9.2	20A	561794	FR. JCT. BOX	FLASHER & HAZARD UNIT
CB 48	9.3	6A	561790	FR. JCT. BOX	STOP LTS PRESSURE SW.
CB 49	9.3	15A	561793	RR. JCT. BOX	STOP & CYCLOP LTS
CB 51	10	10A	561792	FR. JCT. BOX	UPPER WIPER CTRL SW.
CB 52	11.1	15A	561793	RR. JCT. BOX	LUGGAGE & DOOR AJAR LTS
CB 57	11.2	8A	561791	FR. JCT. BOX	DASH LTS RHEOSTAT
CB 63	11.4	8A	561791	FR. SERVICE.CPT	110V FLUORESCENT LH
CB 64	11.4	8A	561791	FR. SERVICE.CPT	110V FLUORESCENT RH
CB 70	13.1	6A	561790	FR. JCT. BOX	A/C & HEAT SW.
CB 71	13.1	10A	561792	RR. JCT. BOX	A/C & HEAT LOGIC PANEL
CB 72	13.1	10A	561792	RR. JCT. BOX	A/C COMPRESSOR CLUTCH
CB 73	13.1	15A	561793	RR. JCT. BOX	WATER PUMP
CB 77	13.2	40A	560703	BAT. CPT.	CONDENSER FAN MOTOR RH
CB 78	13.2	40A	560703	BAT. CPT.	CONDENSER FAN MOTOR LH
CB 79	13.2	15A	561793	FR. JCT. BOX	DRIVER'S HTR FAN SPEED CTRL MODULE
CB 85	16	10A	561790	FR. JCT. BOX	ENTRANCE DOOR (SEDAN) & STEP LTS
CB 93	1.2	30A	870690	BAT. CPT.	SOUND SYSTEM 12V FEEDING
CB 94	1.2	30A	870690	BAT. CPT.	SOUND SYSTEM 12V FEEDING
CB 95	20.1	10A	561792	S.S. JCT. PANEL	SOUND SYSTEM AMPLI
CB 96	20.1	10A	561792	S.S. JCT. PANEL	VIDEO SYSTEM
CB 97	20.1	10A	561792	S.S. JCT. PANEL	SOUND SYSTEM B/U P.A. AMPLI
CB 98	20.1	15A	561793	S.S. JCT. PANEL	SOUND SYSTEM RADIO & CD
CB 99	20.7	15A	561793	S.S. JCT. PANEL	SEAT AUDIO SYSTEM
CB 105	21	6A	561790	FR. JCT. BOX	E.C.U. ABS
CB 106	21	10A	561792	FR. JCT. BOX	E.C.U. ABS
CB 107	21	10A	561792	FR. JCT. BOX	E.C.U. ABS
CB 124	8	6A	561790	RR. JCT. BOX	RADIATOR FAN CLUTCH
CB 126	25.1	150A	560299	BAT. CPT.	WHELL CHAIR LIFT MOTOR PUMP STE.
CB 126	25.2	90A	560298	BAT. CPT.	WHELL CHAIR LIFT MOTOR PUMP RICON

CIRCUIT BREAKERS CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
-----	------	------	--------	----------	----------

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN	#SOCKET	NO	LOCATION	TYPE	CAVITY	#PIN	#SOCKET
C A	RR JCT BOX-ECU WORLD TR,	T & BET	34	562419		C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 1	RR JCT BOX-ECU WORLD TR,	T & BET	34	562420		C 92	FR LH UPPER WHEEL CPT-ABS	AMP CPC	9	561637	561637
C 2	RR JCT BOX COMPARTMENT	AMP CPC	14	561585		C 93	FR LH UPPER WHEEL CPT-ABS	WABCO	35	561635	
C 3	RR JCT BOX COMPARTMENT	AMP CPC	16	561639		C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	641094
C 4	RR JCT BOX COMPARTMENT	AMP CPC	24	561641		C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 5	RR JCT BOX COMPARTMENT	AMP CPC	37	561644		C 98	FR SERVICE COMP-EL-FT, PEDAL	PED WP	3	561782	
C 6	FR SERVICE COMP-UNDERNEATH	AMP CPC	16	561639		C 101	FR SERVICE COMP-EL-FT, PEDAL	AMP MNL	2	561248	561247
C 8	FR SERVICE COMP-UNDERNEATH	AMP CPC	24	561641		C 102	FR SERV & SIDE CPT-FLASH, LH	PED WP	2	561566	561569
C 9	FR SERVICE COMP-UNDERNEATH	AMP CPC	37	561644		C 103	FR SERV & SIDE CPT-FLASH, LH	ITT SS	2	561813	561812
C 11	FR SERVICE COMPARTMENT	AMP CPC	16	561639		C 104	FR SERV & SIDE CPT-FLASH, RH	ITT SS	2	561813	561812
C 12	FR SERVICE COMPARTMENT	AMP CPC	24	561641		C 105	FR SERVICE COMP-UIQS, VALVE	PED WP	2	561566	561690
C 13	LH CONSOLE-HEATER MR,	AMP MNL	6	561528		C 106	FR SERVICE COMP-WATER VALVE	PED WP	2	561566	561690
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561552		C 107	EVAPORATOR COMP-WATER VALVE	PED WP	2	561566	561690
C 15	UNDER DASH-RH MIRROR	AMP MNL	24	561651		C 108	FR SERVICE COMP-KNEEL SVS	PED WP	2	561566	561690
C 16	LH CONSOLE SW-CRUISE ON OFF	AMP CPC	9	561641		C 109	FR SERVICE COMP-KNEEL SVS	PED WP	2	561566	561690
C 17	LH CONSOLE SW-CRUISE RESUME	AMP CPC	9	561651		C 110	FR SERVICE COMP-KNEEL SVS	PED WP	2	561566	561690
C 18	LH CONSOLE SW-CRUISE SET	SWF	8	561661		C 111	EVAPORATOR COMP-KNEEL SVS	PED WP	2	561566	561690
C 20	RR JCT BOX	SWF	8	561662		C 112	EVAPORATOR COMP-SPEED MOT CTRL	ITT SS	5	561813	
C 21	RR JCT BOX	AMP CPC	37	561644		C 113	BATT. & RR J.B.CPT-MARKER LT	DEUTCH	2	561813	
C 26	HYD & MAN TRANS, -NEUT. & BUJ	AMP CPC	24	561641		C 114	RR J. BOX CPT-DOOR DIR, LT LH	ITT SS	2	561813	
C 27	HYD & MAN TRANS, -SPEED SENS,	AMP CPC	4	561646		C 115	ENGINE COMP- AIR DRYER	GROTE	2	561813	
C 32	DOEC ENGINE-ECM	PED WP	4	561610		C 116	ENGINE COMP- LITS	PED WP	2	561566	561690
C 35	RR JCT BOX	PED	30	561690		C 118	ENGINE COMP- LTVARY FAN	PED WP	2	561566	561690
C 36	EMERGENCY EXIT LITS	AMP CPC	24	561642		C 119	ENGINE CPT-RR DOOR RH LO LAMP	PED WP	6	561690	560927
C 37	RR SECTION-LH HAT RACK	AMP MNL	9	560980		C 120	ENGINE CPT-RR DOOR LH LO LAMP	PED WP	6	561690	561607
C 38	RR SECTION-RH HAT RACK	AMP MNL	9	561681		C 121	BATTERY CPT- DOOR DIR LT RH	PED WP	2	561606	
C 41	LAVATORY ROOF-FLUORESCENT	AMP MNL	2	561662		C 122	TAG AXLE UNLOAD TAG SYSTEM	GROTE	2	561606	
C 42	LAVATORY BACK WALL-WTR TANK	AMP MNL	2	560980		C 123	ENGINE CPT-ETHER SW	PED WP	2	561566	561690
C 43	ALARM JCT BOX WALL-ACCES	AMP MNL	9	561681		C 124	ENGINE CPT-FLUSHING PUMP	PED WP	2	561566	561690
C 45	FR SERVICE COMPARTMENT	AMP MNL	24	561642		C 125	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 47	BATTERY COMP- LT	AMP CPC	16	561694		C 126	ENGINE CPT-AC COMP-CLUTCH	PED WP	2	561566	561690
C 49	FR SERVICE COMP-LOW BUJO	AMP MNL	1	561248		C 128	ENGINE CPT-AC COMP-CLUTCH	ITT SS	2	561566	561690
C 50	RR JCT BOX	PED WP	1	561605		C 129	ENGINE CPT-AC COMP-CLUTCH	ITT SS	2	561566	561690
C 52	RR SWITCH PANEL	AMP CPC	22	561709		C 130	ENGINE CPT-AC COMP-CLUTCH	AMP FF	6	561813	561186
C 55	RR JCT BOX COMP- LT	AMP CPC	9	561635		C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 60	LUGGAGE COMPARTMENT LITS	AMP MNL	2	561635		C 132	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 62	LUGGAGE COMPARTMENT LITS	AMP MNL	2	561248		C 133	ENGINE CPT-AC LO PRESS SW	PED WP	2	561566	561690
C 63	LUGGAGE COMPARTMENT LITS	AMP MNL	2	561248		C 134	ENGINE CPT-AC HI PRESS SW	PED WP	2	561566	561690
C 64	LUGGAGE COMPARTMENT LITS	AMP MNL	2	561248		C 135	FR JCT BOX-LUGGAGE DIODE CON,	AMP MNL	15	561987	561986
C 65	LUGGAGE COMPARTMENT LITS	AMP MNL	2	561248		C 136	FR JCT BOX-LUGGAGE DIODE CON,	AMP MNL	15	561987	561986
C 66	LUGGAGE COMPARTMENT LITS	AMP MNL	2	561248		C 137	FR JCT BOX-TRANSWITTER	AMP MNL	2	560900	560900
C 67	LUGGAGE COMPARTMENT LITS	AMP MNL	2	561248		C 138	RR JCT BOX-CONTROL MODULE	AMP MNL	2	560900	560900
C 68	LUGGAGE COMPARTMENT LITS	AMP MNL	2	561248		C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562012	
C 69	LUGGAGE COMPARTMENT LITS	AMP MNL	2	561248		C 140	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562012	
C 70	RR AXLE ACC-INSIDE PVC END	AMP MNL	2	561248		C 141	LAVATORY DOOR WALL	AMP MNL	3	561248	561247
C 71	LH CONSOLE	AMP MNL	2	561248		C 142	LAVATORY DOOR WALL	AMP MNL	2	561248	561247
C 72	RR JCT BOX COMPARTMENT	AMP CPC	24	561568		C 143	UNDER LH SEAT- AISLE LITS	AMP MNL	3	560906	560905
C 73	RR JCT BOX COMPARTMENT	AMP CPC	6	561568		C 144	UNDER LH SEAT- AISLE LITS	AMP MNL	2	560906	560905
C 74	DASH CENTER PANEL	AMP CPC	24	561642		C 145	RR JCT BOX CPT-RR SIDE LITS	AMP MNL	9	561670	
C 76	FR JCT BOX COMPARTMENT	AMP CPC	16	561639		C 146	ENGINE CPT-MODULATOR VALVE	AMP MNL	2	561670	
C 77	LUGGAGE COMP- AIR NET-SENS,	AMP CPC	37	561645		C 147	BATT & RR J.B.CPT-DOCK LITS	AMP MNL	2	561566	561565
C 80	LUGGAGE COMP- AIR NET-SENS,	AMP MNL	2	561645		C 149	CONDENSER CPT-FAN MOTOR	AMP MNL	2	561566	561565
C 81	PASSENGER COMP- AISLE LITS	AMP MNL	2	561248		C 151	EVAPORATOR CPT-THERMOSTAT	ORDNANCE	2	562555	562555
C 82	ENTRANCE DOOR	AMP MNL	2	561247		C 152	CONDENSER CPT-FUEL GAUGE	DEUTSCH	2	562486	562485
C 83	ENTRANCE DOOR- PROXIMITY SW	MOLEX	6	562070		C 153	EVAPORATOR CPT- WATER VALV,	PED WP	2	562486	562485
C 84	ENTRANCE DOOR- PRESSURE SW	MOLEX	4	562070		C 154	EVAPORATOR CPT- FRESH AIR SENS	AMP MNL	2	561610	561611
C 85	UNDER INSTRUMENT PANEL LH	PED WP	2	561566		C 155	EVAPORATOR CPT- FRESH AIR SENS	ITT SS	4	561610	561611
C 87	RR END ROOF- CLEARANCE LITS	AMP CPC	9	561636		C 156	EVAPORATOR CPT- WATER VALV,	PED WP	2	561610	561611
C 88	RR END ROOF- CLEARANCE LITS	AMP MNL	2	560989		C 157	EVAPORATOR CPT- WATER VALV,	PED WP	2	561566	561565
C 89	RR END ROOF- BUJ NONITOR	AMP CPC	4	561582		C 158	CONDENSER CPT-AC LO TEMP,	PED WP	2	561566	561565
C 90	RR JCT BOX	AMP CPC	15	561987		C 159	CONDENSER CPT-AC HI TEMP,	PED WP	2	561566	561565
						C 160	RR AXLE ABS RH SENSOR	PED WP	2	561566	561565
						C 161	RR AXLE ABS RH VALVE	WABCO	3	641132	
						C 162	RR AXLE ABS LH VALVE	WABCO	3	641132	
						C 163	RR AXLE ABS LH SENSOR	WABCO	3	641132	
						C 164	RR AXLE ABS LH SENSOR	WABCO	2	641132	

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN	#SOCKET	NO	LOCATION	TYPE	CAVITY	#PIN	#SOCKET
C 165	RR AXLE-ABS LH VALVE	WABCO	3	----	641098	C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	561108	561108
C 166	RR AXLE-ABS RH VALVE	DEUTSCH	3	562466	641098	C 251	LH SW PANEL-FAST IDLE	SWF	8	561107	561107
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	562466	562466	C 252	LH SW PANEL-SWITCH LT	SWF	2	561837	561837
C 168	RR AXLE-ABS OPT ATC	AMP HDP	4	561610	561611	C 253	LH SW PANEL-ETHER	SWF	8	561107	561107
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	562012	562012	C 254	INST. PANEL RH-ENTR.DOOOR SW.	TORRIX	8	562107	562107
C 170	RR JCT BOX-FLASHER UNIT	TC	2	-----	561840	C 255	INST. PANEL RH-ENTR.DOOOR SW.	AMP FF	8	562107	562107
C 171	LH CONSOLE	AMP CPC	37	561645	561646	C 256	INST. PANEL RH-ENTR.DOOOR SW.	AMP FF	8	562107	562107
C 172	ENGINE COMPT.WATER TANK HEAT.	PED WP	2	561566	561566	C 257	INST. PANEL RH-ENTR.DOOOR SW.	AMP FF	8	562107	562107
C 173	LAV POTABL.EWATER TANK HEAT.	AMP MNL	2	560900	560900	C 258	INST. PANEL RH-ENTR.DOOOR SW.	AMP FF	8	562107	562107
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	2	560900	560900	C 259	INST. PANEL RH-ENTR.DOOOR SW.	AMP FF	8	562107	562107
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561668	C 260	FR SERVICE CPT-LUG DOOR LCK	AMP MNL	6	561606	561606
C 176	UNDER DASH RH-WIPER PULSE	AMP MNL	9	561670	561668	C 261	FR SERVICE CPT-LUG DOOR LCK	AMP MNL	6	561606	561606
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	561669	561668	C 262	UNDER DASH RH-DOOR MODULE	AMP MNL	4	561551	561551
C 178	UNDER DASH RH-HTR FAN	AMP FF	5	561186	561186	C 263	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561551	561551
C 179	UNDER DASH RH-HTR FAN	TC	2	561030	561030	C 264	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561551	561551
C 180	RR JCT BOX-DIODE CONNECTOR	AMP MNL	2	561030	560997	C 265	UNDER DASH RH-DOOR MODULE	AMP MNL	15	562011	562012
C 181	RR JCT BOX-COMPT.-WT VIM	AMP CPC	15	561987	561986	C 266	UNDER DASH RH-DOOR MODULE	AMP CPC	24	561552	561552
C 182	RR JCT BOX-COMPT.-WT VIM	AMP CPC	15	561987	561986	C 267	UNDER DASH RH-DOOR MODULE	AMP MNL	6	561552	561552
C 183	FR SERVICE CPT-KNEELING PAN.	PED WP	4	561639	561611	C 268	UNDER DASH RH-MIRROR	AMP MNL	6	562070	562070
C 184	FR SERVICE CPT-KNEELING SW	ITT SS	3	561111	561680	C 269	UNDER DASH RH-MIRROR	AMP MNL	6	562070	562070
C 185	RR JCT BOX-COMPT.-WT VIM	PED	30	-----	561680	C 270	RR MIRROR POST	MOLEX	6	562070	562070
C 186	RR JCT BOX-CPT.-SPEED SIGN TR	PED WP	2	561566	561690	C 271	RR MIRROR POST	MOLEX	6	562070	562070
C 186M	RR JCT BOX-CPT.-SPD SIGN. MTR	PED WP	2	561566	561690	C 272	RR MIRROR POST	MOLEX	6	562070	562070
C 187	RR JCT BOX-RPM RESISTOR CON.	PED WP	2	561566	561690	C 273	RR MIRROR POST	MOLEX	6	562070	562070
C 189	ENGINE CPT RR DOOR TAIL LT	AMP MNL	6	561552	561515	C 274	UNDER DASH RH-DOOR MODULE	SPARTAN	6	990158	990158
C 190	ENGINE CPT RR DOOR TAIL LT	PED WP	2	561566	561690	C 275	UNDER DASH RH-DOOR MODULE	AMP MNL	6	561670	561670
C 191	ENGINE CPT RR DOOR LH DIR. LT	PED WP	2	561566	561690	C 276	UNDER DASH RH-LOCK SOL. VALVE	AMP MNL	2	561248	561248
C 192	ENGINE CPT RR DOOR LH STOP LT	PED WP	2	561566	561690	C 277	UNDER DASH CYLINDER READ SW.	AMP MNL	2	561248	561248
C 193	ENGINE CPT RR DOOR RH DIR. LT	PED WP	2	561566	561690	C 280	LH CONSOLE-UNLOAD TAG SW.	SWF	8	561248	561248
C 194	FR SECT. LH HAT RACK-FLUOR.	AMP MNL	2	561248	561247	C 286	RR SW PANEL-A/C & HEAT	SWF	8	561107	561107
C 195	ENGINE CPT RR DOOR LH DIR. LT	PED WP	2	561566	561690	C 288	RR SW PANEL-FRESH AIR	PED WP	2	561566	561566
C 196	ENGINE CPT RR DOOR LH STOP LT	PED WP	2	561566	561690	C 289	RR SW PANEL-SWITCH LT	SWF	8	561107	561107
C 199	ENGINE CPT RR DOOR CYCLOP LT	PED WP	2	561566	561690	C 297	INST. PANEL RH-LTS	AMP MNL	2	560900	560900
C 200	RR HAT RACK-FLUORESCENT	PED WP	2	561566	561690	C 298	INST. PANEL RH-LTS	AMP MNL	2	560900	560900
C 201	RR HAT RACK-FLUORESCENT	DOOR AUTO	4	930210	561690	C 299	INST. PANEL RH-LTS	AMP MNL	2	560900	560900
C 202	RR HAT RACK-BALLAST	AMP MNL	4	561551	561661	C 301	INST. PANEL RH-LTS	AMP MNL	4	560651	560651
C 203	RR HAT RACK-BALLAST	AMP MNL	4	561551	561661	C 308	LH CONSOLE SW-RHEOSTAT	TC	4	560651	560651
C 204	RR HAT RACK-GENERAL LT	AMP MNL	6	561552	560982	C 309	DEEC ENGINE-ECM POWER CON.	PED MP	5	562345	562345
C 205	RR SECT. -RH HAT RACK SPEAKER	AMP MNL	3	561667	561515	C 310	LH CONSOLE SW-LUG. DOOR LCK	SWF	8	561107	561107
C 206	LH HAT RACK-READING LT	AMP MNL	2	560900	561662	C 311	LH CONSOLE SW-HOS & PAS CHIME	SWF	8	561107	561107
C 207	LH HAT RACK-READING LT	AMP MNL	2	560900	560988	C 312	LH CONSOLE SW-GEN & PAS CHIME	SWF	8	561107	561107
C 208	LH HAT RACK-BALLAST	AMP MNL	2	560900	560988	C 313	LH CONSOLE SW-READING LTS	SWF	8	561107	561107
C 210	FR SECT. -LH HAT RACK SPEAKER	AMP MNL	4	560651	560988	C 314	LH CONSOLE SW-GEN & PAS CHIME	SWF	8	561107	561107
C 211	FR ROOF-STORE LH	AMP MNL	2	561661	561662	C 315	LH CONSOLE SW-FR DEST. SIGN	SWF	8	561107	561107
C 212	FR ROOF-STORE RH	AMP MNL	2	561661	561662	C 316	LH CONSOLE SW-LH STORE	SWF	8	561107	561107
C 213	FR ROOF-CLEARANCE LT	AMP MNL	2	561661	561662	C 317	LH CONSOLE SW-RH STORE	SWF	8	561107	561107
C 220	RR JCT BOX-FUEL. PRIME PUMP	AMP MNL	1	561070	560988	C 318	LH CONSOLE SW-DRV WINDOW LIFT	SWF	8	561107	561107
C 225	ENG.CPT. -FUEL. PRIME PUMP FEED	AMP MNL	2	561248	561073	C 320	LH CONSOLE SW-DRV WINDOW LIFT	SWF	8	561107	561107
C 230	ENG.CPT. -FUEL. PRIME PUMP SW.	DEUTSCH	2	562466	561247	C 322	LH CONSOLE SW-DRV WINDOW LIFT	PED PO	2	561636	561636
C 231	ENG.CPT. -FUEL. PRIME PUMP SW.	PED WP	2	561566	561690	C 323	LH CONSOLE CRUISE CTR SW PAN. AMP	CPC	2	561636	561636
C 233	INST. PANEL CENTER	PED WP	2	561566	561690	C 325	LH CONSOLE CRUISE CTR SW PAN. AMP	SWF	8	561107	561107
C 234	INST. PANEL CENTER	V.D.O.	4	-----	562043	C 326	LH CONSOLE SW-SPARE	SWF	8	561107	561107
C 235	INST. PANEL CENTER	V.D.O.	4	-----	562043	C 327	LH CONSOLE SW-SPARE	SWF	8	561107	561107
C 236	INST. PANEL CENTER	V.D.O.	4	-----	562043	C 328	LH CONSOLE SW-SPARE	SWF	8	561107	561107
C 237	RR JCT BOX-DIODE CONNECTOR	AMP MNL	4	560851	560852	C 329	ENGINE TACHO SIGNAL	DEUTSCH	6	562363	562363
C 239	RR JCT BOX-DIODE CONNECTOR	AMP MNL	4	561111	560852	C 330	GALLEY MICROWAVE SW LT	PED WP	3	561248	561248
C 240	FR SERVICE CPT-KNEEL. PROX. SW	AMP MNL	2	561566	561690	C 331	GALLEY MICROWAVE SW LT	SWF	2	561248	561248
C 241	FR SERVICE CPT-FOG RESISTOR	PED WP	2	561566	561690	C 332	GALLEY RH CONTAINER SW LT	SWF	2	561248	561248
C 242	FR SERVICE CPT-HEADLAMP	AMP CPC	3	561847	561862	C 333	GALLEY RH CONTAINER SW LT	SWF	2	561248	561248
C 243	FR SERVICE CPT-HEADLAMP	ITT SS	3	561111	561860	C 334	GALLEY LH CONTAINER SW LT	SWF	2	561248	561248
C 244	FR SERVICE CPT-LH FOG LAMP	ITT SS	2	561813	561812	C 335	GALLEY LH CONTAINER SW LT	SWF	2	561248	561248
C 245	FR SERVICE CPT-RH FOG LAMP	ITT SS	2	561813	561812	C 337	INST. PANEL LH-UP WIPER SW	SWF	8	561107	561107
C 246	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561860	C 338	INST. PANEL LH-UP WIPER SW	SWF	8	561107	561107
						C 339	INST. PANEL LH-UP DEFROST SW	SWF	8	561107	561107
						C 340	INST. PANEL LH-UP WIPER SW	SWF	8	561107	561107
						C 341	INST. PANEL LH-HEAT MIRROR SW	AMP MNL	2	560900	560900
						C 342	INST. PANEL LH-HEAT MIRROR SW	SWF	2	562586	562586
						C 343	INST. PANEL LH-HEADLAMP SW	SWF	8	561107	561107

PREVOST

WIRING

DIAGRAM

D060882

PAGE: G2

REVISION
00

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN	#SOCKET	NO	LOCATION	TYPE	CAVITY	#PIN	#SOCKET
C 344	INST. PANEL LH-FAZARD LT SW	SWF	8	561107	C 426	ENGINE COMPT. CLUTCH CTR FAN	AMP WP	3	561781	561782	
C 345	INST. PANEL LH-FAZARD LT SW	SWF	8	561107	C 428	ALARM JCT BOX COMPT.	AMP MNL	6	561552	561515	
C 346	INST. PANEL LH-SWITCH LITS	SWF	2	561107	C 430	LH CONSOLE-TIMER	AMP FF	1	561188	561515	
C 347	INST. PANEL LH-DASH LT SW	AMP MNL	2	560900	C 431	LH CONSOLE-PRE HEAT.	7TB AMP	1	561540	561539	
C 348	INST. PANEL CENT-RACOR MODULE	MOLEX	6	560900	C 432	ENGINE CPT.-PROX. SW. DOOR ALAR	DEUTSCH	4	562479	562477	
C 350	RH CONSOLE-THERMOMETER	AMP MNL	6	561667	C 433	FR SERVICE CPT. KNEEL. PRESS. SW	AMP WP	4	561566	561590	
C 351	LH HAT RACK-FLOOR 110V	MOLEX	4	561476	C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561996	
C 352	RH CONSOLE-DRV TEMP SENSOR	BURINDY	4	561552	C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	561996	
C 353	INST. PANEL RH-DRY FAN RH-EOST	AMP MNL	6	561552	C 436	RH HAT RACK-WCL FR & RR SECT.	AMP CPC	16	561639	561640	
C 354	INST. PANEL RH-DRY TEMP CTR	AMP MNL	6	561552	C 437	WIRELESS MICRO-FIRST CPT BAG	AMP CPC	24	561642	561643	
C 355	INST. PANEL RH-TEMP CTR	AMP MNL	6	561552	C 438	SOUND SYS. JCT. PAN-FLT VCP	MOLEX	2	562507	562503	
C 357	INST. PANEL RH-WATER TEMP GA	AMP MNL	3	561667	C 439	SOUND SYS. JCT. PAN-FLT VCP	MOLEX	2	562507	562549	
C 358	INST. PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	C 440	WORLD TRANS.-RETARDER ACCUM.	AMP CPC	2	561566	561590	
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	561550	C 441	WORLD TRANS.-TURBINE SP. SENS.	AMP CPC	2	561566	561590	
C 362	FR ROOF-LAVATORY OCCUPIED LT	AMP MNL	2	561248	C 442	WORLD TRANS.-ENGINE SP. SENS.	AMP CPC	2	561566	561590	
C 363	FR ROOF-WATCH YOUR STEP LT	AMP MNL	2	561247	C 443	WORLD TRANS.-SPEED SENSOR	AMP CPC	2	561566	561590	
C 364	FR ROOF-DESTINATION SIGN	AMP MNL	3	561667	C 444	WORLD TRANS.-RETARDER TEMP.	AMP CPC	2	561566	561590	
C 365	RH DASH PANEL-GRN & RED LEOS	AMP MNL	3	561667	C 445	WORLD TRANS.-SENSOR CONN.	AMP CPC	2	561566	561590	
C 366	ENGINE COMPT.-OIL T. SENSOR	AMP MNL	3	561550	C 446	FR SERVICE CPT.-REIS. MOD.	AMP CPC	2	561566	561590	
C 367	FR ROOF-DEST. SIGN BALLAST	AMP MNL	3	561667	C 447	FR SERVICE CPT.-REIS. MOD.	AMP CPC	2	561566	561590	
C 368	FR ROOF-DEST. SIGN OPER. SW	AMP MNL	3	561667	C 448	FR SERVICE CPT.-REIS. MOD.	AMP CPC	2	561566	561590	
C 369	FR ROOF-DEST. SIGN OPER. SW	AMP MNL	3	561667	C 449	FR SERVICE CPT.-REIS. MOD.	AMP CPC	2	561566	561590	
C 370	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	3	561667	C 450	FR SERVICE CPT.-REIS. MOD.	AMP CPC	2	561566	561590	
C 371	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	3	561667	C 451	FR SERVICE CPT.-REIS. MOD.	AMP CPC	2	561566	561590	
C 372	FR ROOF-DEST. SIGN SPEED SW	AMP MNL	3	561667	C 452	FR SERVICE CPT.-REIS. MOD.	AMP CPC	2	561566	561590	
C 373	FR ROOF-NO SMOKING LT	AMP MNL	3	561667	C 453	FR SERVICE CPT.-REIS. MOD.	AMP CPC	2	561566	561590	
C 374	LH SWITCH PANEL	AMP MNL	3	561667	C 454	FR SERVICE CPT.-REIS. MOD.	AMP CPC	2	561566	561590	
C 375	LH SWITCH PANEL	AMP MNL	3	561667	C 455	FR SERVICE CPT.-REIS. MOD.	AMP CPC	2	561566	561590	
C 376	LH SWITCH PANEL	AMP MNL	3	561667	C 456	FR SERVICE CPT.-REIS. MOD.	AMP CPC	2	561566	561590	
C 377	LH SW PANEL-STOP ENG.OVERIDE	AMP CPC	37	561714	C 457	FR SERVICE CPT.-REIS. MOD.	AMP CPC	3	561566	561590	
C 380	LH CONSOLE-DR. CONNECTOR	DEUTSCH	8	562360	C 458	FR SERVICE CPT.-REIS. MOD.	AMP CPC	3	561566	561590	
C 386	LH CONSOLE-WCL. POWER SYSTEM	SWF	6	562360	C 459	FR SERVICE CPT.-REIS. MOD.	AMP CPC	3	561566	561590	
C 387	RR JCT BOX (WCL)	AMP MNL	9	561661	C 460	FR SERVICE CPT.-REIS. MOD.	AMP CPC	3	561566	561590	
C 388	RR JCT BOX (WCL)	AMP MNL	9	561661	C 461	FR SERVICE CPT.-REIS. MOD.	AMP CPC	3	561566	561590	
C 389	WCL REAR DOOR	AMP MNL	12	561735	C 462	FR SERVICE CPT.-REIS. MOD.	AMP CPC	3	561566	561590	
C 390	LAVATORY WALL-WCL REMOTE CTR	SWF	4	561477	C 463	FR SERVICE CPT.-REIS. MOD.	AMP CPC	3	561566	561590	
C 391	LAVATORY WALL-WCL LAMP	SWF	8	561477	C 464	FR SERVICE CPT.-REIS. MOD.	AMP CPC	3	561566	561590	
C 392	LAVATORY WALL-WCL SW. LT.	SWF	8	561477	C 465	FR SERVICE CPT.-REIS. MOD.	AMP CPC	3	561566	561590	
C 393	LAVATORY WALL-WCL REMOTE SYS.	SWF	8	561477	C 466	FR SERVICE CPT.-REIS. MOD.	AMP CPC	3	561566	561590	
C 394	UNDER INSTR. PANEL. BU MONITOR	AMP CPC	4	561686	C 467	FR SERVICE CPT.-REIS. MOD.	AMP CPC	3	561566	561590	
C 395	DRIVERS COMPT. - BU MONITOR	AMP MNL	4	560851	C 468	FR SERVICE CPT.-REIS. MOD.	AMP CPC	3	561566	561590	
C 396	FR SECT. LH HAT RACK-SPEAKER	AMP CPC	4	561686	C 469	FR SERVICE CPT.-REIS. MOD.	AMP CPC	3	561566	561590	
C 397	ENGINE COMPT. CRADLE ACC.	AMP CPC	4	561686	C 470	FR SERVICE CPT.-REIS. MOD.	AMP CPC	3	561566	561590	
C 400	ENGINE COMPT. BLOCK HEATER	AMP CPC	4	561686	C 471	FR SERVICE CPT.-REIS. MOD.	AMP CPC	3	561566	561590	
C 402	RR DRIVE AXLE-AIR DRYER	AMP CPC	4	561686	C 472	FR SERVICE CPT.-REIS. MOD.	AMP CPC	3	561566	561590	
C 403	GALLEY FRIGO NORCOLD	AMP CPC	4	561686	C 473	FR SERVICE CPT.-REIS. MOD.	AMP CPC	3	561566	561590	
C 404	GALLEY VAMP	AMP CPC	4	561686	C 474	FR SERVICE CPT.-REIS. MOD.	AMP CPC	3	561566	561590	
C 406	FR JCT BOX COMPT. -ABS	AMP CPC	4	561686	C 475	FR SERVICE CPT.-REIS. MOD.	AMP CPC	3	561566	561590	
C 407	ENGINE COMPT. -SIGNAL	AMP CPC	4	561686	C 476	FR SERVICE CPT.-REIS. MOD.	AMP CPC	3	561566	561590	
C 408	ENGINE COMPT. -SIGNAL	AMP CPC	4	561686	C 477	FR SERVICE CPT.-REIS. MOD.	AMP CPC	3	561566	561590	
C 409	ENGINE CPT. -LOW COOL. LEVEL	AMP CPC	4	561686	C 478	FR SERVICE CPT.-REIS. MOD.	AMP CPC	3	561566	561590	
C 410	FR JCT BOX-DIODE CONNECTOR	AMP CPC	15	561987	C 479	FR SERVICE CPT.-REIS. MOD.	AMP CPC	3	561566	561590	
C 412	FR JCT BOX-DIODE CONNECTOR	AMP CPC	15	561987	C 480	FR SERVICE CPT.-REIS. MOD.	AMP CPC	3	561566	561590	
C 413	ENG CPT. -AC HI UNLOAD PRS SW	AMP MNL	8	561987	C 481	FR SERVICE CPT.-REIS. MOD.	AMP CPC	3	561566	561590	
C 414	RR JCT BOX	AMP MNL	8	561987	C 482	FR SERVICE CPT.-REIS. MOD.	AMP CPC	3	561566	561590	
C 415	ENGINE CRADLE-FAN SIGNAL	AMP MNL	8	561987	C 483	FR SERVICE CPT.-REIS. MOD.	AMP CPC	3	561566	561590	
C 416	FRONT JCT BOX-DIODES	AMP MNL	8	561987	C 484	FR SERVICE CPT.-REIS. MOD.	AMP CPC	3	561566	561590	
C 417	INST. PANEL LH-HTR WINDSH.SW	AMP MNL	3	561667	C 485	FR SERVICE CPT.-REIS. MOD.	AMP CPC	3	561566	561590	
C 418	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	C 486	FR SERVICE CPT.-REIS. MOD.	AMP CPC	3	561566	561590	
C 419	ENGINE COMPT. WEBASTO WATER HTR	AMP CPC	2	561597	C 487	FR SERVICE CPT.-REIS. MOD.	AMP CPC	3	561566	561590	
C 420	ENGINE COMPT. WEBASTO WATER HTR	AMP CPC	2	561597	C 488	FR SERVICE CPT.-REIS. MOD.	AMP CPC	3	561566	561590	
C 421	ENGINE COMPT. WEBASTO WATER HTR	AMP CPC	2	561597	C 489	FR SERVICE CPT.-REIS. MOD.	AMP CPC	3	561566	561590	
C 422	ENGINE COMPT. WEBASTO WATER HTR	AMP CPC	2	561597	C 490	FR SERVICE CPT.-REIS. MOD.	AMP CPC	3	561566	561590	
C 424	UNDER INSTRUMENT PANEL. CENTER	AMP MNL	3	561667	C 491	FR SERVICE CPT.-REIS. MOD.	AMP CPC	3	561566	561590	
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	C 492	FR SERVICE CPT.-REIS. MOD.	AMP CPC	3	561566	561590	

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 522	FR JCT BOX-DAYTIME LITS MODULE	BOSCH	5		561183						
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 528	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	562647	562646						
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 533	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 534	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	562647	562646						
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561667	561550						
C 537	BATT. CPT.-XAC PRESS. SIGN. RLY	AMP MNL	2	561532	561515						
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247						
C 539	RH DASH PANEL-THERMOMETER SOUND	AMP MNL	2	561248	561247						
C 540	RH DASH PANEL-THERMOMETER SOUND	AMP MNL	2	561248	561247						
C 541	RR JCT BOX-PARK. BRAKE STOP LITS RESIS.	PED WP	2	561566	561690						
C 542	SOUND SYS JCT PANEL-AUDIO SEAT SYS.	AMP MNL	3	561781	562428						
C 543	RH HAT FLACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550						
C 544	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646						
C 545	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646						
C 546	LH DASH PANEL-T.I. LT. TEST SW.	SWF	8		561107						

PREVOST

WIRING DIAGRAM

D060882

PAGE: G4

REVISION
00

1

IN	#SCKET	HOUSING
1	561713	561713
2	561693	561693
3	641094	641094
4	561595	561595
5	561578	561578
6	561781	561781
7	561247	561247
8	562155	562155
9	562155	562155
10	562155	562155
11	562155	562155
12	562155	562155
13	562155	562155
14	562155	562155
15	562155	562155
16	562155	562155
17	562155	562155
18	562155	562155
19	562155	562155
20	562155	562155
21	562155	562155
22	562155	562155
23	562155	562155
24	562155	562155
25	562155	562155
26	562155	562155
27	562155	562155
28	562155	562155
29	562155	562155
30	562155	562155
31	562155	562155
32	562155	562155
33	562155	562155
34	562155	562155
35	562155	562155
36	562155	562155
37	562155	562155
38	562155	562155
39	562155	562155
40	562155	562155
41	562155	562155
42	562155	562155
43	562155	562155
44	562155	562155
45	562155	562155
46	562155	562155
47	562155	562155
48	562155	562155
49	562155	562155
50	562155	562155
51	562155	562155
52	562155	562155
53	562155	562155
54	562155	562155
55	562155	562155
56	562155	562155
57	562155	562155
58	562155	562155
59	562155	562155
60	562155	562155
61	562155	562155
62	562155	562155
63	562155	562155
64	562155	562155
65	562155	562155
66	562155	562155
67	562155	562155
68	562155	562155
69	562155	562155
70	562155	562155
71	562155	562155
72	562155	562155
73	562155	562155
74	562155	562155
75	562155	562155
76	562155	562155
77	562155	562155
78	562155	562155
79	562155	562155
80	562155	562155
81	562155	562155
82	562155	562155
83	562155	562155
84	562155	562155
85	562155	562155
86	562155	562155
87	562155	562155
88	562155	562155
89	562155	562155
90	562155	562155
91	562155	562155
92	562155	562155
93	562155	562155
94	562155	562155
95	562155	562155
96	562155	562155
97	562155	562155
98	562155	562155
99	562155	562155
100	562155	562155

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C165	RR AXLE ABS LH VALVE	WABCO	3		641098	C251	LH SW PANEL-FAST IDLE	SWF	8		561107
C166	RR AXLE ABS RH VALVE	WABCO	3		641098	C252	LH SW PANEL-SWITCH LT	SWF	2		561837
C167	RR AXLE ABS RH SENSOR	DEUTSCH	2	562486	562485	C253	LH SW PANEL-LEATHER	SWF	8		561107
C168	RR AXLE ABS OPT ATC	DEUTSCH	4	561610	561611	C254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5		562110
C169	RR JCT BOX-SPEED SW	AMP HDP	15		562012	C255	LH SW PANEL-JACOBI	SWF	8		561107
C170	FR JCT BOX-FLASHER UNIT	TC	2		561940	C257	INSTRUMENT PANEL-CENT-TACHO	AMP FF	8		562363
C171	LH CONSOLE	AMP CPC	37	561645	561646	C259	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561168	
C172	ENGINE COMP-WATER TANK HEAT.	AMP CPC	2	561566	561660	C269	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561108	
C173	LAV.POTABLE WATER TANK HEAT.	AMP MNL	2	560990	560998	C280	FR SERVICE CPT-LUG DOOR LOCK	AMP FF	6	561606	561607
C174	UNDER DASH RH-HTR MODULE	AMP MNL	2	561670	561669	C281	UNDER DASH RH-DOOR MODULE	AMP MNL	4	561551	561659
C175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669	C282	UNDER DASH RH-DOOR MODULE	AMP MNL	4	561551	561659
C176	UNDER DASH RH-WIPER PULSE	AMP FF	6		561186	C283	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561530
C177	UNDER DASH RH-WIPER MOTOR	AMP FF	6		561186	C284	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561530
C178	UNDER DASH RH-LH FAN	TC	2	561030	560997	C285	UNDER DASH RH-DOOR MODULE	AMP HDP-20	15	561667	561530
C179	RR JCT BOX-DIODE CONNECTOR	AMP MNL	2	561030	560997	C287	UNDER DASH RH-MIRROR	AMP CPC	24	562011	562012
C181	RR JCT BOX-COMPT.-WT VIM	AMP CPC	15	561387	561966	C288	UNDER DASH RH-MIRROR	AMP MNL	6	561552	561642
C182	RR JCT BOX-COMPT.-WT VIM	AMP CPC	16	561639	561611	C269	UNDER DASH RH-MIRROR	AMP MNL	6	561552	561642
C183	FR SERVICE CPT-KNEELING PAN	AMP MNL	4	561610	561611	C270	LH MIRROR POST	AMP MNL	6	562070	561515
C184	FR SERVICE CPT-KNEELING SW	ITL SS	3	561111	561080	C271	RH MIRROR POST	MOLEX	6	562070	562069
C185	RR JCT BOX-COMPT.-WT VIM	ITL SS	30		561630	C272	LH MIRROR	MOLEX	6	562070	562069
C186M	RR JCT BOX-CPT.-SPD SIGN. M TR	AMP MNL	2	561566	561690	C273	RH MIRROR	SPARTAN	6		990158
C186W	RR JCT BOX-CPT.-SPD SIGN. WT	AMP MNL	2	561566	561690	C275	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561659
C187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515	C276	UNDER DASH RH-LOCK SOL VALVE	AMP MNL	2	561248	561247
C189	ENGINE CPT RH DOOR 8/11 LT	AMP MNL	2	561566	561690	C279	UNDER DASH CYLINDER READ SW.	AMP MNL	2	561248	561247
C190	ENGINE CPT RH DOOR 8/11 LT	AMP MNL	2	561566	561690	C280	LH CONSOLE-UNLOAD TAG SW.	SWF	8		561107
C191	ENGINE CPT RH DOOR RH STOP LT	AMP MNL	2	561566	561690	C286	RH SW PANEL-ACC & HEAT	SWF	8		561107
C192	ENGINE CPT RH DOOR RH DIR. LT	AMP MNL	2	561566	561690	C287	ENGINE COMP.-LTS SW	AMP MNL	2	561566	561690
C193	FR SECT. LH HAT RACK-FLUOR.	AMP MNL	2	561566	561690	C288	RH SW PANEL-FRESH AIR	SWF	2	561566	561690
C194	ENGINE CPT RH DOOR LH DIR. LT	AMP MNL	2	561566	561690	C289	RH SW PANEL-SWITCH LT	SWF	2	561566	561690
C195	ENGINE CPT RH DOOR CYCLOP LT	AMP MNL	2	561566	561690	C297	INSTRUMENT PANEL RH-LTS	AMP MNL	2	560900	560998
C196	ENGINE CPT RH DOOR CYCLOP LT	AMP MNL	2	561566	561690	C298	LH CONSOLE-SW-GALLET	SWF	8	560900	561107
C199	ENGINE CPT RH DOOR LICENCE LT	AMP MNL	2	561566	561690	C299	INSTRUMENT PANEL-CENT-TACHO	AMP FF	8	560900	561107
C200	RH HAT RACK-FLUORESCENT	AMP MNL	2	930210		C301	LH CONSOLE-SW-RH-HEAT	AMP FF	2	561030	560997
C201	RH HAT RACK-FLUORESCENT	AMP MNL	4	561551	561668	C308	DEEC ENGINE-ECM POWER CON.	AMP FF	5	562363	562346
C202	RH HAT RACK-BALLAST	AMP MNL	4	561551	561668	C310	LH CONSOLE-SW-4/UG. DOOR LOCK	PED MP	5		562346
C203	RH HAT RACK-BALLAST	AMP MNL	4	561552	561515	C311	LH CONSOLE-SW-4/UG. DOOR LOCK	SWF	8		561107
C204	FR HAT RACK-CL. NI. W/L LT	AMP MNL	6	561552	561515	C312	LH CONSOLE-SW-4/UG. DOOR LOCK	SWF	8		561107
C205	FR HAT RACK-CL. NI. W/L LT	AMP MNL	3	561667	561550	C313	LH CONSOLE-SW-GEN & PAS CHIME	SWF	8		561107
C206	FR HAT RACK-READING LT	AMP MNL	9	561667	561550	C314	LH CONSOLE-SW-GEN & PAS CHIME	SWF	8		561107
C207	LH HAT RACK-BALLAST	AMP MNL	2	560900	560998	C315	LH CONSOLE-SW-4/UG. DOOR LOCK	SWF	8		561107
C208	LH HAT RACK-BALLAST	AMP MNL	4	560900	560998	C316	LH CONSOLE-SW-4/UG. DOOR LOCK	SWF	8		561107
C210	FR SECT. LH HAT RACK-SPEAKER	AMP MNL	9	560851	560852	C317	LH CONSOLE-SW-4/UG. DOOR LOCK	SWF	8		561107
C211	FR SECT. LH HAT RACK-SPEAKER	AMP MNL	9	561661	561662	C318	LH CONSOLE-SW-4/UG. DOOR LOCK	SWF	8		561107
C212	FR ROOF-STORE LH	AMP MNL	2	560900	560998	C320	LH CONSOLE-SW-DRIVER'S LTS	SWF	8		561107
C213	FR ROOF-STORE RH	AMP MNL	2	560900	560998	C322	LH CONSOLE-SW-DRIVER'S LTS	SWF	8		561107
C220	RR JCT BOX-FUEL PRIME PUMP	AMP MNL	1	561070	561073	C323	LH CONSOLE-SW-4/UG. DOOR LOCK	PED PO	2	561636	561637
C225	FR SECT. RH HAT RACK-FLUOR.	AMP MNL	2	561248	561247	C325	LH CONSOLE-SW-4/UG. DOOR LOCK	SWF	8		561107
C230	ENG. CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485	C326	LH CONSOLE-SW-4/UG. DOOR LOCK	SWF	8	562583	562584
C231	ENG. CPT.-FUEL PRIME PUMP SW.	DEUTSCH	2	561566	561567	C327	LH CONSOLE-SW-4/UG. DOOR LOCK	AMP MNL	2	561248	561247
C232	ENG. CPT.-FUEL PRIME PUMP	PED WP	2	561566	561567	C328	LH CONSOLE-SW-4/UG. DOOR LOCK	PED WP	3	561781	561782
C233	INSTRUMENT PANEL-CENTER	PED WP	2	561566	561567	C329	ENGINE CONTROL	SWF	8		561837
C234	INSTRUMENT PANEL-CENTER	V.D.O.	8		562041	C330	GALLEY TACHO SIGNAL	SWF	8		561837
C235	INSTRUMENT PANEL-CENTER	V.D.O.	4		562041	C331	GALLEY MICROWAVE SW LT	SWF	2		561837
C236	INSTRUMENT PANEL-CENTER	V.D.O.	4		562041	C332	GALLEY MICROWAVE SW	SWF	2		561837
C237	UNDER DASH LH-JACOBI CLUTCH SW	AMP MNL	4	560851	561080	C333	GALLEY RH CONTAINER SW	SWF	2		561837
C238	RR JCT BOX-DIODE CONNECTOR	AMP MNL	3	561670	561669	C334	GALLEY LH CONTAINER SW	SWF	2		561837
C239	FR SERVICE CPT-HI BUOY VALVE	PED WP	9	561566	561567	C335	GALLEY LH CONTAINER SW	SWF	2		561837
C240	FR SERVICE CPT-KNEEL PROX SW	PED WP	2	561566	561567	C337	INSTR. PANEL LH-UP WIPER SW	SWF	2		561837
C242	FR SERVICE CPT-KNEEL PROX SW	PED WP	2	561566	561567	C338	INSTR. PANEL LH-UP WIPER SW	SWF	2		561837
C243	FR SERVICE CPT-HEADLAMP	ITL SS	3	561111	561071	C339	INSTR. PANEL LH-UP WIPER SW	SWF	8		561107
C244	FR SERVICE CPT-LH FOG LAMP	ITL SS	2	561813	561812	C340	FR JCT. BOX FIRE PIEZO ALARM	SWF	8	560900	560998
C245	FR SERVICE CPT-RH FOG LAMP	ITL SS	2	561813	561812	C341	INSTR. PANEL LH-HEADLAMP SW	SWF	8	560900	560998
C246	FR SERVICE CPT-MARK & DIR LT	ITL SS	3	561111	561080	C342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6		561108	C343	INSTR. PANEL LH-HEADLAMP SW	SWF	8		561107
						C344	INSTR. PANEL LH-HAZARD LT SW	SWF	8		561107

PREVOST

WIRING

DIAGRAM

D060882

PAGE:

G2

REVISION 03

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 343	INSTR PANEL LH-HEADLAMP SW	SWF	8	-----	561107	C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 344	INSTR PANEL LH-HAZARD LT SW	SWF	8	-----	561107	C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 345	INSTR PANEL LH-FOG LT SW	SWF	8	-----	561107	C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 346	INSTR PANEL LH-SWITCH LTS	SWF	2	-----	561837	C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898	C 431	LH CONSOLE-PRER HEAT.	TAB AMP	1	561540	561539
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067	C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	DEUTSCH	4	562479	562477
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550	C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 351	LH HAT RACK-FLUOR 110V	MOLEX	4	561477	561476	C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	-----	561104	C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515	C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515	C 437	RH HAT RACK-WCL FR & RR SECT.	AMP CPC	24	561642	561643
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550	C 450	SOUND SYS. JCT. PANEL	MOLEX	4	562507	562503
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550	C 451	WIRELESS MICRO-FIRST CPT BAG	MOLEX	2	562550	562549
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550	C 452	UNDER DASH INSTR. PANEL	MOLEX	2	562550	562549
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	-----	561186	C 453	SOUND SYS. JCT.PANEL-VCP	PED WP	2	561566	561680
C 362	FR ROOF-LAVATORY OCCUPIED LT	AMP MNL	2	561248	561247	C 454	SOUND SYS.JCT.PAN.-FILT. VCP	PED WP	2	561566	561680
C 363	FR ROOF-WATCH YOUR STEP LT	AMP MNL	2	561248	561247	C 455	WIRELESS MICRO-LH HAT-RACK	CINCH	2	562554	562551
C 364	FR ROOF-DESTINATION SIGN	AMP MNL	3	561667	561550	C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	-----	562427
C 365	FR ROOF-UP WINDSHIELD DEFROST	AMP MNL	3	561667	561550	C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006	C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	-----	562426
C 367	ENGINE COMPT-DIF OIL T SENSOR	PED WP	2	561566	561690	C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	-----	562426
C 368	FR ROOF-DEST. SIGN BALLAST	AMP MNL	3	561667	561550	C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	-----	562541
C 369	FR ROOF-DEST. SIGN OPER. SW	TORRIX	5	-----	562110	C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561680
C 370	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898	C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	-----	562426
C 371	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898	C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476	C 464	RR JCT BOX-DDL CONN W.T.	PED MP	12	-----	562574
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247	C 465	LH CONSOLE-SHIFTER SELECTOR	T & BET	10	-----	562429
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515	C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	-----	562428
C 376	LH SWITCH PANEL	AMP CPC	37	561714	562005	C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	-----	562428
C 377	LH SW PANEL-STOP ENG.OVERRIDE	SWF	8	-----	561107	C 468	RR JCT BOX-VIM MOD. W.T.	PED MP	18	-----	562573
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	-----	C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 386	LH CONSOLE-WCL POWER SYSTEM	SWF	8	-----	561107	C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 387	RR JCT BOX (WCL)	AMP MNL	9	561661	561662	C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 388	RR JCT BOX (WCL)	AMP MNL	12	561735	561734	C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 389	WCL REAR DOOR	MOLEX	4	561477	561476	C 474	LUGGAGE CPT.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 390	LAVATORY WALL-WCL REMOTE CTR	SWF	8	-----	561107	C 475	RR JCT BOX-SPEED SIGN CONNECTOR	AMP MNL	2	561248	561247
C 391	LAVATORY WALL-WCL LAMP	SWF	8	-----	561107	C 475M	RR JCT BOX-SPEED SIGN MANUAL TR.	MOLEX	6	562070	562069
C 392	LAVATORY WALL-WCL SW. LT.	SWF	2	-----	561835	C 475W	RR JCT BOX-SPEED SIGN WORLD TR.	MOLEX	6	562070	562069
C 393	LAVATORY WALL-WCL REMOTE SYS.	AMP CPC	4	561686	561687	C 476	RR JCT BOX-VIM WORLD TRANSM.	AMP CPC	16	561639	561640
C 394	UNDER INSTR. PANEL- B/U MONITOR	AMP MNL	4	560851	560852	C 477	RR JCT BOX-WORLD TR. SHIFT.&RET.	AMP CPC	9	561636	561637
C 395	DRIVER'S COMPT. - B/U MONITOR	AMP	5	-----	-----	C 478	ELECTRONIC DESTINATION SIGN	AMP CPC	9	561636	561637
C 396	FR SECT. LH HAT RACK-SPEAKER	MOLEX	4	562507	562503	C 483	FR SERVICE CPT. (NOT USED)	PED PC	2	-----	562237
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284	C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782	C 501	FR LH UPPER WHELL CPT -PRODRIVER MOD	PED MP	7	562433	-----
C 402	RR DRIVE AXLE-AIR DRYER	PED MP	2	-----	562251	C 502	LH CONSOLE-PRE HEATER SW.	SWF	8	-----	561107
C 403	GALLEY FRIGO NORCOLD	AMP MNL	2	561248	561247	C 503	LH CONSOLE-PRE HEATER SW.	SWF	2	-----	561837
C 404	GALLEY LAMP	AMP MNL	2	561248	561247	C 504	LH CONSOLE WEBASTO TIMER	AMP	8	561188	562363
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898	C 505	LH CONSOLE ESPAR TIMER	AMP	12	-----	562681
C 407	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607	C 506	FR JCT BOX CPT. DIGITAL CLOCK	AMP	4	561685	561687
C 408	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607	C 507	FR SECT. LH HAT-RACK DIG. CLOCK	MOLEX	4	561477	561476
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	-----	562350	C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986	C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	-----	562530
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986	C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	-----
C 412	LH SW PANEL-MASTER SWITCH	SWF	8	-----	561107	C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	-----
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690	C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	-----
C 414	RR JCT BOX	AMP MNL	9	561670	561669	C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 415	ENGINE CRADLE-FAN SIGNAL	PED WP	3	561781	561782	C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 416	ENGINE CRADLE-FAN SIGNAL	PED P-C	3	562237	-----	C 515	RH DASH PANEL-T.T.LT.	AMP CPC	14	561585	561583
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986	C 515	FR JCT BOX CPT.-INTERCOM	MOLEX	4	561477	561476
C 418	INSTR. PANEL LH-HTR WINDSH.SW	SWF	8	-----	561107	C 516	CENTER DASH PANEL -UPPER T.T.LT.	AMP CPC	24	561642	561643
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550	C 516	FR JCT BOX CPT.-INTERCOM	MOLEX	6	562070	562069
C 420	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	-----	C 517	CENTER DASH PANEL -LOWER T.T.LT.	AMP CPC	24	561642	561643
C 421	ENGINE COMPT. WEBASTO WATER HTR	TC	1	561073	-----	C 517	LAVATORY WALL-INTERCOM	MOLEX	6	562070	562069
C 422	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	-----	C 519	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	-----	562580
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550	C 520	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	-----	641385

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN	#SOCKET	NO	LOCATION	TYPE	CAVITY	#PIN	#SOCKET
				HOUSING	HOUSING					HOUSING	HOUSING
C 521	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	-----	641385						
C 522	FR JCT BOX-DAYTIME LTS MODULE	BOSCH	5	-----	561183						
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 528	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248						
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 533	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 534	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550						
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515						
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247						
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247						
C 539	RH DASH PANEL-THERMOMETER SOUND	AMP MNL	2	561248	561247						
C 540	RH DASH PANEL-THERMOMETER SOUND	AMP MNL	2	561248	561247						
C 541	SOUND SYS. JCT PANEL-AUDIO SEAT SYS.	PED WP	2	561566	561690						
C 542	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550						
C 543	RR JCT BOX-PARK. BRAKE STOP LTS RESIS.	PED WP	2	561566	561690						
C 544	SOUND SYS JCT PANEL-AUDIO SEAT SYS.	PED WP	3	561781	562428						
C 545	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550						
C 546	LH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646						
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646						
C 548	LH DASH PANEL-T.T. LT. TEST SW.	SWF	8	-----	561107						
C 549	LH CONSOLE-FAN CLUTCH OVERRIDE SW.	SWF	8	-----	561107						
C 550	EVAPORATOR COMPARTIMENT	ITT	2	561813	562159						
C 551	RR JCT BOX - A/C PANEL	PED	2	561566	561690						

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C A	RR JCT BOX-ECU WORLD TR.	T & BET	34	-----	562419	C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C B	RR JCT BOX-ECU WORLD TR.	T & BET	34	-----	562420	C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584	C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640	C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643	C 93	FR LH UPPER WHELL CPT-ABS	WABCO	35	-----	641094
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646	C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646	C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640	C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643	C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643	C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646	C 102	FR SERV & SIDE CPT-FLASH. LH	GROTE	2	-----	562155
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640	C 103	FR SERV & SIDE CPT-MARKERS	GROTE	2	-----	562155
C 12	LH CONSOLE-HEATER MIR.	AMP MNL	2	561248	561247	C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	-----	562155
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515	C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662	C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 15	RR JCT BOX	AMP CPC	24	561641	561643	C 107	EVAPORATOR COMPT-DAMPER	PED WP	2	561566	561690
C 15	UNDER DASH-RH MIRROR	AMP MNL	9	561661	561662	C 108	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 16	LH CONSOLE SW-CRUISE ON OFF	SWF	8	-----	561107	C 109	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 17	LH CONSOLE SW-CRUISE RESUME	SWF	8	-----	561107	C 110	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 18	LH CONSOLE SW-CRUISE SET	SWF	8	-----	561107	C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 20	RR JCT BOX	AMP CPC	37	561644	561646	C 112	EVAPORATOR COMPT-SPEED MOT CTRL	DEUTSCH	5	-----	562566
C 21	RR JCT BOX	AMP CPC	24	561641	561643	C 113	BATT. & RR J.B.CPT-MARKER LT	GROTE	2	-----	562155
C 26	HYD & MAN TRANSM.-NEUT.& B/U	PED WP	4	561610	561611	C 114	RR J. BOX CPT DOOR DIR LT LH	GROTE	2	-----	562155
C 27	HYD & MAN TRANSM.-SPEED SENS.	PED WP	2	561566	561690	C 115	ENGINE COMPT-AIR DRYER	PED WP	2	561566	561690
C 32	DDEC ENGINE-ECM	PED	30	-----	561600	C 116	ENGINE COMPT. LTS	PED WP	1	561605	561577
C 35	RR JCT BOX	AMP CPC	24	561642	561643	C 118	ENGINE COMPT-LAVATORY FAN	TC	2	561030	560997
C 36	EMERGENCY EXIT LTS	AMP MNL	2	560900	560898	C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607
C 37	RR SECTION-LH HAT RACK	AMP MNL	9	561661	561662	C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607
C 38	RR SECTION-RH HAT RACK	AMP MNL	9	561661	561662	C 121	BATTERIE CPT. DOOR DIR LT RH	GROTE	2	-----	562155
C 41	LAVATORY ROOF FLUORESCENT	AMP MNL	2	560900	560898	C 122	ENGINE CPT-UNLOAD TAG SYSTEM	PED WP	2	561566	561690
C 42	LAVATORY BACK WALL-WTR TANK	AMP MNL	2	560900	560898	C 123	TAG AXLE-UNLOAD TAG RH VALVE	PED WP	2	561566	561690
C 43	LAVATORY BACK WALL-ACCES.	AMP MNL	9	561661	561662	C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690
C 45	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643	C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695	C 126	ENGINE CPT-FLUSHING PUMP	PED WP	2	561566	561690
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247	C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 50	FR SERVICE COMPT.-LOW BUOY	PED WP	1	561605	561577	C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 52	RR JCT BOX	AMP CPC	22	561709	561710	C 129	ENGINE CPT-PRE-HEAT WATER	AMP FF	6	561672	561186
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637	C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 58	RR JCT BOX - A/C PANEL	DEUTSCH	24	562280	562283	C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 59	RR JCT BOX - A/C PANEL	AMP CPC	14	561585	561583	C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247	C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247	C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247	C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247	C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247	C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	-----	562012
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247	C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	-----
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247	C 142	LAVATORY DOOR WALL	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247	C 143	LAVATORY DOOR WALL	AMP MNL	3	560908	562006
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247	C 144	UNDER LH SEAT-AISLE LTS	AMP MNL	4	560851	560852
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578	C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 70	LH CONSOLE	AMP CPC	24	561642	561643	C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	-----	560412
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646	C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643	C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 73	DASH CENTER PANEL	AMP CPC	16	561639	561640	C 151	EVAPORATOR CPT-THERMOSTAT	ITT SS	2	561813	562159
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646	C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247	C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247	C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247	C 155	EVAPORATOR CPT-WATER VALVE	PED WP	4	561610	561611
C 81	PASSENGER COMPT.-AISLE LTS	AMP MNL	2	560900	560898	C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 82	ENTRANCE DOOR	MOLEX	6	562070	562069	C 157	EVAPORATOR CPT-WATER PUMP	PED WP	2	561566	561690
C 83	ENTRANCE DOOR-PROIMITY SW	MOLEX	4	561477	561476	C 158	CONDENSER CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 84	ENTRANCE DOOR-PRESSURE SW	PED WP	2	561566	561690	C 159	CONDENSER CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 85	UNDER INSTRUMENT PANEL LH	AMP MTA-100 8	-----	562248	-----	C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	-----
C 87	RR END ROOF	AMP CPC	9	561636	561637	C 161	FR AXLE-ABS RH VALVE	WABCO	3	-----	641098
C 88	RR END ROOF-CLEARANCE LTS	AMP MNL	2	560900	560898	C 162	FR AXLE-ABS LH VALVE	WABCO	3	-----	641098

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	-----	C 246	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 164	RR AXLE-ABS LH SENSOR	DEUTSCH	2	562486	562485	C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	-----	561108
C 165	RR AXLE-ABS LH VALVE	WABCO	3	-----	641098	C 251	LH SW PANEL-FAST IDLE	SWF	8	-----	561107
C 166	RR AXLE-ABS RH VALVE	WABCO	3	-----	641098	C 252	LH SW PANEL-SWITCH LT	SWF	2	-----	561837
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	562486	562485	C 253	LH SW PANEL-ETHER	SWF	8	-----	561107
C 168	RR AXLE-ABS OPT ATC	PED WP	4	561610	561611	C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	-----	562110
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	-----	562012	C 255	LH SW PANEL-JACOB	SWF	8	-----	561107
C 170	FR JCT BOX-FLASHER UNIT	TC	2	-----	561940	C 257	INSTRUMENT PANEL CENT-TACHO	AMP FF	8	-----	562363
C 171	LH CONSOLE	AMP CPC	37	561645	561646	C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	-----
C 172	ENGINE COMPT-WATER TANK HEAT.	PED WP	2	561566	561690	C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	-----	561108
C 173	LAV.POTABLE-WATER TANK HEAT.	AMP MNL	2	560900	560898	C 260	FR SERVICE CPT-LUG DOOR LCK	PED WP	6	561606	561607
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669	C 261	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669	C 262	UNDER DASH RH-DOOR MODULE	AMP MNL	4	561551	561668
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	-----	561186	C 263	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	-----	561186	C 264	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997	C 265	UNDER DASH RH-DOOR MODULE	AMP HDP-20	15	562011	562012
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997	C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986	C 268	UNDER DASH LH-MIRROR	AMP MNL	6	561552	561515
C 182	RR JCT BOX COMPT.-WT VIW	AMP CPC	16	561639	561640	C 269	UNDER DASH RH-MIRROR	AMP MNL	6	561552	561515
C 183	FR SERVICE CPT-KNEELING PAN.	PED WP	4	561610	561611	C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 184	FR SERVICE CPT-KNEELING SW	ITT SS	3	561111	561080	C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 185	RR JCT BOX COMPT.-WT VIM	PED	30	-----	561600	C 272	LH MIRROR	SPARTAN	6	-----	990158
C 186	RR JCT BOX CPT.-SPEED SIGN.TR	PED WP	2	561566	561690	C 273	RH MIRROR	SPARTAN	6	-----	990158
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690	C 275	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690	C 276	UNDER DASH RH-LOCK SOL.VALVE	AMP MNL	2	561248	561247
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515	C 279	UNDER DASH CYLINDER READ SW.	AMP MNL	2	561248	561247
C 189	ENGINE CPT RR DOOR B/U LT	PED WP	2	561566	561690	C 280	LH CONSOLE-UNLOAD TAG SW.	SWF	8	-----	561107
C 190	ENGINE CPT RR DOOR TAIL LT	PED WP	2	561566	561690	C 286	RH SW PANEL-AVC & HEAT	SWF	8	-----	561107
C 191	ENGINE CPT RR DOOR RH STOP LT	PED WP	2	561566	561690	C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 192	ENGINE CPT RR DOOR RH DIR. LT	PED WP	2	561566	561690	C 288	RH SW PANEL-FRESH AIR	SWF	8	-----	561107
C 193	FR SECT. LH HAT RACK-FLUOR.	AMP MNL	2	561248	561247	C 289	RH SW PANEL-SWITCH LT	SWF	2	-----	561837
C 194	ENGINE CPT RR DOOR LH DIR. LT	PED WP	2	561566	561690	C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 195	ENGINE CPT RR DOOR LH STOP LT	PED WP	2	561566	561690	C 299	LH CONSOLE SW-GALLEY	SWF	8	-----	561107
C 196	ENGINE CPT RR DOOR CYCLOP LT	PED WP	2	561566	561690	C 301	INSTRUMENT PANEL CENT-TACHO	AMP FF	8	-----	562363
C 199	ENGINE CPT RR DOOR LICENCE LT	DOM AUTO	2	930210	-----	C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 200	RH HAT RACK-FLUORESCENT	AMP MNL	4	561551	561668	C 309	DDEC ENGINE-ECM POWER CON.	PED MP	5	-----	562345
C 201	RH HAT RACK-FLUORESCENT	AMP MNL	4	561551	561668	C 310	LH CONSOLE SW-LUG. DOOR LCK	SWF	8	-----	561107
C 202	RH HAT RACK-BALLAST	AMP MNL	4	560851	560852	C 311	LH CONSOLE SW-HOS & PAS CHIME	SWF	8	-----	561107
C 203	RH HAT RACK-BALLAST	AMP MNL	6	561552	561515	C 312	LH CONSOLE SW-READING LTS	SWF	8	-----	561107
C 204	RH HAT RACK-GENERAL LT	AMP MNL	3	561667	561550	C 313	LH CONSOLE SW-GEN & FLUOR LTS	SWF	8	-----	561107
C 205	FR SECT.-RH HAT RACK SPEAKER	AMP MNL	9	561661	561662	C 314	LH CONSOLE SW-FR DEST. SIGN	SWF	8	-----	561107
C 206	RH HAT RACK-READING LT	AMP MNL	2	560900	560898	C 315	LH CONSOLE SW-LH STORE	SWF	8	-----	561107
C 207	LH HAT RACK-READING LT	AMP MNL	2	560900	560898	C 316	LH CONSOLE SPARE SWITCH	SWF	8	-----	561107
C 208	LH HAT RACK-BALLAST	AMP MNL	4	560851	560852	C 317	LH CONSOLE SW-RH STORE	SWF	8	-----	561107
C 210	FR SECT.-LH HAT RACK SPEAKER	AMP MNL	9	561661	561662	C 318	LH CONSOLE SW-DRV WINDOW LIFT	SWF	8	-----	561107
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898	C 320	LH CONSOLE SW-DRIVER'S LTS	SWF	8	-----	561107
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898	C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	-----	561848
C 213	FR ROOF-CLEARANCE LT	AMP MNL	2	560900	560898	C 323	LH CONSOLE CRUISE CTR SW PAN. AMP	CPC	9	561636	561637
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073	C 325	LH CONSOLE SW-KNEELING	SWF	8	-----	561107
C 225	FR SECT. RH HAT RACK-FLUOR.	AMP MNL	2	561248	561247	C 326	LH CONSOLE SW-SPARE	SWF	8	-----	561107
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485	C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690	C 328	GALLEY-LAMP	AMP MNL	2	561248	561247
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690	C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 233	INSTRUMENT PANEL CENTER	V.D.O.	8	-----	562043	C 330	GALLEY MICROWAVE SW LT	SWF	2	-----	561837
C 234	INSTRUMENT PANEL CENTER	V.D.O.	4	-----	562044	C 331	GALLEY MICROWAVE SW	SWF	8	-----	561107
C 235	INSTRUMENT PANEL CENTER	V.D.O.	8	-----	562041	C 332	GALLEY RH CONTAINER SW LT	SWF	2	-----	561837
C 236	INSTRUMENT PANEL CENTER	AMP MNL	4	560851	560852	C 333	GALLEY RH CONTAINER SW	SWF	8	-----	561107
C 237	UNDER DASH LH-JACOB CLUTCH SW	ITT SS	3	561111	561080	C 334	GALLEY LH CONTAINER SW	SWF	8	-----	561107
C 238	RR JCT BOX-DIODE CONNECTOR	AMP MNL	9	561670	561669	C 335	GALLEY LH CONTAINER SW LT	SWF	2	-----	561837
C 239	FR SERVICE CPT-HI BUOY VALVE	PED WP	2	561566	561690	C 337	INSTR PANEL LH-UP WIPER SW	SWF	8	-----	561107
C 240	FR SERVICE CPT-KNEEL PROX SW	PED WP	2	561566	561690	C 338	INSTR PANEL LH-UP DEFROST SW	SWF	8	-----	561107
C 242	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080	C 339	INSTR PANEL LH-UP WASHER SW	SWF	8	-----	561107
C 243	FR SERVICE CPT-HEADLAMPS	TC	3	-----	561071	C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 244	FR SERVICE CPT-LH FOG LAMP	ITT SS	2	561813	561812	C 341	INSTR PANEL LH-HEAT MIRROR SW	SWF	8	-----	561107
C 245	FR SERVICE CPT-RH FOG LAMP	ITT SS	2	561813	561812	C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 343	INSTR PANEL LH-HEADLAMP SW	SWF	8	-----	561107	C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 344	INSTR PANEL LH-HAZARD LT SW	SWF	8	-----	561107	C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 345	INSTR PANEL LH-FOG LT SW	SWF	8	-----	561107	C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 346	INSTR PANEL LH-SWITCH LTS	SWF	2	-----	561837	C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898	C 431	LH CONSOLE-PRER HEAT.	TAB AMP	1	561540	561539
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067	C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	DEUTSCH	4	562479	562477
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550	C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 351	LH HAT RACK-FLUOR 110V	MOLEX	4	561477	561476	C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	-----	561104	C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515	C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515	C 437	RH HAT RACK-WCL FR & RR SECT.	AMP CPC	24	561642	561643
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550	C 450	SOUND SYS. JCT. PANEL	MOLEX	4	562507	562503
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550	C 451	WIRELESS MICRO-FIRST CPT BAG	MOLEX	2	562550	562549
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550	C 452	UNDER DASH INSTR. PANEL	MOLEX	2	562550	562549
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	-----	561186	C 453	SOUND SYS. JCT.PANEL-VCP	PED WP	2	561566	561680
C 362	FR ROOF-LAVATORY OCCUPIED LT	AMP MNL	2	561248	561247	C 454	SOUND SYS.JCT.PAN.-FILT. VCP	PED WP	2	561566	561680
C 363	FR ROOF-WATCH YOUR STEP LT	AMP MNL	2	561248	561247	C 455	WIRELESS MICRO-LH HAT-RACK	CINCH	2	562554	562551
C 364	FR ROOF-DESTINATION SIGN	AMP MNL	3	561667	561550	C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	-----	562427
C 365	FR ROOF-UP WINDSHIELD DEFROST	AMP MNL	3	561667	561550	C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006	C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	-----	562426
C 367	ENGINE COMPT-DIF OIL T SENSOR	PED WP	2	561566	561690	C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	-----	562426
C 368	FR ROOF-DEST. SIGN BALLAST	AMP MNL	3	561667	561550	C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	-----	562541
C 369	FR ROOF-DEST. SIGN OPER. SW	TORRIX	5	-----	562110	C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561680
C 370	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898	C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	-----	562426
C 371	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898	C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476	C 464	RR JCT BOX-DDL CONN W.T.	PED MP	12	-----	562574
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247	C 465	LH CONSOLE-SHIFTER SELECTOR	T & BET	10	-----	562429
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515	C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	-----	562428
C 376	LH SWITCH PANEL	AMP CPC	37	561714	562005	C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	-----	562428
C 377	LH SW PANEL-STOP ENG.OVERRIDE	SWF	8	-----	561107	C 468	RR JCT BOX-VIM MOD. W.T.	PED MP	18	-----	562573
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	-----	C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 386	LH CONSOLE-WCL POWER SYSTEM	SWF	8	-----	561107	C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 387	RR JCT BOX (WCL)	AMP MNL	9	561661	561662	C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 388	RR JCT BOX (WCL)	AMP MNL	12	561735	561734	C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 389	WCL REAR DOOR	MOLEX	4	561477	561476	C 474	LUGGAGE CPT.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 390	LAVATORY WALL-WCL REMOTE CTR	SWF	8	-----	561107	C 475	RR JCT BOX-SPEED SIGN CONNECTOR	AMP MNL	2	561248	561247
C 391	LAVATORY WALL-WCL LAMP	SWF	8	-----	561107	C 475M	RR JCT BOX-SPEED SIGN MANUAL TR.	MOLEX	6	562070	562069
C 392	LAVATORY WALL-WCL SW. LT.	SWF	2	-----	561835	C 475W	RR JCT BOX-SPEED SIGN WORLD TR.	MOLEX	6	562070	562069
C 393	LAVATORY WALL-WCL REMOTE SYS.	AMP CPC	4	561686	561687	C 476	RR JCT BOX-VIM WORLD TRANSM.	AMP CPC	16	561639	561640
C 394	UNDER INSTR. PANEL- B/U MONITOR	AMP MNL	4	560851	560852	C 477	RR JCT BOX-WORLD TR. SHIFT.&RET.	AMP CPC	9	561636	561637
C 395	DRIVER'S COMPT. - B/U MONITOR	AMP	5	-----	-----	C 478	ELECTRONIC DESTINATION SIGN	AMP CPC	9	561636	561637
C 396	FR SECT. LH HAT RACK-SPEAKER	MOLEX	4	562507	562503	C 483	FR SERVICE CPT. (NOT USED)	PED PC	2	-----	562237
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284	C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782	C 501	FR LH UPPER WHELL CPT -PRODRIVER MOD	PED MP	7	562433	-----
C 402	RR DRIVE AXLE-AIR DRYER	PED MP	2	-----	562251	C 502	LH CONSOLE-PRE HEATER SW.	SWF	8	-----	561107
C 403	GALLEY FRIGO NORCOLD	AMP MNL	2	561248	561247	C 503	LH CONSOLE-PRE HEATER SW.	SWF	2	-----	561837
C 404	GALLEY LAMP	AMP MNL	2	561248	561247	C 504	LH CONSOLE WEBASTO TIMER	AMP	8	561188	562363
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898	C 505	LH CONSOLE ESPAR TIMER	AMP	12	-----	562681
C 407	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607	C 506	FR JCT BOX CPT. DIGITAL CLOCK	AMP	4	561685	561687
C 408	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607	C 507	FR SECT. LH HAT-RACK DIG. CLOCK	MOLEX	4	561477	561476
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	-----	562350	C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986	C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	-----	562530
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986	C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	-----
C 412	LH SW PANEL-MASTER SWITCH	SWF	8	-----	561107	C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	-----
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690	C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	-----
C 414	RR JCT BOX	AMP MNL	9	561670	561669	C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 415	ENGINE CRADLE-FAN SIGNAL	PED WP	3	561781	561782	C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 416	ENGINE CRADLE-FAN SIGNAL	PED P-C	3	562237	-----	C 515	RH DASH PANEL-T.T.LT.	AMP CPC	14	561585	561583
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986	C 515	FR JCT BOX CPT.-INTERCOM	MOLEX	4	561477	561476
C 418	INSTR. PANEL LH-HTR WINDSH.SW	SWF	8	-----	561107	C 516	CENTER DASH PANEL -UPPER T.T.LT.	AMP CPC	24	561642	561643
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550	C 516	FR JCT BOX CPT.-INTERCOM	MOLEX	6	562070	562069
C 420	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	-----	C 517	CENTER DASH PANEL -LOWER T.T.LT.	AMP CPC	24	561642	561643
C 421	ENGINE COMPT. WEBASTO WATER HTR	TC	1	561073	-----	C 517	LAVATORY WALL-INTERCOM	MOLEX	6	562070	562069
C 422	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	-----	C 519	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	-----	562580
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550	C 520	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	-----	641385

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN	#SOCKET	NO	LOCATION	TYPE	CAVITY	#PIN	#SOCKET
				HOUSING	HOUSING					HOUSING	HOUSING
C 521	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	-----	641385						
C 522	FR JCT BOX-DAYTIME LTS MODULE	BOSCH	5	-----	561183						
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 528	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248						
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 533	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 534	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550						
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515						
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247						
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247						
C 539	RH DASH PANEL-THERMOMETER SOUND	AMP MNL	2	561248	561247						
C 540	RH DASH PANEL-THERMOMETER SOUND	AMP MNL	2	561248	561247						
C 541	SOUND SYS. JCT PANEL-AUDIO SEAT SYS.	PED WP	2	561566	561690						
C 542	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550						
C 543	RR JCT BOX-PARK. BRAKE STOP LTS RESIS.	PED WP	2	561566	561690						
C 544	SOUND SYS JCT PANEL-AUDIO SEAT SYS.	PED WP	3	561781	562428						
C 545	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550						
C 546	LH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646						
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646						
C 548	LH DASH PANEL-T.T. LT. TEST SW.	SWF	8	-----	561107						
C 549	LH CONSOLE-FAN CLUTCH OVERRIDE SW.	SWF	8	-----	561107						
C 550	EVAPORATOR COMPARTIMENT	ITT	2	561813	562159						
C 551	RR JCT BOX - A/C PANEL	PED	2	561566	561690						

DIODES NUMBER CODE

No.	PAGE	AMP	#PREV.	LOCATION	FUNCTION
D1	7	3A	561740	FR JCT BOX	LO-AIR SONALERT-PRIMARY
D2	7	3A	561740	FR JCT BOX	LO-AIR SONALERT-SECONDARY
D4	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D5	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D6	5	3A	561740	FR JCT BOX	WCL NEUT. SIGN INTERFACE TO PARK BRK T.T.L.T.
D9	12	3A	561740	FR L.H. HAT-PACK	HOSTESS & PASSENGER CHIME
D11	17	3A	561740	FR JCT BOX	LAVATORY OCCUPIED SIGN
D12	17	3A	561740	FR JCT BOX	LAVATORY OCCUPIED SIGN
D13	17	3A	561740	FR DEST. SIGN	FR DESTINATION SIGN
D14	17	3A	561740	FR DEST. SIGN	FR DESTINATION SIGN
D15	18	3A	561740	FR JCT BOX	KNEELING SYSTEM CTR-UP
D16	18	3A	561740	FR JCT BOX	KNEELING SYSTEM CTR-DOWN
D17	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D18	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D19	9	3A	561740	FR JCT BOX	DAYTIME RUN L.T.S.-PARK BRK CALL SW.
D20	9	3A	561740	FR JCT BOX	DAYTIME RUN L.T.S.-HEAD LT SW
D21	18	3A	561740	FR JCT BOX	KNEELING SYSTEM FEED BACK
D25	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR ALARM T.T.L.T.
D26	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR ALARM T.T.L.T.
D27	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR ALARM T.T.L.T.
D28	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR ALARM T.T.L.T.
D29	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR ALARM T.T.L.T.
D30	11.1	3A	561740	FR JCT BOX	DRIVERS L.T.S FEED BY STEP L.T.S
D32	11.3	3A	561740	FRONT ROOF CABL.	DRIVERS L.T.S FEED BY STEP L.T.S
D33	11.3	3A	561740	FRONT ROOF CABL.	WCL DOOR ALARM ALARM T.T.L.T.
D35	25	3A	561740	FR JCT BOX	RR HIGH BUOY - KNEELING
D58	17	3A	561740	FR JCT BOX	ACC & HEAT BYPASS SWITCH
D59	13.1	3A	561740	RUB AC JCT PANEL	ACC COMP. CLUTCH SUPPRESSOR
D60	13.1	3A	561740	RUB AC JCT PANEL	KNEELING SIDE RR RH DIRECTIONAL LT
D61	9.2	3A	561740	FR JCT BOX	WATER PUMP FEED
D62	13.1	3A	561740	RUB AC JCT PANEL	LAVATORY SONALERT
D63	17	3A	561740	FR JCT BOX	WCL DOOR ALARM
D64	17	3A	561740	FR JCT BOX	WATER PUMP - PRE-HEAT FEED
D65	13.1	3A	561740	RUB AC JCT PANEL	WATER VALVE - HEAT SW. FEED
D66	13.1	3A	561740	RUB AC JCT PANEL	AUDIBLE FLASHER RLY - RH
D67	9.2	3A	561740	UNDER DASH	FR HIGH BUOY - KNEELING
D68	9.2	3A	561740	UNDER DASH	FR HIGH BUOY - KNEELING
D70	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D71	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D72	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D73	18	3A	561740	FR JCT BOX	DASH MASTER CUT OUT SW.
D74	1	3A	561740	FR JCT BOX	STARTER-SUPPRESSOR COIL RLY
D75	4	3A	381351	BAT OPT	PARKING BRAKE - KNEELING
D77	18	3A	561740	FR JCT BOX	PRE-HEAT WATER HEATER SW.
D78	26	3A	561740	LH CONSOLE	PRE-HEAT WATER HEATER SW.
D79	26	3A	561740	LH CONSOLE	PIEZO-KNEELING
D81	18	3A	561740	FR JCT BOX	PIEZO-KNEELING
D82	18	3A	561740	FR JCT BOX	FAN CLUTCH W/RETARDER
D83	8	3A	561740	FR JCT BOX	WATER VALVE
D84	13.1	3A	561740	RUB AC JCT PANEL	WATER PUMP
D85	13.1	3A	561740	RUB AC JCT PANEL	ENTRANCE DOOR SEDAN
D86	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D87	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D88	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D89	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D90	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D91	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN

PREVOST

WIRING DIAGRAM

NO:

D060882

PAGE:

H

REVISION
01

DIODES NUMBER CODE

No.	PAGE	AMP	#PREV.	LOCATION	FUNCTION
D 1	7	3A	561740	FR JCT BOX	LO-AIR SONALERT-PRIMARY
D 2	7	3A	561740	FR JCT BOX	LO-AIR SONALERT-SECONDARY
D 4	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D 5	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D 6	5	3A	561740	FR JCT BOX	WCL NEUT. SIGN INTERFACE TO PARK BRK TTLT
D 9	12	3A	561740	FR L.H. HAT-RACK	HOSTESS & PASSENGER CHIME
D 11	17	3A	561740	RR JCT BOX	LAVATORY OCCUPIED SIGN
D 12	17	3A	561740	RR JCT BOX	LAVATORY OCCUPIED SIGN
D 13	17	3A	561740	FR DEST. SIGN	FR DESTINATION SIGN
D 14	17	3A	561740	FR DEST. SIGN	FR DESTINATION SIGN
D 15	18	3A	561740	FR JCT BOX	KNEELING SYSTEM CTR-UP
D 16	18	3A	561740	FR JCT BOX	KNEELING SYSTEM CTR-DOWN
D 17	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D 18	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D 19	9	3A	561740	FR JCT BOX	DAYTIME RUN LTS-PARK BRK CALL SW.
D 20	9	3A	561740	FR JCT BOX	DAYTIME RUN LTS-HEAD LT SW
D 21	18	3A	561740	FR JCT BOX	KNEELING SYSTEM FEED BACK
D 25	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 26	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 27	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 28	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 29	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 30	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 32	11.3	3A	561740	FRONT ROOF CABL.	DRIVER'S LTS FEED BY STEP LTS
D 33	11.3	3A	561740	FRONT ROOF CABL.	DRIVER'S LTS FEED BY STEP LTS
D 35	25	3A	561740	RR JCT BOX	WCL DOOR AJAR ALARM T.T.LT.
D 43	10	3A	561740	LOWER WIPER MOT.	WIPER MOTOR SUPPRESSOR
D 44	10	3A	561740	LOWER WIPER MOT.	WIPER MOTOR SUPPRESSOR
D 45	10	3A	561740	LOWER WIPER MOT.	WIPER MOTOR SUPPRESSOR
D 58	17	3A	561740	FR JCT BOX	RR HIGH BUOY - KNEELING
D 59	13.1	3A	561740	RJB A/C JCT PANEL	A/C & HEAT BYPASS SWITCH
D 60	13.1	3A	561740	RJB A/C JCT PANEL	A/C COMPR.CLUTCH SUPPRESSOR
D 61	9.2	3A	561740	FR JCT BOX	KNEELING SIDE FR RH DIRECTIONNAL LT
D 62	13.1	3A	561740	RJB A/C JCT PANEL	WATER PUMP FEED
D 63	17	3A	561740	FR JCT BOX	LAVATORY SONALERT
D 64	17	3A	561740	FR JCT BOX	WCL DOOR ALARM
D 65	13.1	3A	561740	RJB A/C JCT PANEL	WATER PUMP - PRE-HEAT FEED
D 66	13.1	3A	561740	RJB A/C JCT PANEL	WATER VALVE - HEAT SW. FEED
D 67	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - RH
D 68	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - LH
D 70	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 71	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 72	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 73	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 74	1	3A	561740	FR JCT BOX	DASH MASTER CUT OUT SW.
D 75	4	3A	381351	BAT CPT	STARTER-SUPPRESSOR COIL RLY
D 77	18	3A	561740	FR JCT BOX	PARKING BRAKE - KNEELING
D 78	26	3A	561740	LH CONSOLE	PRE-HEAT WATER HEATER SW.
D 79	26	3A	561740	LH CONSOLE	PRE-HEAT WATER HEATER SW.
D 81	18	3A	561740	FR JCT BOX	PIEZO-KNEELING
D 82	18	3A	561740	FR JCT BOX	PIEZO-KNEELING
D 83	8	3A	561740	RR JCT BOX	FAN CLUTCH W/RETARDER
D 84	13.1	3A	561740	RJB A/C JCT PANEL	WATER VALVE
D 85	13.1	3A	561740	RJB A/C JCT PANEL	WATER PUMP
D 86	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 87	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN

No.	PAGE	AMP	#PREV.	LOCATION	FUNCTION
D 88	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 89	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 90	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 91	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN

RELAYS NUMBER CODE

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION	No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R F1	8	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 1	R 80	11.1	24V	561707	RR JCT BOX	ENGINE COMPARTMENT LTS
R F2	8	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 2	R 82	19	24V	561707	FR JCT BOX	RETARDER WT
R F3	8	24V	560772	RR JCT BOX	TIME DELAY	R 84	8	24V	561707	RR JCT BOX	FAN CLUTCH-FIRST SPEED
R LA	16	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (LATCH)	R 85	8	24V	561707	RR JCT BOX	FAN CLUTCH-SECOND SPEED
R LO	16	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (PRESS. SW.)	R 87	19	24V	561707	RR JCT BOX	ENGINE BRAKE REQUEST WT
R LT	16	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (LIGHT)	R 89	22	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R LV	16	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (VALVE)	R 90	22	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 1	1.1	24V	561991	FR JCT BOX	ENGINE RUN (24) FR	R 91	22	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 2	2	24V	561991	BATT. CPT.	ENGINE RUN (12) FR & RR	R 92	22	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 3	4	24V	561707	BATT. CPT.	FIELD RELAY	R 93	26	24V	561707	RR JCT BOX	PRE-HEAT WATER HEATER (WEBASTO)
R 4	4	24V	561005	BATT. CPT.	STARTING MOTOR	R 94	25	24V	561707	RR JCT BOX	WCL - SYSTEM
R 5	5	24V	561707	FR JCT BOX	CRUISE CTR. STOP SIGN.	R 95	25	24V	561707	RR JCT BOX	WCL - MAGNETIC SW. SIGN.
R 6	9.3	24V	561707	RR JCT BOX	STOP LTS-PARKING BRAKE	R 96	25	24V	561707	RR JCT BOX	WCL - DOOR AJAR ALARM
R 7	5	24V	561707	FR JCT BOX	FAST IDLE	R 97	25	24V	561707	RR JCT BOX	WCL - DOOR AJAR PARK. BRAKE
R 8	6	24V	561707	RR JCT BOX	12V IGNITION WT	R 98	25	12V	561538	RR JCT BOX	WCL -
R 9	9.3	24V	561707	RR JCT BOX	BACK-UP LTS	R 99	8	24V	561707	RR JCT BOX	RADIATOR FAN CLUTCH
R 11	5	24V	561707	RR JCT BOX	12V IGNITION DDEC3	R 100	4	12V	561538	RR JCT BOX	GENERATOR SIGNAL
R 12	7	12V	562092	FR JCT BOX	ELECTRICAL HORNS	R 101	13.1	24V	561707	FR JCT BOX	DAMPER GAZ CYLINDER
R 13	9.3	24V	561707	FR JCT BOX	FOG LTS	R 102	13.1	24V	561707	RR JCT BOX	COMPRESSEUR CLUTCH CUT-OUT BELOW 40 F
R 14	9.1	24V	561707	FR JCT BOX	BLINKER	R 2010	26.2	24V	561230	WEBASTO PRE-HEAT	WEBASTO
R 15	9.1	24V	561707	FR JCT BOX	FR MARKER LTS	V IMN	6	12V	562092	RR JCT BOX	VIM WORLD TR.-NEUTRAL SIGNAL
R 16	9.1	24V	561707	FR JCT BOX	IDENT. & CLEARANCE LTS	V IMR	6	12V	562092	RR JCT BOX	VIM WORLD TR.-B/U SIGNAL
R 17	9.1	24V	561707	RR JCT BOX	TAIL,LICENCE,MARKER-RR LTS	V IM1	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 1
R 18	9.1	24V	561707	FR JCT BOX	D R L-PARK BRK CUT-IN	V IM2	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 2 ENG. BRK DISABLE
R 19	9.1	24V	561707	FR JCT BOX	HEADLAMPS (HI)	V IM3	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 3 SPD SW. 5MPH NO NC
R 20	9.1	24V	561707	FR JCT BOX	HEADLAMPS (LO)	V IM4	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 4 RETARD. ON SIGNAL
R 21	9.2	24V	561707	FR JCT BOX	L.H. DIRECTIONNAL LT						
R 23	9.2	24V	561707	FR JCT BOX	R.H. DIRECTIONNAL LT						
R 24	9.2	24V	561707	FR JCT BOX	R.H. CORNERING LT						
R 25	9.2	24V	561707	FR JCT BOX	L.H. CORNERING LT						
R 26	9.3	24V	561707	RR JCT BOX	STOP LTS						
R 27	11.2	24V	561707	RR JCT BOX	aisle & EMERG.EXIT - LTS						
R 28	11.2	24V	561707	FR JCT BOX	DASH LTS RHEOSTAT						
R 29	11.3	24V	561707	RR JCT BOX	READING LTS R.H.						
R 30	11.3	24V	561707	RR JCT BOX	READING LTS L.H.						
R 31	11.3	24V	561707	RR JCT BOX	GENERAL LTS						
R 32	11.4	24V	561707	RR JCT BOX	24V FLUORESCENT						
R 33	13.1	12V	562092	FR JCT BOX	BLOWER CUT-IN RLY						
R 34	13.1	24V	561707	RJB A/C JCT PANEL	A/C LOGIC PANEL						
R 35	13.1	24V	561707	RJB A/C JCT PANEL	WATER PUMP						
R 36	13.1	24V	561707	RJB A/C JCT PANEL	A/C COMPRESSOR CLUTCH						
R 37	10	24V	561707	FR JCT BOX	KNEELING LT						
R 39	13.2	24V	561005	BATT. CPT.	CONDENSER FAN MOTOR						
R 40	13.2	24V	561014	BATT. CPT.	CONDENSER SPEED CTR HI						
R 41	13.2	24V	561005	BATT. CPT.	CONDENSER SPEED CTR HI						
R 43	18	24V	561707	FR JCT BOX	KNEELING SYSTEM						
R 44	18	24V	561707	FR JCT BOX	KNEELING SYSTEM						
R 47	23	24V	561707	GALLEY COMPT	GALLEY-LIQUID CONTAINERS						
R 48	23	24V	561707	GALLEY COMPT	COFFEE MAKER						
R 49	21	24V	561707	FR JCT BOX	ABS - SERVICE BRK RLY						
R 50	21	24V	561707	FR JCT BOX	ABS - VR2 RLY						
R 51	21	24V	561707	FR JCT BOX	ABS - WARNING RLY						
R 52	21	24V	561707	FR JCT BOX	ABS - VR1 RLY						
R 53	1.1	24V	561991	RR JCT BOX	ENGINE RUN (24) RR						
R 54	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY RR						
R 55	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY FR						
R 57	9.1	24V	561707	FR JCT BOX	DAY'S BLINKER						
R 59	9.3	12V	562092	RR JCT BOX	DOCKING LTS						
R 61	9.3	24V	561707	RR JCT BOX	STOP LTS-JACOB & RET. SIGNAL						
R 66	20.3	24V	561707	SS JCT PANEL	SOUND SYSTEM VIDEO						
R 67	20.1	24V	561707	SS JCT PANEL	SOUND SYSTEM RADIO						
R 68	20.1	24V	561991	SS JCT PANEL	SOUND SYSTEM AMPLIFIER						
R 78	1.1	12V	562092	FR JCT BOX	MASTER SWITCH						
R 79	23	24V	561707	GALLEY CPT.	GALLEY-REFRIGERATOR						

RELAYS NUMBER CODE

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION
R1	8	24V	RR JCT BOX	FAN CLUTCH WIRET SPEED 1
R2	8	24V	RR JCT BOX	FAN CLUTCH WIRET. SPEED 2
R3	8	24V	RR JCT BOX	TIME DELAY
R4	16	24V	RR JCT BOX	ENTRANCE DOOR SEDAN (LATCH)
R5	16	24V	RR JCT BOX	ENTRANCE DOOR SEDAN (PRESS. SW.)
R6	16	24V	RR JCT BOX	ENTRANCE DOOR SEDAN (LIGHT)
R7	16	24V	RR JCT BOX	ENTRANCE DOOR SEDAN (VALVE)
R8	16	24V	RR JCT BOX	ENGINE RUN (24) FR
R9	16	24V	RR JCT BOX	ENGINE RUN (12) FR & RR
R10	16	24V	RR JCT BOX	FIELD RELAY
R11	16	24V	RR JCT BOX	STARTING MOTOR
R12	16	24V	RR JCT BOX	CRUISE CTR. STOP SIGN.
R13	16	24V	RR JCT BOX	STOP LITS-PARKING BRAKE
R14	16	24V	RR JCT BOX	FAST IDLE
R15	16	24V	RR JCT BOX	12V IGNITION WT
R16	16	24V	RR JCT BOX	BACK-UP LITS
R17	16	24V	RR JCT BOX	12V IGNITION WT
R18	16	24V	RR JCT BOX	BACK-UP LITS
R19	16	24V	RR JCT BOX	12V IGNITION WT
R20	16	24V	RR JCT BOX	BACK-UP LITS
R21	16	24V	RR JCT BOX	12V IGNITION WT
R22	16	24V	RR JCT BOX	BACK-UP LITS
R23	16	24V	RR JCT BOX	12V IGNITION WT
R24	16	24V	RR JCT BOX	BACK-UP LITS
R25	16	24V	RR JCT BOX	12V IGNITION WT
R26	16	24V	RR JCT BOX	BACK-UP LITS
R27	16	24V	RR JCT BOX	12V IGNITION WT
R28	16	24V	RR JCT BOX	BACK-UP LITS
R29	16	24V	RR JCT BOX	12V IGNITION WT
R30	16	24V	RR JCT BOX	BACK-UP LITS
R31	16	24V	RR JCT BOX	12V IGNITION WT
R32	16	24V	RR JCT BOX	BACK-UP LITS
R33	16	24V	RR JCT BOX	12V IGNITION WT
R34	16	24V	RR JCT BOX	BACK-UP LITS
R35	16	24V	RR JCT BOX	12V IGNITION WT
R36	16	24V	RR JCT BOX	BACK-UP LITS
R37	16	24V	RR JCT BOX	12V IGNITION WT
R38	16	24V	RR JCT BOX	BACK-UP LITS
R39	16	24V	RR JCT BOX	12V IGNITION WT
R40	16	24V	RR JCT BOX	BACK-UP LITS
R41	16	24V	RR JCT BOX	12V IGNITION WT
R42	16	24V	RR JCT BOX	BACK-UP LITS
R43	16	24V	RR JCT BOX	12V IGNITION WT
R44	16	24V	RR JCT BOX	BACK-UP LITS
R45	16	24V	RR JCT BOX	12V IGNITION WT
R46	16	24V	RR JCT BOX	BACK-UP LITS
R47	16	24V	RR JCT BOX	12V IGNITION WT
R48	16	24V	RR JCT BOX	BACK-UP LITS
R49	16	24V	RR JCT BOX	12V IGNITION WT
R50	16	24V	RR JCT BOX	BACK-UP LITS
R51	16	24V	RR JCT BOX	12V IGNITION WT
R52	16	24V	RR JCT BOX	BACK-UP LITS
R53	16	24V	RR JCT BOX	12V IGNITION WT
R54	16	24V	RR JCT BOX	BACK-UP LITS
R55	16	24V	RR JCT BOX	12V IGNITION WT
R56	16	24V	RR JCT BOX	BACK-UP LITS
R57	16	24V	RR JCT BOX	12V IGNITION WT
R58	16	24V	RR JCT BOX	BACK-UP LITS
R59	16	24V	RR JCT BOX	12V IGNITION WT
R60	16	24V	RR JCT BOX	BACK-UP LITS
R61	16	24V	RR JCT BOX	12V IGNITION WT
R62	16	24V	RR JCT BOX	BACK-UP LITS
R63	16	24V	RR JCT BOX	12V IGNITION WT
R64	16	24V	RR JCT BOX	BACK-UP LITS
R65	16	24V	RR JCT BOX	12V IGNITION WT
R66	16	24V	RR JCT BOX	BACK-UP LITS
R67	16	24V	RR JCT BOX	12V IGNITION WT
R68	16	24V	RR JCT BOX	BACK-UP LITS
R69	16	24V	RR JCT BOX	12V IGNITION WT
R70	16	24V	RR JCT BOX	BACK-UP LITS
R71	16	24V	RR JCT BOX	12V IGNITION WT
R72	16	24V	RR JCT BOX	BACK-UP LITS
R73	16	24V	RR JCT BOX	12V IGNITION WT
R74	16	24V	RR JCT BOX	BACK-UP LITS
R75	16	24V	RR JCT BOX	12V IGNITION WT
R76	16	24V	RR JCT BOX	BACK-UP LITS
R77	16	24V	RR JCT BOX	12V IGNITION WT
R78	16	24V	RR JCT BOX	BACK-UP LITS
R79	16	24V	RR JCT BOX	12V IGNITION WT
R80	16	24V	RR JCT BOX	BACK-UP LITS

PREVOST

WIRING DIAGRAM

NO: D060882

PAGE: 1

REVISION 03

RELAYS NUMBER CODE

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION	No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R F1	8	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 1	R 82	19	24V	561707	FR JCT BOX	RETARDER WT
R F2	8	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 2	R 84	8	24V	561707	RR JCT BOX	FAN CLUTCH-FIRST SPEED
R F3	8	24V	560772	RR JCT BOX	TIME DELAY	R 85	8	24V	561707	RR JCT BOX	FAN CLUTCH-SECOND SPEED
R LA	16	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (LATCH)	R 87	19	24V	561707	RR JCT BOX	ENGINE BRAKE REQUEST WT
R LO	16	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (PRESS. SW.)	R 89	22	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R LT	16	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (LIGHT)	R 90	22	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R LV	16	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (VALVE)	R 91	22	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 1	1.1	24V	561991	FR JCT BOX	ENGINE RUN (24) FR	R 92	22	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 2	2	24V	561991	BATT. CPT.	ENGINE RUN (12) FR & RR	R 93	26	24V	561707	RR JCT BOX	PRE-HEAT WATER HEATER (WEBASTO)
R 3	4	24V	561707	BATT. CPT.	FIELD RELAY	R 94	25	24V	561707	RR JCT BOX	WCL - SYSTEM
R 4	4	24V	561005	BATT. CPT.	STARTING MOTOR	R 95	25	24V	561707	RR JCT BOX	WCL - MAGNETIC SW. SIGN.
R 5	5	24V	561707	FR JCT BOX	CRUISE CTR. STOP SIGN.	R 96	25	24V	561707	RR JCT BOX	WCL - DOOR AJAR ALARM
R 6	9.3	24V	561707	RR JCT BOX	STOP LTS-PARKING BRAKE	R 97	25	24V	561707	RR JCT BOX	WCL - DOOR AJAR PARK. BRAKE
R 7	5	24V	561707	FR JCT BOX	FAST IDLE	R 98	25	12V	561538	RR JCT BOX	WCL -
R 8	6	24V	561707	RR JCT BOX	12V IGNITION WT	R 99	8	24V	561707	RR JCT BOX	RADIATOR FAN CLUTCH
R 9	9.3	24V	561707	RR JCT BOX	BACK-UP LTS	R 100	4	12V	561538	RR JCT BOX	GENERATOR SIGNAL
R 11	5	24V	561707	RR JCT BOX	12V IGNITION DDEC3	R 101	13.1	24V	561707	FR JCT BOX	DAMPER GAZ CYLINDER
R 12	7	12V	562092	FR JCT BOX	ELECTRICAL HORNS	R 102	13.1	24V	561707	RR JCT BOX	COMPRESSEUR CLUTCH CUT-OUT BELOW 40 F
R 13	9.3	24V	561707	FR JCT BOX	FOG LTS	R 2010	26.2	24V	561230	WEBASTO PRE-HEAT	WEBASTO
R 14	9.1	24V	561707	FR JCT BOX	BLINKER	V IMN	6	12V	562092	RR JCT BOX	VIM WORLD TR.-NEUTRAL SIGNAL
R 15	9.1	24V	561707	FR JCT BOX	FR MARKER LTS	V IMR	6	12V	562092	RR JCT BOX	VIM WORLD TR.-B/U SIGNAL
R 16	9.1	24V	561707	FR JCT BOX	IDENT. & CLEARANCE LTS	V IM1	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 1
R 17	9.1	24V	561707	RR JCT BOX	TAIL.LICENCE,MARKER-RR LTS	V IM2	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 2 ENG. BRK DISABLE
R 18	9.1	24V	561707	FR JCT BOX	D R L-PARK BRK CUT-IN	V IM3	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 3 SPD SW. 5MPH NO NC
R 19	9.1	24V	561707	FR JCT BOX	HEADLAMPS (HI)	V IM4	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 4 RETARD. ON SIGNAL
R 20	9.1	24V	561707	FR JCT BOX	HEADLAMPS (LO)						
R 21	9.2	24V	561707	FR JCT BOX	L.H. DIRECTIONNAL LT						
R 23	9.2	24V	561707	FR JCT BOX	R.H. DIRECTIONNAL LT						
R 24	9.2	24V	561707	FR JCT BOX	R.H. CORNERING LT						
R 25	9.2	24V	561707	FR JCT BOX	L.H. CORNERING LT						
R 26	9.3	24V	561707	RR JCT BOX	STOP LTS						
R 27	11.2	24V	561707	RR JCT BOX	aisle & EMERG.EXIT - LTS						
R 28	11.2	24V	561707	FR JCT BOX	DASH LTS RHEOSTAT						
R 29	11.3	24V	561707	RR JCT BOX	READING LTS R.H.						
R 30	11.3	24V	561707	RR JCT BOX	READING LTS L.H.						
R 31	11.3	24V	561707	RR JCT BOX	GENERAL LTS						
R 32	11.4	24V	561707	RR JCT BOX	24V FLUORESCENT						
R 33	13.1	12V	562092	FR JCT BOX	BLOWER CUT-IN RLY						
R 34	13.1	24V	561707	RJB A/C JCT PANEL	A/C LOGIC PANEL						
R 35	13.1	24V	561707	RJB A/C JCT PANEL	WATER PUMP						
R 36	13.1	24V	561707	RJB A/C JCT PANEL	A/C COMPRESSOR CLUTCH						
R 37	10	24V	561707	FR JCT BOX	KNEELING LT						
R 39	13.2	24V	561005	BATT. CPT.	CONDENSER FAN MOTOR						
R 40	13.2	24V	561014	BATT. CPT.	CONDENSER SPEED CTR HI						
R 41	13.2	24V	561005	BATT. CPT.	CONDENSER SPEED CTR HI						
R 43	18	24V	561707	FR JCT BOX	KNEELING SYSTEM						
R 44	18	24V	561707	FR JCT BOX	KNEELING SYSTEM						
R 47	23	24V	561707	GALLEY COMPT	GALLEY-LIQUID CONTAINERS						
R 48	23	24V	561707	GALLEY COMPT	COFFEE MAKER						
R 49	21	24V	561707	FR JCT BOX	ABS - SERVICE BRK RLY						
R 50	21	24V	561707	FR JCT BOX	ABS - VR2 RLY						
R 51	21	24V	561707	FR JCT BOX	ABS - WARNING RLY						
R 52	21	24V	561707	FR JCT BOX	ABS - VR1 RLY						
R 53	1.1	24V	561991	RR JCT BOX	ENGINE RUN (24) RR						
R 54	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY RR						
R 55	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY FR						
R 57	9.1	24V	561707	FR JCT BOX	DAY'S BLINKER						
R 59	9.3	12V	562092	RR JCT BOX	DOCKING LTS						
R 61	9.3	24V	561707	RR JCT BOX	STOP LTS-JACOB & RET. SIGNAL						
R 66	20.3	24V	561707	SS JCT PANEL	SOUND SYSTEM VIDEO						
R 67	20.1	24V	561707	SS JCT PANEL	SOUND SYSTEM RADIO						
R 68	20.1	24V	561991	SS JCT PANEL	SOUND SYSTEM AMPLIFIER						
R 78	1.1	12V	562092	FR JCT BOX	MASTER SWITCH						
R 79	23	24V	561707	GALLEY CPT.	GALLEY-REFRIGERATOR						
R 80	11.1	24V	561707	RR JCT BOX	ENGINE COMPARTMENT LTS						

RESISTORS NUMBER CODE

No.	PAGE	OHM(S)	#PREV.	LOCATION	FUNCTION
RS 1	5	11 K	561898	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 2	5	3.6 K	561897	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 3	9.3	1 (2)	561537	FR JCT BOX	FOG LT - RH
RS 4	9.3	1 (2)	561537	FR JCT BOX	FOG LT - LH
RS 5	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - LH
RS 7	9.3	.82 (2)	060806	RR JCT BOX	PARKING BRAKE STOP LTS
RS 8	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - RH
RS 11	22	12	561191	FR TOP	DEFROSTER SPEED
RS 12	22	12	561191	FR TOP	DEFROSTER SPEED
RS 13	17	80 (2)	562108	FR TOP	FR DESTINATION SIGN
RS 9	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - RH
RS 10	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - LH
RS 17	7	220	562498	FR JCT BOX	FIRE ALARM
RS 18	8	75 K	064208	RR JCT BOX	FAN CLUTCH W/RETARDER
RS 20	15	1 K	562470	RR JCT BOX	WORLD TR. SPEED TO DDEC III

WIRING DIAGRAM KEYS

24-858-16
GAUGE
CIRCUIT NUMBER
CIRCUIT VOLTAGE

WIRE CROSSING

WIRE SOLDERING
JOINT

SHIELDED WIRES

TWISTED WIRES

STUD TERMINAL

JUNCTION BLOCK

DUMMY

FROM GROUND STUD
GROUND SECTION

CHASSIS GROUND

ACCESSORY
CHASSIS GROUND

C23 } CONNECTOR
CODE NUMBER
PIN TERMINAL
CAVITY NUMBER
SOCKET TERMINAL

ILLUMINATING LAMP

FLUORESCENT LAMP

D3 } CODE NUMBER
ANODE } DIODE/RECTIFIER
CATHODE

RS2 } CODE NUMBER
RESISTOR
4.3 KΩ } OHMS

CODE NUMBER } RELAY S.P.D.T.
R2 } SINGLE POLE, DOUBLE THROW
SUPPRESSOR DIODE
COIL<85 } COIL
N.O.<87<O } COM.
N.C.<87A<O }

CODE NUMBER } RELAY S.P.S.T.
R2 } SINGLE POLE, SINGLE THROW
SUPPRESSOR DIODE
COIL<85 } COIL
N.O.<87<O } COM.
N.C.<87A<O }

CODE NUMBER } RELAY S.P.D.T.
R2 } SINGLE POLE, DOUBLE THROW
COIL<85 } COIL
N.O.<87<O } COM.
N.C.<87A<O }

CODE NUMBER } RELAY-MAGNETIC
R2 } D.P.D.T.
COIL O } COIL
COM.O } N.O.
COM.O } N.C.
BAT.

CODE NUMBER } RELAY-MAGNETIC
R2 } S.P.S.T.
COIL O } COIL
COM.O } N.O.
BAT.

7.5 } AMPACITY
FUSE

CB23 } CIRCUIT BREAKER
CODE NUMBER
10A } AMPACITY

Q.N.O. } SWITCH S.P.D.T.
N.C. COM. } SINGLE POLE, DOUBLE THROW

PRESSURE SWITCH N.C.

PRESSURE SWITCH N.O.

SWITCH
MOMENTARY CONTACT

SWITCH
PUSH BUTTON

SWITCH
MECHANICAL LOCK

ELECTRIC MOTOR

110V EXTERIOR
PLUG RECEPTACLE

ELECTRIC HORN

THERMOSTAT

HEATER

SOLENOID VALVE

BATTERY

FR. JCT BOX - JUNCTION BLOCK


RR. JCT BOX - JUNCTION BLOCK

BAT. JCT PANEL - JUNCTION BLOCK


BLK BLACK
YEL YELLOW
RED RED
WH WHITE
GRY GREY
ORA ORANGE
BLU BLUE
GRN GREEN
BRN BROWN
PUR PURPLE
PK PINK

FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
F 1	6	10A	562407	RR. JCT. BOX	WORLD TRANSMISSION 12V BATTERY
F 2	6	10A	562407	RR. JCT. BOX	WORLD TRANSMISSION 12V IGNITION
F 3	7	20A	562605	FR. JCT. BOX	ELECTRICAL HORNS
F 4	7	5A	562259	FR. JCT. BOX	FIRE ALARM
F 5	8	10A	562407	RR. JCT. BOX	AIR DRYER
F 6	8	5A	562602	FR. JCT. BOX	ETHER COLD START & CRUISE DECEL SW.
F 7	8	5A	562602	FR. JCT. BOX	PARKING BRAKE PRESSURE SW.
F 8	9.2	10A	562407	FR. JCT. BOX	CORNERING LTS
F 9	9.3	15A	562604	RR. JCT. BOX	DOCKING LTS
F 10	9.3	15A	562604	FR. JCT. BOX	FOG LTS
F 11	11.1	5A	562259	FR. JCT. BOX	FRONT SERVICE CPT LTS
F 12	11.2	10A	562407	RR. JCT. BOX	aisle LTS
F 13	11.2	7.5A	562602	RR. JCT. BOX	EMERGENCY EXIT LTS
F 14	11.3	7.5A	562602	FR. JCT. BOX	DRIVER'S LTS
F 15	11.3	15A	562604	RR. JCT. BOX	READING LTS RH
F 16	11.3	15A	562604	RR. JCT. BOX	READING LTS LH
F 17	11.3	10A	562407	RR. JCT. BOX	GENERAL LTS
F 18	11.4	10A	562407	RR. JCT. BOX	24V FLUORESCENT RH
F 19	11.4	10A	562407	RR. JCT. BOX	24V FLUORESCENT LH
F 20	12	5A	562259	FR. JCT. BOX	HOSTESS & PASSENGER CHIME
F 21	12	10A	560061	RR. JCT. BOX	PRIME PUMP
F 22	14	10A	562407	FR. JCT. BOX	POWER 12V OUTLET
F 23	14	15A	562604	FR. JCT. BOX	DRIVER'S WINDOW LIFTER
F 24	14	10A	562407	FR. JCT. BOX	CIGAR LIGHTER
F 25	14	3A	562599	FR. JCT. BOX	SUN VISOR
F 26	15	5A	562259	FR. JCT. BOX	TACHOGRAPH HEAD & WATER HTR TIMER
F 27	23	5A	562259	RR. JCT. BOX	GALLEY LAMP
F 28	17	10A	562407	RR. JCT. BOX	LAVATORY PUMP
F 29	17	7.5A	562602	RR. JCT. BOX	LAVATORY LTS
F 31	17	5A	562602	FR. JCT. BOX	FRONT DESTINATION SIGN
F 32	11.3	5A	562259	FR. JCT. BOX	PASSENGER NO SMOKING LTS
F 33	18	5A	562259	FR. JCT. BOX	KNEELING SYSTEM
F 34	19	3A	562599	FR. JCT. BOX	LUGGAGE DOOR LOCK
F 39	22	10A	562407	FR. JCT. BOX	UPPER WINDSHIELD FAN DEFROST
F 40	22	20A	562605	FR. JCT. BOX	HEATED WINDSHIELD LH
F 41	22	20A	562605	FR. JCT. BOX	HEATED WINDSHIELD RH
F 46	24	7.5A	562602	FR. JCT. BOX	MIRROR ADJUST & HEATED 24V SPARTAN
F 47	24	7.5A	562407	FR. JCT. BOX	MIRROR ADJUST & HEATED 12V RAMCO
F 48	25	10A	562407	RR. JCT. BOX	WHEEL CHAIR LIFT POWER CONTROL
F 49	26	20A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER WEBASTO
F 50	26	20A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER
F 51	11.2	7.5A	562602	RR. JCT. BOX	HAR RACK CPT LTS
F 57	17	5A	562259	RR. JCT. BOX	LAVATORY FLUORESCENT
F 60	27	3A	560893	CABL. MONITOR	BACK-UP MONITOR (CLARION)
F 61	27	1A	560893	FR. JCT. BOX	INTERCOM
F 70	23	7.5A	562602	GALLEY PANEL	GALLEY RH CONTAINER
F 71	23	7.5A	562602	GALLEY PANEL	GALLEY LH CONTAINER
F 72	23	10A	562407	GALLEY PANEL	GALLEY REFRIGERATOR COMPRESSOR
F 73	23	35A	562608	GALLEY PANEL	GALLEY COFFEMAKER
F 74	23	7.5	560598	BAT. CPT.	GALLEY REFRIGERATOR

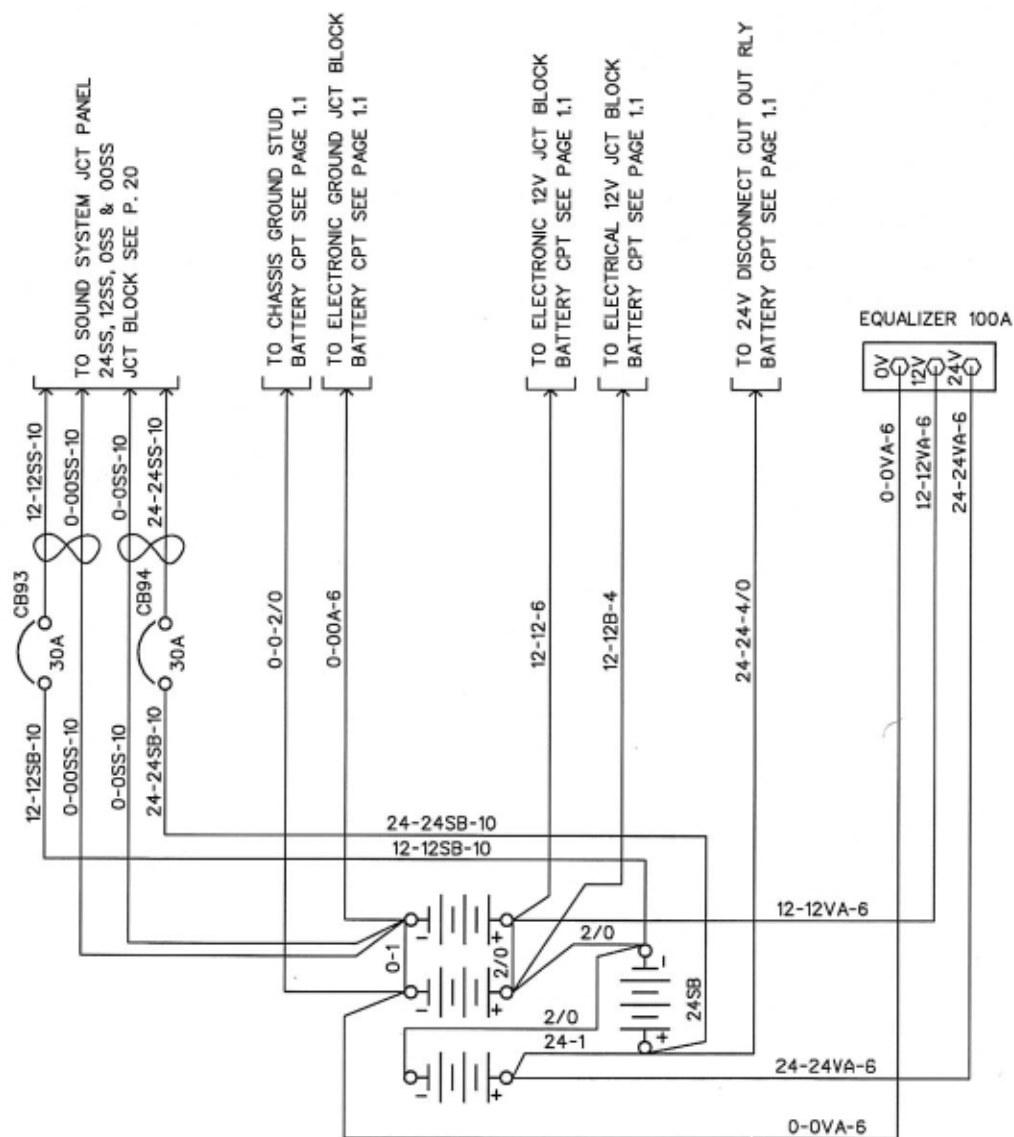



STANDARD BATTERIES

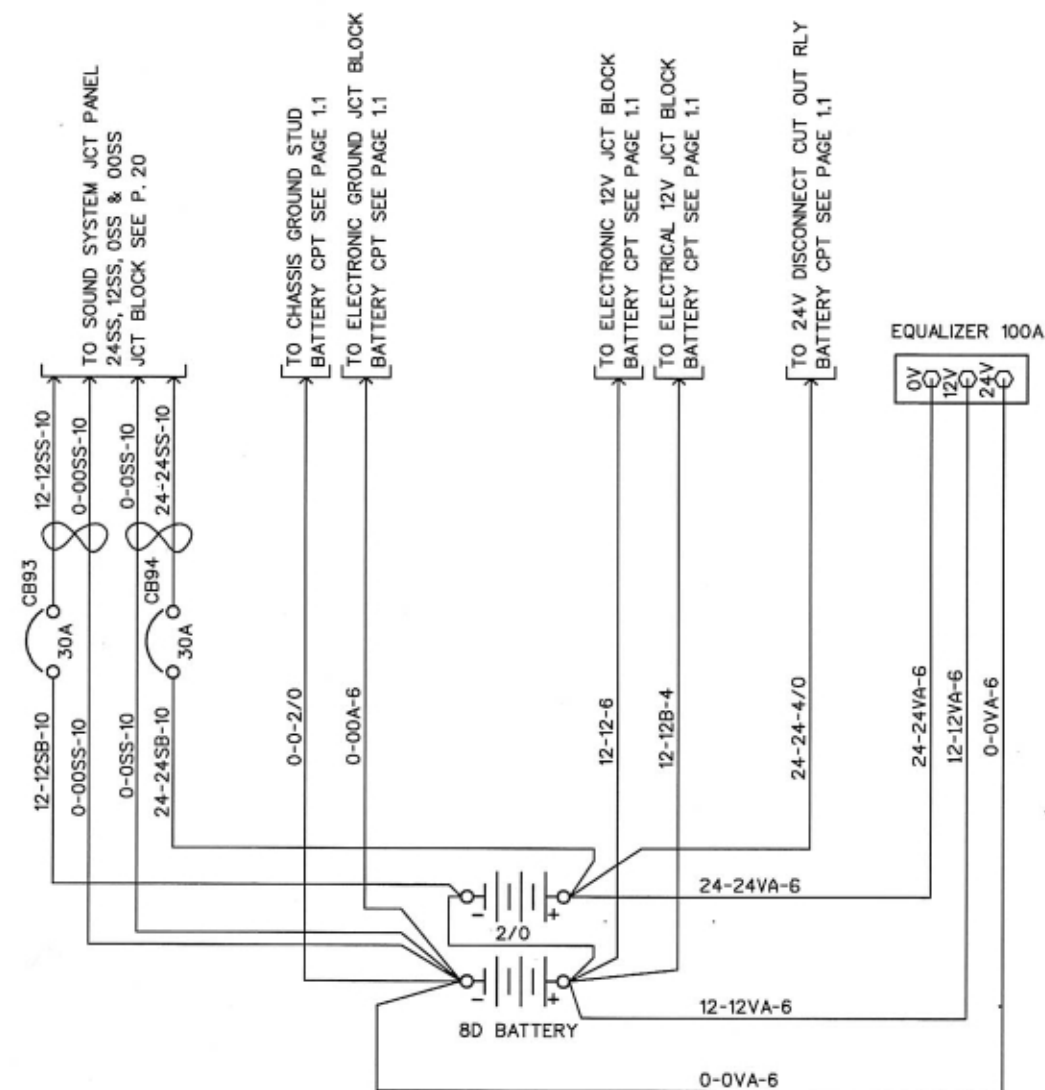



8D BATTERIES



 

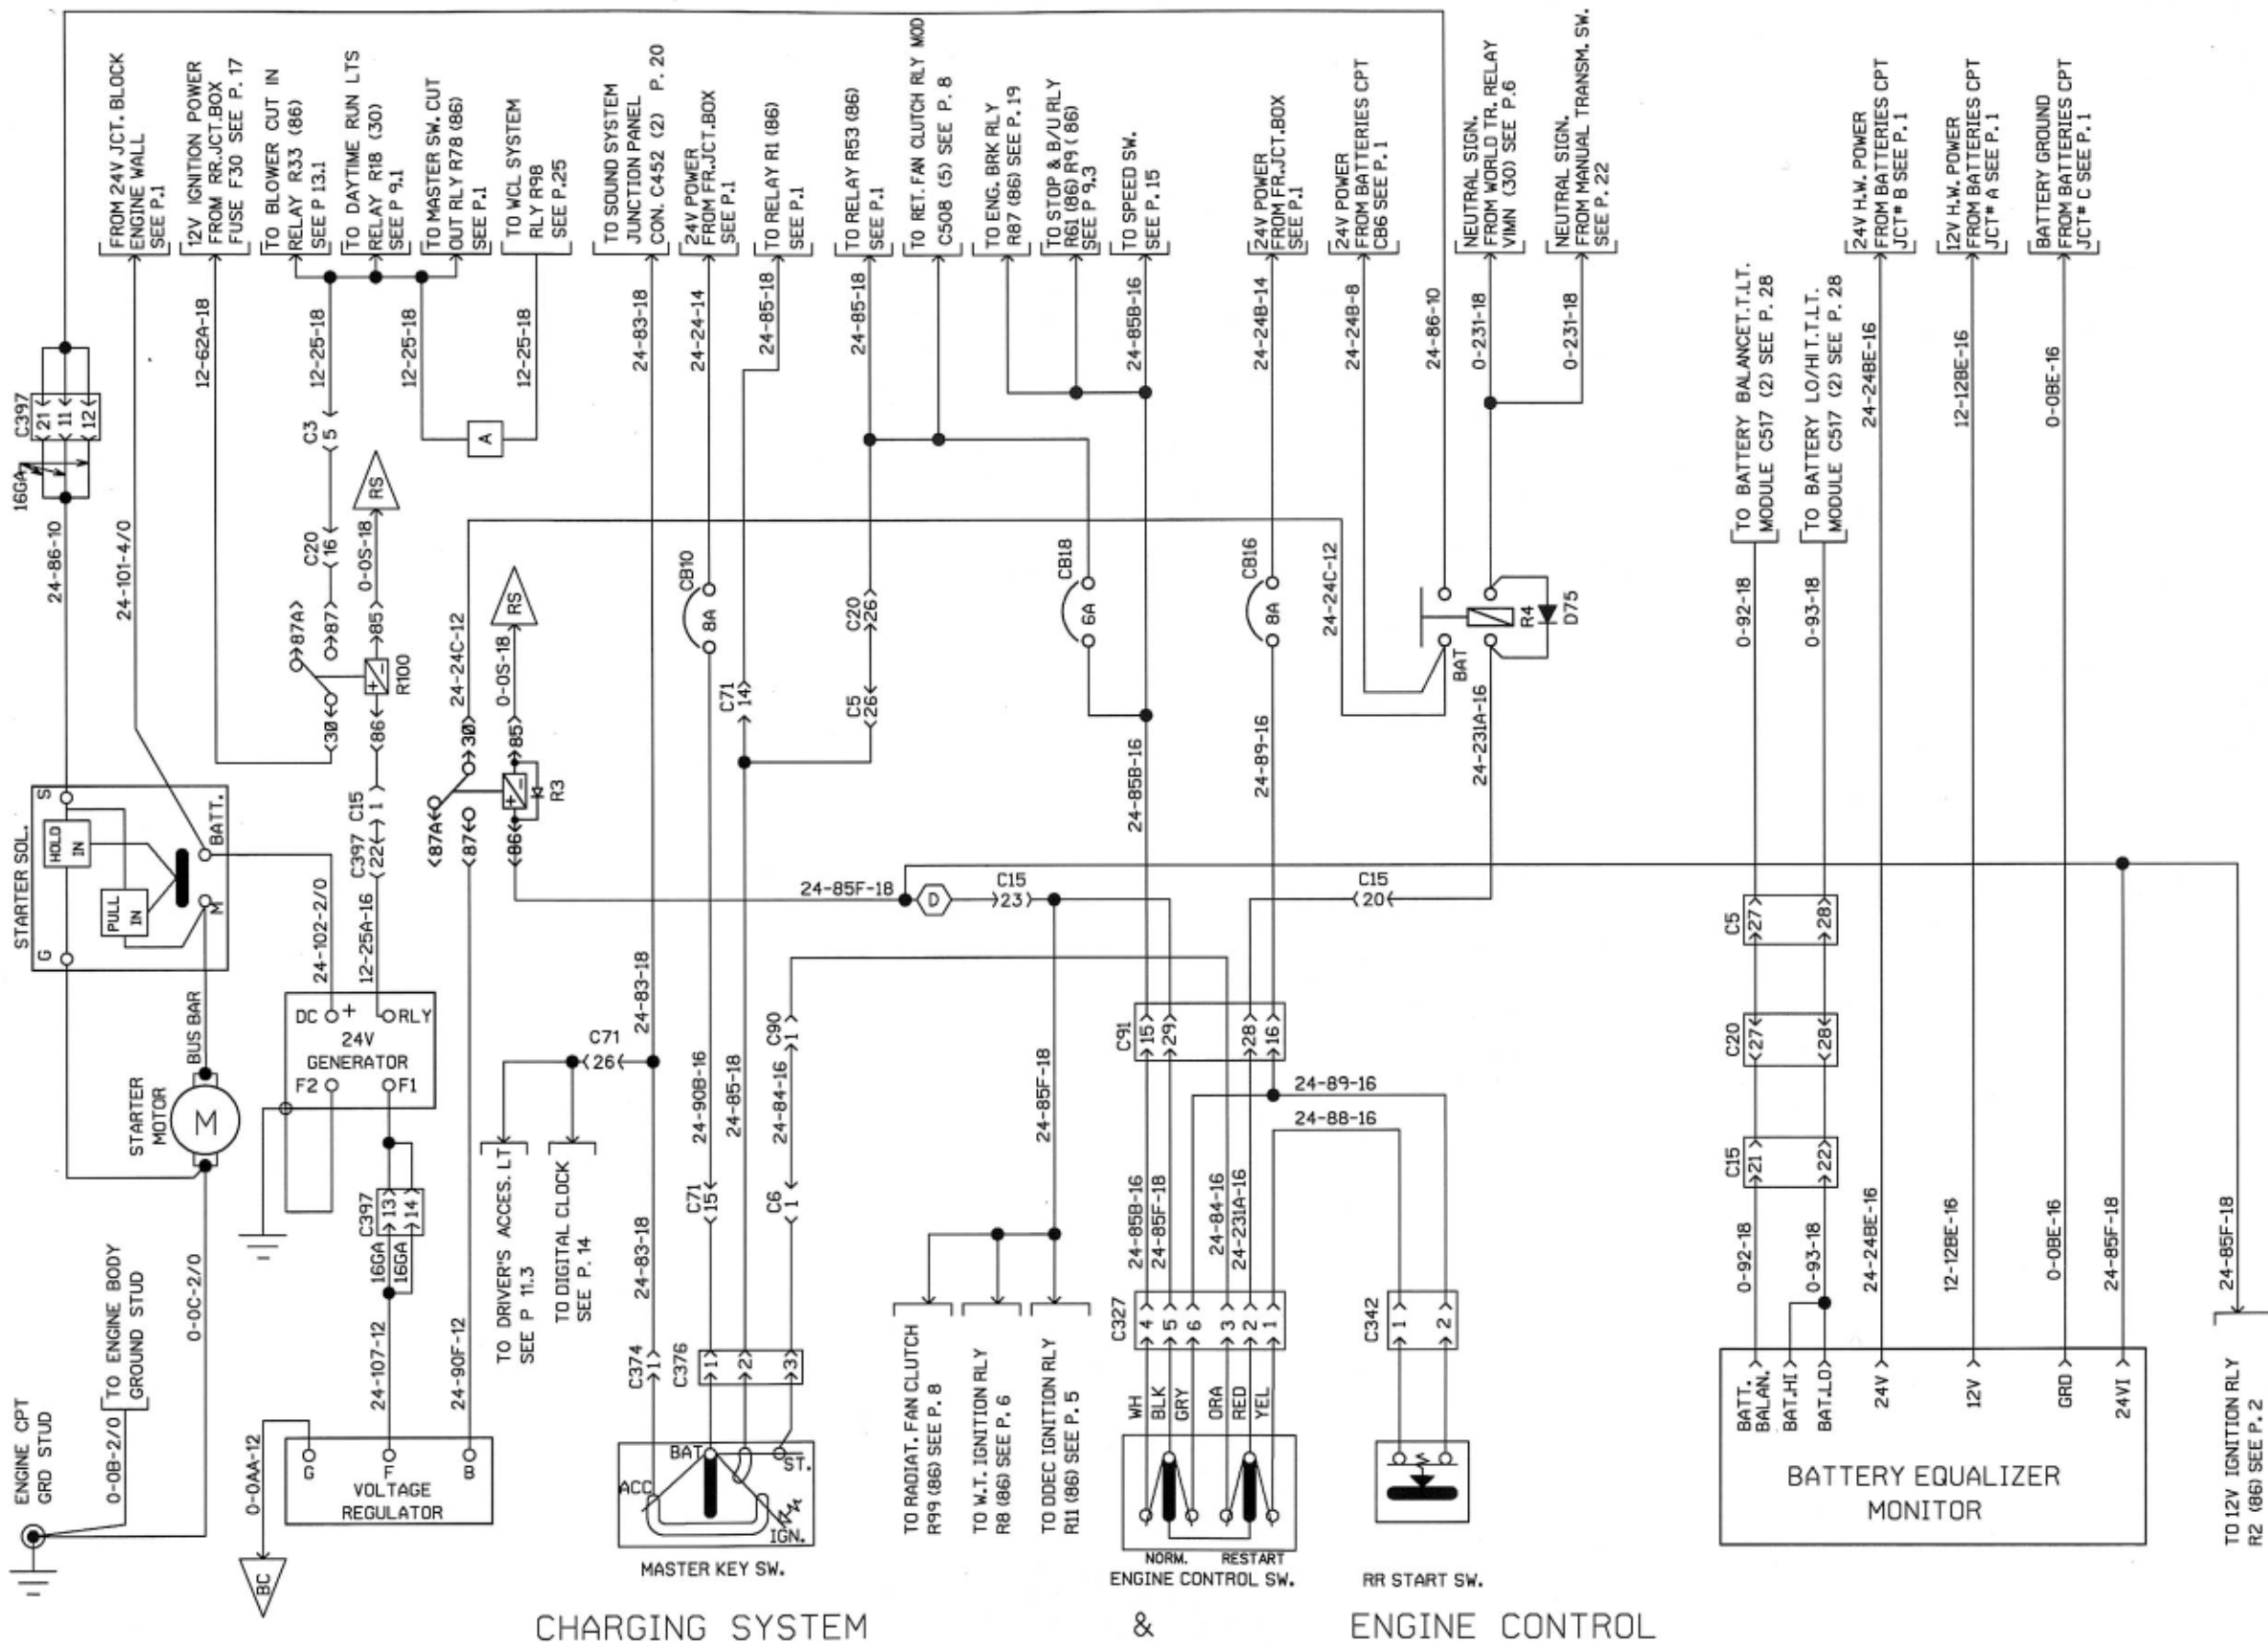

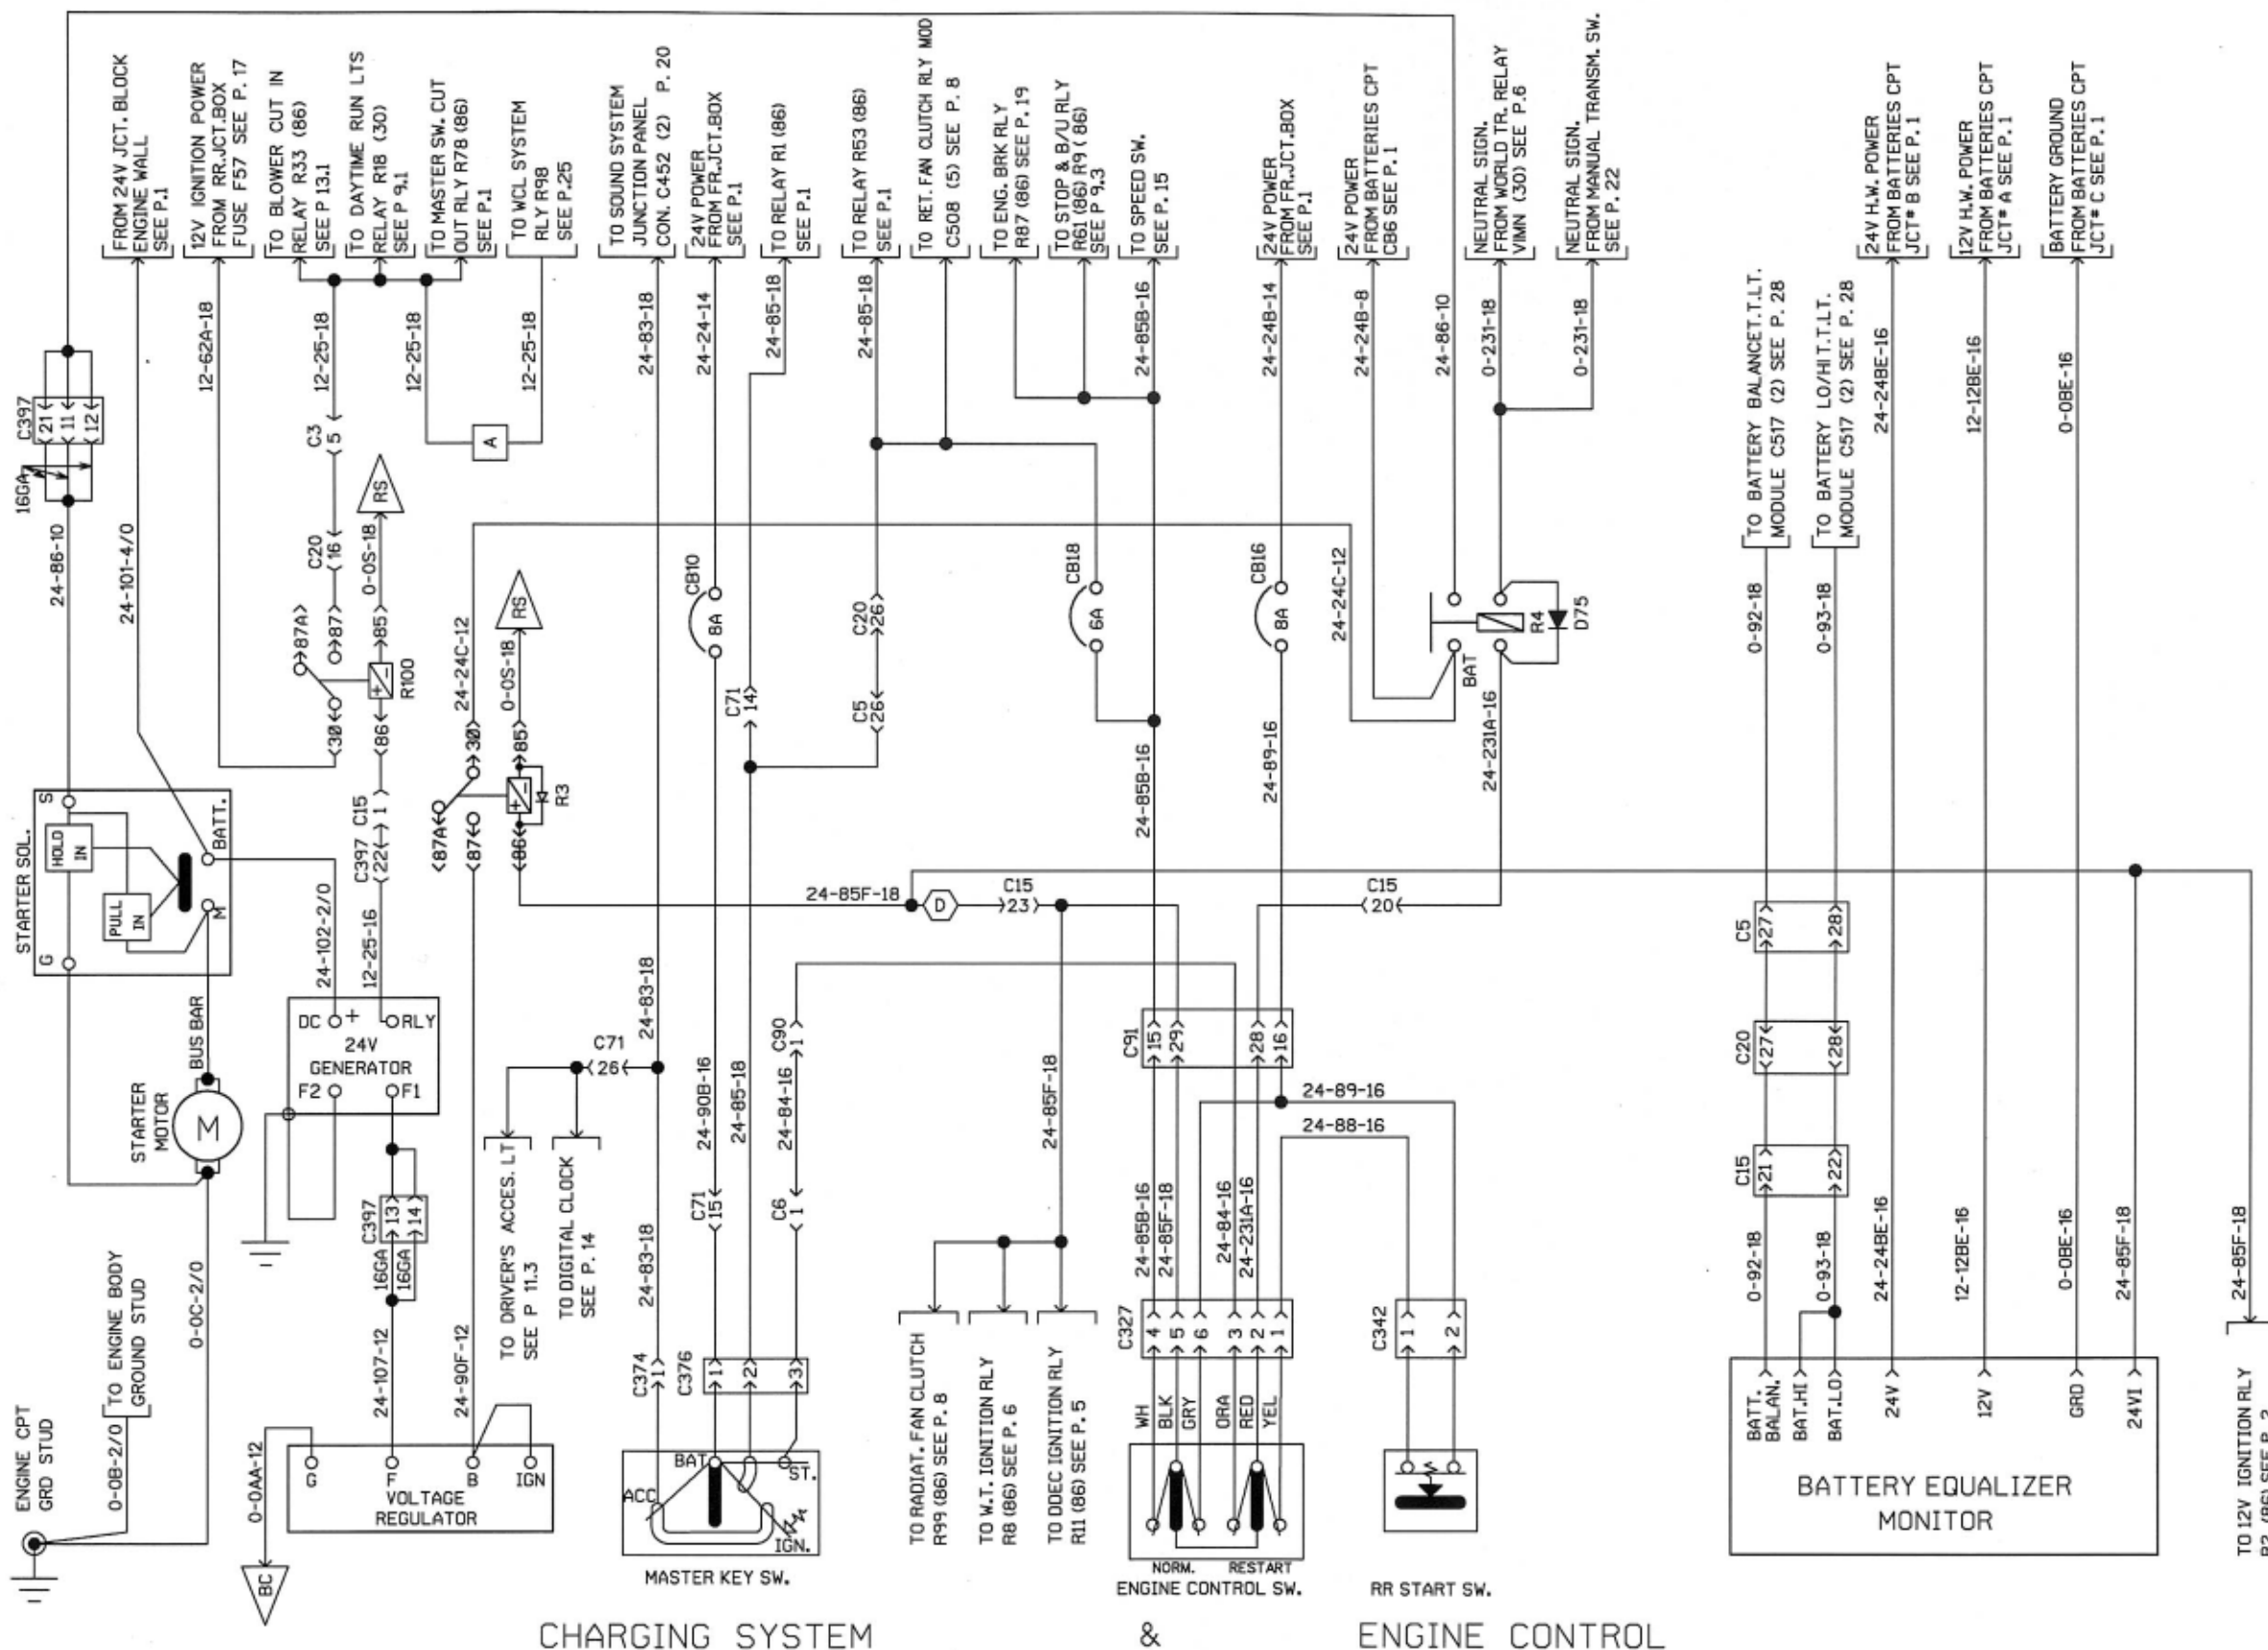

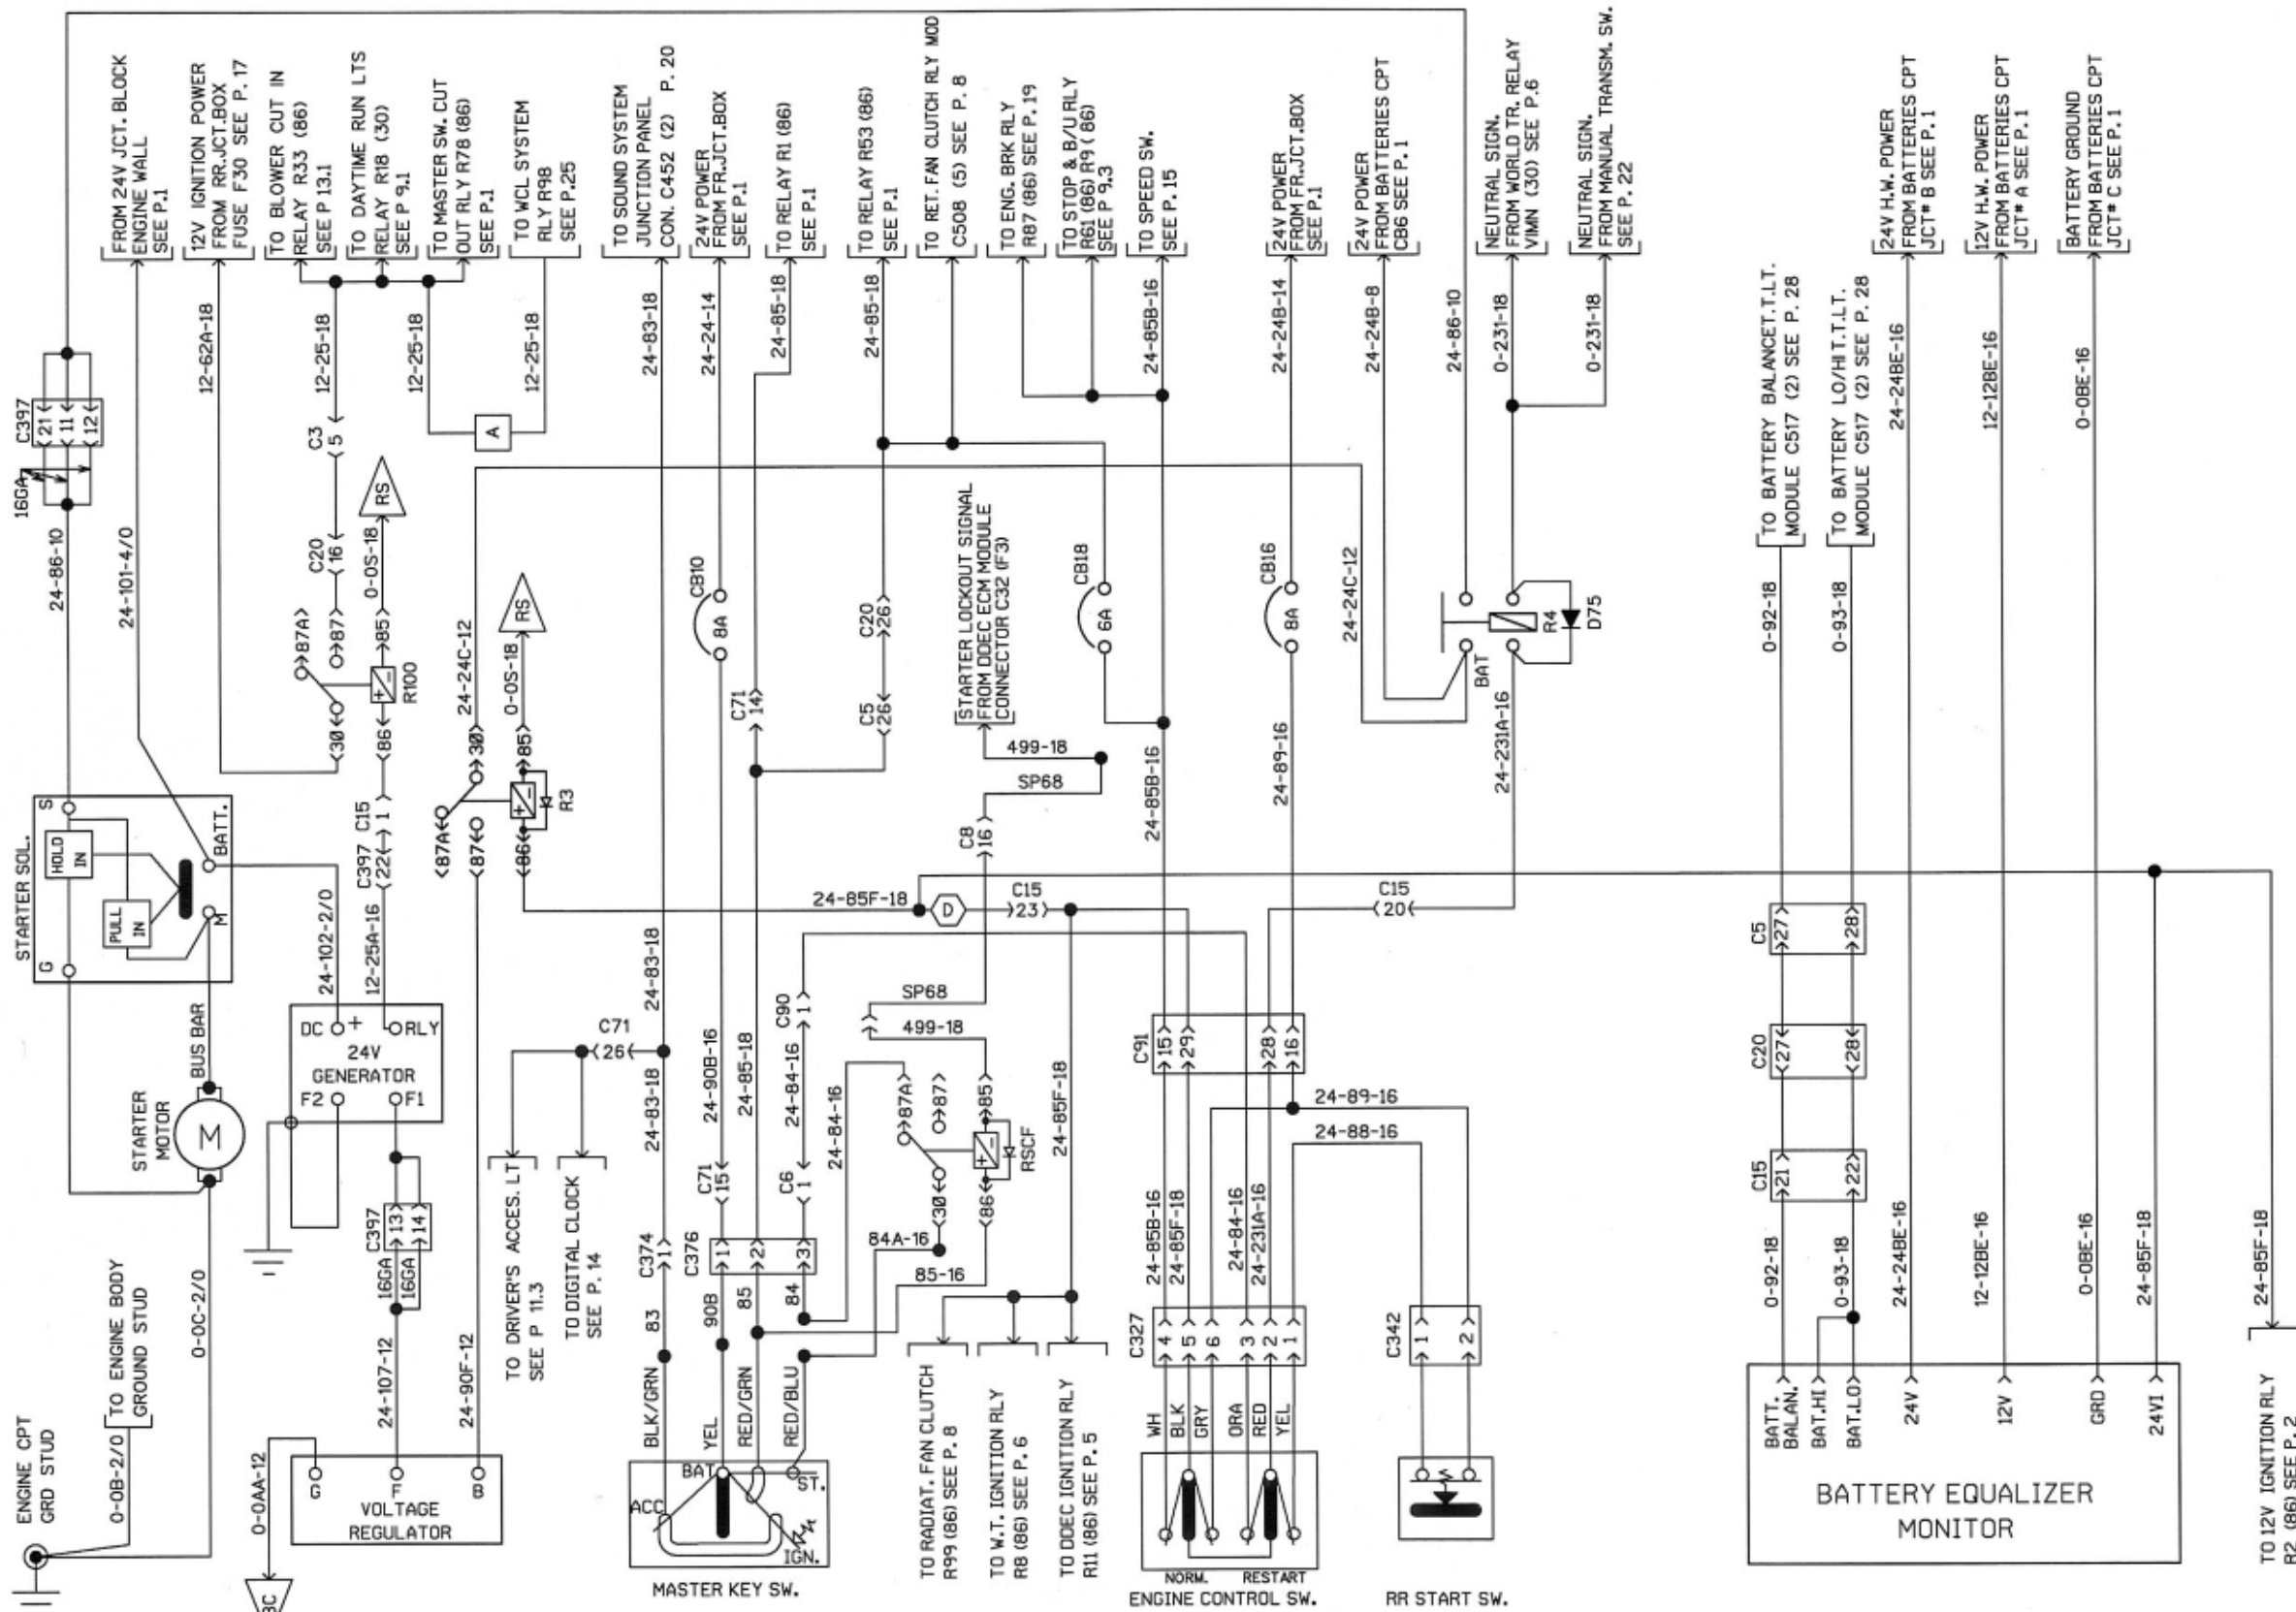

SPECIAL CHARGING SYSTEM & ENGINE CONTROL WITH FORD KEY




8


V2071,V2078


NO:


PAGE: 4sp4

   
REVISION 00

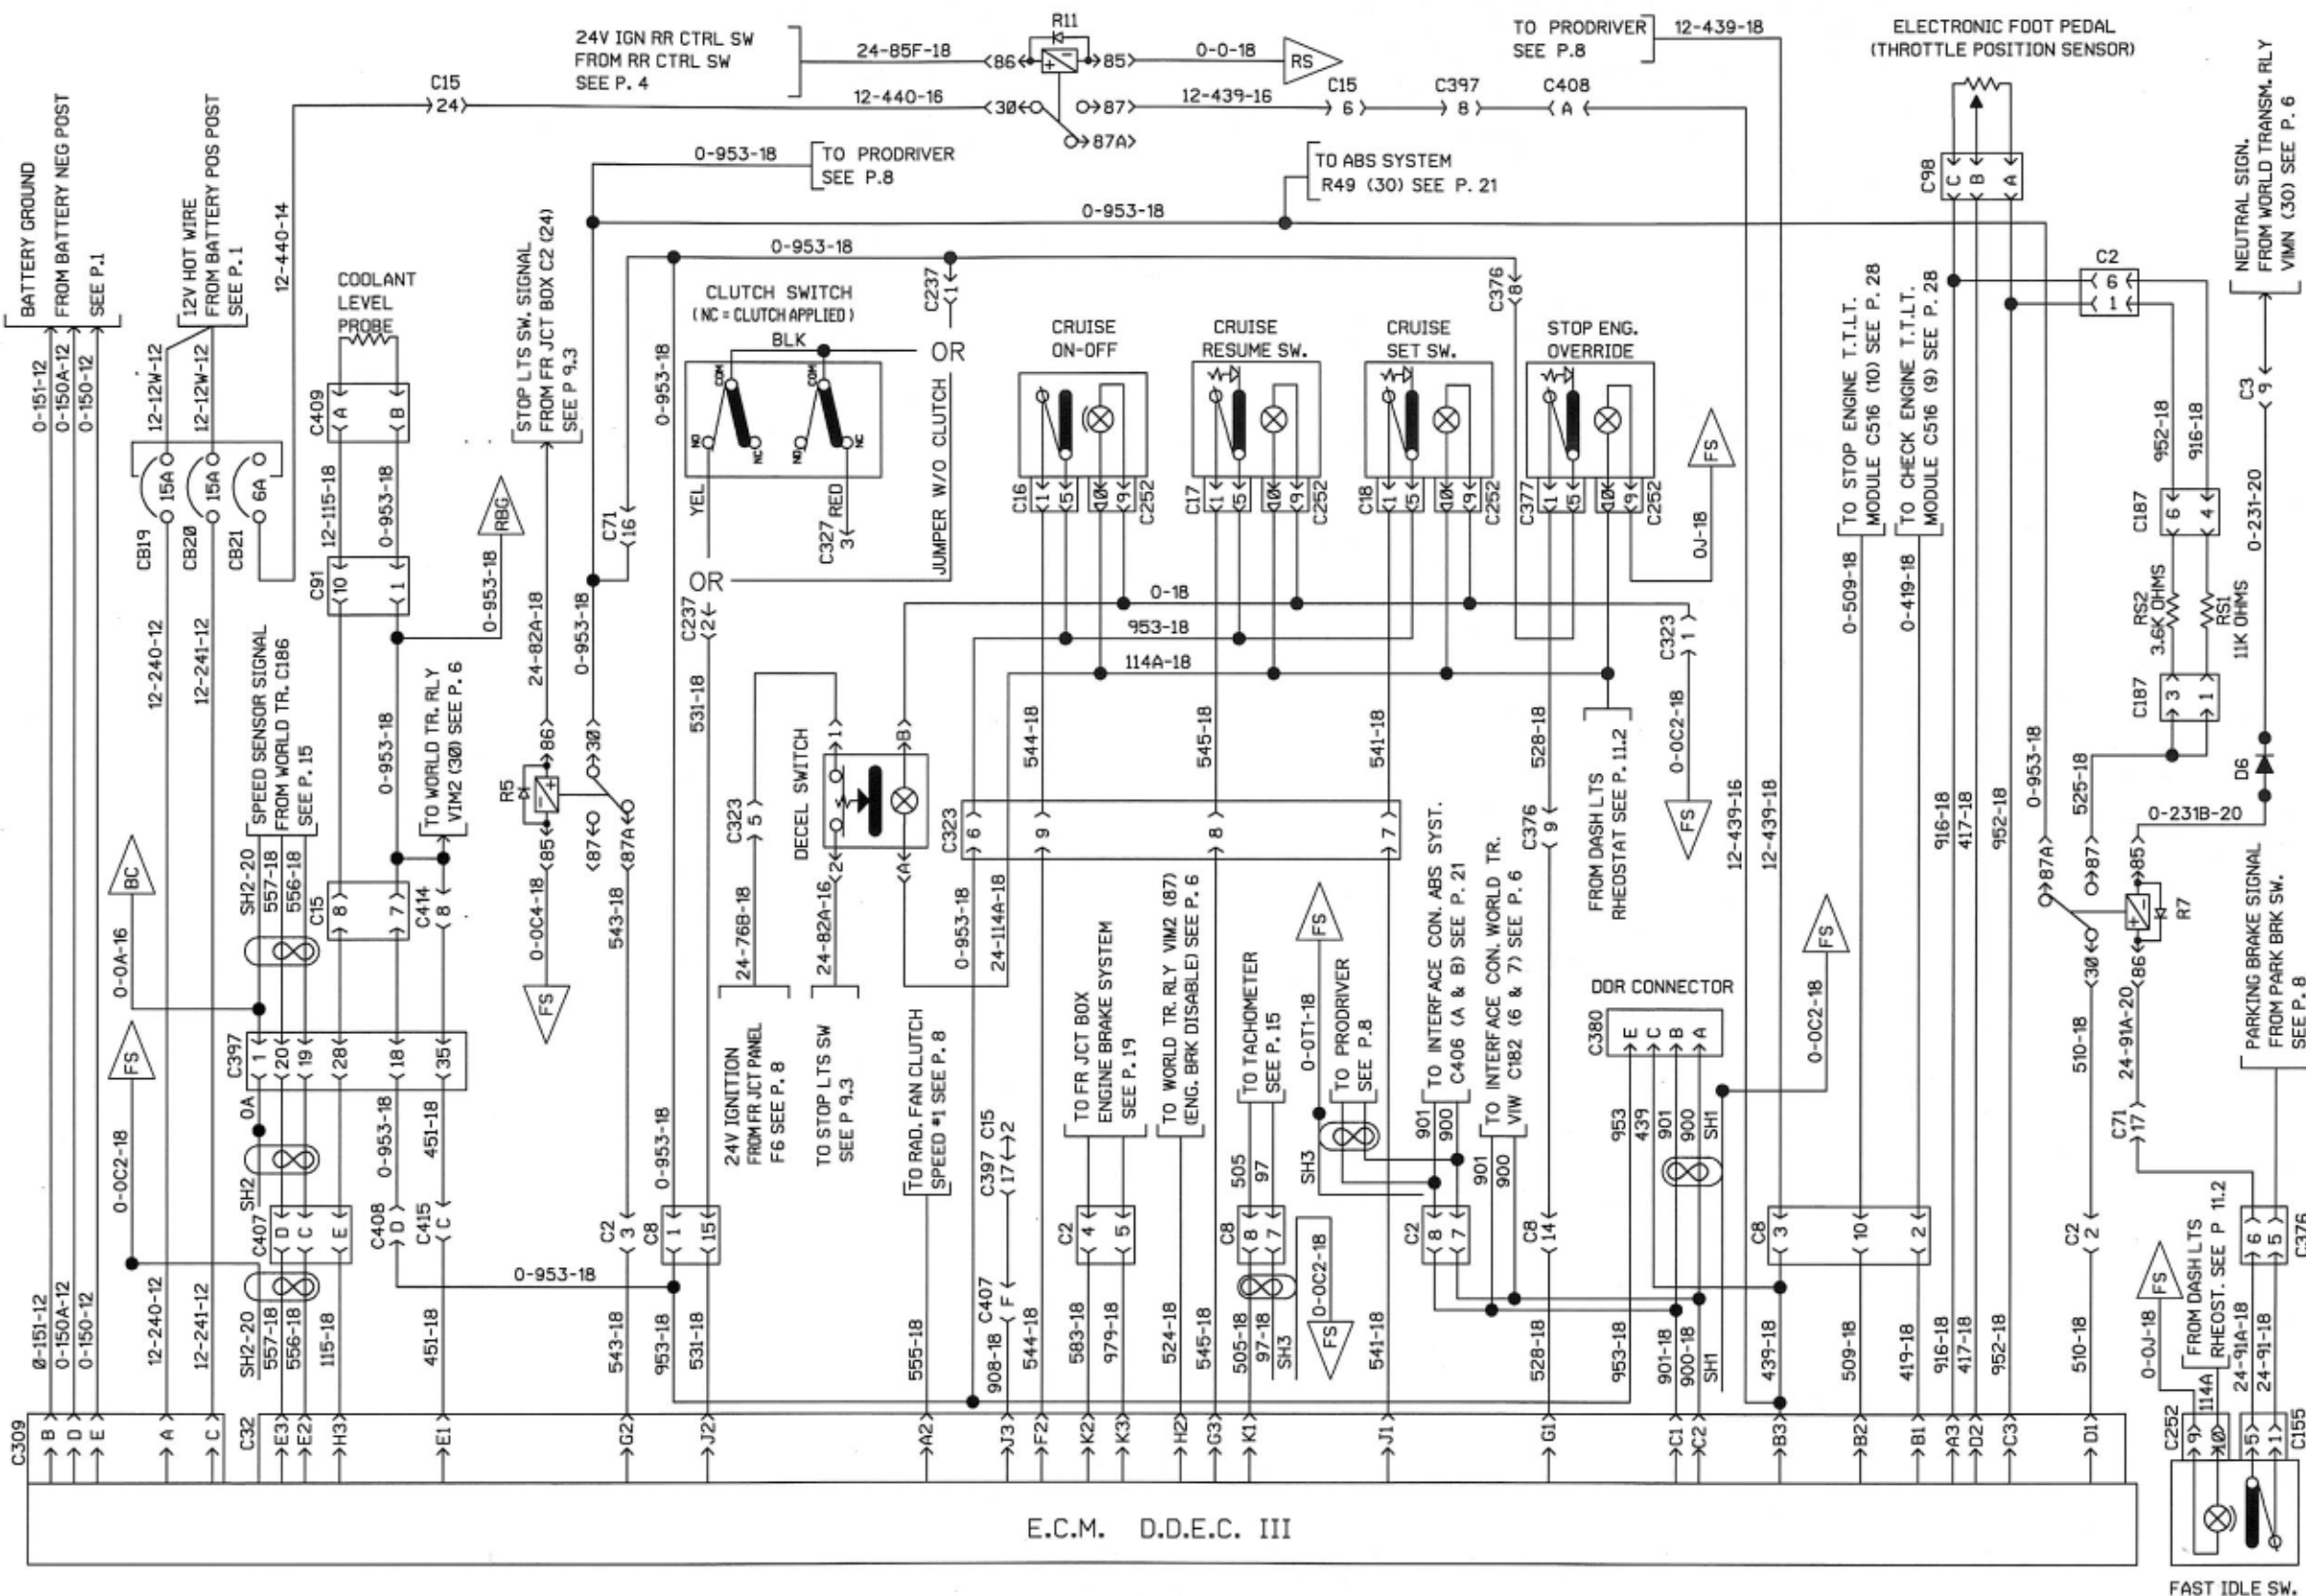









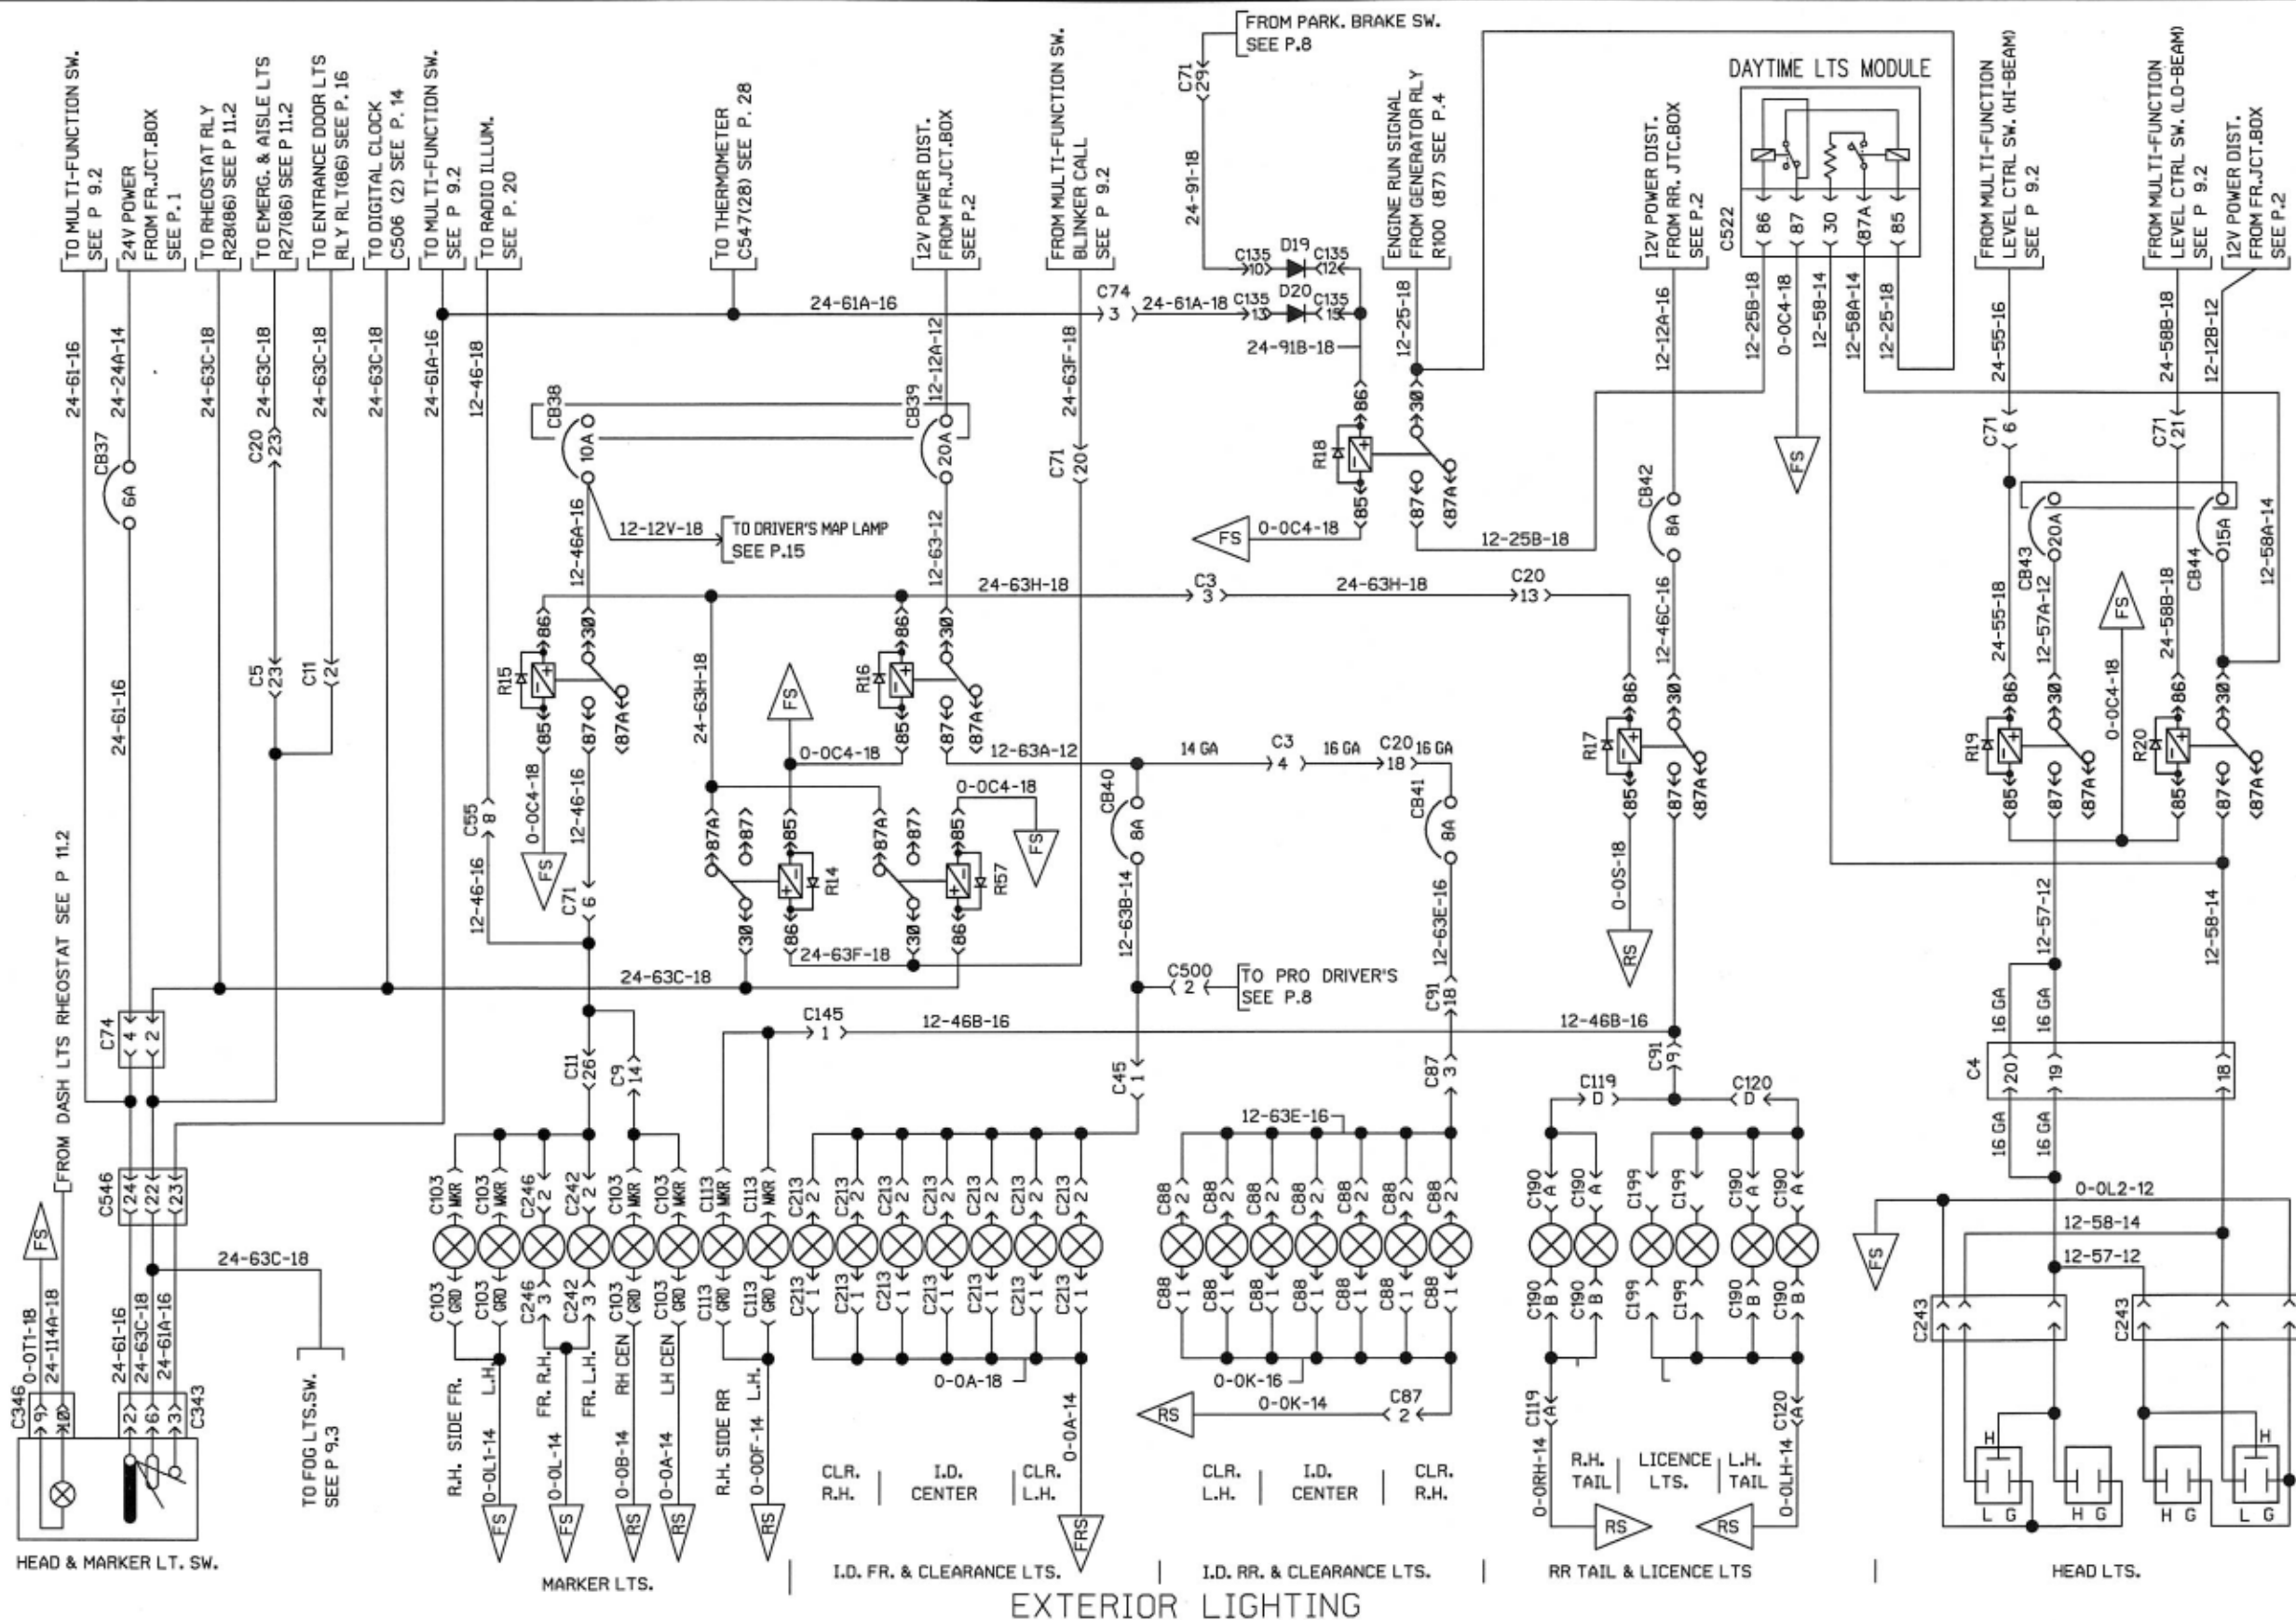

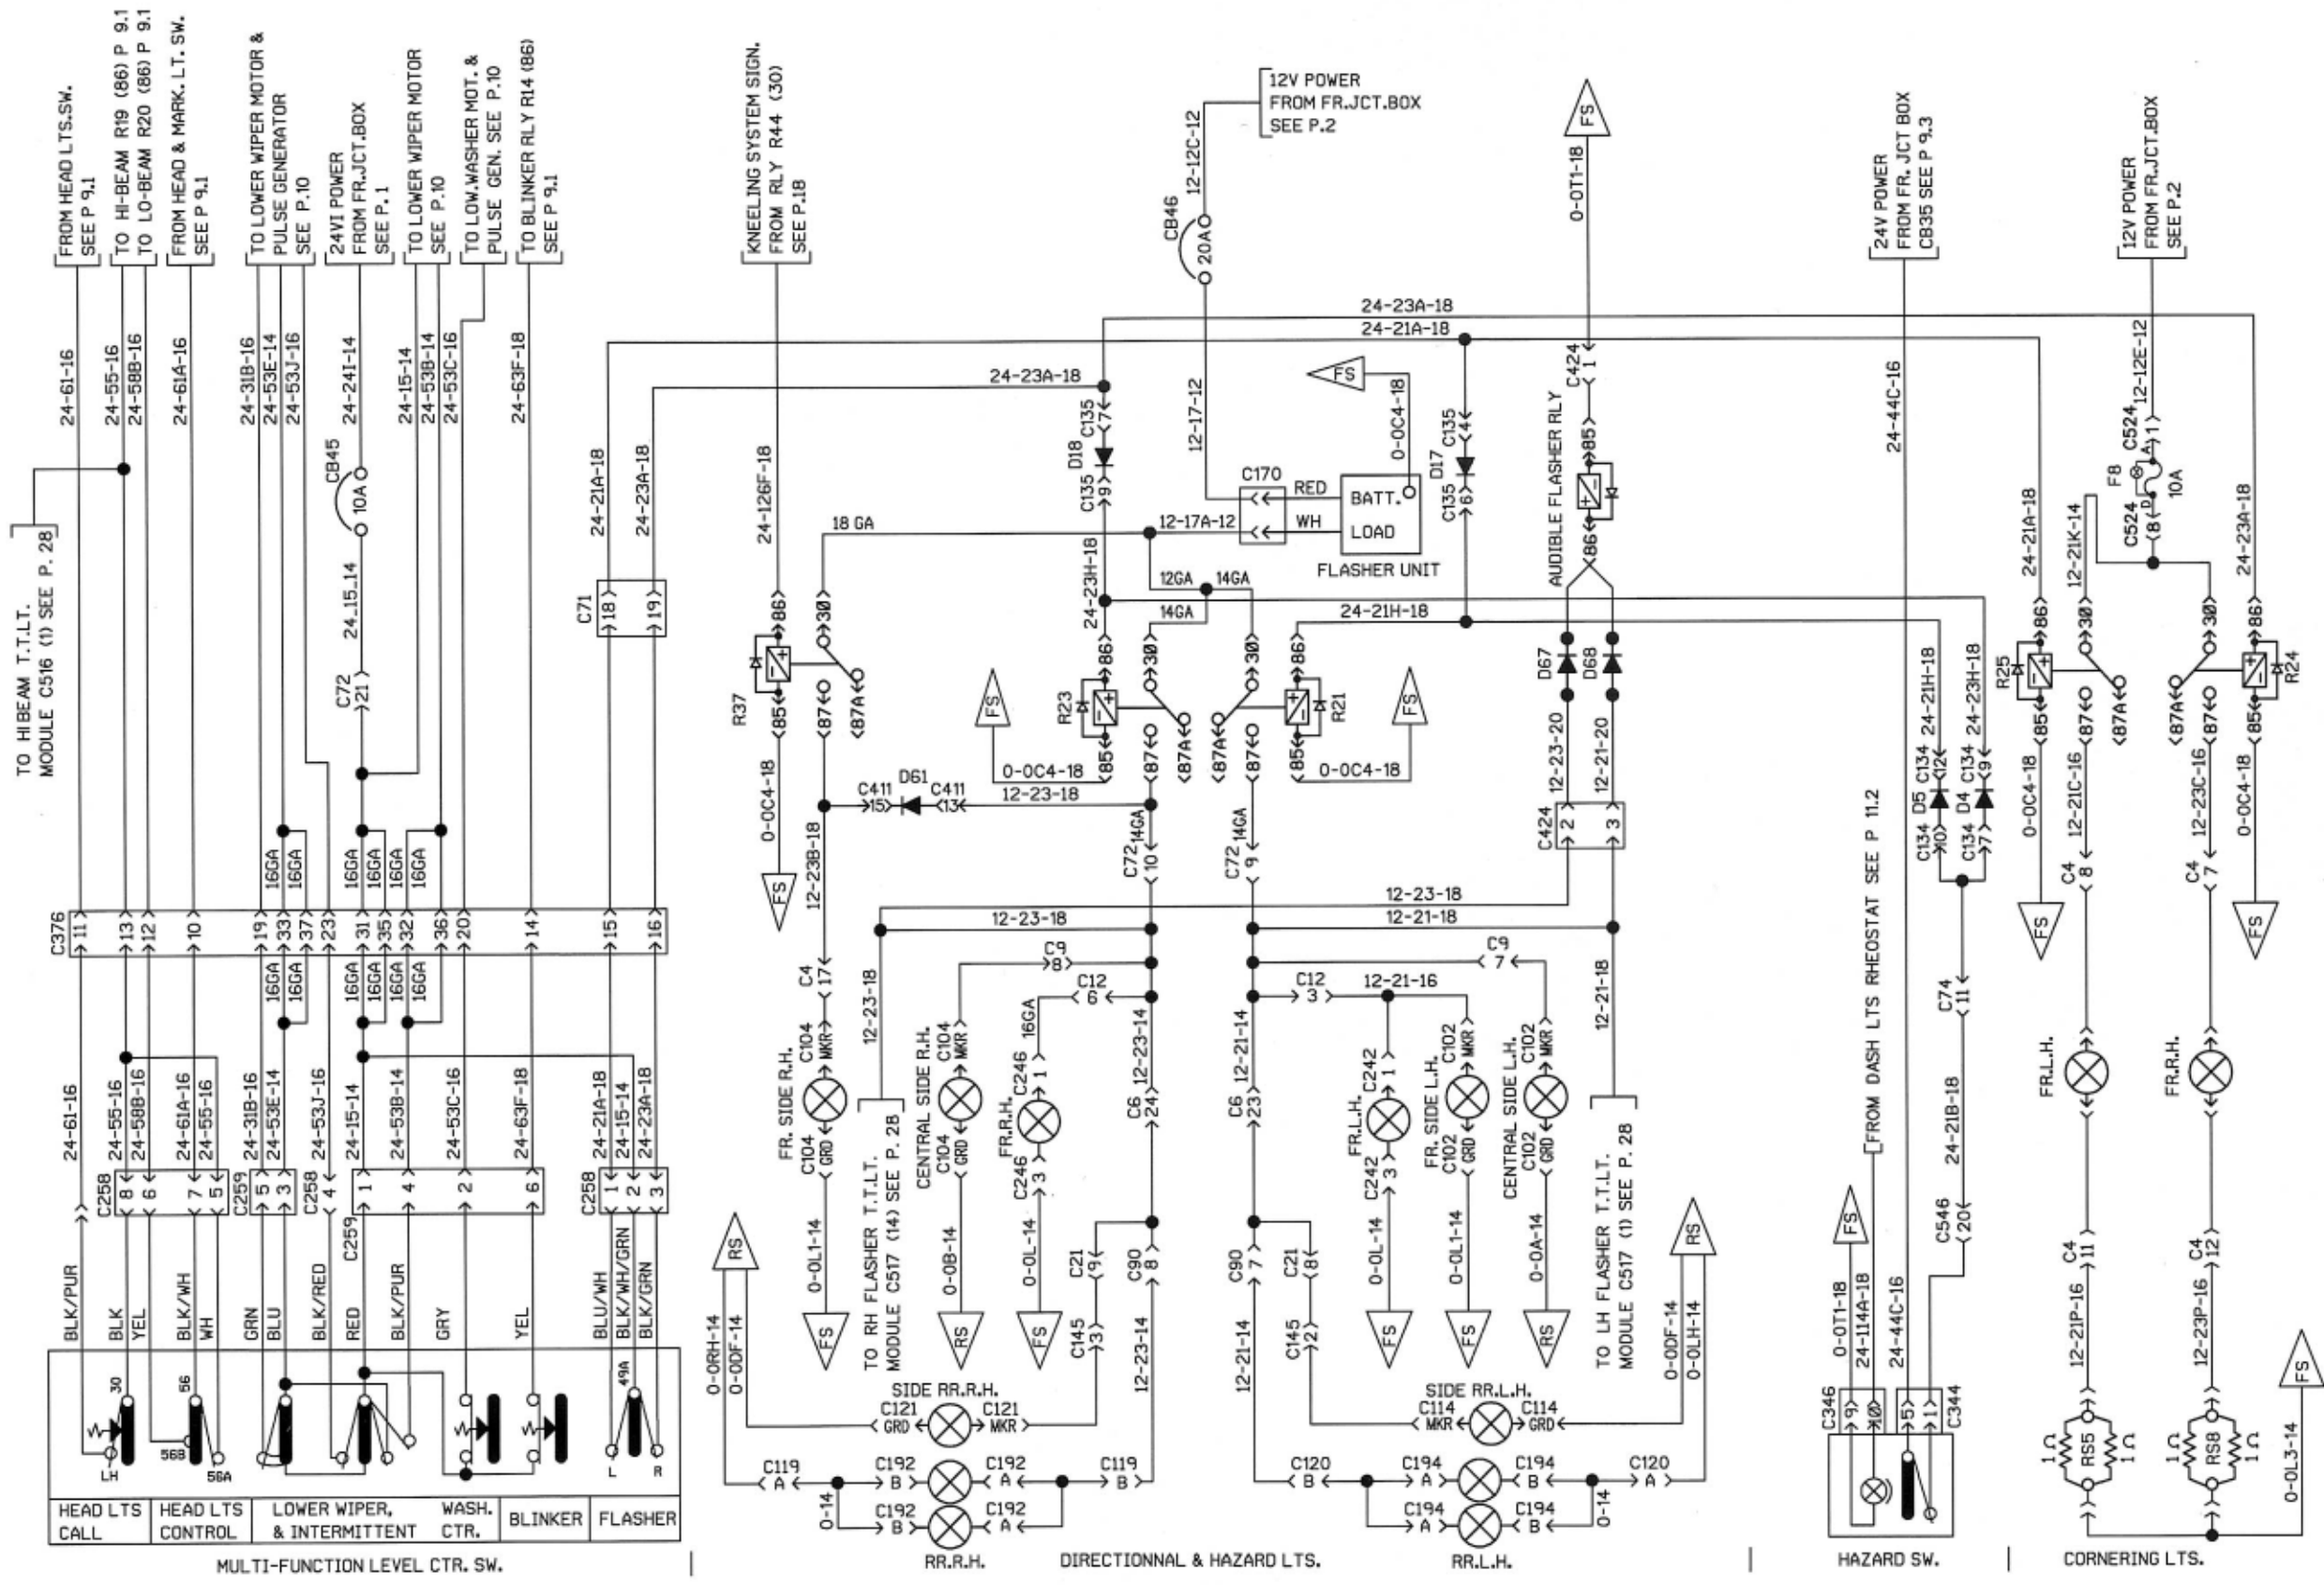

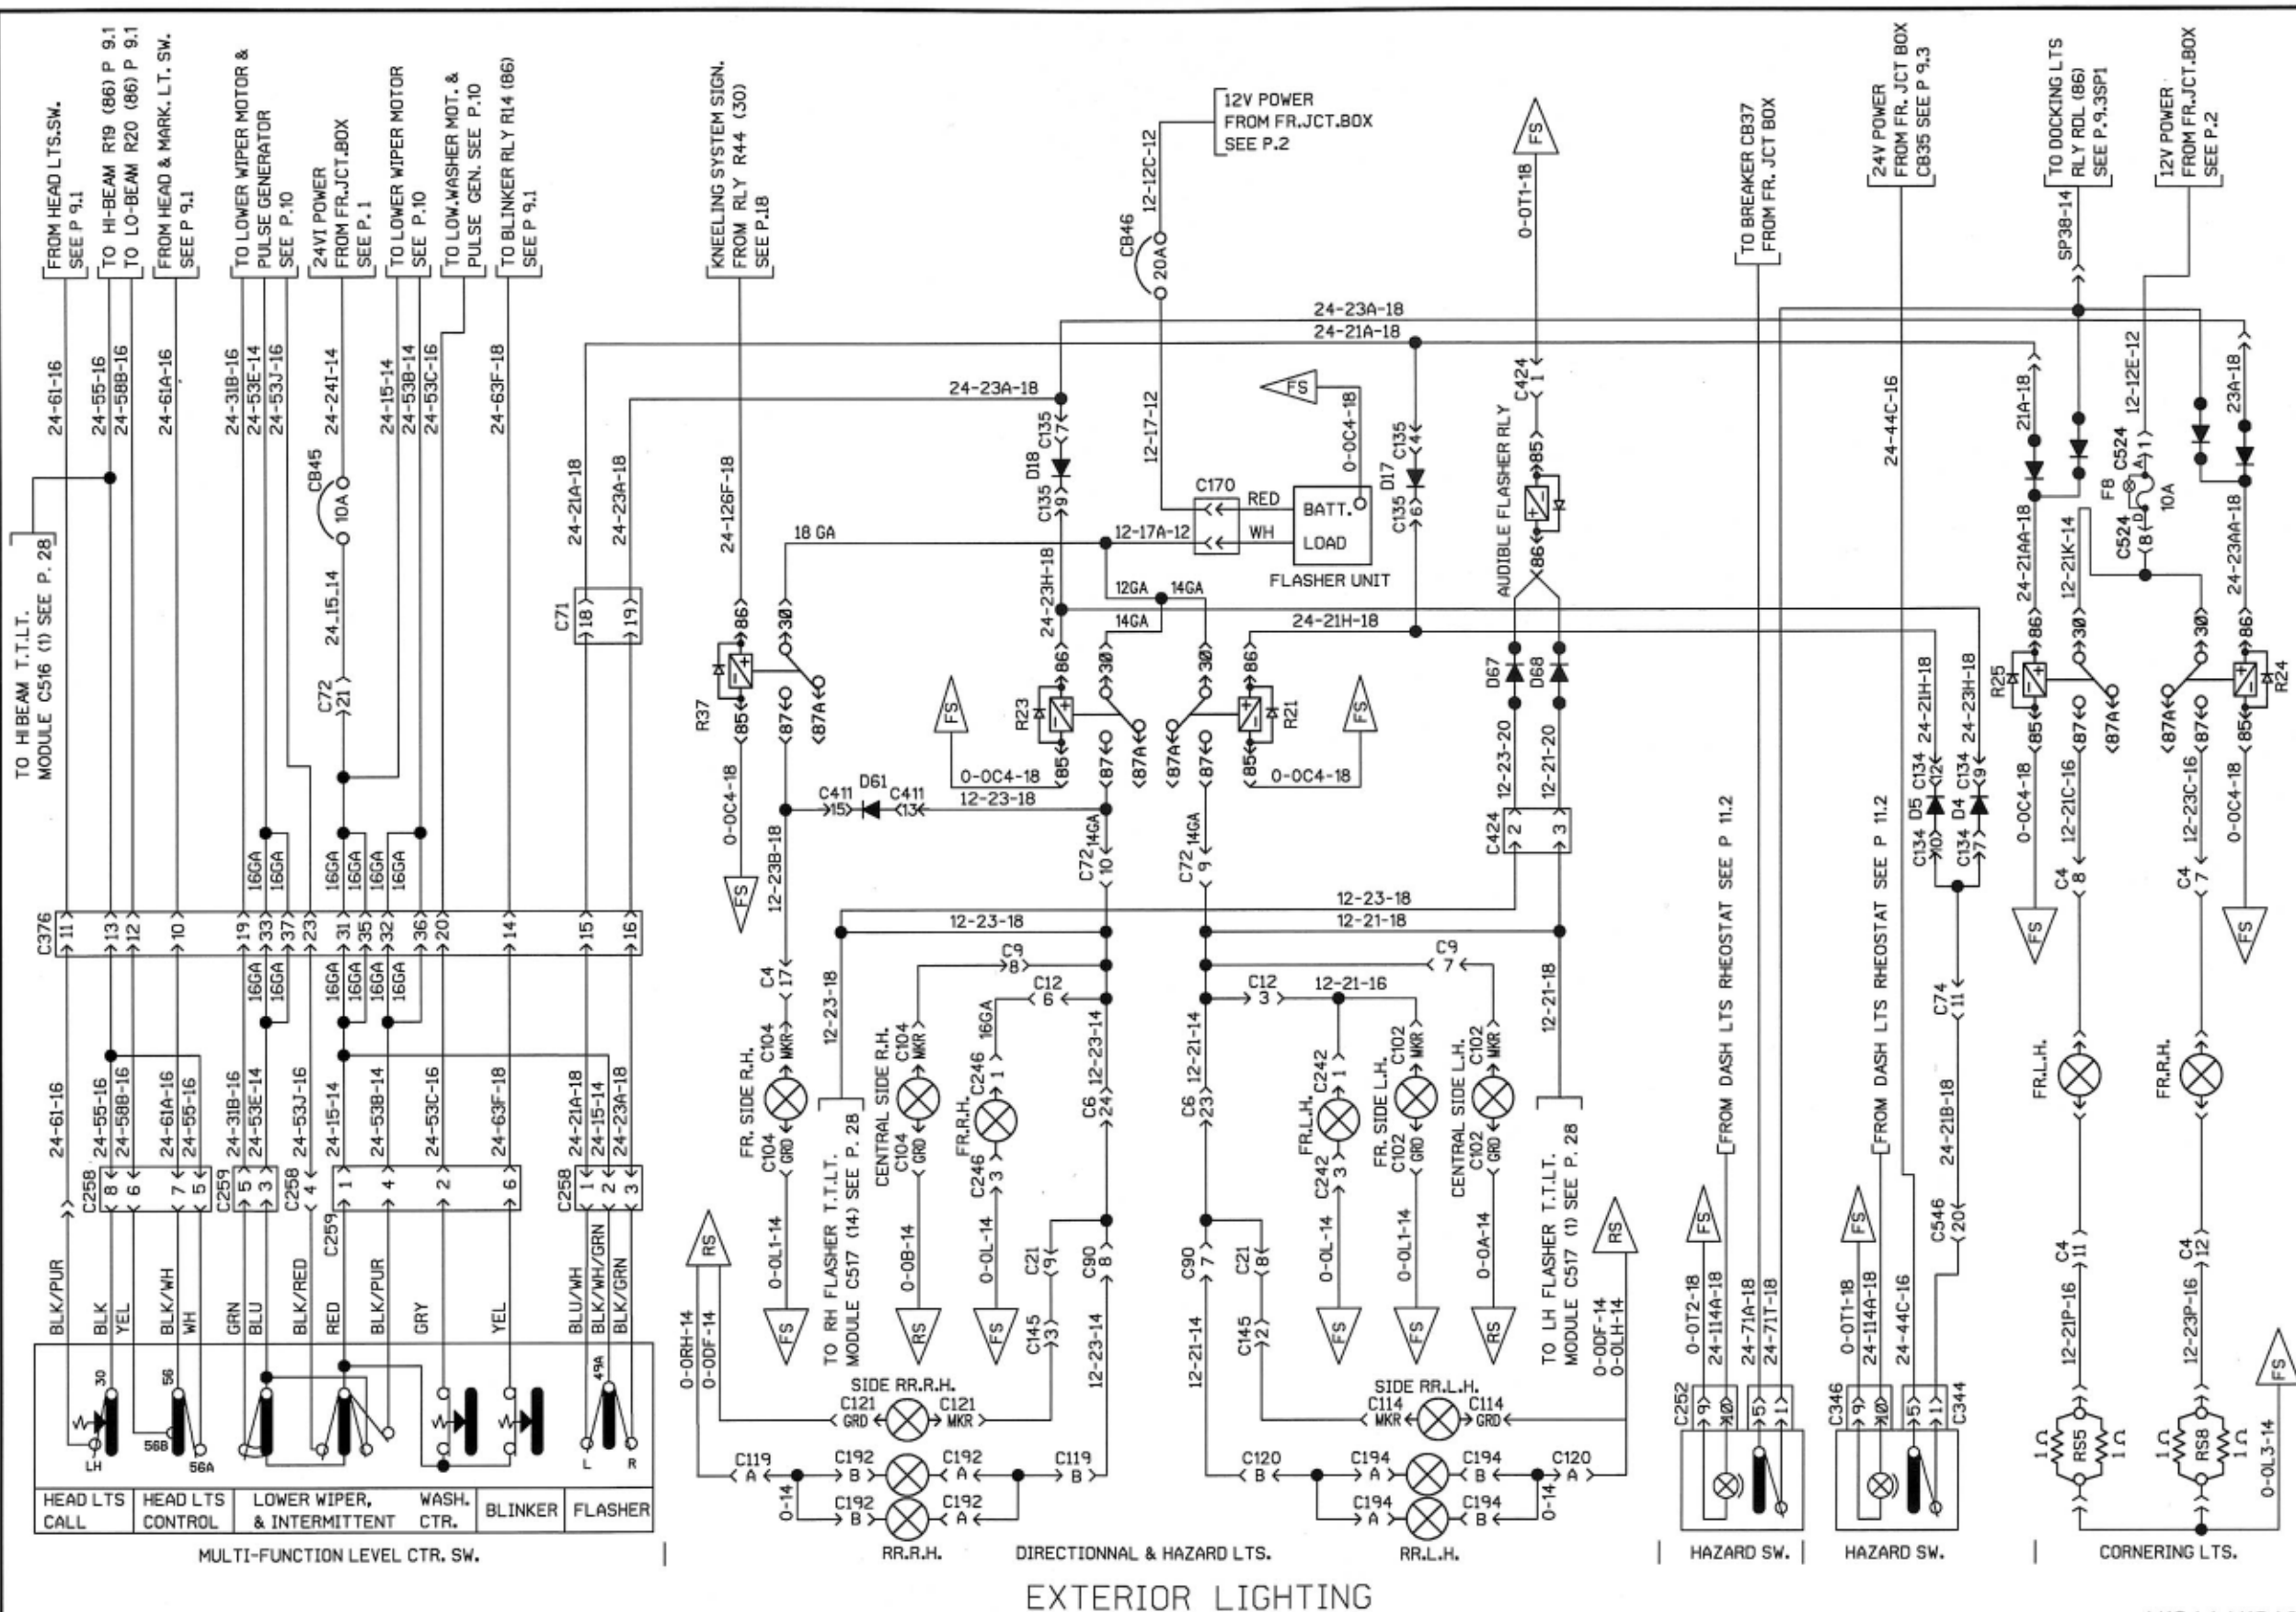



PREVOST

WIRING DIAGRAM



NO:


D060882

PAGE: 9.2sp2

REVISION
00



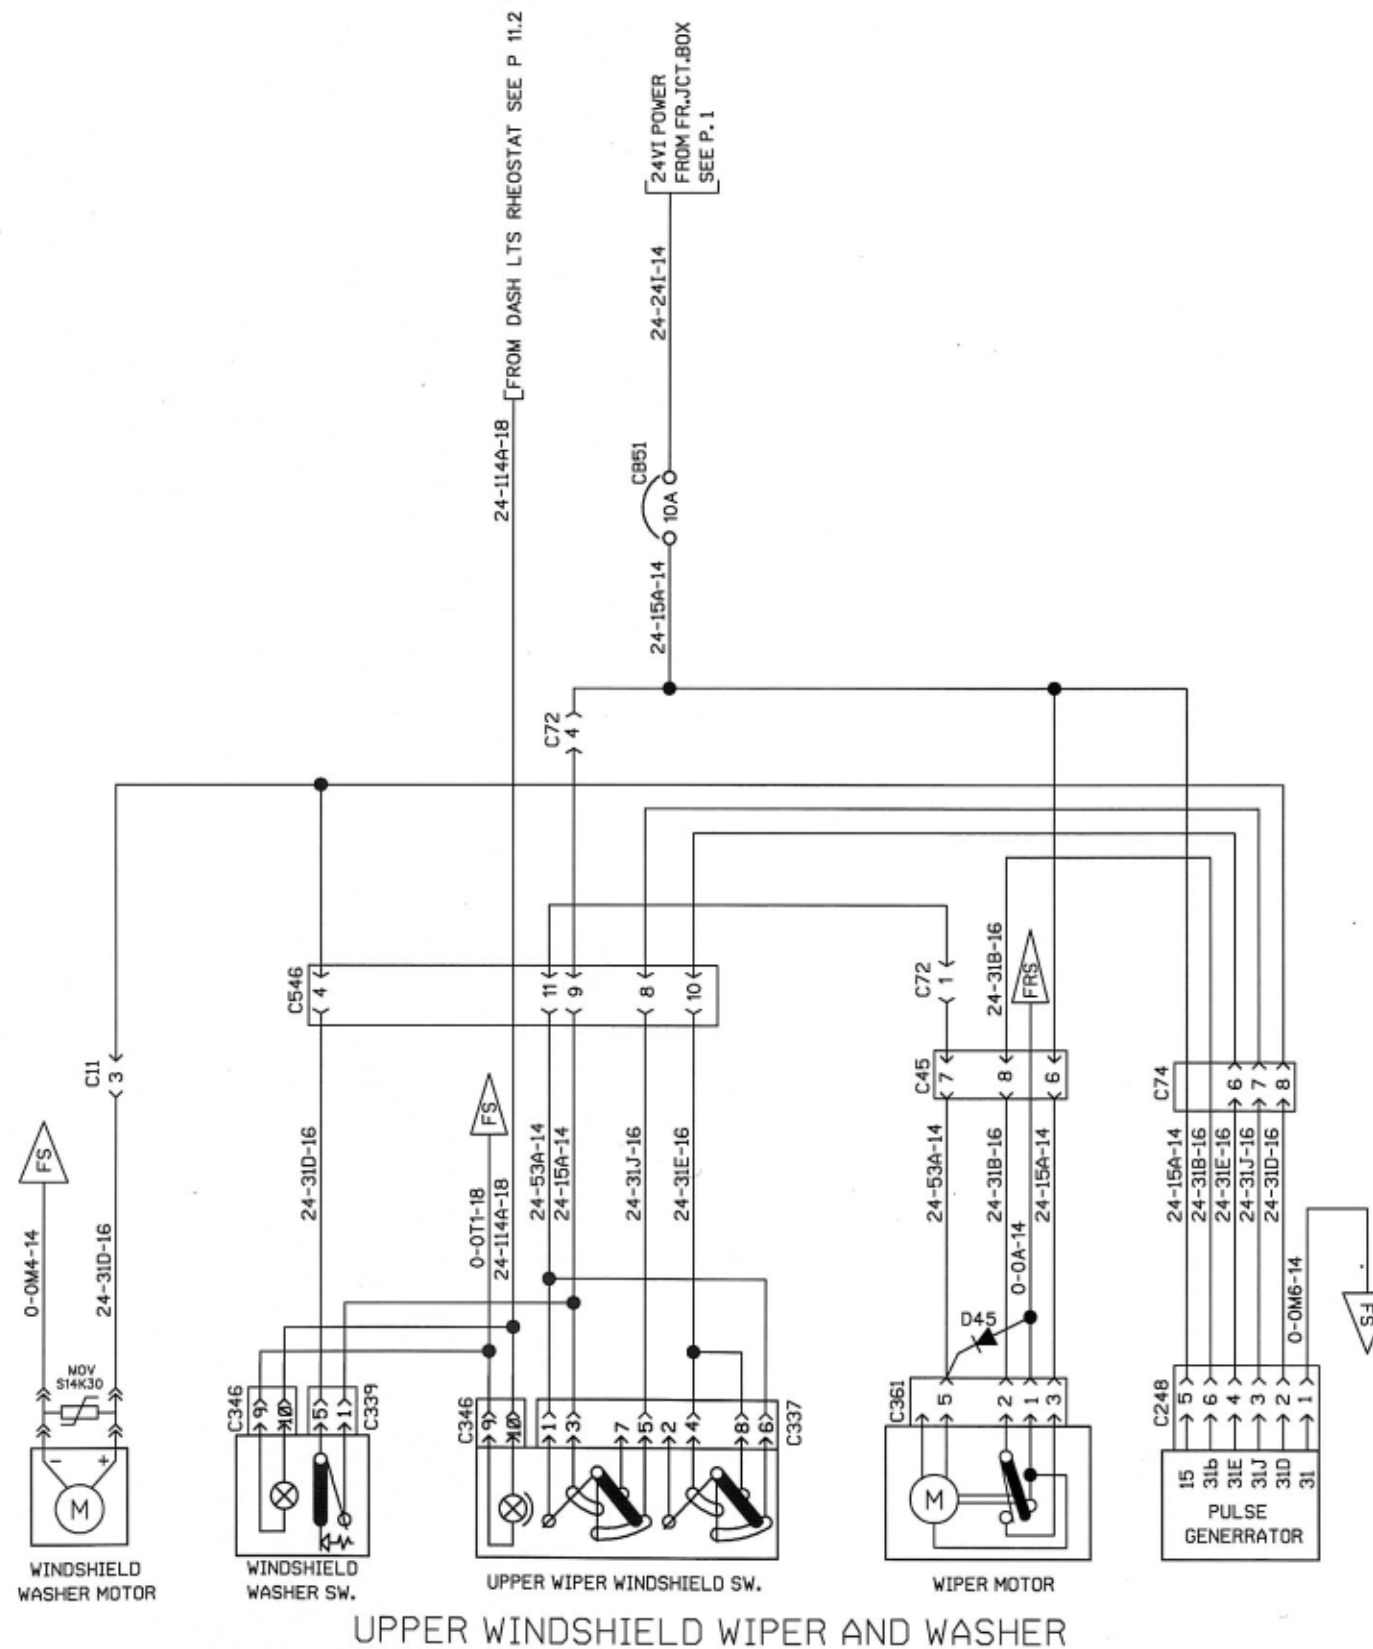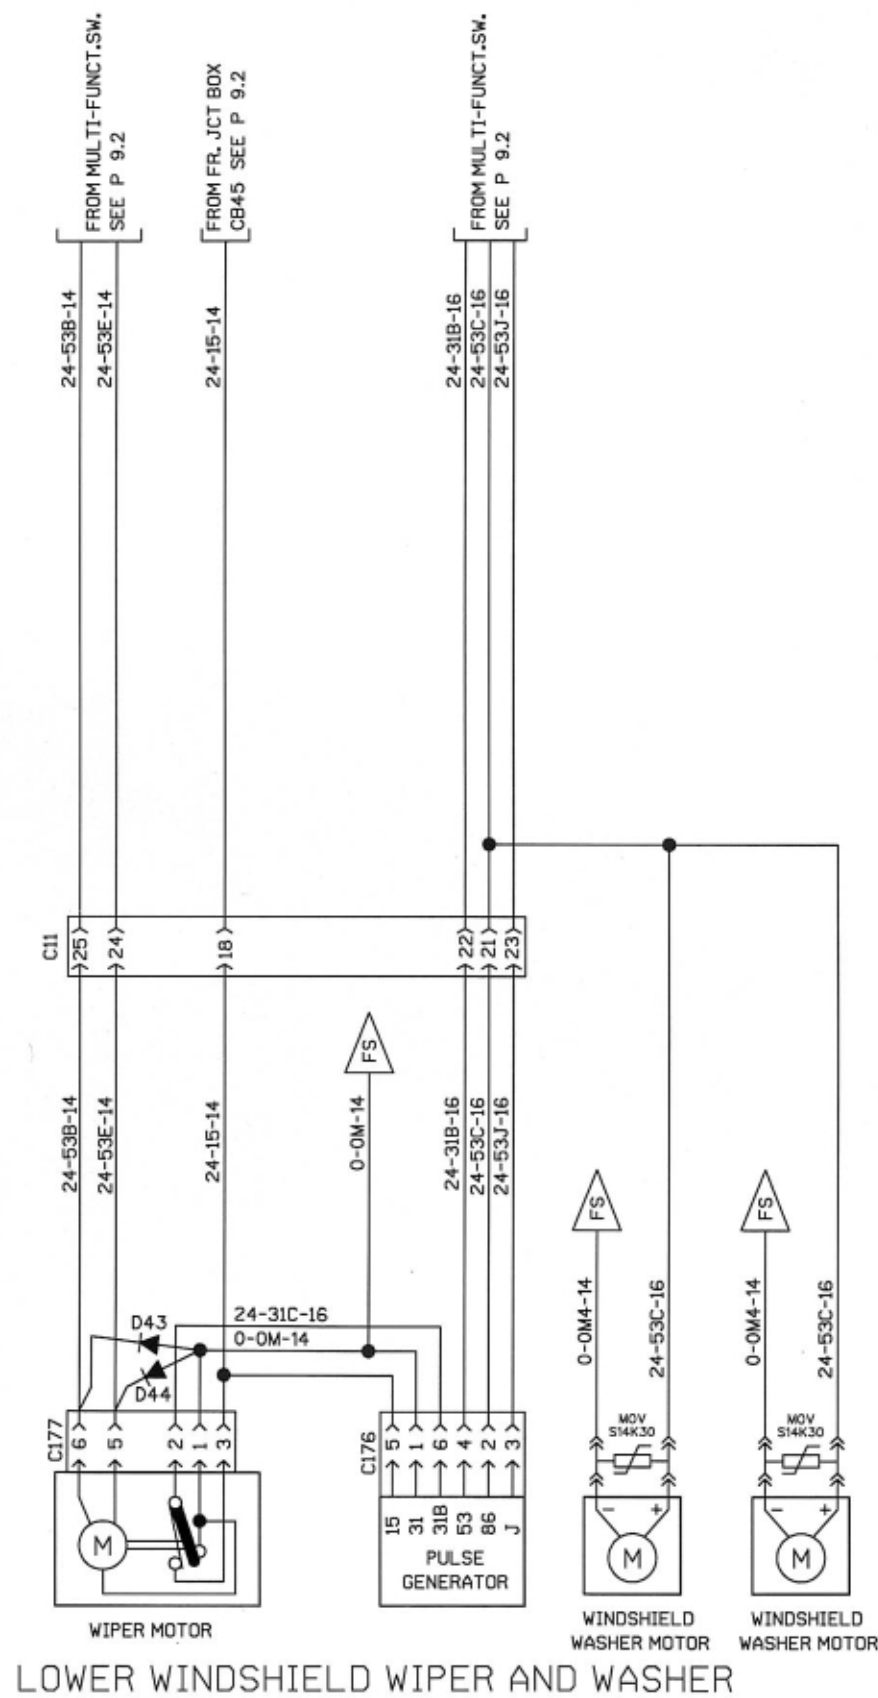

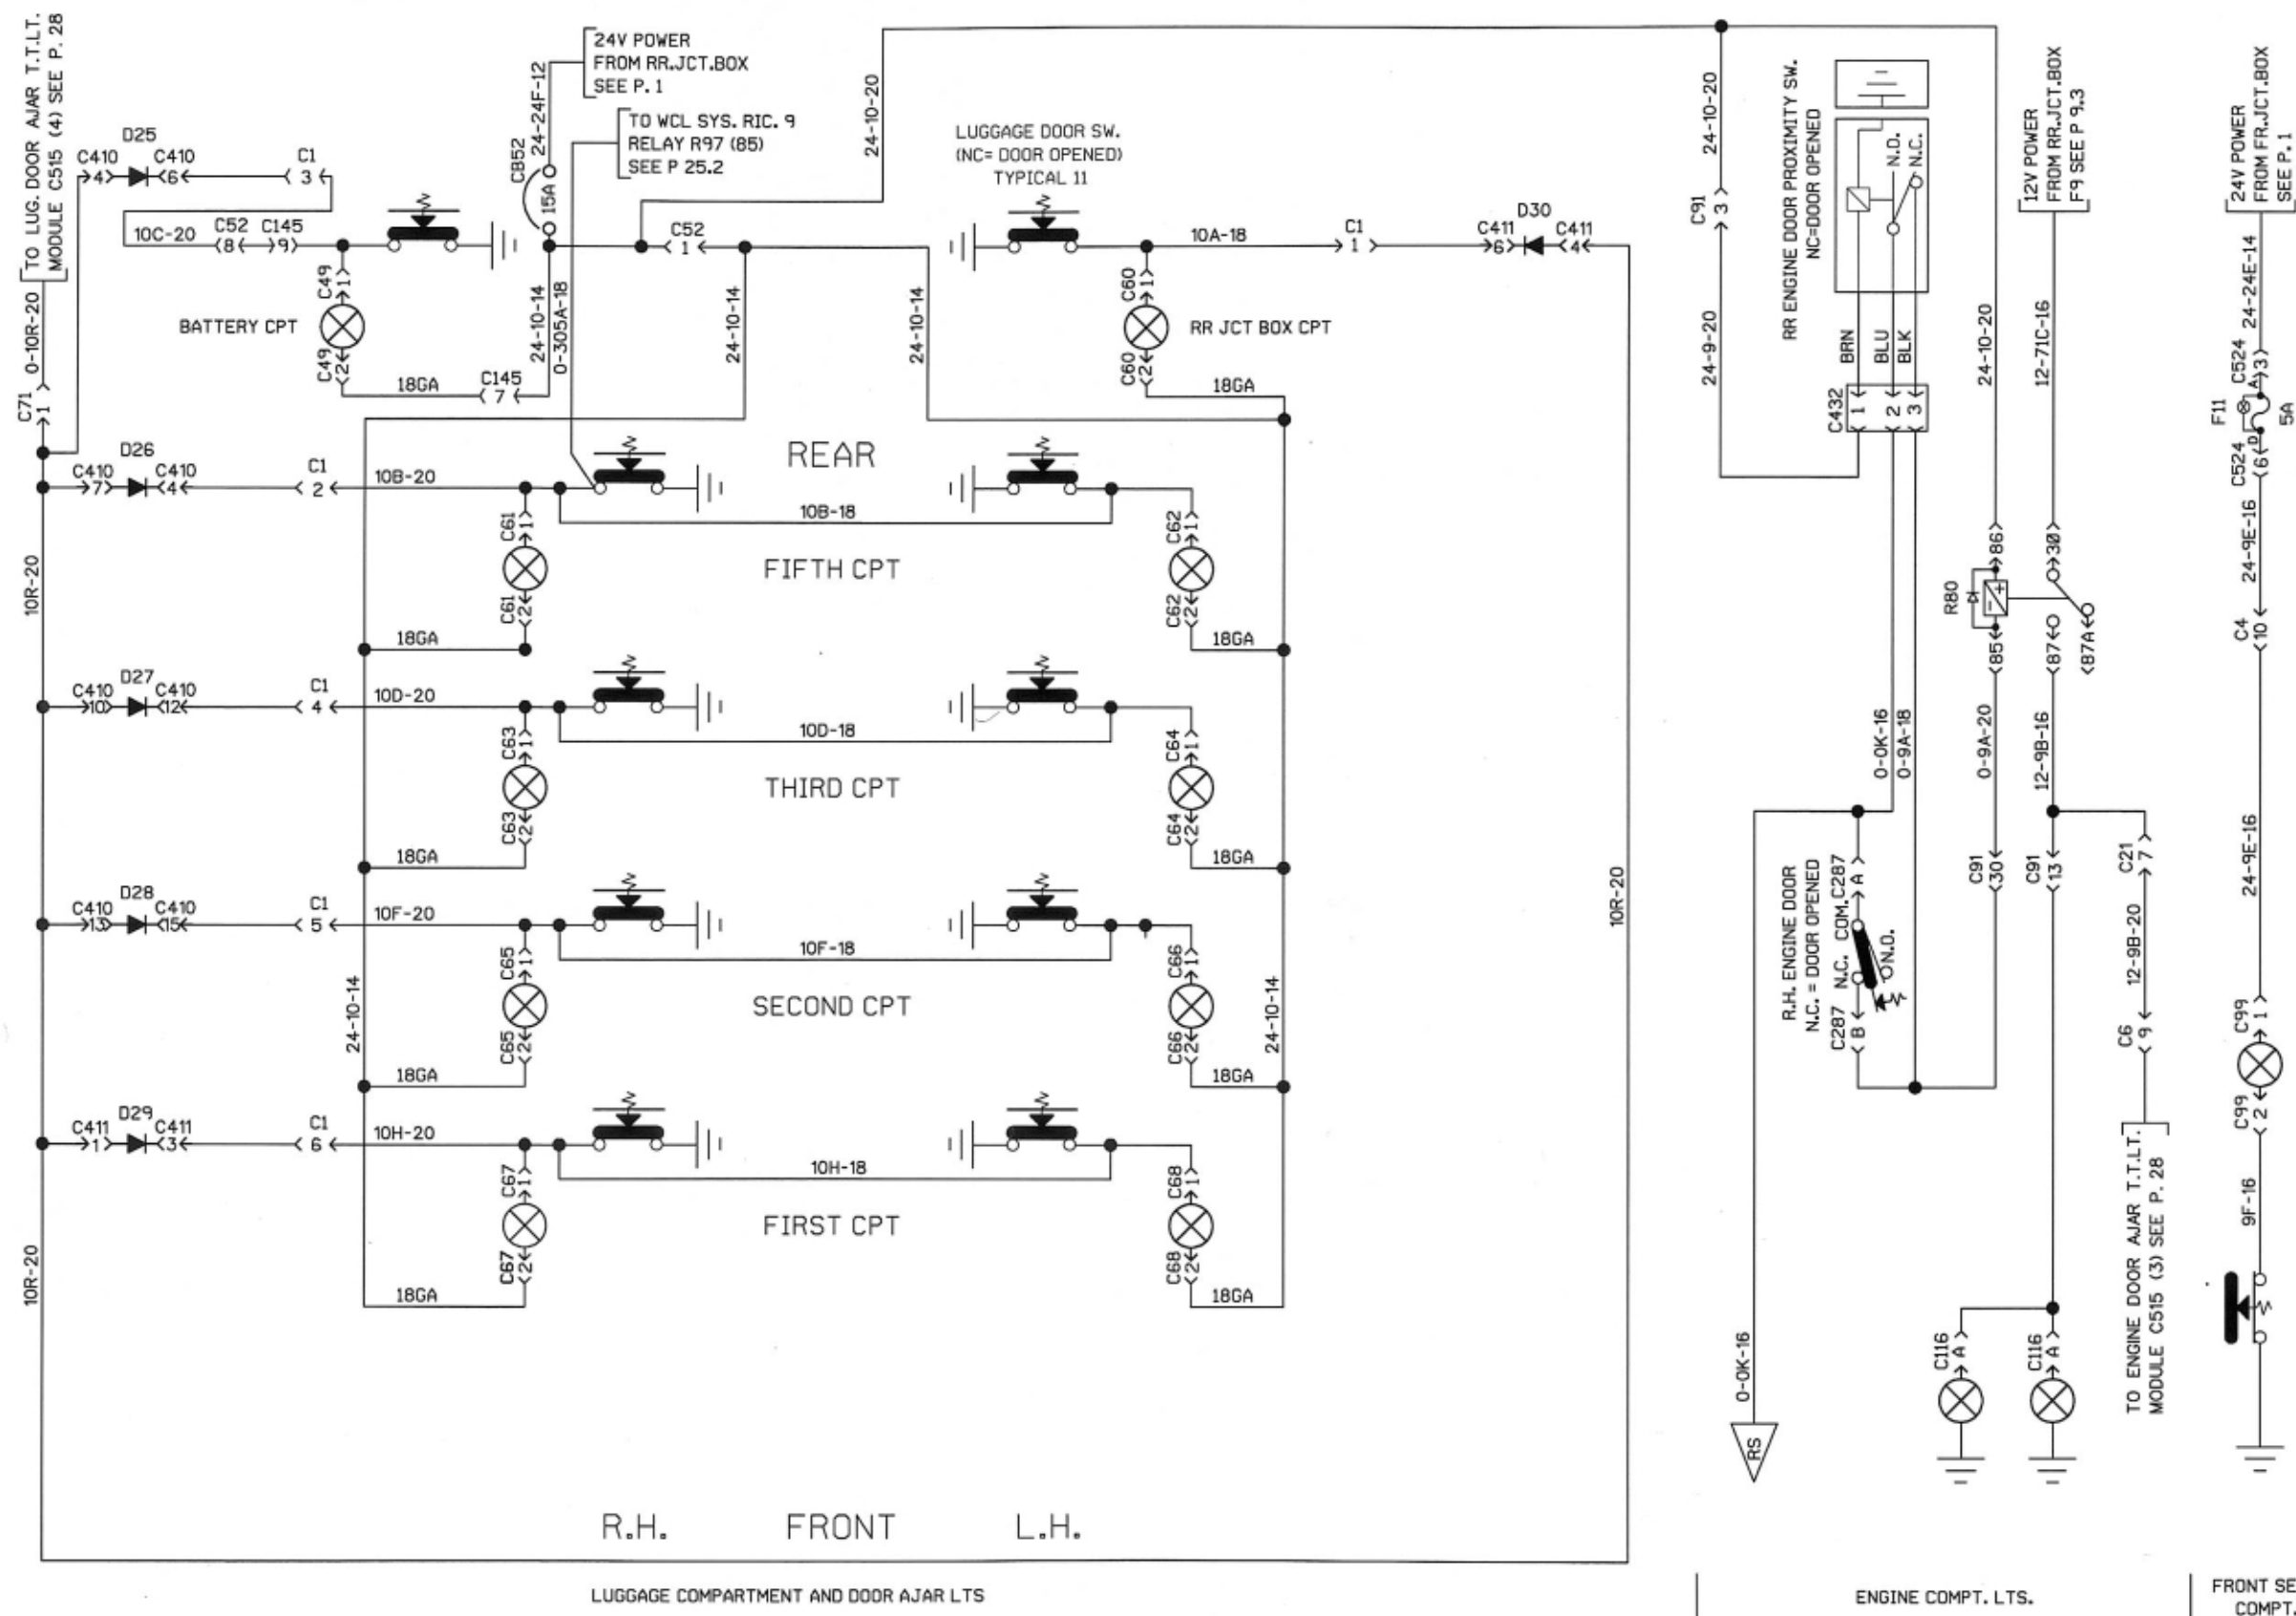

INTERIOR LIGHTING

PREVOST

WIRING DIAGRAM


NO:

 
D060882


PAGE:

11.1


REVISION
01

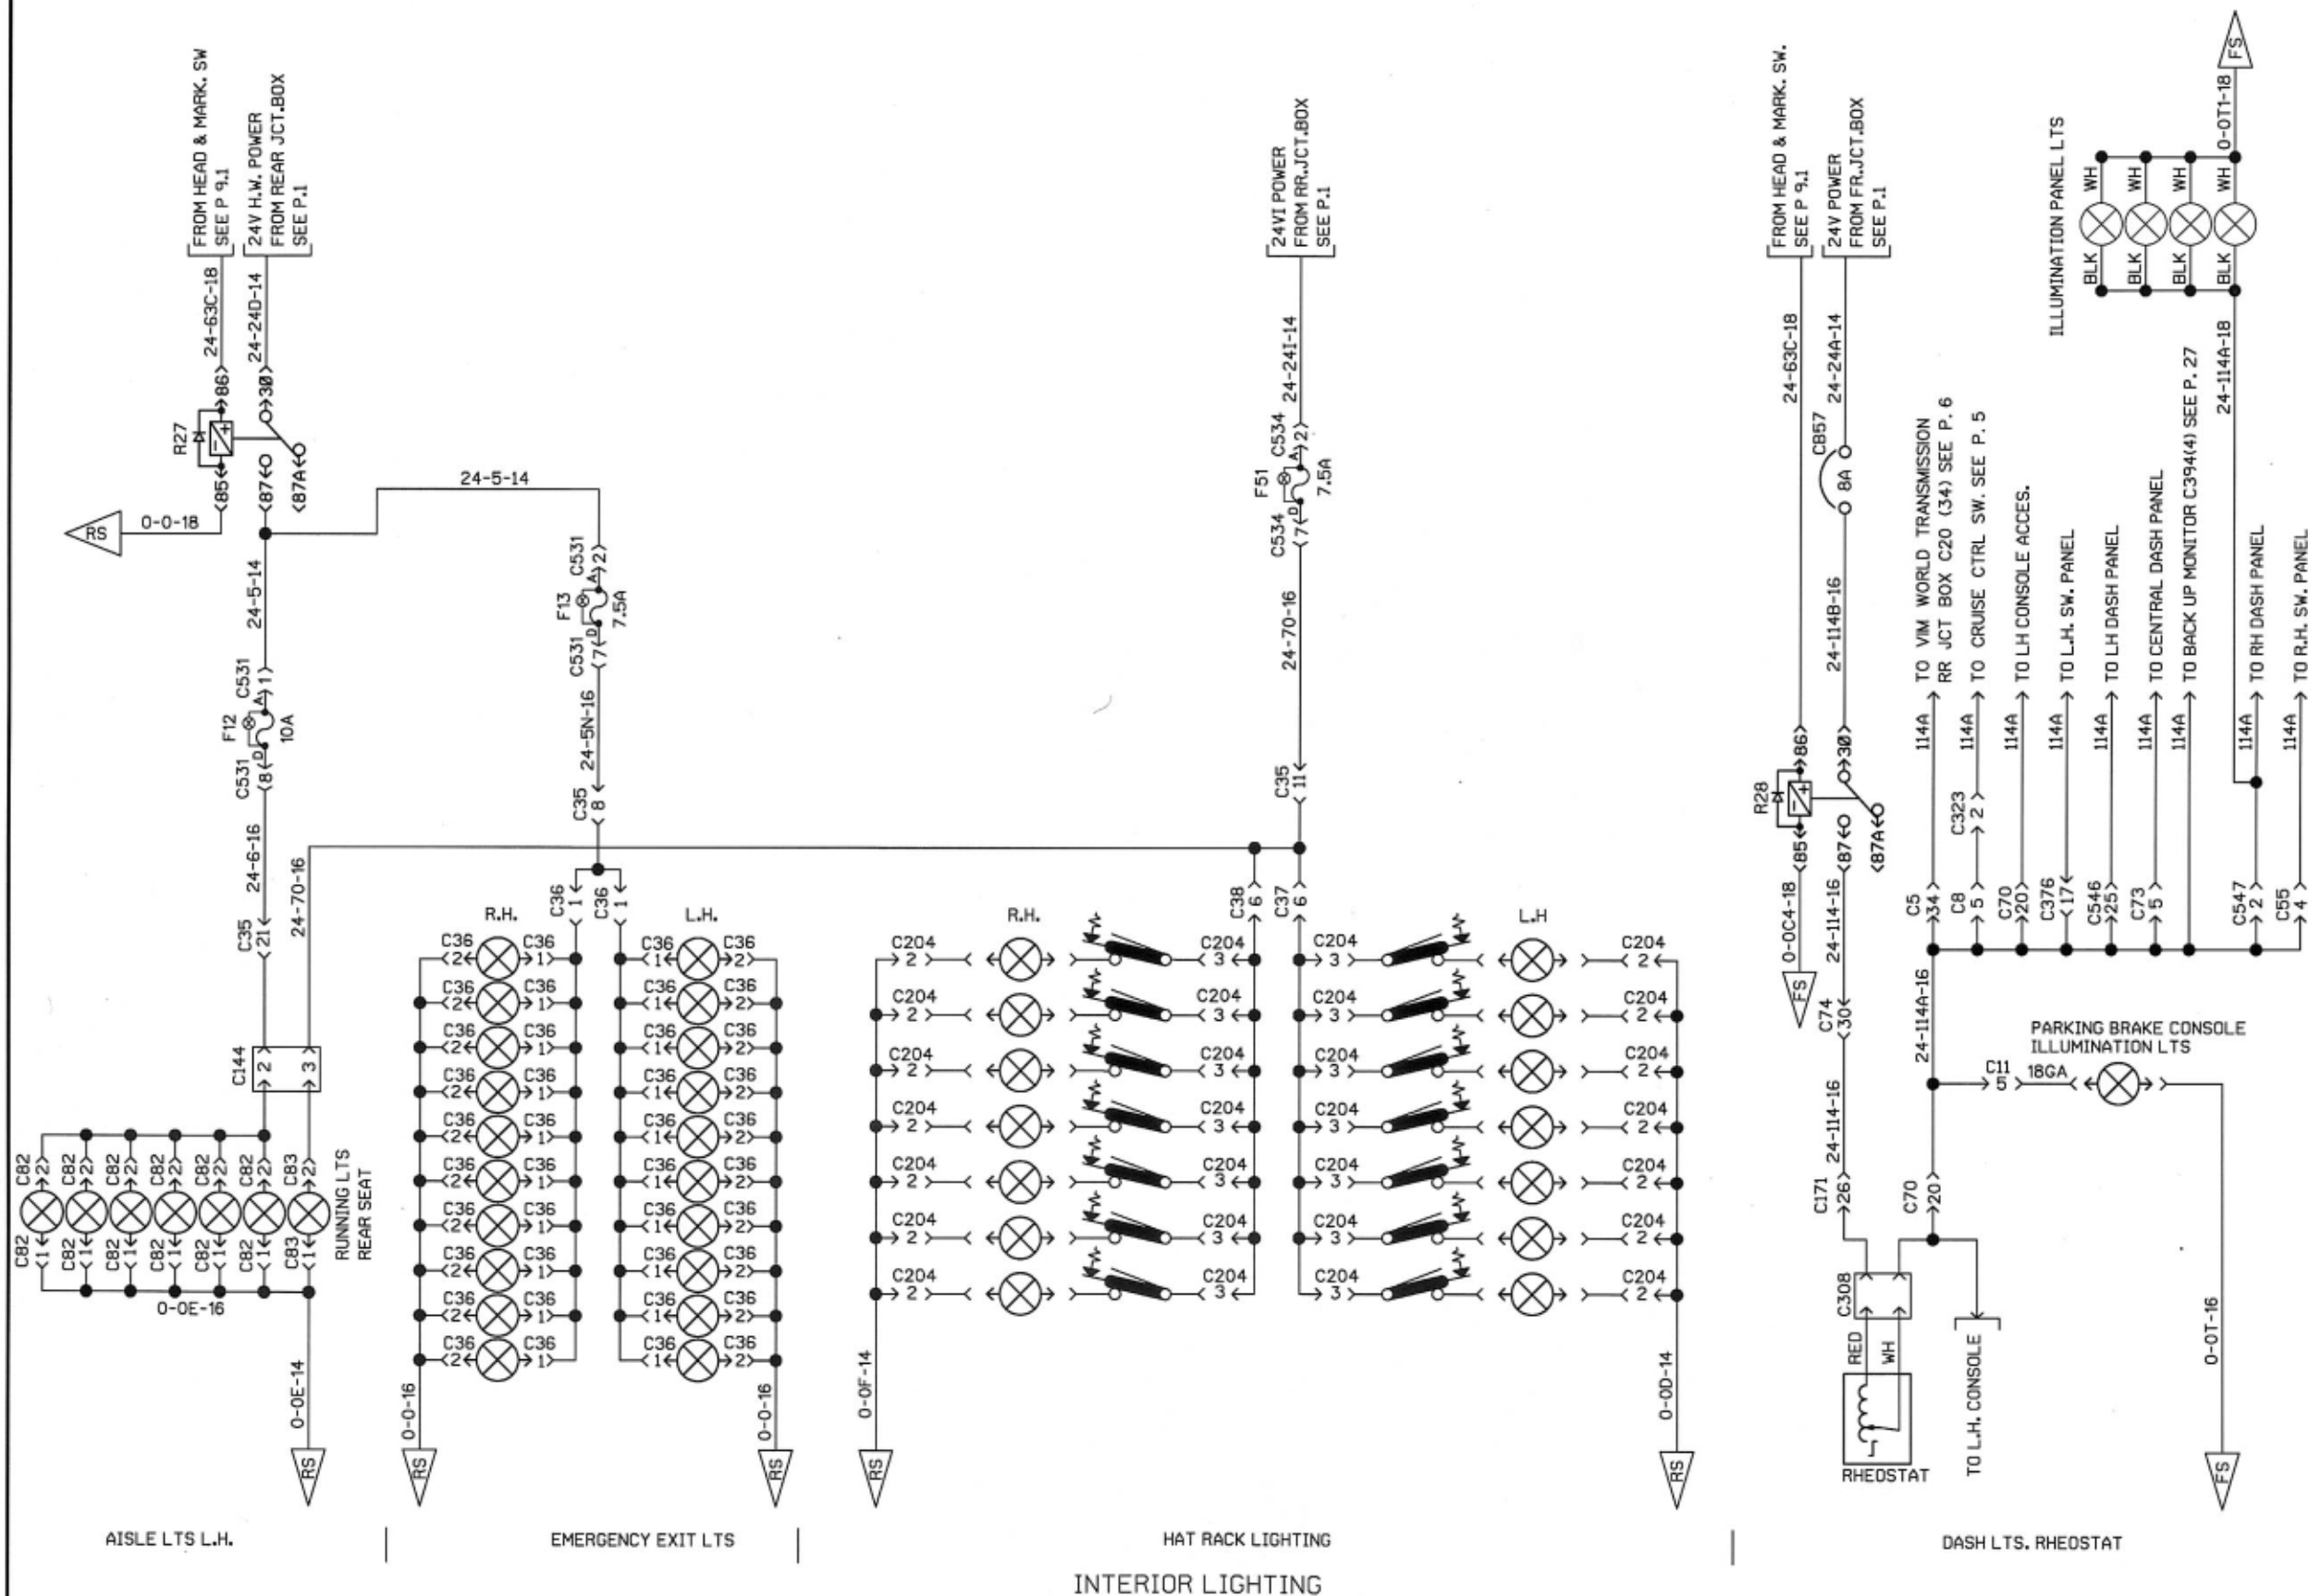




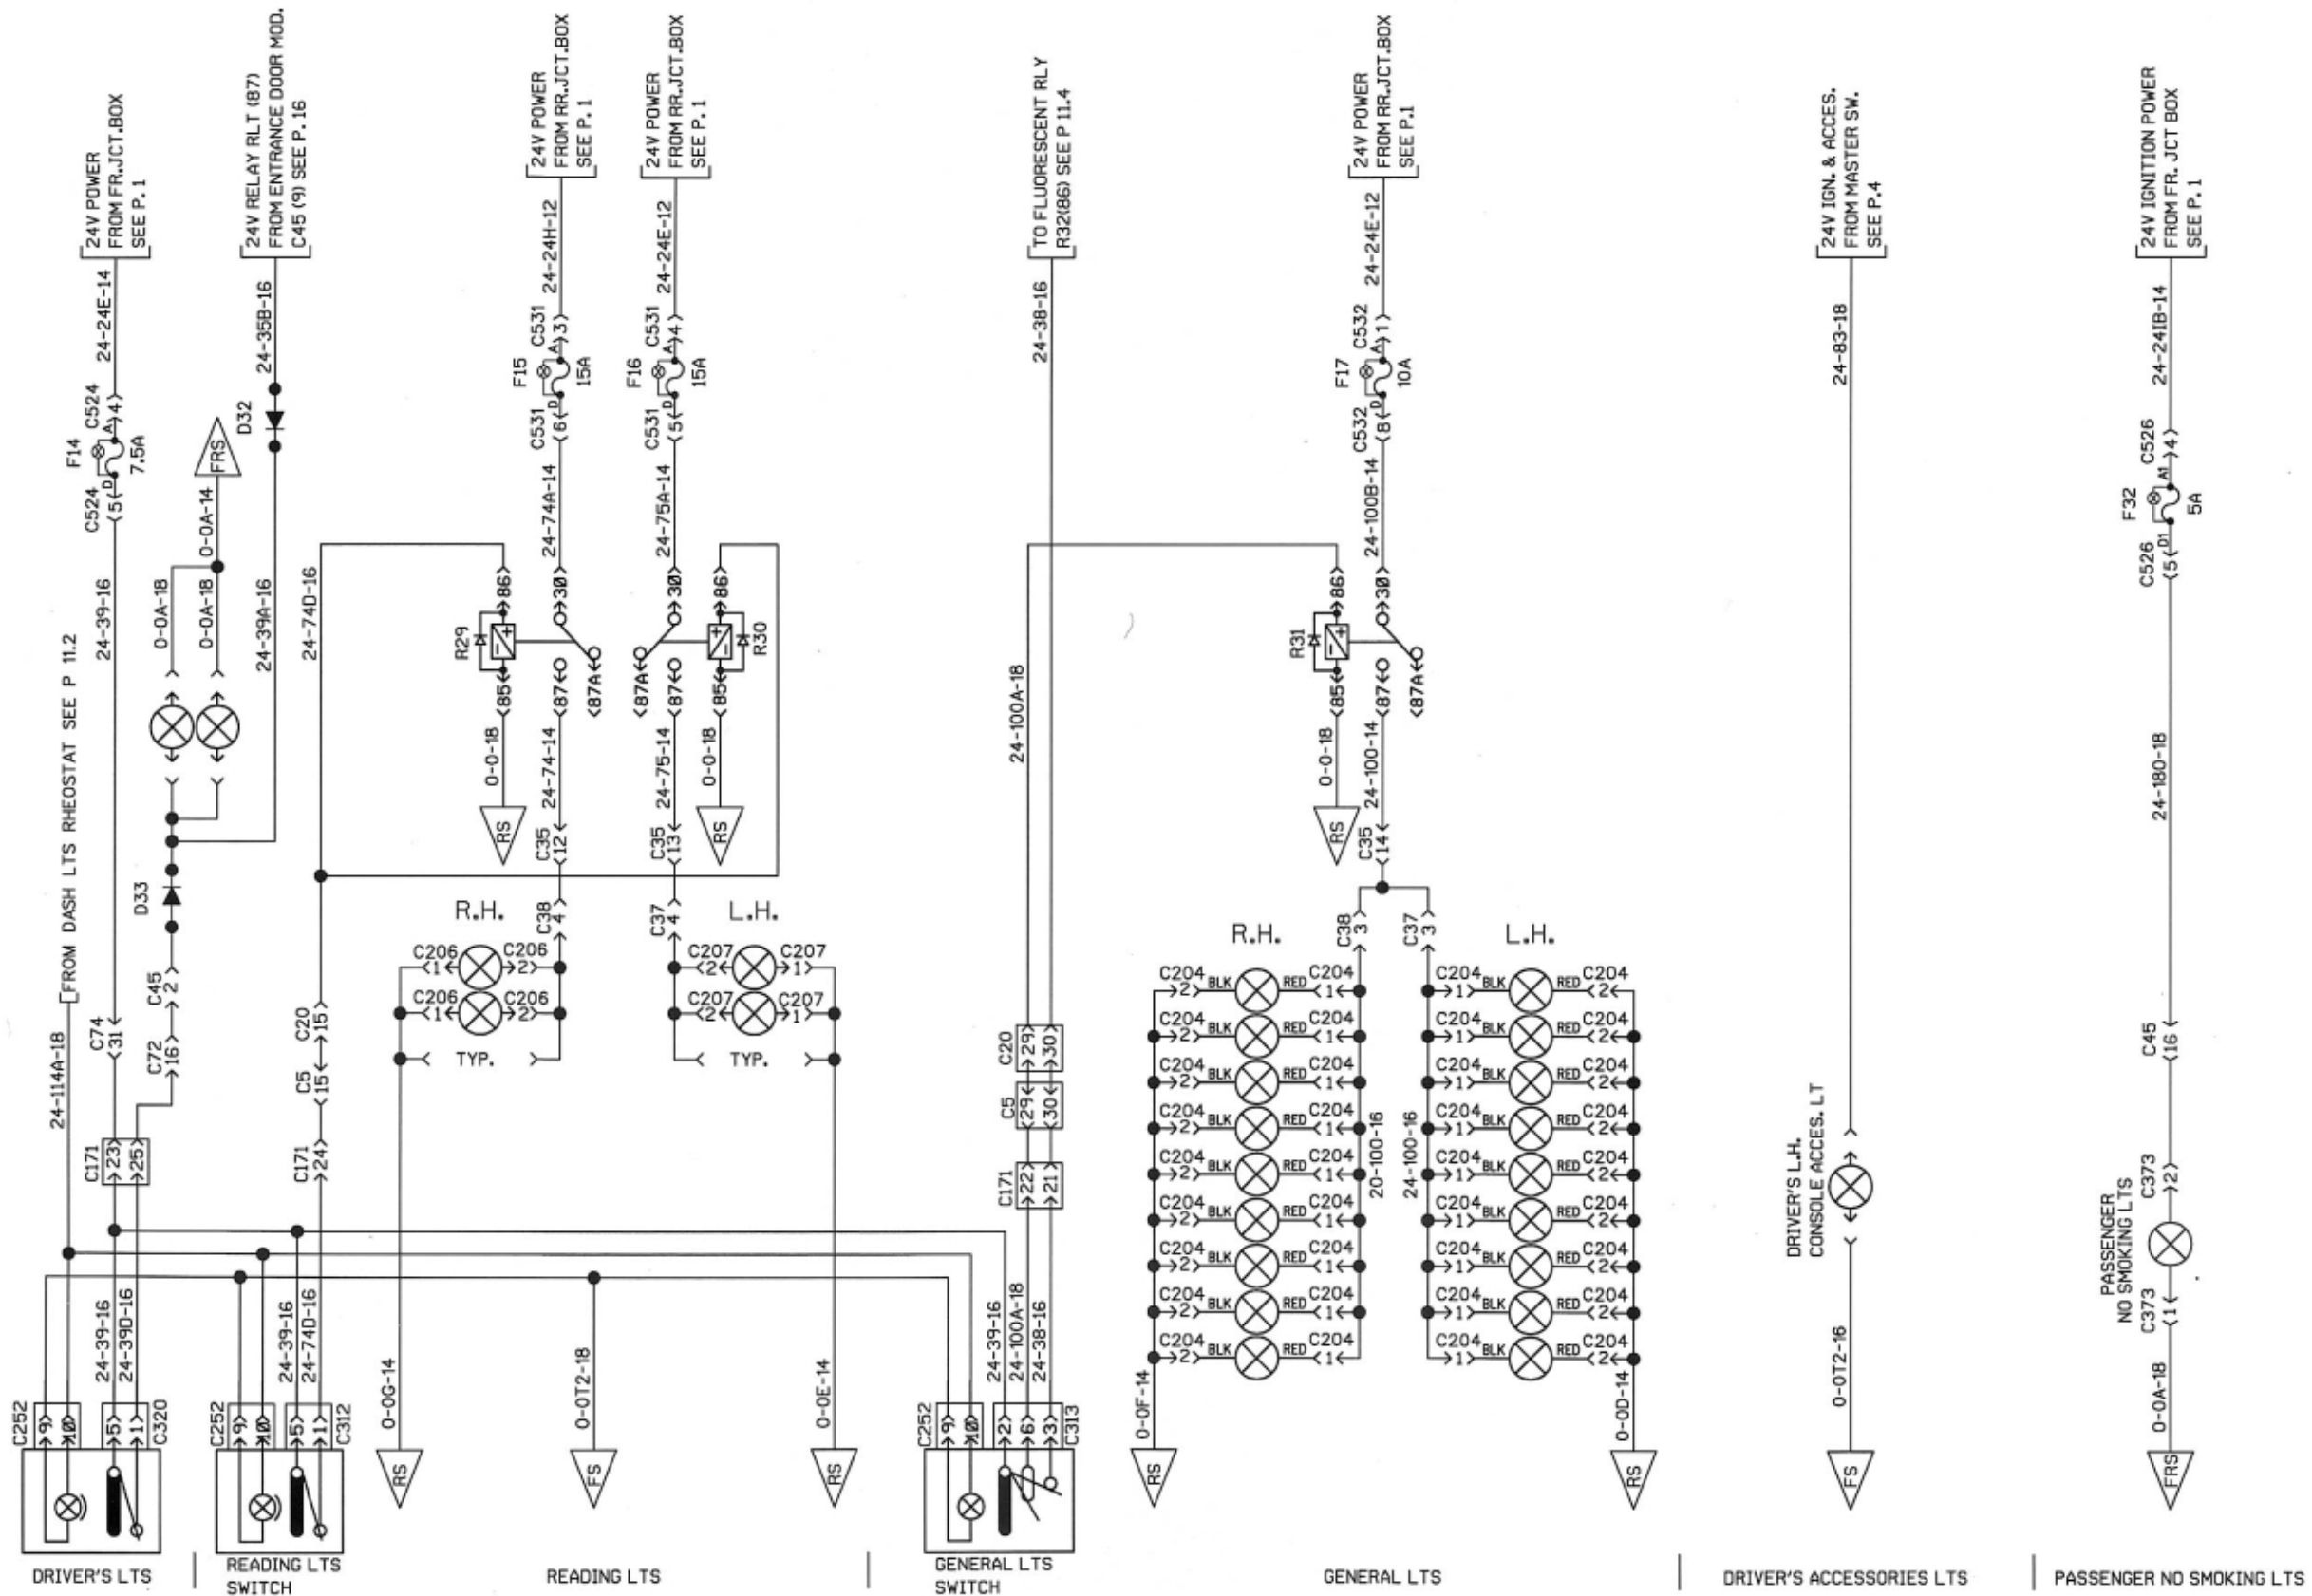

INTERIOR LIGHTING

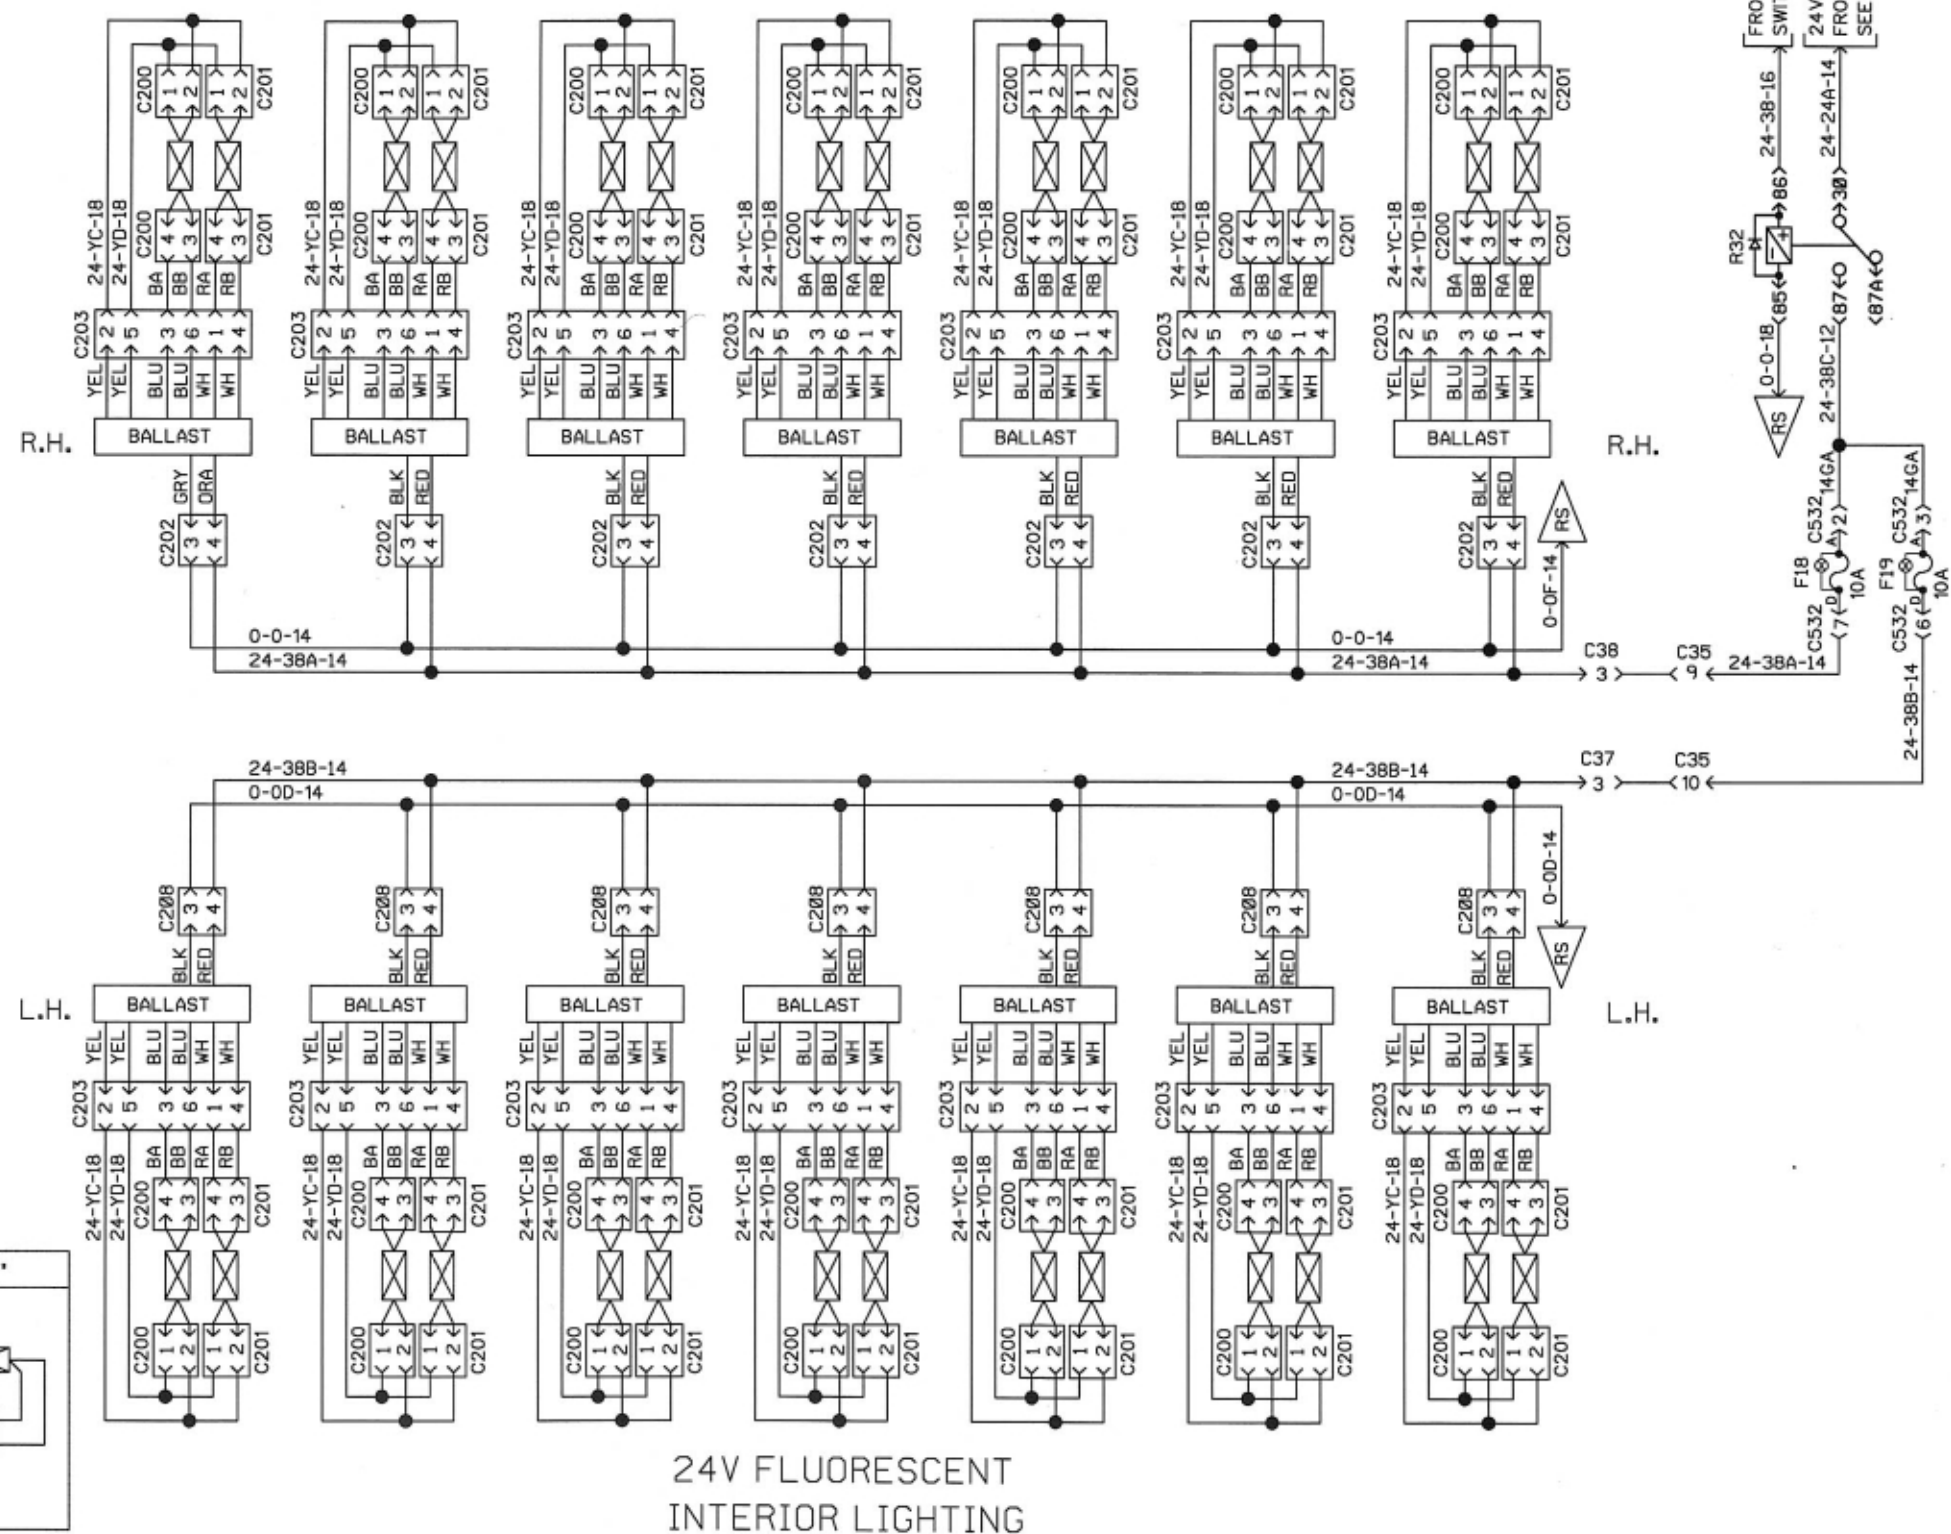

110V RECEPTACLE

 

0-0L-14

110-L1-14

110-L1A-14

110-L1B-14

C45

110-L1B-14

110-L2B-14

C225

110-L1A-14

110-L2A-14

C193

24-38B-14

0-0D-14

110-L2A-16

110-L1A-16

24-38B-14

0-0D-14

110-L2A-16

110-L1A-16

24-38B-14

0-0D-14

110-L2A-16

110-L1A-16

24-38B-14

0-0D-14

110-L2A-16

110-L1A-16

24-38B-14

0-0D-14

110-L2A-16

110-L1A-16

24-38B-14

0-0D-14

110-L2A-16

110-L1A-16

24-38B-14

0-0D-14

110-L2A-16

110-L1A-16

24-38B-14

0-0D-14




110-L2A-16

110-L1A-16

24-38B-14

0-0D-14

SPECIAL CONNECTION 'JUST 1 FLUOR. BY BALLAST'

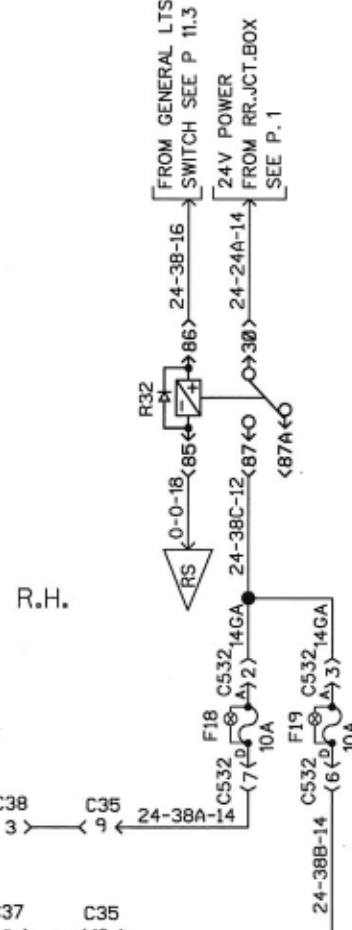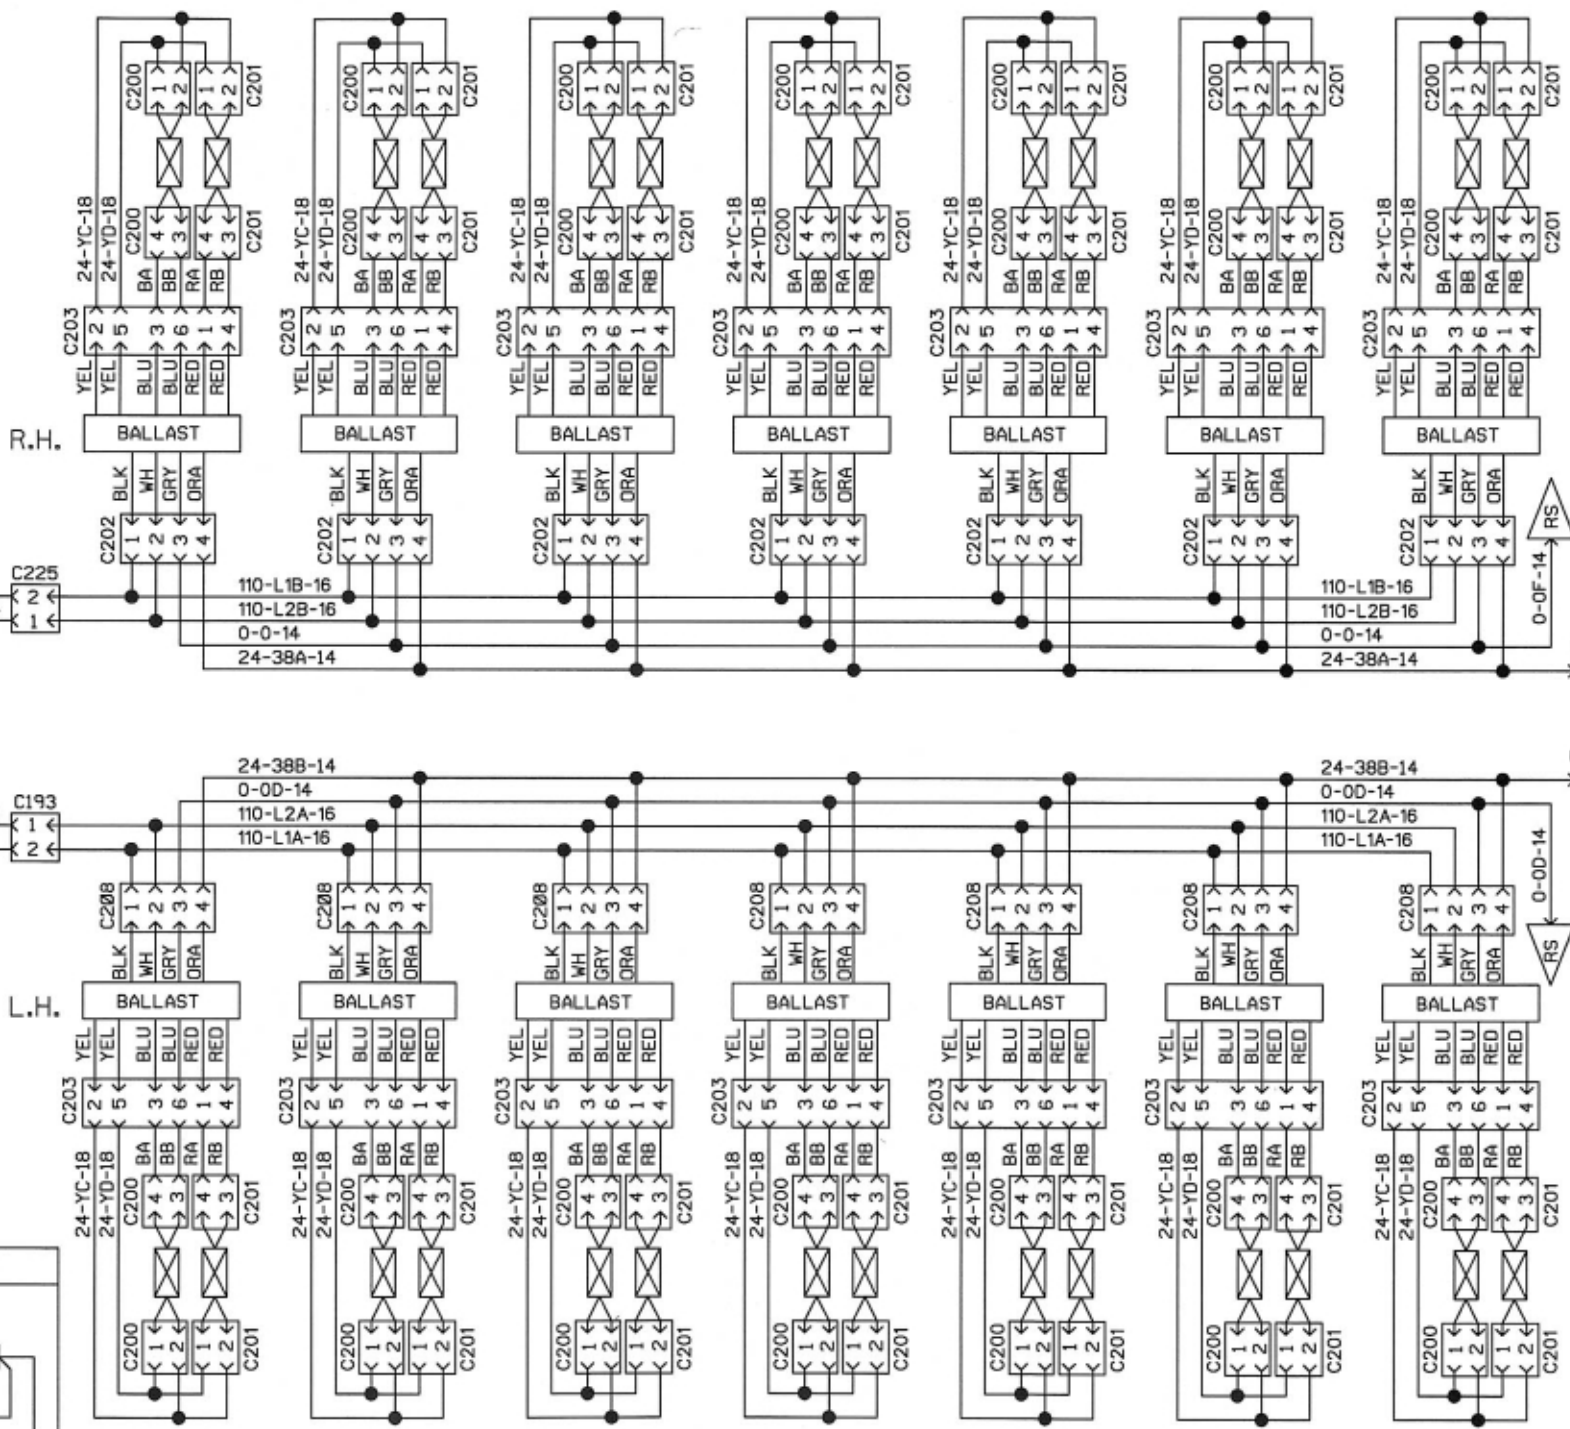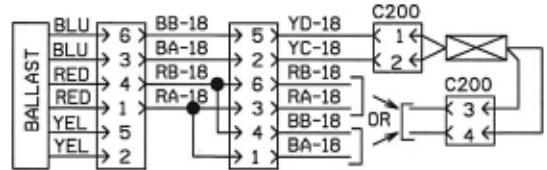

110V FLUORESCENT AND 24V FLUORESCENT

INTERIOR LIGHTING

PREVOST

WIRING DIAGRAM


NO:

D060882


PAGE:

11.5


REVISION
01





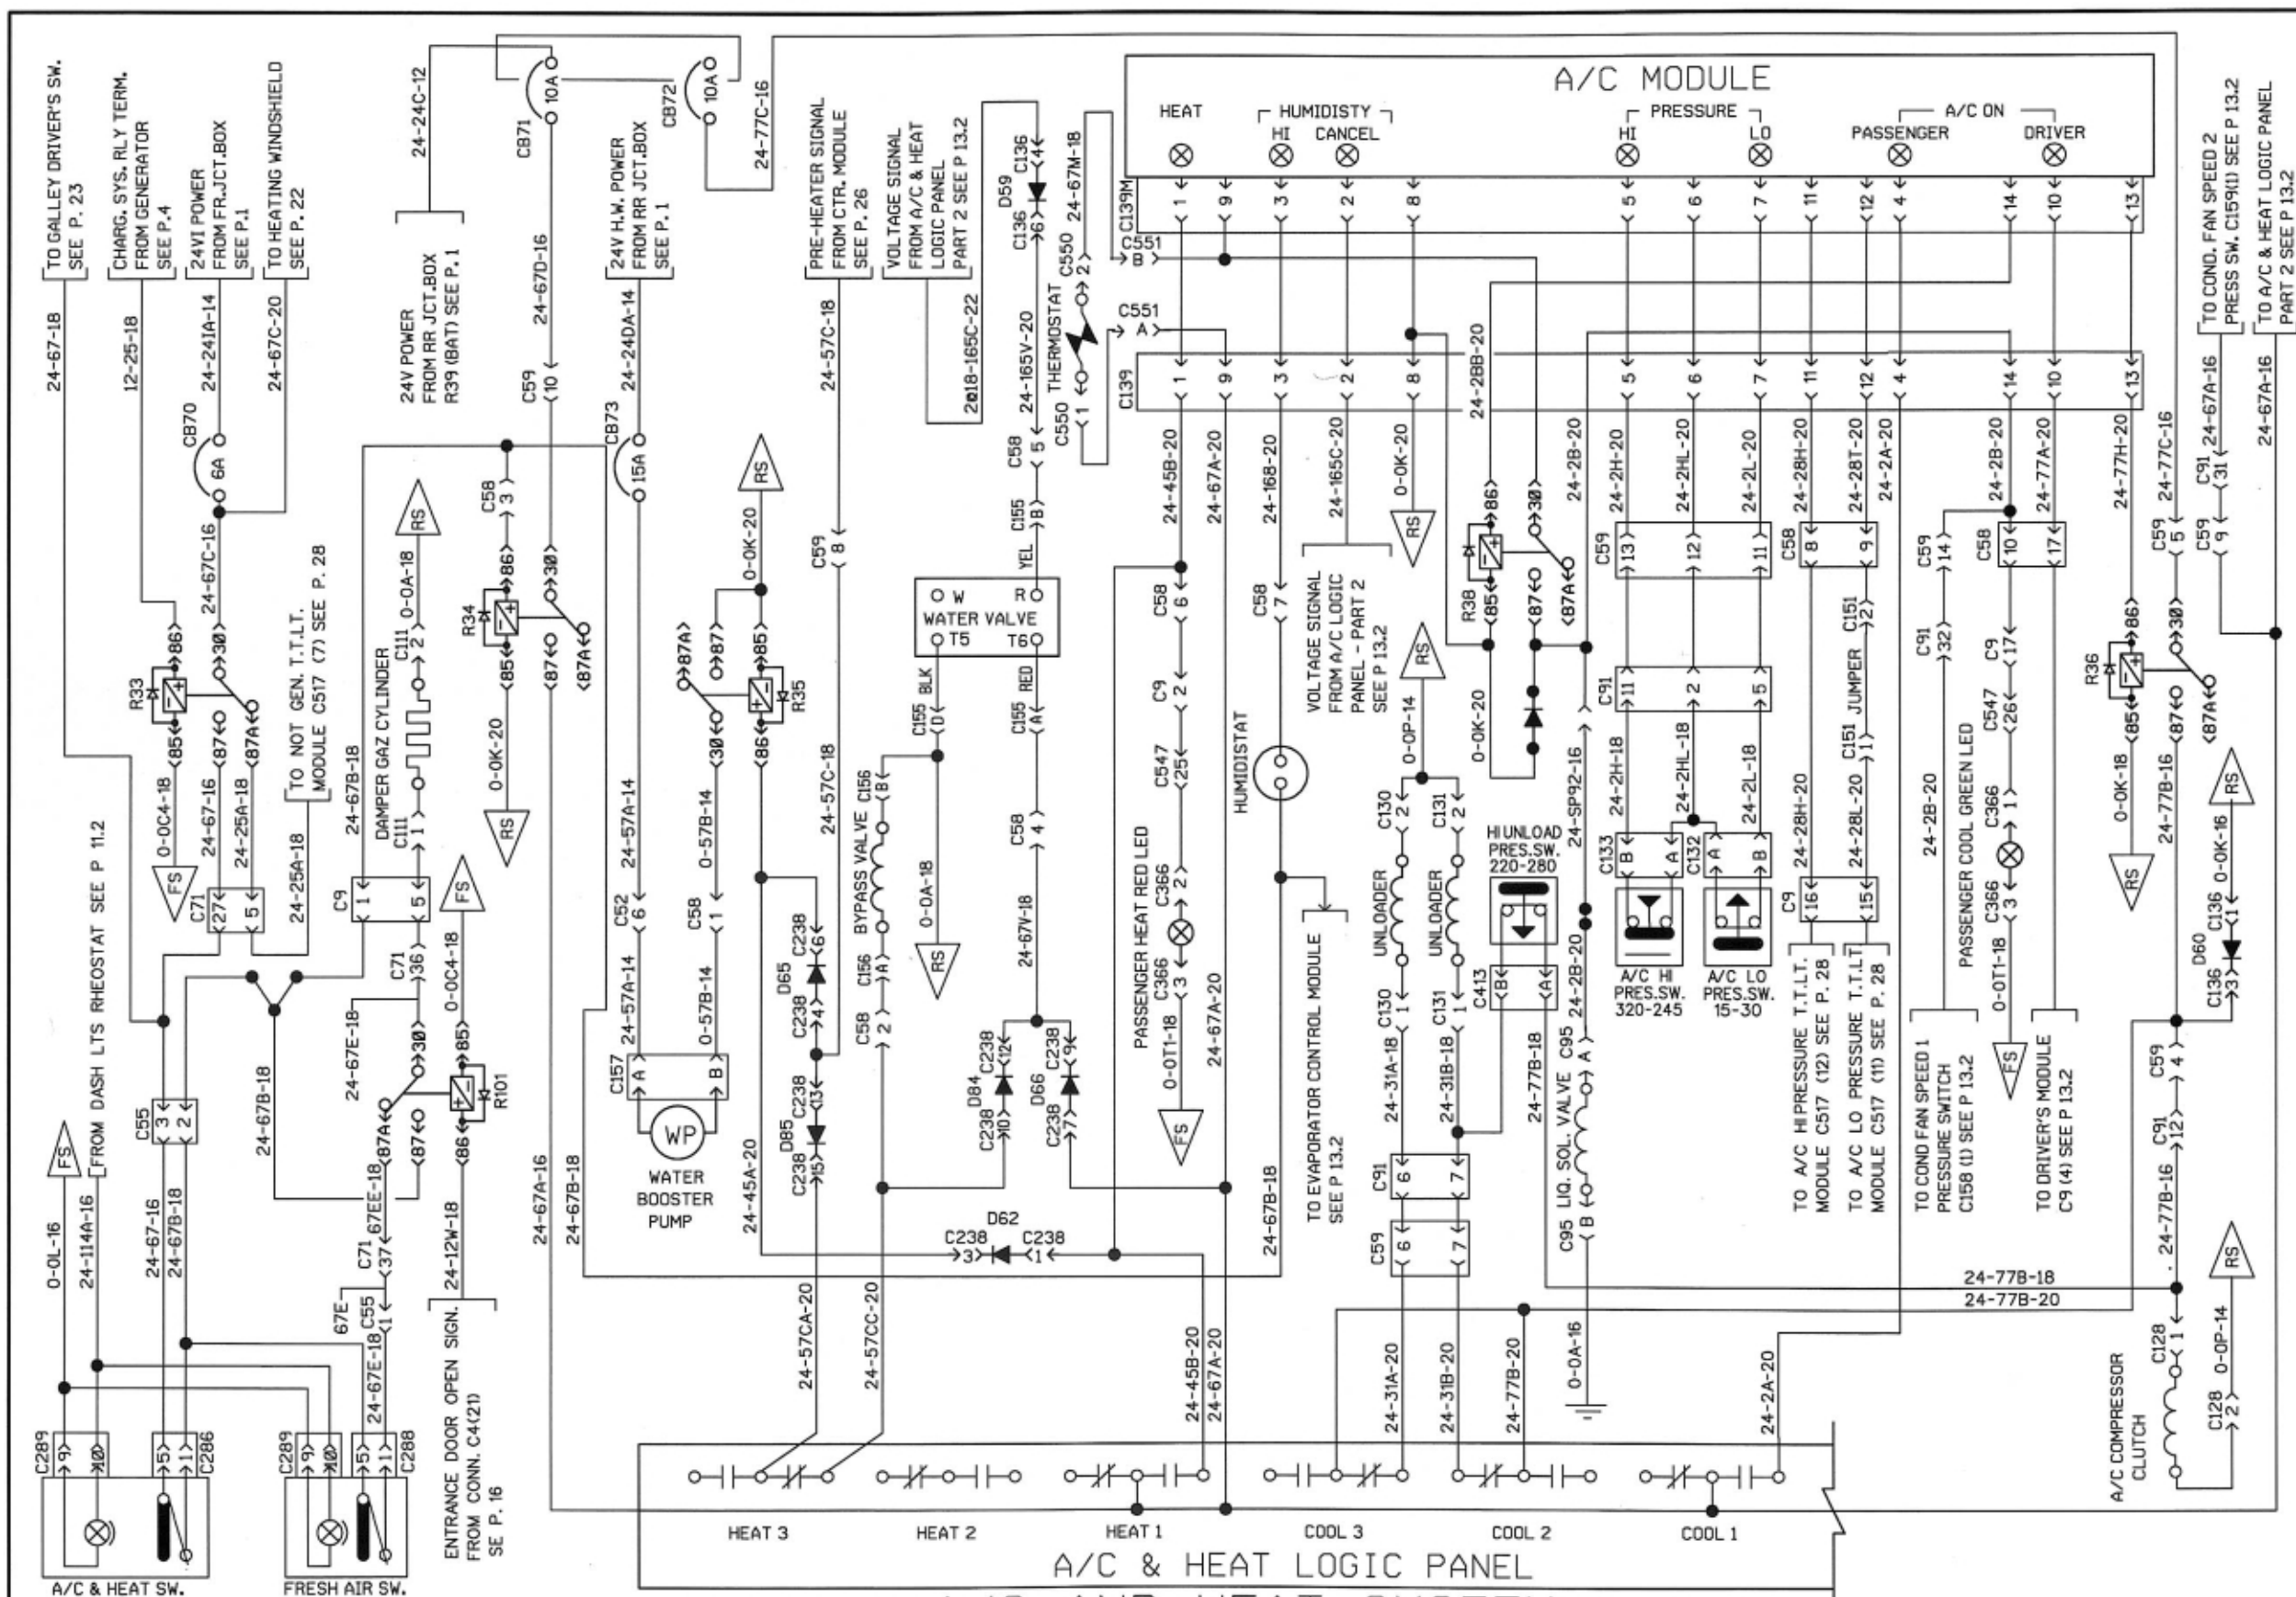


EFF. V1779 A W2204

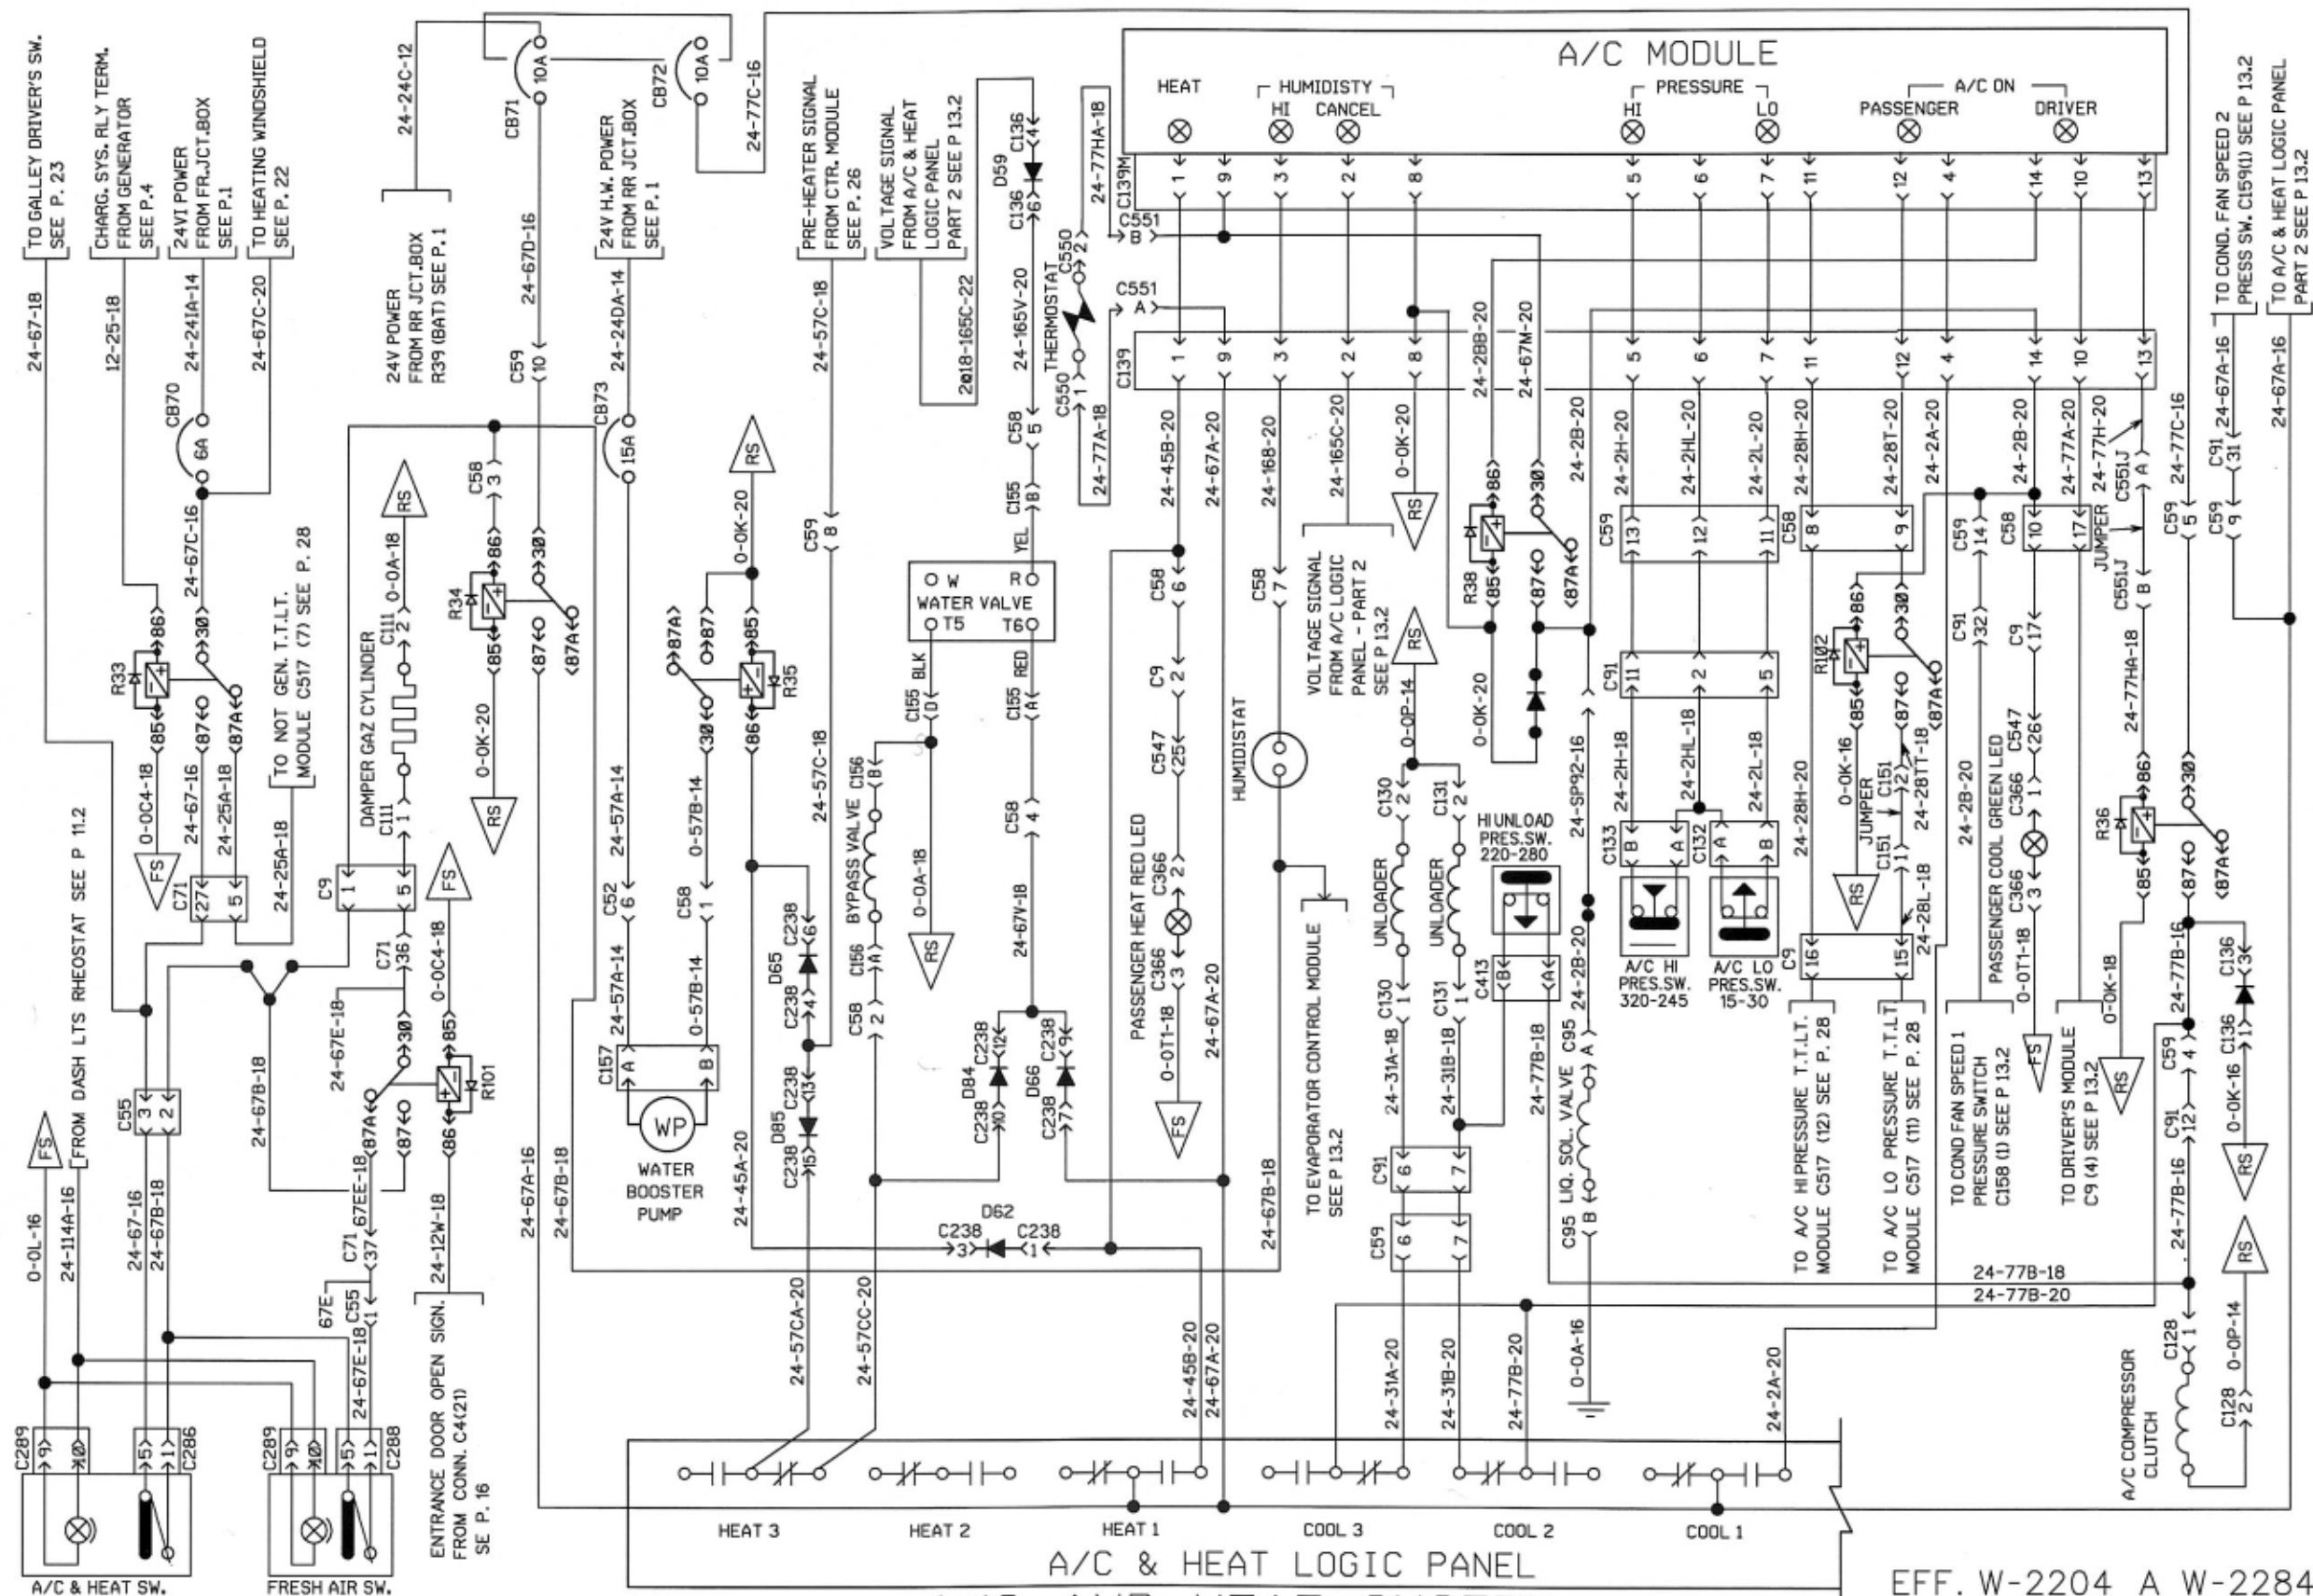

EFF. W-2204 A W-2284
EXCEPT. W-2234

 

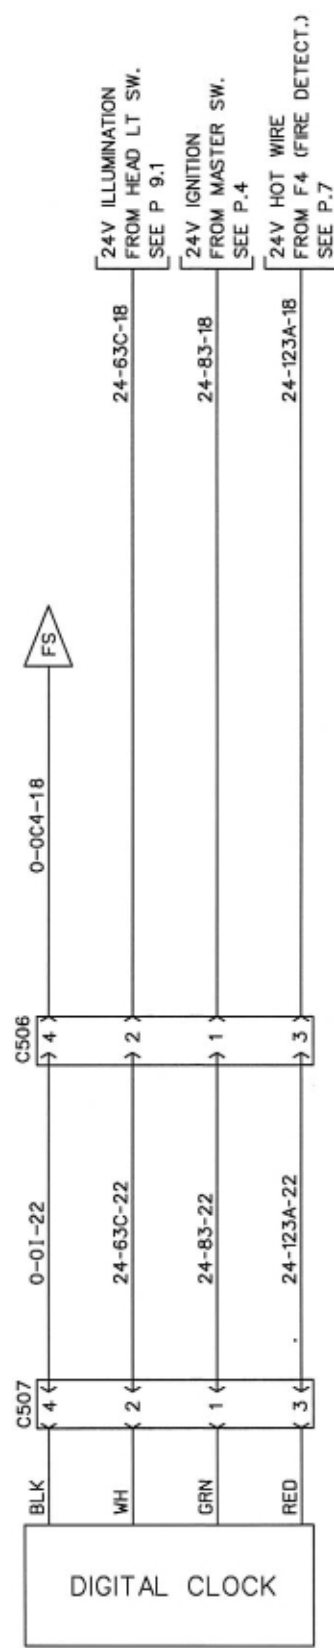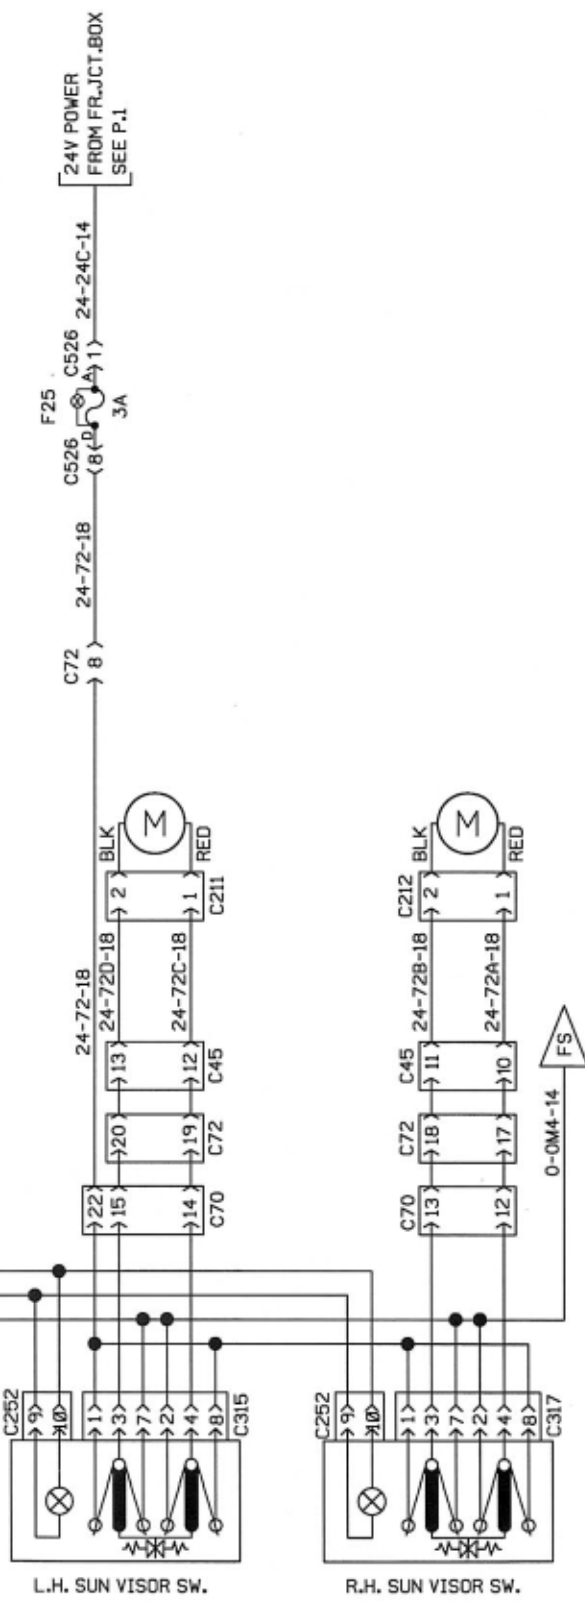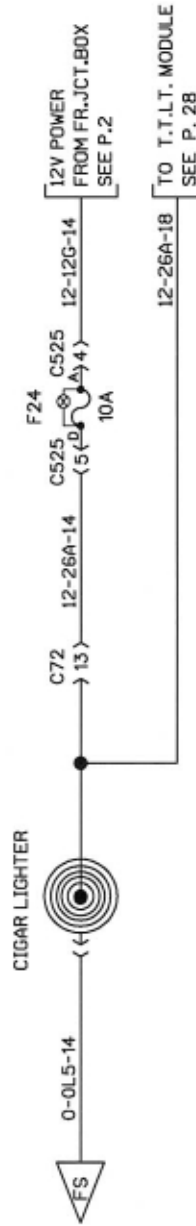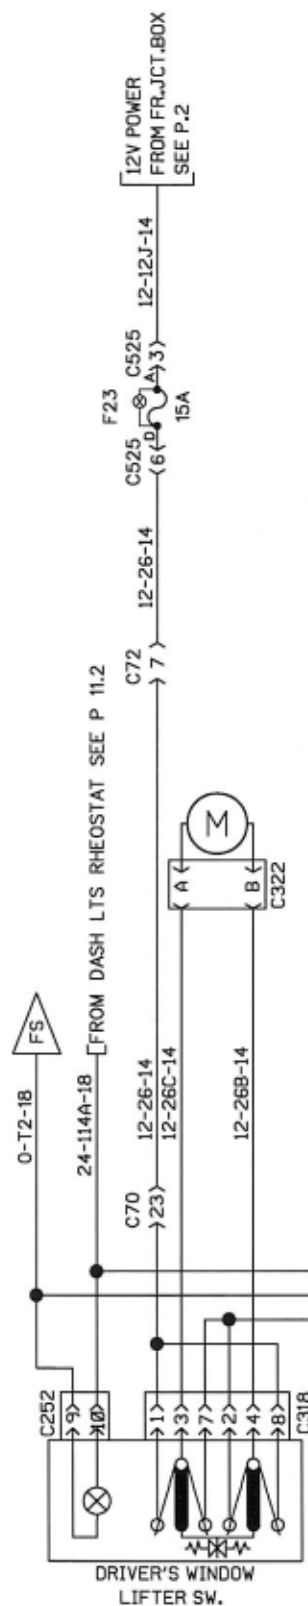 


POWER 12V OUTLET


DRIVER'S WINDOW LIFTER

CIGAR LIGHTER


SUN VISOR

 DIGITAL CLOCK



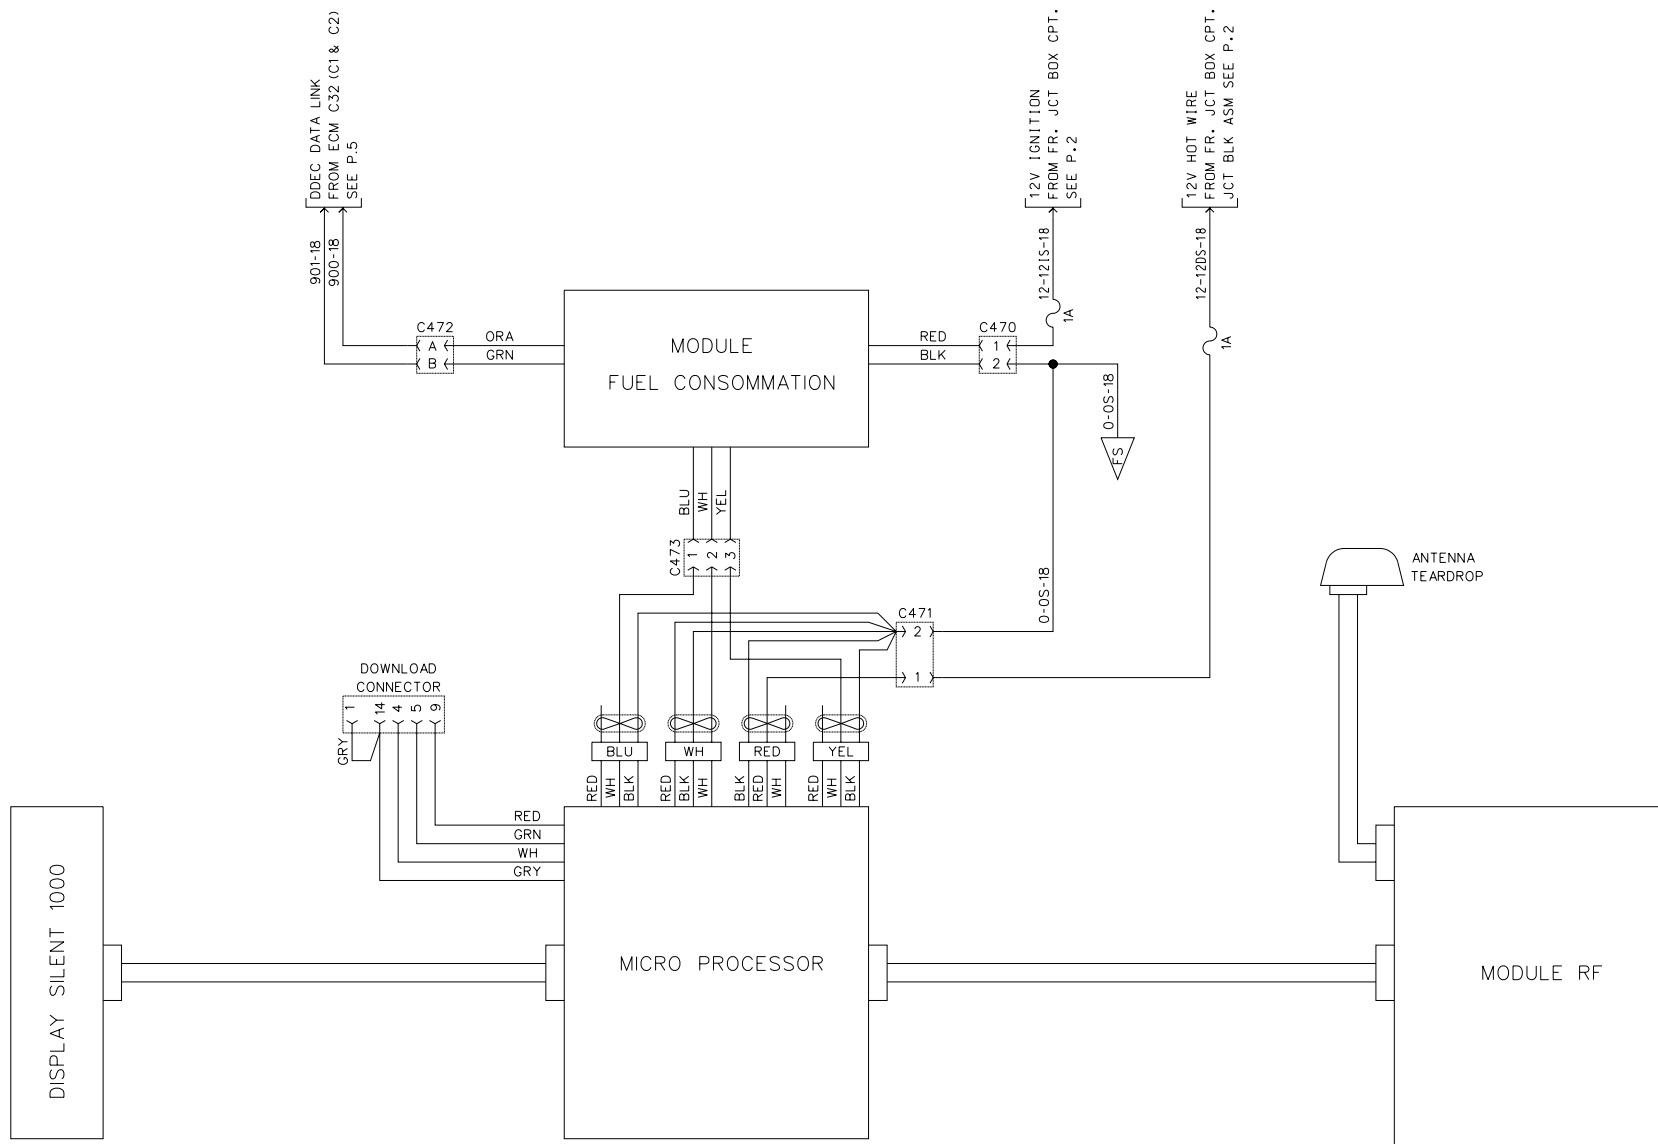


SILENT 1000

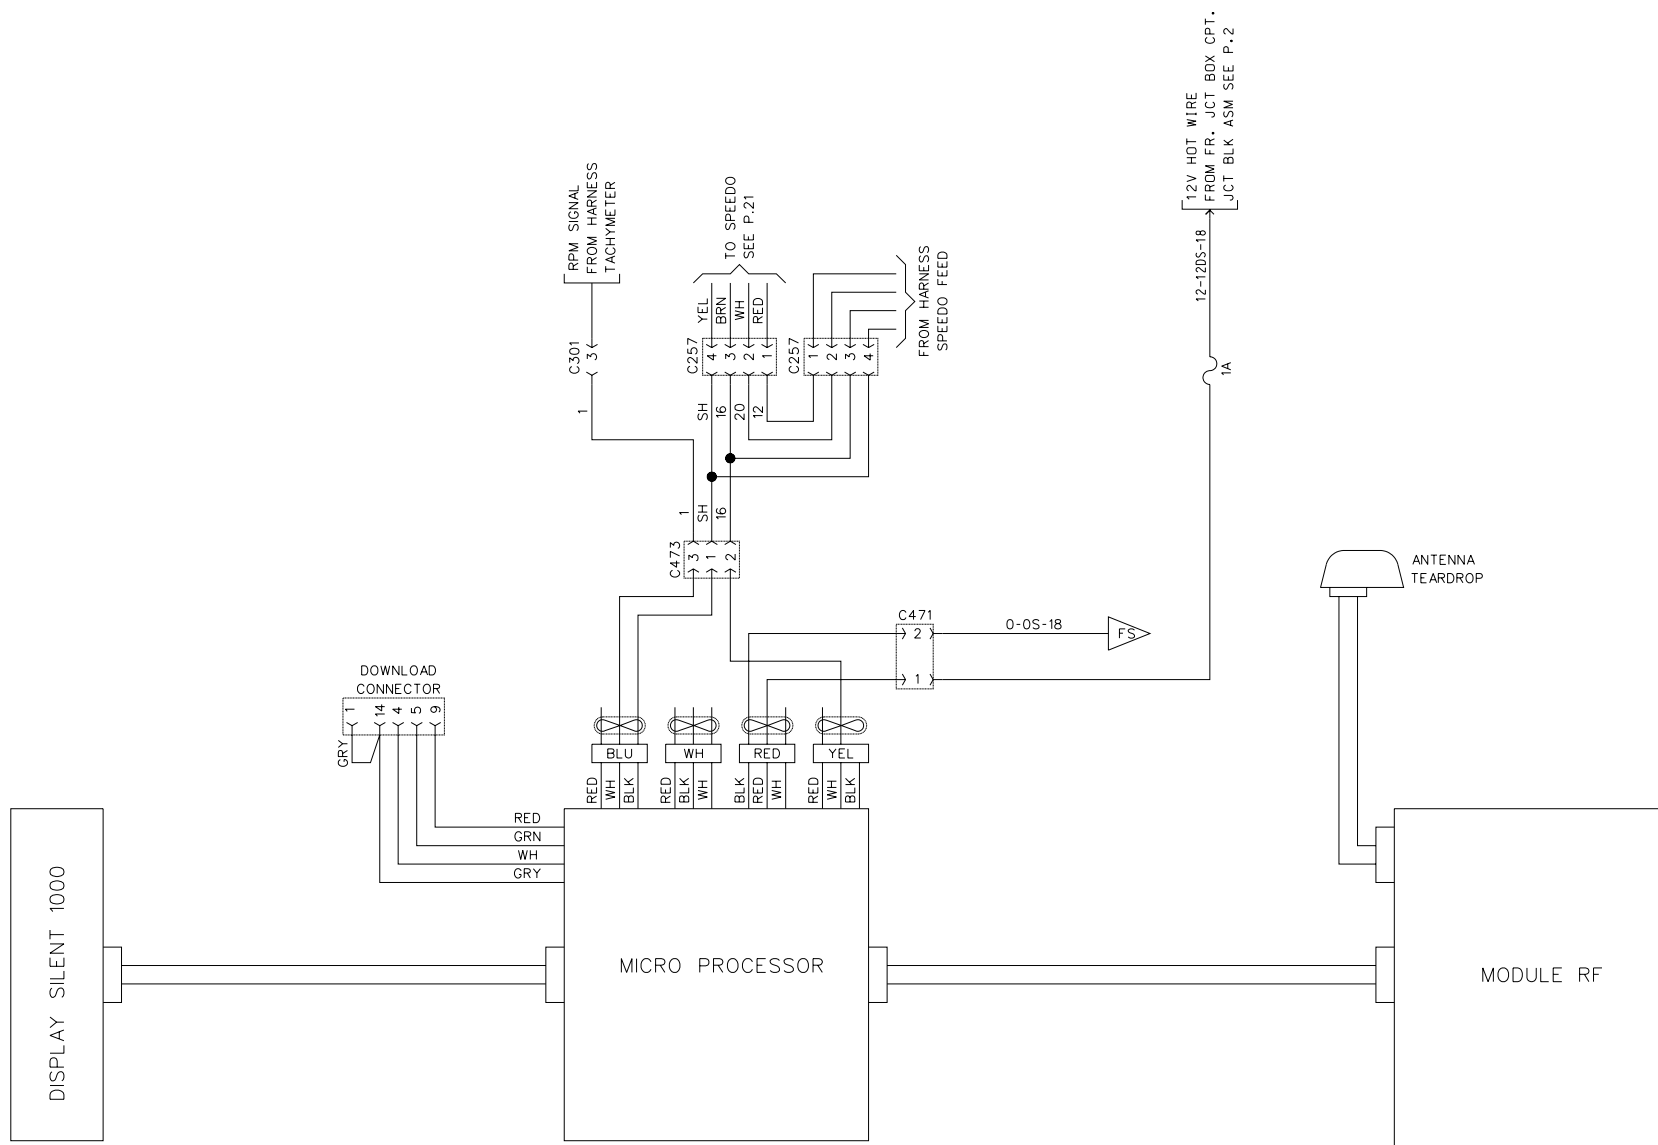


SILENT 1000 W/O FUEL CONSOMATION



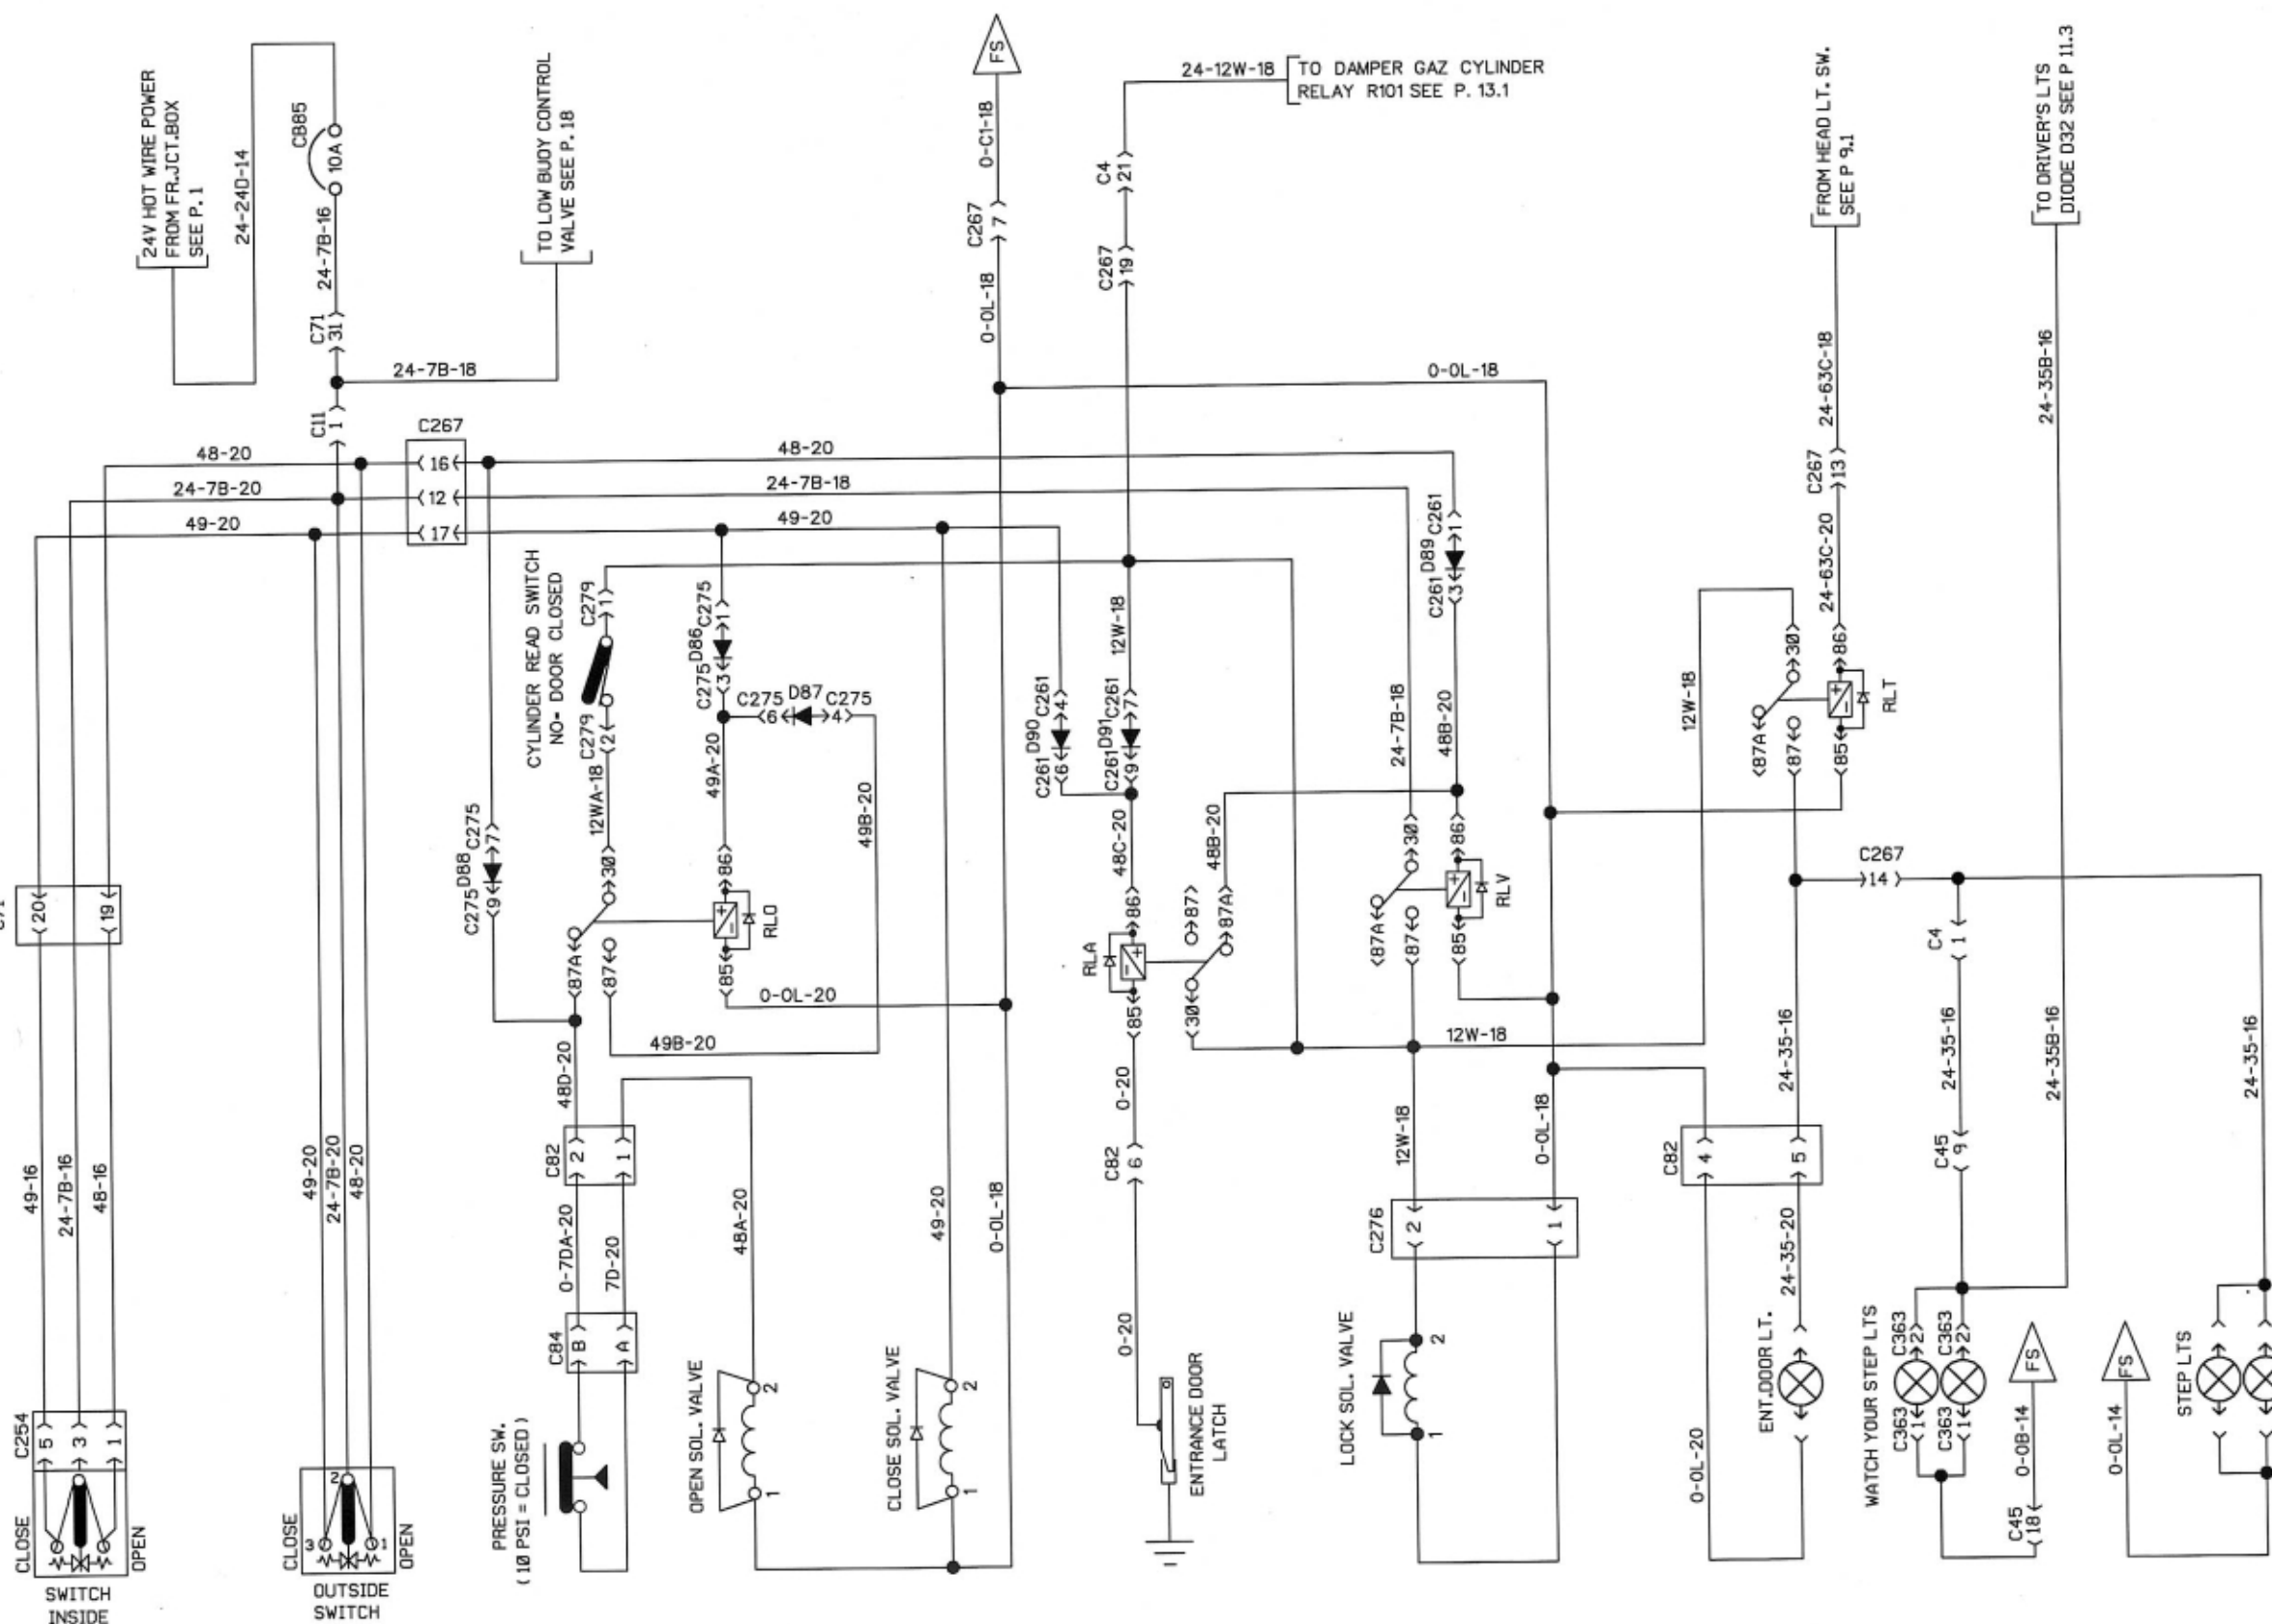


ENTRANCE DOOR (SEDAN)

 10 Gram.






HI BUOY	LOW BUOY
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
10	10
11	11
12	12
13	13
14	14
15	15
16	16
17	17
18	18
19	19
20	20
21	21
22	22
23	23
24	24
25	25
26	26
27	27
28	28
29	29
30	30
31	31
32	32
33	33
34	34
35	35
36	36
37	37
38	38
39	39
40	40
41	41
42	42
43	43
44	44
45	45
46	46
47	47
48	48
49	49
50	50
51	51
52	52
53	53
54	54
55	55
56	56
57	57
58	58
59	59
60	60
61	61
62	62
63	63
64	64
65	65
66	66
67	67
68	68
69	69
70	70
71	71
72	72
73	73
74	74
75	75
76	76
77	77
78	78
79	79
80	80
81	81
82	82
83	83
84	84
85	85
86	86
87	87
88	88
89	89
90	90
91	91
92	92
93	93
94	94
95	95
96	96
97	97
98	98
99	99
100	100

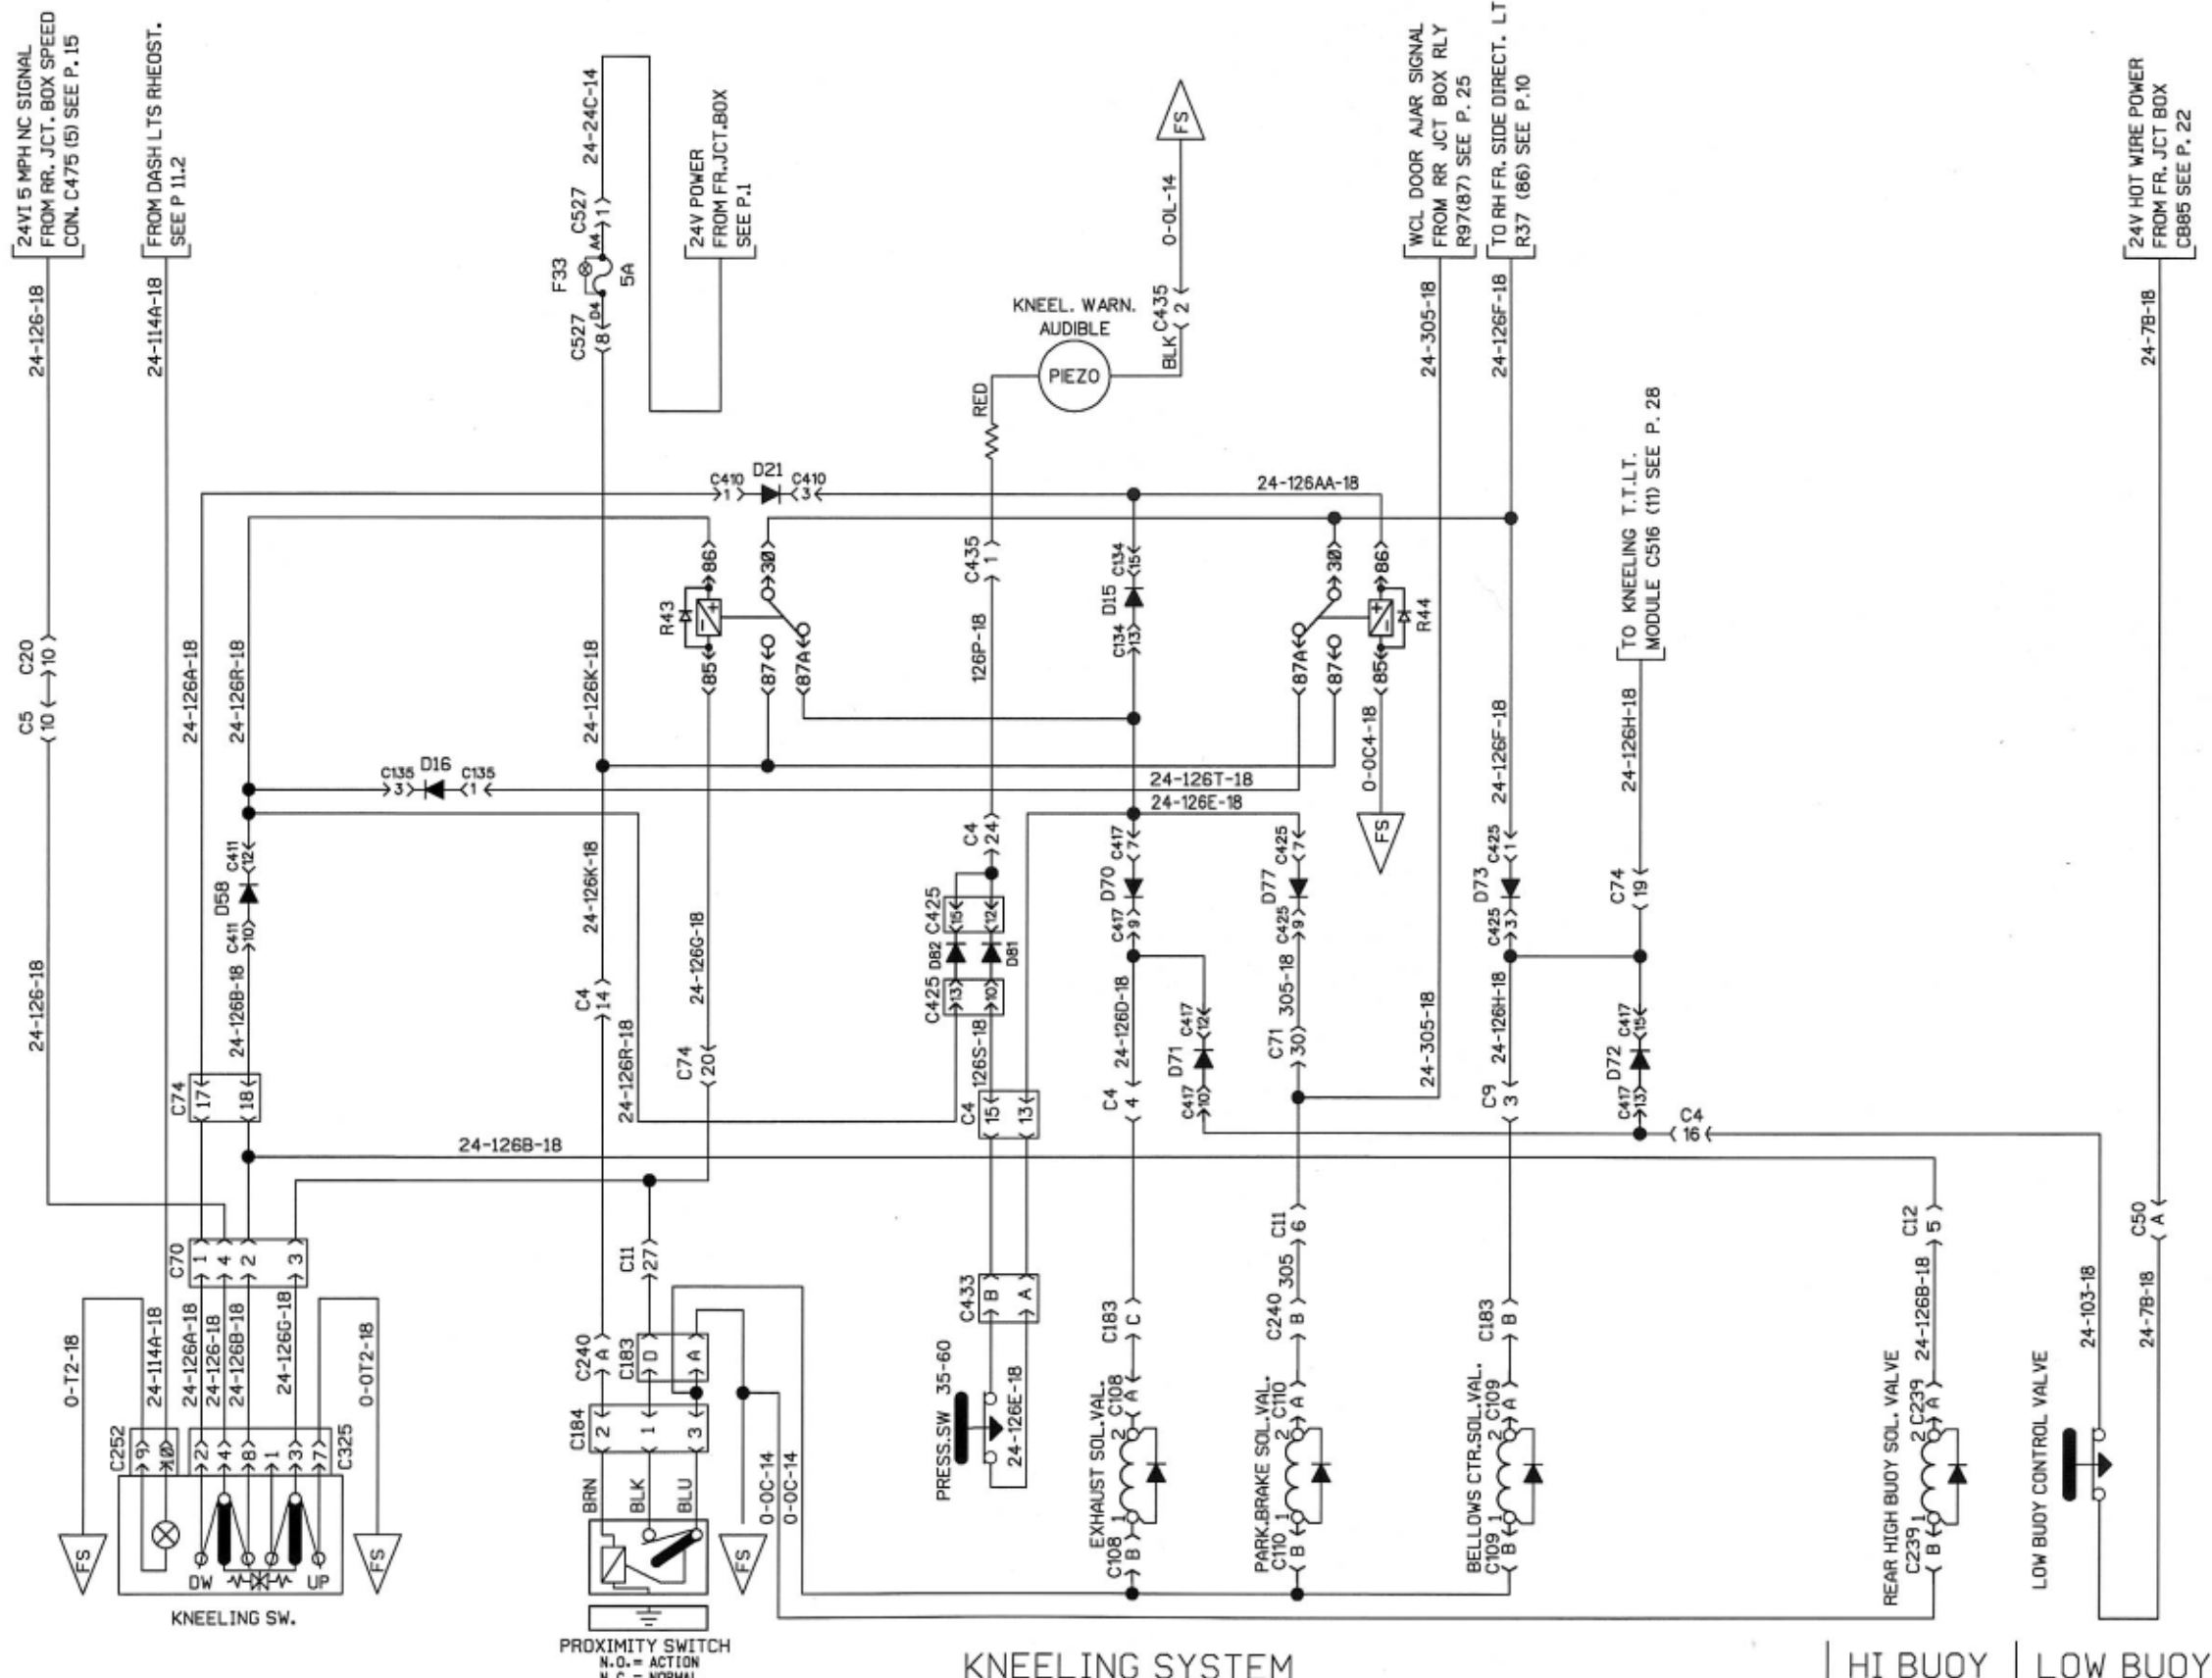







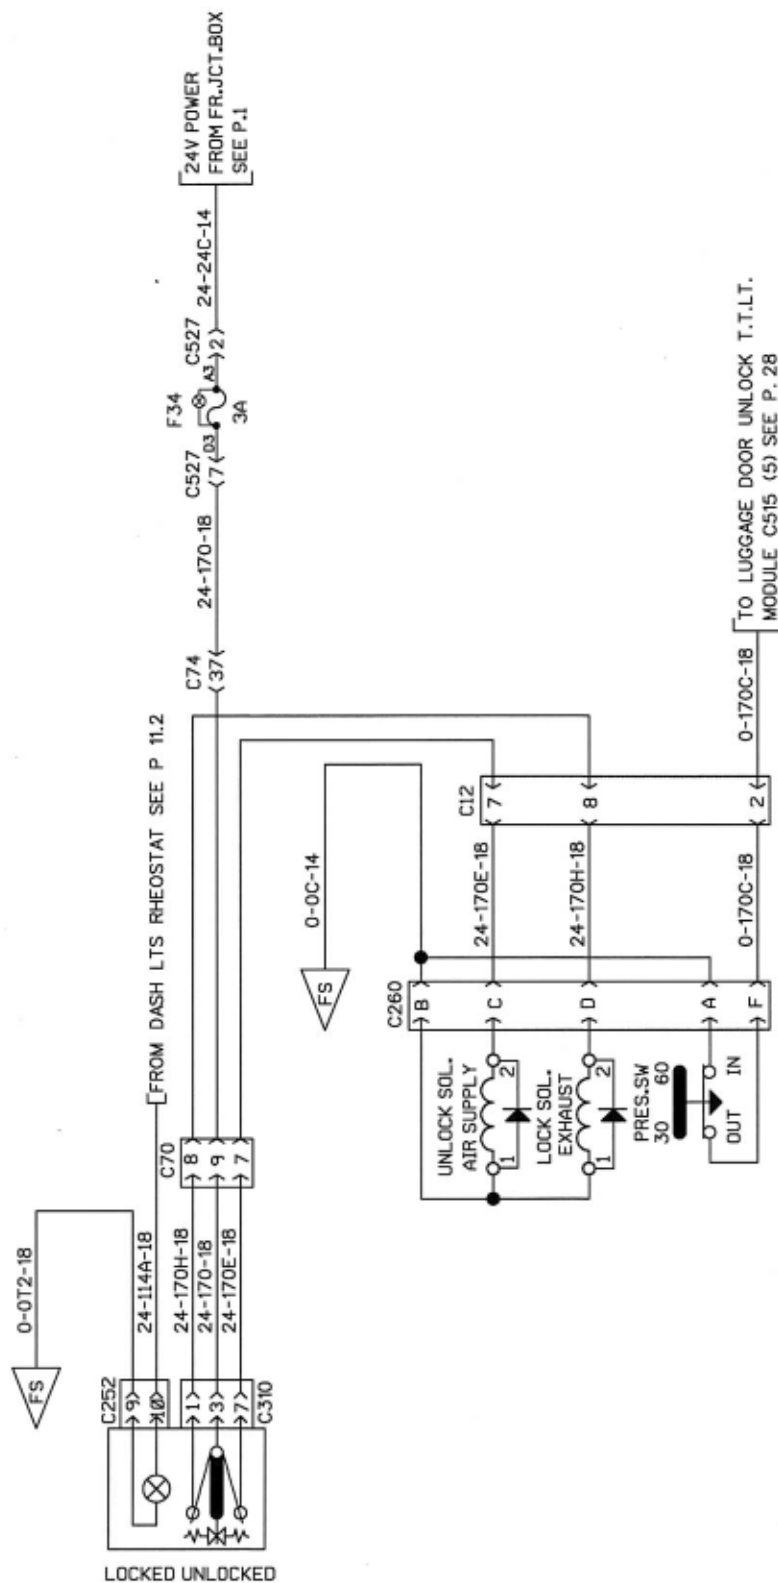


LUGGAGE DOOR LOCK

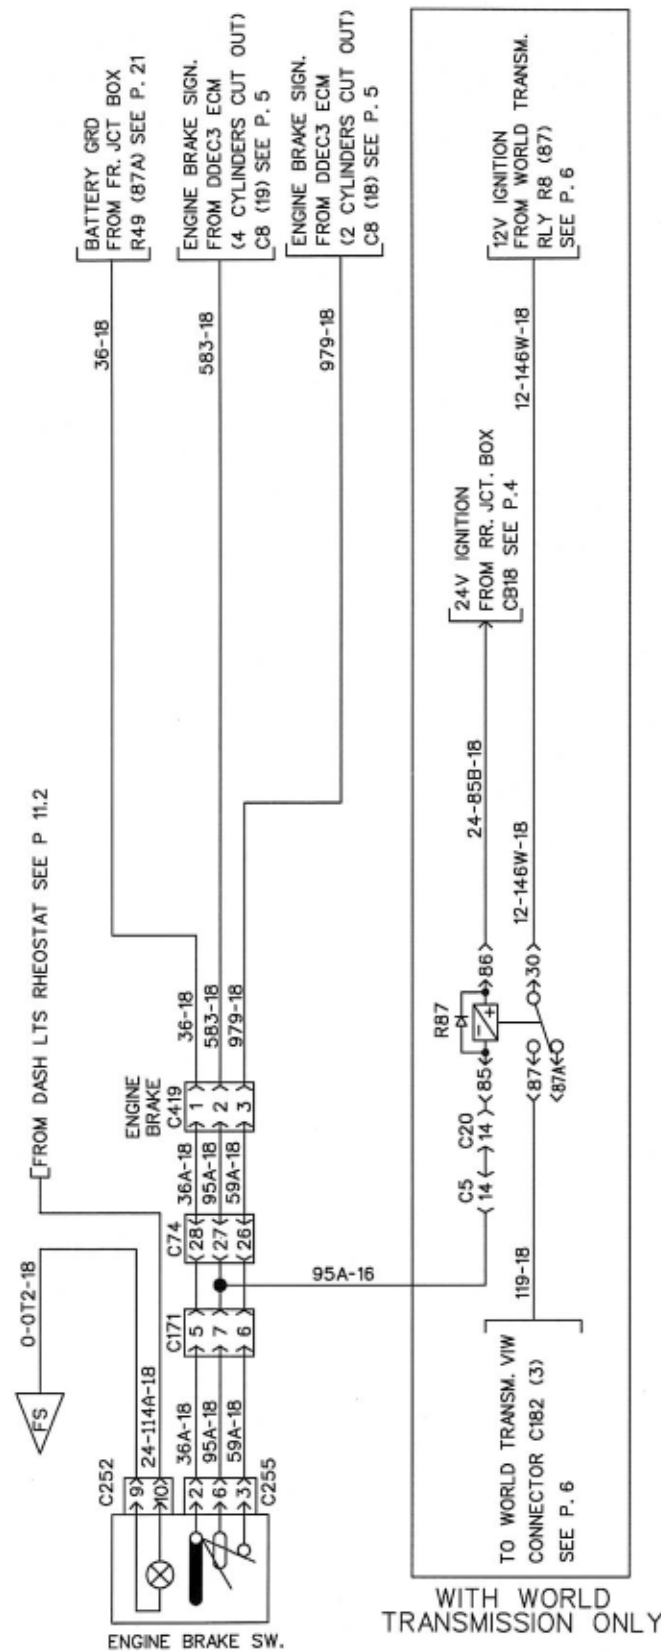


ENGINE BRAKE SYSTEM

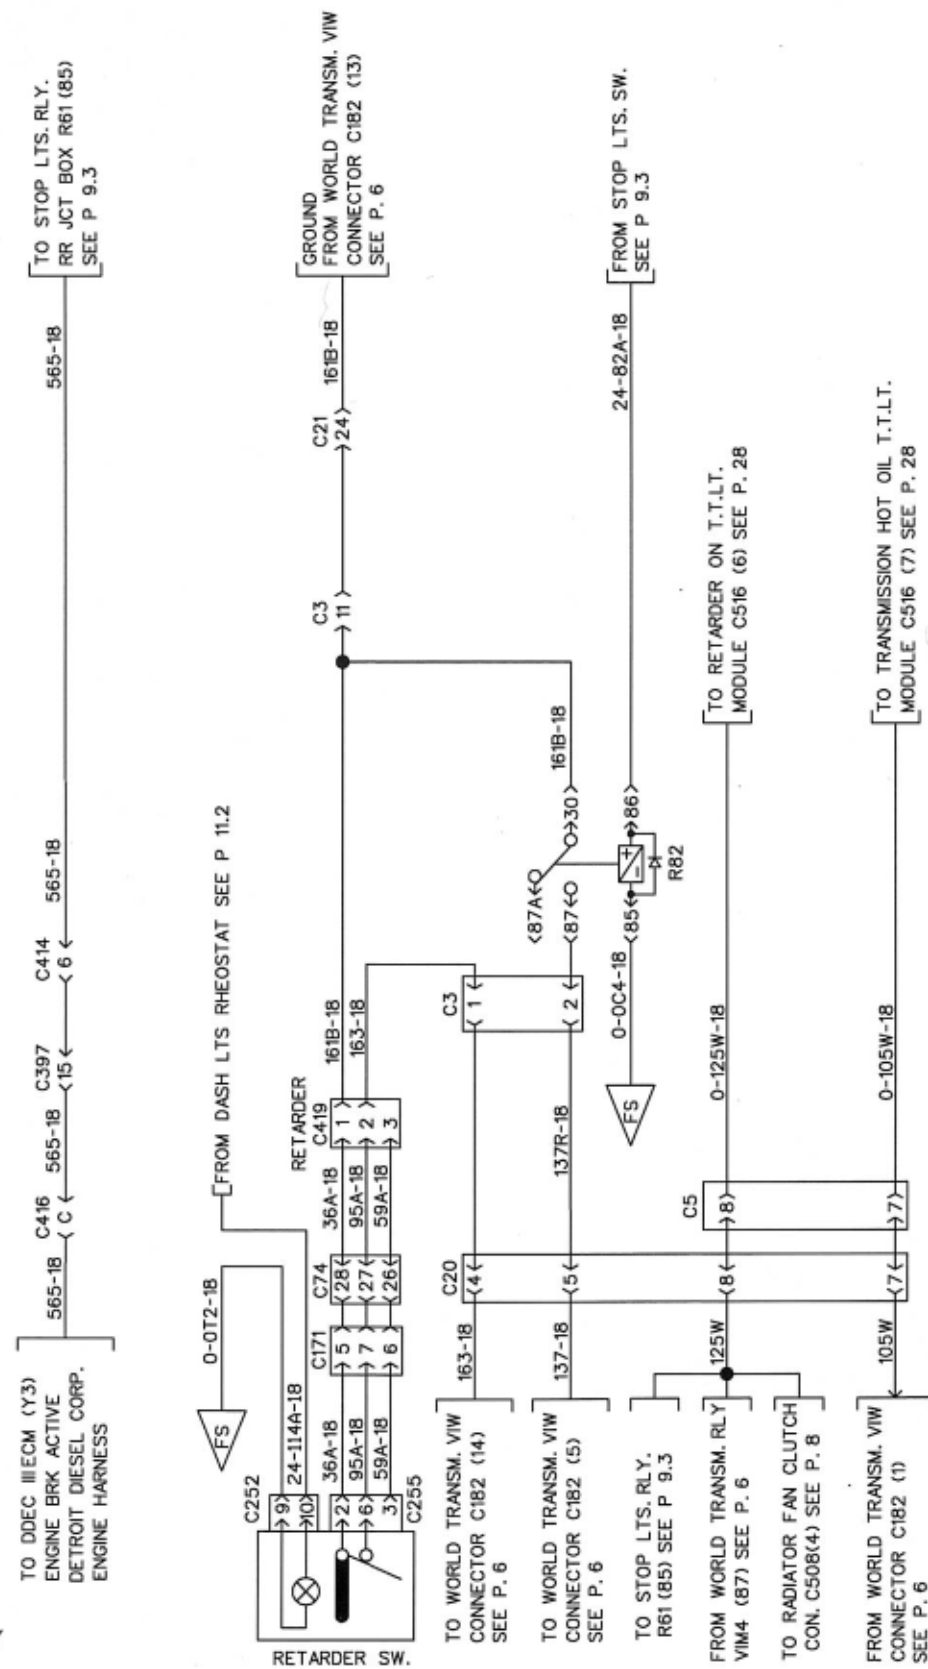


RETARDER SYSTEM
(WORLD TRANSMISSION)

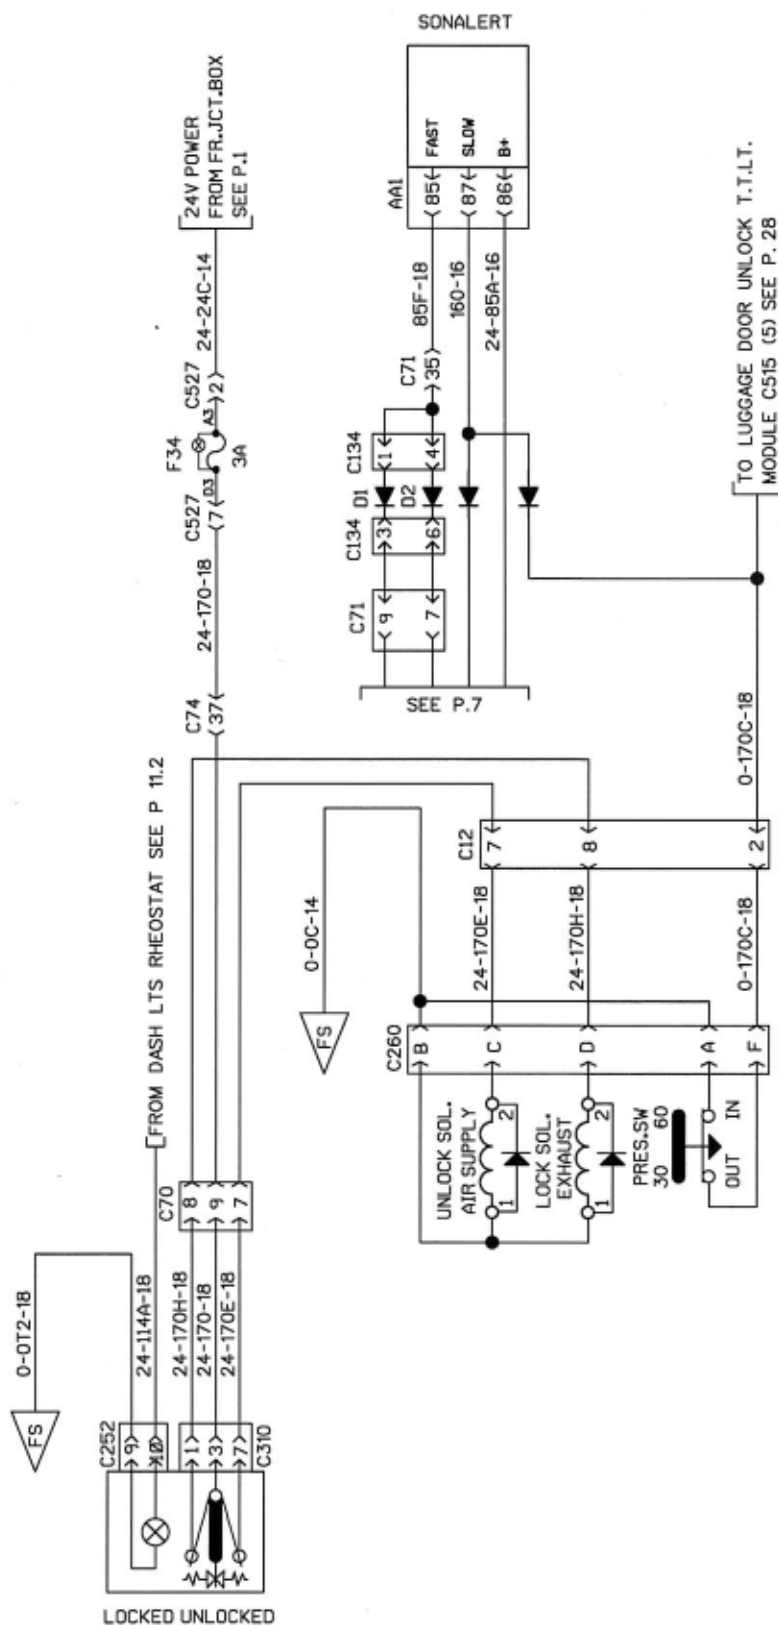


LUGGAGE DOOR LOCK

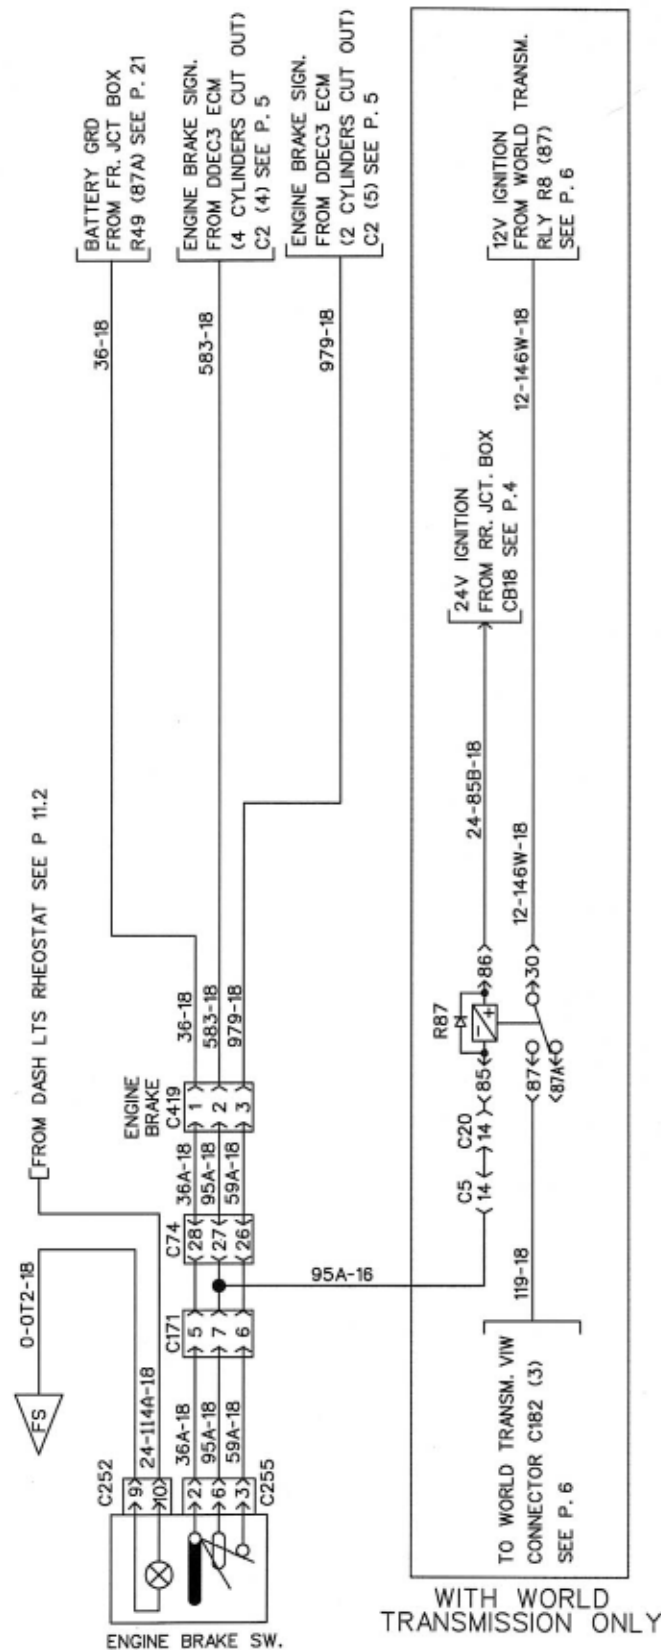


TO HAT RACK
SPEAKERS
H341 & H345
SEE PAGE 20.

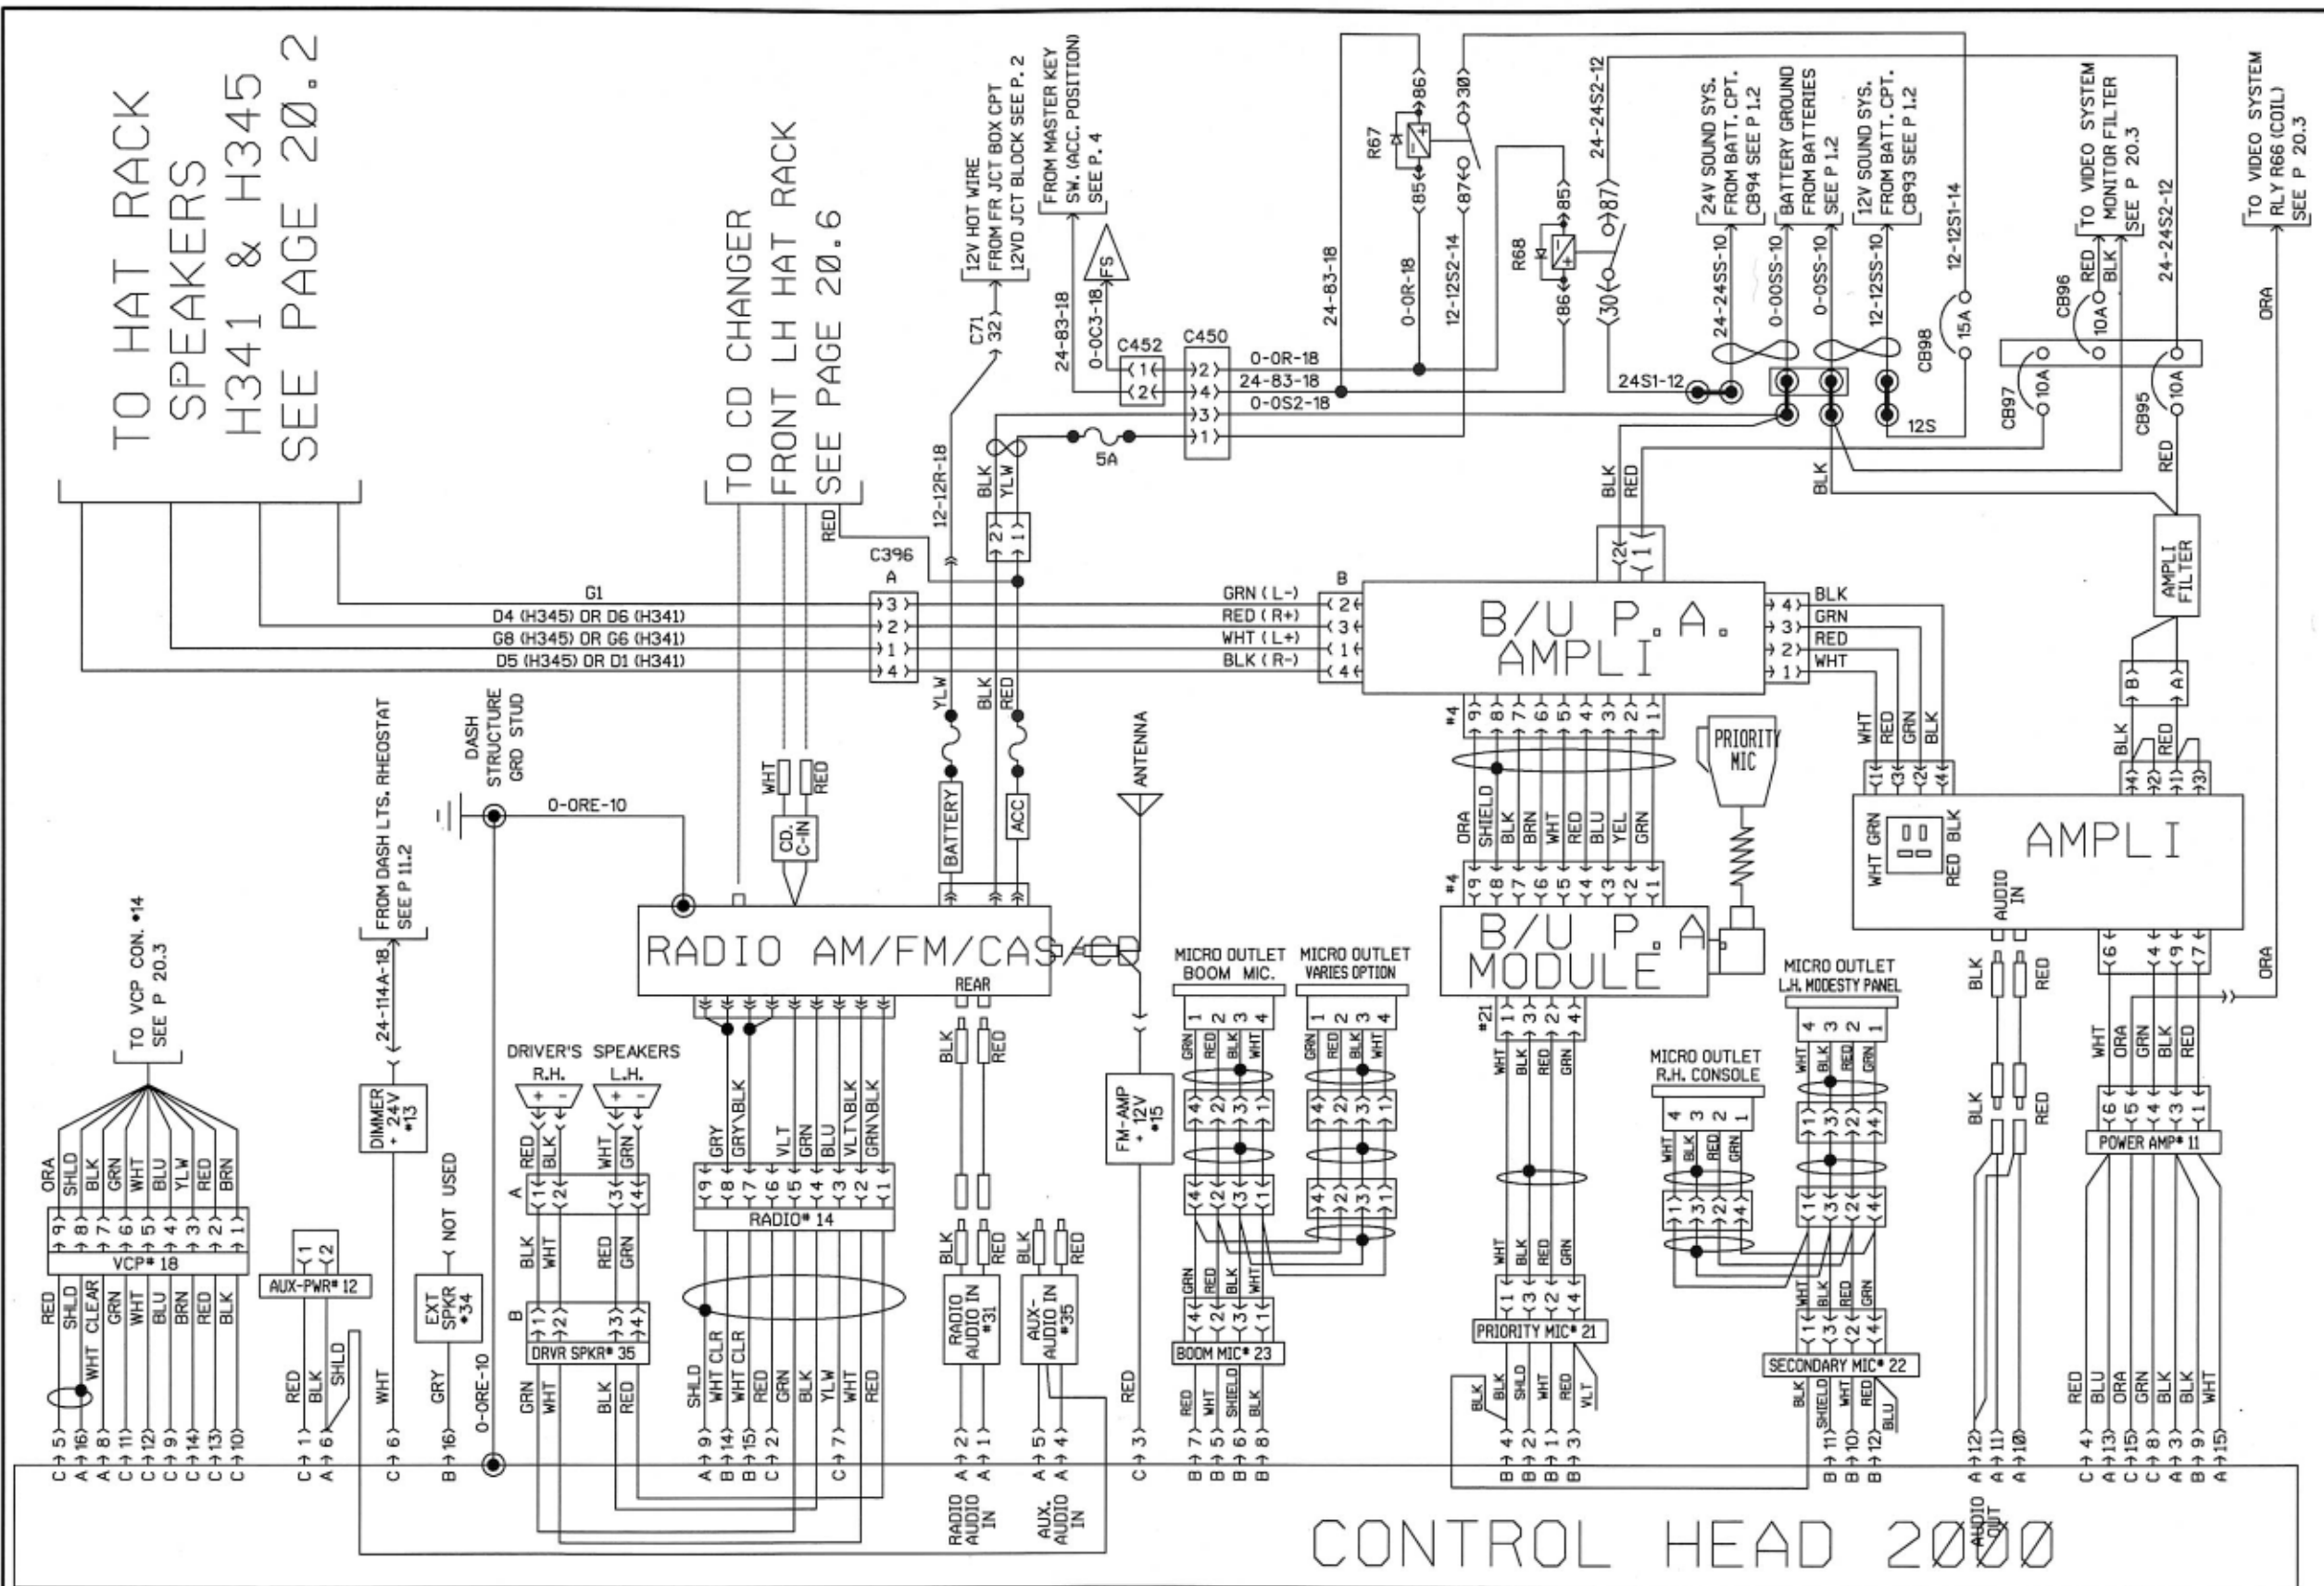



SOUND SYSTEM H3-45

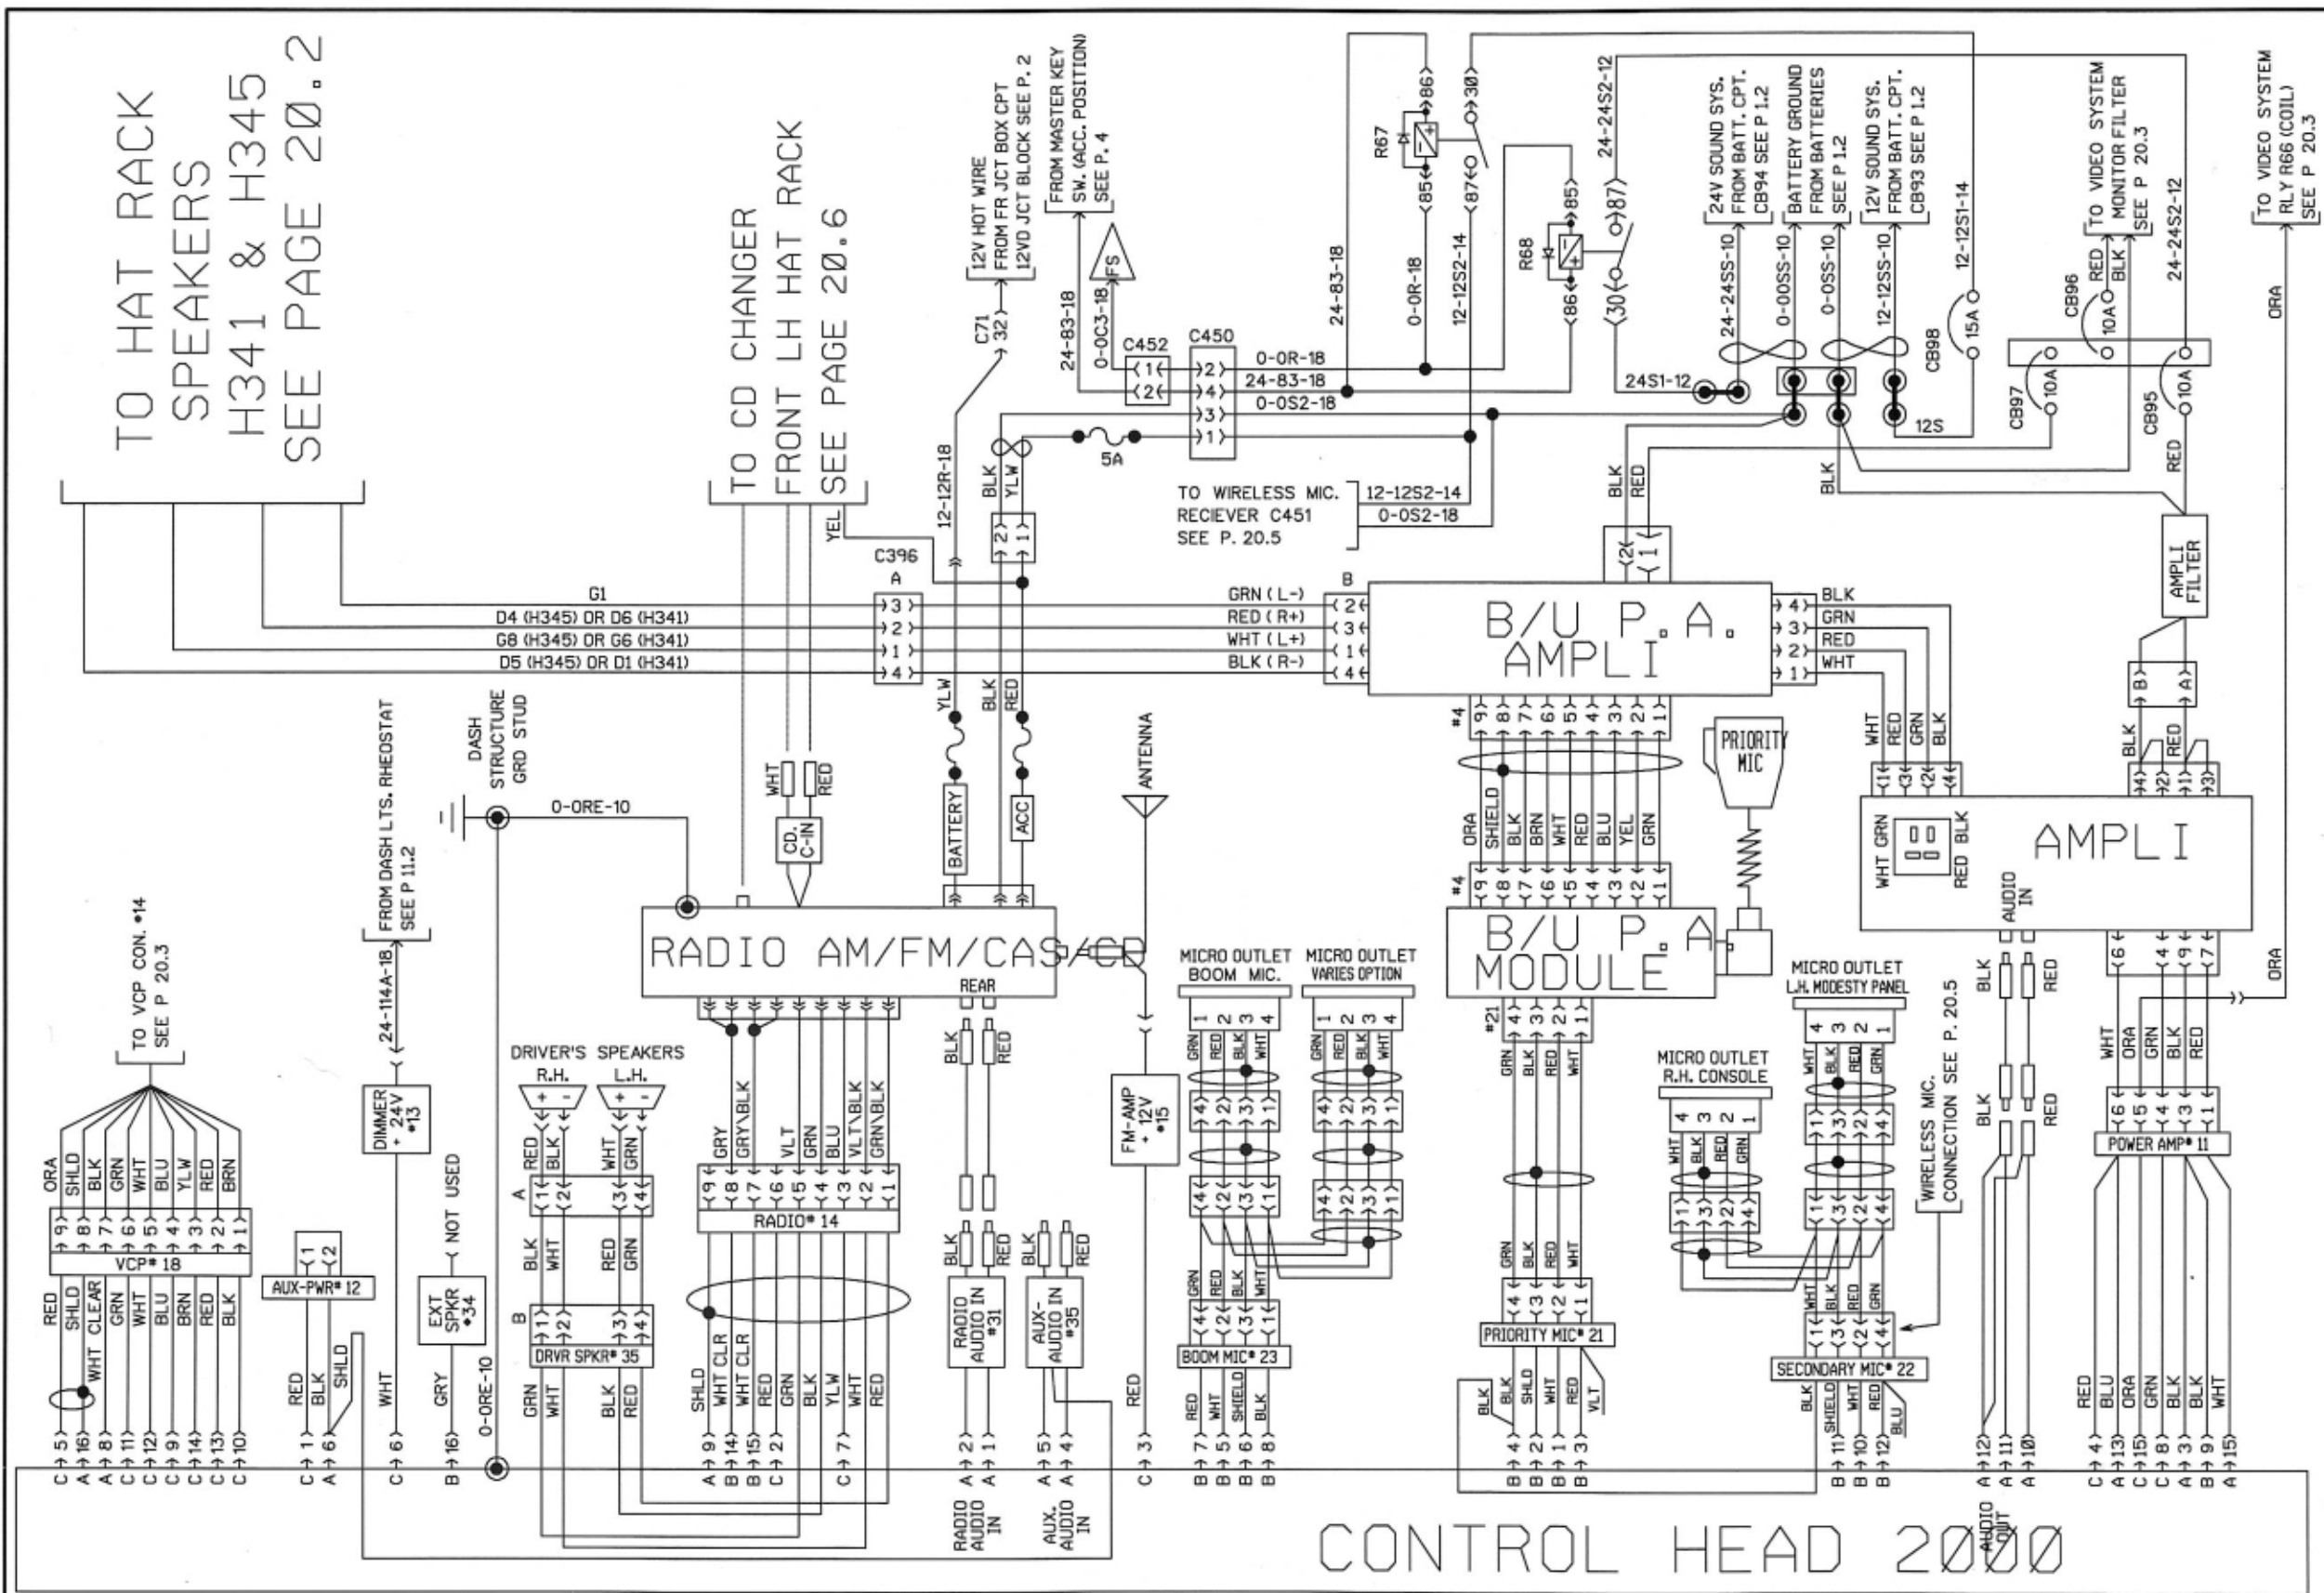

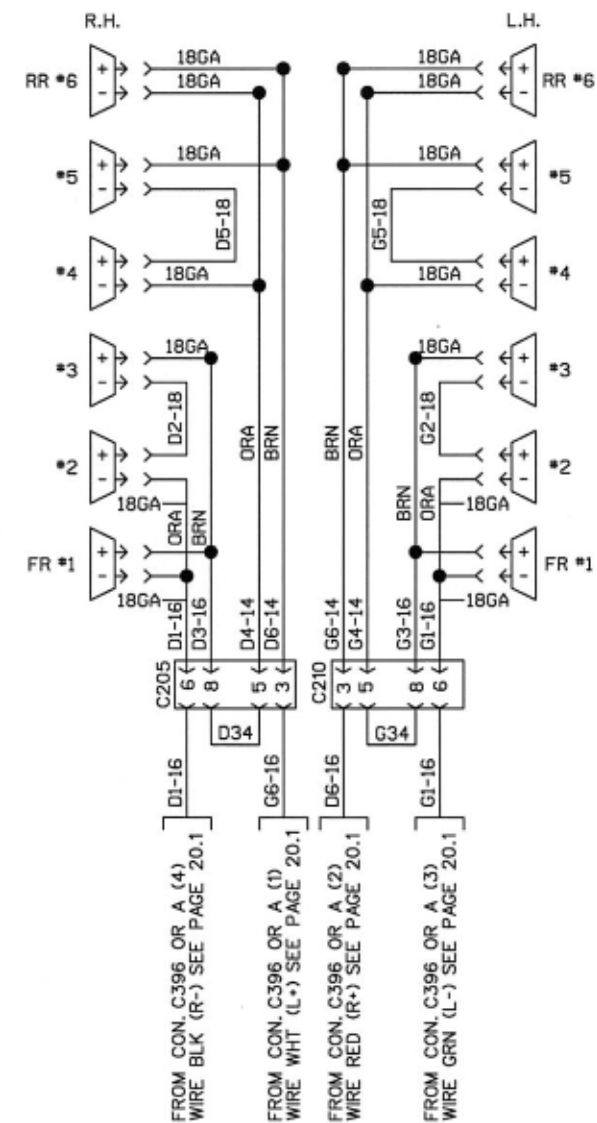


REVISION 00

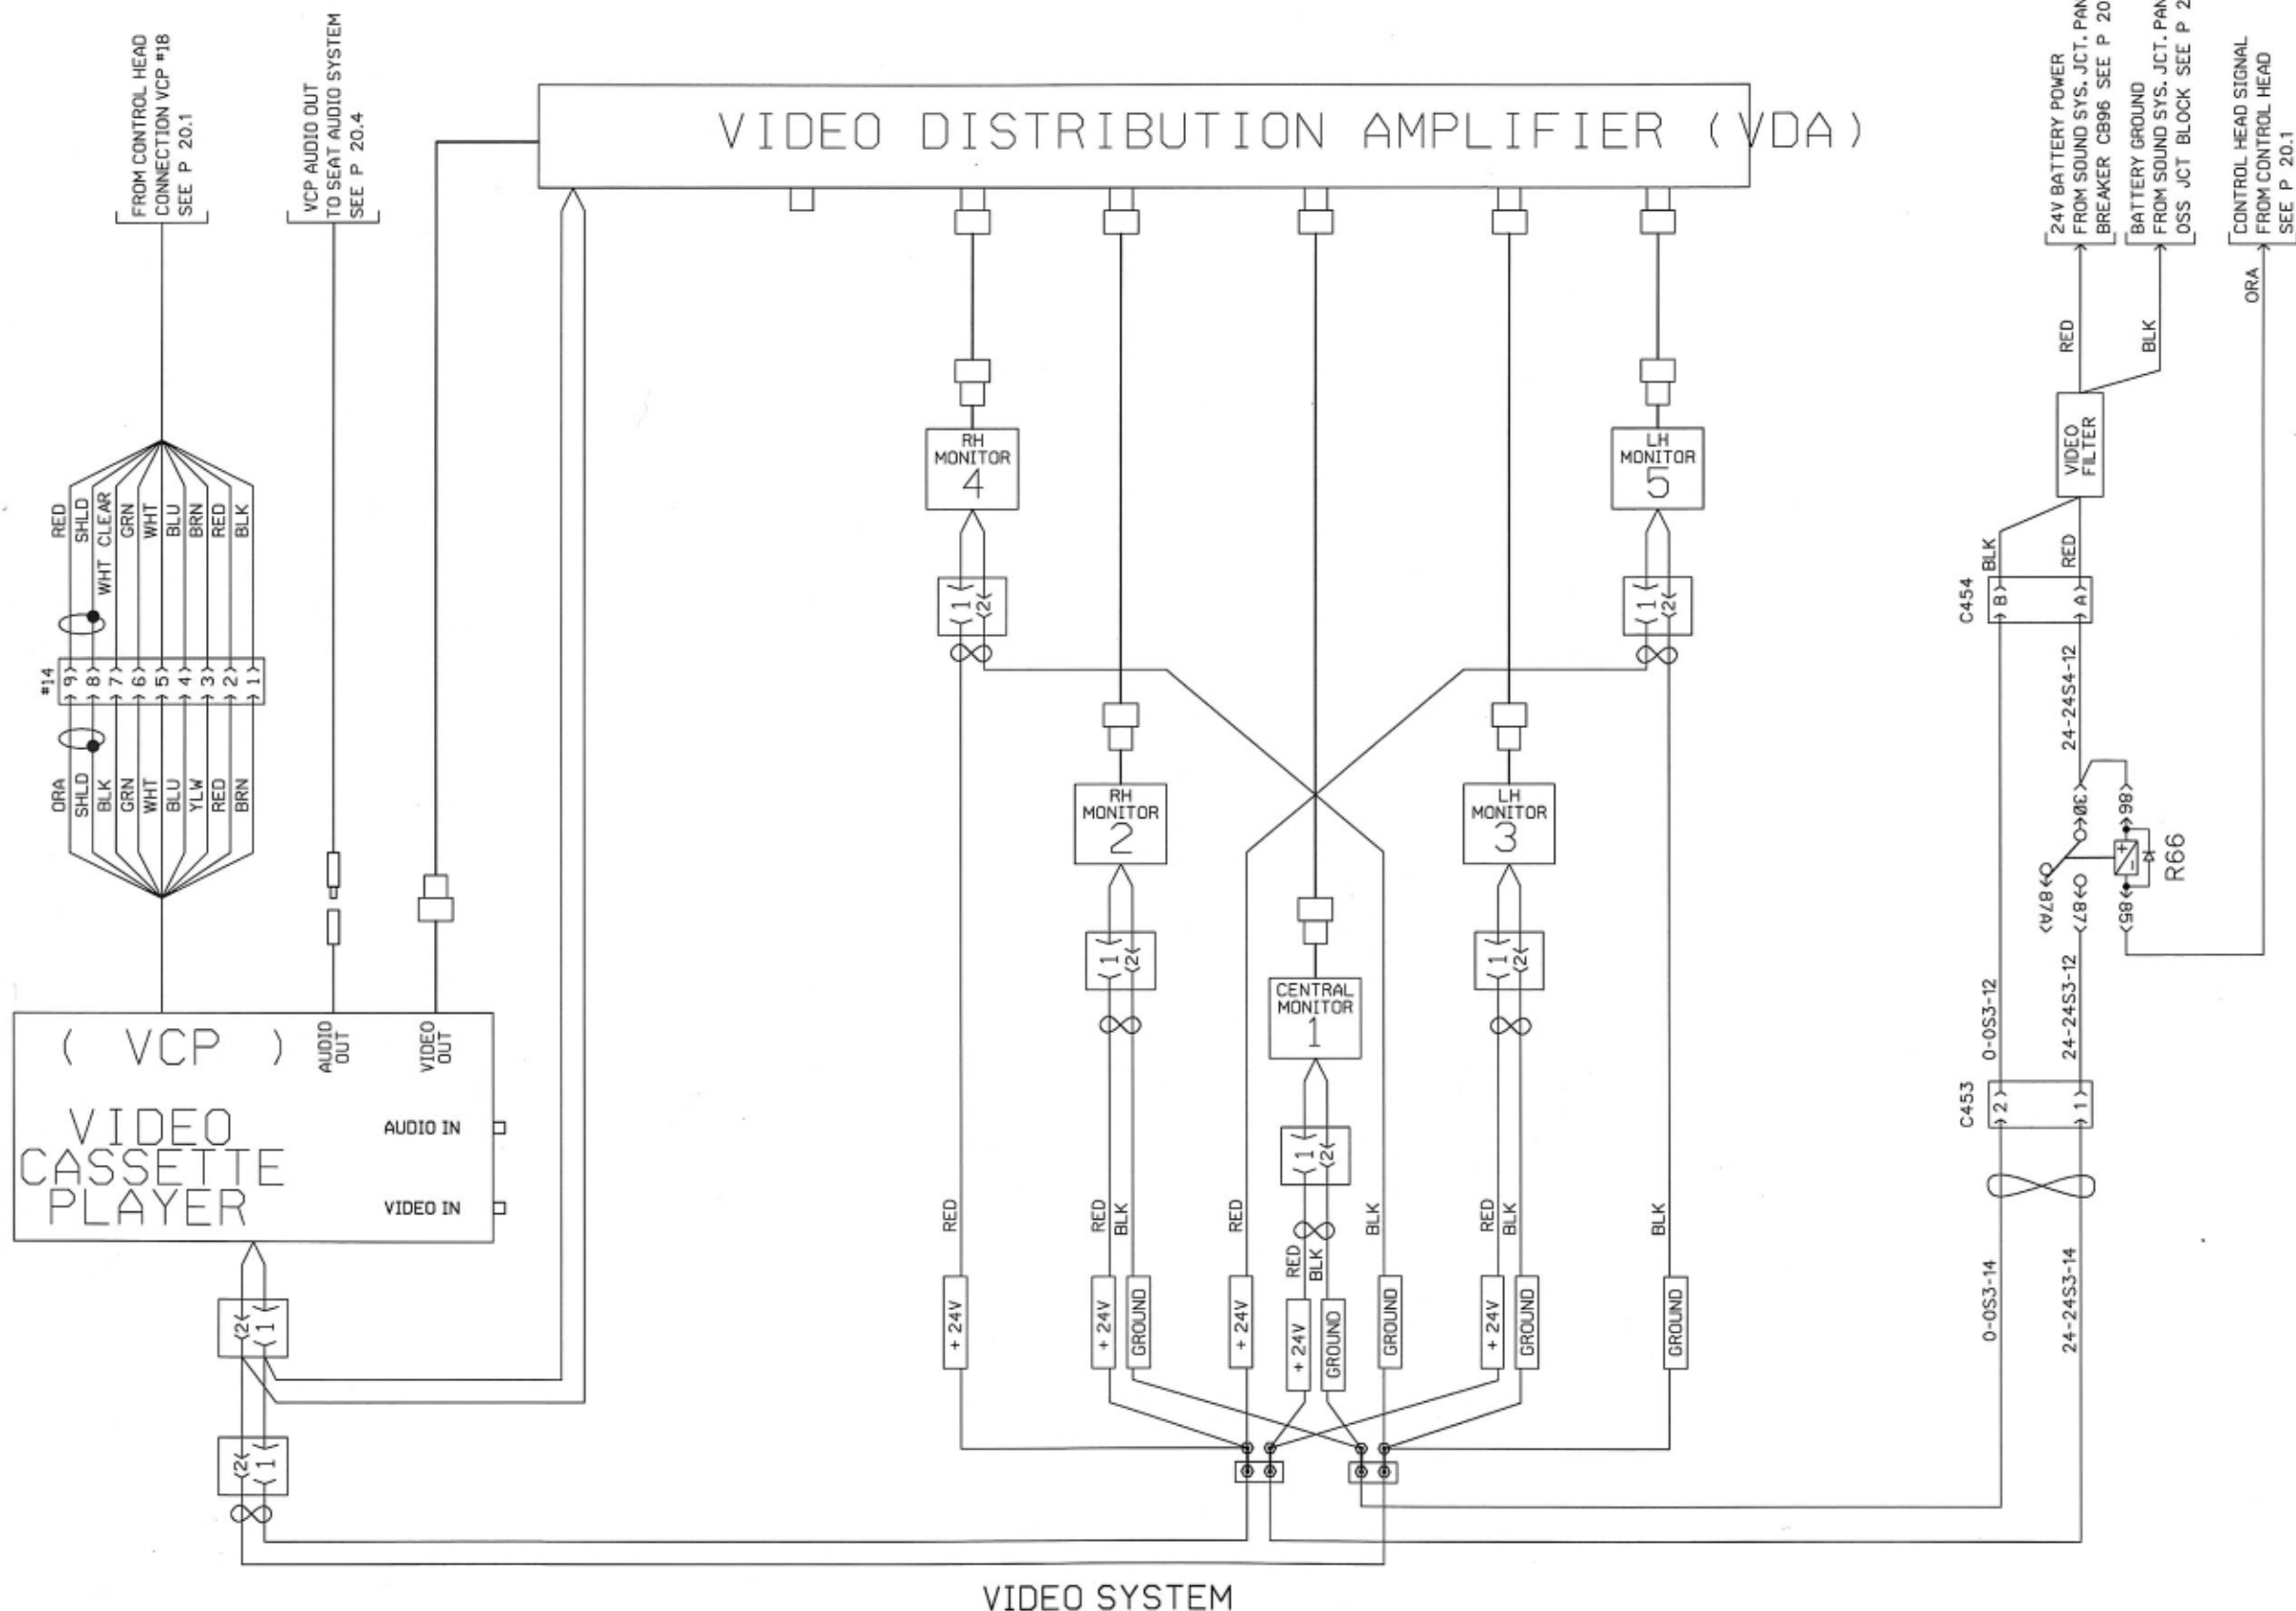

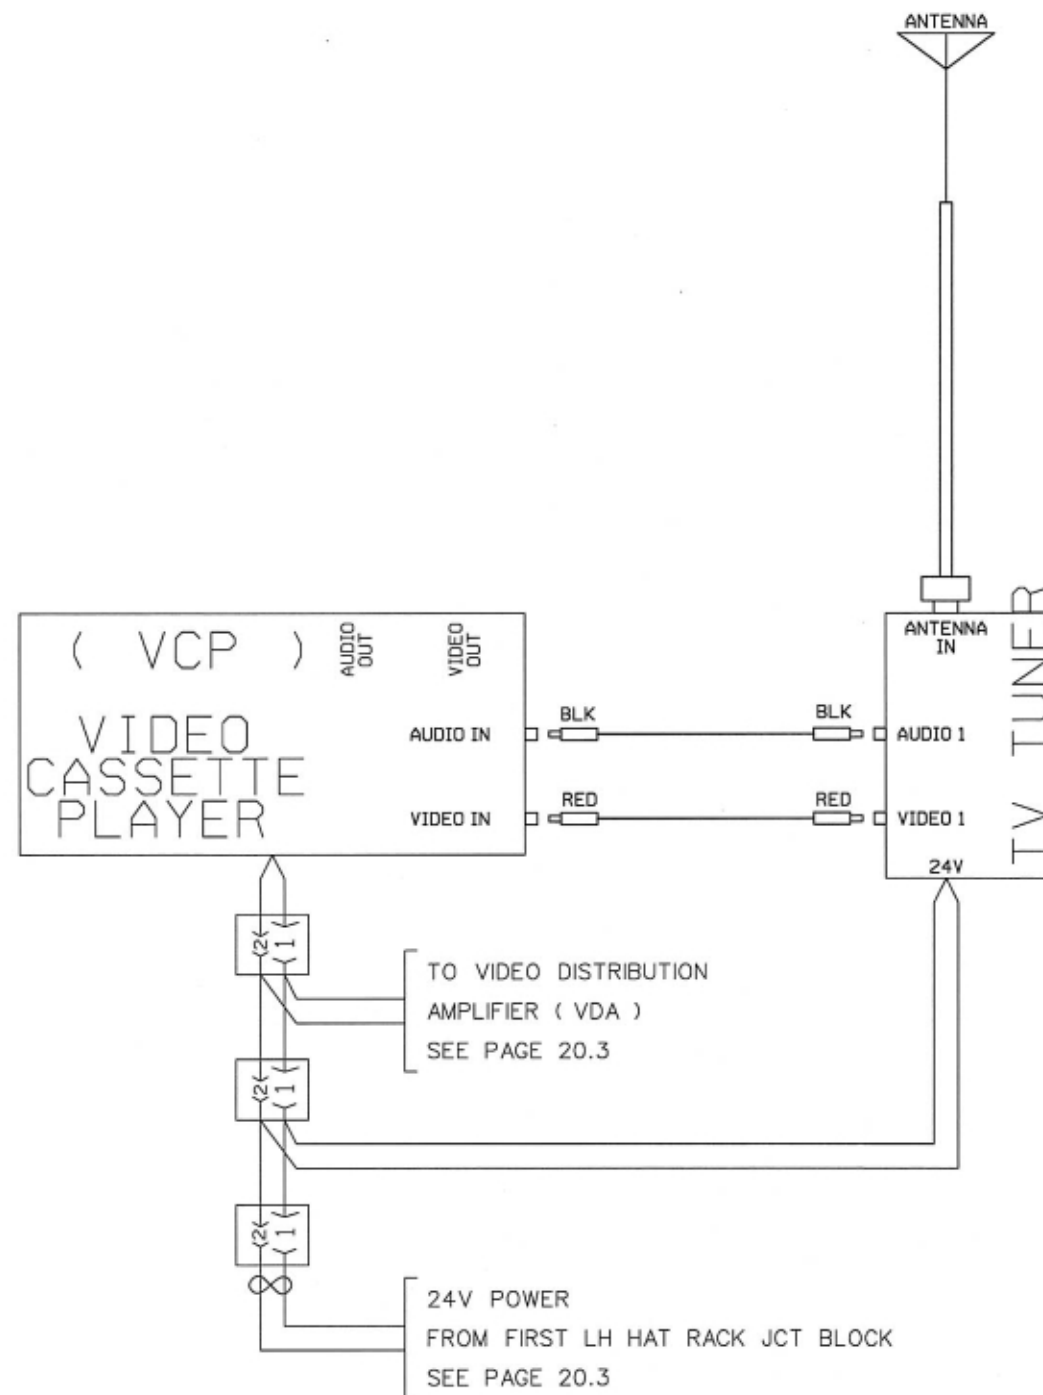



TV RECEIVER

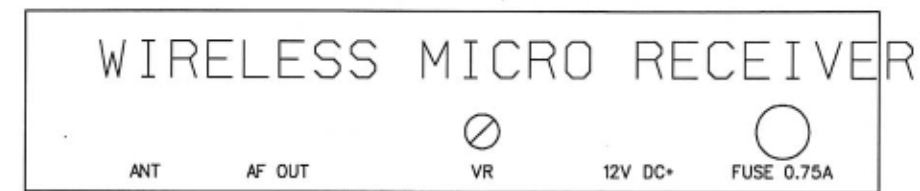


TO MICRO OUTLET
"T" CONNECTION
MICRO OUTLET RH CONSOLE
& MICRO OUTLET LH MODESTY PANEL
SEE PAGE 20.1




 FROM CONTROL HEAD
SECONDARY MIC-22
CONNECTION
SEE PAGE 20.1

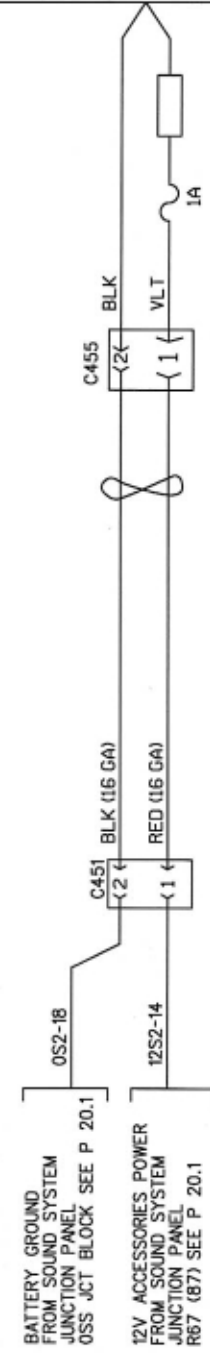

WIRELESS MICROPHONE

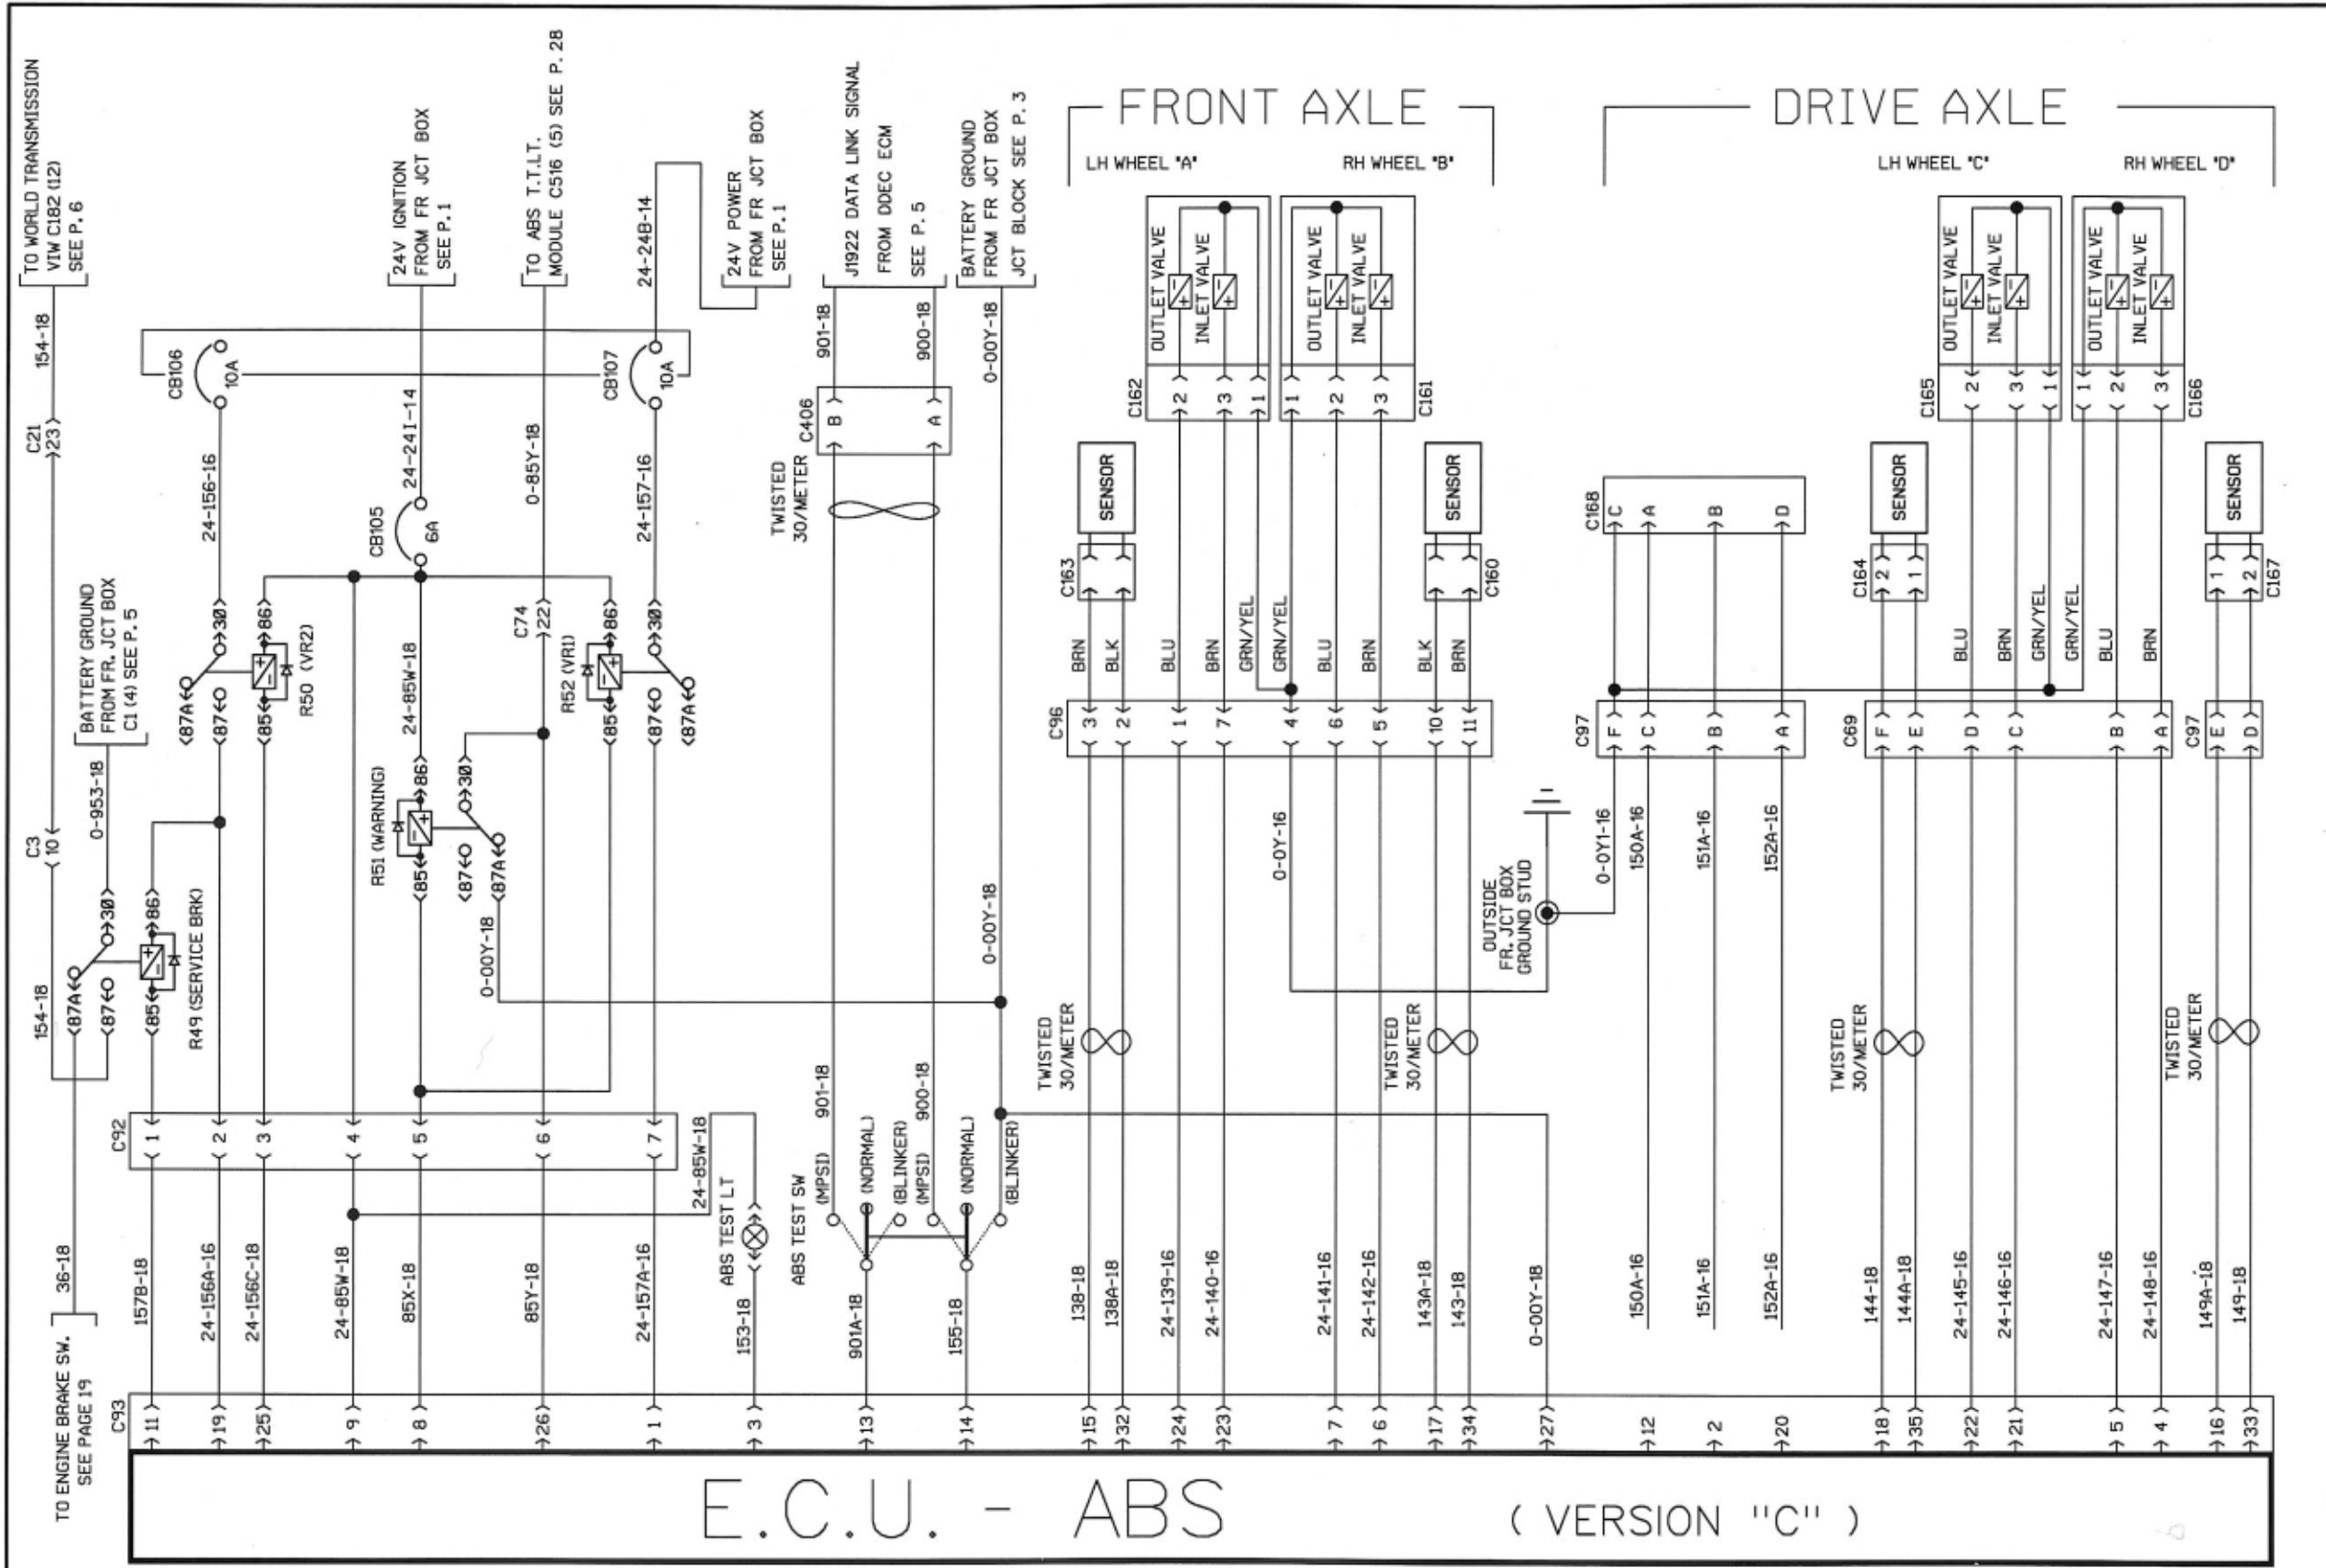

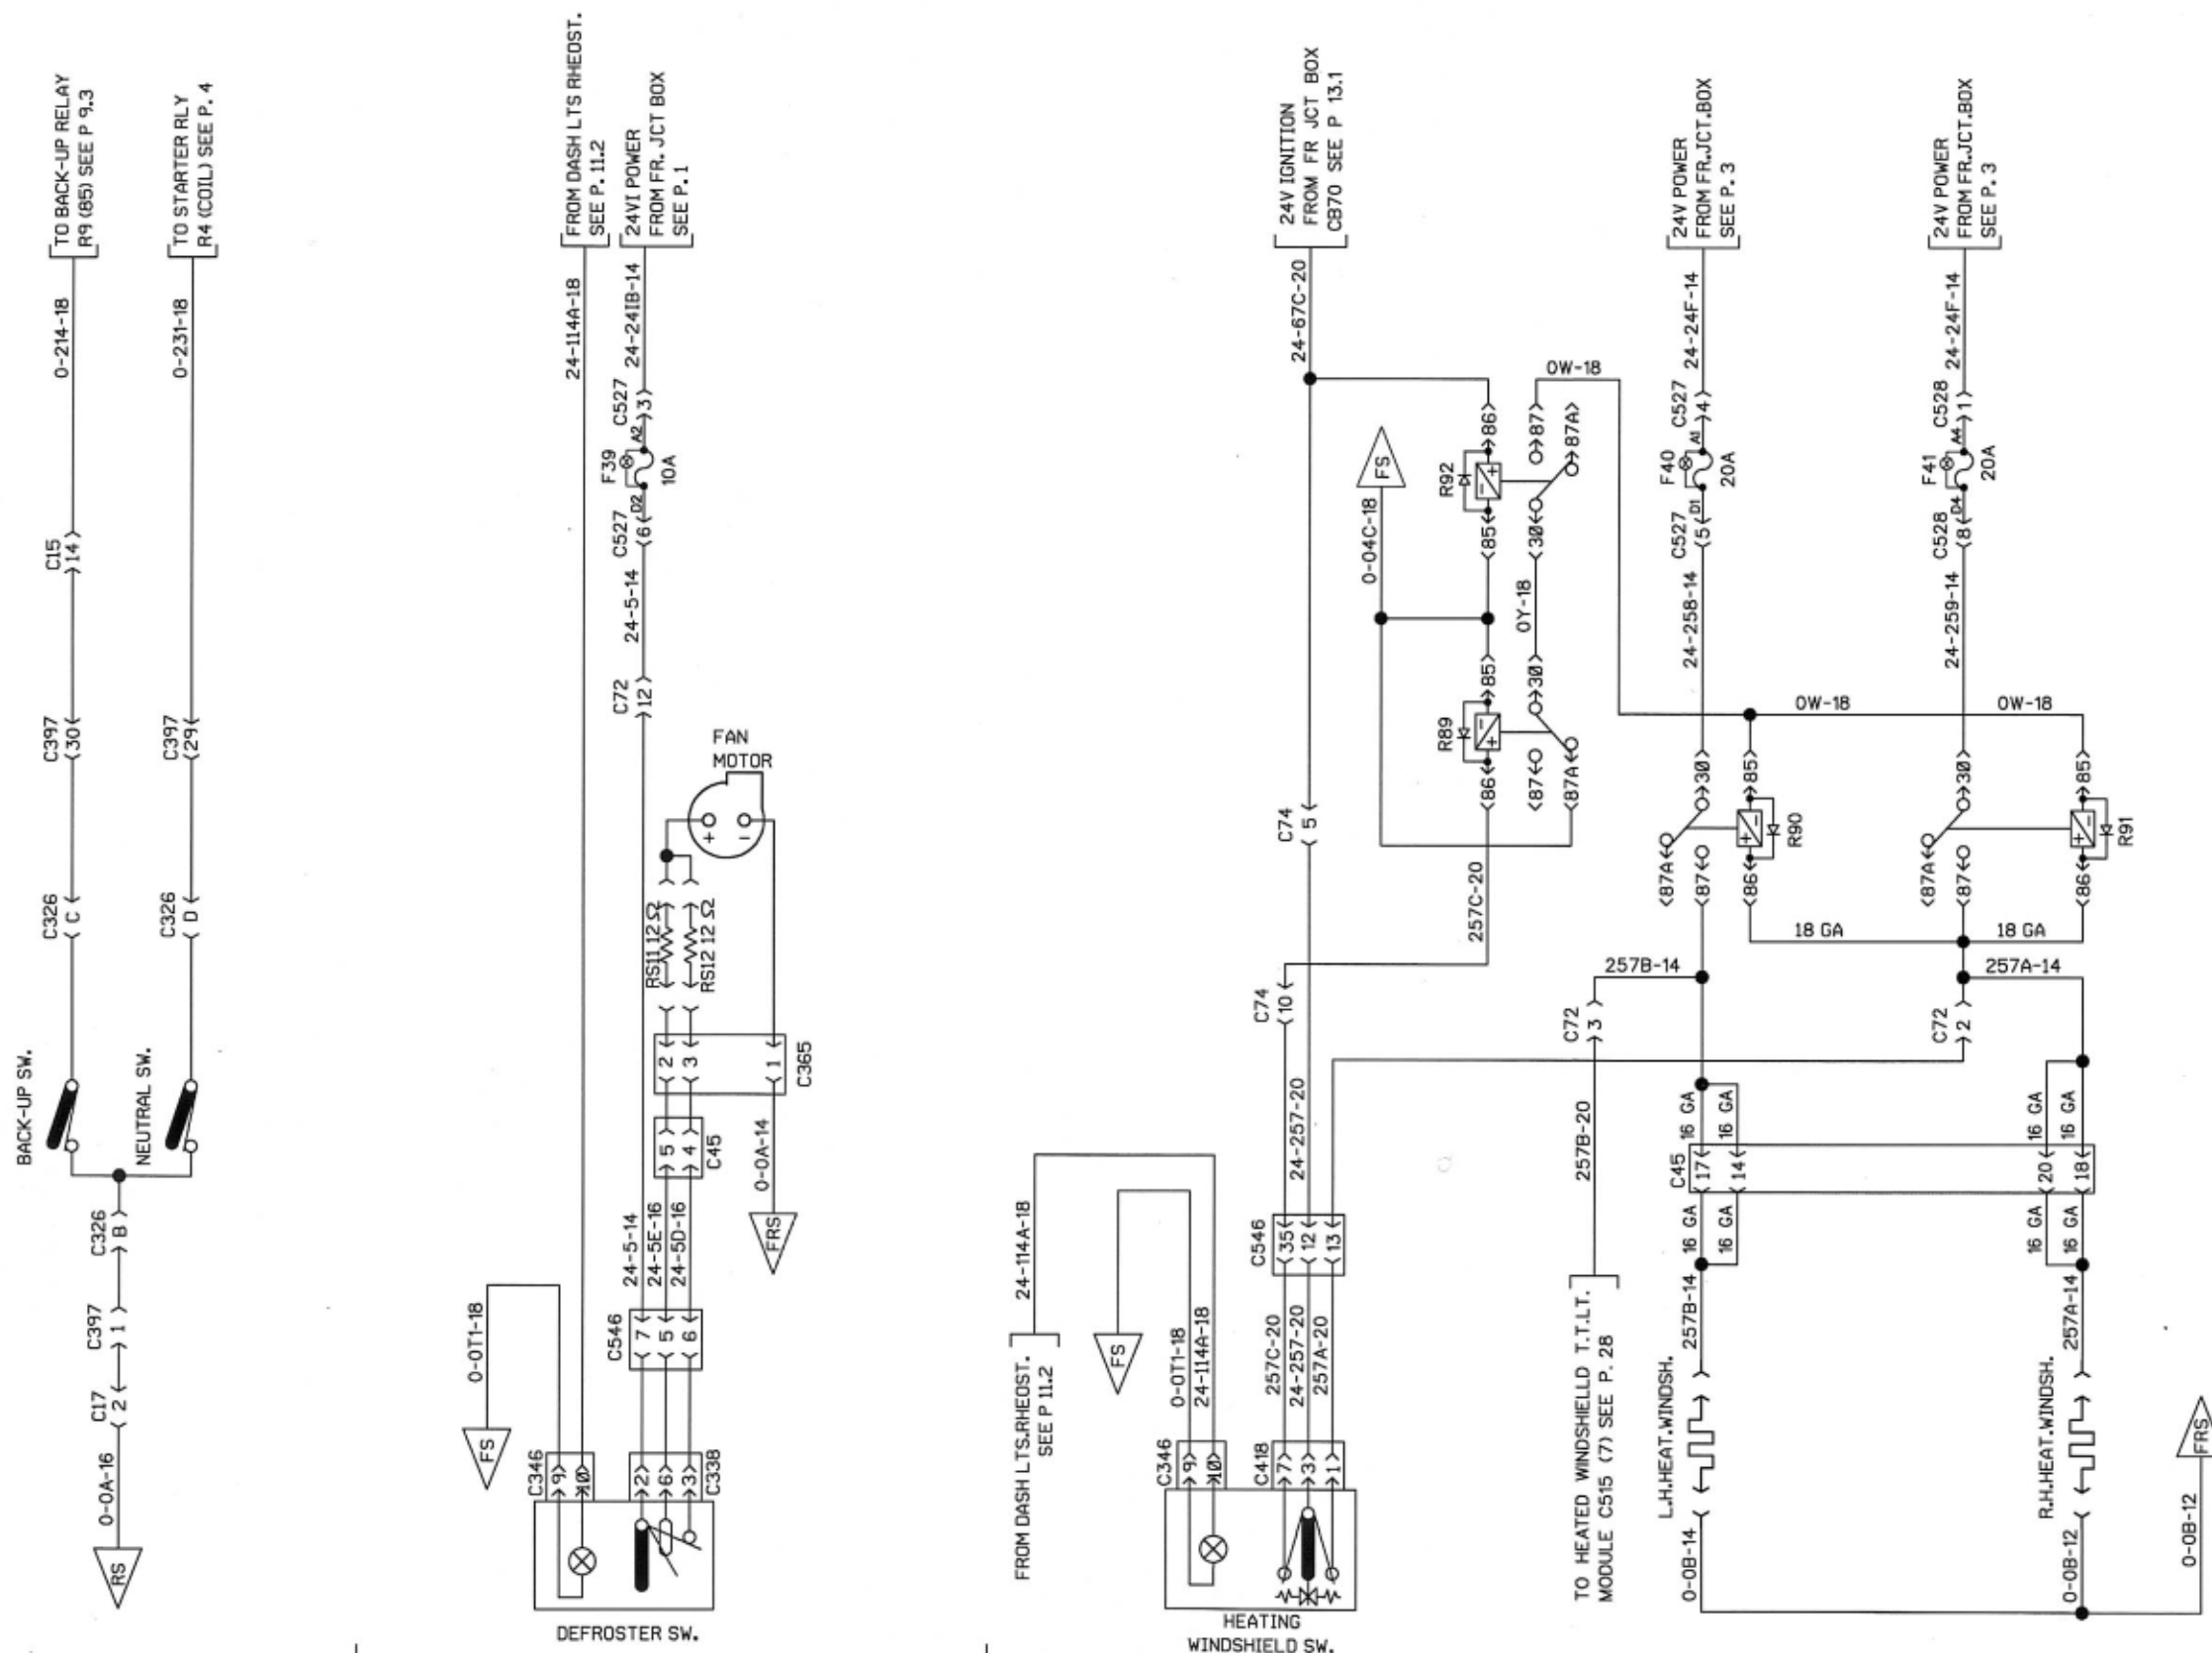

MANUAL TRANSMISSION | UPPER WINDSHIELD DEFROST

HEATED WINDSHIELD

PREVOST

WIRING DIAGRAM


NO:


D060882

PAGE:

22

REVISION
00

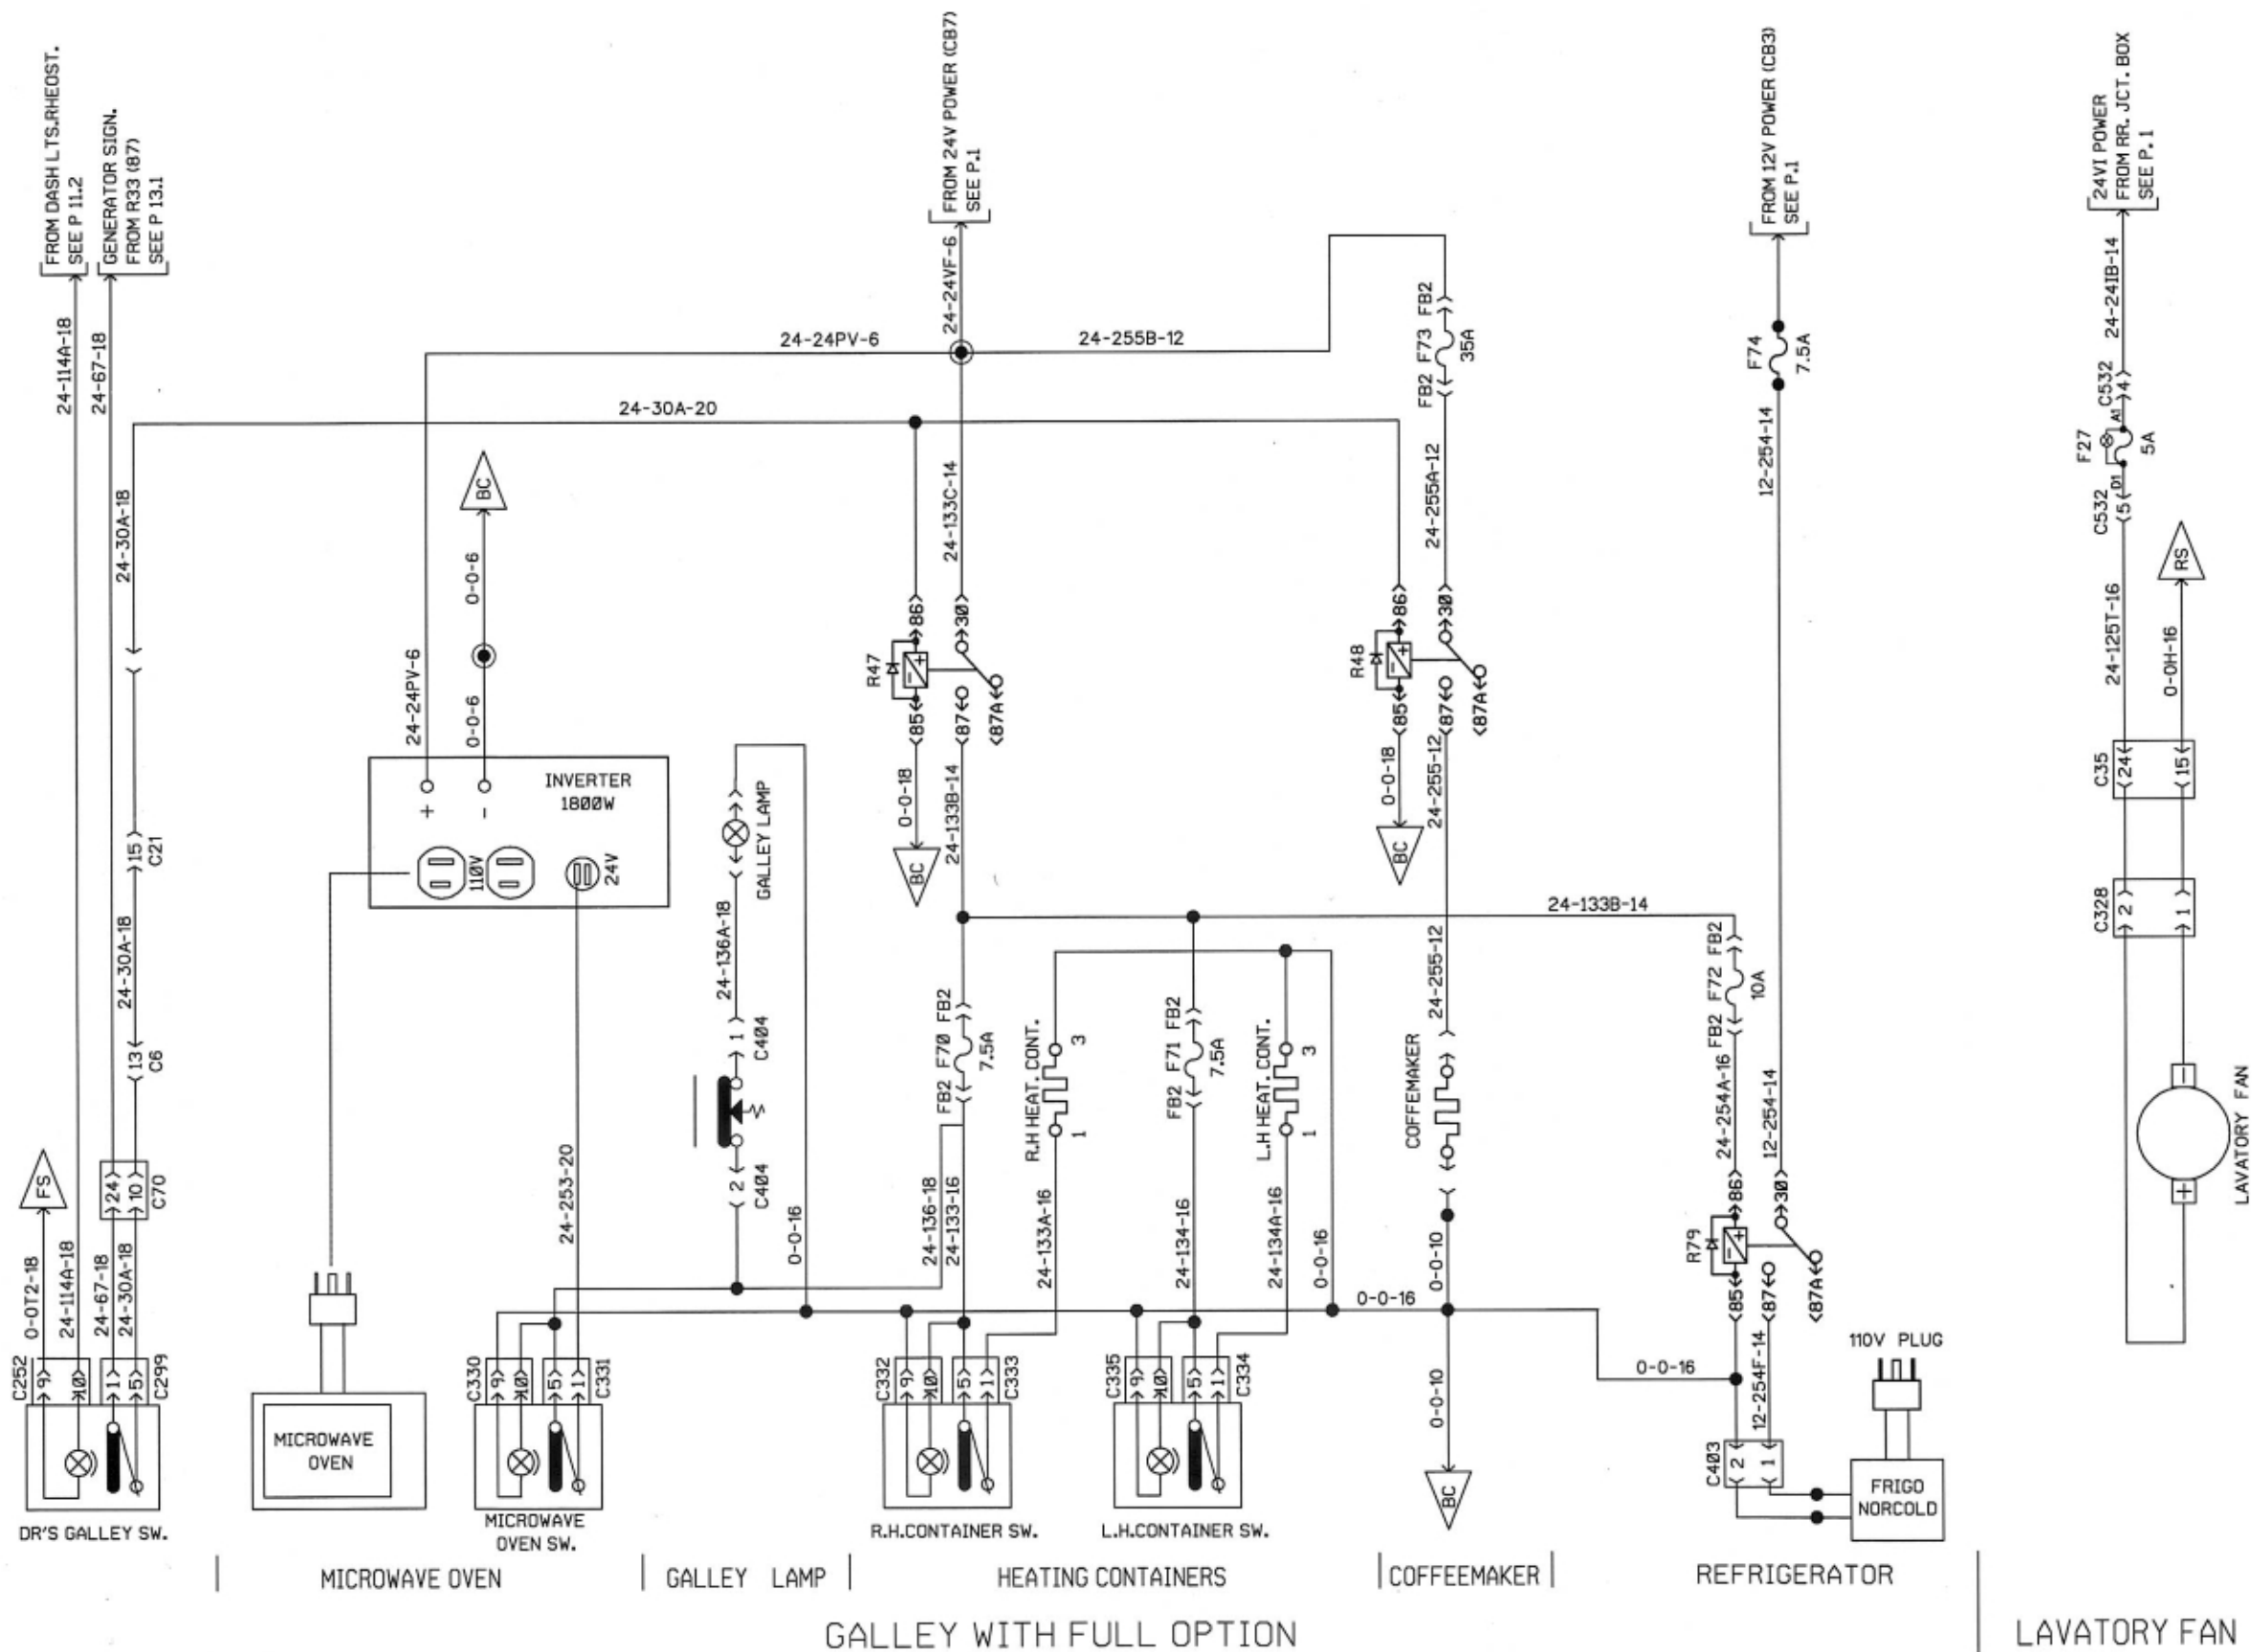


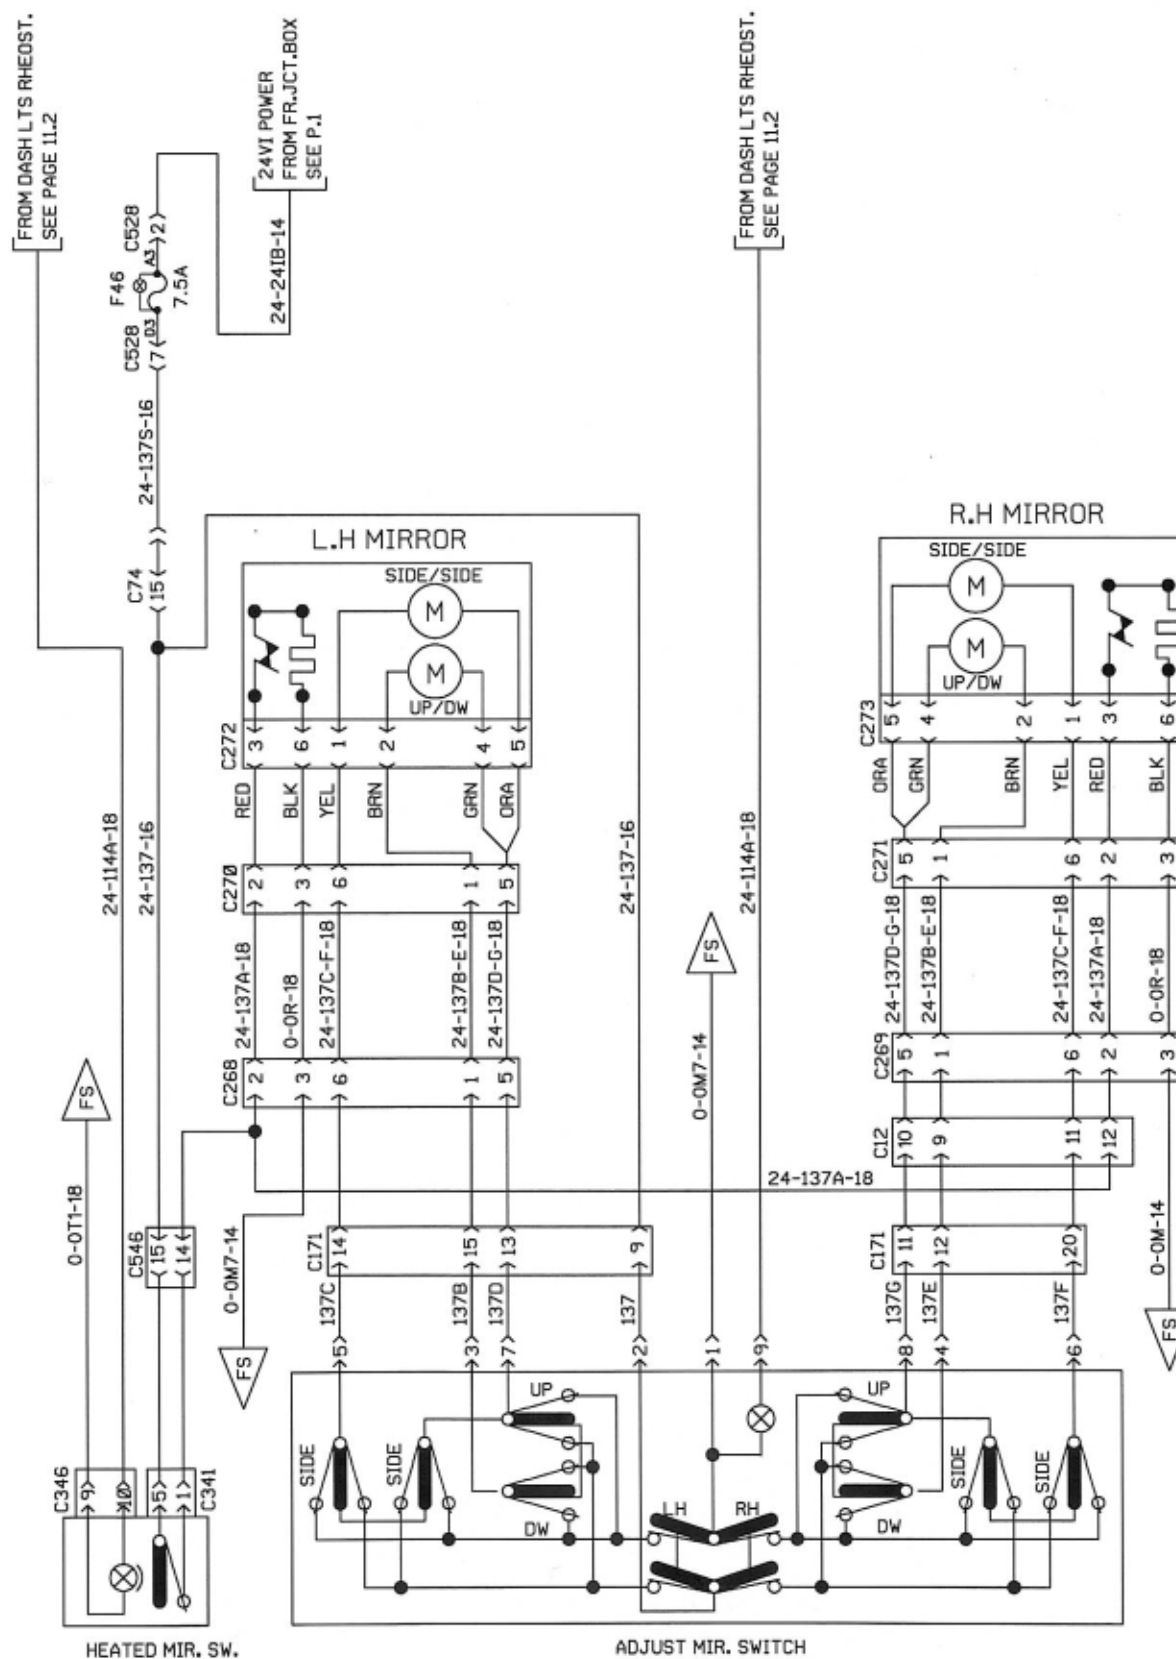

REAR VIEW MIRROR SPARTAN - 1 ADJUSTMENT SW. & 1 HEATED SW.





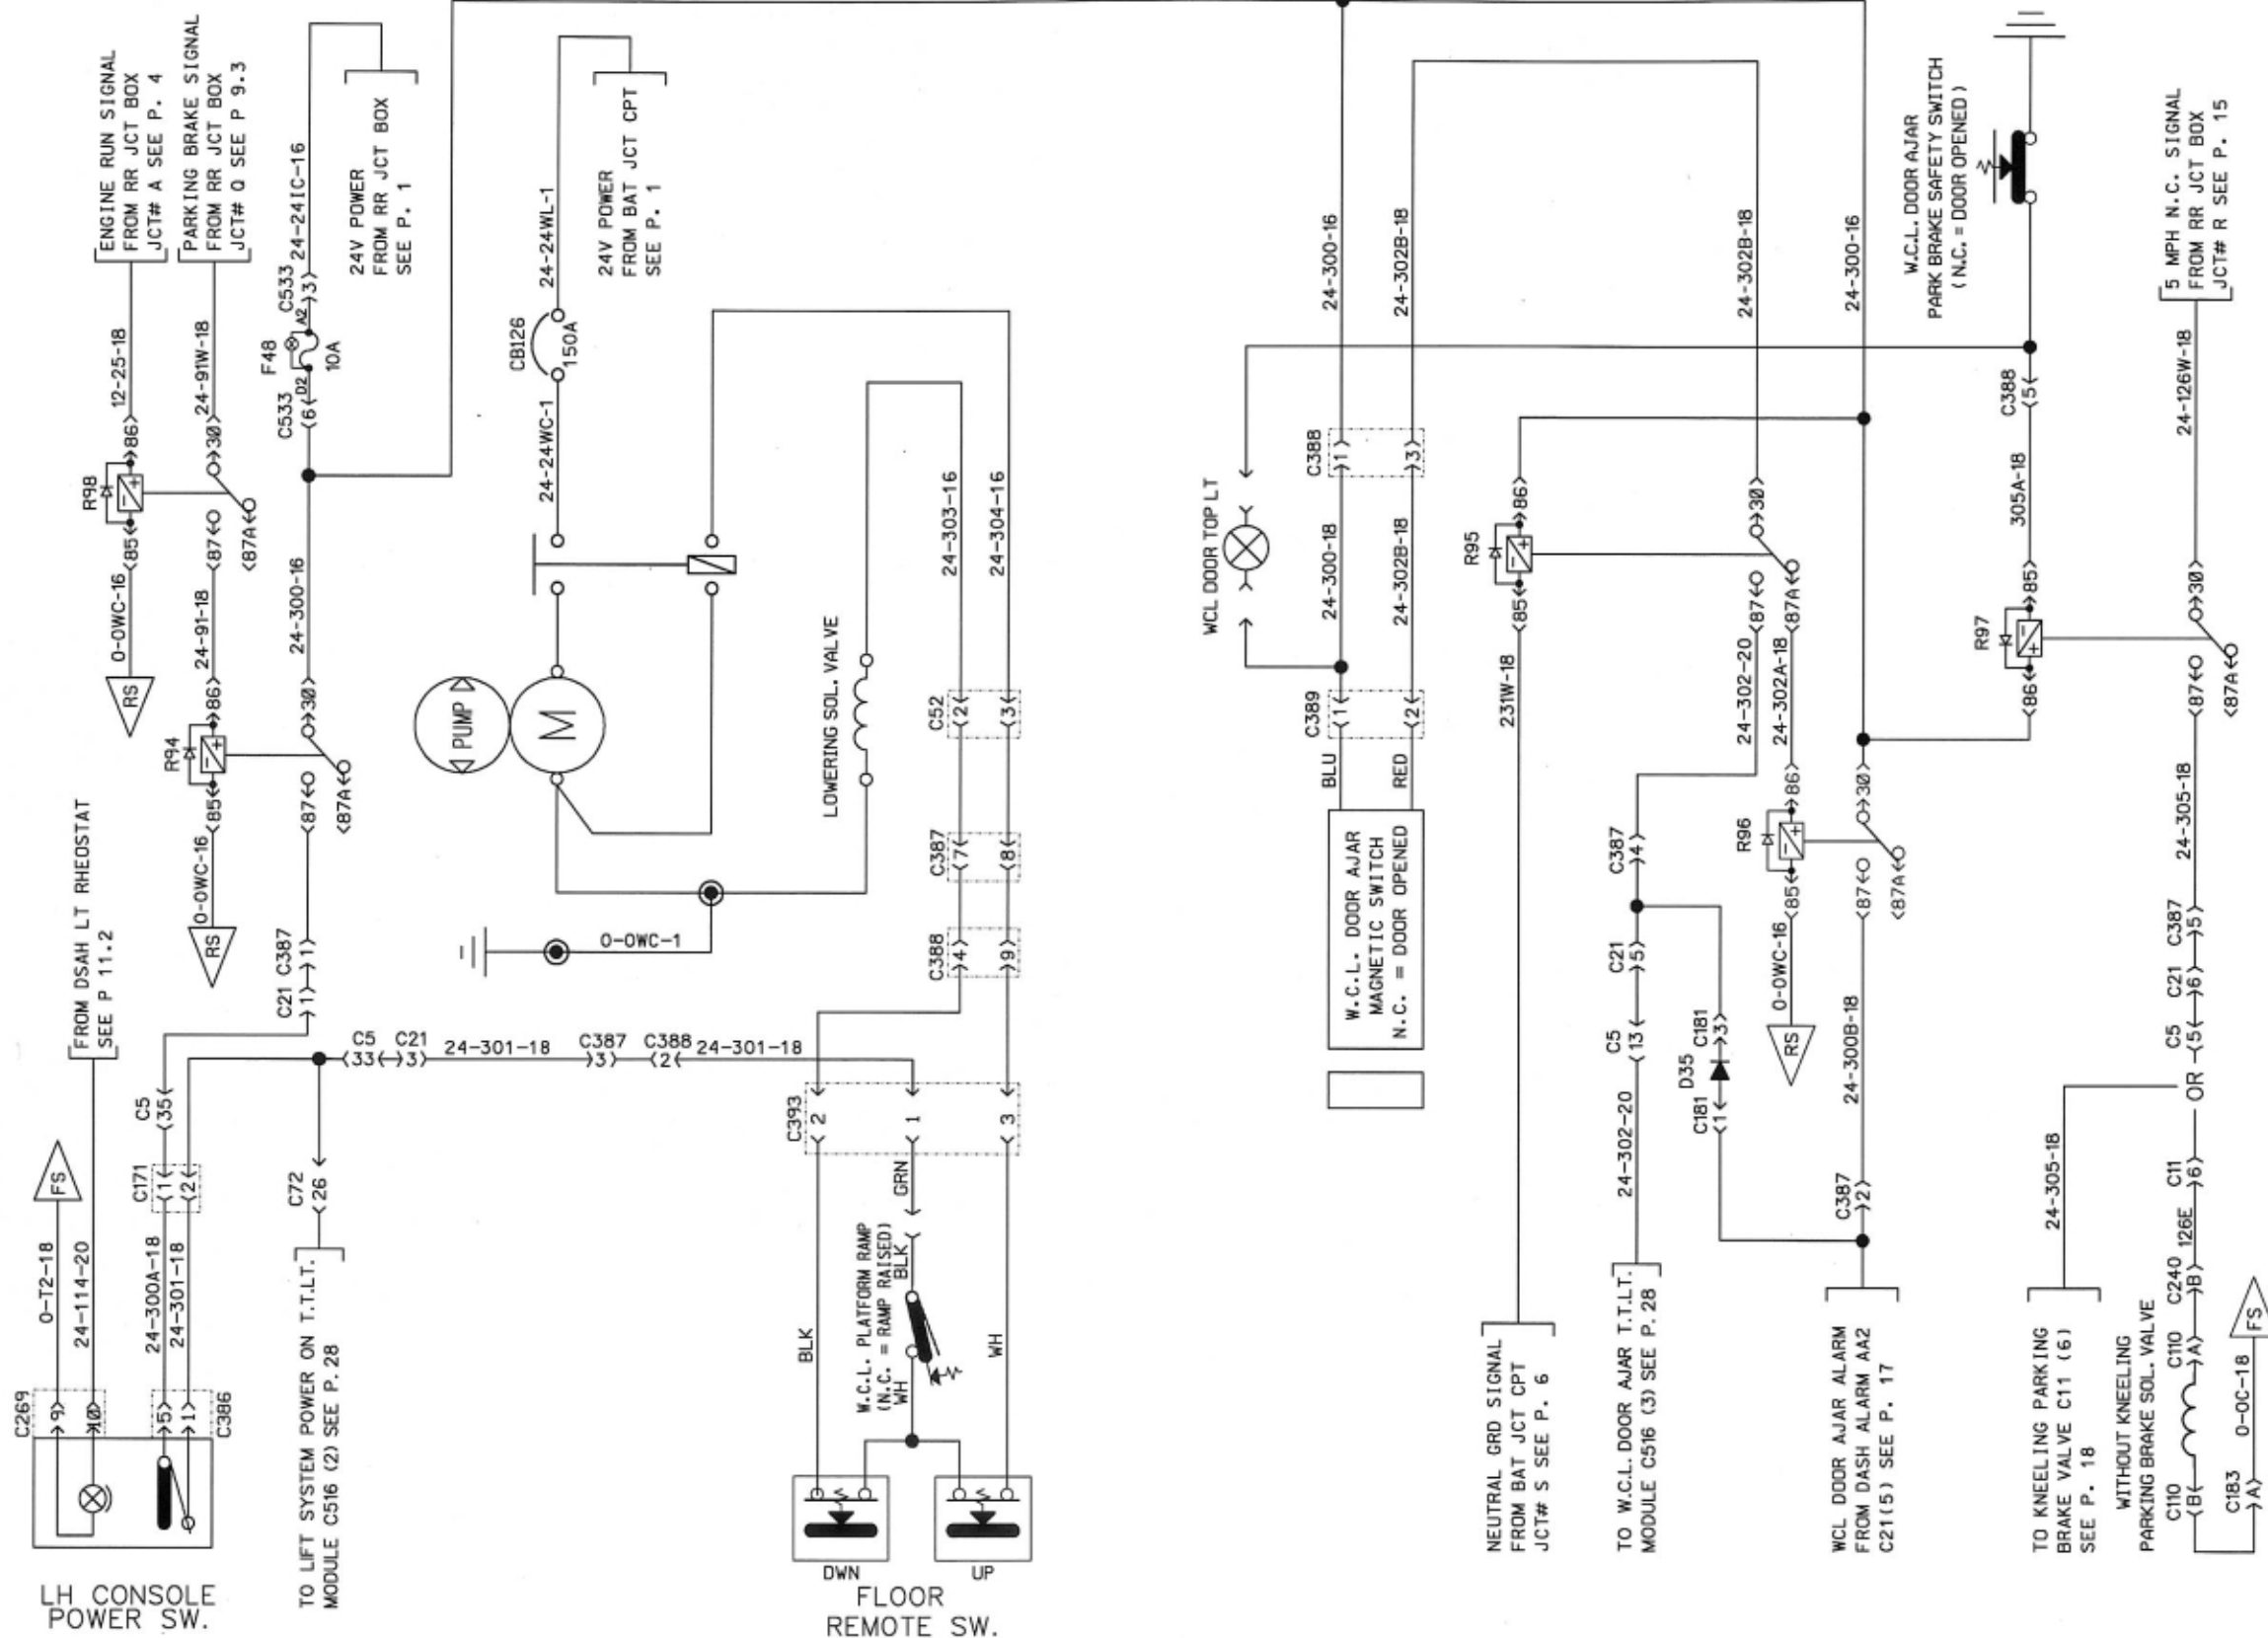

W.C.L. SYSTEM STEWART & STEVENSON

PREVOST


WIRING DIAGRAM



NO:



D060882



PAGE: 25.1


REVISION
00

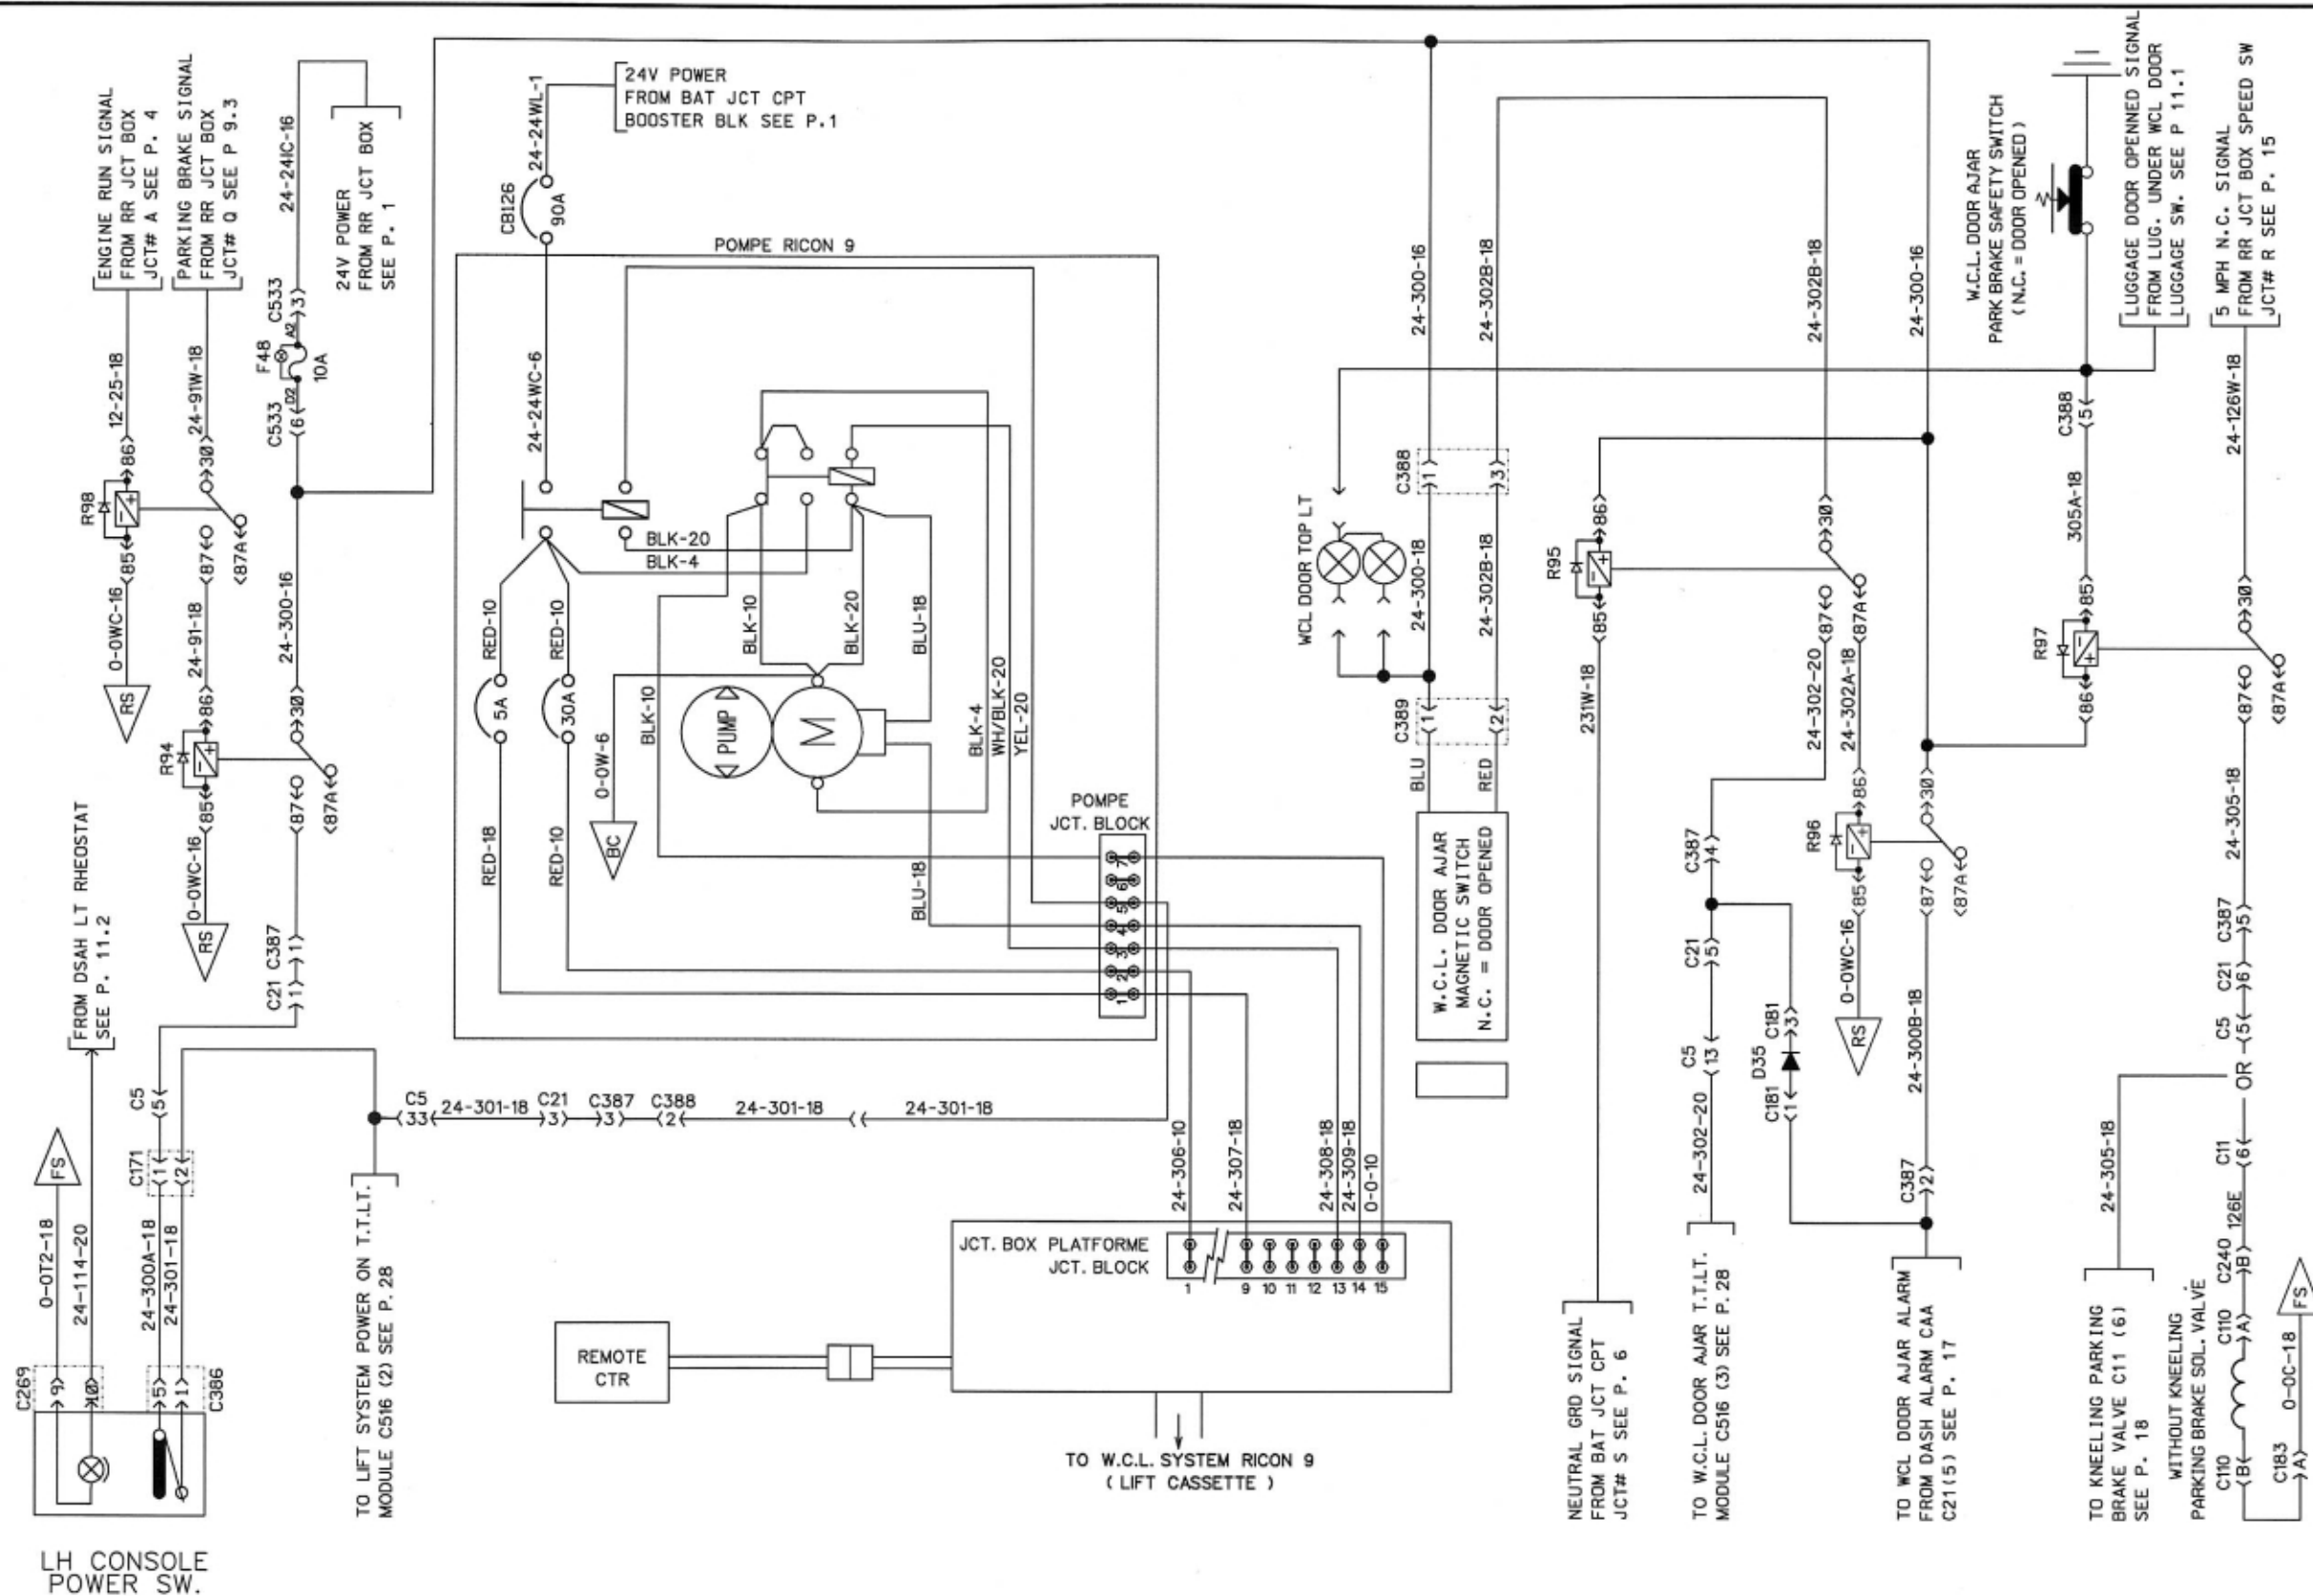

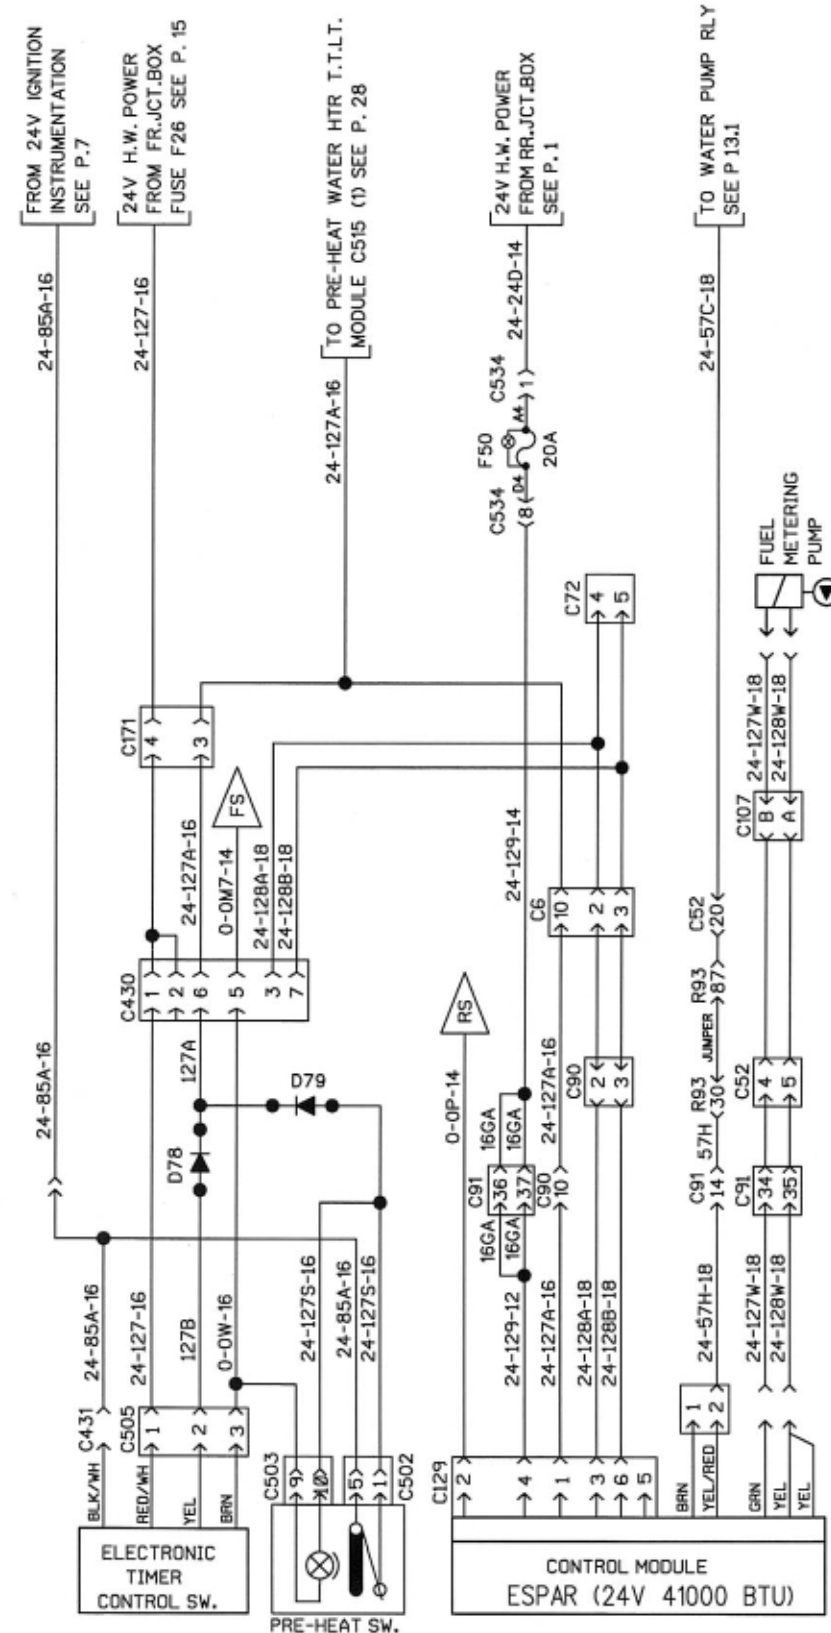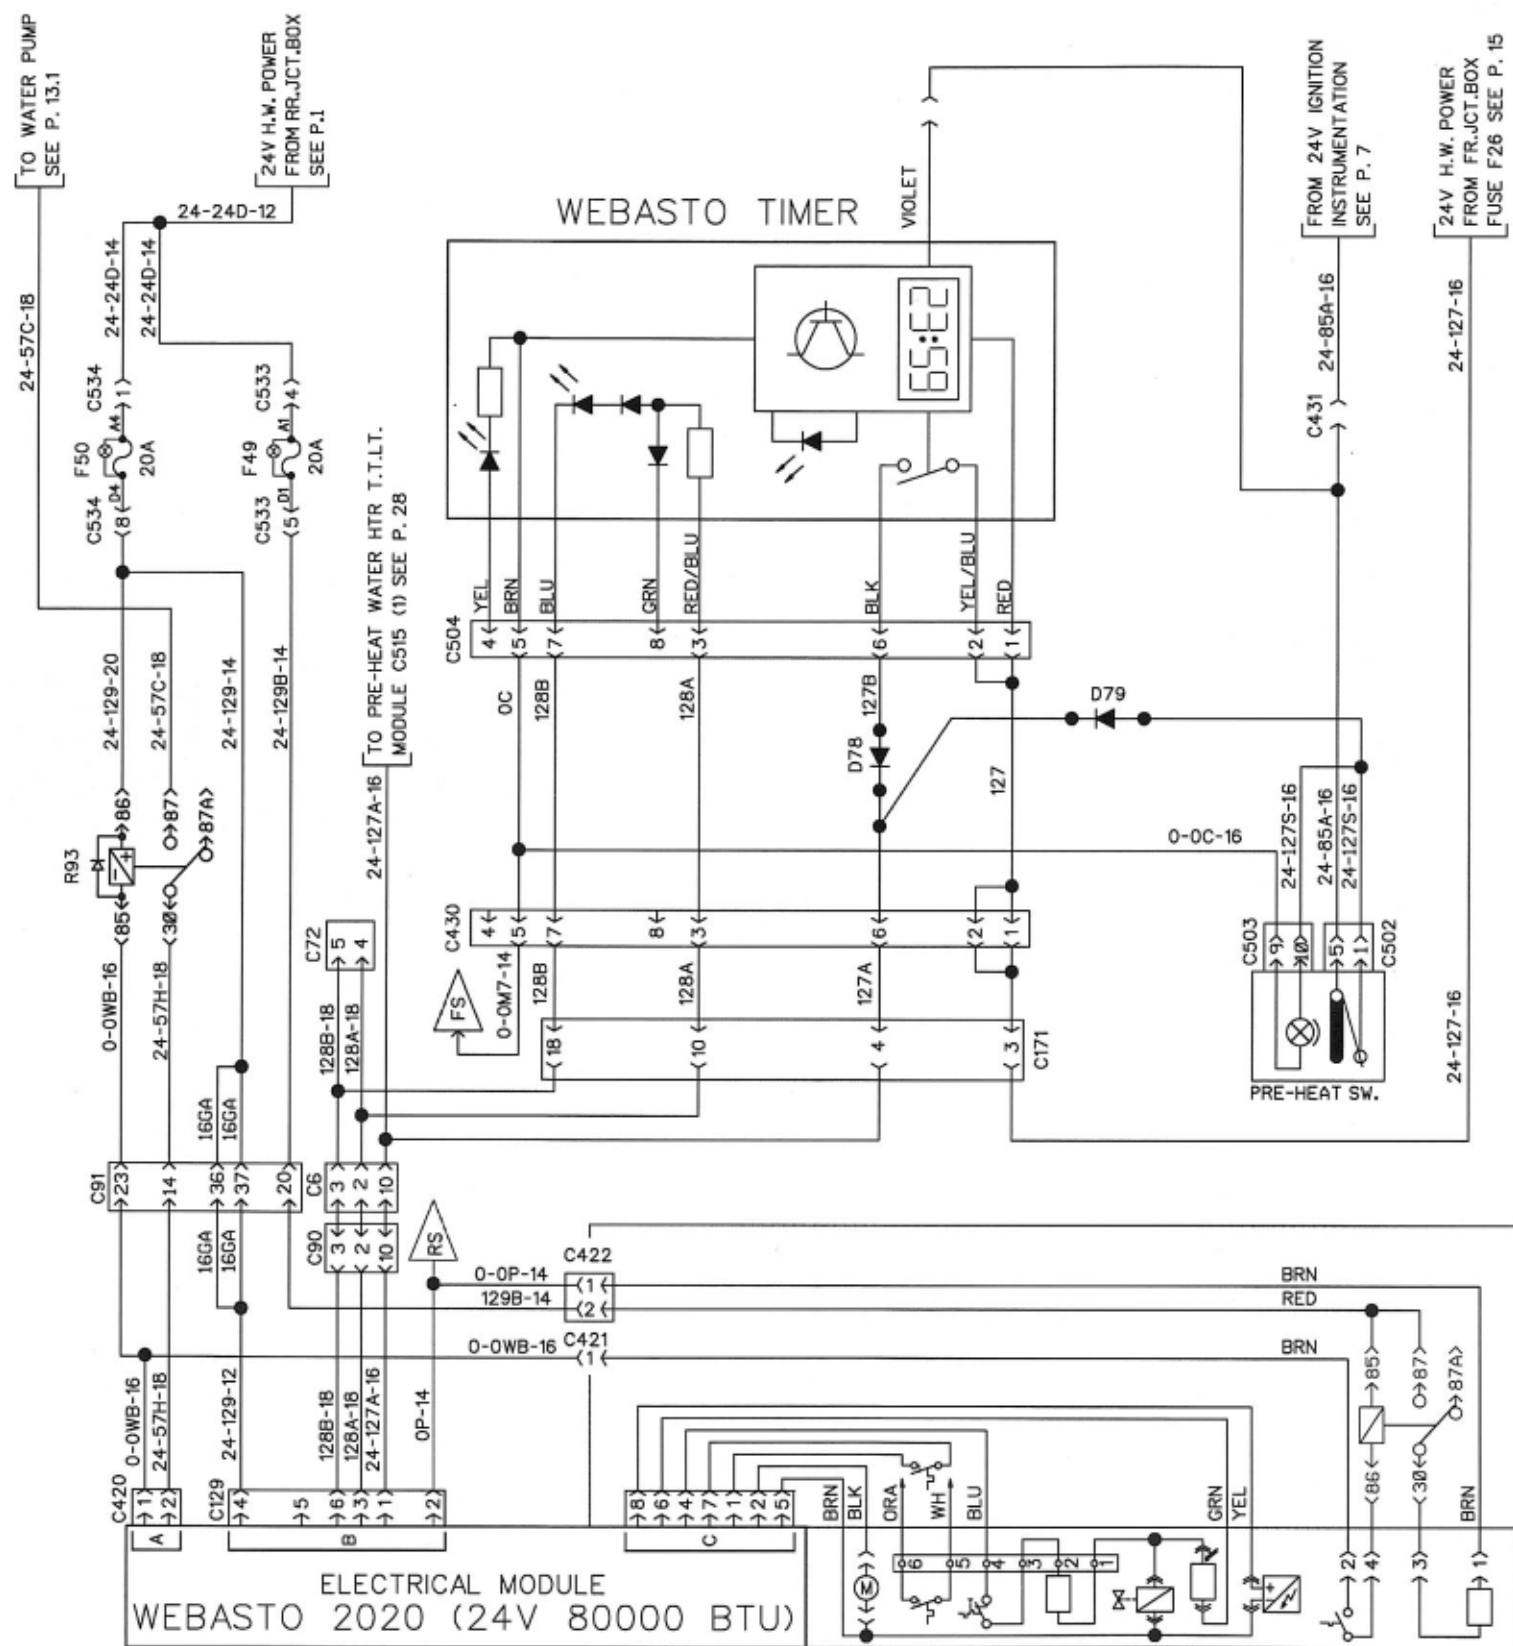

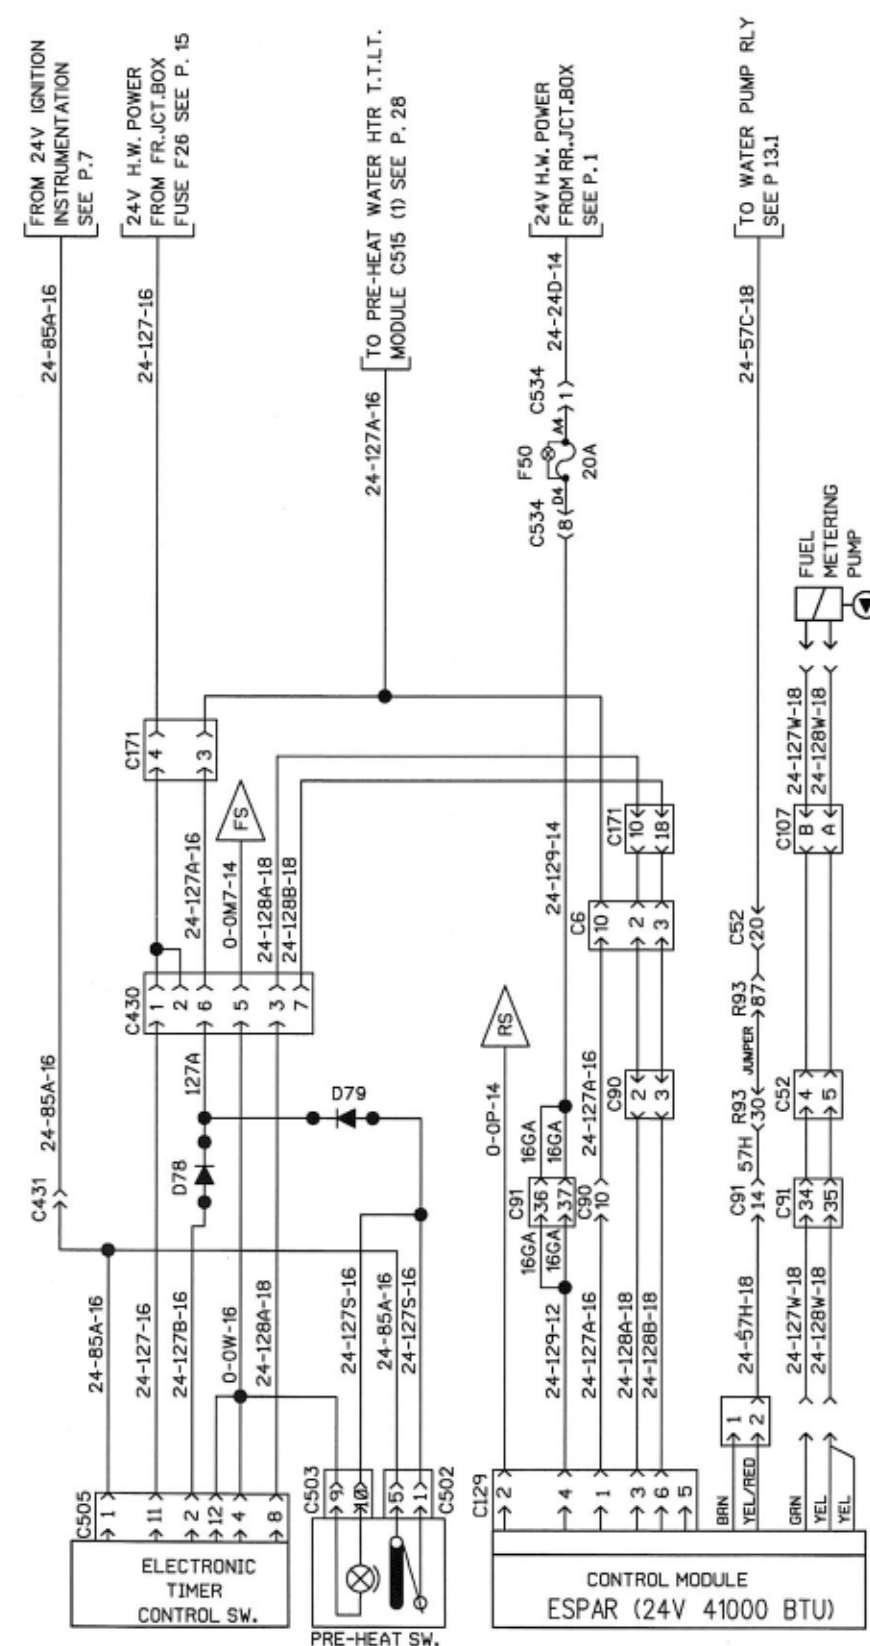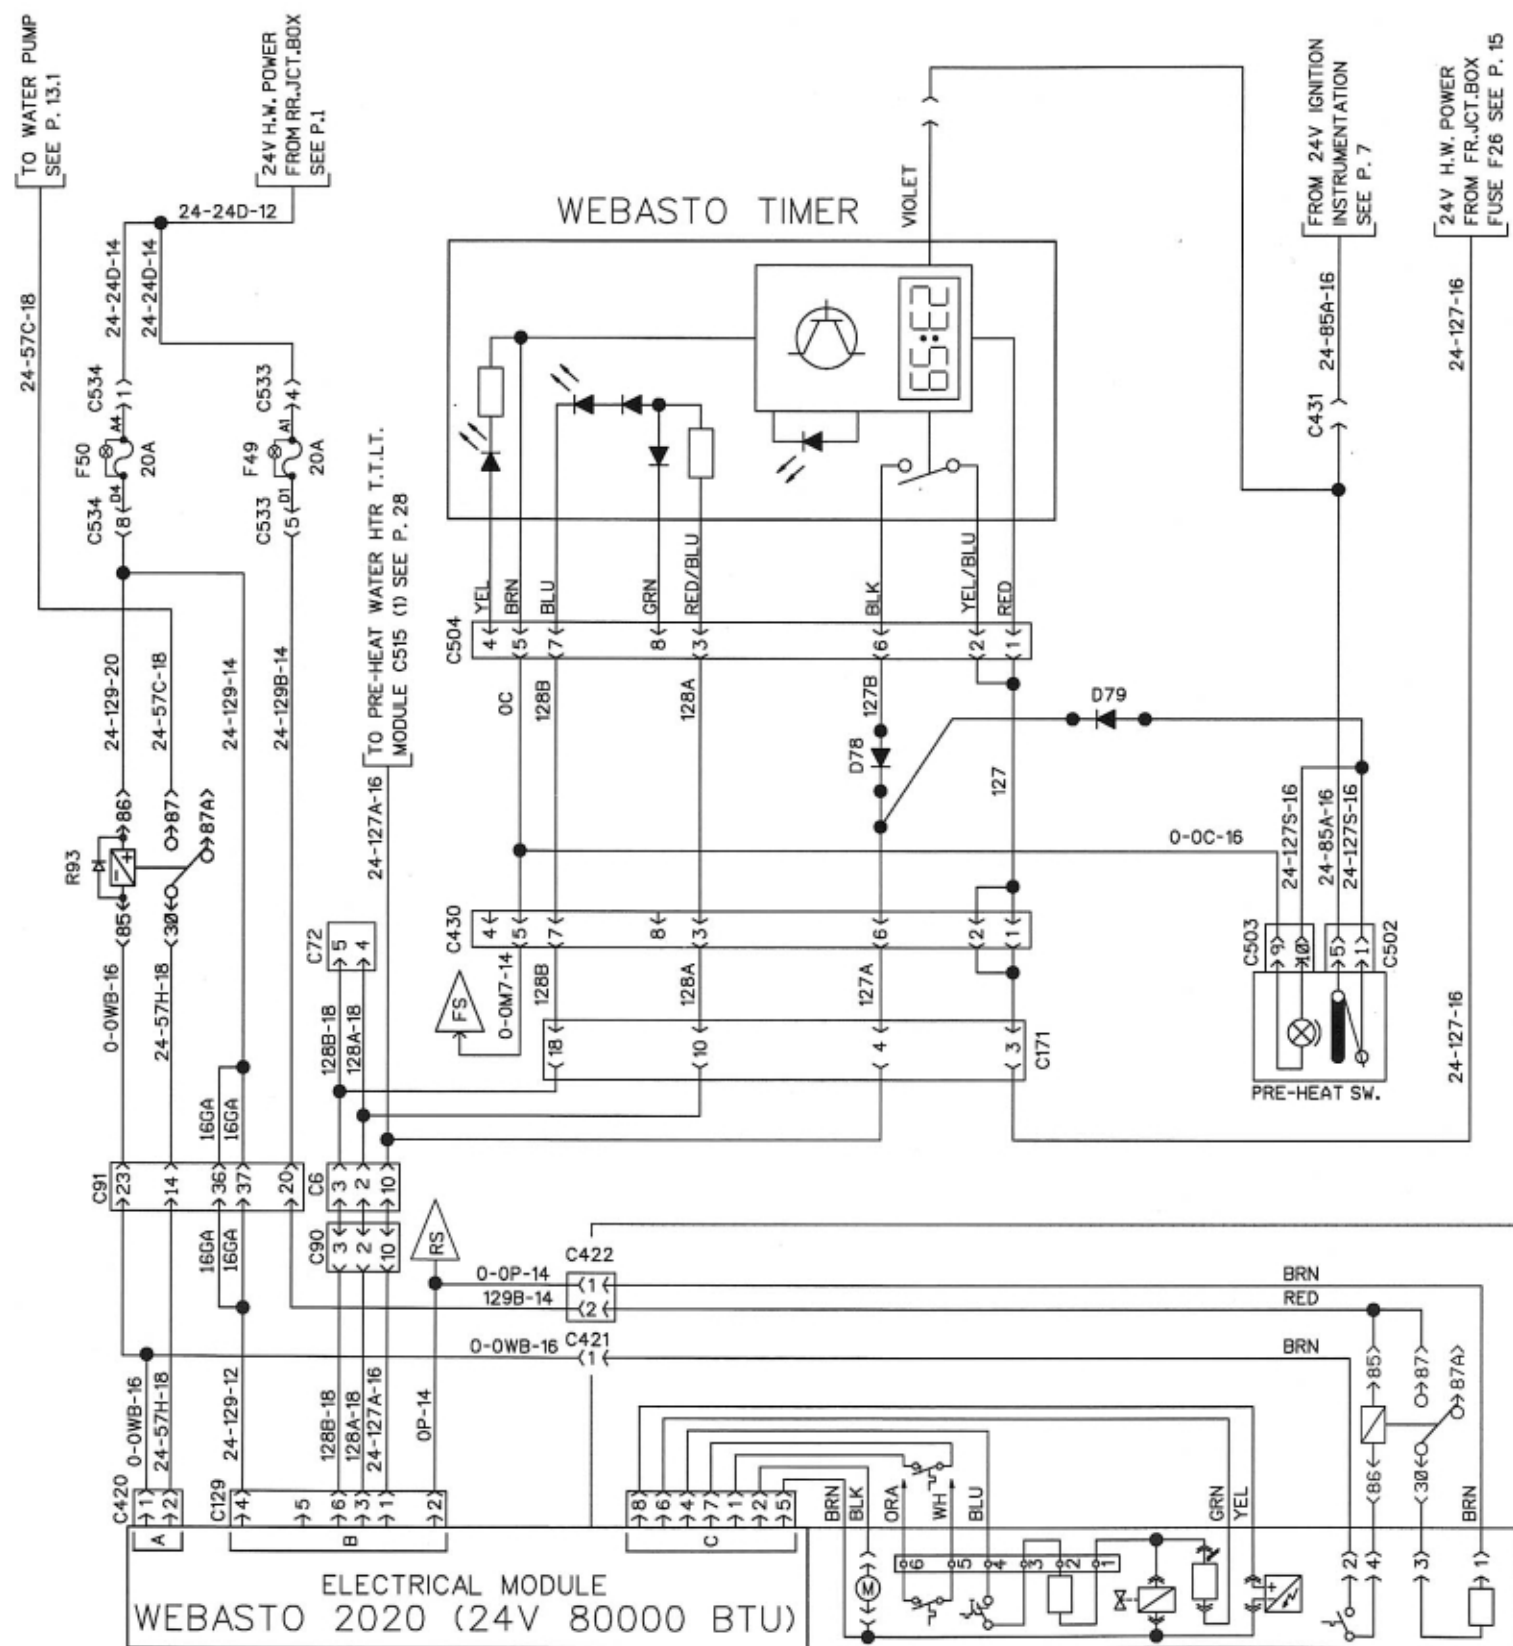

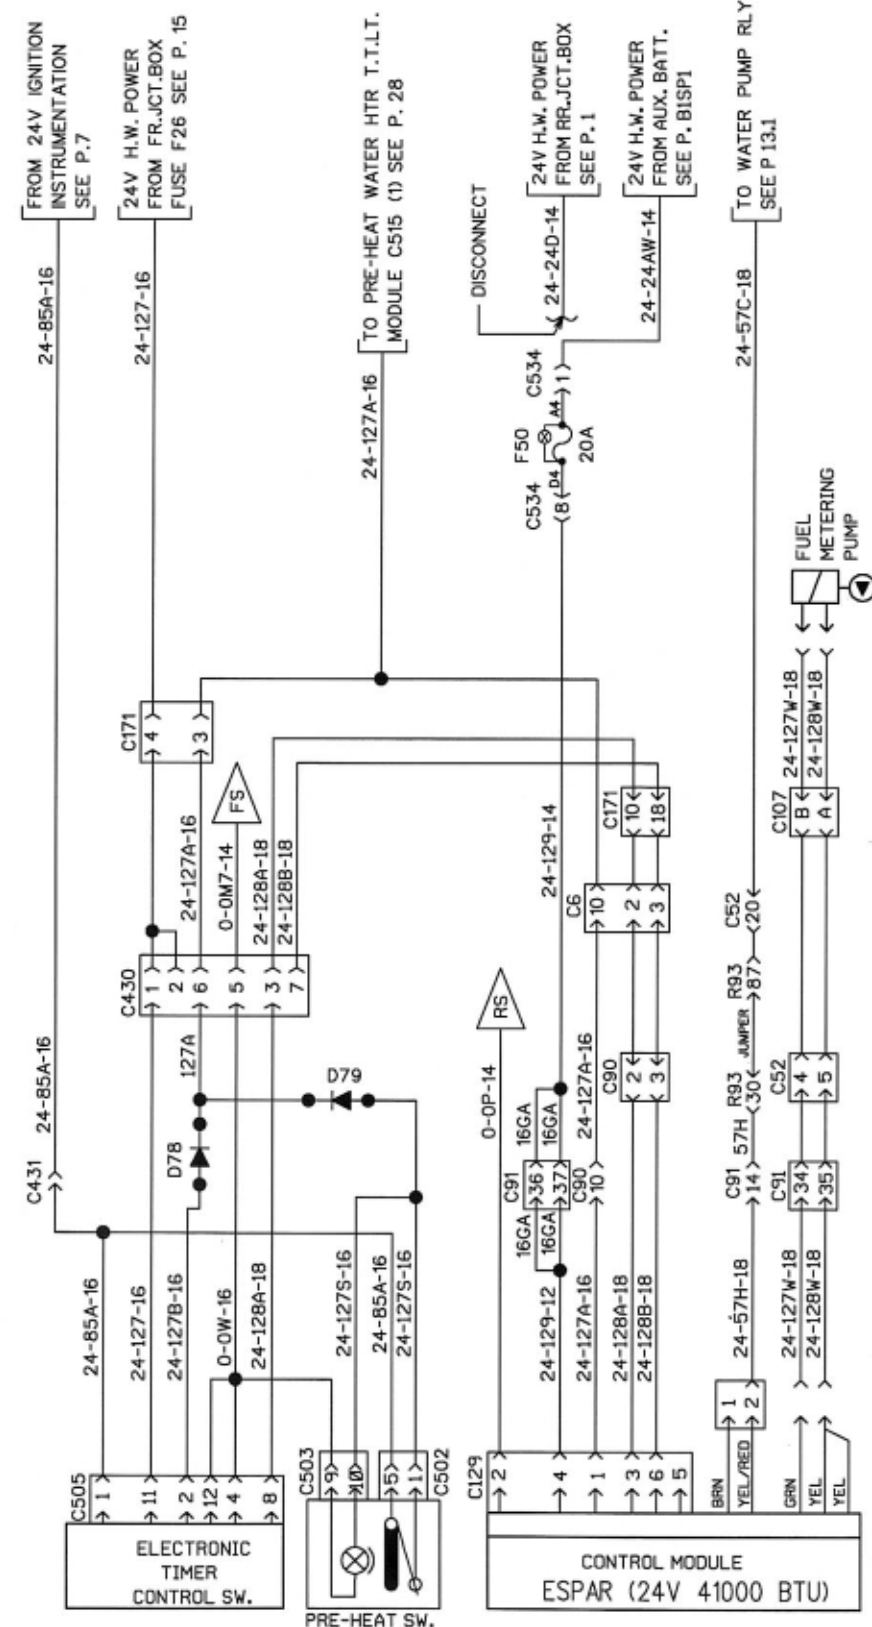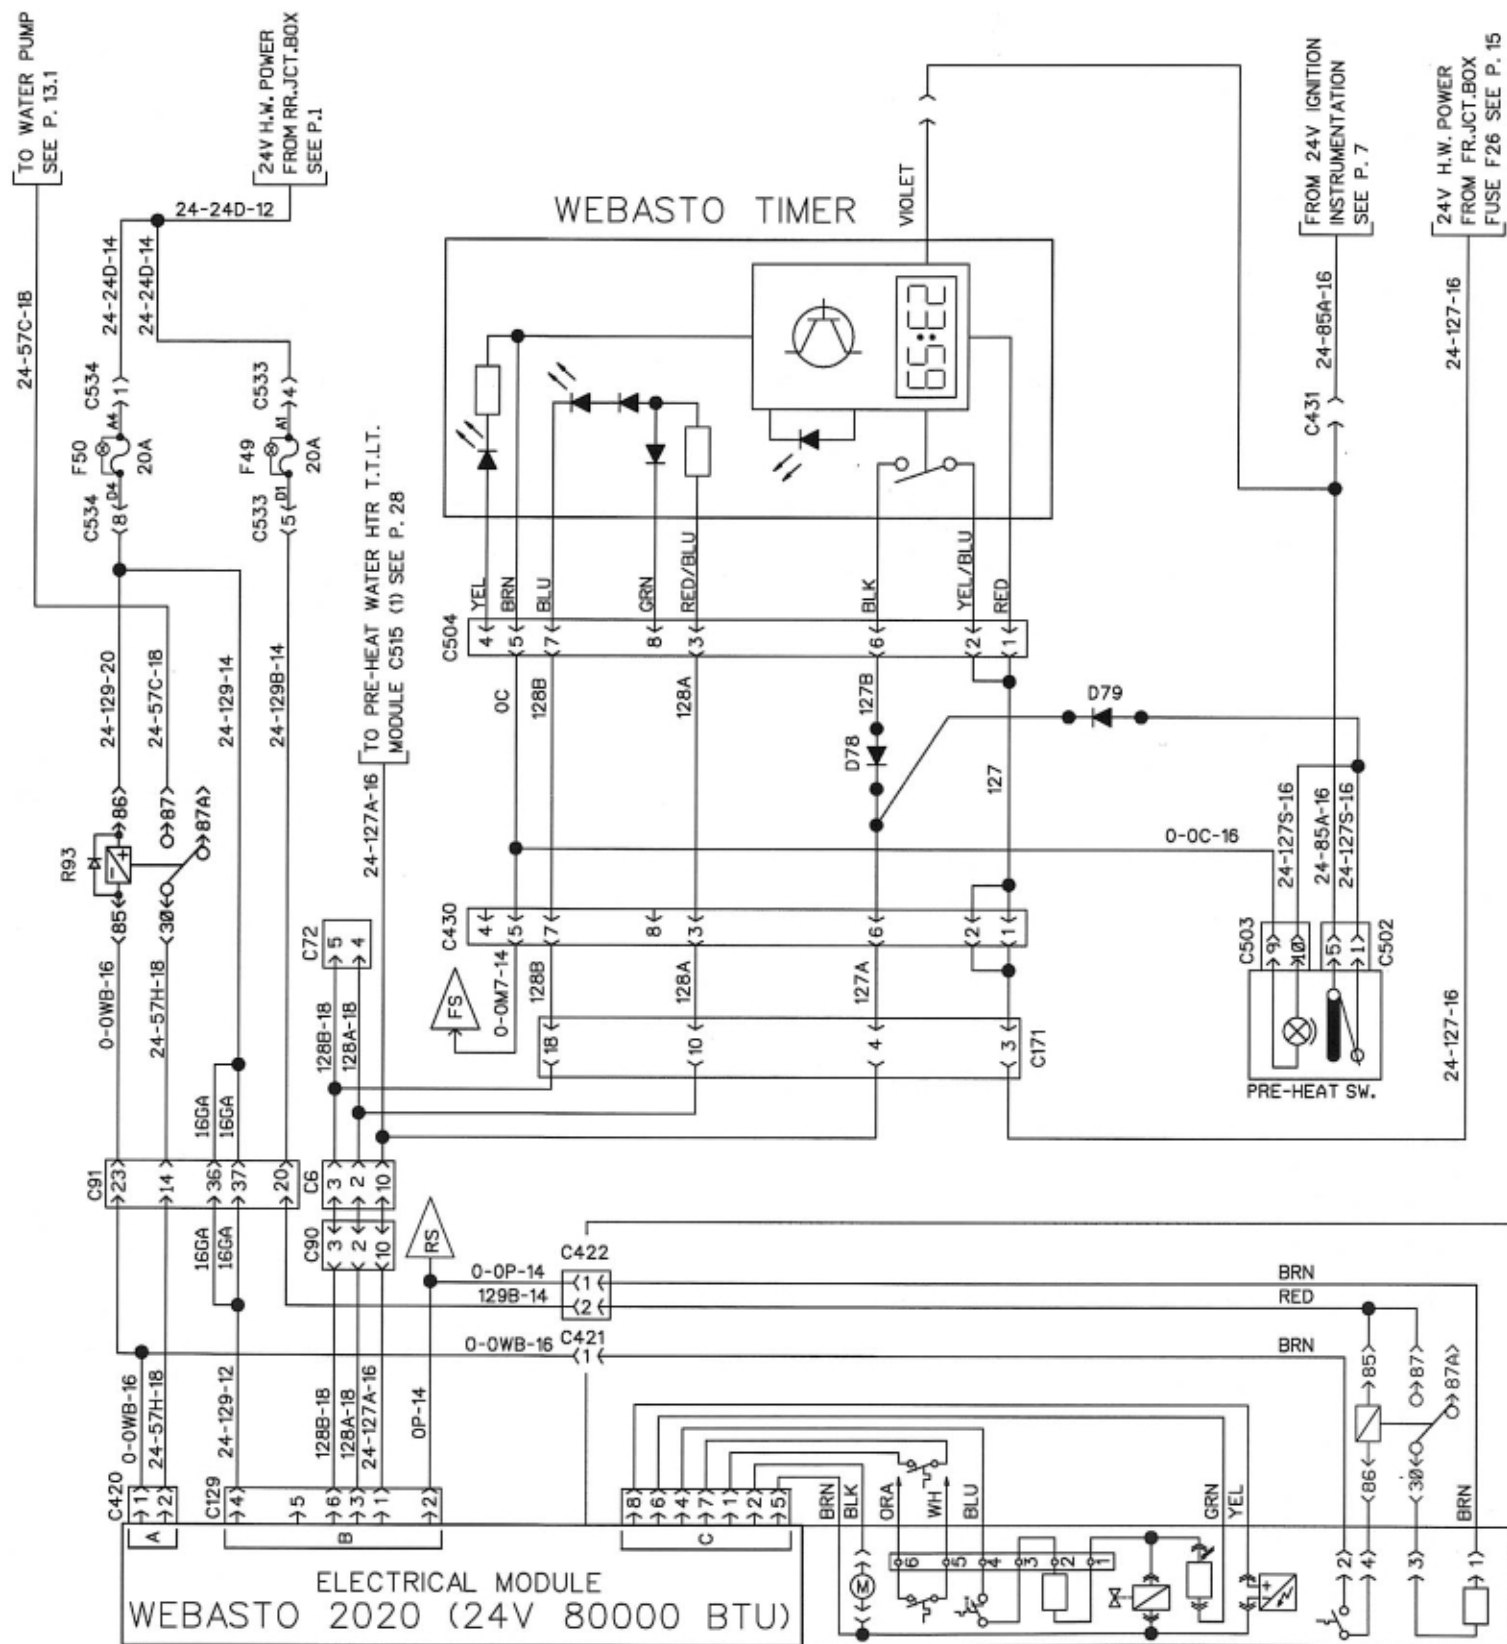

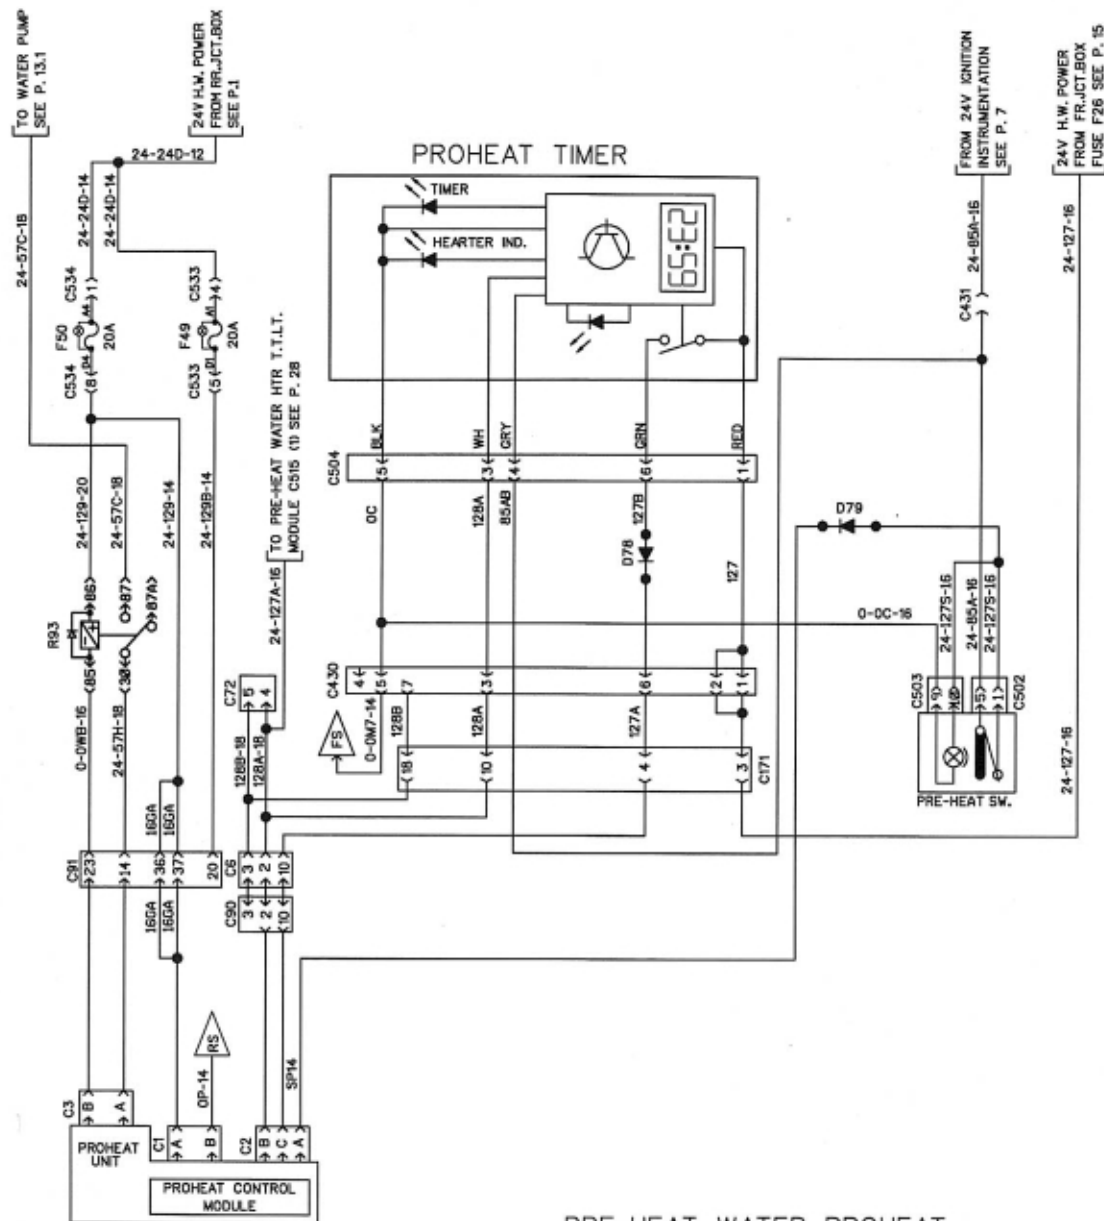

PRE-HEAT WATER PROHEAT
SPECIAL VEH. BROWN BUS V2073 & V2077

PREVOST


WIRING DIAGRAM

NO:


D060882



PAGE: **26.1sp2**


REVISION
00

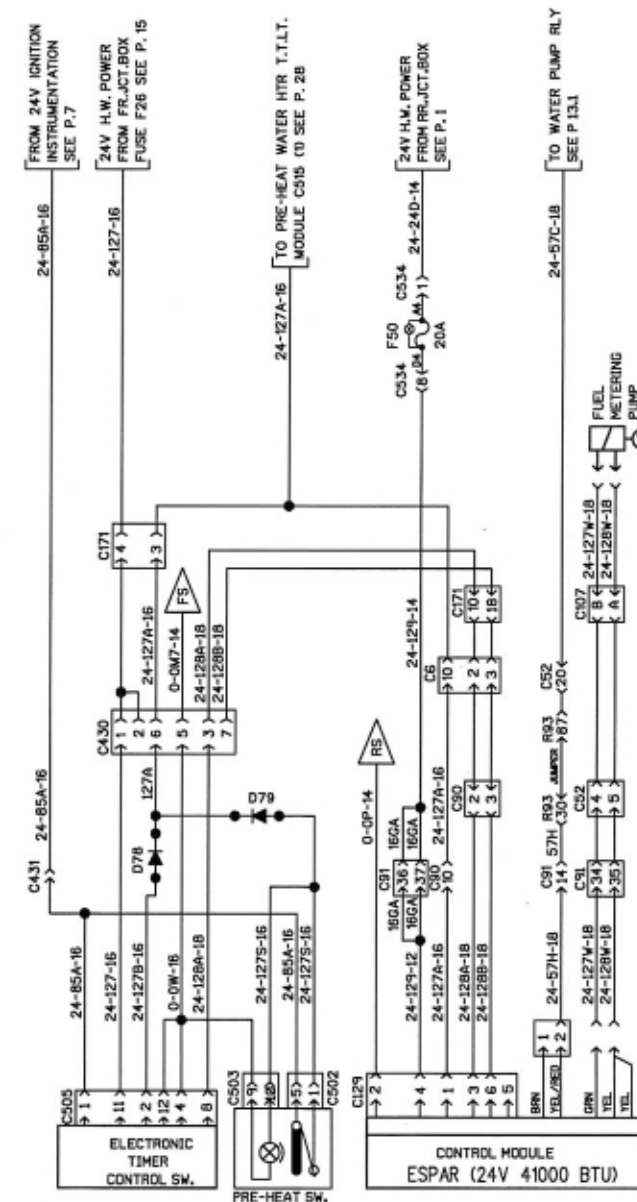

PRE-HEAT WATER HEATER (ESPAR)

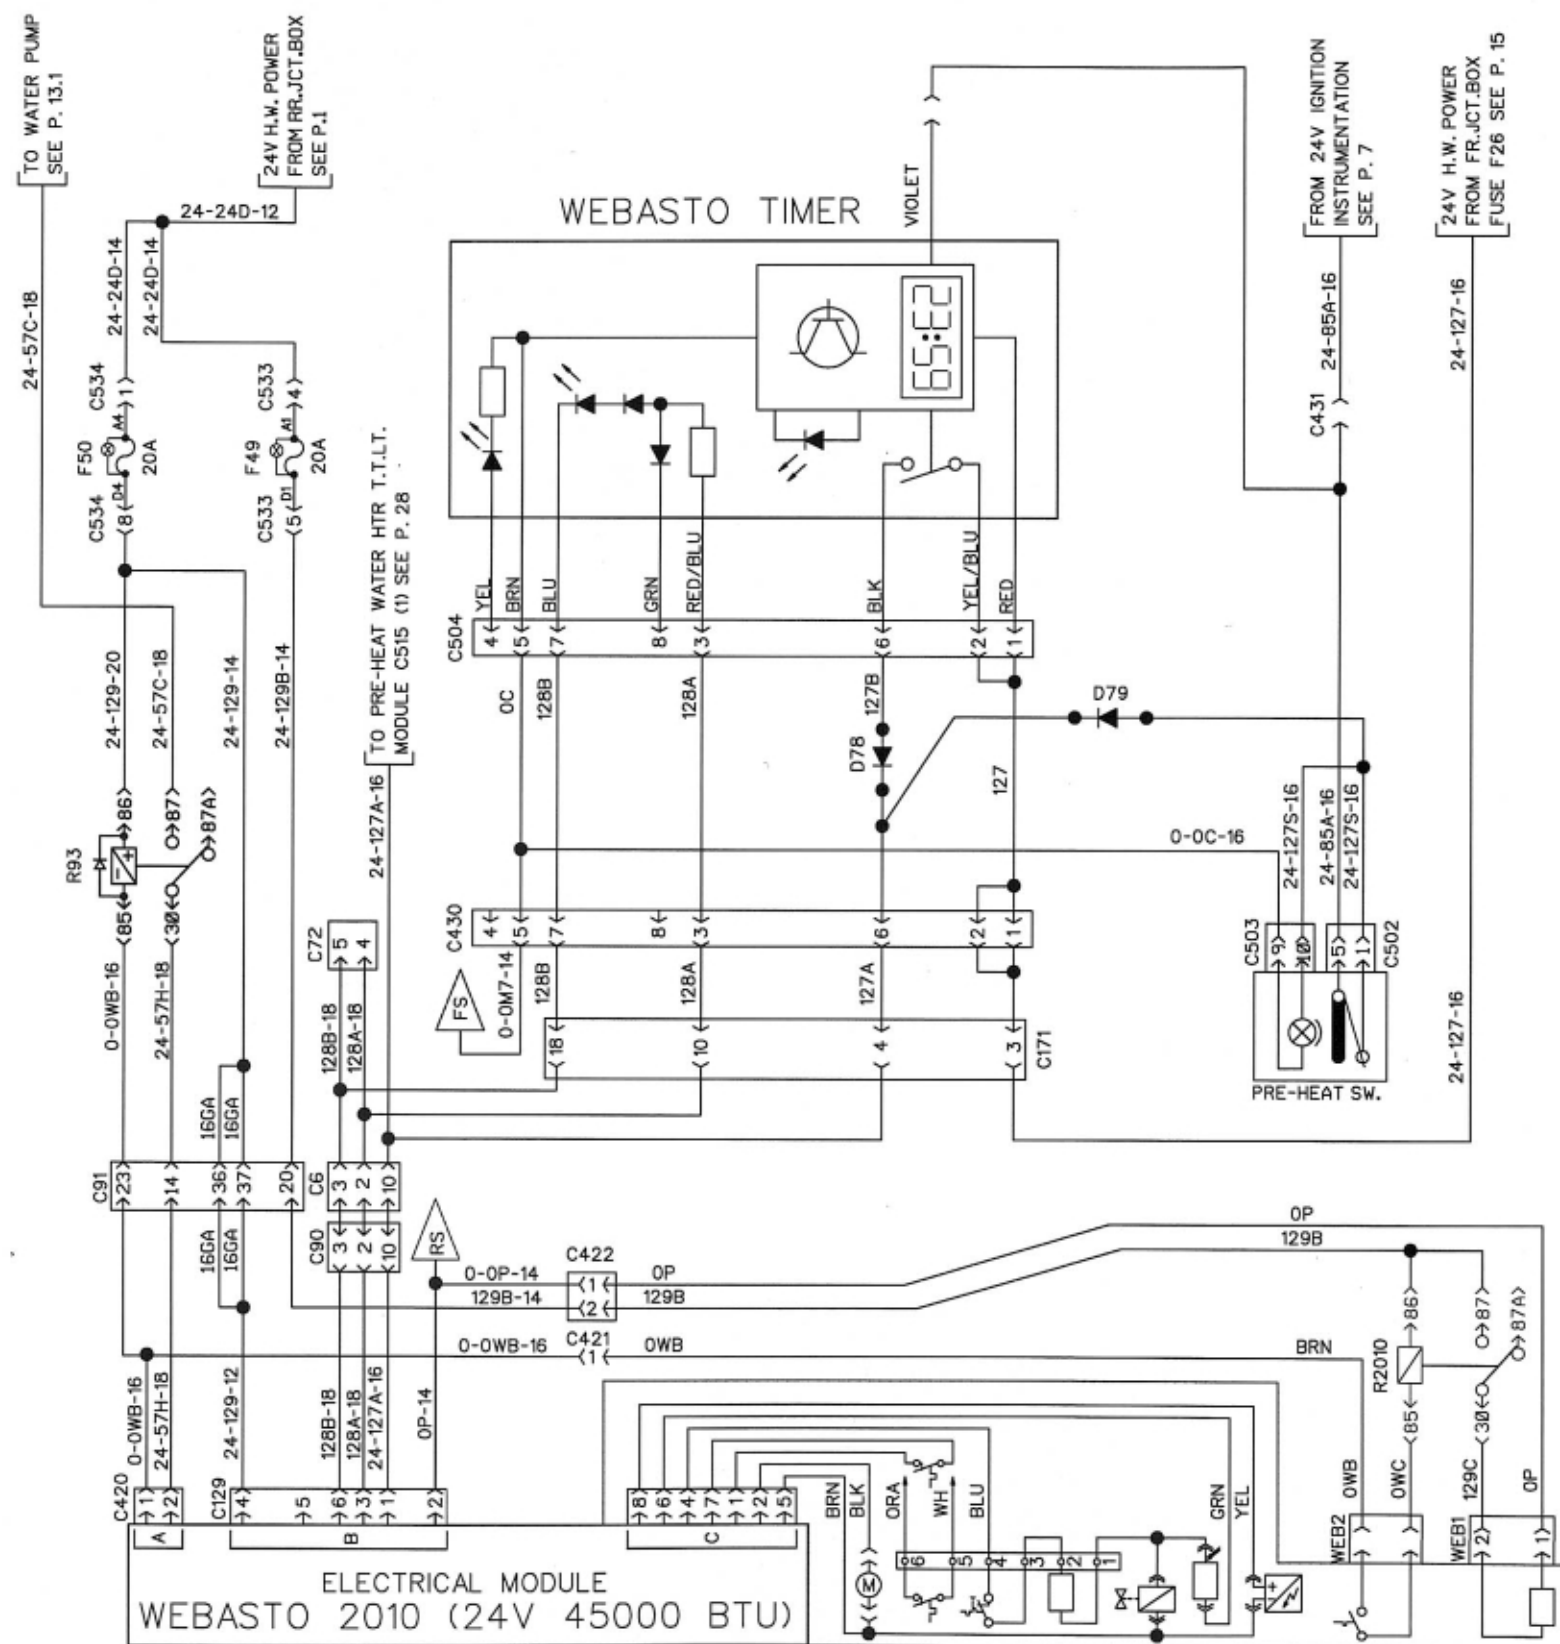


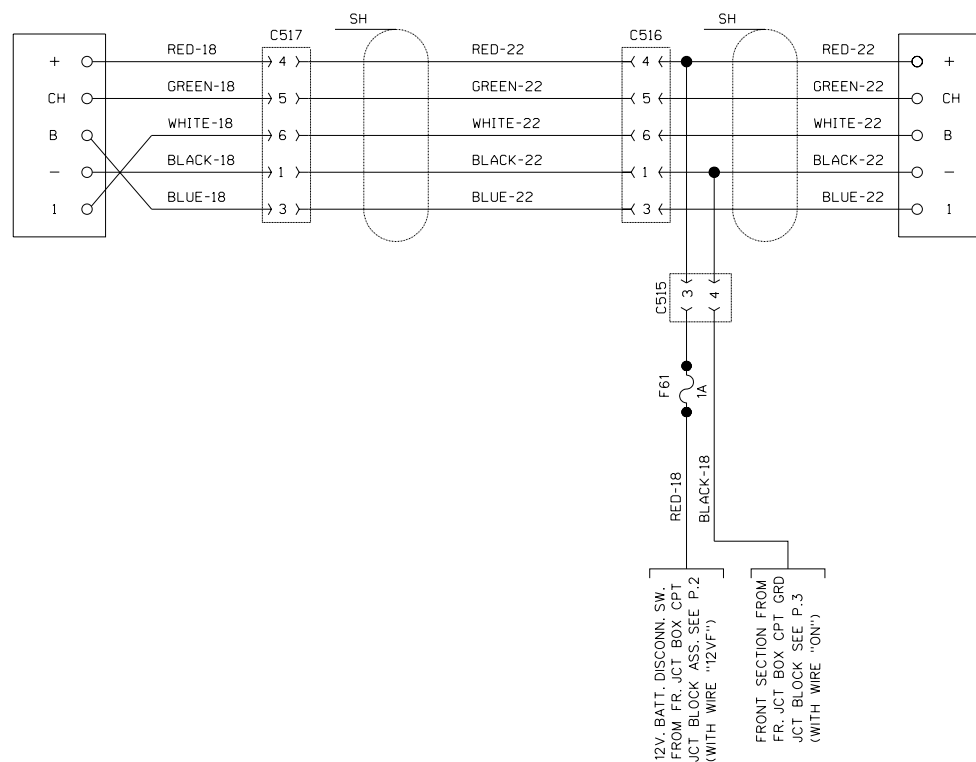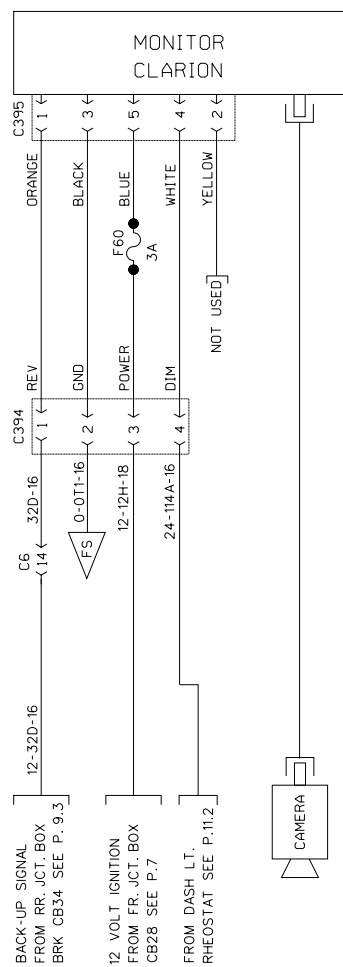

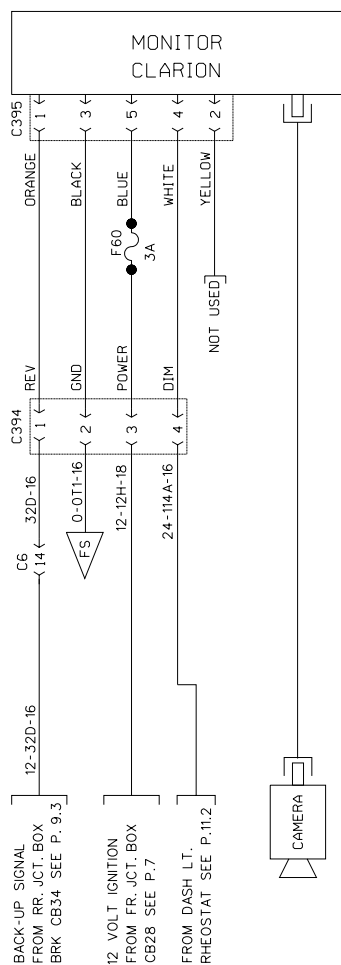

BACK-UP MONITOR (CLARION)

SECONDARY INTERCOM

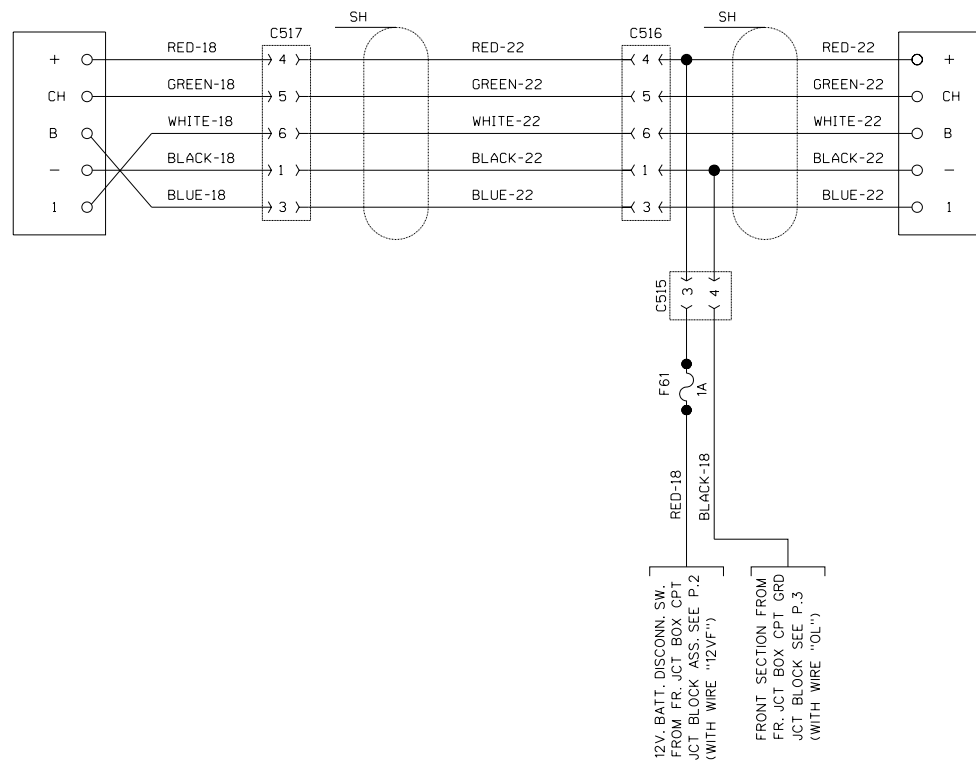

INTERCOM

