

## Wiring diagram pages list

Wiring diagram pages		D	I	S			
Multiplex outputs list	<b>B1</b>	Dash lights	19.1	Indicator light weight	32.2	Sound system	35.6
Multiplex inputs list	<b>B2</b>	Destination sign(s)	28.2	Indirect lighting	23.1	Sound sys.-Speakers	35.2
Multiplex error messages	<b>B3</b>	Digital clock	28.1	Ignition	3.2	Sound sys.-Video dist.	35.3
Layout vehicle - harness	<b>C, C1</b>	Driver's light & backlight	19.1			Sound sys.-Seat audio	35.7
Sound system	<b>C2</b>	Driver window	30.1	<b>K</b>		Spares wires	8.1
Pins configuration	<b>D</b>			Kneeling system	32.1	Stop lights	26.2
Circuits list	<b>E</b>	<b>E</b>				Steering control ZF	37.2
Circuit breakers list	<b>F</b>	ELD/ITS Gateway	42.4	<b>L</b>		Steering multifunctions	41.1
Connectors list	<b>G</b>	Emergency & Aisle lights	20.1	Lavatory	11.1	Step lights	29.1
Diodes list	<b>H</b>	Engine ECU	14.1	Low buoy	32.1	Surrounding cameras	44
Resistors list	<b>J</b>	Engine heater	14.1	Luggage door lock/unlock	33.1 - 33.2	Sun visor	41.1
Relays list	<b>K</b>	Engine start	3.2				
Fuses list	<b>L</b>	Engine & RJB cmpt. Light	25.1	<b>M</b>		<b>T</b>	
Wire identification chart	<b>M</b>	Entrance door & lights	29.1	Main dist. ignition & batt.	3.1	Tag	32.1
		ESP	16.1	Markers lights	26.1 - 26.2	Tail & licence lights	26.2
<b>A</b>				Mirrors	31.1	Tire pressure monitor	39.1
ACB	39.1	<b>F</b>		Multiplex power distribution	7.1	Trailer package	26.4
Air dryer	37.1	Fast idle	14.1	Multiplex network	6.1 - 6.2	Trailer park brake	12.2
Alternators	1.2	Fans radiator	13.1			Transmission ECU	15.1-15.2
		Fire alarm	38.1	<b>P</b>			
<b>B</b>		Fire suppression system	38.1	Parcel rack A/C system	18.3	<b>U</b>	
Back-up camera	28.1	Flashers	26.1-26.2	Parcel rack ISM	19.3	Upper defrost	18.4
Back-up warnings	26.3	Fog lights	26.5	Park brake sensor	12.1	Urea system	14.2
Batteries & Equalizer	1.1	Fuel gauge	10.1	Park brake trailer sensor	12.2		
Battery charger	17.1			Passenger entertain. sys.	35.9	<b>V</b>	
Brake pedal sensor	12.1	<b>G</b>		Power distribution FJB 12V	4.1	Volvo link TGW	37.1
		Gateway J1939	42.3	Power distribution FJB 24V	4.2		
<b>C</b>		Grounds electronic	2.1	Pwr dist. RJB 12V & 24V	5.1	<b>W</b>	
Cadec & seat belt alarm	42.1	Grounds chassis	2.2	Power outlets 12V	30.2	Water pre-heater	17.1
Cigar lighter	30.2			Power outlets 120VAC	40.1	Wheel chair lift Ricon	36.1
Clearance lights	26.1-26.2	<b>H</b>				Windows ajar	27.1
Cluster	10.1	Hazard	26.1	<b>R</b>		Wipers & washer	34.1
Cornering lights	26.5	Head lights	26.1	Reading lamps	22.2		
Cruise control	14.1	Horn	9.1	Retarder	12.1 - 15.1		
Curb lights	21.1	Hostess chime	22.2	RJB fan	1.1		
		Hvac defroster	18.1	Roof hatches w/fan	18.5		
		Hvac passenger	18.2				