

# CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
0	HVACpassengers	00R5	RJBelectronicGND	A1.15	TransmissionAlisson
0	GNDBatteries	0RAD	GNDChassis	A1.16	TransmissionAlisson
0A	12Voutlets	0RAD2	Fansdriveelectric	A1.18	TransmissionAlisson
00A	Entrancedoor	0RFG	GND_refrigerator_option	A1.19	TransmissionAlisson
00A1	Multiplexpower	0SS	GNDStud	A1.24	TransmissionAlisson
00A2	Cust_Adapt_Dash_Interface	0SS1	VSS	A1.25	TransmissionAlisson
0AItLL	GNDChassis	0SS2	VSS	A1.31	TransmissionAlisson
0AItR	GNDChassis	0SS2W	Cadec	A1.33	TransmissionAlisson
0AItUL	GNDChassis	0SS3	VSS	A1.36	TransmissionAlisson
0AItUR	GNDChassis	0SS9	WiFi_Pwr	A1.37	TransmissionAlisson
0B	GNDChassis	0SW	Indirectlights	A1.51	TransmissionAlisson
0C	Ignition&enginestart	0SW1	Indirectlights	A1.52	TransmissionAlisson
0chgr	Preheat	0TR-White	Trailerinterface	A1.54	TransmissionAlisson
0COND	GND_condensor_fans	0TR.White	Trailerinterface	A1.55	TransmissionAlisson
0ECU	EngineECUVolvo	00VA	RJBelectronicGND	A1.58	TransmissionAlisson
0EV2	HVACpassengers	0W	GNDStud	A1.71	TransmissionAlisson
0EVAP1	HVACpassengers	4c	wcl_extra_switch	A1.74	TransmissionAlisson
0EVAP2	HVACpassengers	12Ecu	12VECU	A1.76	TransmissionAlisson
0F	GNDCustomer	12ISH	Pwrl_Shift	A1.77	TransmissionAlisson
00F	FJBelectronicGND	12VA	Batteries	A2A.9	TransmissionAlisson
00F1	Multiplexpower	12VD	Batteries	A2A.11	TransmissionAlisson
00F2	Multiplexpower	12VD1	12VD	A3.1	TransmissionAlisson
00F3	Multiplexpower	12VD4	UNICAN_power_option	A3.2	TransmissionAlisson
00F5	GNDTrailerOption			A3.3	TransmissionAlisson
00F6	Readinglamps&chime	24VA	Batteries	A3.5	TransmissionAlisson
		24VD	Batteries	A3.6	TransmissionAlisson
0FE	GNDstud	24VD2	Equalizer	A3.7	TransmissionAlisson
0FH	Wipers&washer	24VD3	Ignition&enginestart	A4B.8	TransmissionAlisson
00FH	FJBelectronicGND	24VI	24WUP	A5.B	TransmissionAlisson
00FH1	HVACdefroster	73	wcl_extra_switch	A9CX1.2	Cluster
00FH2	Multiplexpower	74A	wcl_extra_switch	A9CX1.4	ESP
00FR	FJB-RJBjunction	74B	ReadingLampsLH	A9CX1.5	ESP
		75	wcl_extra_switch	A9CX1.6	Cluster
0Lav	wcl_extra_switch	400	CTGI_Gateway	A9CX2.1	ESP
0P	120VACoutlets	401	CTGI_Gateway	A9CX2.2	ESP
0PA	GNDstud	402	CTGI_Gateway	A9CX2.3	ESP
0PR	120VACoutlets	403	Panic_Sw150	A9CX2.4	ESP
0R	GNDChassis	404	Panic_Sw150	A9CX2.6	ESP
00R	Networks	900	Networks	A9CX2.7	ESP
00R1	RJBelectronicGND	901	Networks	A9CX2.9	ESP
00R2	Multiplexpower	_00	GNDBatteries	A9CX2.10	ESP
00R3	Multiplexpower	A1.11	TransmissionAlisson	A9CX2.12	ESP
00R4	Multiplexpower	A1.12	TransmissionAlisson	A9CX2.13	ESP

# CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
A9CX2.16	ESP	A34R.F3	Fansdriveelectric	A43J1.3	Lugg_door_lock
A9CX2.17	ESP	A34R.G3	Fansdriveelectric	A43J1.7	TPMS
A9CX3.2	ESP	A34R.H3	Fansdriveelectric	A43J2.1	Lugg_door_lock
A9CX3.3	ESP	A36JA.10	GNDISM	A43J2.4	Lugg_door_lock
A9CX3.5	ESP	A36JA.11	Horn	A43J2.7	EngineECUVolvo
A9CX3.7	ESP	A36JA.15	Ignition&enginestart	A43J2.10	EngineECUVolvo
A9CX3.9	ESP	A36JA.17	Ignition&enginestart	A43RJ1.17	ACB
A9CX3.10	ESP	A36JA.18	ISMClose	A43RJ1.18	ElectronicGnd
A9CX4.1	ESP	A36JA.25	Brake	A44J1.1	Upperdefrost
A9CX4.4	ESP	A36JB.2	Ignition	A44J1.3	Upperdefrost
A9CX4.7	ESP	A36JB.14	Firesuppression	A44J1.4	Entrancedoor
A9CX4.8	ESP	A39P101.1	Speakers	A44J1.7	Wipers&washer
A9CX4.10	ESP	A39P101.2	Speakers	A44J1.10	Wipers&washer
A9CX4.11	ESP	A39P101.3	Speakers	A44J1.13	Upperdefrost
A10X3.4	Preheat	A39P101.4	Speakers	A44J1.16	Horn
A10X3.6	preheat	A39P101.5	Speakers	A44J1.19	Engine&RJBcmpt.lights
A11A.2	Preheat	A39P101.6	Speakers	A44J2.1	Sunvisor
A14.A12	Cluster	A39P101.8	Speakers	A44J2.4	Sunvisor
A14.B1	Cluster	A39P101.9	Speakers	A44J2.7	Driverlights
A14.B18	Cluster	A39P901.1	Speakers	A44J2.10	Sunvisor
A14.B20	Cluster	A39P901.4	Speakers	A44J2.13	Sunvisor
A14.B21	Cluster	A39P901.5	Speakers	A44RJ1.17	Frflashers
A16.5	Destinationsigns	A39P901.6	Speakers	A44RJ1.18	Upperdefrost
A16.6	Destinationsigns	A40.3.Blue	TrailerBrakeOption	A44RJ2.2	Entrancedoor
A17.24V	Preheat	A41J1.1	Preheater_sys	A44RJ2.3	Wipers&washer
A17.AC	Preheat	A41J1.7	Shutdown	A45J1.1	HVACdefroster
A27.30	ZFsteering	A41J1.10	CTGI_Gateway	A45J1.3	HVACdefroster
A27.87A	ZFsteering	A41J1.13	Kneeling	A45J1.4	ZFsteering
A34.A5	Fansdriveelectric	A41J1.16	EngineECUVolvo	A45J1.7	12V_Ignition
A34.B5	Fansdriveelectric	A41J1.19	EngineECUVolvo	A45J1.16	Mirrors
A34.C5	Fansdriveelectric	A41RJ2.18	Kneeling	A45J2.1	HVACdefroster
A34.D5	Fansdriveelectric	A42J1.1	Kneeling	A45J2.4	HVACdefroster
A34.E5	Fansdriveelectric	A42J1.3	Kneeling	A45J2.7	Driverwindow
A34.F5	Fansdriveelectric	A42J1.4	Kneeling	A45J2.13	Driverwindow
A34.G5	Fansdriveelectric	A42J1.7	Kneeling	A45RJ1.17	Cornering&foglights
A34.H5	Fansdriveelectric	A42J1.10	Kneeling	A46J1.1	Horn
A34J.E	Fansdriveelectric	A42J1.13	Kneeling	A46J1.4	Frflashers
A34J.F	Fansdriveelectric	A42J1.16	Brake_Interlock	A46J1.7	Cornering&foglights
A34R.A3	Fansdriveelectric	A42J1.19	Brake_Interlock	A46J1.10	Frflashers
A34R.B3	Fansdriveelectric	A42J2.15	Kneeling	A46J1.13	Frflashers
A34R.C3	Fansdriveelectric	A42RJ2.14	Kneeling	A46J1.17	Frflashers
A34R.D3	Fansdriveelectric	A42RJ2.18	Kneeling	A46J2.4	Frflashers
A34R.E3	Fansdriveelectric	A43J1.1	Lugg_door_lock	A46J2.7	Frflashers

# CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
A46RJ1.17	Frflashers	A50J2.1	Rrflashers	A53RJ1.17	Lavatory
A46RJ1.18	Frflashers	A50J2.7	Rrflashers	A53RJ1.18	Emergency&aislelights
A47J1.1	HVACdefroster	A50J2.10	Back-upwarnings	A53RJ2.2	ParcelrackA/Csystem
A47J1.3	HVACdefroster	A50RJ1.17	Rrflashers	A53RJ2.3	Readinglamps&chime
A47J1.4	HVACdefroster	A50RJ1.18	Rrflashers	A54J1.1	HVACpassengers
A47J1.7	Wipers&washer	A50RJ2.2	Back-upwarnings	A54J1.3	HVACpassengers
A47J1.10	Entrancedoor	A50RJ2.3	Airdryer	A54J1.4	Preheat
A47J1.13	Entrancedoor	A51J1.4	Rrflashers	A54J1.7	HVACpassengers
A47J1.16	Entrancedoor	A51J1.7	Rrstoplights	A54J1.10	Preheat
A47J1.19	Entrancedoor	A51J1.10	Rrflashers	A54J1.16	HVACpassengers
A47J2.1	HVACdefroster	A51J1.13	Rrflashers	A54J1.19	HVACpassengers
A47J2.7	Entrancedoor	A51J1.16	TransmissionAlisson	A54J2.1	ParcelrackA/Csystem
A47RJ1.6	HVACdefroster	A51J1.19	WCL	A54J2.4	HVACpassengers
A47RJ1.17	HVACdefroster	A51J2.1	Rrflashers	A54J2.7	HVACpassengers
A47RJ1.18	Entrancedoor	A51J2.4	TransmissionAlisson	A54J2.10	HVACpassengers
A47RJ2.2	Entrancedoor	A51J2.7	Rrflashers	A54J2.13	HVACpassengers
A48J1.1	Cornering&foglights	A51J2.10	Rrflashers	A54J2.15	HVACpassengers
A48J1.4	Cornering&foglights	A51J2.15	Starting_Aid	A54RJ1.6	HVACpassengers
A48J1.7	Frflashers	A51RJ1.17	Rrflashers	A54RJ1.17	HVACpassengers
A48J1.10	Frflashers	A51RJ1.18	WCL	A54RJ1.18	ParcelrackA/Csystem
A48J2.1	Frflashers	A51RJ2.14	Starting_Aid	A54RJ2.2	HVACpassengers
A48J2.4	Frflashers	A52J1.1	Fansdriveelectric	A54RJ2.3	HVACpassengers
A48J2.13	Frflashers	A52J1.3	Fansdriveelectric	A55J1.1	Driverlights
A48RJ1.17	Cornering&foglights	A52J1.4	Lavatory	A55J1.3	Weightmonitoring
A48RJ1.18	Frflashers	A52J1.7	Engine&RJBcmpt.lights	A55J1.4	Cluster
A48RJ2.2	Frflashers	A52J1.10	Ignition&enginestart	A55J1.7	Back-upcamera
A49J1.1	Fansdriveelectric	A52J1.13	RJBFan	A55J1.10	Entrancedoor
A49J1.3	Fansdriveelectric	A52J2.1	Alternators	A55J2.15	Steering
A49J1.4	Kneeling	A52J2.4	Alternators	A55RJ1.18	Weightmonitoring
A49J1.7	Cadec	A52J2.13	Ignition&enginestart	A56J1.3	Cluster
A49J1.16	Starting_Aid	A52RJ1.17	GNDMUXmodules	A56J1.4	Cluster
A49J2.1	Alternators	A52RJ1.18	Engine&RJBcmpt.lights	A56J1.7	Cluster
A49J2.13	Brake	A53J1.1	ParcelrackA/Csystem	A56J1.10	Cluster
A49J2.15	Weightmonitoring	A53J1.3	ParcelrackA/Csystem	A56J1.13	Multiplexpower
A49RJ1.6	Weightmonitoring	A53J1.4	Lavatory	A56J1.19	VSS
A49RJ1.17	Kneeling	A53J1.7	Curblights	A56J2.15	Lugg_door_lock
A49RJ1.18	Cadec	A53J1.10	Curblights	A56RJ1.18	Windowsajar
A49RJ2.2	Fansdriveelectric	A53J1.13	Lavatory	A57J1.1	WCL
		A53J2.1	Indirectlights	A57J1.3	WCL
A50J1.4	Airdryer	A53J2.4	Readinglamps&chime	A57J1.4	WCL
A50J1.7	Back-upwarnings	A53J2.7	Lavatory	A57J1.10	WCL
A50J1.13	Rrflashers	A53J2.10	Readinglamps&chime		
A50J1.19	Rrflashers	A53J2.13	Emergency&aislelights	A57RJ1.18	GNDMUXmodules

# CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
A60.Gnd	VSS	A109A.7	TransmissionI_Shift	A137A.56	Ureasystem
A60.L	VSS	A109A.8	TransmissionI_Shift	A137A.59	Ureasystem
A60.R	VSS	A109A.9	TransmissionI_Shift	A137A.62	Ureasystem
A77.A	Equalizer	A109A.10	TransmissionI_Shift	A138.3	Ureasystem
A77.F	Equalizer	A113.Gnd	VSS	A138.12	Ureasystem
A77.H	Equalizer	A113.L	VSS	A150.4	Starting_Aid
A78.3	Equalizer	A113.R	VSS	A150.GND	VSS
A78.4	Equalizer	A113D.1	VSS	A150.L	VSS
A79.3	Equalizer	A113D.2	VSS	A150.R	VSS
A80.3	Equalizer	A113D.5	VSS	A151B.1	USB
A80.4	Equalizer	A120A.5	VSS	A151B.2	USB_Gnd
A81JB.4	EngineECUVolvo	A120B.3	VSS	A153A.5	VSS
A81JB.6	ZFsteering	A120B.4	VSS	A160.12	12WUP
A81JB.10	EngineECUVolvo	A120B.5	VSS	A190GND	Wifi_Chassis_Gnd
A81JB.15	Ignition&enginestart	A120B.6	VSS	Alt_LL.2	Alternators
A81JB.16	EngineECUVolvo	A120C.4	VSS	Alt_LR.2	Alternators
A81JB.17	EngineECUVolvo	A121A.18	VSS	Alt_UR.2	Alternators
A81JB.19	EngineECUVolvo	A121B.16	VSS	AltLL	Alternators
A81JB.22	EngineECUVolvo	A121B.17	VSS	AltLR	Alternators
A81JB.23	EngineECUVolvo	A121C.7	VSS	AltUL	Alternators
A81JB.25	EngineECUVolvo	A121C.11	VSS	AltUR	Alternators
A81JB.26	EngineECUVolvo	A121C.12	VSS	Aux24V	Starting_Aid
A85.A	12WUP	A121C.13	VSS	AuxVideoGnd	VSS
A85.B	GND_Aux_Batteries	A121C.15	VSS	AuxVideoL	VSS
A86.3	Starting_Aid	A130.3	Firesuppression	AuxVideoR	VSS
A96.8.Black	TPMS	A130.4	Firesuppression	B85.2	Ureasystem
A96.23.Red	TPMS	A130.6	Firesuppression	B97.2	Ureasystem
A96.24.Black	TPMS	A130.8	Firesuppression	B98.2	Ureasystem
A96.25.Red	TPMS	A130.11	Firesuppression	B115A.3	Ureasystem
A96.27.Black	TPMS	A131A.C	Firesuppression	BatAux24V	24WUP
A96.28.Red	TPMS	A131B.A	Firesuppression	BLACK	120VACoutlets
A100.3.White	TPMS	A131B.C	Firesuppression	Black	Preheat
A101.3.White	TPMS	A137A.4	Ureasystem	Black.1	Readinglamps&chime
A101.7.White	TPMS	A137A.7	Ureasystem	Black.3	Readinglamps&chime
A102.3.White	TPMS	A137A.8	Ureasystem	Black.4	Readinglamps&chime
A103.1	Steering	A137A.24	Ureasystem		
A103.3	Steering	A137A.28	Ureasystem	BLK1	VSS
A103.5	Horn	A137A.40	Ureasystem	BLK2	VSS
A108.5	TransmissionI_Shift	A137A.44	Ureasystem	Blue	Audio
A108.7	TransmissionI_Shift	A137A.49	Ureasystem		
A108.8	TransmissionI_Shift	A137A.50	Ureasystem	BussBar	12VtoCB10
A108.9	TransmissionI_Shift	A137A.51	Ureasystem	C41.A	Preheat
A108.10	TransmissionI_Shift	A137A.54	Ureasystem	CanH2	Spareswires

# CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
CanL2	Spareswires	DLOHS	Spareswires	F33	Multiplexpower
CB1	24WUP	DL0L	Spareswires	F34	Multiplexpower
CB2	Ignition&enginestart	DL0LS	Spareswires	F35	Multiplexpower
CB3	HVACpassengers	DL1H	Networks	F36	Startswitch
CB5	24WUP	DL1L	Networks	F37	Entrancedoor
CB6	24VD	DL2H	Networks	F39	24VDcustomer
CB8	12WUP	DL2L	Networks	F40	Firesuppression
CB9	Preheat	DL3H	Networks	F41	
CB10	12WUP	DL3L	Networks	F42	Transmissionl_Shift
CB11	VSS	DL7H	NetworksECU	F43	Transmissionl_Shift
CB13	12OVACoutlets	DL7L	NetworksECU	F44	Multiplexpower
CB13A1	3inverterOption	DL9H	NetworksECU	F45	Multiplexpower
CB13A2	3inverterOption	DL9L	NetworksECU	F46	Multiplexpower
CB13B	3inverterOption	DL10H	J1939_Gateway	F47	Multiplexpower
CB48	Frflashers	DL10L	J1939_Gateway	F50	HVACdefroster
CB117	TrailerElecOption	DL100H	J939_FMSGateway	F51	Destinationsigns
CB119	TrailerElecOption	DL100L	J939_FMSGateway	F52	FMSGateway
CB128	24VD	Drain	Audio	F53	VSS
CB201	Fansdriveelectric	DVD_Gnd	VSS	F55	Back-upcamera
CB202	Fansdriveelectric	DVD_L+	VSS	F73	EngineECUVolvo
CB203	Fansdriveelectric	DVD_R+	VSS	F90	Ureasystem
CB204	Fansdriveelectric	EI.7	Cluster	F91	EngineECUVolvo
CB205	Fansdriveelectric	EI.18	EngineECUVolvo	F95	FMSGateway
CB206	Fansdriveelectric	EMS.EB29	Ignition&enginestart	F96	Ureasystem
CB207	Fansdriveelectric	F4	Transmissionl_Shift	F99	EngineECUVolvo
CB208	Fansdriveelectric	F10	Cluster	F100	EngineECUVolvo
CB301.Black	TrailerElecOption	F11	Horn	F101	R1toStarter
Cd1	Networks	F13	12VDCustomer	F102	3InverterOption
CTS	Networks	F15	TWG_Pwr	F103	24Wup
Cts	Networks	F16	12VEng.run	F106	Multiplexpower
D1	Starting_Aid	F17	Multiplexpower	F107	Multiplexpower
D7	Entrancedoor	F18	Multiplexpower	F108	Networks
D9	Preheat	F19	Multiplexpower	F109	Engine&RJBcmpt.lights
D12	Horn	F20	Multiplexpower	F110	TransmissionAlisson
D13	Horn	F21	Multiplexpower	F112	SparesVECR
D44	Ignition&enginestart	F22	ELD	F116	24WUP
D45	Starting_Aid	F23	ESP	F117	SparesVECR
D45.B	Starting_Aid	F24	Cust_Adapt_Dash_Interface	F118	TrailerElecOption
D46	Ignition&enginestart	F25	12Voutlets	F121	CCust
D55	Readinglamps&chime	F26	BifoldDoorOption	F122	Equalizer
D64.A	HVACpassengers	F27	SparesVECF	F123	Preheat
D64.B	HVACpassengers	F29	ECUignition	F124	Preheat
DL0H	Spareswires	F30	Networks	F126	HVACpassengers

# CIRCUITS LIST

CircuitIDPWR	Description	CircuitID	Description	CircuitID	Description
F127	Preheat	L207.1	WCL	N23	Networks
F131	CCust	L207.2	WCL	N24	Networks
F132	Multiplexpower	L207.3	WCL	N25	Networks
F133	Multiplexpower	L207.GND	WCL	N26	Networks
F134	Multiplexpower	L350A.B2	EngineECUVolvo	N27	Networks
F135	Multiplexpower	L400.G	Engineheateroutlet	N28	Networks
F136	Multiplexpower	L400.L	Engineheateroutlet	N29	Networks
F138	Readinglamps&chime	L400.N	Engineheateroutlet	N30	Networks
F139	Alternators	LF+	VSS	N31	Networks
F141	HVACpassengers	LF-	VSS	N56-1	Networks
F142	HVACpassengers	LightGreen	USB	N56-2	Networks
F143	HVACpassengers	LR+	VSS	N57_1	Networks
F144	HVACpassengers	LR-	VSS	N57_2	Networks
F145	PWR_refrigerator_option	Mo65.3	Fansdriveelectric	Pink	VSS
F147	CCust	Mo67.3	Fansdriveelectric	Pot1	Driverlights
F148	12VD	Mo68.3	Fansdriveelectric		
F152	SparesVECR	Mo69.3	Fansdriveelectric	R+	VSS
F156	UNICAN_power_option	Mo70.3	Fansdriveelectric	R+TV	VSS
F199	Fansdriveelectric	Mo71.3	Fansdriveelectric	R-	VSS
F200	VSS	Mo72.3	Fansdriveelectric	R4.85	Firesuppression
F201	VSS	Mo73.3	Fansdriveelectric	R4.87A	Preheat
F202	VSS	N1	Networks	R5.87	Preheat
F203	VSS	N2	Networks	R12	HVACpassengers
F214	WiFi_Pwr	N3	Networks	R12.2	HVACpassengers
F243	HVACpassengers	N4	Networks	R12VISS	VSS
gnd_1	Cantrack	N5	Networks	R20.87	Preheat
Gnd_2	Cantrack	N6	Networks	R21.87	RJBoutswitch
GndA	Networks	N7	Networks	R21.B	ISM
GndG	GndCadec	N8	Networks	R22.87	ECUignition
GREEN	120VACoutlets	N9	Networks	R23.30	I_Shift
Green	Preheat	N10	Networks	R25.87	24Vignition
Green/White	USB	N11	Networks	R26.30	HVACpassengers
GRN1	VSS	N12	Networks	R27.87A	Wipers&washer
GRN2	VSS	N13	Networks	R29	EngineECUVolvo
IN1	UNICAN	N14	Networks	R30.87	12VEngruncustomer
IN2	UNICAN	N15	Networks	R31.87	12Vlgncustomer
IN3	UNICAN	N16	Networks	R34.30	12VECU
JMP6-10	Cust_Adaptation	N17	Networks	R36.87	Horn
		N18	Networks	R37.30	Horn
L+	VSS	N19	Networks	R38.87	12Voutlets
L+TV	VSS	N20	Networks	R40.87	TransmissionI_Shift
L-	VSS	N21	Networks	R47.87	WCL
L142.3	Lavatory	N22	Networks	R51.87.Yellow	Trailerinteface

# CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
R52.87.Green	Trailerinterface	Se32.A	TransmissionAlisson	SHL2	VSS
R53.30.Red	TrailerLectOption	Se32.B	TransmissionAlisson	So9.B	HVACpassengers
R54.87	Trailer	Se33.A	TransmissionAlisson	spare10	Spareswires
R55.30.Brown	Trailer	Se34.A	TransmissionAlisson	spare11	Spareswires
R140	Lavatory	Se34.B	TransmissionAlisson	spare12	Spareswires
R210.B	ISM_Prack	Se35.A	TransmissionAlisson	spare13	Spareswires
R_Inv	InverterPwr	Se35.B	TransmissionAlisson	spare14	Spareswires
R_Starter	Ignition&enginestart	Se37.1	ESP	spare15	Spareswires
Radio_Gnd	VSS	Se37.2	ESP	spare16	Spareswires
Radio_R+	VSS	Se38.1	ESP	spare17	Spareswires
Radoi_L+	VSS	Se38.2	ESP	spare18	Spareswires
RED	VSS	Se39.1	ESP	spare19	Spareswires
RED1	VSS	Se39.2	ESP	spare20	Spareswires
RED2	VSS	Se40.1	ESP	spare21	Spareswires
RF+	VSS	Se40.2	ESP	spare22	Spareswires
RF-	VSS	Se45.2	Wipers&washer	spare23	Spareswires
RR+	VSS	Se46.B	Trailerparkbrake	spare24	Spareswires
RR-	VSS	Se49	HVACpassengers	spare25	Spareswires
RTS	Networks	Se51.2	Wip.WasherLevel	spare28	Spareswires
Rts	Networks	Se53.C	Cluster	spare29	Spareswires
RX	TPMS	Se54.C	Cluster	spare30	Spareswires
Rx	Cantrack	Se55.C	Cluster	spare31	Spareswires
RxD	Networks	Se56.A	WCL	spare32	Spareswires
RxTx	Networks	Se62.B	WCL	spare33	Spareswires
Se4.1	Windowsajar	Se63.1	ESP	spare34	Spareswires
Se11.Sig	Cluster	Se63.2	ESP	spare35	Spareswires
Se11.Wrn	Cluster	Se64.1	ESP	spare39	Spareswires
Se13.B	EngineECUVolvo	Se64.2	ESP	spare40	Spareswires
Se14A.B	EngineECUVolvo	Se67.C	ESP	spare41	Spareswires
Se14B.C	EngineECUVolvo	Se69.C	ESP	spare42	Spareswires
Se15.1	Entrancedoor	Se74.3	TransmissionAlisson	spare43	Spareswires
Se17.1	Entrancedoor	Se75.C	Weightmonitoring	spare44	Spareswires
Se17.1/Se76.4	Entrancedoor	Se76.4	Entrancedoor	spare64	Spareswires
Se18.B	Brake	Se77.C	Entrancedoor	spare65	Spareswires
Se19_P.D	Brake	Se78.C	Entrancedoor	spare72	Spareswires
Se19_S.D	Brake	Se79.1	KneelingLevel	spare73	Spareswires
Se20.B	Cluster	Se79.4	Kneeling	spare210	Cadec
Se21.2	HVACdefroster	Se80.C	Weightmonitoring	spare211	Cadec
Se23.C	HVACpassengers	Se94.A	WCL	spare212	Cadec
Se24.2	HVACpassengers	Se100.4	WCL	spare213	Cadec
Se24.3	HVACpassengers	Shield_149	GNDstud	Spk1_L	Speakers
Se25.2	HVACpassengers	Shield_149A	GNDstud	Spk1_R	Speakers
Se30.A	Engine&RJBcmpt.lights	Shield_A16.7	Destinationsigns	Spk2_L	Speakers

# CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
Spk2_R	Speakers	Sw14.8	EngineECUVolvo	Sw46A	Engine&RJBcmpt.lights
Spk3_L	Speakers	Sw16.3	Brake	Sw55.1	Lavatory
Spk3_R	Speakers	Sw16.8	Brake	Sw56.1	Lavatory
Spk4_L	Speakers	Sw17.6	EngineECUVolvo	Sw57.A	WCL
Spk4_R	Speakers	Sw18A.2B	Lugg_door_lock	Sw58.2	Ignition&enginestart
Spk5_L	Speakers	Sw20.3	WCL	Sw58.3	Ignition&enginestart
Spk5_R	Speakers	Sw20.8	WCL	Sw58.5	Ignition&enginestart
Spk6_L	Speakers	Sw21.3	Upperdefrost	Sw58.7	Ignition&enginestart
Spk6_R	Speakers	Sw21.8	Upperdefrost	Sw59.3	Ignition&enginestart
Spk9_L	Speakers	Sw24.3	Driverlights	Sw63A.3	Horn
Spk9_R	Speakers	Sw24.6	Driverlights	Sw63A.4	Horn
Spk10_L	Speakers	Sw24A.3	Driverlights	Sw64	Kneeling
Spk10_R	Speakers	Sw25.3	Readinglamps&chime	Sw80.6	Starting_Aid
Spk11_L	Speakers	Sw25.6	Readinglamps&chime	Sw80A.6	Starting_Aid
Spk11_R	Speakers	Sw26.3	Readinglamps&chime	Sw82.4	Masterrelay&12VIgn
Spk12_L	Speakers	Sw26.8	Readinglamps&chime	Sw82.5	Masterrelay&12VIgn
Spk12_R	Speakers	Sw27.3	ParcelrackA/Csystem	Sw82.8	Starting_Aid
Spk13_L	Speakers	Sw27.8	ParcelrackA/Csystem	Sw82A.8	Starting_Aid
Spk13_R	Speakers	Sw29.2	Readinglamps&chime	Sw83.Acc	Ignition&enginestart
Spk14_L	Speakers	Sw29.3	Readinglamps&chime	Sw83.Ign	Ignition&enginestart
Spk14_R	Speakers	Sw29.8	Readinglamps&chime	Sw83.St	Ignition&enginestart
STO-LOC	WCL	Sw31.A	WCL	Sw83.St.Rtn	Ignition&enginestart
Sw1.5	Frflashers	Sw32.3	Entrancedoor	Sw83A.4	Starting_Aid
Sw1C258.2	Wipers&washer	Sw33.3	Entrancedoor	Sw83A.6	Starting_Aid
Sw1C258.3	Wipers&washer	Sw34.1	Entrancedoor	Sw85.A1	Mirrors
Sw1C258.4	Wipers&washer	Sw34.4	Entrancedoor	Sw85.A3	Mirrors
Sw1C258.6	Wipers&washer	Sw35.3	EngineECUVolvo	Sw85.B1	Mirrors
Sw1C258.7	Wipers&washer	Sw35.8	EngineECUVolvo	Sw85.B2	Mirrors
Sw1C258.8	Frflashers	Sw38.2B	Driverwindow	Sw85.B4	Mirrors
Sw1C259.1	Frflashers	Sw40.B	Trailerparkbrake	Sw94	WCL
Sw1C259.2	Frflashers	Sw41.A1	Mirrors	Sw96.N3	Readinglamps&chime
Sw1C259.4	Frflashers	Sw41.A3	Mirrors	Sw97.N1	Readinglamps&chime
Sw2.3	Frflashers	Sw41.B1	Mirrors	Sw100A.3	Cornering&foglights
Sw2.6	Frflashers	Sw41.B2	Mirrors	Sw109	Lugg_door_sw
Sw3.3	Cornering&foglights	Sw41.B4	Mirrors	Sw110	Lugg_door_sw
Sw3.8	Cornering&foglights	Sw42.2	WCL	Sw111	Lugg_door_sw
Sw4.3	Frflashers	Sw42.3	WCL	Sw112	Lugg_door_sw
Sw4.8	Frflashers	Sw42.4	WCL	Sw113	Lugg_door_sw
Sw6.4	Wipers&washer	Sw42.5	WCL	Sw114	Lugg_door_sw
Sw10A.2B	Kneeling	Sw42.6	WCL	Sw115	Lugg_door_sw
Sw12.3	Destinationsigns	Sw42.7	WCL	Sw124.3	Destinationsigns
Sw12.8	Destinationsigns	Sw43.B	Kneeling	Sw125.B	Kneeling
Sw14.3	EngineECUVolvo	Sw44	Engine&RJBcmpt.lights	Sw135.N3	Readinglamps&chime



# CIRCUITS LIST

CircuitID	Description				
Sw140.B	Entrancedoor				
Sw142.5	Entrancedoor				
Sw149.2B	ReadinglampsCancelSw				
Sw149.3	Readinglamps&chime				
Sw152.B	Firesuppression				
Sw156.1	Mirrors				
Sw156.6	Mirrors				
Sw156.8	Mirrors				
Sw157.2B	Sunvisor				
Sw158.2B	Sunvisor				
Sw313.N3	Readinglamps&chime				
Sw662.3	Cust_Adaptation				
Sw663.3	Roof_Hatch_Fans				
TR-Black	VECT				
TR-Blue	VECT				
TR-Brown	VECT				
TR-Green	Trailerinterface				
TR-Red	Trailerinterface				
TR-Yellow	VECT				
Tv.Gnd	VSS				
TV.L	VSS				
TV.R	VSS				
TvGnd	VSS				
TWU.3	WCL				
TX	TPMS				
Tx	Cantrack				
TxD	Networks				
ve+	Cantrack				
VECPR4.H	24VDISMPRack				
WHITE	120VACoutlets				
White	Preheat				
WHT1	VSS				
WHT2	VSS				
YelGrn	Readinglamps&chime				