

RELAYS LIST

No	Location	Part #	Function	Page					
R1	RJB	562364	MasterR1	2A					
R3	RJB	563348	12Vlgn/Acc	2B					
R4	FJB	563332	CutPreheat	3B					
R5	RJB	563332	Charging_Relay_Optionnal	3C					
R12	Evap_cmpt.	563348	Evaporator	4C					
R20	RJB	563332	WatPump	3B					
R21	FJB	560493	24vRelayLatching	2B					
R22	FJB_VECF	563269	Eculgn	1C					
R23	FJB_VECF	563269	Shutdown	1D					
R24	FJB_VECF	563269	EcuShift	1D					
R25	FJB_VECF	563269	24Vlgn	1C					
R26	Evap_Cmpt	563332	Pre-Heat	3B					
R27	RHConsole	563332	Wipers	3C					
R28	RrSeat	563348	InverterRelay2	2C					
R29	RJB	563348	Preheater	2E					
R30	RJB	563269	12vENGRUN	3A					
R31	RJB	563269	12vIGN	4B					
R34	RJB	564218	12vEngEcu	3D					
R36	RJB	563269	Fire_Extin	1A					
R37	RJB	563269	Electhorn	2B					
R38	RJB	563269	Ciga/Outle	1B					
R40	RJB	563332	IShiftPwr	1D					
R47	WCLPump	563332	WCLDoorOpen	6C					
R51	VECT	563270	Backuplights	3E					
R52	VECT	563270	Taillights&runninglights	3D					
R53	VECT	563270	Flashersleftside	3C					
R54	VECT	563270	Brakelights	3B					
R55	VECT	563270	Flashersrightside	3C					
R56	RJB_VECT	563270	Tail&licencelights	3D					
R60	VECPR	563269		1B					
R61	VECPR	563269	*opt*	1C					
R62	VECPR	563269	*opt*	1D					
R63	VECPR	563269	*opt*	1D					
R72	5th_Bay	563348	InverterRelay1	3C					
R73	5th_Bay	563348	InverterRelay2	3C					
R85		560462	*opt*	3C					
R210	Parcel_Rack_LH	561991	24vRelayLatching	0B					
R_12VISS	RJB	563332	12Vignition	6F					
R_Starter	RJB	564095	StartCtrl	3D					
R38A	RrSeat	563348	InverterRelay3	2D					