

RELAYS LIST

No	Location	Part #	Function	Page
R1	RJB	562364	MasterR1	3.1
R3	RJB	563348	12vIgn/Acc	3.1
R4	FJB	563332	CutPreheat	38.1
R5	RJB	563332	Charging_Relay_Optionnal	17.1
R12	Evap_cmpt.	563348	Evaporator	18.2
R20	RJB	563332	WatPump	17.1
R21	FJB	560493	24vRelayLatching	3.2
R22	FJB_VECF	563269	Eculgn	4.1
R23	FJB_VECF	563269	Shutdown	4.1
R23A	FJB_VECF	563269	Shutdown	4.1
R24	FJB_VECF	563269	EculShift	4.1
R25	FJB_VECF	563269	24VIgn	4.2
R26	Evap_Cmpt	563332	Pre-Heat	18.2
R27	RHConsole	563332	Wipers	34.1
R28	RrSeat	563348	InverterRelay2	40.2
R29	RJB	563348	Preheater	14.1
R30	RJB	563269	12vENGRUN	4.1
R31	RJB	563269	12vIGN	4.1
R34	RJB	564218	12vEngEcu	3.2
R36	RJB	563269	Fire_Extin	9.1
R37	RJB	563269	Electhorn	9.1
R38	RJB	563269	Ciga/Outle	30.2
R40	RJB	563332	IShiftPwr	15.2
R47	WCLPump	563332	WCLDoorOpen	36.1
R51	VECT	563270	Backuplights	26.6
R52	VECT	563270	Taillights&runninglights	26.4
R53	VECT	563270	Flashersleftside	26.4
R54	VECT	563270	Brakelights	26.4
R55	VECT	563270	Flashersrightside	26.4
R56	RJB_VECT	563270	Tail&licencelights	26.4
R60	VECPR	563269	VECPR	60.3
R61	VECPR	563269	VECPR	60.3
R62	VECPR	563269	VECPR	60.3
R63	VECPR	563269	VECPR	60.3
R72	RearSeat	563348	InverterRelay1	40.1
R73	5th_Bay	563348	InverterRelay2	40.1
R210	Parcel_Rack_LH	561991	24vRelayLatching	60.3
R_12VISS	RJB	563332	12Vignition	35.6
R_Starter	RJB	564095	StartCtrl	3.2
R38A	RrSeat	563348	InverterRelay3	40.2
RadioVolvo1_966		23000462	Radio	35.7
RadioVolvo2_966		23000462	Radio	35.7
RadioVolvo3_966		23000462	Radio	35.7