

FUSES LIST

No	Location	Part #	Function	Rating	Page
F1	RJB	564520	Ultracap	300A	4C
F4	FuseBoxFJB	563280	TGW/IshPwr	5amp	2B
F10	FuseBoxFJB	563280	OBD&Clust	5amp	1A
F11	FuseBoxFJB	563282	Horn	20amp	1A
F12	FuseBoxFJB	563284	Spare	15amp	1A
F13	FuseBoxFJB	563284	12VDCust	15amp	1A
F14	FuseBoxFJB	563165	Spare	30amp	1A
F15	FuseBoxFJB	563280	Spare	5amp	1A
F16	FuseBoxFJB	563284	12EngRunCu	15amp	1A
F17	FuseBoxFJB	563165	A43Pwr	30amp	1A
F18	FuseBoxFJB	563165	A45Pwr	30amp	1A
F19	FuseBoxFJB	563165	A46Pwr	30amp	1B
F20	FuseBoxFJB	563280	A55/A15Pwr	5amp	1B
F21	FuseBoxFJB	563165	A48Pwr	30amp	1B
F22	FuseBoxFJB	563280	WIFIOPT	5amp	1B
F23	FuseBoxFJB	563165	ESP	30amp	1B
F24	FuseBoxFJB	563284	12VICust	15amp	1B
F25	FuseBoxFJB	563284	12VOutlet	15amp	1B
F26	FuseBoxFJB	563284	BifoldSe	15amp	1B
F27	FuseBoxFJB	563165	Spare	30amp	1B
F29	FuseBoxFJB	563283	Shutdown	10amp	1C
F30	FuseBoxFJB	563280	OBDCon	5amp	1C
F33	FuseBoxFJB	563280	A41Pwr	5amp	2B
F34	FuseBoxFJB	563280	A42Pwr	5amp	2B
F35	FuseBoxFJB	563280	MCMPwr	5amp	2A
F36	FuseBoxFJB	563280	StartSw	5amp	2A
F37	FuseBoxFJB	563280	Haz/ExtDoorSw	5amp	2A
F39	FuseBoxFJB	563284	24VDCust	15amp	2B
F40	FuseBoxFJB	563284	AFSSPwr	15amp	2B
F41	FuseBoxFJB	563280	Spare	5amp	2B
F42	FuseBoxFJB	563283	IShiftPwr	10amp	1D
F43	FuseBoxFJB	563282	IShiftPwr	20amp	1D
F44	FuseBoxFJB	563165	A44Pwr	30amp	2B
F45	FuseBoxFJB	563165	A47Pwr	30amp	2B
F46	FuseBoxFJB	563280	A56Pwr	5amp	2B
F47	FuseBoxFJB	563280	MCM	5amp	2B
F50	FuseBoxFJB	563165	Defrost	30amp	2C
F51	FuseBoxFJB	563280	DestSigns	5amp	2C
F52	FuseBoxFJB	563280	Spare	5amp	2C
F53	FuseBoxFJB	563283	Clock/VSS	10amp	2C
F54	FuseBoxFJB	563284	Spare	15Amp	2C
F55	FuseBoxFJB	563283	B-UpCam	10amp	2D
F56	FuseBoxFJB	563284	Spare	15amp	2D

FUSES LIST

No	Location	Part #	Function	Rating	Page
F57	FuseBoxFJB	563283	Spare	10amp	2D
F58	FuseBoxFJB	563284	Spare	15amp	2D
F73	FuseBoxRJB	563283	EngECU	20amp	2B
F90	FuseBoxRJB	563282	UreaSys	20amp	1A
F91	FuseBoxRJB	563282	EngECU	20amp	2A
F95	FuseBoxFJB	563280	TGW/IShPwr	5amp	2C
F96	FuseBoxRJB	563282	ACM24VD	20amp	1C
F99	FuseBoxRJB	563165	EngECU	30amp	1A
F100	FuseBoxRJB	563283	EngECU	10amp	2A
F101	FuseBoxRJB	564520	PwrR1	300Amp	3A
F102	RJB	564520	Invertes	300A	3C
F103	RJB	564520	Ultracap	300A	3A
F105	FuseBoxRJB	563282	Spare	20amp	2A
F106	FuseBoxRJB	563153	A50Pwr	30amp	1A
F107	FuseBoxRJB	563153	A51Pwr	30amp	2B
F108	FuseBoxRJB	563280	OBDConPwr	5amp	1B
F109	FuseBoxRJB	563280	RrProxSw	5amp	2B
F110	FuseBoxRJB	563283	TransPwr	10amp	1B
F112	FuseBoxRJB	563165	Spare	30amp	1B
F113	FuseBoxRJB	563283	Spare	10amp	2B
F114	FuseBoxRJB	563284	Spare	15amp	1B
F115	FuseBoxRJB	563282	Spare	20amp	2B
F116	FuseBoxRJB	563284	Spare	15amp	1B
F118	FuseBoxRJB	563284	Trailer	15amp	1B
F120	FuseBoxRJB	563284	Spare	15amp	1B
F121	FuseBoxRJB	563284	12WUPCust	15amp	2B
F122	FuseBoxRJB	563283	Equalizer	10amp	2C
F123	FuseBoxRJB	563153	Pre-heat	25amp	1C
F124	FuseBoxRJB	563153	Pre-heat	25amp	2C
F126	FuseBoxRJB	563280	R29/So11	5amp	2C
F127	FuseBoxRJB	563284	WaterPump	15amp	1C
F129	FuseBoxRJB	563284	Spare	15amp	1C
F130	FuseBoxRJB	563284	Spare	15amp	2C
F131	FuseBoxRJB	563280	24VDCust	5amp	1C
F132	FuseBoxRJB	563280	A57Pwr	5amp	1C
F133	FuseBoxRJB	563165	A49Pwr	30amp	2D
F134	FuseBoxRJB	563165	A52Pwr	30amp	1D
F135	FuseBoxRJB	563165	A54Pwr	30amp	2D
F136	FuseBoxRJB	563165	A53Pwr	30amp	1D
F137	FuseBoxRJB	563280	Spare	5amp	2D
F138	FuseBoxRJB	563280	LampChime	5amp	1D
F139	FuseBoxRJB	563283	Altern	10amp	2D
F140	FuseBoxRJB	563283	Spare	10amp	1D

FUSES LIST

No	Location	Part #	Function	Rating	Page
F141	FuseBoxRJB	563284	Mo7Cond	15amp	2D
F142	FuseBoxRJB	563284	Mo8Cond	15amp	1D
F143	FuseBoxRJB	563284	Mo27Cond	15amp	2D
F144	FuseBoxRJB	563284	Mo28Cond	15amp	1D
F145	FuseBoxRJB	563284	Spare	15amp	2D
F146	FuseBoxRJB	563283	Spare	10amp	1D
F147	FuseBoxRJB	563284	24Wupcust	15amp	2D
F148	FuseBoxRJB	563165	VSS	30amp	2E
F149	FuseBoxRJB	563284	Spare	15amp	1E
F150	FuseBoxRJB	563283	Spare	10amp	2E
F151	FuseBoxRJB	563284	Spare	15amp	1E
F152	FuseBoxRJB	563283	Spare	10amp	2E
F156	RJB	560893	Unican	3Amp	3A
F180	RJB	562259	*opt*	5A	3C
F181	RJB	563165	*opt*	30A	4C
F199	RJB	564520	RADFans	300Amp	1B
F200	Parcel_Rack_LH_1st_Cmpt_	563284	12VDmemory	15Amp	4F
F201	Parcel_Rack_LH_1st_Cmpt_	563284	12Vignition	15Amp	4G
F202	Parcel_Rack_LH_1st_Cmpt_	563284	24Vignitionspare	15Amp	4G
F203	Parcel_Rack_LH_1st_Cmpt_	563282	24Vmonitors	20Amp	4G
F209	RJB	564174	PreHeat	150Amp	3E
F243	RJB	560893	24VwhileEvap.relaypowered	3Amp	4C
F302	VECT	563282	VECTTrailerinterface	20amp	3B
F303	VECT	563282	VECTTrailerinterface	20amp	3D
F304	VECT	563282	VECTTrailerinterface	20amp	3E
F305	VECT	563284	VECTTrailerinterface	15amp	2C
F306	VECT	563284	VECTTrailerinterface	15amp	2D
F307	VECT	563284	VECTTrailerinterface	15amp	2A
F302A	VECT	563284	VECTTrailerinterface	15amp	2B
F303A	VECT	563284	VECTTrailerinterface	15amp	2B
F304A	VECT	563284	VECTTrailerinterface	15amp	2C