

FUSES LIST

No	Location	Part #	Function	Rating	Page
F1	RJB	564520	Ultracap	300A	43.2
F4	FuseBoxFJB	563280	TGW/IShPwr	5amp	4.2
F10	FuseBoxFJB	563280	OBD&Clust	5amp	4.1
F11	FuseBoxFJB	563282	Horn	20amp	4.1
F12	FuseBoxFJB	563284	Spare	15amp	4.1
F13	FuseBoxFJB	563284	12VDCust	15amp	4.1
F14	FuseBoxFJB	563165	Spare	30amp	4.1
F15	FuseBoxFJB	563280	Spare	5amp	4.1
F16	FuseBoxFJB	563284	12EngRunCu	15amp	4.1
F17	FuseBoxFJB	563165	A43Pwr	30amp	4.1
F18	FuseBoxFJB	563165	A45Pwr	30amp	4.1
F19	FuseBoxFJB	563165	A46Pwr	30amp	4.1
F20	FuseBoxFJB	563280	A55/A15Pwr	5amp	4.1
F21	FuseBoxFJB	563165	A48Pwr	30amp	4.1
F22	FuseBoxFJB	563280	ELD/ITS Gateway	5amp	4.1
F23	FuseBoxFJB	563165	ESP	30amp	4.1
F24	FuseBoxFJB	563284	12VICust	15amp	4.1
F25	FuseBoxFJB	563284	12VOutlet	15amp	4.1
F26	FuseBoxFJB	563284	BifoldSe	15amp	4.1
F27	FuseBoxFJB	563165	Spare	30amp	4.1
F29	FuseBoxFJB	563283	Shutdown	10amp	4.1
F30	FuseBoxFJB	563280	OBDCon	5amp	4.1
F33	FuseBoxFJB	563280	A41Pwr	5amp	4.2
F34	FuseBoxFJB	563280	A42Pwr	5amp	4.2
F35	FuseBoxFJB	563280	MCMPwr	5amp	4.2
F36	FuseBoxFJB	563280	StartSw	5amp	4.2
F37	FuseBoxFJB	563280	Haz/ExtDoorSw	5amp	4.2
F39	FuseBoxFJB	563284	24VDCust	15amp	4.2
F40	FuseBoxFJB	563284	AFSSPwr	15amp	4.2
F41	FuseBoxFJB	563280	Spare	5amp	4.2
F42	FuseBoxFJB	563283	IShiftPwr	10amp	4.1
F43	FuseBoxFJB	563282	IShiftPwr	20amp	4.1
F44	FuseBoxFJB	563165	A44Pwr	30amp	4.2
F45	FuseBoxFJB	563165	A47Pwr	30amp	4.2
F46	FuseBoxFJB	563280	A56Pwr	5amp	4.2
F47	FuseBoxFJB	563280	MCM	5amp	4.2
F50	FuseBoxFJB	563165	Defrost	30amp	4.2
F51	FuseBoxFJB	563280	DestSigns	5amp	4.2
F52	FuseBoxFJB	563280	FMSGW	5amp	4.2
F53	FuseBoxFJB	563283	Clock/VSS	10amp	4.2
F54	FuseBoxFJB	563284	Spare	15Amp	4.2
F55	FuseBoxFJB	563283	B-UpCam	10amp	4.2
F56	FuseBoxFJB	563284	Spare	15amp	4.2

FUSES LIST

No	Location	Part #	Function	Rating	Page
F57	FuseBoxFJB	563283	Spare	10amp	4.2
F58	FuseBoxFJB	563284	Spare	15amp	4.2
F73	FuseBoxRJB	563283	EngECU	20amp	5.1
F90	FuseBoxRJB	563282	UreaSys	20amp	5.1
F91	FuseBoxRJB	563282	EngECU	20amp	5.1
F95	FuseBoxFJB	563280	TGW/IShPwr	5amp	4.2
F96	FuseBoxRJB	563282	ACM24VD	20amp	5.1
F99	FuseBoxRJB	563165	EngECU	30amp	5.1
F100	FuseBoxRJB	563283	EngECU	10amp	5.1
F101	FuseBoxRJB	564520	PwrR1	300Amp	3.1
F102	RJB	564520	Invertes	300A	3.1
F103	RJB	564520	Ultracap	300A	5.1
F105	FuseBoxRJB	563282	Spare	20amp	5.1
F106	FuseBoxRJB	563153	A50Pwr	30amp	5.1
F107	FuseBoxRJB	563153	A51Pwr	30amp	5.1
F108	FuseBoxRJB	563280	OBDConPwr	5amp	5.1
F109	FuseBoxRJB	563280	RrProxSw	5amp	5.1
F110	FuseBoxRJB	563283	TransPwr	10amp	5.1
F112	FuseBoxRJB	563165	Spare	30amp	5.1
F113	FuseBoxRJB	563283	Spare	10amp	5.1
F114	FuseBoxRJB	563284	Spare	15amp	5.1
F115	FuseBoxRJB	563282	Spare	20amp	5.1
F116	FuseBoxRJB	563284	Spare	15amp	5.1
F118	FuseBoxRJB	563284	Trailer	15amp	5.1
F120	FuseBoxRJB	563284	Spare	15amp	5.1
F121	FuseBoxRJB	563284	12WUPCust	15amp	5.1
F122	FuseBoxRJB	563283	Equalizer	10amp	5.1
F123	FuseBoxRJB	563153	Pre-heat	25amp	5.1
F124	FuseBoxRJB	563153	Pre-heat	25amp	5.1
F126	FuseBoxRJB	563280	R29/So11	5amp	5.1
F127	FuseBoxRJB	563284	WaterPump	15amp	5.1
F129	FuseBoxRJB	563284	Spare	15amp	5.1
F130	FuseBoxRJB	563284	Spare	15amp	5.1
F131	FuseBoxRJB	563280	24VDCust	5amp	5.1
F132	FuseBoxRJB	563280	A57Pwr	5amp	5.1
F133	FuseBoxRJB	563165	A49Pwr	30amp	5.1
F134	FuseBoxRJB	563165	A52Pwr	30amp	5.1
F135	FuseBoxRJB	563165	A54Pwr	30amp	5.1
F136	FuseBoxRJB	563165	A53Pwr	30amp	5.1
F137	FuseBoxRJB	563280	Spare	5amp	5.1
F138	FuseBoxRJB	563280	LampChime	5amp	5.1
F139	FuseBoxRJB	563283	Altern	10amp	5.1
F140	FuseBoxRJB	563283	Spare	10amp	5.1

FUSES LIST

No	Location	Part #	Function	Rating	Page
F141	FuseBoxRJB	563284	Mo7Cond	15amp	5.1
F142	FuseBoxRJB	563284	Mo8Cond	15amp	5.1
F143	FuseBoxRJB	563284	Mo27Cond	15amp	5.1
F144	FuseBoxRJB	563284	Mo28Cond	15amp	5.1
F145	FuseBoxRJB	563284	Spare	15amp	5.1
F146	FuseBoxRJB	563283	Spare	10amp	5.1
F147	FuseBoxRJB	563284	24Wupcust	15amp	5.1
F148	FuseBoxRJB	563165	VSS	30amp	5.1
F149	FuseBoxRJB	563284	Spare	15amp	5.1
F150	FuseBoxRJB	563283	Spare	10amp	5.1
F151	FuseBoxRJB	563284	Spare	15amp	5.1
F152	FuseBoxRJB	563283	Spare	10amp	5.1
F156	RJB	560893	Unican	3Amp	200.7
F180	RJB	562259	*opt*	5A	
F181	RJB	563165	*opt*	30A	
F199	RJB	564520	RADFans	300Amp	13.1
F200	Parcel_Rack_LH_1st_Cmpt_	563284	12VDmemory	15Amp	35.6
F201	Parcel_Rack_LH_1st_Cmpt_	563284	12Vignition	15Amp	35.6
F202	Parcel_Rack_LH_1st_Cmpt_	563284	24Vignitionspare	15Amp	35.6
F203	Parcel_Rack_LH_1st_Cmpt_	563282	24Vmonitors	20Amp	35.6
F209	RJB	564174	PreHeat	150Amp	14.1
F210	FuseBoxP-RACK	563283	24VD ISM	10amp	60.3
F211	FuseBoxP-RACK	563283	24VD ISM	10amp	60.3
F212	FuseBoxP-RACK	563283	24VD ISM	10amp	60.3
F214	FuseBoxP-RACK	563283	24VD	10amp	60.3
F215	FuseBoxP-RACK	563283	24VD	10amp	60.3
F216	FuseBoxP-RACK	563283	24VD	10amp	60.3
F218	FuseBoxP-RACK	563283	12VD ISM	10amp	60.3
F219	FuseBoxP-RACK	563283	12VD ISM	10amp	60.3
F220	FuseBoxP-RACK	563283	12VD ISM	10amp	60.3
F222	FuseBoxP-RACK	563283	12VI	10amp	60.3
F223	FuseBoxP-RACK	563283	12VI	10amp	60.3
F224	FuseBoxP-RACK	563283	12VI	10amp	60.3
F243	RJB	560893	24VwhileEvap.relaypowered	3Amp	18.2
F302	VECT	563282	VECTTrailerinterface	20amp	26.4
F303	VECT	563282	VECTTrailerinterface	20amp	26.4
F304	VECT	563282	VECTTrailerinterface	20amp	26.4
F305	VECT	563284	VECTTrailerinterface	15amp	26.4
F306	VECT	563284	VECTTrailerinterface	15amp	26.4
F307	VECT	563284	VECTTrailerinterface	15amp	26.4
F302A	VECT	563284	VECTTrailerinterface	15amp	26.4
F303A	VECT	563284	VECTTrailerinterface	15amp	26.4
F304A	VECT	563284	VECTTrailerinterface	15amp	26.4