

MULTIPLEX ERROR MESSAGES LIST

FMI 3 = Shorted High ; FMI 4 = Shorted Low ; FMI 5 = Open Circuit ; FMI 6 = Current above Normal

Cluster message	SID/PSID	FMI	Module.Pin#	Page	Cluster message	SID/PSID	FMI	Module.Pin#	Page
A/C Pres LoSd	PSID #13	3, 4, 5	A54.J2:9		LH Docking Light	PSID #122	3, 4, 6	A51.J1:1	
Aux AC fan	SID #39	3, 4, 6	A46.J2:10		Low Beam LH	PSID #142	3, 4, 5, 6	A46.J2:7	
Aux Refr sol	SID #46	3, 4, 6	A46.J1:19		Low Beam RH	PSID #146	3, 4, 5, 6	A48.J2:4	
Backup Light &	PSID #167	3, 4, 6	A50.J2:10		Lower Washer pmp	PSID #181	4, 5, 6	A44.J1:7	
Ceiling Door Lt	PSID #108	3, 4, 6	A41.J1:7		Lower Washer Sw	PSID #188	3, 4	A55.J2:11	
Center Flash LH	PSID #124	3, 4, 6	A50.J1:13		Lower Wip Int	PSID #183	3, 4	A55.J2:10	
Center Flash RH	PSID #125	3, 4, 6	A50.J1:19		Park brak Sens	PSID #162	3, 4	A36.JB:9	12.1
Center Mkr	PSID #27	3, 4, 6	A50.J2:7		Pass Heat Sol	PSID #24	3, 4, 6	A54.J2:7	
Cornering Dash	PSID #200	3, 4	A56.J2:6		Pass Rec.Cylinder	SID #63	3, 4, 5, 6	A54.J2:10	
Cyclope Lt	PSID #116	3, 4, 6	A51.J2:10		Pass Rfg Sol	PSID #23	3, 4, 5, 6	A54.J1:7	
Defr water Pmp	SID #41	3, 4	A47.J1:16		Pass. Wtr pump	PSID #17	3, 4, 6	A54.J1:10	
Docking Dash Sw	PSID #40	3, 4	A56.J2:10		RearFish LH	PSID #131	3, 4, 6	A51.J1:13	
Driver Def Fan	PSID #180	3, 4, 5, 6	A47.J2:1		RearFish RH	PSID #132	3, 4, 6	A51.J1:4	
Driver heat Sol	PSID #16	3, 4, 5, 6	A47.J1:3		Rev lights	SID #43	3, 4, 6	A50.J1:7	
Driver Light Sw	PSID #104	3, 4, 6	A44.J2:7		RH Corner Light	PSID #121	3, 4, 5, 6	A48.J1:3	
Driver Rfg Sol	PSID #29	3, 4, 5, 6	A47.J1:1		RH Docking Light	PSID #123	3, 4, 6	A51.J1:3	
Driver Sensor	PSID #28	3, 4, 5	A47.J2:11		Rr Start Sw	PSID #59	3, 4	A52.J2:5	
Driver window	SID #83	3, 4, 6	A45.J2:13		Ser Brake Trans	SID #49	4, 6	A51.J1:16	
Drv air Trap	SID #64	3, 4, 6	A45.J1:3		SlD0 5v supply	SID #23	4	A58.J2:15	
Drv Rec Cylind	PSID #30	3, 4, 5, 6	A47.J1:4		SlD0 Close Sw	SID #18	3, 4	A58.J1:21	
Elec.Horn SW61	PSID #82	3, 4	A56.J2:7		SlD0 Limit Out	SID #20	3, 4	A58.J2:9	
Engine Door Se	PSID #6	3, 4	A52.J2:6		SlD0 Mot Neg	SID #15	3, 4, 5, 6	A58.J1:16	
Evap Motor Rly	PSID #77	3, 4, 5, 6	A54.J1:19		SlD0 Mot Pos	SID #16	3, 4, 5, 6	A58.J1:19	
Evap Spd Ctrl	PSID #78	3, 4, 6	A54.J1:1		SlD0 Mot SpeedA	SID #9	3, 6	A58.J1:1	
Flash RH Sw	PSID #133	3, 4	A48.J2:5		SlD0 Mot SpeedB	SID #10	3, 6	A58.J1:3	
Flasher LH	PSID #130	3, 4	A46.J1:20		SlD0 Open Sw	SID #17	3, 4	A58.J1:20	
Fog's Lights LH	PSID #134	3, 4, 5, 6	A46.J1:1		SlD0 Park Br	SID #8	3, 4	A58.J2:6	
Fog's lights RH	PSID #136	3, 4, 5, 6	A48.J1:1		SlD0 Remote Led	SID #11	3, 4, 5, 6	A58.J1:4	
Foot trap	PSID #37	3, 4, 6	A45.J2:4		SlD0 Seal Def	SID #13	3, 4, 5, 6	A58.J1:10	
FR Clearance lights	PSID #137	3, 4, 6	A46.J1:10		SlD0 Seal Inf	SID #12	3, 4, 5, 6	A58.J1:7	
Fr Side Flsh	PSID #10	3, 4, 6	A48.J2:13		SlD0 Secu Pin	SID #21	3, 4, 5, 6	A58.J2:4	
Fr Start Sw	PSID #58	3, 4	A36.JB:22	3.2	SlD0 Vacc Gen	SID #14	3, 4, 5, 6	A58.J2:1	
FrontMkr Lts LH	PSID #148	3, 4, 6	A46.J1:13		SlD0 Vacuum Sensor	SID #5	3, 4	A58.J2:11	
FrontMkr Lts RH	PSID #149	3, 4, 6	A48.J1:10		Starter Relay	PSID #60	4, 6	A52.J1:10	
Hazard Switch	PSID #138	3, 4	A36.JB:4	26.1	StepLts	PSID #117	3, 4, 6	A41.J1:1	
Hd Light Call	PSID #140	3, 4	A56.J1:20		Tag axle Sw	PSID #165	3, 4	A42.J1:20	
HdLamp Wsh Pmp	SID #48	3, 4, 6	A44.J1:10		Unloader RH	PSID #32	3, 4, 5, 6	A54.J2:4	
Head Lights Pos1	PSID #143	3, 4	A56.J1:17		Upper Brk Lamp	PSID #43	3, 4, 6	A51.J2:7	
Hi Low Beam	SID #62	3, 4, 5	A56.J1:21		Upper Wash Sw	PSID #190	3, 4	A55.J2:9	
High Beam LH	PSID #141	3, 4, 5, 6	A46.J2:4		Upper Wiper Int	PSID #191	3, 4	A55.J2:12	
High Beam RH	PSID #145	3, 4, 5, 6	A48.J2:1		Upper Wiper Sw	PSID #192	3, 4	A55.J2:13	
Horn	PSID #83	3, 4, 5, 6	A44.J1:16		WakeUp Rly	SID #30	4, 5, 6	A36.JA:15	3.2
LH Corner Lts	PSID #120	3, 4, 5, 6	A46.J2:1						