

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
0	PowerBatteries	12VA	Maindistributionpower	A3.6	Transmission
0	PowerBatteries	12VD	PowerBatteries	A3.7	Transmission
0A	12VOutlets	12VI8A	PwrtoModuleA50	A4B.8	Transmission
00A	Keylessentrsystem	24VA	Maindistributionpower	A5.B	Transmission
00A1	Multiplexpower	24VD	PowerBatteries	A9CX1.2	Cluster
0AltEXTR	ChassisGnd	24VD2	Ignitionandenginestart	A9CX1.4	ESP
0AltL	ChassisGnd	24VD3	Maindistributionpower	A9CX1.5	ESP
0AltR	ChassisGnd	24VI	24VltoRearVec	A9CX1.6	Cluster
0AltUL	ChassisGnd	26	DriverWindoPw	A9CX2.1	ESP
0B	EngneChassisGnd	41RJ1.6	Keylessentrsystem	A9CX2.2	ESP
0C	Ignitionandenginestart	76	24VIPreHeater	A9CX2.3	ESP
0COND	FullHVACpassengers	136A	TransmissionPwr	A9CX2.4	ESP
0ECU	EngneECUVolvo	146A	PwrtoModuleA50	A9CX2.6	ESP
0EVAP1	FullHVACpassengers	290A	GndFanClutch	A9CX2.7	ESP
0F	ChassisGnd	900	J1587network	A9CX2.9	ESP
00F	GNDElectronic	901	J1587network	A9CX2.10	ESP
00F1	Multiplexpower	A1.11	Transmission	A9CX2.12	ESP
00F2	Multiplexpower	A1.12	Transmission	A9CX2.13	ESP
00F3	Multiplexpower	A1.15	Transmission	A9CX2.16	ESP
00F4	FJB	A1.16	Transmission	A9CX2.17	ESP
00F5	Groundelec	A1.18	Transmission	A9CX3.3	ESP
0FE	Firesuppression	A1.19	Transmission	A9CX3.5	ESP
0FH	Keylessentrsystem	A1.24	Transmission	A9CX3.7	ESP
00FH	Keylessentrsystem	A1.25	Transmission	A9CX3.9	ESP
0FH1	Driverseat	A1.31	Transmission	A9CX3.10	ESP
00FH1	HVACdefroster	A1.33	Transmission	A9CX4.1	ESP
00FH2	Multiplexpower	A1.36	Transmission	A9CX4.4	ESP
00FR	GNDElectronic	A1.37	Transmission	A9CX4.7	ESP
0R	PowerdistributionRJB	A1.51	Transmission	A9CX4.8	ESP
00R	CanIsoJ2284network	A1.52	Transmission	A9CX4.10	ESP
00R1	Masterrelay	A1.54	Transmission	A9CX4.11	ESP
00R2	Multiplexpower	A1.55	Transmission	A14.A12	Cluster
00R3	Multiplexpower	A1.58	Transmission	A14.B1	Cluster
00R4	Multiplexpower	A1.71	Transmission	A14.B18	Cluster
00R5	VannerCtr	A1.74	Transmission	A14.B20	Cluster
00R6	Multiplexpower	A1.76	Transmission	A14.B21	Cluster
0RAD	EngneChassisGnd	A1.77	Transmission	A27.30	Powersteering
0RAD2	Fansdriveelectric	A2A.9	Transmission	A27.87A	Powersteering
0TR-White	Trailerinterface	A2A.11	Transmission	A31J4.1	Keylessentrsystem
00VA	EqualizerGnd	A3.1	Transmission	A31J4.2	Keylessentrsystem
0W	GNDStud	A3.2	Transmission	A31J4.3	Keylessentrsystem
12Ecu	12vEngneEcu	A3.3	Transmission	A31J4.4	Keylessentrsystem
12ISH	Pwrl_Shift	A3.5	Transmission	A31J4.5	Keylessentrsystem

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
A31J4.6	Keylessentriystem	A42J1.13	Kneeling	A46RJ1.18	Frflash
A31J4.7	Keylessentriystem	A42J1.16	FJB	A47J1.1	HVACdefroster
A31J4.8	Keylessentriystem	A42J1.18	FJB	A47J1.3	HVACdefroster
A31J5.1	Keylessentriystem	A42J2.15	FJB	A47J1.4	HVACdefroster
A31J5.3	Keylessentriystem	A43J1.1	Lugg.doorslocks	A47J1.7	Wipersandwasher
A34.A5	Fansdriveelectric	A43J1.3	Lugg.doorslocks	A47J1.16	SmallA/C
A34.B5	Fansdriveelectric	A43J1.7	TPMS	A47J2.1	HVACdefroster
A34.C5	Fansdriveelectric	A43J2.1	Lugg.doorslocks	A47J2.4	HVACdefroster
A34.D5	Fansdriveelectric	A43J2.4	Lugg.doorslocks	A47J2.15	SmallA/C
A34.E5	Fansdriveelectric	A43J2.7	EngineECUVolvo	A47RJ1.6	HVACdefroster
A34.F5	Fansdriveelectric	A43J2.10	EngineECUVolvo	A47RJ1.17	HVACdefroster
A34.G5	Fansdriveelectric	A43RJ1.17	ACB	A47RJ1.18	Wipersandwasher
A34.H5	Fansdriveelectric	A44J1.4	12VPowerdistributionFJB	A47RJ2.2	Keylessentriystem
A34J.E	Fansdriveelectric	A44J1.7	Wipersandwasher	A47RJ2.3	SmallA/C
A34J.F	Fansdriveelectric	A44J1.10	Wipersandwasher	A48J1.1	Fog
A34R.A3	Fansdriveelectric	A44J1.16	Horn	A48J1.3	Fog
A34R.B3	Fansdriveelectric	A44J1.19	Luggageslights	A48J1.7	Frflash
A34R.C3	Fansdriveelectric	A44J2.1	Sunvisor	A48J1.10	Frflash
A34R.D3	Fansdriveelectric	A44J2.4	Sunvisor	A48J2.1	Frheadlights
A34R.E3	Fansdriveelectric	A44J2.7	Driverlight	A48J2.4	Frheadlights
A34R.F3	Fansdriveelectric	A44J2.10	Sunvisor	A48J2.7	Driver&entracewindow
A34R.G3	Fansdriveelectric	A44J2.13	Sunvisor	A48J2.10	Driver&entracewindow
A34R.H3	Fansdriveelectric	A44RJ1.17	Frflash	A48J2.13	Frflash
A36JA.11	Horn	A44RJ2.2	Driverlights	A48RJ1.17	Fog
A36JA.15	Ignitionandenginestart	A44RJ2.3	Wipersandwasher	A48RJ1.18	Frflash
A36JA.16	FJB	A45J1.1	HVACdefroster	A48RJ2.2	Frflash
A36JA.17	Ignitionandenginestart	A45J1.3	HVACdefroster	A49J1.1	Fansdriveelectric
A36JA.25	Brake	A45J1.4	Powersteering	A49J1.3	Fansdriveelectric
A41J1.1	Keylessentriystem	A45J1.7	12VPowerdistributionFJB	A49J1.10	FullHVACpassengers
A41J1.3	Keylessentriystem	A45J1.16	Mirrors	A49J1.17	SmallA/C
A41J1.4	Keylessentriystem	A45J2.1	HVACdefroster	A49J1.18	SmallA/C
A41J1.7	Keylessentriystem	A45J2.4	HVACdefroster	A49J2.1	Alternators
A41J1.16	EngineECUVolvo	A45J2.7	Driver&entracewindow	A49J2.4	SmallA/C
A41J1.19	EngineECUVolvo	A45J2.13	Driver&entracewindow	A49J2.13	Brake
A41J2.2	Keylessentriystem	A45RJ1.17	Fog	A49J2.15	SmallA/C
A41J2.15	Keylessentriystem	A46J1.1	Horn	A49RJ1.6	SmallA/C
A41RJ1.6	Keylessentriystem	A46J1.4	Frflash	A49RJ1.18	FullHVACpassengers
A41RJ1.18	Keylessentriystem	A46J1.10	Frflash	A49RJ2.2	Fansdriveelectric
A41RJ2.14	FJB	A46J1.13	Frflash	A49RJ2.3	SmallA/C
A42J1.3	FJB	A46J2.1	Fog	A50J1.4	Airdryerandheater
A42J1.4	FJB	A46J2.4	Frheadlights	A50J1.7	Backupwarnings
A42J1.7	FJB	A46J2.7	Frheadlights	A50J1.13	Rrflashers
A42J1.10	Kneeling	A46RJ1.17	Frflash	A50J1.19	Rrflashers

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
A50J2.1	Rrflashers	A54RJ1.17	FullHVACpassengers	A78.3	Equalizer
A50J2.7	Rrflashers	A54RJ1.18	FullHVACpassengers	A78.4	Equalizer
A50J2.10	Backupwarnings	A54RJ2.2	FullHVACpassengers	A79.3	Equalizer
A50RJ1.17	Rrflashers	A54RJ2.3	FullHVACpassengers	A80.3	Equalizer
A50RJ1.18	Rrflashers	A54RJ2.14	FullHVACpassengers	A80.4	Equalizer
A50RJ2.2	Backupwarnings	A55J1.1	Driverlights	A81JB.4	EngineECUVolvo
A50RJ2.3	Airdryerandheater	A55J1.4	Cluster	A81JB.6	Powersteering
A51J1.1	Fog	A55J2.15	Keylessentrysystm	A81JB.10	EngineECUVolvo
A51J1.3	Fog	A55RJ1.18	Steeringmultifunctions	A81JB.15	Ignitionandenginestart
A51J1.4	Rrflashers	A56J1.3	Cluster	A81JB.16	EngineECUVolvo
A51J1.7	Rrflashers	A56J1.4	Cluster	A81JB.17	EngineECUVolvo
A51J1.10	Rrflashers	A56J1.7	Cluster	A81JB.19	EngineECUVolvo
A51J1.13	Rrflashers	A56J1.10	Cluster	A81JB.22	EngineECUVolvo
A51J1.16	Transmission	A56J1.13	Multiplexpower	A81JB.23	EngineECUVolvo
A51J1.19	WCL	A56J2.15	Frflash	A81JB.26	EngineECUVolvo
A51J2.1	Rrflashers	A57J1.1	WCL	A96.8.Black	TPMS
A51J2.4	Transmission	A57J1.3	WCL	A96.23.Red	TPMS
A51J2.7	Rrflashers	A57RJ2.14	WCL	A96.24.Black	TPMS
A51J2.10	Rrflashers	A58J1.1	Slideoutfrontleft	A96.25.Red	TPMS
A51RJ1.17	Rrflashers	A58J1.4	Slideoutfrontleft	A96.27.Black	TPMS
A51RJ1.18	Fog	A58J1.7	Slideoutfrontleft	A96.28.Red	TPMS
A52J1.1	Fansdriveelectric	A58J1.10	Slideoutfrontleft	A100.3.White	TPMS
A52J1.3	Fansdriveelectric	A58J1.16	Slideoutfrontleft	A101.3.White	TPMS
A52J1.7	EngineandRJBlights	A58J1.19	Slideoutfrontleft	A102.3.White	TPMS
A52J1.10	Ignitionandenginestart	A58J2.1	Slideoutfrontleft	A103.1	Steeringmultifunctions
A52J1.13	RJBfan	A58J2.4	Slideoutfrontleft	A103.3	Steeringmultifunctions
A52J2.1	Alternators	A58J2.11	Slideoutfrontleft	A103.5	Horn
A52J2.4	Alternators	A58J2.15	Slideoutfrontleft	A108.5	Cmd_Ground
A52J2.13	Ignitionandenginestart	A58RJ1.17	Slideoutfrontleft	A130.3	Firesuppression
A52RJ1.17	RJB_Gnd	A58RJ2.2	Slideoutfrontleft	A130.4	Firesuppression
A52RJ1.18	EngineandRJBlights	A58RJ2.14	Slideoutfrontleft	A130.6	Firesuppression
A52RJ2.3	Ignitionandenginestart	A59J1.1	Slideoutrearleft	A130.8	Firesuppression
A54J1.1	FullHVACpassengers	A59J1.4	Slideoutrearleft	A130.11	Firesuppression
A54J1.3	FullHVACpassengers	A59J1.7	Slideoutrearleft	A131A.C	Firesuppression
A54J1.7	FullHVACpassengers	A59J1.10	Slideoutrearleft	A131B.A	Firesuppression
A54J1.10	FullHVACpassengers	A59J1.16	Slideoutrearleft	A131B.C	Firesuppression
A54J1.16	SmallA/C	A59J1.19	Slideoutrearleft	A137A.4	UreaSystem
A54J1.19	FullHVACpassengers	A59J2.15	Slideoutrearleft	A137A.7	UreaSystem
A54J2.4	FullHVACpassengers	A59RJ1.17	Slideoutrearleft	A137A.8	UreaSystem
A54J2.7	HVACPassengers	A59RJ2.2	Slideoutrearleft	A137A.24	UreaSystem
A54J2.10	FullHVACpassengers	A59RJ2.14	Slideoutrearleft	A137A.28	UreaSystem
A54J2.15	FullHVACpassengers	A77.A	Equalizer	A137A.40	UreaSystem
A54RJ1.6	FullHVACpassengers	A77.H	Equalizer	A137A.44	UreaSystem

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
A137A.49	UreaSystem	Clnt1	FJB	F21	Multiplexpower
A137A.50	UreaSystem	Clnt2	FJB	F23	ESP
A137A.51	UreaSystem	Clnt3	FJB	F24	12VPowerdistributionFJB
A137A.54	UreaSystem	Clnt4	FJB	F25	12VOutlets
A137A.56	UreaSystem	Clnt5	FJB	F27	Driverseat
A137A.59	UreaSystem	Clnt6	FJB	F29	12VPowerdistributionFJB
A137A.62	UreaSystem	Clnt7	FJB	F30	CanIsoJ2284network
A138.3	UreaSystem	Clnt8	FJB	F34	Multiplexpower
A138.12	UreaSystem	CTS	Multiplexnetwork	F35	Multiplexpower
Alt_LL	Alternators	Cts	Multiplexnetwork	F36	Ignitionandenginestart
Alt_UL	Alternators	D1	Ignitionandenginestart	F37	Keylessentriystem
Alt_UR	Alternators	D12	Horn	F39	24VPowerdistributionFJB
AltLL	Maindistributionpower	D13	Horn	F40	Firesuppression
AltUL	Alternators	D51	Tagandlevellow	F41	Multiplexpower
AltUR	Maindistributionpower	D75	Slideoutfrontleft	F42	PwrI_Shift
B85.2	UreaSystem	DATAKH	Keylessentriystem	F43	PwrI_Shift
B97.2	UreaSystem	DATAKL	Keylessentriystem	F44	Multiplexpower
B98.2	UreaSystem	DL0H	Spare	F45	Multiplexpower
B115A.3	DeltaPSignals	DL0L	Spare	F46	Multiplexpower
BussBar	12VIttoCB10	DL1H	J1939network	F47	Multiplexpower
CanH2	Spare	DL1L	J1939network	F50	HVACdefroster
CanL2	Spare	DL2H	Transmission	F51	24VPowerdistributionFJB
CB1	Maindistributionpower	DL2L	Transmission	F53	Tagandlevellow
CB2	Maindistributionpower	DL3H	DBUSnetwork	F73	EngineECUVolvo
CB3	Maindistributionpower	DL3L	DBUSnetwork	F90	PowertoEcm
CB5	Maindistributionpower	DL7H	EngineECUVolvo	F91	EngineECUVolvo
CB6	Maindistributionpower	DL7L	EngineECUVolvo	F95	VolvolinkTGW
CB7	Maindistributionpower	DSO1.1	Slideoutfrontleft	F96	UreaSystem
CB8	Maindistributionpower	DSO2.1	Slideoutrearleft	F99	PowerdistributionRJB
CB10	Maindistributionpower	EI.7	Cluster	F100	EngineECUVolvo
CB48	Frflash	EI.18	EngineECUVolvo	F101	Maindistributionpower
CB128	PowerdistributionRJB	EMS.EB29	Ignitionandenginestart	F106	Multiplexpower
CB201	Fansdriveelectric	F4	VolvolinkTGW	F107	Multiplexpower
CB202	Fansdriveelectric	F10	Cluster	F108	CanIsoJ2284network
CB203	Fansdriveelectric	F11	Horn	F109	EngineandRJBlights
CB204	Fansdriveelectric	F12	Keylessentriystem	F110	Transmission
CB205	Fansdriveelectric	F13	12VPowerdistributionFJB	F117	Trailer
CB206	Fansdriveelectric	F14	Multiplexpower	F118	Trailer
CB207	Fansdriveelectric	F15	Keylessentriystem	F119	Trailerinteface
CB208	Fansdriveelectric	F16	12VPowerdistributionFJB	F121	PowerdistributionRJB
CC16	FJB	F18	Multiplexpower	F126	FullHVACpassengers
CC17	FJB	F19	Multiplexpower	F130	Windowsajar
Cd1	Multiplexnetwork	F20	Multiplexpower	F131	PowerdistributionRJB

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
F132	Multiplexpower	N12	Multiplexnetwork	R167.30	Luggageslights
F133	Multiplexpower	N13	Multiplexnetwork	R167.86	Luggageslights
F134	Multiplexpower	N14	Multiplexnetwork	R167.87	Luggageslights
F135	Multiplexpower	N15	Multiplexnetwork	R_ Starter	Ignitionandenginestart
F136	Multiplexpower	N16	Multiplexnetwork	Res23	WCL
F137	24VtoMux	N17	Multiplexnetwork	RSO1_1	Slideoutfrontleft
F139	Alternators	N18	Multiplexnetwork	RSO1_2	Slideoutfrontleft
F141	FullHVACpassengers	N19	Multiplexnetwork	RSO2_1	Slideoutrearleft
F142	FullHVACpassengers	N20	Multiplexnetwork	RSO2_2	Slideoutrearleft
F143	FullHVACpassengers	N21	Multiplexnetwork	RTS	Multiplexnetwork
F144	FullHVACpassengers	N22	Multiplexnetwork	Rts	Multiplexnetwork
F147	PowerdistributionRJB	N23	Multiplexnetwork	RX	TPMS
F167	Luggage_Lights	N24	Multiplexnetwork	Rx	Cantrack
F199	Fansdriveelectric	N27	Multiplexnetwork	RxD	Multiplexnetwork
gnd_1	Cantrack	N28	Multiplexnetwork	RxTx	Multiplexnetwork
Gnd_2	Cantrack	N29	Multiplexnetwork	Se11.Sig	Cluster
GndA	Multiplexnetwork	N30	Multiplexnetwork	Se11.Wrn	Cluster
jumper	Lugg.doorslocks	N31	Multiplexnetwork	Se13.B	EngineECUVolvo
L207.1	WCL	N32	Multiplexnetwork	Se14A.B	EngineECUVolvo
L207.3	WCL	N33	Multiplexnetwork	Se14B.C	EngineECUVolvo
L207.GND	WCL	N56-1	Multiplexnetwork	Se15.NO	Keylessentriysystem
L350A.B2	EngineECUVolvo	N56-2	Multiplexnetwork	Se16	Keylessentriysystem
Mo11.3	SmallA/C	N57_1	WCL	Se17.NC	Keylessentriysystem
Mo40.2	Windowsajar	N57_2	WCL	Se17.NO	Keylessentriysystem
Mo65.3	Fansdriveelectric	Pot1	Multiplexpower	Se18.B	Brake
Mo67.3	Fansdriveelectric	R6.30	Keylessentriysystem	Se19_P.D	Brake
Mo68.3	Fansdriveelectric	R7.30	Keylessentriysystem	Se19_S.D	Brake
Mo69.3	Fansdriveelectric	R12	FullHVACpassengers	Se20.B	Cluster
Mo70.3	Fansdriveelectric	R20.87	FullHVACpassengers	Se21.2	HVACdefroster
Mo71.3	Fansdriveelectric	R21.87	Ignitionandenginestart	Se23	SmallA/C
Mo72.3	Fansdriveelectric	R22.87	Ignitionandenginestart	Se23.C	FullHVACpassengers
Mo73.3	Fansdriveelectric	R23.30	Transmission	Se23A	SmallA/C
N1	Multiplexnetwork	R25.87	24VI	Se24.2	FullHVACpassengers
N2	Multiplexnetwork	R27.87A	Wipersandwasher	Se24.3	FullHVACpassengers
N3	Multiplexnetwork	R29	EngineECUVolvo	Se25.2	FullHVACpassengers
N4	Multiplexnetwork	R30.87	12VPowerdistributionFJB	Se30.A	EngineandRJBlights
N5	Multiplexnetwork	R31.87	12VPowerdistributionFJB	Se32.A	Transmission
N6	Multiplexnetwork	R34.30	Ignitionandenginestart	Se32.B	Transmission
N7	Multiplexnetwork	R36.87	Horn	Se33.A	Transmission
N8	Multiplexnetwork	R37.30	Horn	Se34.A	Transmission
N9	Multiplexnetwork	R38.87	12VOutlets	Se34.B	Transmission
N10	Multiplexnetwork	R47.87	WCL	Se35.A	Transmission
N11	Multiplexnetwork	R54.87		Se35.B	Transmission

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
Se37.1	ESP	spare34	Spare	Sw34.2B	Driver&entracewindow
Se37.2	ESP	spare35	Spare	Sw35.3	EngineECUVolvo
Se38.1	ESP	spare39	Spare	Sw35.8	EngineECUVolvo
Se38.2	ESP	spare40	Spare	Sw38.2B	Driver&entracewindow
Se39.1	ESP	spare41	Spare	Sw40.B	Trailerparkbrake
Se39.2	ESP	spare42	Spare	Sw41.A1	Mirrors
Se40.1	ESP	spare43	Spare	Sw41.A3	Mirrors
Se40.2	ESP	spare44	Spare	Sw41.B1	Mirrors
Se45.2	Cluster	spare64	Spare	Sw41.B2	Mirrors
Se46.B	Trailerparkbrake	spare65	Spare	Sw41.B4	Mirrors
Se53.C	Cluster	spare72	Spare	Sw42.2	WCL
Se54.C	Cluster	spare73	Spare	Sw42.3	WCL
Se55.C	Cluster	STO-LOCselenoid	WCL	Sw42.4	WCL
Se63.1	ESP	Sw1.5	Frflash	Sw42.5	WCL
Se63.2	ESP	Sw1C258.2	Frflash	Sw42.6	WCL
Se64.1	ESP	Sw1C258.3	Frflash	Sw42.7	WCL
Se64.2	ESP	Sw1C258.4	Frflash	Sw44	Luggageslights
Se67.C	ESP	Sw1C258.6	Frflash	Sw46A	Engine&RJBcmpt.lights
Se69.C	ESP	Sw1C258.7	Frflash	Sw57	WCLSlidingdoorSig
Se100.4	WCL	Sw1C258.8	Frflash	Sw58.3	Ignitionandenginestart
SESO2.4	Slideoutfrontleft	Sw1C259.1	Frflash	Sw58.5	Ignitionandenginestart
SESO3.2	Slideoutfrontleft	Sw1C259.2	Frflash	Sw58.7	Ignitionandenginestart
SESO5.4	Slideoutrearleft	Sw1C259.4	Frflash	Sw59.3	Ignitionandenginestart
SESO6.2	Slideoutrearleft	Sw2.3	Frflash	Sw63A.3	Horn
Shield_149	gndshield	Sw2.6	Frflash	Sw63A.4	Horn
Shield_149A	GndShield	Sw3.3	Fog	Sw64	Tagandlevellow
So9.B	FullHVACpassengers	Sw3.8	Fog	Sw82.4	Masterrelay
So36	SmallA/C	Sw4.3	Frflash	Sw82.5	Masterrelay
spare17	Spare	Sw4.8	Frflash	Sw83.Acc	Ignitionandenginestart
spare18	Spare	Sw6.4	Wipersandwasher	Sw83.Ign	Ignitionandenginestart
spare19	Spare	Sw14.3	EngineECUVolvo	Sw83.St	Ignitionandenginestart
spare20	Spare	Sw14.8	EngineECUVolvo	Sw85.A1	Mirrors
spare21	Spare	Sw16.3	Brake	Sw85.A3	Mirrors
spare22	Spare	Sw16.8	Brake	Sw85.B1	Mirrors
spare23	Spare	Sw17.6	EngineECUVolvo	Sw85.B2	Mirrors
spare24	Spare	Sw18A.2B	Lugg.doorslocks	Sw85.B4	Mirrors
spare25	Spare	Sw18A.4	Keylessentrysystem	Sw94	WCL
spare28	Spare	Sw18A.6	Keylessentrysystem	Sw99.3	Fog
spare29	Spare	Sw20.3	WCL	Sw102.3	Fog
spare30	Spare	Sw20.8	WCL	Sw102.8	Fog
spare31	Spare	Sw24.3	Driverlights	Sw103A.3	Backupwarnings
spare32	Spare	Sw24.6	Driverlights	Sw103A.6	Backupwarnings
spare33	Spare	Sw31	WCL	Sw104.1	Keylessentrysystem

CIRCUITS LIST

CircuitID	Description	CircuitID	Description		
Sw104.3	Keylessentrysystem	ve+	Cantrack		
Sw104.5B	Keylessentrysystem				
Sw107.2	Tagandlevellow				
Sw107.4	Tagandlevellow				
Sw107.6	Tagandlevellow				
Sw107.8	Tagandlevellow				
Sw107.10	Tagandlevellow				
Sw108.1	Tagandlevellow				
Sw108.3	Tagandlevellow				
Sw109	Lugg.doorslocks				
Sw110	Lugg.doorslocks				
Sw111	Lugg.doorslocks				
Sw112	Lugg.doorslocks				
Sw113	Lugg.doorslocks				
Sw114	Lugg.doorslocks				
Sw115	Lugg.doorslocks				
Sw116	Lugg.doorslocks				
Sw117	Lugg.doorslocks				
Sw122.1	HVACdefroster				
Sw122.3	HVACdefroster				
Sw139.3	Luggageights				
Sw139.5	Luggageights				
Sw152.B	Firesuppression				
Sw156.6	Mirrors				
Sw156.8	Mirrors				
Sw157.2B	Sunvisor				
Sw158.2B	Sunvisor				
Sw165.3	DriverandEntrancelights				
SwSo1.4	Slideoutfrontleft				
SwSo1.5	Slideoutfrontleft				
SwSo2.4	Slideoutrearleft				
SwSo2.5	Slideoutrearleft				
TR-Black	Trailerinterface				
TR-Blue	Trailerinterface				
TR-Brown	Trailerinterface				
TR-Green	Trailerinterface				
TR-Red	Trailerinterface				
TR-Yellow	Trailerinterface				
TR_Brown	Trailerinterface				
TWU.3	WCL				
TX	TPMS				
Tx	Cantrack				
TxD	Multiplexnetwork				