

# DIODES NUMBER CODE

No.	PAGE	AMP	#PREV.	LOCATION	FUNCTION
D1	7	3A	561740	FR JCT BOX	LO-AIR SONALERT-PRIMARY
D2	7	3A	561740	FR JCT BOX	LO-AIR SONALERT-SECONDARY
D4	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D5	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D17	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D18	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D19	9.1	3A	561740	FR JCT BOX	DAYTIME RUN LTS-PARK BRK CALL SW.
D20	9.1	3A	561740	FR JCT BOX	DAYTIME RUN LTS-HEAD LT SW
D22	18	3A	561740	FR SERVICE CPT	LEVEL LOW
D23	18	3A	561740	FR SERVICE CPT	LEVEL LOW
D25	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D26	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D27	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D28	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D29	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D30	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D32	11.2	3A	561740	DRIVER'S LTS	LUGGAGE DOOR AJAR T.T.LT.
D33	11.2	3A	561740	DRIVER'S LTS	DRIVER'S LTS CONSOLE & 3 WAY SWITCH
D39	9.2	3A	561740	FR JCT BOX	DRIVER'S LTS ENTRANCE DOOR SWITCH
D40	9.2	3A	561740	FR JCT BOX	CORNERING LT -LH
D41	9.2	3A	561740	FR JCT BOX	FR DOCKING LT LH -HI
D42	9.2	3A	561740	FR JCT BOX	FR DOCKING LT RH -HI
D43	10	3A	561740	FR JCT BOX	CORNERING LT -RH
D44	10	3A	561740	WIPER MOTOR	LOWER WIPER MOTOR SUPPRESSOR
D45	10	3A	561740	WIPER MOTOR	LOWER WIPER MOTOR SUPPRESSOR
D51	11.2	3A	561740	WIPER MOTOR	UPPER WIPER MOTOR SUPPRESSOR
D53	9.3	3A	561740	FR JCT BOX	ENTRANCE DOOR -STEP LTS
D54	20	3A	561740	FR JCT BOX	CORNERING LT -GROUND
D56	9.2	12A	560863	FR JCT BOX	BACK-UP MONITOR
D57	9.2	12A	560863	FR JCT BOX	FR DOCKING LT LH -LOW
D59	15.1	3A	561740	FR JCT BOX	FR DOCKING LT RH -LOW
D60	15.1	3A	561740	RJB A/C JCT PANEL	A/C & HEAT WATER VALVE
D62	15.1	3A	561740	RJB A/C JCT PANEL	A/C COMPR.CLUTCH SUPPRESSOR
D63	8	3A	561740	RJB A/C JCT PANEL	WATER PUMP FEED
D64	18	3A	561740	FR JCT BOX	PARKING BRAKE SONALERT
D65	15.1	3A	561740	FR JCT BOX	LEVEL LOW SONALERT
D66	15.1	3A	561740	RJB A/C JCT PANEL	WATER PUMP - PRE-HEAT FEED
D67	9.2	3A	561740	RJB A/C JCT PANEL	WATER VALVE - HEAT SW. FEED
D68	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - RH
D74	1	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - LH
D75	4	3A	561740	FR JCT BOX	DASH MASTER CUT OUT SW.
D78	4	3A	381351	BAT CPT	STARTER-SUPPRESSOR COIL RLY
D79	14	3A	561740	LH CONSOLE	PRE-HEAT WATER HEATER SW.
D83	8	3A	561740	LH CONSOLE	PRE-HEAT WATER HEATER SW.
D84	15.1	3A	561740	RR JCT BOX	FAN CLUTCH W/RETARDER
D85	15.1	3A	561740	RR JCT BOX	WATER VALVE
				RJB A/C JCT PANEL	WATER PUMP