

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C A	RR JCT BOX-ECU WORLD TR.	T & BET	34	-----	562419	C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C B	RR JCT BOX-ECU WORLD TR.	T & BET	34	-----	562420	C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584	C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640	C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643	C 93	FR LH UPPER WHELL CPT-ABS	WABCO	35	-----	641094
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646	C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646	C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640	C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643	C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643	C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646	C 102	FR SERV & SIDE CPT-FLASH. LH	GROTE	2	-----	562155
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640	C 103	FR SERV & SIDE CPT-MARKERS	GROTE	2	-----	562155
C 12	LH CONSOLE-HEATER MIR.	AMP MNL	2	561248	561247	C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	-----	562155
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515	C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662	C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 15	RR JCT BOX	AMP CPC	24	561641	561643	C 107	EVAPORATOR COMPT-DAMPER	PED WP	2	561566	561690
C 15	UNDER DASH-RH MIRROR	AMP MNL	9	561661	561662	C 108	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 16	LH CONSOLE SW-CRUISE ON OFF	SWF	8	-----	561107	C 109	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 17	LH CONSOLE SW-CRUISE RESUME	SWF	8	-----	561107	C 110	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 18	LH CONSOLE SW-CRUISE SET	SWF	8	-----	561107	C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 20	RR JCT BOX	AMP CPC	37	561644	561646	C 112	EVAPORATOR COMPT-SPEED MOT CTRL	DEUTSCH	5	-----	562566
C 21	RR JCT BOX	AMP CPC	24	561641	561643	C 113	BATT. & RR J.B.CPT.MARKER LT	GROTE	2	-----	562155
C 26	HYD & MAN TRANSM.-NEUT.& B/U	PED WP	4	561610	561611	C 114	RR J. BOX CPT DOOR DIR LT LH	GROTE	2	-----	562155
C 27	HYD & MAN TRANSM.-SPEED SENS.	PED WP	2	561566	561690	C 115	ENGINE COMPT-AIR DRYER	PED WP	2	561566	561690
C 32	DDEC ENGINE-ECM	PED	30	-----	561600	C 116	ENGINE COMPT. LTS	PED WP	1	561605	561577
C 35	RR JCT BOX	AMP CPC	24	561642	561643	C 118	ENGINE COMPT-LAVATORY FAN	TC	2	561030	560997
C 36	EMERGENCY EXIT LTS	AMP MNL	2	560900	560898	C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607
C 37	RR SECTION-LH HAT RACK	AMP MNL	9	561661	561662	C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607
C 38	RR SECTION-RH HAT RACK	AMP MNL	9	561661	561662	C 121	BATTERIE CPT. DOOR DIR LT RH	GROTE	2	-----	562155
C 41	LAVATORY ROOF FLUORESCENT	AMP MNL	2	560900	560898	C 122	ENGINE CPT-UNLOAD TAG SYSTEM	PED WP	2	561566	561690
C 42	LAVATORY BACK WALL-WTR TANK	AMP MNL	2	560900	560898	C 123	TAG AXLE-UNLOAD TAG RH VALVE	PED WP	2	561566	561690
C 43	LAVATORY BACK WALL-ACCES.	AMP MNL	9	561661	561662	C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690
C 45	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643	C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695	C 126	ENGINE CPT-FLUSHING PUMP	PED WP	2	561566	561690
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247	C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 50	FR SERVICE COMPT.-LOW BUOY	PED WP	1	561605	561577	C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 52	RR JCT BOX	AMP CPC	22	561709	561710	C 129	ENGINE CPT-PRE-HEAT WATER	AMP FF	6	561672	561186
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637	C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 58	RR JCT BOX - A/C PANEL	DEUTSCH	24	562280	562283	C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 59	RR JCT BOX - A/C PANEL	AMP CPC	14	561585	561583	C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247	C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247	C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247	C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247	C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247	C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	-----	562012
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247	C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	-----
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247	C 142	LAVATORY DOOR WALL	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247	C 143	LAVATORY DOOR WALL	AMP MNL	3	560908	562006
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247	C 144	UNDER LH SEAT-AISLE LTS	AMP MNL	4	560851	560852
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578	C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 70	LH CONSOLE	AMP CPC	24	561642	561643	C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	-----	560412
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646	C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643	C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 73	DASH CENTER PANEL	AMP CPC	16	561639	561640	C 151	EVAPORATOR CPT-THERMOSTAT	ITT SS	2	561813	562159
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646	C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247	C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247	C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247	C 155	EVAPORATOR CPT-WATER VALVE	PED WP	4	561610	561611
C 81	PASSENGER COMPT.-AISLE LTS	AMP MNL	2	560900	560898	C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 82	ENTRANCE DOOR	MOLEX	6	562070	562069	C 157	EVAPORATOR CPT-WATER PUMP	PED WP	2	561566	561690
C 83	ENTRANCE DOOR-PROIMITY SW	MOLEX	4	561477	561476	C 158	CONDENSER CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 84	ENTRANCE DOOR-PRESSURE SW	PED WP	2	561566	561690	C 159	CONDENSER CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 85	UNDER INSTRUMENT PANEL LH	AMP MTA-100 8	-----	562248	-----	C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	-----
C 87	RR END ROOF	AMP CPC	9	561636	561637	C 161	FR AXLE-ABS RH VALVE	WABCO	3	-----	641098
C 88	RR END ROOF-CLEARANCE LTS	AMP MNL	2	560900	560898	C 162	FR AXLE-ABS LH VALVE	WABCO	3	-----	641098

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN	#SOCKET	NO	LOCATION	TYPE	CAVITY	#PIN	#SOCKET
				HOUSING	HOUSING					HOUSING	HOUSING
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	-----	C 246	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 164	RR AXLE-ABS LH SENSOR	DEUTSCH	2	562486	562485	C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	-----	561108
C 165	RR AXLE-ABS LH VALVE	WABCO	3	-----	641098	C 251	LH SW PANEL-FAST IDLE	SWF	8	-----	561107
C 166	RR AXLE-ABS RH VALVE	WABCO	3	-----	641098	C 252	LH SW PANEL-SWITCH LT	SWF	2	-----	561837
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	562486	562485	C 253	LH SW PANEL-ETHER	SWF	8	-----	561107
C 168	RR AXLE-ABS OPT ATC	PED WP	4	561610	561611	C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	-----	562110
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	-----	562012	C 255	LH SW PANEL-JACOB	SWF	8	-----	561107
C 170	FR JCT BOX-FLASHER UNIT	TC	2	-----	561940	C 257	INSTRUMENT PANEL CENT-TACHO	AMP FF	8	-----	562363
C 171	LH CONSOLE	AMP CPC	37	561645	561646	C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	-----
C 172	ENGINE COMPT-WATER TANK HEAT.	PED WP	2	561566	561690	C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	-----	561108
C 173	LAV.POTABLE-WATER TANK HEAT.	AMP MNL	2	560900	560898	C 260	FR SERVICE CPT-LUG DOOR LCK	PED WP	6	561606	561607
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669	C 261	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669	C 262	UNDER DASH RH-DOOR MODULE	AMP MNL	4	561551	561668
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	-----	561186	C 263	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	-----	561186	C 264	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997	C 265	UNDER DASH RH-DOOR MODULE	AMP HDP-20	15	562011	562012
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997	C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986	C 268	UNDER DASH LH-MIRROR	AMP MNL	6	561552	561515
C 182	RR JCT BOX COMPT.-WT VIW	AMP CPC	16	561639	561640	C 269	UNDER DASH RH-MIRROR	AMP MNL	6	561552	561515
C 183	FR SERVICE CPT-KNEELING PAN.	PED WP	4	561610	561611	C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 184	FR SERVICE CPT-KNEELING SW	ITT SS	3	561111	561080	C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 185	RR JCT BOX COMPT.-WT VIM	PED	30	-----	561600	C 272	LH MIRROR	SPARTAN	6	-----	990158
C 186	RR JCT BOX CPT.-SPEED SIGN.TR	PED WP	2	561566	561690	C 273	RH MIRROR	SPARTAN	6	-----	990158
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690	C 275	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690	C 276	UNDER DASH RH-LOCK SOL.VALVE	AMP MNL	2	561248	561247
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515	C 279	UNDER DASH CYLINDER READ SW.	AMP MNL	2	561248	561247
C 189	ENGINE CPT RR DOOR B/U LT	PED WP	2	561566	561690	C 280	LH CONSOLE-UNLOAD TAG SW.	SWF	8	-----	561107
C 190	ENGINE CPT RR DOOR TAIL LT	PED WP	2	561566	561690	C 286	RH SW PANEL-A/C & HEAT	SWF	8	-----	561107
C 191	ENGINE CPT RR DOOR RH STOP LT	PED WP	2	561566	561690	C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 192	ENGINE CPT RR DOOR RH DIR. LT	PED WP	2	561566	561690	C 288	RH SW PANEL-FRESH AIR	SWF	8	-----	561107
C 193	FR SECT. LH HAT RACK-FLUOR.	AMP MNL	2	561248	561247	C 289	RH SW PANEL-SWITCH LT	SWF	2	-----	561837
C 194	ENGINE CPT RR DOOR LH DIR. LT	PED WP	2	561566	561690	C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 195	ENGINE CPT RR DOOR LH STOP LT	PED WP	2	561566	561690	C 299	LH CONSOLE SW-GALLEY	SWF	8	-----	561107
C 196	ENGINE CPT RR DOOR CYCLOP LT	PED WP	2	561566	561690	C 301	INSTRUMENT PANEL CENT-TACHO	AMP FF	8	-----	562363
C 199	ENGINE CPT RR DOOR LICENCE LT	DOM AUTO	2	930210	-----	C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 200	RH HAT RACK-FLUORESCENT	AMP MNL	4	561551	561668	C 309	DDEC ENGINE-ECM POWER CON.	PED MP	5	-----	562345
C 201	RH HAT RACK-FLUORESCENT	AMP MNL	4	561551	561668	C 310	LH CONSOLE SW-LUG. DOOR LCK	SWF	8	-----	561107
C 202	RH HAT RACK-BALLAST	AMP MNL	4	560851	560852	C 311	LH CONSOLE SW-HOS & PAS CHIME	SWF	8	-----	561107
C 203	RH HAT RACK-BALLAST	AMP MNL	6	561552	561515	C 312	LH CONSOLE SW-READING LTS	SWF	8	-----	561107
C 204	RH HAT RACK-GENERAL LT	AMP MNL	3	561667	561550	C 313	LH CONSOLE SW-GEN & FLUOR LTS	SWF	8	-----	561107
C 205	FR SECT.-RH HAT RACK SPEAKER	AMP MNL	9	561661	561662	C 314	LH CONSOLE SW-FR DEST. SIGN	SWF	8	-----	561107
C 206	RH HAT RACK-READING LT	AMP MNL	2	560900	560898	C 315	LH CONSOLE SW-LH STORE	SWF	8	-----	561107
C 207	LH HAT RACK-READING LT	AMP MNL	2	560900	560898	C 316	LH CONSOLE SPARE SWITCH	SWF	8	-----	561107
C 208	LH HAT RACK-BALLAST	AMP MNL	4	560851	560852	C 317	LH CONSOLE SW-RH STORE	SWF	8	-----	561107
C 210	FR SECT.-LH HAT RACK SPEAKER	AMP MNL	9	561661	561662	C 318	LH CONSOLE SW-DRV WINDOW LIFT	SWF	8	-----	561107
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898	C 320	LH CONSOLE SW-DRIVER'S LTS	SWF	8	-----	561107
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898	C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	-----	561848
C 213	FR ROOF-CLEARANCE LT	AMP MNL	2	560900	560898	C 323	LH CONSOLE CRUISE CTR SW PAN. AMP	CPC	9	561636	561637
C 220	RR JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073	C 325	LH CONSOLE SW-KNEELING	SWF	8	-----	561107
C 225	FR SECT. RH HAT RACK-FLUOR.	AMP MNL	2	561248	561247	C 326	LH CONSOLE SW-SPARE	SWF	8	-----	561107
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485	C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690	C 328	GALLEY-LAMP	AMP MNL	2	561248	561247
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690	C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 233	INSTRUMENT PANEL CENTER	V.D.O.	8	-----	562043	C 330	GALLEY MICROWAVE SW LT	SWF	2	-----	561837
C 234	INSTRUMENT PANEL CENTER	V.D.O.	4	-----	562044	C 331	GALLEY MICROWAVE SW	SWF	8	-----	561107
C 235	INSTRUMENT PANEL CENTER	V.D.O.	8	-----	562041	C 332	GALLEY RH CONTAINER SW LT	SWF	2	-----	561837
C 236	INSTRUMENT PANEL CENTER	AMP MNL	4	560851	560852	C 333	GALLEY RH CONTAINER SW	SWF	8	-----	561107
C 237	UNDER DASH LH-JACOB CLUTCH SW	ITT SS	3	561111	561080	C 334	GALLEY LH CONTAINER SW	SWF	8	-----	561107
C 238	RR JCT BOX-DIODE CONNECTOR	AMP MNL	9	561670	561669	C 335	GALLEY LH CONTAINER SW LT	SWF	2	-----	561837
C 239	FR SERVICE CPT-HI BUOY VALVE	PED WP	2	561566	561690	C 337	INSTR PANEL LH-UP WIPER SW	SWF	8	-----	561107
C 240	FR SERVICE CPT-KNEEL PROX SW	PED WP	2	561566	561690	C 338	INSTR PANEL LH-UP DEFROST SW	SWF	8	-----	561107
C 242	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080	C 339	INSTR PANEL LH-UP WASHER SW	SWF	8	-----	561107
C 243	FR SERVICE CPT-HEADLAMPS	TC	3	-----	561071	C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 244	FR SERVICE CPT-LH FOG LAMP	ITT SS	2	561813	561812	C 341	INSTR PANEL LH-HEAT MIRROR SW	SWF	8	-----	561107
C 245	FR SERVICE CPT-RH FOG LAMP	ITT SS	2	561813	561812	C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN	#SOCKET	NO	LOCATION	TYPE	CAVITY	#PIN	#SOCKET
				HOUSING	HOUSING					HOUSING	HOUSING
C 343	INSTR PANEL LH-HEADLAMP SW	SWF	8	-----	561107	C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 344	INSTR PANEL LH-HAZARD LT SW	SWF	8	-----	561107	C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 345	INSTR PANEL LH-FOG LT SW	SWF	8	-----	561107	C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 346	INSTR PANEL LH-SWITCH LTS	SWF	2	-----	561837	C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898	C 431	LH CONSOLE-PRER HEAT.	TAB AMP	1	561540	561539
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067	C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	DEUTSCH	4	562479	562477
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550	C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 351	LH HAT RACK-FLUOR 110V	MOLEX	4	561477	561476	C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	-----	561104	C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515	C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515	C 437	RH HAT RACK-WCL FR & RR SECT.	AMP CPC	24	561642	561643
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550	C 450	SOUND SYS. JCT. PANEL	MOLEX	4	562507	562503
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550	C 451	WIRELESS MICRO-FIRST CPT BAG	MOLEX	2	562550	562549
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550	C 452	UNDER DASH INSTR. PANEL	MOLEX	2	562550	562549
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	-----	561186	C 453	SOUND SYS. JCT.PANEL-VCP	PED WP	2	561566	561680
C 362	FR ROOF-LAVATORY OCCUPIED LT	AMP MNL	2	561248	561247	C 454	SOUND SYS.JCT.PAN.-FILT. VCP	PED WP	2	561566	561680
C 363	FR ROOF-WATCH YOUR STEP LT	AMP MNL	2	561248	561247	C 455	WIRELESS MICRO-LH HAT-RACK	CINCH	2	562554	562551
C 364	FR ROOF-DESTINATION SIGN	AMP MNL	3	561667	561550	C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	-----	562427
C 365	FR ROOF-UP WINDSHIELD DEFROST	AMP MNL	3	561667	561550	C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006	C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	-----	562426
C 367	ENGINE COMPT-DIF OIL T SENSOR	PED WP	2	561566	561690	C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	-----	562426
C 368	FR ROOF-DEST. SIGN BALLAST	AMP MNL	3	561667	561550	C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	-----	562541
C 369	FR ROOF-DEST. SIGN OPER. SW	TORRIX	5	-----	562110	C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561680
C 370	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898	C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	-----	562426
C 371	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898	C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476	C 464	RR JCT BOX-DDL CONN W. T.	PED MP	12	-----	562574
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247	C 465	LH CONSOLE-SHIFTER SELECTOR	T & BET	10	-----	562429
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515	C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	-----	562428
C 376	LH SWITCH PANEL	AMP CPC	37	561714	562005	C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	-----	562428
C 377	LH SW PANEL-STOP ENG.OVERRIDE	SWF	8	-----	561107	C 468	RR JCT BOX-VIM MOD. W.T.	PED MP	18	-----	562573
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	-----	C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 386	LH CONSOLE-WCL POWER SYSTEM	SWF	8	-----	561107	C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 387	RR JCT BOX (WCL)	AMP MNL	9	561661	561662	C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 388	RR JCT BOX (WCL)	AMP MNL	12	561735	561734	C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 389	WCL REAR DOOR	MOLEX	4	561477	561476	C 474	LUGGAGE CPT.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 390	LAVATORY WALL-WCL REMOTE CTR	SWF	8	-----	561107	C 475	RR JCT BOX-SPEED SIGN CONNECTOR	AMP MNL	2	561248	561247
C 391	LAVATORY WALL-WCL LAMP	SWF	8	-----	561107	C 475M	RR JCT BOX-SPEED SIGN MANUAL TR.	MOLEX	6	562070	562069
C 392	LAVATORY WALL-WCL SW. LT.	SWF	2	-----	561835	C 475WV	RR JCT BOX-SPEED SIGN WORLD TR.	MOLEX	6	562070	562069
C 393	LAVATORY WALL-WCL REMOTE SYS.	AMP CPC	4	561686	561687	C 476	RR JCT BOX-VIM WORLD TRANSM.	AMP CPC	16	561639	561640
C 394	UNDER INSTR. PANEL- B/U MONITOR	AMP MNL	4	560851	560852	C 477	RR JCT BOX-WORLD TR. SHIFT &RET.	AMP CPC	9	561636	561637
C 395	DRIVER'S COMPT. - B/U MONITOR	AMP	5	-----	-----	C 478	ELECTRONIC DESTINATION SIGN	AMP CPC	9	561636	561637
C 396	FR SECT. LH HAT RACK-SPEAKER	MOLEX	4	562507	562503	C 483	FR SERVICE CPT. (NOT USED)	PED PC	2	-----	562237
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284	C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782	C 501	FR LH UPPER WHELL CPT -PRODRIVER MOD	PED MP	7	562433	-----
C 402	RR DRIVE AXLE-AIR DRYER	PED MP	2	-----	562251	C 502	LH CONSOLE-PRE HEATER SW.	SWF	8	-----	561107
C 403	GALLEY FRIGO NORCOLD	AMP MNL	2	561248	561247	C 503	LH CONSOLE-PRE HEATER SW.	SWF	2	-----	561837
C 404	GALLEY LAMP	AMP MNL	2	561248	561247	C 504	LH CONSOLE WEBASTO TIMER	AMP	8	561188	562363
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898	C 505	LH CONSOLE ESPAR TIMER	AMP	12	-----	562681
C 407	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607	C 506	FR JCT BOX CPT. DIGITAL CLOCK	AMP	4	561685	561687
C 408	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607	C 507	FR SECT. LH HAT-RACK DIG. CLOCK	MOLEX	4	561477	561476
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	-----	562350	C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986	C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	-----	562530
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986	C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	-----
C 412	LH SW PANEL-MASTER SWITCH	SWF	8	-----	561107	C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	-----
C 413	ENG CPT-AVC HI UNLOAD PRS SW	PED WP	2	561566	561690	C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	-----
C 414	RR JCT BOX	AMP MNL	9	561670	561669	C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 415	ENGINE CRADLE-FAN SIGNAL	PED WP	3	561781	561782	C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 416	ENGINE CRADLE-FAN SIGNAL	PED P-C	3	562237	-----	C 515	RH DASH PANEL-T.T.LT.	AMP CPC	14	561585	561583
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986	C 515	FR JCT BOX CPT.-INTERCOM	MOLEX	4	561477	561476
C 418	INSTR. PANEL LH-HTR WINDSH.SW	SWF	8	-----	561107	C 516	CENTER DASH PANEL -UPPER T.T.LT.	AMP CPC	24	561642	561643
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550	C 516	FR JCT BOX CPT.-INTERCOM	MOLEX	6	562070	562069
C 420	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	-----	C 517	CENTER DASH PANEL -LOWER T.T.LT.	AMP CPC	24	561642	561643
C 421	ENGINE COMPT. WEBASTO WATER HTR	TC	1	561073	-----	C 517	LAVATORY WALL-INTERCOM	MOLEX	6	562070	562069
C 422	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	-----	C 519	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	-----	562580
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550	C 520	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	-----	641385

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN	#SOCKET	NO	LOCATION	TYPE	CAVITY	#PIN	#SOCKET
				HOUSING	HOUSING					HOUSING	HOUSING
C 521	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	-----	641385						
C 522	FR JCT BOX-DAYTIME LTS MODULE	BOSCH	5	-----	561183						
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 528	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248						
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 533	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 534	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550						
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515						
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247						
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247						
C 539	RH DASH PANEL-THERMOMETER SOUND	AMP MNL	2	561248	561247						
C 540	RH DASH PANEL-THERMOMETER SOUND	AMP MNL	2	561248	561247						
C 541	SOUND SYS. JCT PANEL-AUDIO SEAT SYS.	PED WP	2	561566	561690						
C 542	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550						
C 543	RR JCT BOX-PARK. BRAKE STOP LTS RESIS.	PED WP	2	561566	561690						
C 544	SOUND SYS JCT PANEL-AUDIO SEAT SYS.	PED WP	3	561781	562428						
C 545	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550						
C 546	LH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646						
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646						
C 548	LH DASH PANEL-T.T. LT. TEST SW.	SWF	8	-----	561107						
C 549	LH CONSOLE-FAN CLUTCH OVERRIDE SW.	SWF	8	-----	561107						
C 550	EVAPORATOR COMPARTMENT	ITT	2	561813	562159						
C 551	RR JCT BOX - A/C PANEL	PED	2	561566	561690						