

DIODES NUMBER CODE

No.	PAGE	AMP	#PREV.	LOCATION	FUNCTION
D1	7	3A	561740	FR JCT BOX	LO-AIR SONALERT-PRIMARY
D2	7	3A	561740	FR JCT BOX	LO-AIR SONALERT-SECONDARY
D4	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D5	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D6	5	3A	561740	FR JCT BOX	WCL NEUT. SIGN INTERFACE TO PARK BRK TTLT
D9	12	3A	561740	FR L.H. HAT-TRACK	HOSTESS & PASSENGER CHIME
D11	17	3A	561740	RR JCT BOX	LAVATORY OCCUPIED SIGN
D12	17	3A	561740	RR JCT BOX	LAVATORY OCCUPIED SIGN
D13	17	3A	561740	FR DEST. SIGN	FR DESTINATION SIGN
D14	17	3A	561740	FR DEST. SIGN	FR DESTINATION SIGN
D15	18	3A	561740	FR JCT BOX	KNEELING SYSTEM CTR-UP
D16	18	3A	561740	FR JCT BOX	KNEELING SYSTEM CTR-DOWN
D17	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D18	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D19	9	3A	561740	FR JCT BOX	DAYTIME RUN LITS-PARK BRK CALL SW.
D20	9	3A	561740	FR JCT BOX	DAYTIME RUN LITS-HEAD LT SW
D21	18	3A	561740	FR JCT BOX	KNEELING SYSTEM FEED BACK
D22	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR ALARM T.T.L.T.
D26	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR ALARM T.T.L.T.
D27	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR ALARM T.T.L.T.
D28	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR ALARM T.T.L.T.
D29	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR ALARM T.T.L.T.
D30	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR ALARM T.T.L.T.
D32	11.3	3A	561740	FRONT ROOF CABL.	DRIVERS LITS FEED BY STEP LITS
D33	11.3	3A	561740	FRONT ROOF CABL.	DRIVERS LITS FEED BY STEP LITS
D35	25	3A	561740	FR JCT BOX	WCL DOOR ALARM T.T.L.T.
D58	17	3A	561740	FR JCT BOX	RR HIGH BUOY - KNEELING
D59	13.1	3A	561740	RUB A/C JCT PANEL	A/C & HEAT BYPASS SWITCH
D60	13.1	3A	561740	RUB A/C JCT PANEL	A/C COMP.R.CLUTCH SUPPRESSOR
D61	9.2	3A	561740	FR JCT BOX	KNEELING SIDE RR RH DIRECTIONNAL LT
D62	13.1	3A	561740	RUB A/C JCT PANEL	WATER PUMP FEED
D63	17	3A	561740	FR JCT BOX	LAVATORY SONALERT
D64	17	3A	561740	FR JCT BOX	WCL DOOR ALARM
D65	13.1	3A	561740	RUB A/C JCT PANEL	WATER PUMP - PRE-HEAT FEED
D66	13.1	3A	561740	RUB A/C JCT PANEL	WATER VALVE - HEAT SW. FEED
D67	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - RH
D70	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D71	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D72	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D73	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D74	1	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D75	4	3A	381351	BAT OPT	DASH MASTER CUT OUT SW.
D77	18	3A	561740	FR JCT BOX	STARTER-SUPPRESSOR COIL RLY
D78	26	3A	561740	LH CONSOLE	PARKING BRAKE - KNEELING
D79	26	3A	561740	LH CONSOLE	PRE-HEAT WATER HEATER SW.
D81	18	3A	561740	FR JCT BOX	PRE-HEAT WATER HEATER SW.
D82	18	3A	561740	FR JCT BOX	PIEZO-KNEELING
D83	8	3A	561740	RR JCT BOX	PIEZO-KNEELING
D84	13.1	3A	561740	RUB A/C JCT PANEL	FAN CLUTCH W/RETARDER
D85	13.1	3A	561740	RUB A/C JCT PANEL	WATER VALVE
D86	16	3A	561740	UNDER DASH RH	WATER PUMP
D87	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D88	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D89	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D90	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D91	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN

PREVOST

WIRING DIAGRAM

NO: **D060882**

PAGE: **H**

REVISION **01**