

LAZER FORMAT "A" ECHELLE 3.2:1

DIODE CODE (D) Page H:1

DIODE CODE (D) Page H:1

NO.	PAGE	AMP	*PREVOST	LOCATION	FUNCTION
D1	7	3A	561740	ALARM JCT BOX	LO-AIR SONALERT-PRIMARY
D2	7	3A	561740	ALARM JCT BOX	LO-AIR SONALERT-SECONDARY
D4	10	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D5	10	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D17	10	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D18	10	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D19	9	3A	561740	FR JCT BOX	DAYTIME RUN LTS-PARK BRK
D20	9	3A	561740	FR JCT BOX	DAYTIME RUN LTS-HEAD LT SW
D22	22	3A	560931	FR SERVICE CPT	LEVEL LOW
D23	22	3A	560931	FR SERVICE CPT	LEVEL LOW
D25	13	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D26	13	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D27	13	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D28	13	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D29	13	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D30	13	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D31	13	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D39	10	3A	561740	FR JCT BOX	CORNERING LT-LH
D40	10	3A	561740	FR JCT BOX	FR DOCKING LT LH-HI
D41	10	3A	561740	FR JCT BOX	FR DOCKING LT RH-HI
D42	10	3A	561740	FR JCT BOX	CORNERING LT-RH
D51	14	3A	561740	FR JCT BOX	ENTRANCE DOOR-STEP LTS
D53	11	3A	561740	FR JCT BOX	CORNERING LT-GROUND
D55	24	3A	561740	RR JCT BOX	BACK-UP MONITOR
D56	10	3A	561740	FR JCT BOX	FR DOCKING LT LH-LOW
D57	10	3A	561740	FR JCT BOX	FR DOCKING LT RH-LOW
D60	18	3A	561740	RR JCT BOX	A/C COMPR.CLUTCH SUPPRESSOR
D62	18	3A	561740	A/C JCT BOX	WATER PUMP - A/C SYSTEM
D63	7	3A	561740	ALARM JCT BOX	PARKINK BRAKE SONALERT
D64	22	3A	561740	ALARM JCT BOX	LEVEL LOW SONALERT
D65	18	3A	561740	A/C JCT BOX	WATER PUMP - PRE-HEAT FEED
D66	18	3A	561740	A/C JCT BOX	WATER VALVE - HEAT SW FEED
D67	10	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - RH
D68	10	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - LH
D74	1	3A	561740	FR JCT BOX	DASH MASTER CUT OUT SW.
D75	4	3A	060798	BAT CPT	STARTER-SUPPRESSOR COIL RLY
D78	17	3A	561740	LH CONSOLE	WATER HEATER SWITCH & TIMER
D79	17	3A	561740	LH CONSOLE	WATER HEATER SWITCH & TIMER
D80	9	3A	561740	FR JCT BOX	DAYTIME RUN LTS-HEAD LTS CALL SW.

NO. PAGE AMP *PREVOST LOCATION FUNCTION