

CIRCUIT BREAKER CODE (CB)

Page F : 1

| NO. | PAGE | AMPERE | #PREVOST | LOCATION | FUNCTION |
|------|-------|--------|----------|----------------|-------------------------------|
| CB1 | 1 | 200A | 560838 | BAT JCT CPT | 24V FEED A/C JCT BOX |
| CB3 | 1 | 70A | 561767 | BAT JCT CPT | 12V FEED RR JCT BOX |
| CB4 | 1 | 90A | 560298 | BAT JCT CPT | 12V FEED FR JCT BOX |
| CB6 | 1 | 90A | 560298 | BAT JCT CPT | 24V FEED RR JCT BOX |
| CB7 | 1 | 90A | 560298 | BAT JCT CPT | 24V FEED FR JCT BOX |
| CB9 | 1 | 120A | 560465 | A/C JCT CPT | EVAPORATOR FAN MOTOR |
| CB10 | 2 | 8A | 561791 | FR JCT PANEL | MASTER SWITCH |
| CB11 | 1 | 25A | 561795 | BAT JCT PANEL | 24V HOT WIRE FEED RR & FR |
| CB12 | 15 | 15A | 561793 | FR JCT PANEL | WATER BOOSTER PUMP |
| CB13 | 10 | 8A | 561791 | FR JCT PANEL | LUGGAGE CPT LTS |
| CB16 | 2 | 8A | 561791 | RR JCT BOX | ENGINE-RR CTR & START SW |
| CB17 | 1 | 25A | 561795 | BAT JCT PANEL | 12V HOT WIRE FEED RR & FR |
| CB18 | 2 | 8A | 561791 | RR JCT BOX | ENGINE-FR CTR SW |
| CB19 | 3 | 15A | 561793 | RR JCT BOX | DDEC III E.C.M. POWER |
| CB20 | 3 | 15A | 561793 | RR JCT BOX | DDEC III E.C.M. POWER |
| CB21 | 3 | 6A | 561790 | RR JCT BOX | DDEC III 12V IGNITION |
| CB22 | 27 | 15A | 561793 | GALLEY | GALLEY BATTERY CHARGER |
| CB23 | 26-27 | 8A | 560828 | GALLEY | GALLEY CONTAINER RH |
| CB24 | 26-27 | 8A | 560828 | GALLEY | GALLEY CONTAINER LH |
| CB25 | 26-27 | 6A | 560827 | GALLEY | GALLEY LAMP |
| CB26 | 8 | 10A | 561792 | RR JCT BOX | BACK-UP LTS & ALARM |
| CB27 | 5 | 8A | 561791 | FR JCT PANEL | 24V IGN DASH ACCESSORIES |
| CB29 | 5 | 20A | 561794 | FR JCT PANEL | ELECTRICAL HORNS |
| CB30 | 5 | 10A | 561793 | FR JCT PANEL | FIRE ALARM & WATER HTR TIMER |
| CB31 | 5 | 8A | 561791 | FR JCT PANEL | AIR DRYER |
| CB35 | 6 | 6A | 561790 | FR JCT PANEL | FOG & HAZARD SW |
| CB36 | 6 | 15A | 561793 | FR JCT PANEL | FOG LTS |
| CB37 | 6 | 8A | 561791 | FR JCT PANEL | HEAD & MULTI-FUNC. SW |
| CB38 | 6 | 10A | 561792 | FR JCT PANEL | MARKER LTS |
| CB39 | 6 | 6A | 561791 | FR JCT PANEL | 12VI DASHBOARD-SPEEDO & TACHO |
| CB40 | 6 | 8A | 561791 | FR JCT PANEL | FR & RR CLEARANCE & ID. LTS |
| CB42 | 6 | 10A | 561792 | FR JCT PANEL | RR MARKER, TAIL, LICENCE LTS |
| CB43 | 6 | 20A | 561794 | FR JCT PANEL | HEADLAMP (HI) |
| CB44 | 6 | 15A | 561793 | FR JCT PANEL | HEADLAMP (LO) |
| CB45 | 7 | 10A | 561792 | FR JCT PANEL | MULTI-FUNC. SW (WIPER CTR) |
| CB48 | 8 | 6A | 561790 | FR JCT PANEL | STOP SW |
| CB49 | 8 | 15A | 561793 | RR JCT BOX | LH STOP LTS |
| CB50 | 11 | 6A | 561790 | RR JCT BOX | HAT RACK LIGHTING |
| CB51 | 8 | 20A | 561794 | FR JCT PANEL | RH STOP & CYCLOP LTS |
| CB52 | 14 | 6A | 561790 | FR JCT PANEL | HOSTESS & PASSENGER CHIME |
| CB55 | 11 | 10A | 561792 | FR JCT PANEL | aisle LTS |
| CB56 | 11 | 8A | 561791 | RR JCT BOX | EMERGENCY EXIT LTS |
| CB59 | 12 | 8A | 561791 | FR JCT PANEL | DRIVER'S LTS SW. |
| CB60 | 12 | 15A | 561793 | RR JCT BOX | READING LTS LH |
| CB61 | 12 | 15A | 561793 | RR JCT BOX | READING LTS RH |
| CB63 | 13 | 8A | 562293 | FR SERVICE CPT | 110V FLUORESCENT LH |
| CB64 | 13 | 8A | 562293 | FR SERVICE CPT | 110V FLUORESCENT RH |
| CB65 | 13 | 15A | 561793 | RR JCT BOX | 24V FLUORESCENT RH |
| CB66 | 13 | 15A | 561793 | RR JCT BOX | 24V FLUORESCENT LH |
| CB67 | 16 | 10A | 561792 | A/C AUX UNIT | AUXILIARY A/C FAN |
| CB68 | 16 | 10A | 561792 | A/C AUX UNIT | AUXILIARY A/C FAN |
| CB70 | 15-16 | 8A | 561791 | FR JCT PANEL | BLOWER CUT-IN RELAY |
| CB71 | 16 | 8A | 561791 | A/C AUX UNIT | AUXILIARY A/C TEMP CTRL |
| CB72 | 16 | 6A | 561790 | RR JCT BOX | AUXILIARY A/C COMPR. CLUTCH |
| CB74 | 16 | 20A | 561794 | RR JCT BOX | AUXILIARY A/C UNIT POWER |
| CB75 | 26-27 | 20A | 561794 | RR JCT BOX | GALLEY |
| CB79 | 15-16 | 10A | 561792 | FR JCT PANEL | DRIVER'S HTR FAN |

CIRCUIT BREAKER CODE (CB)

Page F : 1

| NO. | PAGE | AMPERE | #PREVOST | LOCATION | FUNCTION |
|-------|-------|--------|----------|-----------------|-----------------------------------|
| CB83 | 4 | 20A | 561794 | RR JCT BOX | WORLD TRANSMISSION VIM POWER |
| CB86 | 20 | 8A | 561791 | RR JCT BOX | LAVATORY PUMP |
| CB89 | 20 | 8A | 561791 | RR JCT BOX | LAVATORY LIGHTING |
| CB92 | 19 | 6A | 561790 | FR JCT PANEL | SPEED SW & KNEELING SYST. |
| CB94 | 12 | 8A | 561791 | FR JCT PANEL | READING LTS & GENERAL LTS MAIN SW |
| CB102 | 28-29 | 15A | 561793 | FR JCT PANEL | SOUND SYSTEM |
| CB104 | 24 | 6A | 561790 | FR JCT PANEL | ABS E.C.U. |
| CB105 | 24 | 20A | 561794 | FR JCT PANEL | ABS E.C.U. |
| CB106 | 24 | 10A | 561792 | FR SERV JCT BOX | ABS E.C.U. |
| CB107 | 24 | 10A | 561792 | FR SERV JCT BOX | ABS E.C.U. |
| CB109 | 20 | 8A | 561791 | RR JCT PANEL | LAVATORY EXH. FAN |
| CB117 | 18 | 8A | 561791 | FR JCT PANEL | RR VIEW MIRROR |
| CB118 | 22 | 20A | 561794 | FR JCT PANEL | LUGGAGE DOOR LOCK MOTOR |
| CB119 | 22 | 3A | 561797 | FR JCT PANEL | LUGGAGE UNLOCK TT LT & SW |
| CB120 | 22 | 20A | 561794 | FR JCT PANEL | LUGGAGE DOOR LOCK MOTOR |
| CB121 | 18 | 10A | 561792 | FR JCT PANEL | CIGAR LIGHTER |
| CB125 | 7 | 20A | 561794 | FR JCT PANEL | DIRECTIONAL LTS LH |
| CB126 | 7 | 20A | 561794 | FR JCT PANEL | DIRECTIONAL LTS RH |
| CB129 | 17 | 15A | 561793 | RR JCT BOX | WATER HEATER |
| CB130 | 5 | 6A | 561790 | RR JCT BOX | FAN CLUTCH RADIATOR |
| CB131 | 30 | 40A | 560703 | BAT JCT CPT | INVERTER |
| CB132 | 17 | 15A | 561793 | RR JCT BOX | WATER HEATER |
| CB133 | 28-29 | 15A | 561793 | FR JCT PANEL | SOUND SYSTEM |
| CB134 | 16 | 15A | 561793 | A/C JCT BOX | CONDENSER FAN MOTOR |
| CB135 | 16 | 15A | 561793 | A/C JCT BOX | CONDENSER FAN MOTOR |
| CB136 | 16 | 15A | 561793 | A/C JCT BOX | CONDENSER FAN MOTOR |
| CB137 | 16 | 15A | 561793 | A/C JCT BOX | CONDENSER FAN MOTOR |