

| No. | SYSTEM | No. | SYSTEM |
|-----|---------------------------------|-------|-------------------------------|
| 0 | GRD BATTERY 1 TO BATTERY 2 | 10 | A/C & HEAT SYSTEM-LO PRES. |
| 0 | GRD BATTERY 1 TO GRD STUD | 10 | INTERIOR LTS-LUGGAGE CPT |
| 0 | GRD STARTER MOTOR TO GRD STUD | 10A | INTERIOR LTS-LUGGAGE CPT |
| 0 | FJP - INSIDE GRD | 10A | A/C & HEAT SYSTEM-HI PRES. |
| 0 | RJB - INSIDE GRD | 10B | INTERIOR LTS-LUGGAGE CPT |
| 0 | ATEC1 TEST SW GRD | 10D | INTERIOR LTS-LUGGAGE CPT |
| 0A | A/C - A/C JCT BOX GRD | 10E | INTERIOR LTS-LUGGAGE CPT |
| 0A | FJP - GRD | 12 | 12V CUT OUT SW TO BATTERY |
| 0A | RJB - GRD | 12 | FR JCT PANEL 12V DISC SW |
| 0AA | VOLTAGE REGULATOR GRD | 12 | ENTRANCE DOOR AIR LOCK |
| 0B | FJP - GRD | 12A | FR JCT PANEL 12V DISC SW |
| 0B | RJB - GRD | 12A | RR JCT BOX 12V DISC SW |
| 0BE | OV BATTERY MONITOR | 12A | ENTRANCE DOOR AIR LOCK |
| 0C | FJP - GRD | 12B | FR JCT PANEL 12V DISC SW |
| 0C | RJB - GRD | 12B | RR JCT BOX 12V DISC SW |
| 0D | FJP - GRD | 12BE | 12V BATTERY MONITOR |
| 0D | RJB - BATTERY GRD | 12C | FR JCT PANEL 12V DISC SW |
| 0E | FJP - GRD | 12C | RR JCT BOX 12V DISC SW |
| 0E | RJB - GRD | 12D | FR JCT PANEL 12V DISC SW |
| 0G | FJP - GRD | 12D | RR JCT BOX 12V DISC SW |
| 0J | FJP - GRD | 12E | FR JCT PANEL 12V DISC SW |
| 0P | RJB - GRD | 12E | RR JCT BOX 12V DISC SW |
| 0S | FJP - SUN VISOR GRD | 12F | FR JCT PANEL 12V DISC SW |
| 0T | RJB - UNLOAD TAG GRD | 12G | FR JCT PANEL 12V DISC SW |
| 0T | FR SERVICE CPT-GRD | 12I | RR JCT BOX 12V IGNITION |
| 0VA | GRD BATTERY 2 TO BAT. EQUALIZER | 12I | FR JCT PANEL 12V IGNITION |
| 0W | FJP - GRD | 12IA | FR JCT PANEL 12V IGNITION |
| 0W | WORLD TRANSM. VIM CHASSIS GRD | 12IF | FR JCT PANEL 12V IGNITION |
| 0WA | PRE-HEAT WATER HEATER | 12T | RR JCT BOX 12V DISC SW |
| 0WB | PRE-HEAT WATER HEATER | 12T | RR JCT BOX 12V DISC SW |
| 0X | DDEC II-COOLANT MODULE GRD | 12V | RR JCT BOX 12V DISC SW |
| 0Y | ABS SYSTEM-GRD | 12VA | 12V BATTERY POST TO EQUALIZER |
| 0Y1 | ABS SYSTEM-GRD | 12VD | 12V HOT WIRE |
| 0Z | DDEC II-COOLANT MODULE GRD | 12VDF | 12V HOT WIRE FJB |
| 00 | BATTERY GRD | 12VDR | 12V HOT WIRE RJB |
| 2 | A/C & HEAT SYSTEM-CONDENSER | 12VF | 12V FR JCT PANEL |
| 2A | A/C & HEAT SYSTEM-CONDENSER | 12VIF | FR JCT PANEL 12V IGNITION |
| 2D | A/C & HEAT SYSTEM-CONDENSER | 12VIR | RR JCT BOX 12V IGNITION |
| 3 | A/C & HEAT SYSTEM-EVAPORATOR | 12VR | 12V RR JCT BOX |
| 3 | A/C & HEAT SYSTEM-CLUTCH SW | 12W | 12V HOT WIRE DDEC III FEED |
| 3A | A/C & HEAT SYSTEM-EVAPORATOR | 13A | ALARM & SIGNAL-LO AIR PRIM. |
| 6 | EXTERIOR LTS-DOCKING | 13B | ALARM & SIGNAL-LO AIR SEC. |
| 6A | EXTERIOR LTS-CORNERING | 15 | EXTERIOR LTS-MULTI FUNC LEVEL |
| 6B | EXTERIOR LTS-CORNERING | 15 | ALARM & SIGNAL-DIF. OIL TEMP |
| 6B1 | EXTERIOR LTS-CORNERING RH | 15 | WIPER & WASHER SYSTEM |
| 6C | EXTERIOR LTS-CORNERING | 15A | ALARM & SIGNAL-DIF. OIL TEMP |
| 6C1 | EXTERIOR LTS-CORNERING LH | 16 | SPEEDOMETER SIGNAL (+) |
| 6D | EXTERIOR LTS-DOCKING | 16T | SPEED SW SIGNAL IN (+) |
| 6E2 | EXTERIOR LTS-CORNERING LH | 17 | EXTERIOR LTS-FLASHER UNIT |
| 6F1 | EXTERIOR LTS-CORNERING RH | 17A | EXTERIOR LTS-FLASHER UNIT |
| 7 | ENTRANCE DOOR | 18 | ETHER COLD START SYST. |
| 8A | DDEC II-STP ENG. OVERRIDE | 19 | SPARE - RJB TO RR ROOF RH |
| 9 | INTERIOR LTS-ENGINE CPT | 20 | SPEEDOMETER SIGNAL (-) |
| 9 | INTERIOR LTS-RR JCT BOX | 20T | SPEED SW SIGNAL IN (-) |
| 9 | INTERIOR LTS-FR SERVICE CPT | 21 | EXTERIOR LTS-DIRECTIONNAL LH |
| 9A | INTERIOR LTS-FR JCT PANEL | 21A | EXTERIOR LTS-DIRECTIONNAL LH |
| 9B | INTERIOR LTS-FR JCT PANEL | 21B | EXTERIOR LTS-DIRECTIONNAL LH |
| 9C | INTERIOR LTS-FR SERVICE CPT | 21C | EXTERIOR LTS-DIRECTIONNAL LH |
| 9E | INTERIOR LTS-LUGGAGE CPT | 21H | EXTERIOR LTS-HAZARD SIGNAL |

| No. | SYSTEM | No. | SYSTEM |
|-------|--------------------------------|-----|---------------------------------|
| 23 | EXTERIOR LTS-DIRECTIONNAL RH | 36 | ENGINE BRAKE SYSTEM & RETARDER |
| 23A | EXTERIOR LTS-DIRECTIONNAL RH | 36A | ENGINE BRAKE SYSTEM |
| 23B | EXTERIOR LTS-DIRECTIONNAL RH | 36C | ENGINE BRAKE SYSTEM |
| 23C | EXTERIOR LTS-DIRECTIONNAL RH | 38 | FUEL WATER FILTER |
| 23H | EXTERIOR LTS-HAZARD SIGNAL | 39 | INTERIOR LTS-DRIVER'S LTS |
| 24 | BATTERY 3 TO BATTERY 4 | 39A | INTERIOR LTS-DRIVER'S LTS |
| 24 | BATTERY 4 TO 24V DISC SW | 39B | INTERIOR LTS-DRIVER'S LTS |
| 24A | RR JCT BOX 24V DISC SW | 39C | INTERIOR LTS-DRIVER'S LTS |
| 24A | FR JCT PANEL 24V DISC SW | 40 | SPARE - F.J.PANEL TO F.SERV CPT |
| 24B | RR JCT BOX 24V DISC SW | 43 | A/C & HEAT SYSTEM-FULL AIR |
| 24B | FR JCT PANEL 24V DISC SW | 44 | EXTERIOR LTS-FOG |
| 24BE | BATTERY MONITOR | 44A | EXTERIOR LTS-FOG |
| 24C | RR JCT BOX 24V DISC SW | 44B | EXTERIOR LTS-FOG |
| 24C | FR JCT PANEL 24V DISC SW | 44C | EXTERIOR LTS-FOG & HAZARD SW |
| 24E | FR JCT PANEL 24V DISC SW | 45 | A/C & HEAT SYSTEM-DRIVER'S CTHL |
| 24E | RR JCT BOX 24V DISC SW | 45 | A/C & HEAT SYSTEM-FULL AIR |
| 24F | FR JCT PANEL 24V DISC SW | 45A | A/C & HEAT SYSTEM-FULL AIR |
| 24G | FR JCT PANEL 24V DISC SW | 45G | A/C & HEAT SYSTEM-DRIVER'S HTR |
| 24I | FR JCT PANEL 24V IGNITION | 46 | EXTERIOR LTS-MARKER |
| 24I | RR JCT BOX 24V IGNITION | 46A | EXTERIOR LTS-MARKER |
| 24IA | FR JCT PANEL 24V IGNITION | 46B | EXTERIOR LTS-MARKER |
| 24IA | RR JCT BOX 24V IGNITION | 46C | EXTERIOR LTS-MARKER |
| 24IB | FR JCT PANEL 24V IGNITION | 47 | A/C & HEAT SYSTEM-DRIVER'S HTR |
| 24IB | RR JCT BOX 24V IGNITION | 47 | A/C & HEAT SYSTEM-FULL AIR |
| 24IF | FR JCT PANEL 24V IGNITION | 50 | AIR DRYER |
| 24P | FR JCT PANEL 24V DISC SW | 52 | ALARM & SIGNAL-ELEC. HORN |
| 24R | 24V RR JCT BLK TO STARTER | 52A | ALARM & SIGNAL-ELEC. HORN |
| 24S | FJP 24V DISC SW-SUN VISOR | 53 | ALARM & SIGNAL-ELEC. HORN |
| 24T | FR JCT PANEL 24V DISC SW | 53B | WIPER & WASHER SYSTEM |
| 24VA | 24V BATTERY POST TO EQUALIZER | 53C | WIPER & WASHER SYSTEM |
| 24VI | FR JCT PANEL 24V IGNITION | 53E | WIPER & WASHER SYSTEM |
| 24VIF | FR JCT PANEL 24V IGNITION | 53F | WIPER & WASHER SYSTEM |
| 24VIR | RR JCT BOX 24V IGNITION | 53J | WIPER & WASHER SYSTEM |
| 24VD | 24V HOT WIRE | 54 | SPARE-F.J.B. TO FR ROOF |
| 24VF | FR JCT PANEL 24V DISC SW | 55 | EXTERIOR LTS-HI BEAM |
| 24VR | RR JCT BOX 24V DISC SW | 56 | TRANSM. OIL TEMP GAUGE |
| 24X | 24V SPEED SW & LEVEL LOW | 57 | EXTERIOR LTS-HI BEAM |
| 25 | 12VAC GEN RLY ON SIGNAL | 57 | A/C & HEAT SYSTEM-WATER PUMP |
| 25A | NOT GENERATOR-WARNING LT | 57A | EXTERIOR LTS-HI BEAM |
| 25B | EXTERIOR LTS-DAYTIME RUN LTS | 57B | A/C & HEAT SYSTEM-WATER PUMP |
| 25C | 12VAC GEN RLY ON SIGNAL | 57C | PRE-HEAT WATER HEATER |
| 25K | 12VAC GEN RLY ON SIGNAL | 57C | A/C & HEAT SYSTEM-WATER PUMP |
| 25L | 12VAC GEN RLY ON SIGNAL | 57D | PRE-HEAT WATER HEATER |
| 26A | ATEC1-NEUTRAL SIGNAL | 57E | PRE-HEAT WTR HTR PUMP |
| 28 | A/C & HEAT SYSTEM-WARNING LT | 57F | PRE-HEAT WATER HEATER |
| 28A | A/C & HEAT SYSTEM-WARNING LT | 58 | EXTERIOR LTS-LO BEAM |
| 29 | A/C & HEAT SYSTEM-DRIVER'S HTR | 58A | EXTERIOR LTS-LO BEAM |
| 29A | A/C & HEAT SYSTEM-DRIVER'S HTR | 58B | EXTERIOR LTS-LO BEAM |
| 29B | A/C & HEAT SYSTEM-DRIVER'S HTR | 58E | EXTERIOR LTS-LO BEAM |
| 31 | A/C & HEAT SYSTEM-WARNING LT | 59A | ENGINE BRAKE SYSTEM |
| 31A | A/C & HEAT SYSTEM-WARNING LT | 60 | EXTERIOR LTS-RR & FR ROOF GRD |
| 31A | A/C & HEAT SYSTEM-PRESSURE SW | 61 | EXTERIOR LTS-24V FEED SW |
| 31B | A/C & HEAT SYSTEM-PRESSURE SW | 61A | EXTERIOR LTS-HEAD SIGNAL |
| 31B | WIPER & WASHER SYSTEM | 62 | LEVEL-LOW SYSTEM |
| 32 | EXTERIOR LTS-BACK-UP | 63 | EXTERIOR LTS-CLEARANCE |
| 32B | EXTERIOR LTS-BACK-UP | 63A | EXTERIOR LTS-CLEARANCE |
| 32D | BACK-UP ALARM | | |
| 34 | A/C & HEAT SYSTEM-CONDENSER | | |
| 35 | INTERIOR LTS-ENTRANCE DOOR | | |

| No. | SYSTEM | No. | SYSTEM | No. | SYSTEM | No. | SYSTEM |
|-----|---------------------------------|------|----------------------------------|--------|---------------------------------|------|-----------------------------------|
| 63B | EXTERIOR LTS-CLEARANCE | 90 | A/C & HEAT SYSTEM-WATER PUMP | 117 | ALARM & SIGNAL-TRANSM OIL TEMP | 135C | A/C & HEAT SYSTEM-AIR SENSOR |
| 63C | EXTERIOR LTS-MARKER SIGNAL | 90A | ENGINE CTR-MAST KEY SW FEED | 117A | ALARM & SIGNAL-TRANSM OIL TEMP | 135D | A/C & HEAT SYSTEM-AIR SENSOR |
| 63D | EXTERIOR LTS-MARKER & TAIL | 90B | A/C & HEAT SYSTEM-COND FAN MOT | 118 | WORLD TRANSM-SPARE INPUT (+) | 136 | GALLEY-ACCESSORIES |
| 63E | EXTERIOR LTS-CLEARANCE | 90B | ENGINE CTR-MAST KEY SW FEED | 118 | DRIVER'S & CO-PILOT SEAT HTR | 136 | WORLD TRANSM-ECU POWER |
| 63F | EXTERIOR LTS-MARKER BLINKER | 90B | FR JCT PANEL 24V DISC SW | 118A | DRIVER'S & CO-PILOT SEAT HTR | 136V | WORLD TRANSM-12V BATTERY |
| 63H | EXTERIOR LTS-TAIL | 90C | ALARM & SIGNAL-FIRE DETECTOR | 119 | WORLD TRANSM-ENGINE BRAKE | 136W | WORLD TRANSM-12V BATTERY |
| 63K | EXTERIOR LTS-TAIL | 90F | CHARG SYST-VOLTAGE REGUL. "B" | 120 | 12V HOT WIRE-DISC SW TO FJP | 136X | WORLD TRANSM-12V BATTERY |
| 64 | DIFFERENTIAL OIL TEMP GAUGE | 91 | PARKING BRAKE SW SIGNAL | 120 | WORLD TRANSM-SOL. C1 | 137 | WORLD TRANSM-RETARDER |
| 65A | CENTER DOOR AIR LOCK | 91A | PARKING BRAKE SW SIGNAL | 121 | WORLD TRANSM-SOL. GRD 2 | 137 | RR VIEW MIRROR |
| 76C | LOW FUEL T.T. LT. | 91B | DDEC III-FAST IDLE SIGNAL | 121 | CIGAR LIGHTER | 137A | RR VIEW MIRROR |
| 67 | A/C & HEAT SYSTEM | 91B | EXTERIOR LTS-RUN LTS CANCEL | 122 | A/C & HEAT SYSTEM-DRIVER'S HTR | 138 | WORLD TRANSM-RETARDER TEMP |
| 67A | A/C & HEAT SYSTEM | 91M | PARKING BRAKE ALARM | 122 | A/C & HEAT SYSTEM-FRESH AIR | 138 | ABS SYSTEM |
| 67B | A/C & HEAT SYSTEM | 91N | PARKING BRAKE ALARM | 122 | WORLD TRANSM-SOL. GRD 4 | 138A | ABS SYSTEM |
| 67C | A/C & HEAT SYSTEM | 92 | BATTERY EQUALIZER-CHECK BALANCE | 123 | WORLD TRANSM-NEUTRAL START | 139 | ABS SYSTEM |
| 70B | 24V IGN RR CTRL SW | 93 | BATTERY EQUALIZER-CHECK LO/HI | 123 | ALARM & SIGNAL-FIRE DETECTOR | 139 | WORLD TRANSM-OUTPUT SPEED HI |
| 71 | BACK-UP CANCEL SW | 95 | ENGINE BRAKE & RETARDER SYSTEM | 123A | ALARM & SIGNAL-FIRE DETECTOR | 140 | WORLD TRANSM-OUTPUT SPEED LO |
| 71B | BACK-UP CANCEL SW | 95A | ENGINE BRAKE & RETARDER SYSTEM | 124 | WORLD TRANSM-THROTTLE (HI) | 140 | ABS SYSTEM |
| 72 | BACK-UP CANCEL SW | 95B | ENGINE BRAKE & RETARDER SYSTEM | 125 | WORLD TRANSM-RETARDER INDICATOR | 141 | ABS SYSTEM |
| 72 | SPARE F.J.B. TO R.J.B. | 97 | TACHOMETER-NOT USE | 125W | WORLD TRANSM-RETARDER INDICATOR | 141 | WORLD TRANSM-ENGINE SPEED HI |
| 72B | SUN VISOR | 99A | FR SERVICE JCT BDX 12V HOT WIRE | 126 | WORLD TRANSM-LUBE PRESS SW. | 142 | ABS SYSTEM |
| 72C | SUN VISOR | 100B | BACK-UP CANCEL SW | 126 | CENTER DOOR AIR LOCK | 142 | WORLD TRANSM-SERIAL COM. A |
| 72D | SUN VISOR | 101 | 24V DISC SW TO STARTER | 127 | WORLD TRANSM-RETARDER FEED SOL. | 143 | ABS SYSTEM |
| 72E | SUN VISOR | 101 | WORLD TRANSM-LO SIGNAL SOL. LO | 127 | PRE-HEAT WATER HEATER | 143A | ABS SYSTEM |
| 72S | SUN VISOR | 102 | 24V STARTER TO GENERATOR | 127A | PRE-HEAT WATER HEATER | 143 | WORLD TRANSM-ECU BATTERY GRD |
| 76 | FUEL TANK GAUGE | 102 | 24V DISC SW TO A/C JCT BOX | 127W | PRE-HEAT WATER HEATER | 143W | WORLD TRANSM-BATTERY GRD |
| 76A | CENTER DOOR AJAR LT | 102 | WORLD TRANSM-SOL. GRD 1 | 127X | PRE-HEAT WATER HEATER | 143X | WORLD TRANSM-BATTERY GRD |
| 76L | LOW FUEL LT | 102 | WORLD TRANSM-SOL. C3 | 128 | WORLD TRANSM-SOL. C2 | 144 | WORLD TRANSM-ECU CHASSIS GRD |
| 76M | FUEL PRIME PUMP | 104 | LEVEL-LOW SYSTEM | 128A | PRE-HEAT WATER HEATER | 144 | ABS SYSTEM |
| 76P | FUEL PRIME PUMP | 104 | WORLD TRANSM-SOL. FORWARD | 128B | PRE-HEAT WATER HEATER | 144A | ABS SYSTEM |
| 77 | A/C & HEAT SYSTEM | 105 | WORLD TRANSM-RETARDER & SUMP | 128C | PRE-HEAT WATER HEATER | 145 | ABS SYSTEM |
| 77B | A/C & HEAT SYSTEM | 106 | WORLD TRANSM-OIL LEVEL HI | 128D | PRE-HEAT WATER HEATER | 146 | ABS SYSTEM |
| 77C | A/C & HEAT SYSTEM-COMPRESSOR | 107 | CHARG SYST-VOLTAGE REGUL. "F" | 128W | PRE-HEAT WATER HEATER | 146 | WORLD TRANSM-IGNITION SENSE |
| 77H | A/C & HEAT SYSTEM-FAN CLUTCH | 107 | WORLD TRANSM-LOCKUP SOL. HI | 128X | PRE-HEAT WATER HEATER | 146W | WORLD TRANSM-12V IGNITION |
| 80 | WORLD TRANSM-NEUTRAL SIGNAL GRD | 108 | WORLD TRANSM-REMO PWR WAKE UP | 129 | PRE-HEAT WATER HEATER | 146X | WORLD TRANSM-12V IGNITION |
| 81 | EXTERIOR LTS-STOP SW | 109 | WORLD TRANSM-RET. SOL. LO | 129 | PRE-HEAT WATER HEATER | 147 | WORLD TRANSM-OIL TEMP |
| 82 | EXTERIOR LTS-STOP SIGNAL | 110 | ALARM & SIGNAL-WATER TEMP | 129A | PRE-HEAT WATER HEATER | 147 | ABS SYSTEM |
| 82A | EXTERIOR LTS-STOP SIGNAL | 110 | WORLD TRANSM-LOCKUP SOL. LO | 129B | PRE-HEAT WATER HEATER | 147 | ETHER COLD START |
| 82B | EXTERIOR LTS-STOP LTS | 111 | BATTERY GRD | 130 | WORLD TRANSM-SOL. GRD 3 | 147C | ETHER COLD START |
| 82K | EXTERIOR LTS-STOP RETARDER | 111 | WORLD TRANSM-SOL. C6 | 130 | A/C & HEAT SYSTEM-EVAPORATOR | 148 | ABS SYSTEM |
| 82L | EXTERIOR LTS-STOP LTS | 112 | WORLD TRANSM-SPARE OUTPUT (+) | 131 | 24V DISC SW TO FR JCT PANEL | 148 | WORLD TRANSM-OUTPUT SPEED LO |
| 82R | EXTERIOR LTS-STOP LTS | 112 | BACK-UP SIGNAL | 131 | WORLD TRANSM-SOL. C4 | 149 | WORLD TRANSM-TURBINE SPEED HI |
| 83 | ENGINE CTR-MAST KEY SW ACCES | 113 | ALARM & SIGNAL-OIL PRESS | 132 | WORLD TRANSM-ENGINE BRAKE | 149 | ABS SYSTEM |
| 83A | DDEC II-COOLANT LEVEL PROBE | 113 | WORLD TRANSM-REVERSE WARNING | 132B | LEVEL-LOW SYSTEM | 149A | ABS SYSTEM |
| 84 | ENGINE CTR-MAST KEY SW START | 114 | WORLD TRANSM-SPARE OUTPUT (-) | 132C | LEVEL-LOW SYSTEM | 150 | ABS SYSTEM-SPARE |
| 84A | ENGINE CTR-MAST KEY SW START | 114 | INTERIOR LTS-DASH LT REGUL. | 132D | LEVEL-LOW SYSTEM | 150 | WORLD TRANSM-ENGINE SPEED LO |
| 85 | ENGINE CTR-MAST KEY SW IGN | 114A | INTERIOR LTS-DASH LT | 132E | LEVEL-LOW SYSTEM | 150 | DDEC III-ECM BATTERY GRD |
| 85A | 24V IGN DASH INSTRUMENTATION | 114B | INTERIOR LTS-DASH LT REGUL. | 132W | WORLD TRANSM-ENGINE BRAKE | 150A | DDEC III-ECM BATTERY GRD |
| 85B | ENGINE CTR-24V IGNITION | 114C | INTERIOR LTS-DASH LT | 132-1A | LEVEL-LOW SYSTEM | 151 | DDEC III-ECM BATTERY GRD |
| 85C | PARKING BRAKE SWITCH | 115 | ALARM & SIGNAL-TAG PRESS | 132-1B | LEVEL-LOW SYSTEM | 151 | WORLD TRANSM-SERIAL COM. B |
| 85F | LO AIR SONALERT | 115 | DDEC III-COOLANT LEVEL | 132-1C | LEVEL-LOW SYSTEM | 151 | ABS SYSTEM-SPARE |
| 85W | ABS-24V IGN | 115 | WORLD TRANSM-DO NOT SHIFT SIGNAL | 132-2A | LEVEL-LOW SYSTEM | 152 | ABS SYSTEM-SPARE |
| 85X | ABS-24V IGN | 115A | ALARM & SIGNAL-TAG PRESS | 132-2B | LEVEL-LOW SYSTEM | 153 | ABS SYSTEM |
| 85Y | ABS-WARNING LT | 115B | ALARM & SIGNAL-TAG PRESS | 132-2C | LEVEL-LOW SYSTEM | 153 | ELECTRICAL DRIVER'S SEAT |
| 86 | ENGINE CTR-STARTER SOL SIGN | 115C | DDEC III-COOLANT LEVEL | 133 | WORLD TRANSM-RET. ACTUATOR HI | 153 | WORLD TRANSM-SPARE INPUT (-) |
| 86A | ENGINE CTR-STARTER SOL SIGN | 116 | WORLD TRANSM-LO SIGNAL SOL. HI | 134 | WORLD TRANSM-RET. APPLY SOL. HI | 154 | WORLD TRANSM-ABS INPUT |
| 87B | ENGINE CTR-24V IGNITION | 116A | A/C & HEAT SYSTEM-DRIVER'S HTR | 135 | WORLD TRANSM-ANALOG GRD | 155 | WORLD TRANSM-SPARE INPUT (-) |
| 88 | ENGINE CTR-RR START SIGNAL | 116B | A/C & HEAT SYSTEM-DRIVER'S HTR | 135 | A/C & HEAT SYSTEM-AIR SENSOR | 155 | ABS SYSTEM |
| 89 | ENGINE CTR-RR START SIGNAL | 117 | WORLD TRANSM-SPARE INPUT (-) | 135A | A/C & HEAT SYSTEM-AIR SENSOR | 156 | WORLD TRANSM-THROTTLE POS. SIGNAL |

| No. | SYSTEM | No. | SYSTEM | No. | SYSTEM | No. | SYSTEM |
|------|---------------------------------|------|--------------------------------------|-----|--------|-----|--------|
| 156A | ABS SYSTEM | 510 | DDEC III-FAST IDLE SIGNAL | | | | |
| 156C | ABS SYSTEM | 524 | DDEC III-ENGINE BRAKE DISABLE | | | | |
| 156W | ABS SYSTEM | 525 | DDEC III-FAST IDLE SIGNAL | | | | |
| 157 | ABS SYSTEM | 528 | DDEC III-STOP ENG. OVERRIDE | | | | |
| 157 | WORLD TRANSM-SPEEDOMETER SIGNAL | 531 | DDEC III-CRUISE CLUTCH CUT OUT | | | | |
| 157A | ABS SYSTEM | 541 | DDEC III-CRUISE SET SW | | | | |
| 157B | ABS SYSTEM | 543 | DDEC III-CRUISE STOP SW CUT OUT | | | | |
| 157C | ABS SYST.-CANCEL SEC. BRK | 544 | DDEC III-CRUISE ON/OFF SW | | | | |
| 158 | WORLD TRANSM-DIMMER | 545 | DDEC III-CRUISE RESUME SW | | | | |
| 160 | WORLD TRANSM-SER. INTERFACE (-) | 555 | DDEC III-CRUISE ANABLE LIGHT | | | | |
| 161 | WORLD TRANSM-SIGNAL GRD | 556 | DDEC III-VEHICLE SPEED (+) | | | | |
| 161B | WORLD TRANSM-SIGNAL GRD | 557 | DDEC III-VEHICLE SPEED (-) | | | | |
| 162 | WORLD TRANSM-PRESS. SW C3 | 565 | DDEC III-ENGINE BRAKE ACTIVE | | | | |
| 163 | WORLD TRANSM-RETARDER ENABLE | 583 | DDEC III-ENGINE BRAKE 4 CYL. | | | | |
| 164 | WORLD TRANSM-RET. ACTUATOR SIGN | 750 | PRODRIVER-ILLUMINATION LTS | | | | |
| 165 | WORLD TRANSM-OIL LEVEL SIGNAL | 900 | DDEC III-DATA LINK (+) | | | | |
| 168 | WORLD TRANSM-SER. INTERFACE (+) | 901 | DDEC III-DATA LINK (-) | | | | |
| 170C | LUGGAGE DOOR LOCK | 908 | DDEC III-HYDRAULIC TRANSM. MODULATOR | | | | |
| 170D | LUGGAGE DOOR LOCK | 916 | DDEC III-SENSOR SUPPLY (5VDC) | | | | |
| 170E | LUGGAGE DOOR LOCK | 952 | DDEC III-SENSOR RETURN | | | | |
| 170F | LUGGAGE DOOR LOCK | 953 | DDEC III-BATTERY GRD | | | | |
| 170G | LUGGAGE DOOR LOCK | 953C | DDEC III-BATTERY GRD | | | | |
| 170H | LUGGAGE DOOR LOCK | 979 | DDEC III-ENGINE BRAKE 2 CYL. | | | | |
| 170J | LUGGAGE DOOR LOCK | A | LEVEL-LOW SYSTEM | | | | |
| 170L | LUGGAGE DOOR LOCK | A | A/C & HEAT SYSTEM-HI PRES. | | | | |
| 170M | LUGGAGE DOOR LOCK | A1 | A/C & HEAT SYSTEM-LO PRES. | | | | |
| 170N | LUGGAGE DOOR LOCK | A2 | INTERIOR LTS-DRIVER'S LTS | | | | |
| 170P | LUGGAGE DOOR LOCK | B | LEVEL-LOW SYSTEM | | | | |
| 170R | LUGGAGE DOOR LOCK | B00 | RR JCT BOX CPT BATT GRD | | | | |
| 170S | LUGGAGE DOOR LOCK | B000 | RR JCT BOX CPT BATT GRD | | | | |
| 170V | LUGGAGE DOOR LOCK | C | LEVEL-LOW SYSTEM | | | | |
| 170W | LUGGAGE DOOR LOCK | J4 | A/C & HEAT SYSTEM-DRIVER'S HTR | | | | |
| 170X | LUGGAGE DOOR LOCK | O3 | A/C & HEAT SYSTEM-DRIVER'S HTR | | | | |
| 170Y | LUGGAGE DOOR LOCK | R1 | A/C & HEAT SYSTEM-DRIVER'S HTR | | | | |
| 170Z | LUGGAGE DOOR LOCK | R6 | A/C & HEAT SYSTEM-DRIVER'S HTR | | | | |
| 182 | PYROMETER | SH1 | SHIELD WIRE GRD | | | | |
| 182A | PYROMETER | SH2 | SHIELD WIRE GRD | | | | |
| 201 | WORLD TRANSM-SPARE | SH3 | SHIELD WIRE GRD | | | | |
| 202 | WORLD TRANSM-SPARE | V5 | A/C & HEAT SYSTEM-DRIVER'S HTR | | | | |
| 203 | WORLD TRANSM-SPARE | V7 | A/C & HEAT SYSTEM-DRIVER'S HTR | | | | |
| 204 | WORLD TRANSM-SPARE | | | | | | |
| 205 | WORLD TRANSM-SPARE | | | | | | |
| 206 | WORLD TRANSM-SPARE | | | | | | |
| 214 | WORLD TRANSM-BACK UP SIGNAL | | | | | | |
| 214A | WORLD TRANSM-BACK UP SIGNAL | | | | | | |
| 231 | WORLD TRANSM-NEUTRAL SIGNAL GRD | | | | | | |
| 240 | DDEC III-ECM 12V FEEDING | | | | | | |
| 241 | DDEC III-ECM 12V FEEDING | | | | | | |
| 251 | PRODRIVER-12V HOT WIRE | | | | | | |
| 260 | WINDOW AJAR | | | | | | |
| 290 | FAN CLUTCH RADIATOR | | | | | | |
| 291 | FAN CLUTCH RADIATOR SPD 1 | | | | | | |
| 292 | FAN CLUTCH RADIATOR SPD 2 | | | | | | |
| 417 | DDEC III-LIMIT SPEED GOVERNOR | | | | | | |
| 419 | DDEC III-CHECK ENGINE LIGHT | | | | | | |
| 439 | DDEC III-12V IGNITION | | | | | | |
| 440 | DDEC III-12V IGNITION | | | | | | |
| 505 | DDEC III-TACHOMETER DRIVE | | | | | | |
| 505 | DDEC III-TACHOMETER DRIVE | | | | | | |
| 509 | DDEC III-STOP ENGINE LIGHT | | | | | | |