

NO.	PAGE	AMP	#PREVOST	LOCATION	FUNCTION
D1	5	3A	561740	FR JCT BOX	PRIMARY LO-AIR SONALERT
D2	5	3A	561740	FR JCT BOX	SECONDARY LO-AIR SONALERT
D17	7	3A	561740	FR JCT BOX	HAZARD LH
D18	7	3A	561740	FR JCT BOX	HAZARD RH
D19	6	3A	561740	FR JCT BOX	DAYTIME RUNNING LTS
D20	6	3A	561740	FR JCT BOX	DAYTIME RUNNING LTS
D21	7	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY LH
D22	7	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY RH
D23	18	3A	561740	RR JCT BOX	PRE WATER HEATER (ESPAR)
D24	5	3A	561740	FR JCT BOX	UNLOAD TAG SYSTEM
D25	19	3A	561740	FR JCT BOX	UNLOAD TAG SYSTEM
D31	15	3A	561740	FR JCT BOX	RETARDER - ATEC1 (24V IGN SIGN)
D32	15	3A	561740	FR JCT BOX	RETARDER -ATEC (STP SW SIGN)
D33	15	3A	561740	RR JCT BOX	RETARDER STOP LTS SIGN
D34	12	3A	561740	RR JCT BOX	A/C STD - FAN CLUTCH
D35	3	3A	561740	FR SERV JCT BOX	DDEC II CRUISE-STOP SW SIGNAL
D36	3	3A	561740	FR SERV JCT BOX	DDEC II CRUISE-DECEL SW
D37	8	3A	561740	RR JCT BOX	RETARDER STOP LTS SIGNAL
D60	12	3A	561740	RR JCT BOX	A/C STD - COMPR. CLUTCH

NO.	PAGE	AMP	#PREVOST	LOCATION	FUNCTION
-----	------	-----	----------	----------	----------