

RELAYS CODE (R)

Page | : 1

NO.	PAGE	COIL V	#PREVOST	LOCATION	FUNCTION
R1	1	24V	561991	FR JCT BOX	ENGINE RUN (24) FR
R2	2	24V	561991	FR JCT BOX	ENGINE RUN (12) FR
R3	4	24V	561707	RR JCT BOX	FIELD RELAY
R4	4	24V	561005	RR JCT BOX	STARTING MOTOR
R6	11	24V	561707	RR JCT BOX	STOP LTS-PARKING BRAKE
R7	5	24V	561707	RR JCT BOX	FAST IDLE
R8	6	24V	561707	RR JCT BOX	RETARDER
R9	11	24V	561707	RR JCT BOX	BACK-UP LTS
R10	6	24V	561707	RR JCT BOX	CHECK TRANSM ATEC
R11	6	24V	561707	RR JCT BOX	12V IGNITION ATEC & DDEC
R12	7	12V	562092	FR JCT BOX	ELECTRICAL HORNS
R13	8	24V	561707	FR JCT BOX	FOG LTS
R14	9	24V	561707	FR JCT BOX	BLINKER
R15	9	24V	561707	FR JCT BOX	FR MARKER LTS
R16	9	24V	561707	FR JCT BOX	IDENT. & CLEARANCE LTS
R17	9	24V	561707	RR JCT BOX	TAIL-LICENCE-MARKER-RR LTS
R18	9	24V	561707	FR JCT BOX	D R L-PARK BRK CUT-IN
R19	9	24V	561707	FR JCT BOX	HEADLAMPS (HI)
R20	9	24V	561707	FR JCT BOX	HEADLAMPS (LO)
R21	10	24V	561707	FR JCT BOX	L.H. DIRECTIONNAL LT
R23	10	24V	561707	FR JCT BOX	R.H. DIRECTIONNAL LT
R24	10	24V	561707	FR JCT BOX	R.H. CORNERING LT
R25	10	24V	561707	FR JCT BOX	L.H. CORNERING LT
R26	11	24V	561707	RR JCT BOX	STOP LTS
R27	14	24V	561707	RR JCT BOX	aisle & EMERG.EXIT - LTS
R28	14	24V	561707	FR JCT BOX	DASH LTS RHEOSTAT
R29	15	24V	561707	RR JCT BOX	READING LTS R.H.
R30	15	24V	561707	RR JCT BOX	READING LTS L.H.
R31	15	24V	561707	RR JCT BOX	GENERAL LTS
R32	16	24V	561707	RR JCT BOX	24V FLUORESCENT
R33	18	12V	562092	FR JCT BOX	BLOWER & GALLEY CUT-IN
R34	18	24V	561707	A/C JCT BOX	A/C LOGIC PANEL
R35	18	24V	561707	A/C JCT BOX	WATER PUMP
R36	18	24V	561707	A/C JCT BOX	A/C COMPRESSOR CLUTCH
R37	10	24V	561707	FR JCT BOX	KNEELING LT
R39	19	24V	560407	A/C JCT BOX	CONDENSER FAN MOTOR
R40	19	24V	561014	A/C JCT BOX	CONDENSER SPEED CTR HI
R41	19	24V	560407	A/C JCT BOX	CONDENSER SPEED CTR HI
R42	23	24V	561707	RR JCT BOX	LAVATORY FLUORESCENT
R43	24	24V	561707	FR JCT BOX	KNEELING SYSTEM
R44	24	24V	561707	FR JCT BOX	KNEELING SYSTEM
R45	29	24V	561707	INVERTER COMPT	V.C.R. INVERTER CUT-IN
R46	24	12V	562092	RR JCT BOX	CAMERA DOOR
R47	30	24V	561707	INVERTER COMPT	GALLEY-LIQUID CONTAINERS
R48	30	24V	561707	INVERTER COMPT	COFFEE MAKER
R49	27	24V	561707	FR JCT BOX	ABS - SEC. BREAK RLY
R50	27	24V	561707	FR JCT BOX	ABS - VR2 RLY
R51	27	24V	561707	FR JCT BOX	ABS - WARNING RLY
R52	27	24V	561707	FR JCT BOX	ABS - VR1 RLY
R53	1	24V	561991	RR JCT BOX	ENGINE RUN (24) RR
R54	2	24V	561991	RR JCT BOX	ENGINE RUN (12) RR
R56	25	12V	562092	FR JCT BOX	JACOB BRAKE SYSTEM
R57	9	24V	561707	FR JCT BOX	DAY'S BLINKER
R58	28	12V	562092	RR JCT BOX	HYD. TRANSM. MODULATOR CTR
R60	9	12V	562092	FR JCT BOX	DAYTIME RUN LTS
R61	25	12V	562092	RR JCT BOX	STOP LTS-JACOB SIGNAL
R68	26	24V	561707	FR JCT BOX	SOUND SYSTEM CUT IN PRIOR TO P337
R68	26	24V	561557	FR JCT BOX	SOUND SYSTEM CUT IN EFF. W/P337

RELAYS CODE (R)

Page | : 1

NO.	PAGE	COIL V	#PREVOST	LOCATION	FUNCTION
R72	18	24V	561707	A/C JCT BOX	DAMPER CONTROL-A/C
R77	18	24V	561707	A/C JCT BOX	WATER VALVE-A/C
R78	18	24V	561707	A/C JCT BOX	WATER HEATER (ESPAR) VALVE CTR'L