

## Fuses list

Fuse ID	Location	Part No	Function	Rating	Page
F4	Fuse Box FJB	563280	Trans lshift	5 amp	4.2
F10	Fuse Box FJB	563280	Networks,Cluster,light	5 amp	4.1
F11	Fuse Box FJB	563282	Horn	20 amp	4.1
F12	Fuse Box FJB	563284	Spares VECF	15 amp	4.1
F13	Fuse Box FJB	563284	12VD Customer	15 amp	4.1
F14	Fuse Box FJB	563165	Spares VECF	30 amp	4.1
F15	Fuse Box FJB	563280	Vlink_Gateway	5 amp	4.1
F16	Fuse Box FJB	563284	12V Eng. run	15 amp	4.1
F17	Fuse Box FJB	563165	Multiplex power	30 amp	4.1
F18	Fuse Box FJB	563165	Multiplex power	30 amp	4.1
F19	Fuse Box FJB	563165	Multiplex power	30 amp	4.1
F20	Fuse Box FJB	563280	Multiplex power	5 amp	4.1
F21	Fuse Box FJB	563165	Multiplex power	30 amp	4.1
F22	Fuse Box FJB	563280	ELD	5 amp	4.1
F23	Fuse Box FJB	563165	ESP	30 amp	4.1
F24	Fuse Box FJB	563284	12V Ign	15 amp	4.1
F25	Fuse Box FJB	563284	12V outlets	15 amp	4.1
F26	Fuse Box FJB	563284	Spares VECF	15 amp	4.1
F27	Fuse Box FJB	563165	Spares VECF	30 amp	4.1
F29	Fuse Box FJB	563283	Networks	10 amp	4.1
F30	Fuse Box FJB	563280	Networks	5 amp	4.1
F33	Fuse Box FJB	563280	Multiplex power	5 amp	4.2
F34	Fuse Box FJB	563280	Multiplex power	5 amp	4.2
F35	Fuse Box FJB	563280	Multiplex power	5 amp	4.2
F36	Fuse Box FJB	563280	Start switch	5 amp	4.2
F37	Fuse Box FJB	563280	Haz/ExtDoorSW	5 amp	4.2
F39	Fuse Box FJB	563284	24 VD	15 amp	4.2
F40	Fuse Box FJB	563284	Fire suppression	15 amp	4.2
F41	Fuse Box FJB	563280	Spares VEF	5 amp	4.2
F42	Fuse Box FJB	563283	Transmission IShift	10 amp	4.1
F43	Fuse Box FJB	563282	Transmission IShift	20 amp	4.1
F44	Fuse Box FJB	563165	Multiplex power	30 amp	4.2
F45	Fuse Box FJB	563165	Multiplex power	30 amp	4.2
F46	Fuse Box FJB	563280	Multiplex power	5 amp	4.2
F47	Fuse Box FJB	563280	Multiplex power	5 amp	4.2
F50	Fuse Box FJB	563165	HVAC defroster	30 amp	4.2
F51	Fuse Box FJB	563280	Destination signs	5 amp	4.2
F52	Fuse Box FJB	563280	FMS GW	5 amp	4.2
F53	Fuse Box FJB	563283	Clock & VSS	10 amp	4.2
F54	Fuse Box FJB	563284	Wiper Washer	15 amp	4.2
F55	Fuse Box FJB	563283	B-Up CAM	10 amp	4.2
F56	Fuse Box FJB	563284	Spares VEF	15 amp	4.2

## Fuses list

Fuse ID	Location	Part No	Function	Rating	Page
F57	Fuse Box FJB	563283	Spares VERF	10 amp	4.2
F58	Fuse Box FJB	563284	Spares VERF	15 amp	4.2
F73	Fuse Box RJB	563283	Engine ECU Volvo	20 amp	5.1
F90	Fuse Box RJB	563282	Urea system	20 amp	5.1
F91	Fuse Box RJB	563282	Engine ECU Volvo	20 amp	5.1
F95	Fuse Box FJB	563280	FMS GW/Ishift	5 amp	4.2
F96	Fuse Box RJB	563282	Urea system	20 amp	5.1
F99	Fuse Box RJB	563165	Engine ECU Volvo	30 amp	5.1
F100	Fuse Box RJB	563283	Engine ECU Volvo	10 amp	5.1
F101	Fuse Box RJB	564520	Power for Master relay	300 amp	3.1
F105	Fuse Box RJB	563282	Spare VECR	20 amp	5.1
F106	Fuse Box RJB	563153	Multiplex power	30 amp	5.1
F107	Fuse Box RJB	563153	Multiplex power	30 amp	5.1
F108	Fuse Box RJB	563280	Networks	5 amp	5.1
F109	Fuse Box RJB	563280	Engine & RJB cmpt. lights	5 amp	5.1
F110	Fuse Box RJB	563283	Transmission Alisson	10 amp	5.1
F112	Fuse Box RJB	563165	Trailer	30 amp	5.1
F113	Fuse Box RJB	563283	Spare VECR	10 amp	5.1
F114	Fuse Box RJB	563284	Spare VECR	15 amp	5.1
F115	Fuse Box RJB	563283	Spare VECR	20 amp	5.1
F116	Fuse Box RJB	563284	Spare VECR	15 amp	5.1
F117	Fuse Box RJB	563283	Spare VECR	20 amp	5.1
F118	Fuse Box RJB	563284	Spare VECR	15 amp	5.1
F119	Fuse Box RJB	563283	Spare VECR	30 amp	5.1
F120	Fuse Box RJB	563284	Spare VECR	15 amp	5.1
F121	Fuse Box RJB	563284	Power for customer	15 amp	5.1
F122	Fuse Box RJB	563283	Equalizer	10 amp	5.1
F123	Fuse Box RJB	563153	Spare VECR	25 amp	5.1
F124	Fuse Box RJB	563153	Spare VECR	25 amp	5.1
F126	Fuse Box RJB	563280	Engine ECU &HVAC	5 amp	5.1
F127	Fuse Box RJB	563284	Pre-heat	15 amp	5.1
F129	Fuse Box RJB	563284	Pre-heat	15 amp	5.1
F130	Fuse Box RJB	563284	Pre-heat	15 amp	5.1
F131	Fuse Box RJB	563280	Power for customer	5 amp	5.1
F132	Fuse Box RJB	563280	A57 Pwr	5 amp	5.1
F133	Fuse Box RJB	563165	A49 Pwr	30 amp	5.1
F134	Fuse Box RJB	563165	A52 Pwr	30 amp	5.1
F135	Fuse Box RJB	563165	A54 Pwr	30 amp	5.1
F136	Fuse Box RJB	563165	A53 Pwr	30 amp	5.1
F137	Fuse Box RJB	563280	R Max Temp	5 amp	5.1
F138	Fuse Box RJB	563280	Reading lamps & chime	5 amp	5.1
F139	Fuse Box RJB	563283	Alternators	10 amp	5.1

## Fuses list

Fuse ID	Location	Part No	Function	Rating	Page
F140	Fuse Box RJB	563283	Spare VECR	10 amp	5.1
F141	Fuse Box RJB	563284	Evap Fan Mo7	15 amp	5.1
F142	Fuse Box RJB	563284	Evap Fan Mo8	15 amp	5.1
F143	Fuse Box RJB	563284	Evap Fan Mo27	15 amp	5.1
F144	Fuse Box RJB	563284	Evap Fan Mo28	15 amp	5.1
F145	Fuse Box RJB	563284	Spare VECR	15 amp	5.1
F146	Fuse Box RJB	563283	Spare VECR	10 amp	5.1
F147	Fuse Box RJB	563284	Power for customer	15 amp	5.1
F148	Fuse Box RJB	563165	12v Sound Syst	30 amp	5.1
F149	Fuse Box RJB	563284	Spare VECR	15 amp	5.1
F150	Fuse Box RJB	563283	Spare VECR	10 amp	5.1
F151	Fuse Box RJB	563284	Spare VECR	15 amp	5.1
F152	Fuse Box RJB	563283	Spare VECR	10 amp	5.1
F199	RJB	564520	Electric fans drive	300 amp	13.1
F200	Parcel Rack LH 1st Cmpt	563284	VSS HDMI	15 amp	35.6
F201	Parcel Rack LH 1st Cmpt	563284	VSS HDMI	15 amp	35.6
F202	Parcel Rack LH 1st Cmpt	563284	VSS HDMI	15 amp	35.6
F203	Parcel Rack LH 1st Cmpt	563282	VSS HDMI	20 amp	35.6
F209	RJB	564174	Engine pre-heater power	150 amp	14.1
F243	Evap_cmpt	560893	24V while Evap. relay powered	3 amp	18.2
F301	VECT	563284	VECT Trailer interface	15 amp	26.4
F302	VECT	563284	VECT Trailer interface	15 amp	26.4
F303	VECT	563284	VECT Trailer interface	15 amp	26.4
F304	VECT	563284	VECT Trailer interface	15 amp	26.4
F305	VECT	563284	VECT Trailer interface	15 amp	26.4
F306	VECT	563284	VECT Trailer interface	15 amp	26.4
F307	VECT	563284	VECT Trailer interface	15 amp	26.4