

CONNECTORS CODE (C)						P. G : 1					
NCL	LOCATION	TYPE	(NB) CAVITY	*PIN HOUSING	*SOCKET HOUSING	NCL	LOCATION	TYPE	(NB) CAVITY	*PIN HOUSING	*SOCKET HOUSING
C3	UNDER DASH-LH	AMP CPC	37	561645	561646	C112	LH CONSOLE SW-GENERAL LTS	SWF	8	561107	561107
C7	FR SERVICE COMPT.-CLUTCH SW	ITT SS	3	561111	561080	C114	ENGINE DDEC-SPEED SIGNAL	PED WP	2	561566	561590
C8	FR JCT PANEL VCR FEED	AMP MNL	2	561248	561247	C115	RR JCT BOX-ENGINE ACCES.	DEUTSCH	40	562281	562284
C11	LH CONSOLE SW-MIRROR	AMP MNL	3	561667	561550	C116	DRIVE AXLE COMPT.-AIR DRYER	PED WP	2	561606	562251
C12	LH CONSOLE SW-MIRROR HTR	AMP MNL	2	561248	561247	C119	ENGINE COMPT.-LH LOWER LAMP	PED WP	6	561606	561607
C13	LH CONSOLE SW-MIRROR	AMP MNL	6	561552	561515	C120	ENGINE COMPT.-LH LOWER LAMP	PED WP	6	561606	561607
C14	UNDER DASH LH-MIRROR	AMP MNL	9	561670	561669	C123	HAT RACK-BALLAST RH	AMP MNL	6	561552	561515
C15	UNDER DASH RH-MIRROR	AMP MNL	9	561670	561669	C123	HAT RACK-BALLAST RH	AMP MNL	6	561552	561515
C18	UNDER DASH-FIRE ALARM	AMP MNL	2	560900	560898	C124	HAT RACK-FLUORESCENT	AMP MNL	4	561551	561668
C19	UNDER DASH-A/C & HEAT SYST.	TC	10	561072	561110	C125	HAT RACK-FLUORESCENT	AMP MNL	4	561551	561668
C20	RR JCT BOX DIODES	AMP MNL	9	561670	561669	C126	HAT RACK-READING LTS	AMP MNL	2	560900	560898
C21	LUGGAGE COMPT.-LOCK DOOR MOT.	PED	2	561566	562076	C130	LH CONSOLE SW-READING LTS	SWF	8	561107	561107
C22	ENGINE COMPT.-CYCLOP LH	PED WP	2	561566	561690	C131	LH CONSOLE SW-LUG. DOOR LOCK	SWF	8	561107	561107
C26	UNDER INSTRUMENT.-PANEL RHEO.	TC	2	561030	560997	C132	LH CONSOLE SW-PAS & HOS CHIME	SWF	8	561107	561107
C29	FR SERVICE COMPT.-VIM FEED	PED WP	3	561781	561782	C133	LH CONSOLE SW-JACOB DR RET.	SWF	8	561107	561107
C32	RH CONSOLE-DRV TEMP SENSOR	BURNDY	3	561104	561104	C134	LH CONSOLE SW-GALLEY	SWF	8	561107	561107
C33	FRSERVICE COMPT. DDEC VSS	PED WP	2	561566	561690	C135	LH SW PANEL-ETHER	SWF	8	561107	561107
C34	RH CONSOLE-DRV TEMP CTRL	BURNDY	6	561103	561103	C136	LH CONSOLE SW-MIRROR HTR	SWF	8	561107	561107
C35	RECIRCULATED AIR GRILL-SENSOR	BURNDY	3	561104	561104	C137	RH SW PANEL-HEAD LAMP	SWF	8	561107	561107
C36	LH CONSOLE SW-CRUISE ON/OFF	SWF	8	561107	561107	C138	RH SW PANEL-SPARE	SWF	8	561107	561107
C37	LH CONSOLE SW-CRUISE SET	SWF	8	561107	561107	C139	RH SW PANEL-FOG LAMP	SWF	8	561107	561107
C38	LH CONSOLE SW-CRUISE RESUME	SWF	8	561107	561107	C140	FR JCT PANEL-BAT. HI/LO	AMP MNL	2	560900	560898
C41	UNDER DASH-FLASHER UNIT	TC	2	561940	561940	C141	ENGINE COMPT.-B/UP ALARM	PED WP	2	561566	561590
C49	LAVATORY NIGHT LTS	AMP MNL	2	560900	560898	C142	FR SERVICE CPT-LH MARKER LTS	ITT SS	3	561111	561080
C50	RH CONSOLE-PAS. TEMP CTRL	AMP MNL	6	561103	561103	C143	RR LH HAT RACK-FEEDING	AMP MNL	9	561661	561662
C51	RH CONSOLE SW-A/C & HEAT	SWF	8	561107	561107	C144	RR RH HAT RACK-FEEDING	AMP MNL	9	561661	561662
C52	ENGINE COMPT.-COMPRESSOR 05G	PED WP	2	561566	561690	C145	RH HAT RACK-BALLAST	AMP MNL	4	560891	560852
C53	ENGINE COMPT.-COMPRESSOR 05G	PED WP	2	561566	561690	C146	FR SERVICE CPT-RH MARKER LTS	ITT SS	3	561111	561080
C54	ENGINE COMPT.-COMPRESSOR 05G	TC	1	560898	560897	C147	RR ROOF LH-EMERGENCY EXIT LTS	AMP MNL	2	560900	560898
C61	ENGINE COMPT.-FUEL FILTER	PED WP	2	561566	561690	C148	RR ROOF RH-EMERGENCY EXIT LTS	AMP MNL	2	560900	560898
C67	LH UNDER DASH-AMPLIF. RH SPK	BLAUPUNKT	2	561988	561988	C149	LH HAT RACK-BALLAST	AMP MNL	4	560891	560852
C68	LH UNDER DASH-AMPLIF. RH SPK	BLAUPUNKT	2	561988	561988	C150	FR RH HAT RACK-110V FLUOR	AMP MNL	2	561248	561247
C73	LH SW PANEL-MULTI FUNC. LEV.	AMP FF	8	561108	561108	C151	FR LH HAT RACK-110V FLUOR	AMP MNL	2	561248	561247
C74	LH SW PANEL-MULTI FUNC. LEV.	AMP FF	6	561108	561108	C152	LH HAT RACK-GENERAL LTS	AMP MNL	3	561667	561550
C78	LUGGAGE COMPT.-DOOR LOCK 4 LH	AMP MNL	4	560851	560852	C153	RH HAT RACK-GENERAL LTS	AMP MNL	3	561667	561550
C79	LUGGAGE COMPT.-DOOR LOCK 4 RH	AMP MNL	4	560851	560852	C154	RH SW PANEL-HAZARD	SWF	8	561107	561107
C80	FR JCT PANEL-LUG. DOOR LOCK	AMP MNL	6	561552	561515	C155	LH SW PANEL-FAST IDLE	SWF	8	561107	561107
C81	LUGGAGE COMPT.-DOOR LOCK 1 LH	AMP MNL	4	560851	560852	C156	LH SW PANEL-STP ENG. OVER.	SWF	8	561107	561107
C82	LUGGAGE COMPT.-DOOR LOCK 1 RH	AMP MNL	4	560851	560852	C158	RR ROOF AUX. A/C FEEDING	AMP MNL	3	561667	561590
C83	UNDER DASH-FLASHER MODULE	TC	10	561072	561110	C160	FR SERVICE CPT-INTERFACE	AMP CPC	37	561644	561646
C84	UNDER DASH-A/C SYSTEM	TC	3	561071	561071	C161	ENGINE DDEC III-ECM	PED	30	561644	561600
C85	LUGGAGE COMPT.-DOOR LOCK 3 RH	AMP MNL	4	560851	560852	C162	ENGINE DDEC III-ACCESSORIES	PED WP	4	561610	561611
C86	LUGGAGE COMPT.-DOOR LOCK 3 LH	AMP MNL	4	560851	560852	C163	ENGINE CPT-COOLANT PROBE	PED WP	2	561350	562350
C88	RR END ROOF-CLEARANCE LTS	AMP MNL	2	560900	560898	C164	FR SERVICE JCT BOX	AMP CPC	22	561709	561710
C90	RR ROOF AUX. A/C THERMOST.	BURNDY	6	561103	561103	C165	FR SERVICE JCT BOX	AMP CPC	16	561693	561695
C91	RR ROOF AUX. A/C TMP SENSOR	BURNDY	6	561104	561104	C166	UNDER INSTRUMENT PANEL	AMP CPC	16	561639	561640
C92	RR ROOF AUX. A/C FAN RH	TC	2	561030	560997	C167	FR SERVICE CPT-EL. FOOT PEDAL	PED WP	3	561781	561782
C93	RR ROOF AUX. A/C FAN LH	TC	2	561030	560997	C168	FR SERVICE CPT-DDR	DEUTSCH	6	562360	562360
C94	RR ROOF AUX. A/C FAN RES LH	AMP MNL	2	560900	560898	C169	FR SERVICE CPT-WORLD TR. VIV	AMP CPC	16	561638	561640
C95	RR ROOF AUX. A/C FAN RES RH	AMP MNL	2	560900	560898	C172	ENGINE COMPT-WATER TANK HEAT.	PED WP	2	561566	561690
C96	RR ROOF AUX. A/C LIO SOL VAL	TC	2	561030	560997	C173	LAV. POTABLE-WATER TANK HEAT.	AMP MNL	2	560900	560898
C97	RR ROOF AUX. A/C SHUT SOL VAL	AMP HENDL	2	560812	560812	C175	FR SERV CPT-KNEELING FEEDING	PED WP	3	561781	561782
C105	UNDER DASH RH-DRV WTR VALVE	TC	2	561030	560997	C177	GALLEY-REFRIGERATOR	AMP MNL	2	561248	561247
C106	UNDER DASH RH-DRV WTR VALVE	TC	2	561030	560997	C179	RH HAT RACK-110V MONITOR	MOLEX	4	561476	561476
C107	UNDER DASH RH-DRV HTR RH FAN	TC	2	561030	560997	C181	FR SERV CPT-KNEELING MODULE	AMP MNL	12	561735	561734
C108	UNDER DASH RH-DRV HTR LH FAN	TC	2	561030	560997	C182	FR SERVICE CPT-SPEED SW	AMP HDP	15	562012	562012
C111	LH CONSOLE SW-DRIVER LTS	SWF	8	561107	561107	C184	FR SERV CPT-KNEEL. MOD. CTRL	AMP MNL	3	561550	561550
						C184	FR AXLE-KNEELING PROXIMITY SW	AMP MNL	3	561667	561550
						C185	FR SERV CPT-KNEEL. MOD. EXH.	AMP MNL	3	561550	561550

CONNECTORS CODE (C)						P. G : 2					
NCL	LOCATION	TYPE	(NB) CAVITY	*PIN HOUSING	*SOCKET HOUSING	NCL	LOCATION	TYPE	(NB) CAVITY	*PIN HOUSING	*SOCKET HOUSING
C187	FR SERV CPT-KNEEL. MOD. BRK	AMP MNL	3	561550	561550	C251	RH SW PANEL-SEAT HTR	SWF	8	561107	561107
C187	FR SERVICE JCT BOX-RESISTORS	AMP MNL	6	561552	561515	C252	LH SW PANEL-SWITCH LT	SWF	2	561107	561107
C188	LH CONSOLE SW-KNEELING	SWF	8	561107	561107	C254	FR SERVICE JCT BOX-ABS	AMP CPC	16	561693	561695
C190	FR SERVICE CPT.-WORLD TR VIM	PED WP	30	561600	561600	C255	RH CONSOLE-RADIO	AMP MNL	9	561670	561669
C192	GALLEY-FEEDING	AMP CPC	3	561862	561847	C257	ENGINE COMPT-WATER HEATER	AMP FF	6	561188	561186
C194	GALLEY SW-CONTAINER RH	SWF	8	561107	561107	C258	DRIVER GUARD WATER HTR TIMER	AMP FF	8	561188	562363
C195	GALLEY SW-CONTAINER LH	SWF	8	561107	561107	C259	ENGINE COMPT-WATER HEATER	TC	2	561597	561597
C199	FR SERV. JCT BOX-SERVICE BRK	AMP MNL	3	561667	561560	C260	ENGINE COMPT-WATER HEATER	TC	1	561073	561073
C200	LH CONSOLE SW-24V FLUOR	SWF	8	561107	561107	C261	ENGINE COMPT-WATER HEATER	TC	2	561597	561597
C201	UNDER INSTRUMENT PANEL	AMP MNL	2	560900	560898	C267	LUGGAGE COMPT. LTS - 1	AMP MNL	2	561248	561247
C202	UNDER INSTRUMENT PANEL	AMP CPC	9	561636	561637	C268	LUGGAGE COMPT. LTS - 2	AMP MNL	2	561248	561247
C205	LH UNDER DASH-AMPLIF. LH SPK	BLAUPUNKT	2	561988	561988	C269	LUGGAGE COMPT. LTS - 3 RH	AMP MNL	2	561248	561247
C206	RH CONSOLE-FR DEFROSTER	TC	2	560900	560897	C270	LUGGAGE COMPT. LTS - 3 LH	AMP MNL	2	561248	561247
C207	RH CONSOLE-DRV RHEOSTAT	AMP MNL	6	561552	561515	C271	LUGGAGE COMPT. LTS - 4	AMP MNL	2	561248	561247
C208	UNDER DASH-DRV HTR MODULE	AMP MNL	9	561670	561669	C272	FR SERVICE CPT LTS	AMP MNL	2	561248	561247
C209	UNDER DASH-DRV HTR MODULE	AMP MNL	9	561670	561669	C274	FR JCT PANEL-DIODES	AMP MNL	15	561987	561986
C210	LH UNDER DASH-AMPLIF. LH SPK	BLAUPUNKT	2	561988	561988	C276	FR JCT PANEL-ALARM BUZZER	MOLEX	5	561183	561183
C211	RH CONSOLE-VCR VOLUME	AMP MNL	4	561551	561668	C290	LUGGAGE CPT-DOOR LOCK	AMP MNL	4	560851	560852
C212	LH CONSOLE SW-VCR VIDEO	SWF	8	561107	561107	C291	LUGGAGE CPT-DOOR LOCK	AMP MNL	4	560851	560852
C213	FR ROOF-CLEARANCE LT	AMP MNL	2	560900	560898	C292	LUGGAGE CPT-DOOR LOCK	AMP MNL	4	560851	560852
C214	UNDER DASH PANEL-TACHOGRAPH	V. D. O.	8	562041	562041	C293	WIPER MOTOR	AMP FF	6	561186	561186
C215	UNDER DASH PANEL-TACHOGRAPH	V. D. O.	8	562043	562043	C294	UNDER DASH-WIPER SYST. FEED	AMP MNL	6	561552	561515
C216	UNDER DASH PANEL-TACHOGRAPH	AMP MNL	4	560851	560852	C295	UNDER DASH-WIPER PULSE GEN.	AMP FF	6	561186	561186
C217	FR LH HAT RACK-SPEAKER	AMP MNL	4	561659	561660	C296	FR SERVICE CPT-HEAD LTS	ITT SS	3	561111	561080
C218	FR RH HAT RACK-SPEAKER	AMP MNL	4	561659	561660	C298	FR LH HAT RACK-AMPLI	MOLEX	6	562464	562464
C219	DASH RHEOSTAT-P. A. VOLUME	MOLEX	4	561477	561476	C299	FR LH HAT RACK-AMPLI	MOLEX	10	562465	562465
C220	LH UNDER DASH-P. A. VOLUME	AMP MNL	3	561667	561550	C302	UNDER DASH-FLASHER MODULE	AMP MNL	2	560900	560898
C221	LH UNDER DASH-AMPLIFIER FEED	AMP MNL	3	561550	561667	C309	ENGINE DDEC III-ECM POWER	PED WP	5	562345	562345
C222	LH UNDER DASH-P. A. RADIO	AMP MNL	9	561670	561669	C312	ENGINE DDEC III-ECM SIGNAL	PED WP	3	561781	561782
C223	LH UNDER DASH-P. A. RADIO	AMP MNL	9	561670	561669	C313	ENGINE DDEC III-OUTPUT	PED WP	4	562398	562398
C224	LH UNDER DASH-PA & RADIO FEED	AMP MNL	6	561552	561515	C326	ENGINE DDEC III- MANUAL TR.	PED WP	4	561610	561611
C225	LH UNDER DASH-PA MICRO OUTLET	AMP MNL	3	561667	561550	C364	FR ROOF-DESTINATION SIGN	AMP MNL	3	561667	561550
C226	LH UNDER DASH-PA MICRO OUTLET	AMP MNL	3	561667	561550	C365	FR ROOF-DESTINATION SIGN	AMP MNL	2	560900	560898
C227	RH CONSOLE-SPEAKER CONTROL	SWF	8	561107	561107	C368	FR ROOF-DEST. SIGN BALLAST	AMP MNL	3	561667	561550
C229	LH UNDER DASH-PA DRV SPEAKERS	AMP MNL	4	561551	561668	C369	FR ROOF-DEST. SIGN OPER. SW.	TORRIX	5	562110	562110
C230	ENG. CPT.-FUEL PRIE PUMP SW.	PED WP	2	561566	561690	C370	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C231	ENG. CPT.-FUEL PRIE PUMP SW.	PED WP	2	561566	561690	C371	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C232	LAST LUGGAGE-INVERTER	AMP MNL	4	561551	561668	C372	FR ROOF-DEST. SIGN SPEED SW.	MOLEX	4	561477	561476
C233	MICRO OUTLET SOCKET	MOLEX	4	561477	561476	C382	ENGINE GENERATOR 12 VAC RLY	PED WP	1	561605	561577
C234	UNDER INSTRUMENT PANEL-VDD	AMP MNL	4	560891	560852	C383	LH UNDER DASH-MICRO W/O WIRE	AMP MNL	2	561248	561247
C235	UNDER INSTRUMENT PANEL-VDD	AMP MNL	4	560891	560852	C384	LH UNDER DASH-MICRO W/O WIRE	AMP MNL	3	561550	561667
C236	FR SERVICE CPT CENTER-ABS	AMP CPC	14	561585	561583	C385	EVAPORATOR CPT-WATER PUMP				