

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
0	Battery	00R2	gndIO-BA54	503	WheelChairLift
0A	GNDWiperwasher	0R3	GndCustomer	900	J1587+
00A	GndEntranceDoor	00R3	ElectronicGndofA50_A49	901	J1587-
00A1	Gnd_to_A56_A55_A15	0R4	AFSS	A1.11	Transmission
00A2	GndSw25	00R4	ElectronicGndofA57_A51	A1.12	ShifterSignal
0AltLL	ChassisGnd	00R5	VannerCtr	A1.15	Transmission
0AltR	ChassisGnd	0RAD	EngineChassisGnd	A1.16	Transmission
0B	EngineChassisGnd	0RAD2	FanDriveElectric	A1.18	Transmission
0C	GndStarter	0RJB2	GndCustomer	A1.19	Transmission
0Chgr	Battery_Charger_Gnd	00RS	GNDECM	A1.24	Transmission
0COND	CondensorGnd	00S	DCDCConverter	A1.25	Speed_Signal
0DC	GndDC/DC	0SS	GNDStud	A1.31	Transmission
0ECU	GndEnginePreheater	0SW	IndirectLighting	A1.33	Transmission
0EV1	EvaporatorMain	0SW1	IndirectLighting	A1.36	Transmission
0EV2	Evap_Compt_Gnd	00VA	Equalizer	A1.37	Transmission
0F	GNDTGW	0W	WCLGnd	A1.51	Transmission
00F	ElectronicGnd	0W1	WCLDoorLock	A1.52	Transmission
00F1	ElectronicGndofA43_A45	0WC	WCLGnd	A1.54	Transmission
00F2	ElectronicGndofA44_A46	1.3	WCLRicon	A1.55	Transmission
00F3	ElectronicGndofA41_A42_A36	1.5	WCLRicon	A1.58	HandLevelSig
0F4	SpeakEasy	1.6	Lugg_door_sw	A1.71	Transmission
00F4	GNDDestinationsign	1.7	Lugg_door_sw	A1.74	Transmission
00F5	ElectronicGndofMuxModules	2.1	ReadingLampsRH	A1.76	Transmission
00F6	IndirectLighting	2.2	HostessChimeSig	A1.77	Transmission
0FB	ElectronicGnd	2.4	HostessChimePwr	A2A.9	Transmission
0FE	GNDFireExt	2.5	USB_WCL	A2A.11	ShifterSignal
0FH	GndLowerWiperMotor	2.6	USB_WCL	A5.B	HandLevelSig
00FH	ElectronicGNDFJB	12VA	12vEqualizer	A9CX1.2	ABS_Trailer_Sig
00FH1	GndDefrostUnit	12VD	Battery_To_SW82A	A9CX1.4	ABSRearAtcSolenoid
00FH2	ElectronicGndofA47_A48	12VD1	12VDTOCB2	A9CX1.5	ABSRearAtcSolenoid
00FR	ElectronicGnd	12VD2	Pwr_Dist_RJB	A9CX1.6	ATCSignal
0FTank	GndCustomer	24V	SpeakEasy	A9CX2.1	ABSSolenoid
0PR	ParcelRack	24VA	24vEqualizer	A9CX2.2	ABSSolenoid
0PR2	ParcelRack	24VD	Battery	A9CX2.3	GndChassisABSSol
0PR3	ParcelRack	24VD1	MasterRelayPwr	A9CX2.4	ABSSolenoid
0PR4	ParcelRack	24VD2	VannerCtr	A9CX2.6	GndChassisABSSol
0PR5	ParcelRack	24VD3	StarterCtr	A9CX2.7	ABSSolenoid
00PR6	SpeakEasy	24VI	24VtoRearVec	A9CX2.9	GndChassisABSSol
00R	GndElectronic	50Rtn3	GndRearClearanceLts	A9CX2.10	ABSSolenoid
0R1	GndCustomer	290A	GndFanClutch	A9CX2.12	GndChassisABSSol
00R1	ElectronicGNDRJB	309	WCL	A9CX2.13	ABSSolenoid
0R2	GndCustomer	313	WCL	A9CX2.16	ABSSolenoid

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
A9CX2.17	ABSolenoid	A34R.G3	GndFanDrive	A44J2.15	WearFrontWheel
A9CX3.3	ABSSteeringSolenoid	A34R.H3	GndFanDrive	A44RJ1.6	Gnd_Fr_Clearance_Lts
A9CX3.5	ABSSteeringSolenoid	A36JA.10	PulshedCoilR21	A44RJ1.17	kneeling
A9CX3.7	AbsTagSolenoid	A36JA.11	Horn	A44RJ1.18	HvacPassandUpperDefrost
A9CX3.9	AbsTagSolenoid	A36JA.14	BatteryCharger	A44RJ2.2	EntranceCeilingLtGnd
A9CX3.10	AbsTagSolenoid	A36JA.15	24vAccessories	A44RJ2.3	Wiper_Washer
A9CX4.1	ABSPressuresensor	A36JA.17	IgnitionEngineStart	A45J1.1	DashDamper
A9CX4.4	ABSPressuresensor	A36JA.18	PwrdistPRack	A45J1.3	DashDamper
A9CX4.7	ABSSteering&Yawsensor	A36JA.25	BrakeRedundant	A45J1.4	SteeringCTRL
A9CX4.8	ABSSteering&Yawsensor	A36JB.14	Firesuppression	A45J1.7	WitnessPwr
A9CX4.10	ABSSteering&Yawsensor	A38.B	SpeakEasy	A45J1.16	MirrorPwr
A9CX4.11	ABSSteering&Yawsensor	A41J1.1	Preheat	A45J2.1	FootDamper
A10X3.4	Preheat	A41J1.3	EntranceDoorLights	A45J2.4	FootDamper
A10X3.6	BatteryCharger	A41J1.4	WCLRicon	A45J2.7	DriverWdo
A11A.2	Preheat	A41J1.7	PwrdistFJB	A45J2.13	DriverWdo
A14A.A12	SensorGnd	A41J1.13	EngineRunSignal	A45RJ1.17	GndMirrors
A14A.B1	PassengerSensor	A41J1.16	EngineECU	A45RJ1.18	ElectronicGnd
A14A.B2	AccAirPressureSig	A41J1.19	EngineECU	A46J1.4	FrontFlasher
A14A.B13	Trans.RearAirBrake	A41J2.15	PwrDistFJB	A46J1.10	FrontClearanceLts
A14A.B14	Trans.RearAirBrake	A42J1.1	KneelingCtrl.Sol	A46J1.13	FrontMarkers
A14A.B18	AccAirPressureSig	A42J1.3	KneelingDownSol	A46J2.4	Hi-Beam
A14A.B20	Trans.RearAirBrake	A42J1.4	KneelingUpSol	A46J2.7	LowBeam
A14A.B21	Trans.RearAirBrake	A42J1.7	KneelingBuzzer	A46RJ1.17	SignalRtnHeadLtsLH
A17.24V	Battery_Charger_Gnd	A42J1.10	KneelingParkSol	A46RJ1.18	GndFlashersandMarkers
A17.AC.Plugged	ChargerRlyGndSig	A42J1.13	KneelingParkSol	A46RJ2.2	GndFlashersandMarkers
A27.30	ZFsterringControl	A42J1.16	BrakeInterlockValve	A47J1.1	DriverLiq
A27.87A	ZFsterringControl	A42J1.19	BrakeInterlockValve	A47J1.3	DriverHeatValve
A34.A5	PwmFanDrive	A42RJ1.18	Kneeling	A47J1.4	DriverCylinder
A34.B5	PwmFanDrive	A42RJ2.14	KneelingLevel	A47J1.7	LowerWiper1stSpd
A34.C5	PwmFanDrive	A43J1.7	TirePressure	A47J1.10	DoorCloseSol
A34.D5	PwmFanDrive	A43RJ1.18	ElectronicGnd	A47J1.13	EntranceDoor
A34.E5	PwmFanDrive	A44J1.1	UpperDefrostfan	A47J1.16	DoorUnlockSol
A34.F5	PwmFanDrive	A44J1.4	PWRSTAIRFAN	A47J2.1	DefrostunitSpd
A34.G5	PwmFanDrive	A44J1.7	LowerWasherPump	A47J2.7	EntranceDoorLights
A34.H5	PwmFanDrive	A44J1.10	NextStopLight	A47RJ1.6	GndDriverSensor
A34J.E	FanDriveDiag	A44J1.16	RrHi_BuoySol	A47RJ1.17	GndDriverCylinder
A34J.F	FanDriveDiag	A44J1.19	LuggageCmpt.LtsPwr	A47RJ1.18	GndDoorReedSw
A34R.A3	GndFanDrive	A44J1.20	HostessChimeSig	A47RJ2.2	GndEntranceLights
A34R.B3	GndFanDrive	A44J2.1	EntranceDoor	A48J1.7	FrontFlasherRH
A34R.C3	GndFanDrive	A44J2.4	GongSoundGenerator	A48J1.10	FrontFlasherRh
A34R.D3	GndFanDrive	A44J2.7	DriverLt	A48J1.13	Retarder
A34R.E3	GndFanDrive	A44J2.10	GongSoundGenerator	A48J2.1	HighBeamRH
A34R.F3	GndFanDrive	A44J2.13	PwrDistFJB	A48J2.4	LowBeamRH

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
A48J2.13	FrontFlasherRHSide	A52J2.4	Alternators	A57J1.1	WCLTopLights
A48RJ1.18	GndFogandCorneringLtsRH	A52J2.13	Ignition_Engine_Start	A57J1.3	WCL_Ricon
A48RJ2.2	HeadLampRHRtn	A52RJ1.17	RJB_Gnd	A57J1.4	WCL_Ricon
A49J1.1	ElectricFanSpeed	A52RJ1.18	GndEngineCmpt.Lts	A57J1.10	WCL_Upper_Door_Sol
A49J1.3	ElectricFanSpeed	A53J1.1	ParcelrackA/Csystem	A57J1.13	WCL_Upper_Door_Rel
A49J1.4	TagAxleValveSig	A53J1.3	ParcelrackA/Csystem	A57J1.16	WCL_Door_Rel
A49J2.1	PwrtoExcitationResistor	A53J2.1	IndirectLightLH	A57J1.19	WCL_Prox_Sensor
A49J2.4	Oil_Separator	A53J2.4	ReadingLamps	A57RJ1.18	WCL_Ricon
A49J2.13	Retarder_Sig	A53J2.10	HostessChimePwr	A77.A	VannerCtr
A49RJ1.17	ChassisGnd	A53J2.13	Emergency&aislelights	A77.F	R210_Parcel_Rack_Pwr_dist
A49RJ1.18	OilSeparator	A53RJ1.18	Emerg_Aisle_Lights	A77.H	VannerCtr
A49RJ2.2	GndPulldown	A53RJ2.2	ParcelRack_Vent	A78.3	VannerCtr
A50J1.4	Air_Dryer	A53RJ2.3	GndReadingLamps	A78.4	VannerCtr
A50J1.7	BackupLtandalarm	A54J1.1	Evaporator2ndSpd	A79.3	VannerCtr
A50J1.13	FlashercenterLHSig	A54J1.3	CondensorLow	A80.3	VannerCtr
A50J1.19	FlasherCenterRH	A54J1.4	Preheat	A80.4	VannerCtr
A50J2.1	StopRearLowerLamp	A54J1.7	PassandPRackLiquidValve	A81JB.4	Air_Dryer
A50J2.7	MarkersCenter	A54J1.10	Hvac_Pass	A81JB.6	Vehiculespeed
A50J2.10	TrailerLightsPackage	A54J1.16	A/Cclutch	A81JB.10	SVSensorPwr
A50J2.15	Brake_Wear_Sensor	A54J1.19	EvaporatorPwr	A81JB.15	Control_Ground_Relay
A50RJ1.6	Brake_Wear_Sensor	A54J2.1	ParcelrackA/Csystem	A81JB.16	Air_Dryer
A50RJ1.17	Rear_Lights	A54J2.4	UnloaderRH	A81JB.17	IVSOut
A50RJ1.18	Rear_lights	A54J2.7	Pre-HeatSigRly	A81JB.19	12VPwrIdleValid
A50RJ2.2	GndMarkersandStopLts	A54J2.10	Pass.Cylinder	A81JB.22	GndSensorRtn
A50RJ2.3	Air_Dryer	A54J2.13	SignalToPre-heatrelay	A81JB.23	Air_Dryer
A51J1.4	FlashersRearRH	A54J2.15	TransducerPwr	A81JB.26	Air_Dryer
A51J1.7	CyclopeSignal	A54RJ1.6	SensorGnd	A96.8.BLACK	Tire_Pressure
A51J1.10	MarkersLightsRear	A54RJ1.17	Hvac_Pass	A96.23.RED	Tire_Pressure
A51J1.13	Rr_Flasher_LH	A54RJ1.18	Evaporator	A96.24.BLACK	Tire_Pressure
A51J1.16	Gnd_Service_Brake	A54RJ2.2	RJB_Gnd	A96.25.RED	Tire_Pressure
A51J1.19	WCLTopLightSliding	A54RJ2.3	Hvac_Pass	A96.27.BLACK	Tire_Pressure
A51J2.1	FlashersRearLH	A55J1.1	DriverLt	A96.28.RED	Tire_Pressure
A51J2.4	TransmissionInhibitSig	A55J1.3	Break_Activated_Light	A98.1	Gong
A51J2.7	StopRearUpperLamps	A55J1.4	BatteryNotChargingSig	A98.4	Gong
A51J2.10	FlashersRearRH	A55J1.7	Backup_Warnings	A98.7	Gong
A51RJ1.17	52Rtn2	A55J1.8	A55address	A98.10	Gong
A51RJ1.18	GndDirectLights	A55J1.10	WitnessPwr	A100.3.WHITE	Tire_Pressure
A52J1.1	ElectricFanSpeed	A55J1.12	A55address	A101.3.WHITE	Tire_Pressure
A52J1.3	ElectricFanSpeed	A55J1.13	SW12_Stop_Request	A102.3.WHITE	Tire_Pressure
A52J1.7	RJB_Cmpt_Light	A55J1.16	SW12_Stop_Request	A103.5	Horn
A52J1.10	StarterRelay	A56J1.1	PWRSTAIRFAN	A104.A	WiperParkPwr
A52J1.13	RJB_Fan	A56J1.3	SW123_Bike_Rack	A104.C	Washer_ctrl
A52J2.1	PwrtoExcitationResistor	A56RJ1.6	Hvac_Pass	A104.E	LowerWip1stSpd

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
A104.F	LowerWip2ndSpd	CanL2	SpareCan	CB62	DCDC_Converter
A130.3	Firesuppression	CB1	24VtoFrontVEC	CB63	DCDC_Converter
A130.4	Firesuppression	CB2	12vEngineEcu	CB73	Engine_ECU
A130.6	Firesuppression	CB3	Evap_Rly_Power	CB90	PowertoEcm
A130.8	Firesuppression	CB4	Volvo_Link	CB91	ECMPower
A130.11	Firesuppression	CB5	24VtoRearVec	CB96	UreaSystem
A131A.C	Firesuppression	CB6	24VtoRearVec	CB99	ECMPower
A131B.A	Firesuppression	CB8	12VtoVECR	CB100	CPC_Supply
A131B.C	Firesuppression	CB9	BattCharger	CB106	PwrtoModuleA50
A137A.4	UreaSystem	CB10	12VtoFrontVec	CB107	PwrtoModuleA51
A137A.7	UreaSystem	CB11	Pwr_Dist_P Rack	CB108	DDDL_RJB_Pwr
A137A.8	UreaSystem	CB13	DCDC_Converter	CB109	PwrtoModuleA50
A137A.24	UreaSystem	CB15	VLink_TGW	CB110	TransmissionPwr
A137A.28	UreaSystem	CB16	12VICustomer	CB112	TransmissionPwr
A137A.40	UreaSystem	CB17	DriverWindoPw	CB113	Tacho_Air_Coolant
A137A.44	UreaSystem	CB18	Mux_Power	CB115V	WCL_Ricon
A137A.49	UreaSystem	CB19	12VDFrontWake-up	CB117	TransmissionPwr
A137A.50	UreaSystem	CB20	Mux_Power	CB119	PwrtoModuleA50
A137A.51	UreaSystem	CB21	12VWUptoA48	CB121	PowerforCustomer
A137A.54	UreaSystem	CB23	12VtoABS	CB122	24VtoMux
A137A.56	UreaSystem	CB24	Entrance_Door	CB123	Battery_Charger_A10
A137A.59	UreaSystem	CB25	Pwr_Dist_FJB_R31	CB124	Battery_Charger_A10
A137A.62	UreaSystem	CB26	A132_Farebox	CB126	PassandPRackPwr
A138.3	UreaSystem	CB29	Pwr_Dist_FJB	CB127	Battery_Charger_R20
A138.12	UreaSystem	CB30	Pwr_Dist_FJB	CB128	Pwr_Dist_RJB
Alt_LL.2	Alternator_Signall	CB33	24WUpFront	CB129	AFSS
Alt_LR.2	ExcitationSignal	CB34	Mux_Power	CB130	A3_Tacho
Alt_UR.2	ExcitationSignal	CB35	Mux_Power	CB131	PowerforCustomer
AltLL	Main_Dist_Batteries	CB36	24VDEng.StartSw83	CB132	AE57_Mux_Pwr
AltLR	AltPower	CB37	24VDtooutsideDoorSw	CB133	AE49_Mux_Pwr
AltUR	Alternator	CB37A	Preheat	CB134	24VtoMux
B85.2	UreaSystem	CB39	24VDCustomer	CB135	24VtoA54
B97.2	UreaSystem	CB44	24WUp_Front	CB136	AE53_Mux_Pwr
B98.2	UreaSystem	CB45	24WUp_To_A47_A48	CB137	LavatoryPwr
B115A.3	DeltaPSignals	CB46	24WUpFront	CB138	Engine_Cmpt_Light
bbbb	Indirect_Lighting	CB47	Mux_Power_A36	CB139	PwrforAlternatorregulator
BLACK	DashBoard_Keypad	CB48	PwrWiperWasher	CB141	CondensorPwr
Black	PwrBatteryCharger	CB50	PwrtoDefrostUnit	CB142	CondensorPwr
BLK	IVN_Clever	CB51	Mux_Power_Dash	CB143	CondensorPwr
BussBar	24VI_To_CB	CB52	24VLogic	CB144	CondensorPwr
CAN1_HI	J1939	CB58	Destination_Signs	CB147	PowerforCustomer
CAN1_LO	J1939	CB60	DCDC_Converter	CB148.B	TransmissionPwr
CanH2	SpareCan	CB61	DCDC_Converter	CB148V	Pwr_Dist_P Rack

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
CB152.B	TransmissionPwr	GREEN	Destination_sighs	N24	A52Adress
CB201	PwrFanDrive	Green	PwrBatteryCharger	N25	A53Adress
CB202	PwrFanDrive	GRN	IVN_Clever	N26	A53Adress
CB203	PwrFanDrive	IN_SPK+	SpeakEasy	N27	A54Adress
CB204	PwrFanDrive	IN_SPK-	SpeakEasy	N28	A54Adress
CB205	PwrFanDrive	IN_SPK +	Gong	N29	A36Adress
CB206	PwrFanDrive	IN_SPK -	Gong	N56_1	A56Adress
CB207	PwrFanDrive	IVNSTAT	IVN_Clever	N56_2	A56Adress
CB208	PwrFanDrive	L207.1	WCL	N57_1	A57Adress
Cd1	ComputerSignals	L207.3	WCL	N57_2	A57Adress
CF_RS	DCDC_Converter	L350A.B2	Air_Dryer	Out	DCDC_Converter
CTS	MCMDData	Mo65.3	DiagFanDrive	Out+1	DCDC_Converter
Cts	ComputerSignals	Mo67.3	DiagFanDrive	Out+2	DCDC_Converter
D1	Ign-AccSignal	Mo68.3	DiagFanDrive	Out-1	DCDC_Converter
D7	DoorOpenSignal	Mo69.3	DiagFanDrive	Out-2	DCDC_Converter
D9	Preheat	Mo70.3	DiagFanDrive	OUT_SPK	SpeakEasy
D13	Front_Lighting	Mo71.3	DiagFanDrive	OUT_SPK	SpeakEasy
D17	FlashersRearLH	Mo72.3	DiagFanDrive	Pot1	Backlight
D41	24VIgnition	Mo73.3	DiagFanDrive	PPI	WCL_Ricon
D42	24VIgnition	N1	A41Adress	R12	EvaporatorMain
D43	Ignition_Engine_D43_To_R21	N2	A41Adress	R13.30	WCL_Ricon
D55	Indirect_Lighting_D55_To_AE55	N3	A42Adress	R14.30	WCL_Ricon
DL0H	SparesFr-to-RearHarness	N4	A42Adress	R20.87	Hvac_Passenger
DL0HS	SparesCanFrontHarness	N5	A42Adress	R21.87A	12V_Pwr_Dist_FJB
DL0L	SparesFr-to-RearHarness	N6	A42Adress	R21.B	24VIgnition
DL0LS	SparesCanFrontHarness	N7	A44Adress	R23.30	12v_Pwr_Dist_FJB
DL1H	J1939H	N8	A44Adress	R25.87	24VI
DL1L	J1939L	N9	A45Adress	R26.30	PassengerHeatSig
DL2H	BB2	N10	A45Adress	R27.87A	LowerWip.IntSig
DL2L	BB2	N11	A46Adress	R29	24VEnginePreheater
DL3H	DBusSignal	N12	A46Adress	R30.87	12VICustomer
DL3L	DBusSignal	N13	A47Adress	R31.87	12v_Pwr_Dist_FJB
DL7H	EngineSubnet	N14	A47Adress	R34.30	12vEngineEcu
DL7L	EngineSubnet	N15	A48Adress	R36.30	Horn
EI.7	GroundPreheaterRelay	N16	A48Adress	R37.30	ElectricalHorn
EI.18	CoolantLevelGround	N17	A49Adress	R47.87	WheelChairLift
EMS.EB29	fake	N18	A49Adress	R55.30	StairFanSpeedCtr
F101	R1toStarter	N19	A50Adress	R55.87	StairFanSpeedCtr
F126	ParcelrackA/Csystem	N20	A50Adress	R55.87A	StairFanSpeedCtr
F199	FanDrivePwr	N21	A51Adress	R210.B	Pwr_Dist_P Rack
gnd	GroundFuelTank	N22	A51Adress	R_Starter	StarterCtr
GndA	ComputerSignals	N23	A52Adress	RED	Destination_Signs

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
Res10	Backlight	Se38.1	ABSSensor	Shield_149A	GndShield
RTS	MCMDData	Se38.2	ABSSensor	SHL	Gnd_Shield
Rts	ComputerSignals	Se39.1	ABSSensor	So9.1	A/Cclutch
RX	Tire_Pressure	Se39.2	ABSSensor	spare01	SparesClearanceLts
RxD	ComputerSignals	Se40.1	ABSSensor	spare02	SparesClearanceLts
RxTx	MCMDData	Se40.2	ABSSensor	spare03	SparesClearanceLts
Se1A.B	Air_Filter	Se45.2	Wip.WasherLevel	spare04	SparesClearanceLts
Se2	CyclopeSignal	Se49.B	A/Cclutch	spare05	SparesClearanceLts
Se3.A	Bike_Rack	Se51.2	GroundPreheaterRelay	spare06	SparesClearanceLts
Se11.Sig	FuelLevelSig	Se56.4	WCL_Ricon	spare07	SparesFrontHarness
Se11.Wrn	FuelGaugeWrn	Se62.B	WCL_Se62	spare08	SparesFrontHarness
Se13.B	CoolantLevelSignal	Se63.1	ABSSensor	spare09	SparesFrontHarness
Se14A.B	ThrottlePositionSignal	Se63.2	ABSSensor	spare10	SparesFrontHarness
Se14B.C	IdleValidationSig	Se64.1	ABSSensor	spare20	SparesFr-to-RearHarness
Se18.B	ParkBrakeSig	Se64.2	ABSSensor	spare21	SparesFr-to-RearHarness
Se19_P.D	StopLightSensorSig	Se67.C	ABSPressuresensor	spare22	SparesFr-to-RearHarness
Se19_S.D	StopLightSensorSig	Se69.C	ABSPressuresensor	spare23	SparesFr-to-RearHarness
Se20.B	PassengerSensor	Se76.4	GndDoorReedSw	spare24	SparesFr-to-RearHarness
Se21.2	DriverSensorSig	Se77.C	Brake_Interlock_SE77	spare25	SparesFr-to-RearHarness
Se23.C	TransducerHi-Side	Se78.C	Brake_Interlock_SE78	spare26	SparesFr-to-RearHarness
Se24.2	TranducerLow-Side	Se79.1	KneelingLevel	spare27	SparesFr-to-RearHarness
Se24.3	TranducerLow-Side	Se79.4	KneelingLevel	spare30	SparesFr-to-RearHarness
Se25.2	PassengerTemp	Se83.A	Brake_Wear_Sensor_SE83	spare31	SparesFr-to-RearHarness
Se30.A	EngineDoorOpenSig	Se84.A	Brake_Wear_Sensor_SE84	spare32	SparesFr-to-RearHarness
Se32.A	Transmission	Se85.A	Brake_Wear_Sensor_SE85	spare40	SparesEvap-to-Cond_Harness
Se32.B	Transmission	Se86.A	Brake_Wear_Sensor_SE86	spare41	SparesEvap-to-Cond_Harness
Se33.A	Transmission	Se87.A	Brake_Wear_Sensor_SE87	spare42	SparesEvap-to-Cond_Harness
Se34.A	Transmission	Se88.A	Brake_Wear_Sensor_SE88	spare43	SparesEvap-to-Cond_Harness
Se34.B	Transmission	Se89.A	Coolant_Level	spare50	SparesInteriorHarness
Se35.A	Transmission	Se94.A	WCLRicon	spare51	SparesInteriorHarness
Se35.B	Transmission	Se100.4	WCLGnd	spare60	SparesInteriorHarness
Se37.1	ABSSensor	SHIELD	GndShield	spare61	SparesInteriorHarness
Se37.2	ABSSensor	Shield_149	gndshield	spare62	SparesInteriorHarness

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
spare63	SparesInteriorHarness	Sw25.3	IndirectLightsSig	Sw85.B2	Mirrors
Spk1_L.B	L_SPEAKER_HARNESS	Sw25.6	DirectLightSwSig	Sw85.B4	Mirrors
Spk1_R.B	FR_SPEAKER_HARNESS_	Sw26.3	ReadingLampSig	Sw96.3	ReadingLampsRH
Spk2_L.B	L_SPEAKER_HARNESS	Sw26.8	WitnessGnd	Sw97.1	ReadingLampsLH
Spk2_R.B	FR_SPEAKER_HARNESS_	Sw27.3	ParcelrackA/Csystem	Sw98.3	HostessChimeSig
Spk3_L.B	L_SPEAKER_HARNESS	Sw27.8	ParcelrackA/Csystem	Sw103.3	Backup_Warnings
Spk3_R.B	FR_SPEAKER_HARNESS_	Sw32.3	DoorInsideSwCloseSig	Sw116	Lugg_door_sw
Spk4_L.B	L_SPEAKER_HARNESS	Sw33.3	DoorOpenSignal	Sw125.2	AutomaticTagUnload
Spk4_R.B	FR_SPEAKER_HARNESS_	Sw34.1	DoorCloseSignal	Sw138.B	FlasherLHSig
Spk5_L.B	L_SPEAKER_HARNESS	Sw34.4	DoorOpenSignal	Sw139.B	FlasherRHSig
Spk5_R.B	FR_SPEAKER_HARNESS_	Sw38.2	DriverWdo	Sw140.B	Brake_Interlock
Spk6_L.B	L_SPEAKER_HARNESS	Sw41.A1	Mirrors	Sw141.B	MarkersSigSw2
Spk6_R.B	FR_SPEAKER_HARNESS_	Sw41.A3	Mirrors	Sw142.5	Brake_Interlock_To_SW142
Spk9_L.B	L_SPEAKER_HARNESS	Sw41.B1	Mirrors	Sw144.B	Horn_Switch
Spk9_R.B	R_SPEAKER_HARNESS_WCL	Sw41.B2	Mirrors	Sw152.B	Firesuppression
Spk10_L.B	L_SPEAKER_HARNESS	Sw41.B4	Mirrors	TWU.3	WCL
Spk10_R.B	R_SPEAKER_HARNESS_WCL	Sw42.2	WCLRemoteCtrl	TX	Tire_Pressure
Spk11_L.B	L_SPEAKER_HARNESS	Sw42.3	WCLRemoteCtrl	TxD	ComputerSignals
Spk11_R.B	R_SPEAKER_HARNESS_WCL	Sw42.4	WCLRemoteCtrl	Unkn	GroundFuelTank
Spk12_L.B	L_SPEAKER_HARNESS	Sw42.5	WCLRemoteCtrl	VECPR1.A	IVN_Clever
Spk12_R.B	R_SPEAKER_HARNESS_WCL	Sw42.6	WCLRemoteCtrl	VECPR1.B	IVN_Clever
SpkIVN+	IVN_Clever	Sw42.7	WCLRemoteCtrl	VECPR1.C	WIFI
SpkIVN-	IVN_Clever	Sw44.1	LuggageDoorOpenSig	VECPR1.D	WIFI
SpkOut+	Speaker	Sw46A.1	WCLUpperDoorSignal	VECPR1.E	Camera
SpkOut-	Speaker	Sw58.3	Ignition_Engine_Start	VECPR1.F	Camera
STO-LOC	WCLRemoteCtrl	Sw58.5	PositionNormalSw58	VECPR1.H	WIFI
Sw2.3	MarkersSigSw2	Sw58.7	StarterRelay	VECPR2.D	Gong
Sw2.6	HeadLtsSig	Sw59.3	RearStartSignal	VECPR4.H	Pwr_Dist_P Rack
Sw4.3	HazardSwSig	Sw64.2	TagSignal	White	PwrBatteryCharger
Sw4.8	WitnessGnd	Sw80.St	StartSigSw80	WHT	IVN_Clever
Sw10A.2	KneelingUpSwSig	Sw81.1	ClusterCtr	WIF1	WIF_Fuel_Filter
Sw13.1	ReadingLampsRH	Sw81.2	ClusterCtr	WIF2	WIF_Fuel_Filter
Sw13.8	WitnessGnd	Sw81.3	ClusterCtr		
Sw14.3	FastIdleSignal	Sw81.4	ClusterCtr		
Sw14.8	WitnessSigSw14	Sw82.4	Ign-AccSignal		
Sw16.3	RetarderSig	Sw82.14	Ign-AccSignal		
Sw16.8	WitnessSigSw16	Sw82A.4	Ign-AccSignal		
Sw17.3	AFSS	Sw83.Ign	24VIgnition		
Sw17.6	AFSS	Sw83.St	StartSigSw80		
Sw20.3	WheelChairLiftSwitch	Sw84.4	GndEngineCmpt.Lts		
Sw20.8	Sw20Gnd	Sw85.A1	Mirrors		
Sw24.3	DriverLtSwSig	Sw85.A3	Mirrors		
Sw24.8	GndWitnessSw24	Sw85.B1	Mirrors		