

FUSES LIST

No	Location	Part #	Function	Rating	Page
F4	FuseBoxFJB	563280	Spare	5amp	4.2
F10	FuseBoxFJB	563280	Networks	Cluster	lights
F11	FuseBoxFJB	563282	Horn	20amp	4.1
F12	FuseBoxFJB	563284	Spare	15amp	4.1
F13	FuseBoxFJB	563284	12VDCustomer	15amp	4.1
F14	FuseBoxFJB	563165	PwrA43	30amp	4.1
F15	FuseBoxFJB	563280	Keyless	5amp	4.1
F16	FuseBoxFJB	563284	12VEng.run	15amp	4.1
F17	FuseBoxFJB	563165	SpareVECF	30amp	4.1
F18	FuseBoxFJB	563165	Spare	30amp	4.1
F19	FuseBoxFJB	563165	PwrA46	30amp	4.1
F20	FuseBoxFJB	563280	Spare	5amp	4.1
F21	FuseBoxFJB	563165	Spare	30amp	4.1
F22	FuseBoxFJB	563280	ELD	5amp	4.1
F23	FuseBoxFJB	563165	ESP	30amp	4.1
F24	FuseBoxFJB	563284	PWRSOTrans	15amp	4.1
F25	FuseBoxFJB	563284	12Voutlets	15amp	30.2
F26	FuseBoxFJB	563284	VolvoLink	15amp	4.1
F27	FuseBoxFJB	563165	DriverSeat	30amp	4.1
F29	FuseBoxFJB	563283	Shutdown	10amp	4.1
F30	FuseBoxFJB	563280	PwrConnOBD2	5amp	4.1
F33	FuseBoxFJB	563280	VovolinkTGW	5amp	4.1
F34	FuseBoxFJB	563284	SpareVECF	15amp	4.1
F35	FuseBoxFJB	563280	MuxPower	5amp	4.2
F36	FuseBoxFJB	563280	Startswitch	5amp	4.2
F37	FuseBoxFJB	563280	24VD	5amp	4.2
F39	FuseBoxFJB	563284	24VD	15amp	4.2
F40	FuseBoxFJB	563284	Firesuppression	15amp	4.2
F41	FuseBoxFJB	563280	Multiplexpower	5amp	4.2
F42	FuseBoxFJB	563283	SpareVECF	10amp	4.1
F43	FuseBoxFJB	563282	12VIgn	20amp	4.1
F44	FuseBoxFJB	563165	Multiplexpower	30amp	4.2
F45	FuseBoxFJB	563165	Spare	30amp	4.2
F46	FuseBoxFJB	563280	Spare	5amp	4.2
F47	FuseBoxFJB	563280	Multiplexpower	5amp	4.2
F50	FuseBoxFJB	563165	PwrA45	30amp	4.2
F51	FuseBoxFJB	563280	A42Pwr	5amp	4.2
F52	FuseBoxFJB	563280	Slide-Out	5amp	4.2
F53	FuseBoxFJB	563283	PwrPneumat	10amp	4.2
F54	FuseBoxFJB	563283	ElectronicMirror	10amp	4.2
F55	FuseBoxFJB	563283	Spare	10amp	4.2
F56	FuseBoxFJB	563284	SmallAC	15amp	4.2
F57	FuseBoxFJB	563283	SparesVECF	10amp	4.2

FUSES LIST

No	Location	Part #	Function	Rating	Page
F58	FuseBoxFJB	563284	LuggLights	15amp	4.2
F73	FuseBoxRJB	563283	EngineECUVolvo	20amp	5.1
F90	FuseBoxRJB	563282	Ureasystem	20amp	5.1
F91	FuseBoxRJB	563282	EngineECUVolvo	20amp	5.1
F95	FuseBoxFJB	563280	FMSGW	5amp	4.2
F96	A57Pwr	563280	VECUPwr	5amp	5.1
F99	FuseBoxRJB	563165	EngineECUVolvo	30amp	5.1
F100	FuseBoxRJB	563283	EngineECUVolvo	10amp	5.1
F101	FuseBoxRJB	564520	PowerforMasterrelay	300Amp	3.1
F105	FuseBoxRJB	563282	SparesVECR	20amp	5.1
F106	FuseBoxRJB	563153	Multiplexpower	30amp	5.1
F107	FuseBoxRJB	563153	Multiplexpower	30amp	5.1
F108	FuseBoxRJB	563280	Networks	5amp	5.1
F109	FuseBoxRJB	563280	Engine&RJBcmpt.lights	5amp	5.1
F110	FuseBoxRJB	563283	TransmissionAlisson	10amp	5.1
F112	FuseBoxRJB	563165	SparesVECR	30amp	5.1
F113	FuseBoxRJB	563283	BackUpCam.	10amp	5.1
F114	FuseBoxRJB	563284	Trailerinterface	15amp	5.1
F115	FuseBoxRJB	563283	SparesVECR	20amp	5.1
F116	FuseBoxRJB	563284	SparesVECR	15amp	5.1
F118	FuseBoxRJB	563284	BrakeController	15amp	5.1
F120	FuseBoxRJB	563284	SparesVECR	15amp	5.1
F121	FuseBoxRJB	563284	12WUPCust	15amp	5.1
F122	FuseBoxRJB	563283	Equalizer	10amp	5.1
F123	FuseBoxRJB	563153	Spare	25amp	5.1
F124	FuseBoxRJB	563153	Spare	25amp	5.1
F126	FuseBoxRJB	563280	EngineECU&HVAC	5amp	5.1
F127	FuseBoxRJB	563284	Spare	15amp	5.1
F129	FuseBoxRJB	563284	Spare	15amp	5.1
F130	FuseBoxRJB	563284	WinAjar	15amp	5.1
F131	FuseBoxRJB	563280	24VSCust	5amp	5.1
F132	A57Pwr	563280	Multiplexpower	5amp	5.1
F133	FuseBoxRJB	563165	A49Pwr	30amp	5.1
F134	FuseBoxRJB	563165	A52Pwr	30amp	5.1
F135	FuseBoxRJB	563165	A54Pwr	30amp	5.1
F136	FuseBoxRJB	563165	SlideOutPwr	30amp	5.1
F137	FuseBoxRJB	563280	Spare	5amp	5.1
F138	FuseBoxRJB	563280	RjbLight	5amp	5.1
F139	FuseBoxRJB	563283	Alternators	10amp	5.1
F140	FuseBoxRJB	563283	SparesVECR	10amp	5.1
F141	FuseBoxRJB	563282	CondMo7	20amp	5.1
F142	FuseBoxRJB	563282	CondMo8	20amp	5.1
F143	FuseBoxRJB	563282	CondMo27	20amp	5.1

FUSES LIST

No	Location	Part #	Function	Rating	Page
F144	FuseBoxRJB	563282	CondMo28	20amp	5.1
F145	FuseBoxRJB	563153	Spare	25amp	5.1
F146	FuseBoxRJB	563283	Spare	10amp	5.1
F147	FuseBoxRJB	563284	24WUPCust	15amp	5.1
F148	FuseBoxRJB	563165	Spare	30amp	5.1
F149	FuseBoxRJB	563284	UreaSystem	20amp	5.1
F150	FuseBoxRJB	563283	Spare	10amp	5.1
F151	FuseBoxRJB	563284	Spare	15amp	5.1
F152	FuseBoxRJB	563283	Spare	10amp	5.1
F199	RJB	564520	Fanselectricdrive	300amp	13.1
F209	RJB	564174	Enginepre-heaterpower	150amp	14.1
F300	FuseBoxFJB	560552	BackupCamera	5amp	28.1
F302	VECT	563282	VECTrailer	20amp	26.4
F303	VECT	563282	VECTrailer	20amp	26.4
F304	VECT	563282	VECTrailer	20amp	26.4