

## Wiring diagram pages list

Wiring diagram	pages						
Multiplex outputs list	<b>B1</b>	Destination sign	28.2	<b>I</b>		<b>S</b>	
Multiplex inputs list	<b>B2</b>	Digital clock	28.1	Indirect lighting	23.1	Sound system	35.6 - 35.8
Multiplex error messages	<b>B3</b>	Driver's light & backlight	19.1	Ignition	3.2	Sound sys.-Speakers	35.2
Layout vehicule - harness	<b>C1</b>	Driver Seat	30.3	ISM Parcel Rack	5.2	Sound sys.-Video dist.	35.3
Sound system	<b>C2</b>	Driver window	30.1			Sound sys.-Seat audio	35.7
Pins configuration	<b>D</b>	<b>E</b>		<b>K</b>		Spares wires	8.1
Circuits list	<b>E</b>	ELD Gateway	42.4	Kneeling system	32.1	Stop lights	26.2
Circuit breakers list	<b>F</b>	Emergency Lights	45			Steering control ZF	37.2
Connectors list	<b>G</b>	Emirror	31.2	<b>L</b>		Step lights	29.1
Diodes list	<b>H</b>	Engine ECU	14.1	Lavatory	11.1	Strip Lighting	21.1
Resistors list	<b>J</b>	Engine heater	14.1	Line Departure Warning	16.2	Sun visor	41.1
Relays list	<b>K</b>	Engine start	3.2	Low buoy	32.1		
Fuses list	<b>L</b>	Engine & RJB cmpt. Light	25.1	Luggage door lock/unlock	33.1	<b>T</b>	
Wire identification chart	<b>M</b>	Entrance door & lights	29.1			Tag	32.1
		Entrance Step lights	29.2	<b>M</b>		Tail & licence lights	26.2
<b>A</b>		ESP	16.1	Main dist. ignition & batt.	3.1	Tire pressure monitor	39.1
ACB	39.1	<b>F</b>		Markers lights	26.1 - 26.2	Trailer package	26.4
Air dryer	37.1	Fast idle	14.1	Mirrors	31.1	Trailer park brake	12.2
Alternators	1.1	Fans radiator	13.1	Multiplex power distribution	7.1	Transmission ECU	15.1-15.2
Alternators Remy	1.2	Fire alarm	38.1	Multiplex network	6.1 - 6.2		
Aisle Lights	20.1	Fire suppression system	38.1			<b>U</b>	
		Flashers	26.1-26.2	<b>P</b>		Urea system	14.2
<b>B</b>		Fog lights	26.5	Parcel rack A/C system	18.3		
Back-up camera	28.1	Forward Collision Warning	16.2	Park brake sensor	12.1	<b>V</b>	
Back-up warnings	26.3	Fuel gauge	10.1	Park brake trailer sensor	12.2	Volvo link TGW	37.1
Batteries & Equalizer	1.1			Power distribution FJB 12V	4.1		
Brake pedal sensor	12.1	<b>G</b>		Power distribution FJB 24V	4.2	<b>W</b>	
		Grounds electronic	2.1	Pwr dist. RJB 12V & 24V	5.1	Wall Led Strips	24.1
<b>C</b>		Grounds chassis	2.2	Power outlets 12V	30.2	Water pre-heater	17.1
Camera	44			Power outlets 120VAC	40.1	Wheel chair lift Ricon	36.1
Clearance lights	26.1-26.2	<b>H</b>				WIFI	35.9
Cluster	10.1	Hazard	26.1	<b>R</b>		Windows ajar	27.1
Cornering lights	26.5	Head lights	26.1	Reading lamps	22.1	Wipers & washer	34.1
Cruise Control	16.2	Horn	9.1	Retarder	12.1 - 15.1		
		Hostess chime	22.2	Roof Hatches With Fan	18.5		
<b>D</b>		Hvac defroster	18.1				
Dash lights	19.1	Hvac passenger	18.2				