

MULTIPLEX ERROR MESSAGES LIST

FMI 3 = Shorted High ; FMI 4 = Shorted Low ; FMI 5 = Open Circuit ; FMI 6 = Current above Normal

Cluster message	SID/PSID	FMI	Module.Pin#	Page	Cluster message	SID/PSID	FMI	Module.Pin#	Page
A/C Clutch SO9	PSID #4	3, 4, 5, 6	A52.J1:20	18.2	Flash RH SW1	PSID #133	3, 4	A48.J1:12	26.1
A/C Pres HiSd SE23	PSID #28	3, 4	A52.J1:13	18.2	Flasher LH Sw1	PSID #130	3, 4	A45.J1:9	26.1
A/C Pres LoSd SE24	PSID #29	3, 4	A52.J1:14	18.2	Flsh Audibl Rly R16	PSID #37	3, 4, 5, 6	A45.J1:8	26.1
Aux AC fan Mo51	SID #39	3, 4, 6	A46.J1:1	18.3	Fog's Lights LH L95	PSID #134	3, 4, 6	A45.J1:4	26.3
Aux Refr sol So38	SID #46	3, 4, 6	A46.J1:8	18.3	Fog's lights RH L96	PSID #136	3, 4, 6	A48.J1:8	26.3
Backup Light & Alm	PSID #167	3, 4, 6	A50.J1:20	26.3	Foot trap Mo4	PSID #14	3, 4, 6	A45.J1:2	18.1
Blinker SW1	PSID #139	3, 4	A43.J1:20	26.1	FR Clearance lights	PSID #137	3, 4, 6	A44.J1:8	26.1
Brk Lts Sens SE19	PSID #119	3, 4	A36.JB:13	12.1	Fr Flsh-Mkr LH L62	PSID #128	3, 4, 6	A45.J1:3	26.1
Center Flash LH L70	PSID #124	3, 4, 6	A50.J1:5	26.2	Fr Side Flsh RH L64	PSID #10	3, 4, 6	A48.J1:20	26.1
Center Flash RH L68	PSID #125	3, 4, 6	A50.J1:7	26.2	Fr Start SW83	PSID #58	3, 4	A36.JB:22	3.2
Center Mkr L67-L70	PSID #27	3, 4, 6	A50.J1:8	26.2	Front Flash RH L61	PSID #126	3, 4, 6	A48.J1:6	26.1
Cond Rly spd1 R10	PSID #41	3, 4, 5, 6	A54.J1:5	18.2	FrontMkr Lts LH L62	PSID #148	3, 4, 6	A45.J1:21	26.1
Cond Rly spd2 R9	PSID #42	3, 4, 5, 6	A54.J1:1	18.2	FrontMkr Lts RH L61	PSID #149	3, 4, 6	A48.J1:7	26.1
Condensor Door Sw7	PSID #7	3, 4	A49.J1:3	25.1	FrStart Enable SW58	PSID #56	3, 4	A53.J1:9	3.2
Cornering Dash Sw30	PSID #200	3, 4	A55.J1:7	26.3	Hazard Switch Sw4	PSID #138	3, 4	A36.JB:4	26.1
Cyclope Lt L81	PSID #116	3, 4, 6	A51.J1:7	26.2	Hd Light Call SW1	PSID #140	3, 4	A43.J1:3	26.1
Defr water Pmp Mo50	SID #41	3, 4	A47.J1:20	18.3	HdLamp Wsh Pmp Mo54	SID #48	3, 4, 6	A46.J1:21	34.1
Diff Lock sol So35	SID #36	3, 4, 6	A52.J1:4	37.1	Head Lights Pos1SW2	PSID #143	3, 4	A43.J1:4	26.1
Docking Dash Sw31	PSID #3	3, 4	A55.J1:8	26.3	Head Lt Sw Pos2 Sw2	PSID #11	3, 4	A45.J1:12	26.1
Driver Def Fan L198	PSID #180	3, 4, 5, 6	A47.J1:1	18.1	Hi Low Beam Sw1	PSID #6	3, 4	A43.J1:8	26.1
Driver heat Sol SO8	PSID #16	3, 4, 5, 6	A46.J1:6	18.1	High Beam LH L60	PSID #141	3, 4, 5, 6	A45.J1:6	26.1
Driver Light L16	PSID #104	3, 4, 5, 6	A47.J1:6	19.1	High Beam RH L59	PSID #145	3, 4, 5, 6	A48.J1:3	26.1
Driver Light SW24	PSID #105	3, 4	A41.J1:2	19.1	LH Corner Lts L97	PSID #120	3, 4, 5, 6	A45.J1:5	26.3
Driver Rfg Sol SO7	PSID #13	3, 4, 5, 6	A46.J1:5	18.1	LH Docking LightL93	PSID #122	3, 4, 5, 6	A51.J1:4	26.3
Driver Sensor SE21	PSID #12	3, 4, 5	A55.J1:1	18.1	Low Beam LH L60	PSID #142	3, 4, 6	A45.J1:7	26.1
Drv air Trap MO3	PSID #5	3, 4, 6	A44.J1:2	18.1	Low Beam RH L59	PSID #146	3, 4, 6	A48.J1:4	26.1
Drv Rec Cylind L203	PSID #30	3, 4, 5, 6	A47.J1:2	18.1	Low Wip Spd1 Mo22	PSID #184	3, 4, 5, 6	A47.J1:3	34.1
Elec Horn L185 L186	PSID #83	3, 4, 6	A43.J1:13	9.1	Lower Stop Lamps	PSID #153	3, 4, 6	A50.J1:6	26.2
Elec.Horn SW61 SW62	PSID #82		4 A41.J1:3	9.1	Lower Washer pmp	PSID #181	4, 6	A46.J1:3	34.1
Emergency Relay R21	PSID #44	3, 4, 5, 6	A36.JA:24	3.2	Lower Washer SW1	PSID #188	3, 4	A46.J1:9	34.1
Eng Brk Active Sig	PSID #45	3, 4	A42.J1:18		Lower Wip Int SW1	PSID #183	3, 4	A42.J1:8	34.1
Eng Cmpt Bulb L173	PSID #106	3, 4, 5, 6	A52.J1:5	25.1	Lugg doors lock R30	SID #44	3, 4, 5, 6	A36.JA:7	33.1
Eng Cmpt Sw	PSID #107	3, 4	A52.J1:11	25.1	Lugg doors unl R32	SID #45	3, 4, 5, 6	A36.JA:6	33.1
Eng Ether SW23	PSID #50	3, 4	A42.J1:5	13.1	OutDoor Sens SE20	PSID #161	3, 4, 5	A54.J1:14	18.1
Eng Fan Dash SW22	PSID #55	3, 4	A36.JB:14		Park brak Sens Se18	PSID #162	3, 4	A36.JB:9	12.1
Eng Fan Spd1 Req	PSID #51	3, 4	A52.J1:9	13.1	Pass def fan Mo25	SID #38	3, 4, 5, 6	A47.J1:7	18.1
Eng Fan Spd2 Req	PSID #52	3, 4	A52.J1:10	13.1	Pass Heat Sol SO13	PSID #24	3, 4, 6	A54.J1:8	18.2
Eng. Ether Sol SO1	PSID #49	3, 4, 6	A52.J1:6	13.1	Pass Rfg Sol SO11	PSID #23	3, 4, 5, 6	A54.J1:3	18.2
Engine Fan Spd1 MO2	PSID #53	3, 4, 5, 6	A52.J1:1	13.1	Pass. Wtr pump MO12	PSID #17	4, 6	A54.J1:4	18.2
Engine Fan Spd2 MO2	PSID #54	3, 4, 5, 6	A52.J1:2	13.1	Rear CutOut Sw82	PSID #18	3, 4	A36.JB:21	3.2
Evap Motor Rly R12	PSID #77	3, 4, 5, 6	A54.J1:7	18.2	RearFlsh LH L71 L75	PSID #131	3, 4, 6	A51.J1:21	26.2
Evap Spd Ctrl MO9	PSID #78	4, 6	A54.J1:2	18.2	RearFlsh RH L73 L76	PSID #132	3, 4, 6	A51.J1:3	26.2
Fire Sensor	PSID #79	3, 4	A41.J1:10	9.1	Retarder signal	PSID #164	3, 4	A50.J1:12	15.1

MULTIPLEX ERROR MESSAGES LIST

FMI 3 = Shorted High ; FMI 4 = Shorted Low ; FMI 5 = Open Circuit ; FMI 6 = Current above Normal

Cluster message	SID/PSID	FMI	Module.Pin#	Page					
Rev lights L91 L92	SID #43	3, 4, 5, 6	A50.J1:3	26.3					
RH Corner Light L98	PSID #121	3, 4, 5, 6	A48.J1:5	26.3					
RH Docking LightL94	PSID #123	3, 4, 5, 6	A51.J1:5	26.3					
RJB fan Mo53	SID #37	3, 4, 6	A53.J1:5	11.1					
Rr Clearance lights	PSID #151	3, 4, 6	A50.J1:4	26.2					
Rr Start SW59	PSID #59	3, 4	A53.J1:11	3.2					
RrStart Enable SW58	PSID #57	3, 4	A53.J1:10	3.2					
Ser Brake Trans A1	SID #49	3, 4, 6	A51.J1:1	15.1					
SldO 5v supply	SID #23	3, 4	A56.J1:15	20.1					
SldO Close Sw	SID #18	3, 4	A56.J1:10	20.1					
SldO Limit In Se	SID #19	3, 4	A56.J1:11	20.1					
SldO Limit Out Se	SID #20	3, 4	A56.J1:14	20.1					
SldO Mot Neg Rly	SID #15	3, 4, 5, 6	A56.J1:7	20.1					
SldO Mot Pos Rly	SID #16	3, 4, 5, 6	A56.J1:20	20.1					
SldO Mot SpeedA Ctr	SID #9	3, 6	A56.J1:1	20.1					
SldO Mot SpeedB Ctr	SID #10	3, 6	A56.J1:2	20.1					
SldO Open Sw	SID #17	3, 4	A56.J1:9	20.1					
SldO Park Br Signal	SID #8	3, 4	A56.J1:12	20.1					
SldO Remote Led	SID #11	3, 4, 5, 6	A56.J1:3	20.1					
SldO Seal Def Sol	SID #13	3, 4, 5, 6	A56.J1:5	20.1					
SldO Seal Inf Sol	SID #12	3, 4, 5, 6	A56.J1:4	20.1					
SldO Secu Pin Sol	SID #21	3, 4, 5, 6	A56.J1:21	20.1					
SldO Vacc Gen Sol	SID #14	3, 4, 5, 6	A56.J1:6	20.1					
SldO Vacuum Sensor	SID #5	3, 4	A56.J1:13	20.1					
Starter Relay SO2	PSID #60	4, 6	A53.J1:6	3.2					
Starter Relay SO2	PSID #60	3, 6	A53.J1:1	3.2					
Stop Eng Signal In	PSID #62	3	A42.J1:9						
SunVisor RlyR41-R45	SID #54	3, 4, 5, 6	A55.J1:13	38.1					
Tail Lights	PSID #152	3, 4, 6	A51.J1:8	26.2					
Trans Neutral Sens	PSID #168	3, 4	A50.J1:11	15.1					
Under Floor lights	PSID #112	4, 6	A46.J1:20	25.1					
Unloader LH L200	PSID #31	3, 4, 6	A52.J1:8	18.2					
Unloader RH L199	PSID #32	3, 4, 6	A52.J1:21	18.2					
Upper Brk Lamp	PSID #43	3, 4, 6	A51.J1:6	26.2					
Upper Wash Pmp MO18	PSID #189	4, 6	A46.J1:4	34.1					
Upper Wash SW6	PSID #190	3, 4	A55.J1:19	34.1					
Upper Wiper Int SW5	PSID #191	3, 4	A55.J1:20	34.1					
Upper Wiper SW5	PSID #192	3, 4	A55.J1:21	34.1					
UpperWiper Mot MO21	PSID #193	3, 4, 6	A46.J1:2	34.1					