
TABLE OF CONTENTS

Safety precautions.....	3 - 7	Sound system	5 - 5
Defensive driving.....	3 - 8	Video system.....	5 - 5
STARTING AND STOPPING			
PROCEDURES	4 - 1	Suspension	5 - 5
General information.....	4 - 1	Alignment	5 - 5
Detroit Diesel Electronic Control (DDEC).....	4 - 2	Heating and air conditioning	5 - 5
World Transmission WT Electronic Control System.....	4 - 3	Oil specifications	5 - 6
Manual transmission	4 - 7	Preheating systems	5 - 7
Cold weather starting	4 - 7	Storage volume.....	5 - 7
Daily inspection	4 - 8	Seats	5 - 7
Recommendations	4 - 9	Data plate and certification	5 - 7
Heating and air conditioning	4 - 10	Light bulb data.....	5 - 10
Preheating systems.....	4 - 13	DDEC III diagnostic codes.....	5 - 12
Windshield washer reservoir.....	4 - 14	World transmission WT diagnostic codes.....	5 - 14
Jump starting	4 - 15		
Electric circuit protection	4 - 16		
Tires	4 - 18		
Jacking points.....	4 - 20		
Towing	4 - 20		
Retractable tag axle	4 - 21		
Tag axle unloaded.....	4 - 21		
TECHNICAL INFORMATION			
5 - 1			
Dimensions.....	5 - 1	Interior cleaning.....	6 - 1
Weights.....	5 - 2	Exterior cleaning	6 - 3
Capacities.....	5 - 2	Oil verification.....	6 - 4
Fuel type	5 - 2	Air tanks	6 - 7
Wheels and tires.....	5 - 2	Coolant level verification.....	6 - 7
Belts	5 - 3	Water separator	6 - 7
Engines.....	5 - 3	Belt tensioners	6 - 8
Transmissions	5 - 3	A/C and heating air filters	6 - 8
Drive axle ratio.....	5 - 3	Flexible hose maintenance.....	6 - 9
Brakes.....	5 - 4	Lubrication.....	6 - 9
Antilock braking system (ABS)	5 - 4	Fire extinguishers.....	6 - 9
Steering	5 - 4	110-120 volt in-station lighting.....	6 - 9
Electrical system.....	5 - 4	110-120 volt in-station connectors	6 - 9
		Back-up camera.....	6 - 10
		Filter restriction indicator.....	6 - 10
		Lavatory maintenance	6 - 10
		First service on new vehicle	6 - 12
		Lubrication and servicing schedule	6 - 13
SERVICE LITERATURE			
			7 - 1

SERVICE LITERATURE

Additional copies of the following Service Literature are available upon request and at low cost.

- **Maintenance Manual**
- **Operator's Manual**
- **Parts Manual**

To order the desired Manual(s), please contact your local distributor or write to:

PRÉVOST CAR INC.

ATTN.: TECHNICAL PUBLICATIONS DEPARTMENT
35 Boulevard Gagnon
Sainte-Claire, Québec
Canada, G0R 2V0
Fax no.: (418) 883 - 4157

Specify your vehicle's complete serial number. Allow 30 days for delivery.

INDEX

A

- ABS brake.....3 - 2, 5 - 4
- Accelerator pedal2 - 28
- Accessories2 - 41
- Adjustable louver2 - 4, 2 - 16, 2 - 43
- Air conditioning2-16, 4-11
- Air filters, A/C & heating6 - 8
- Air horn2 - 27, 3 - 5
- Air system emergency fill valves.....3 - 2
- Air tanks.....6 - 7
- Alarm, back up.....3 - 3
- Alarm system.....3 - 6
- Alignment.....5 - 5
- Antilock braking system3 - 2, 5 - 4
- Audio/Video control unit2 - 16
- Auxiliary sump tank draining6 - 11

B

- Back-up alarm3 - 3
- Back-up camera / TV monitor2 - 41, 6 - 10
- Baggage compartment door locks.....2 - 4
- Battery disconnect switch, main2 - 2
- Battery equalizers.....4 - 17
- Belts, engine5 - 3
- Belt tensioners.....6 - 8
- Blinds2 - 42
- Block heater, engine.....4 - 7, 6 - 9
- Brakes
 - Anti-lock (ABS).....3 - 2, 5 - 4
 - Emergency2 - 28, 3 - 1
 - Engine (Jacob's)2 - 4, 4 - 3
 - Parking2 - 23, 3 - 1
 - Parking brake override2 - 23
 - Service2 - 28, 3 - 1
- Breakers, main4 - 16
- Bulb chart.....5 - 10

C

- Camera, maintenance6 - 10
- Capacities, refill.....5 - 2
- Card tables.....2 - 44
- Care and maintenance6 - 1
- Central A/C and heating controls4 - 11
- Changing wheels4 - 18
- Check engine light2 - 12
- Chime, stop/service power switch.....2 - 4, 2 - 44
- Cleaning, exterior6 - 3
- Cleaning, interior6 - 1
- Clutch pedal2 - 28
- Coach final record.....5 - 8
- Cold starting aid (Ether)2 - 15, 4 - 7
- Compartments, exterior
 - A/C & heating2 - 39
 - Baggage2 - 38
 - Battery (XL-40)2 - 40
 - Condenser2 - 39
 - Engine2 - 37
 - Entrance door2 - 36
 - Fuel tank filling door2 - 36
 - L.H. side service (XL-45)2 - 39
 - Main power (XL-45).....2 - 39
 - Service doors2 - 39
 - Spare wheel and tire4 - 18
- XL-40 (details)2 - 34
- XL-45 (details)2 - 35
- Compartments, interior
 - Lavatory2 - 40
 - Parcel racks.....2 - 41
 - Safety equipment compartment.....2 - 41
- Controls and instrument panels.....2 - 3
- Coolant level verification.....6 - 7
- Cruise control switches.....2 - 5

D

Daily inspection	4 - 8
Dashboard	2 - 7
Data plate & certification	5 - 7
Day time running lights.....	3 - 5
Defensive driving.....	3 - 8
Destination sign	2 - 42
Detroit diesel electronic control (DDEC).....	4 - 2
Diagnostic codes	
World transmission (WT)	5 - 17
Detroit Diesel Electronic Control	5 - 12
Differential oil	5 - 6
Dimensions, vehicle	5 - 1
Dome lights.....	2 - 5
DO NOT SHIFT light	2 - 11, 4 - 5
Door, entrance.....	2 - 28
Door override.....	2 - 23, 3 - 4
DOT certification label.....	5 - 9
Drive axle ratio.....	5 - 3
Driver's A/C - heating system ctrls....	2 - 16, 4 - 12
Driver's fan.....	2 - 42
Driver's light switch.....	2 - 4
Driver's seat.....	2 - 29
Driver's window	2 - 41

E

Electrical system.....	5 - 4
Electric circuit protection	4 - 16
Electric horns.....	2 - 27, 3 - 5
Emergency	
Exits.....	3 - 4
warning reflectors	3 - 6
Engine	

Block heater	4 - 7
Compartment components.....	2 - 37
DDEC	4 - 2
DDEC III diagnostic codes	5 - 12

Retarder (Jacob's).....	2 - 4, 4 - 3
Starting (from driver's compt.).....	4 - 1
Starting (from engine compt.)	4 - 1
Stop override	2 - 15
Warm-up.....	4 - 8
EPA engine labels.....	5 - 9
Ether, cold starting aid	2 - 15, 4 - 7
Exits, emergency	
Entrance door	3 - 4
Roof escape	3 - 4
Side windows	3 - 4
Exterior cleaning	6 - 3
Exterior mirror heating switch	2 - 4
Extinguishers, fire	3 - 6, 6 - 9

F

Filter restriction indicator.....	6 - 10
Fire extinguishers.....	3 - 6, 6 - 9
Fire hatchet	3 - 7
First aid kit	3 - 6
First service on new vehicle	6 - 12
Flexible hose maintenance.....	6 - 9
Fluorescent lighting.....	2 - 5
Fog lights	2 - 15, 3 - 5
Foot-operated controls.....	2 - 27
Fresh water reservoir draining.....	6 - 10
Fresh water reservoir filling	6 - 11
Fuel tank filling	2 - 2
Fuel type.....	5 - 2
Fuses.....	4 - 17

G

Galley	2 - 44
Gauges.....	2 - 7
General information	4 - 1

H

Hatchet, fire	3 - 7
Hazard flashers	2 - 15
Heating and air conditioning	
Central.....	2 - 16, 4 - 11
Driver's	2 - 16, 4 - 12
Ventilation	4 - 10
Heating and air conditioning (tech. info.)	5 - 5
Horns, air	2 - 27, 3 - 5
Horns, electric.....	2 - 27, 3 - 5
Hi-buoy / kneeling control switch	2 - 5
Hi-buoy system.....	3 - 3
Hubodometer.....	2 - 44

I

Identification plates.....	5 - 7
Indicator lights, dashboard.....	2 - 7
Ignition switch	2 - 14
In-station connectors (110 - 120 volt)	6 - 9
In-station lighting (110 - 120 volt).....	6 - 9
Interphone.....	2 - 19
Interior cleaning	6 - 1

J

Jacking points.....	4 - 20
Jack/tools.....	3 - 6
Jacob's engine brake	2 - 4, 4 - 3
Jump starting.....	4 - 15

K

Keys	2 - 1
Kneeling / hi-buoy control switch	2 - 5
Kneeling system	3 - 3

L

Lavatory.....	2 - 40
Lavatory maintenance	6 - 10
Lever, multifunction.....	2 - 26
Lever, transmission retarder.....	2 - 27
L.H. lower switch panel.....	2 - 14
L.H. outside mirror control	2 - 5
L.H. side control panel	2 - 4
Light bulb data.....	5 - 10
Lighting, exterior.....	2 - 15
Lighting, fluorescent.....	2 - 5
Light switch, driver's.....	2 - 4
Lights	
Day time running	3 - 5
Fog.....	3 - 5
Literature, service	7 - 1
Louver, adjustable.....	2 - 4, 2 - 16, 2 - 43
Low-buoy system	2 - 23, 3 - 3
Lubricant specifications	6 - 19
Lubrication.....	6 - 9
Lubrication and servicing schedule	6 - 13

M

Main battery disconnect switch	2 - 2
Main breakers	4 - 16
Main power compartment (XL-45).....	2 - 39
Main sump tank draining	6 - 11
Main sump tank filling	6 - 11
Manual transmission.....	2 - 25
Microphone jacks	2 - 5, 2 - 18
Mirrors	
Exterior mirrors	2 - 32
Heating switch	2 - 4
Interior mirror	2 - 32
L.H. outside mirror control.....	2 - 5
R.H. outside mirror control	2 - 5

Mud flaps and splash guards.....	2 - 43
Multifunction lever.....	2 - 26

N

New vehicle, first service on	6 - 12
-------------------------------------	--------

O

Oil capacities	5 - 2
Oil specification	5 - 6
Oil level verification	
A/C compressor	6 - 6
Clutch pedal master cylinder	6 - 5
Engine	6 - 4
Fan gearbox.....	6 - 6
Power steering	6 - 6
Transmission (automatic)	6 - 4
Transmission (manual).....	6 - 5
Wheel bearing.....	6 - 6
Output retarder, transmission	2 - 4, 4 - 4
Override, door.....	2 - 23, 3 - 4

P

Public address system (P. A.).....	2 - 18
Parcel racks.....	2 - 41
Parking brake	2 - 23, 3 - 1
Parking brake override.....	2 - 23
Part number specifications	6 - 20
Parts kit, spare.....	2 - 45
Passenger seats.....	2 - 31
Preheating systems	
Espar	2 - 23, 2 - 46, 4 - 13
Webasto	2 - 23, 2 - 47, 4 - 14
Prodriver [™] - Engine data	
display and computer	2 - 20

Q

"Quick Lounge" system.....	2 - 44
----------------------------	--------

R

Radio AM/FM	2 - 16
Reading lamps	2 - 5
Recommendations.....	4 - 9
Reflectors, emergency warning.....	3 - 6
Retractable or unloaded tag axle	2 - 23, 4 - 21
R.H. console.....	2 - 15
R.H. lateral console.....	2 - 22
R.H. lower switch panel	2 - 15

S

Safety	
Attestation.....	5 - 9
Equipment	3 - 6
Precautions.....	3 - 7
Seat	
Driver	2 - 29
Passenger	2 - 31
Tour guide	2 - 32
Serial number, vehicle	5 - 8
Service literature	7 - 1
Service on new vehicle (first).....	6 - 12
Servicing and lubrication schedule.....	6 - 13
Sound system	5 - 5
Spare parts.....	2 - 45
Speed control (cruise).....	2 - 5
Splash guards and mud flaps.....	2 - 43
Starting engine from driver's compt.....	4 - 1

Starting engine from engine compt..... 4 - 1
Steering wheel and telescopic column 2 - 28
Stereo receiver, AM/FM 2 - 16

Stop/service chime power switch..... 2 - 4, 2 - 44
Stop/service/reading lamp 2 - 5, 2 - 44
Storage volume 5 - 7
Suspension..... 5 - 5
Switches
 Auxiliary A/C 2 - 15
 Baggage door lock..... 2 - 4
 Cruise control..... 2 - 5
 Dome lights 2 - 5
 Ether cold starting aid 2 - 15
 Exterior lighting switch 2 - 15
 Fast idle..... 2 - 14
 Fluorescent lighting..... 2 - 5
 Fog lights..... 2 - 15
 Galley power..... 2 - 44
 Hazard flashers..... 2 - 15
 Ignition..... 2 - 14
 Kneeling/hi-buoy 2 - 5
 L.H. outside mirror control 2 - 5
 Light, driver's..... 2 - 4
 Mirror heating..... 2 - 4
 Reading lamps..... 2 - 5
 Retarder, engine 2 - 4
 Retarder, transmission 2 - 4
 R.H. outside mirror control..... 2 - 5
 "Stop Engine" override 2 - 15
 Stop/service chime 2 - 4
 Transmission pushbutton 2 - 23
 Video power..... 2 - 17

T

Tachograph 2 - 13
Tachometer 2 - 13
Tag axle, unloaded or retractable 2 - 23

Technical information

Alignment..... 5 - 5
Belts..... 5 - 3
Brakes..... 5 - 4
Brakes (ABS)..... 5 - 4
Capacities..... 5 - 2
Coach final record 5 - 8
Battery Data plate/Type certification 5 - 7
DDEC III diagnostic codes 5 - 12
Dimensions..... 5 - 1
DOT certification label 5 - 9
Drive axle ratio..... 5 - 3
Electrical system 5 - 4
Engines..... 5 - 3
EPA engine label..... 5 - 9
Fuel type 5 - 2
Heating and air conditioning 5 - 5
Light bulb data..... 5 - 10
Oil specifications 5 - 6
Preheating systems..... 5 - 7
Safety attestation..... 5 - 9
Seats..... 5 - 7
Sound system..... 5 - 5
Steering 5 - 4
Storage volume 5 - 7
Suspension..... 5 - 5
Transmissions 5 - 3
Transmission WT, Diag. codes..... 5 - 17
Vehicle identification number 5 - 8
Wheels and tires..... 5 - 2
Weights..... 5 - 2
Timer, preheating system 2 - 23
Tires..... 4 - 18, 5 - 2
Tools/jack 3 - 6
Tour guide seat 2 - 32
Towing..... 4 - 20

V

Transmission

Automatic	2 - 23
Clutch pedal	2 - 28
Cooler circuit.....	4 - 4
DDR, diagnostic data reader....	2 - 5, 4 - 5
Diagnostic code list.....	5 - 17
Diagnostic telltales.....	4 - 5
Electronic control system WT.....	4 - 3
Importance of proper oil level.....	4 - 6
Lever, retarder	2 - 27
Light, do not shift.....	4 - 5
Manual	2 - 25, 4 - 7
Oil level sensor (OLS) codes.....	4 - 7
Operation (automatic).....	2 - 24
Planetary gears & clutches.....	4 - 4
Pushbutton shifter	2 - 23
Retarder, output.....	2 - 4, 4 - 4
Torque converter	4 - 4
Warm-up	4 - 8

Vehicle identification number (VIN).....	5 - 8
Video system.....	2 - 17

W

Warm-up

Engine.....	4 - 8
Transmission.....	4 - 8
Warning lights	2 - 9
Waste container	2 - 42
Water heater timer	2 - 23
Water separator	6 - 7
Weights, vehicle.....	5 - 2
Wheel bearing oil level.....	6 - 6
Wheels, changing	4 - 18
Wheels and tires	5 - 2
Windshield washer reservoir	4 - 14

INDEX

A

- ABS brake.....3 - 2, 5 - 4
- Accelerator pedal2 - 28
- Accessories2 - 41
- Adjustable louver2 - 4, 2 - 16, 2 - 43
- Air conditioning2-16, 4-11
- Air filters, A/C & heating6 - 8
- Air horn2 - 27, 3 - 5
- Air system emergency fill valves.....3 - 2
- Air tanks.....6 - 7
- Alarm, back up.....3 - 3
- Alarm system.....3 - 6
- Alignment.....5 - 5
- Antilock braking system3 - 2, 5 - 4
- Audio/Video control unit2 - 16
- Auxiliary sump tank draining6 - 11

B

- Back-up alarm3 - 3
- Back-up camera / TV monitor2 - 41, 6 - 10
- Baggage compartment door locks.....2 - 4
- Battery disconnect switch, main2 - 2
- Battery equalizers.....4 - 17
- Belts, engine5 - 3
- Belt tensioners.....6 - 8
- Blinds2 - 42
- Block heater, engine.....4 - 7, 6 - 9
- Brakes
 - Anti-lock (ABS).....3 - 2, 5 - 4
 - Emergency2 - 28, 3 - 1
 - Engine (Jacob's)2 - 4, 4 - 3
 - Parking2 - 23, 3 - 1
 - Parking brake override2 - 23
 - Service2 - 28, 3 - 1
- Breakers, main4 - 16
- Bulb chart.....5 - 10

C

- Camera, maintenance6 - 10
- Capacities, refill.....5 - 2
- Card tables2 - 44
- Care and maintenance6 - 1
- Central A/C and heating controls4 - 11
- Changing wheels4 - 18
- Check engine light2 - 12
- Chime, stop/service power switch2 - 4, 2 - 44
- Cleaning, exterior6 - 3
- Cleaning, interior6 - 1
- Clutch pedal2 - 28
- Coach final record.....5 - 8
- Cold starting aid (Ether)2 - 15, 4 - 7
- Compartments, exterior
 - A/C & heating2 - 39
 - Baggage2 - 38
 - Battery (XL-40)2 - 40
 - Condenser2 - 39
 - Engine2 - 37
 - Entrance door2 - 36
 - Fuel tank filling door2 - 36
 - L.H. side service (XL-45)2 - 39
 - Main power (XL-45).....2 - 39
 - Service doors2 - 39
 - Spare wheel and tire4 - 18
- XL-40 (details)2 - 34
- XL-45 (details)2 - 35
- Compartments, interior
 - Lavatory2 - 40
 - Parcel racks.....2 - 41
 - Safety equipment compartment.....2 - 41
- Controls and instrument panels.....2 - 3
- Coolant level verification6 - 7
- Cruise control switches.....2 - 5

D

Daily inspection	4 - 8
Dashboard	2 - 7
Data plate & certification	5 - 7
Day time running lights.....	3 - 5
Defensive driving.....	3 - 8
Destination sign	2 - 42
Detroit diesel electronic control (DDEC).....	4 - 2
Diagnostic codes	
World transmission (WT)	5 - 17
Detroit Diesel Electronic Control	5 - 12
Differential oil	5 - 6
Dimensions, vehicle	5 - 1
Dome lights.....	2 - 5
DO NOT SHIFT light	2 - 11, 4 - 5
Door, entrance.....	2 - 28
Door override.....	2 - 23, 3 - 4
DOT certification label.....	5 - 9
Drive axle ratio.....	5 - 3
Driver's A/C - heating system ctrls....	2 - 16, 4 - 12
Driver's fan.....	2 - 42
Driver's light switch.....	2 - 4
Driver's seat.....	2 - 29
Driver's window	2 - 41

E

Electrical system.....	5 - 4
Electric circuit protection	4 - 16
Electric horns.....	2 - 27, 3 - 5
Emergency	
Exits.....	3 - 4
warning reflectors	3 - 6
Engine	

Block heater	4 - 7
Compartment components.....	2 - 37
DDEC	4 - 2
DDEC III diagnostic codes	5 - 12

Retarder (Jacob's).....	2 - 4, 4 - 3
Starting (from driver's compt.).....	4 - 1
Starting (from engine compt.)	4 - 1
Stop override	2 - 15
Warm-up.....	4 - 8
EPA engine labels.....	5 - 9
Ether, cold starting aid	2 - 15, 4 - 7
Exits, emergency	
Entrance door	3 - 4
Roof escape	3 - 4
Side windows	3 - 4
Exterior cleaning	6 - 3
Exterior mirror heating switch	2 - 4
Extinguishers, fire	3 - 6, 6 - 9

F

Filter restriction indicator.....	6 - 10
Fire extinguishers.....	3 - 6, 6 - 9
Fire hatchet	3 - 7
First aid kit	3 - 6
First service on new vehicle	6 - 12
Flexible hose maintenance.....	6 - 9
Fluorescent lighting.....	2 - 5
Fog lights	2 - 15, 3 - 5
Foot-operated controls.....	2 - 27
Fresh water reservoir draining.....	6 - 10
Fresh water reservoir filling	6 - 11
Fuel tank filling	2 - 2
Fuel type.....	5 - 2
Fuses.....	4 - 17

G

Galley	2 - 44
Gauges.....	2 - 7
General information	4 - 1

H

Hatchet, fire	3 - 7
Hazard flashers	2 - 15
Heating and air conditioning	
Central.....	2 - 16, 4 - 11
Driver's	2 - 16, 4 - 12
Ventilation	4 - 10
Heating and air conditioning (tech. info.)	5 - 5
Horns, air	2 - 27, 3 - 5
Horns, electric.....	2 - 27, 3 - 5
Hi-buoy / kneeling control switch	2 - 5
Hi-buoy system.....	3 - 3
Hubodometer.....	2 - 44

I

Identification plates.....	5 - 7
Indicator lights, dashboard.....	2 - 7
Ignition switch	2 - 14
In-station connectors (110 - 120 volt)	6 - 9
In-station lighting (110 - 120 volt).....	6 - 9
Interphone.....	2 - 19
Interior cleaning	6 - 1

J

Jacking points.....	4 - 20
Jack/tools.....	3 - 6
Jacob's engine brake	2 - 4, 4 - 3
Jump starting.....	4 - 15

K

Keys	2 - 1
Kneeling / hi-buoy control switch	2 - 5
Kneeling system	3 - 3

L

Lavatory.....	2 - 40
Lavatory maintenance	6 - 10
Lever, multifunction.....	2 - 26
Lever, transmission retarder.....	2 - 27
L.H. lower switch panel.....	2 - 14
L.H. outside mirror control	2 - 5
L.H. side control panel	2 - 4
Light bulb data.....	5 - 10
Lighting, exterior.....	2 - 15
Lighting, fluorescent.....	2 - 5
Light switch, driver's.....	2 - 4
Lights	
Day time running	3 - 5
Fog.....	3 - 5
Literature, service	7 - 1
Louver, adjustable.....	2 - 4, 2 - 16, 2 - 43
Low-buoy system	2 - 23, 3 - 3
Lubricant specifications	6 - 19
Lubrication.....	6 - 9
Lubrication and servicing schedule	6 - 13

M

Main battery disconnect switch	2 - 2
Main breakers	4 - 16
Main power compartment (XL-45).....	2 - 39
Main sump tank draining	6 - 11
Main sump tank filling	6 - 11
Manual transmission.....	2 - 25
Microphone jacks	2 - 5, 2 - 18
Mirrors	
Exterior mirrors	2 - 32
Heating switch	2 - 4
Interior mirror	2 - 32
L.H. outside mirror control.....	2 - 5
R.H. outside mirror control	2 - 5

Mud flaps and splash guards.....	2 - 43
Multifunction lever.....	2 - 26

N

New vehicle, first service on	6 - 12
-------------------------------------	--------

O

Oil capacities	5 - 2
Oil specification	5 - 6
Oil level verification	
A/C compressor	6 - 6
Clutch pedal master cylinder	6 - 5
Engine	6 - 4
Fan gearbox.....	6 - 6
Power steering	6 - 6
Transmission (automatic)	6 - 4
Transmission (manual).....	6 - 5
Wheel bearing.....	6 - 6
Output retarder, transmission	2 - 4, 4 - 4
Override, door.....	2 - 23, 3 - 4

P

Public address system (P. A.).....	2 - 18
Parcel racks.....	2 - 41
Parking brake	2 - 23, 3 - 1
Parking brake override.....	2 - 23
Part number specifications	6 - 20
Parts kit, spare.....	2 - 45
Passenger seats.....	2 - 31
Preheating systems	
Espar	2 - 23, 2 - 46, 4 - 13
Webasto	2 - 23, 2 - 47, 4 - 14
Prodriver [™] - Engine data	
display and computer	2 - 20

Q

"Quick Lounge" system.....	2 - 44
----------------------------	--------

R

Radio AM/FM	2 - 16
Reading lamps	2 - 5
Recommendations.....	4 - 9
Reflectors, emergency warning.....	3 - 6
Retractable or unloaded tag axle	2 - 23, 4 - 21
R.H. console.....	2 - 15
R.H. lateral console.....	2 - 22
R.H. lower switch panel	2 - 15

S

Safety	
Attestation.....	5 - 9
Equipment	3 - 6
Precautions.....	3 - 7
Seat	
Driver	2 - 29
Passenger	2 - 31
Tour guide	2 - 32
Serial number, vehicle	5 - 8
Service literature	7 - 1
Service on new vehicle (first).....	6 - 12
Servicing and lubrication schedule.....	6 - 13
Sound system	5 - 5
Spare parts.....	2 - 45
Speed control (cruise).....	2 - 5
Splash guards and mud flaps.....	2 - 43
Starting engine from driver's compt.....	4 - 1

INDEX

Starting engine from engine compt.....	4 - 1	Tag axle, unloaded or retractable.....	2 - 23
Steering wheel and telescopic column	2 - 28		
Stereo receiver, AM/FM	2 - 16		
Stop/service chime power switch.....	2 - 4, 2 - 44	Technical information	
Stop/service/reading lamp	2 - 5, 2 - 44	Alignment.....	5 - 5
Storage volume	5 - 7	Belts.....	5 - 3
Suspension.....	5 - 5	Brakes.....	5 - 4
Switches		Brakes (ABS).....	5 - 4
Auxiliary A/C	2 - 15	Capacities.....	5 - 2
Baggage door lock.....	2 - 4	Coach final record	5 - 8
Battery master switch	2 - 2	Data plate & certification	5 - 7
Cruise control.....	2 - 5	DDEC III diagnostic codes	5 - 12
Dome lights	2 - 5	Dimensions.....	5 - 1
Ether cold starting aid.....	2 - 15	DOT certification label.....	5 - 9
Exterior lighting switch.....	2 - 15	Drive axle ratio.....	5 - 3
Fast idle.....	2 - 14	Electrical system	5 - 4
Fluorescent lighting.....	2 - 5	Engines.....	5 - 3
Fog lights.....	2 - 15	EPA engine label.....	5 - 9
Galley power	2 - 44	Fuel type	5 - 2
Hazard flashers.....	2 - 15	Heating and air conditioning	5 - 5
Ignition.....	2 - 14	Light bulb data.....	5 - 10
Kneeling/hi-buoy	2 - 5	Oil specifications	5 - 6
L.H. outside mirror control	2 - 5	Preheating systems.....	5 - 7
Light, driver's.....	2 - 4	Safety attestation.....	5 - 9
Mirror heating.....	2 - 4	Seats.....	5 - 7
Reading lamps.....	2 - 5	Sound system.....	5 - 5
Retarder, engine	2 - 4	Steering	5 - 4
Retarder, transmission	2 - 4	Storage volume	5 - 7
R.H. outside mirror control.....	2 - 5	Suspension.....	5 - 5
<i>"Stop Engine"</i> override	2 - 15	Transmissions	5 - 3
Stop/service chime	2 - 4	Transmission WT, Diag. codes.....	5 - 17
Transmission pushbutton	2 - 23	Vehicle identification number	5 - 8
Video power.....	2 - 17	Wheels and tires.....	5 - 2
		Weights.....	5 - 2
		Timer, preheating system	2 - 23
T		Tires.....	4 - 18, 5 - 2
Tachograph	2 - 13	Tools/jack	3 - 6
Tachometer	2 - 13	Tour guide seat	2 - 32
		Towing.....	4 - 20

V

Transmission

Automatic	2 - 23
Clutch pedal	2 - 28
Cooler circuit.....	4 - 4
DDR, diagnostic data reader....	2 - 5, 4 - 5
Diagnostic code list.....	5 - 17
Diagnostic telltales.....	4 - 5
Electronic control system WT	4 - 3
Importance of proper oil level	4 - 6
Lever, retarder	2 - 27
Light, do not shift.....	4 - 5
Manual	2 - 25, 4 - 7
Oil level sensor (OLS) codes.....	4 - 7
Operation (automatic).....	2 - 24
Planetary gears & clutches.....	4 - 4
Pushbutton shifter.....	2 - 23
Retarder, output.....	2 - 4, 4 - 4
Torque converter	4 - 4
Warm-up	4 - 8

Vehicle identification number (VIN)	5 - 8
Video system.....	2 - 17

W

Warm-up

Engine.....	4 - 8
Transmission	4 - 8
Warning lights	2 - 9
Waste container	2 - 42
Water heater timer	2 - 23
Water separator	6 - 7
Weights, vehicle.....	5 - 2
Wheel bearing oil level.....	6 - 6
Wheels, changing	4 - 18
Wheels and tires	5 - 2
Windshield washer reservoir	4 - 14

CHANGE OF ADDRESS OR OWNERSHIP

Any Change in address or ownership should be brought to the attention of the manufacturer by completing and sending out one of the cards supplied below.

CHANGE OF ADDRESS

VEHICLE SERIAL NUMBER

A horizontal bar consisting of 15 adjacent rectangular segments of equal width.

OLD ADDRESS :

NAME		
NO.	STREET	APT
CITY	STATE/PROVINCE	ZIP/POSTAL CODE
() -	() -	
PHONE		FAX

NEW ADDRESS :

NO.	STREET	APT
CITY	STATE/PROVINCE	ZIP/POSTAL CODE
() -	() -	
PHONE	FAX	

CHANGE OF OWNERSHIP

VEHICLE SERIAL NUMBER

The ownership of this vehicle is transferred

FROM :

NAME		
NO.	STREET	APT
CITY	STATE/PROVINCE	ZIP/POSTAL CODE
() - PHONE	() - FAX	

TO:

NAME		
NO.	STREET	APT
CITY	STATE/PROVINCE	ZIP/POSTAL CODE
() -	() -	
PHONE	FAX	

STAMP

P R E V O S T

PRÉVOST CAR INC.
AFTER-SALES SERVICE DEPARTMENT
35, boulevard Gagnon
Ste-Claire, (Québec)
Canada G0R 2V0

STAMP

P R E V O S T

PRÉVOST CAR INC.
AFTER-SALES SERVICE DEPARTMENT
35, boulevard Gagnon
Ste-Claire, (Québec)
Canada G0R 2V0