

# INDEX

---

## A

A/C CONDENSER DOOR .....	11
ADJUSTABLE HVAC REGISTERS .....	19
AIR SYSTEM .....	106
ALARM SYSTEM .....	80
ALIGNMENT SPECIFICATIONS .....	106
DRIVE AXLE .....	107
FRONT AXLE (INDEPENDENT FRONT SUSPENSION).....	107
TAG AXLE .....	107
ALLISON WORLD TRANSMISSION ELECTRONIC CONTROL UNIT (ECU).....	54
ANTILOCK BRAKING SYSTEM (ABS) ..	55, 106
TROUBLESHOOTING AND TESTING .....	106
APPENDIX .....	135
AUTOMATIC TRANSMISSION.....	42
FUNCTIONS OF THE "MODE" BUTTON .....	43
OPERATION .....	43
RANGE SELECTION PUSH BUTTON SHIFTER .....	42

## B

BACK-UP ALARM.....	80
BACK-UP ALARM CANCEL SWITCH.....	80
BACK-UP CAMERA.....	15, 79
BAGGAGE COMPARTMENTS.....	10
BELTS .....	105
BRAKES.....	105
BRAKE CHAMBER EFFECTIVE AREA.....	105

## C

CAPACITIES .....	104
CARE AND MAINTENANCE .....	83
CHANGING WHEELS.....	77
HYDRAULIC JACK.....	78
JACKING POINTS.....	78
CLEANING .....	83
CARPET .....	84

EXTERIOR SURFACES.....	84
FLOOR CLEANING.....	84
FORMICA.....	84
PLASTIC AND VINYL.....	84
RUBBER COMPONENTS.....	84
SEAT UPHOLSTERY.....	83
STAINLESS STEEL .....	84
WINDOWS .....	84
WINDSHIELD .....	85
COACH FINAL RECORD .....	133
COLD WEATHER STARTING.....	72
COMPARTMENT LIGHTING.....	79
CONTROLS AND INSTRUMENTS ...	21
CORNERING AND DOCKING LIGHTS .....	79

## D

DASHBOARD CONTROL SWITCHES .....	28
AIR VENTS .....	33
HVAC CONTROL UNIT.....	32
L.H. DASHBOARD PANEL .....	28
R.H. DASHBOARD PANEL .....	31
DAYTIME RUNNING LIGHTS .....	79
DDEC V DIAGNOSTIC CODES .....	108
DDEC V ELECTRONIC CONTROL MODULE (ECM) .....	46
DEFENSIVE DRIVING PRACTICES .....	3
DETROIT DIESEL ELECTRONIC CONTROL (DDEC) SYSTEM.....	45
DIMENSIONS AND WEIGHTS.....	104
DRIVER CONTROLLED DIFFERENTIAL LOCK (DCDL) .....	55
LOCKING THE DCDL .....	56
OPERATION TIPS .....	56
UNLOCKING THE DCDL .....	56
DRIVER'S SEAT - DELIVERY.....	17
DRIVER'S AND CO-PILOT'S SEATS – ISRI (OPTIONAL) .....	17
ELECTRIC ISRI SEATS .....	17
PNEUMATIC ISRI SEATS.....	17

## INDEX

---

DRIVING MODE MENU .....	47	RADIATOR FAN GEARBOX OIL LEVEL .....	87
FAULT ? MENU (Fault messages) .....	48	WINDSHIELD WASHER TANK .....	88
FUEL ECONOMY MENU .....	47	FOG LIGHTS .....	79
GAUGE MODE MENU .....	47	FOOT-OPERATED CONTROLS .....	41
TIME / DIST MENU .....	47	ACCELERATOR PEDAL .....	41
<b>E</b>		SERVICE BRAKES .....	41
ELECTRICAL SYSTEM .....	106	STEERING WHEEL ADJUSTMENT .....	
EMERGENCY AIR-FILL VALVES .....	76	UNLOCK AIR VALVE .....	42
EMERGENCY AND PARKING BRAKES .....	76	<b>FOREWORD</b> .....	1
EMERGENCY EXITS .....	75	FRONT SERVICE COMPARTMENT .....	12
ELECTRIC AWNING WINDOW .....	75	FUEL FILLER DOOR .....	10
FIXED WINDOWS .....	75	FUEL TYPE .....	104
ROOF ESCAPE HATCH .....	75	<b>G</b>	
SLIDING WINDOWS .....	75	GENERAL RECOMMENDATIONS .....	94
ENGINE BLOCK HEATER .....	72	<b>H</b>	
ENGINE COMPARTMENT COMPONENTS .....	8	HEATING AND AIR CONDITIONING .....	107
ENGINE COMPARTMENT R.H. SIDE DOOR .....	9	COMPRESSOR (for large capacity A/C) .....	107
ENGINE COMPARTMENT REAR DOORS .....	11	COMPRESSOR (for small capacity A/C) .....	107
110-120 VOLT CONNECTOR .....	12	LARGE CAPACITY A/C .....	107
ENGINE WARM-UP .....	72	SMALL CAPACITY A/C .....	107
ENGINE .....	105	<b>I</b>	
ENTRANCE DOOR .....	13	IGNITION SWITCH .....	23
KEYLESS ENTRY SYSTEM .....	14, 56	INDEX .....	137
EVAPORATOR COMPARTMENT .....	13	INSIDE MIRROR .....	19
<b>F</b>		INSTRUMENT CLUSTER .....	34
FIRST SERVICE ON NEW VEHICLE .....	94	CLUSTER .....	34
AUTOMATIC TRANSMISSION OIL FILTER .....	94	DASHBOARD GAUGES .....	34
COOLANT SYSTEM STRAINER .....	94	MESSAGE CENTER DISPLAY (MCD) .....	34
ENGINE OIL .....	94	VEHICLE CLEARANCE INFORMATION .....	36
FLUID LEVEL VERIFICATION .....	85	<b>J</b>	
AUTOMATIC TRANSMISSION OIL LEVEL .....	86	JACOBS ENGINE BRAKE .....	55
COOLANT FLUID LEVEL .....	88	JUMP STARTING .....	73
DRIVE AXLE WHEEL BEARING OIL LEVEL .....	88		
ENGINE OIL LEVEL .....	85		
FRONT AND TAG AXLE WHEEL HUBS .....	88		
POWER STEERING FLUID LEVEL .....	87		

**K**

KEYLESS ENTRY SYSTEM.....	57
KEYLESS OPERATING INSTRUCTIONS .....	57
PROGRAMMING A PERSONAL CODE .....	57
PROGRAMMING TRANSMITTERS.....	58
REMOTE ENTRY TRANSMITTER.....	57
KEYS.....	21

**L**

LATERAL CONTROL PANEL.....	24
12-VOLT DC POWER OUTLET .....	27
ACCESSORY POCKET .....	27
ASHTRAY .....	27
BLANK.....	27
CIGARETTE LIGHTER .....	27
CRUISE CONTROL SWITCHES.....	24
LEVEL LOW SYSTEM .....	26
MIRROR CONTROLS .....	25
PARKING BRAKES CONTROL VALVE.....	27
POWER WINDOW SWITCH .....	27
TAG AXLE CONTROL VALVE.....	27
TRANSMISSION CONTROL PAD .....	24
LIGHT BULB DATA.....	131
LUBRICANT SPECIFICATIONS.....	100
LUBRICATION AND SERVICING SCHEDULE.....	97
MISCELLANEOUS SERVICE .....	99
SERVICE EVERY 100,000 MILES (160 000 KM) OR ONCE EVERY TWO YEARS, WHICHEVER COMES FIRST .....	99
SERVICE EVERY 12,500 MILES (20 000 KM) OR ONCE A YEAR, WHICHEVER COMES FIRST .....	98
SERVICE EVERY 50,000 MILES (80 000 KM) OR ONCE A YEAR, WHICHEVER COMES FIRST .....	98
SERVICE EVERY 6,250 MILES (10 000 KM) OR TWICE A YEAR, WHICHEVER COMES FIRST .....	97

**M**

MESSAGE CENTER DISPLAY (MCD) ....	33, 46
MUD FLAPS AND SPLASH GUARDS.....	79

**N**

NON-DRIVING MODE MENU .....	48
DATA LOG MODE MENU .....	53
FAULT DIAGNOSTIC MENU .....	51
PART NUMBER .....	52
PASSWORDS .....	53
SET UP MODE MENU .....	48
STATUS TEST .....	52
SYSTEM DIAGNOSTIC MENU .....	50
NOTICE .....	136

**O**

OIL LEVEL SENSOR (OLS) CODES .....	130
CLEARING CODES .....	130
OIL SPECIFICATIONS .....	108
AUTOMATIC TRANSMISSION .....	108
DIFFERENTIAL.....	108
ENGINE.....	108
FAN GEARBOX.....	108
POWER STEERING RESERVOIR.....	108
OTHER FEATURES.....	45
OTHER PRECAUTIONS .....	4
OTHER VERIFICATIONS.....	89
A/C AND HEATING SYSTEM AIR FILTERS....	91
AIR FILTER RESTRICTION INDICATOR .....	90
AIR TANK PURGE .....	89
BACK-UP CAMERA .....	90
BELT TENSION ADJUSTMENT.....	90
CABIN SYSTEM AIR FILTER .....	91
DRIVER'S AREA AIR FILTERS .....	91
FIRE EXTINGUISHERS .....	89
FUEL FILTER / WATER SEPARATOR .....	89
HOSE INSPECTION .....	92
LUBRICATION .....	92

## **INDEX**

---

### **P**

PART NUMBER SPECIFICATIONS .....	101
PLATES AND CERTIFICATION .....	132
DOT CERTIFICATION PLATE .....	132
EPA ENGINE LABEL .....	133
SAFETY CERTIFICATION .....	132
PRE-STARTING INSPECTION .....	92
WITH ENGINE RUNNING .....	93
WITH ENGINE STOPPED .....	92
PRODRIVER™ .....	54

### **R**

R.H. SIDE REAR SERVICE COMPARTMENT (XL2-45 MTH ONLY).....	9
RADIATOR DOOR.....	13
REAR VIEW MIRRORS .....	15
RECLINING BUMPER COMPARTMENT.....	12
REMOTE ENTRY TRANSMITTER .....	22, 57
RETRACTABLE TAG AXLE .....	55

### **S**

SAFE OPERATING PRACTICES .....	3
SAFETY BELTS.....	18
SAFETY EQUIPMENT .....	77
FIRE EXTINGUISHERS .....	77
FIRST AID KIT .....	77
JACK AND TOOLS.....	77
SPARE PARTS KIT.....	77
WARNING REFLECTORS .....	77
SAFETY FEATURES AND EQUIPMENT .....	75
SAFETY PRECAUTIONS .....	3
SERVICE LITERATURE .....	135
SLIDE-OUT OPERATION.....	58
CODE DESCRIPTION.....	69
FRONT SLIDE-OUT OPERATION.....	59
REAR SLIDE-OUT OPERATION .....	60

SAFETY PRECAUTIONS..... 58

SLIDE-OUT LOGIC CONTROLLER..... 60

SLIDE-OUT MANUAL OVERRIDE  
PROCEDURE .....

SLIDE-OUT TROUBLESHOOTING – THIRD  
GENERATION..... 68

### **STARTING AND STOPPING PROCEDURES .....** 71

STARTING THE ENGINE..... 71

    STARTING FROM THE DRIVER'S SEAT .....

    STARTING FROM THE ENGINE  
COMPARTMENT .....

### **STEERING COLUMN CONTROLS .....** 39

    HORN .....

    MULTI-FUNCTION LEVER .....

    TRANSMISSION OUTPUT RETARDER..... 40

STEERING WHEEL ADJUSTMENT .....

STEERING..... 106

SUNSHADES (BLINDS)..... 19

SUSPENSION .....

    DRIVE AXLE .....

    INDEPENDENT FRONT SUSPENSION .....

    TAG AXLE .....

### **T**

TECHNICAL INFORMATION .....

TELLTALE PANEL..... 36

TOWING .....

TRAILER HITCH..... 16

TRANSMISSION RETARDER..... 39, 54

TRANSMISSION .....

    GEAR RATIOS .....

### **V**

VARIABLE ASSISTANCE STEERING  
GEAR (OPTIONAL) .....

VEHICLE EXTERIOR..... 5

VEHICLE IDENTIFICATION  
NUMBER (VIN) .....

VEHICLE INTERIOR..... 17

## **W**

WALK-AROUND INSPECTION  
(BEFORE EVERY TRIP)..... 96

WHEELS AND TIRES..... 104

RECOMMENDED TIRE INFLATION  
PRESSURE AT MAXIMUM COLD LOAD ..... 104

WINDOWS ..... 19, 84

AWNNG WINDOWS..... 19, 75

DRIVER'S POWER WINDOW ..... 19

FIXED WINDOWS..... 19, 75

SLIDING WINDOWS..... 20, 75

WORLD TRANSMISSION (WT)

DIAGNOSTIC CODES ..... 118

ACTIVE INDICATOR..... 119

CLEARING CODES ..... 120

CLEARING RECORDS FROM THE CODE LIST  
IN MEMORY ..... 121

CLEARING THE ACTIVE INDICATOR AND  
CODE RECORDS FROM THE CODE LIST IN  
MEMORY ..... 119

CODE READING AND CODE CLEARING  
PROCEDURES ..... 119

DIAGNOSTIC CODE LIST  
AND DESCRIPTION ..... 121

DIAGNOSTIC CODE MEMORY LIST ..... 119

DIAGNOSTIC CODE RESPONSE ..... 121

EVENT COUNTER..... 119

EXITING THE DIAGNOSTIC  
DISPLAY MODE..... 120

IGNITION CYCLE COUNTER..... 119

MAIN CODE ..... 119

READING CODES ..... 120

SUB CODE..... 119

WORLD TRANSMISSION (WT) WARM-UP...73