

VOLVO 9700

USING THE DVD PLAYER WITHOUT THE REMOTE CONTROL



AUDIO-VIDEO EQUIPMENT

The Audiovisual Controller

CCU 02 Coach Control Unit



The DVD Player

CVX 02 Coach Video Extension





PREVOST

GENERAL NOTES

- The CVX 02 device is switched ON and OFF together with the CCU 02.
- The volume control is performed via the CCU 02 device.
- The supplied remote control allows you to control all the functions of the DVD/CD mode and the basic functions of the other connected devices for the passenger's area.



DVD OPERATION

- 1. INSERT A DVD (If a DVD is already inserted in the drive, press the VIDEO button (16) on the CCU 02 repeatedly until the CVX 02 is selected as video source)
- 2. PRESS THE **VIDEO** BUTTON (16) FOR THE PASSENGER'S AREA
- 3. DEPENDING ON THE INSERTED DVD, THE PLAYBACK STARTS AUTOMATICALLY OR THE DVD'S OWN SET UP MENU APPEARS

FUNCTIONS ON THE AUDIOVISUAL CONTROLLER CCU 02

- Starting playback (Play)
 Press the button (5)
- Interrupting playback (pause)
 Press the button (4)
- Selecting a chapter



PREVOST

To jump to the next or previous chapter, press the button >>6 or <<3 to select the next or previous chapter

MENU CHART

KEYS 3 4 5 6

DVD

- << —— CHAPTER-
- >> ---- CHAPTER +
- ∨ —— PAUSE
- 🔨 — PLAY

DVD (long press)

- << FR (speed 8 times, no BEEP, terminate after release)
- >> FF (speed 8 times, no BEEP, terminate after release)

The Audiovisual Controller CCU 02 Coach Control Unit



PREVOST

For Further Information

 For further information, see Blaupunkt's brochures on Prevost Technical Publication Web Site

http://prevostparts.volvo. com/technicalpublication s/en/manuel.asp

- Go to Audio and Video section
- D 2 Documents :
 - V9700 Audiovisual Controller CCU02
 - V9700 DVD Player
 CVX02



PREVOST