

## RELAYS LIST

No	Location	Part #	Function	Page				
R1	RJB	560843	MasterRelay	3.1				
R3	RJB	563348	12vIgn/Acc	3.1				
R6	RJB	563269	EntrDoorUL	29.1				
R12	RJB	563551	EvaporatorRelay	18.2				
R21	FJB	560493	24VRelayLatching	3.2				
R22	FJB_VECF	563269	Eculgn	4.1				
R23	FJB_VECF	563269	Shutdown	4.1				
R24	FJB_VECF	563269	12V_Ign	4.1				
R25	FJB_VECF	563269	24VIgn	4.2				
R27	RHConsole	563332	Wipers	34.1				
R29	RJB	563348	Preheater	14.1				
R30	RJB	563269	12vENGRUN	4.1				
R31	RJB	563269	12vIGN	4.1				
R34	RJB	564218	12vEngEcu	3.2				
R35	RJB	564218	24vEngEcu	3.2				
R36	RJB	563269	Fire_Extin	9.1				
R37	RJB	563269	Electhorn	9.1				
R38	RJB	563269	Ciga/Outle	30.2				
R40	FJB_VECF	563269	EntranceDoorWindowRelay	30.1				
R47	WCLPump	563332	WCLDoorOpen(option)	36.1				
R51	VECT	563270	Backuplights	26.4				
R52	VECT	563270	Taillights&runninglights	26.4				
R53	VECT	563270	Flashersleftside	26.4				
R54	VECT	563270	Brakelights	26.4				
R55	VECT	563270	Flashersrightside	26.4				
R167	RH_Console	563332	LuggageCompt.Lights	25.1SP1				
R_Starter	RJB	564095	StartCtrl	3.2				
R23A	FJB_VECF	563269	24VShutdown	4.1				
R6A	RJB	563269	EntrDoorUL	29.1				
RSO1_1	Slide_Outs_Elect._Cmpt	563332	Slide_Out	20.1				
RSO1_2	Slide_Outs_Elect._Cmpt	563332	Slide_Out	20.1				
RSO2_1	Slide_Outs_Elect._Cmpt	563332	Slide_Out	20.2				
RSO2_2	Slide_Outs_Elect._Cmpt	563332	Slide_Out	20.2				