

Electronic ground distribution

Ground distribution:

0-Electric gnd
00- Electronic Gnd

A-Dash - Lh console harness
F-Front junction box harness
FH-Front harness
R-Rear junction box harness
FR-Front to rear
P-Parcel Rack
RS-RJB to Rear Seat

