



VIDEO DISTRIBUTION

OPTION VCP

A40
 Video_Player
 Video_In
 Video_Out

IF Tv Tuner is use without video player, AUX1 must take the place of TRIG5 See P.35.0

Scenic_View
 Video_Out

sym617_131
 Navigator

sym614_131
 Dvd1
 Video_Out

sym610_131
 Dvd2
 Video_Out

sym613_131
 Video_Selector
 Video_Out
 Dvd1_Video_In_Signal
 Dvd2_Video_In_Signal
 Vhs_Video_In_Signal
 Scenic_View_In_Signal
 Navigator_In_Signal

sym622_131
 Video_Distributor
 Video_In
 Video_Out_1
 Video_Out_2
 Video_Out_3
 Video_Out_4
 Video_Out_5
 Video_Out_6

Tv_Monitor
 Video_In

Tv_Monitor
 Video_In

Tv_Monitor
 Video_In

Tv_Monitor
 Video_In

Tv_Monitor
 Video_In

Tv_Monitor
 Video_In

Flip_Down_Screen
 Video_In

FRONT MONITOR