

## RELAYS

No	Location	Part no	Function	Page
R1	RJB	562364	MasterRelay	3.1
R2	RJB	563332	Transmission ZF	15.2
R3	RJB	563348	12vIgn&AccRelay	3.1
R4	FJB	563332	Pre-heater cut-off	38.1
R5	RJB	563332	ChargerRelay	17.1
R6	FuseBoxRJB	563332	DirectLightsRelay	24.1
R8	FuseBoxRJB	563269	ServiceBrakeRelay	12.1
R9	Evap.Cmpt.	563348	CondensorRelay2stSpeed	18.2
R10	Evap.Cmpt.	563348	CondensorRelay1stSpeed	18.2
R11	RJB VECR	563332	ZFIgn	5.1
R12	Evap.Cmpt.	563348	EvaporatorRelay	18.2
R13	FuseBoxRJB	563332	Ind.LightRelay	23.1
R14	RJB	561991	ReadingLampRelay	22.1
R15	FuseBoxRJB	563332	EmergencyLamps	20.1
R16	DashBoard	563332	AudibleFlasherRelay	26.1
R17	RJB	561991	12vRrWUpRelay	3.3
R18	FJB	561991	24vFrWUpRelay	3.3
R19	FJB	561991	12vFrWUpRelay	3.3
R20	Evap.Cmpt.	563332	WaterPumpRelay	17.1
R21	RJB	563269	EmergencyCutoutRelay	3.2
R22	FuseBoxFJB	563269	EngineBrakeRelay	12.1
R23	RHConsole	563332	LowerWiperRelay	34.1
R24	FJB	563332	UpperWiperRelay	34.1
R25	RJBVECR	563332	Ecmlgn	5.1
R26	Evap.Cmpt.	563332	Pre-HeatRelay	18.2