

RELAYS LIST

No	Location	Part #	Function	Page
R1	RJB	562364	MasterRelay	3.1
R2	RJB	563332	TransmissionZF	15.2
R3	RJB	563348	12vIgn&AccRelay	3.1
R4		563332	Cut_Off_Preheater_Relay	38.1
R5	RJB	563332	ChargerRelay	17.1
R6	FuseBoxRJB	563332	DirectLightsRelay	24.1
R9	Evap_Cmpt_	563348	CondensorRelay2stSpeed	18.2
R10	Evap_Cmpt_	563348	CondensorRelay1stSpeed	18.2
R11	RJB_VECR	563332	ZFIgn	5.1
R12	Evap_Cmpt_	563348	EvaporatorRelay	18.2
R13	FuseBoxRJB	563332	Ind.LightRelay	23.1
R14	RJB	561991	ReadingLampRelay	22.1
R15	FuseBoxRJB	563332	EmergencyLamps	20.1
R16	DashBoard	563332	AudibleFlasherRelay	26.1
R17	RJB	561991	12vRrWUpRelay	3.3
R18	FJB	561991	24vFrWUpRelay	3.3
R19	FJB	561991	12vFrWUpRelay	3.3
R20	Evap_Cmpt_	563332	WaterPumpRelay	17.1
R21	RJB	563269	EmergencyCutoutRelay	3.2
R22		563269	*opt*	4.1
R23	RHConsole	563332	LowerWiperRelay	34.1
R24	FJB	563332	UpperWiperRelay	34.1
R25	RJB_VECR	563332	Ecmlgn	5.1
R26	Evap_Cmpt_	563332	Pre-HeatRelay	18.2
R35			*opt*	40.1
R36			*opt*	40.1
R37			FrigoRelay	40.1
R72		*opt*	InverterRelay	40.1
R_AMPLI	Parcel_Rack	561991	*opt*	35.0
R_Flip	Parcel_Rack	563337	Flip_Down_Screen	35.0
R_Tv	Parcel_Rack	563337	*opt*	35.0
R-12VISS	Parcel_Rack	563337	*opt*	35.0