

WIRING DIAGRAM INDEX

Information Pages		E	M	T			
Multiplexed Devices Index	B1 - B8	Emergency and Aisle lights	20,1	Main Distribution Ignition & Batt.	3,1	Tag Automatic unload system	32,1
Arrangement - Harness	C1	Engine brake and Retarder	12,1	Main Distribution Wake-Up	3,3	Tail and Licence Lights	26,2
Sound System	C2	Engine Start	3,2	Marker Lights	26.1,26.2	Test Switch	9,1
Can Configuration	C3	Engine ECM	14,1	Mirror Ramco	31,1	Transmission ECU	15.1-15.2
Glossary	D	Engine Override	14,1	Multiplexing Power	7,1	Trailer Package	26,4
Circuit Number Listing	E	Entrance door & Lights	29,1	Multiplexing Network	6,1		
Circuit Breaker code	F	Ether Start	13,1				
Connectors code	G						
Diode Number Code	H						
Resistors Number Code	J						
Fuses Code	L	F				U	
Relay Code	K	Fast Idle	14,1			Under Floor Lighting	25,1
		Fire Alarm	9,1				
		Flashers	26.1,26.2	P		W	
		Fog lights	26,3	Parcel Rack A/C system	18,2	Watch your step	29,1
		Fuel Gauge	10,1	Park Brake Sensor	12,1	Wheelchair Lift Ricon	36,1
A		Fuel Prime Pump	13,1	Park Brake Trailer Sensor	12,1	Window Ajar	27,1
Abs	16.1,16.2	Fuel water Filter	13,1	Parking Brake Release Switch	32,1	Wiper & Washer	34,1
Air Dryer (Optional)	38.1sp1			Power Distribution FJB	4,1	Water Pre-Heater	17,1
				Power Distribution RJB	5,1		
		G		Power Outlet	30,1		
		Grounds	2,1	Prime Pump	13,1		
		Galley	40,1	Pneumatic Cut-Out Acc.	9,1		
		H		R			
		Hat Rack Lighting	21,1	Radiator Fan Clutch	13,1		
		Hazard	26,1	Reading Lamp	22,1		
		Head Lights	26,1				
		Horn	9,1				
		Hostess Chime	22,1				
		Hvac Defroster	18,1	S			
		Hvac Passenger	18,2	Service Brake Relay	12,1		
				Sound System	35.0-35.4		
		I		Spare Wires	8,1		
		Indirect lighting	23,1	Stop lights	26,2		
				Sun Visor	30,1		
		K		Steering Control ZF	37,1		
		Kneeling system	32,1				
		L					
		Lavatory	11,1				
		Low Buoy	32,1				
		Luggage Door Lock/Unlock	33.1, 33.2				