

# RELAYS LIST

No	Location	Part #	Function	Page					
R1	RJB	562364	MasterRelay	3,1					
R2	RJB	563332	ZF_Trans_Easy_Start_Sol	15,2					
R3	RJB	563348	12vIgn&AccRelay	3,1					
R5	RJB	563332	Charging_Relay_Optionnal	17,1					
R6	RJB	563332	DirectLightsRelay	24,1					
R10	Evap_Cmpt	563348	CondensorPowerRelay	18,2					
R11	RJB_VECR	563332	ZFIgn	5,1					
R12	RJB	563348	EvaporatorRelay	18,2					
R13	RJB	563332	IndirectLightRelay	23,1					
R14	RJB	561991	ReadingLampRelay	22,1					
R15	RJB	563332	Aisle&Emerg.Lts	20,1					
R16	DashBoard	561706	AudibleFlasherRelay	26,1					
R17	RJB	561991	12vRrWUpRelay	3,3					
R18	FJB	561991	24vFrWUpRelay	3,3					
R19	FJB	561991	12vFrWUpRelay	3,3					
R20	RJB	563332	WaterPumpRelay	17,1					
R21	RJB	563269	EmergencyCutoutRelay	3,2					
R22		563269	*opt*	4,1					
R23	RHConsole	563332	LowerWiperRelay	34,1					
R25	RJB_VECR	563332	Ecmlgn	5,1					
R26	Evap_Cmpt	563332	Pre-HeatRelay	18,2					
R27			Hostess_Gong_Relay	22,1					
R29	RJB	563348	Preheater_Volvo	14,2					
R30	RJB	563332	Lugg_Door_Lock	33,1					
R31	RJB	563332	Lugg_Door_Lock	33,1					
R32	RJB	563332	Lugg_Door_Unlock	33,1					
R33	RJB	563332	Lugg_Door_Unlock	33,1					
R34	RJB	561991	12vRrEngineEcu	3,3					
R_AMPLI	Parcel_Rack_LH_1st_Cmpt_	561991	SOUND_SYSTEM	35,0					
R_Flip		563337	Flip_Down_Screen	35,0					
R_Tv	Parcel_Rack_LH_1st_Cmpt_	563337	SOUND_SYSTEM	35,0					
R-12VISS	Parcel_Rack_LH_1st_Cmpt_	563337	SOUND_SYSTEM	35,0					
RZF1	RJB	563332	ZFNeutralSignal	15,2					