

RELAYS

| No | Location | Part # | Function | Page |
|-----|------------|--------|-------------------------|------|
| R1 | RJB | 562364 | MasterRelay | 3.1 |
| R3 | RJB | 563348 | 12vIgn&AccRelay | 3.1 |
| R8 | FuseBoxRJB | 563269 | ServiceBrakeRelay | 12.1 |
| R9 | Evap.Cmpt. | 563348 | CondensorRelay2stSpeed | 18.2 |
| R10 | Evap.Cmpt. | 563348 | CondensorRelay1stSpeed | 18.2 |
| R12 | Evap.Cmpt. | 563348 | EvaporatorRelay | 18.2 |
| R16 | DashBoard | 563332 | AudibleFlasherRelay | 26.1 |
| R17 | RJB | 561991 | 12vRrWUpRelay | 3.3 |
| R18 | FJB | 561991 | 24vFrWUpRelay | 3.3 |
| R19 | FJB | 561991 | 12vFrWUpRelay | 3.3 |
| R21 | RJB | 563269 | EmergencyCutoutRelay | 3.2 |
| R22 | FuseBoxFJB | 563269 | EngineBrakeRelay | 12.1 |
| R23 | RHConsole | 563332 | LowerWiperRelay | 34.1 |
| R24 | FJB | 563332 | UpperWiperRelay | 34.1 |
| R25 | RJBVECR | 563332 | Ecmlgn | 5.1 |
| R30 | RJB | 563332 | LuggagesDoorsLocksRelay | 33.1 |
| R31 | RJB | 563332 | LuggagesDoorsLocksRelay | 33.1 |
| R32 | RJB | 563332 | LuggagesDoorsLocksRelay | 33.1 |
| R33 | RJB | 563332 | LuggagesDoorsLocksRelay | 33.1 |