

RELAYS

No	Location	Part #	Function	Page
R1	RJB	562364	MasterRelay	3.1
R3	RJB	563348	12vIgn&AccRelay	3.1
R8	FuseBoxRJB	563269	ServiceBrakeRelay	12.1
R9	Evap.Cmpt.	563348	CondensorRelay2stSpeed	18.2
R10	Evap.Cmpt.	563348	CondensorRelay1stSpeed	18.2
R12	Evap.Cmpt.	563348	EvaporatorRelay	18.2
R16	DashBoard	563332	AudibleFlasherRelay	26.1
R17	RJB	561991	12vRwUpRelay	3.3
R18	FJB	561991	24vFrWUpRelay	3.3
R19	FJB	561991	12vFrWUpRelay	3.3
R21	RJB	563269	EmergencyCutoutRelay	3.2
R22	FuseBoxFJB	563269	EngineBrakeRelay	12.1
R23	RHConsole	563332	LowerWiperRelay	34.1
R24	FJB	563332	UpperWiperRelay	34.1
R25	RJBVECR	563332	Ecmlgn	5.1
R30	RJB	563332	LuggagesDoorsLocksRelay	33.1
R31	RJB	563332	LuggagesDoorsLocksRelay	33.1
R32	RJB	563332	LuggagesDoorsLocksRelay	33.1
R33	RJB	563332	LuggagesDoorsLocksRelay	33.1
Regulator	RJB	563381	*opt*	3.2
RS01	Luggagescmpt	563445	Slideoutrelay	20.1
RS02	Luggagescmpt	563445	Slideoutrelay	20.1
RS03	Luggagescmpt	563445	Slideoutrelay	20.1
RS04	Luggagescmpt	563445	Slideoutrelay	20.1