

RELAYS LIST

No	Location	Part #	Function	Page
R1	RJB	562364	24vIgn&AccRelay	3.1
R3	RJB	563348	12vIgn&AccRelay	3.1
R8	FuseBoxRJB	563269	ServiceBrakeRelay	12.1
R9	Evap.Cmpt.	563348	CondensorRelay2stSpeed	18.2
R10	Evap.Cmpt.	563348	CondensorRelay1stSpeed	18.2
R11	RJBVECR	563332	ZFIgn	5.1
R12	Evap.Cmpt.	563348	EvaporatorRelay	18.2
R16	DashBoard	563332	AudibleFlasherRelay	26.1
R17		563348	12vRrWUpRelay	3.3
R18	FJB	561991	24vFrWUpRelay	3.3
R19	FJB	561991	12vFrWUpRelay	3.3
R21	RJB	563269	EmergencyCutoutRelay	3.2
R22		*opt*		4.1
R23	RHConsole	563332	LowerWiperRelay	31.1
R25	RJBVECR	563332	EcmIgn	5.1
R30		*opt*		24.2
R31		*opt*		24.2
R32		*opt*		24.2
R33		*opt*		24.2
r1_10				21.1
r2_10				21.1
r3_10				21.1
r4_10				21.1
r5_10				21.1
r6_10				21.1
Reg	*opt*	*opt*	*opt*	3.2
RS01		563445	*opt*	20.1
RS02		563445	*opt*	20.1
RS03		563445	*opt*	20.1
RS04		563445	*opt*	20.1