

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
1	Gnd	OFA6	POWER_CAPTAIN_CHAIR	OUSB	USB_Gnd
1A	Strobe	OFA7	POWER_CAPTAIN_CHAIR	OV	LuggageDoorOpenSig
1B	Strobe	OFB1	GndMirrors	OVE	EqualizerGnd
1C	Strobe	OFB2	GndFanRoof1	OW	WCLGnd
1D	Strobe	OFB2-D	GndFanRoof1	OWC	
2	CondensorDoorOpenSig	OFB3	GndMasterId	OY	GndChassistoABSModule
2A	Strobe	OFC1	left/right_luggage_door_lock	10	LuggageCmpt.LtsPwr
2B	CondSndSpdSig	OFC4	ElectricalHorn	10A	LuggageCmpt.LtsPwr
2C	Strobe	OFDS	Driver_seat_optional	10R	LuggageDoorOpenSig
2D	Strobe	OFE	Gnd	11	24V
3	DoorLatchSig	OFE2	Gnd	12A	12VtoR3
3A	Strobe	OG	GndofA54	12B	12VtoCB4
3B	Strobe	OH	GroundCoolantSensor	12Ecu	12vEngineEcu
3C	Strobe	00IS	Gnd_IShift	12H	DestinationSignPower
3D	Strobe	OLav	GndReadingLamps	12IgnSpare	VSS
4A	SOUND_SYSTEM	OLav1	GndDirectLights	12ISH	12V_IShift
4C	HostessChimeSig	OLav2	GndAisleLamps	12MEM	VSS
5	UpperDefrostfan	OLav3	GndEmergencyLampsRH	12SS	VSS
5vKnee	KneelingLevel	OLav4	GndAisleLampsLH	12SS1	VSS
6	GndWitnessSw24	0MUSB	USB_Main_Gnd	12SS2	VSS
7	GndDriverSensor	OP	Galley	12VA	12vEqualizer
8	GndParkBrakeSol	OPR1	EntranceCeilingLtGnd	12VD1	12VDFrontWake-up
9A	EngineDoorOpenSig	OPR2	GndWatchYourStep	12VD3	
9B	EngineCmpt.Lt	OPR3	UpperDefrosterGnd	12VD4	
9C	SurgeTankPump	ORA2		12VDCust	12VDCustomer
0A	Evap.Gnd	ORA3	GndR1-R3	12VDF	12VDtoFrontVec
00A	GndElectronic	ORB1	LavatoryGnd	12VI	12VltoCB10
0B	EngineChassisGnd	ORB3	GndRearClearanceLts	12VI1	12VI
00B	ElectronicGndofMuxModules	ORB4	Relaisinverter	12VI3	PwrOutletDrawer
0BB	Trans.FrontAirBrake	ORB5	GndPre-Heat	12VI4	PwrOutletandCigarLighter
0BF		ORB6	RJBGndCustomer	12VI5	12VltoVECR
0C	GndStarter	ORB7	GndToEcm	12VI6	PwrtoModuleA50
0CE	ChassisGndtoA47	ORB8		12VI7	PwrtoModuleA50
00D	RJBAjarSignal	ORB8A	GndtoACM	12VI9	TireMonitoringPwr
0EV1	GndFlashersandMarkersCenter	ORB8B	GndtoACM	12VI10	MirrorPwr
0EV2	GndHvac	ORC2	GndDriverCylinder	12VI11	12V_Sup
0EV3	GndPRackLH	ORC3	GndFogandCorneringLtsRH	12VI250	
0EV4	GndCondensor	ORC4	GndEntranceLights	12VICust	12VICustomer
0EV6	RHP-RackMotorGnd	OSA1	AlternatorGnd	12VIF	12VltoFrontVec
0F	FJBDoorOpenSig	OSS	VSS_GND	12VIF19	DDL_Power
OFA1	GndofAccessoires	OSS1	VSS	12VIM	PowerOutlet
OFA4	GndPwrOutlet	OSS2		12VIZF	ZFsteringControl
OFA5	gndplug12vadditional	OSS3	VSS	12W	DoorUnlockSol

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
12WA	DoorFullOpenSig	24RHF1-D	Roof_Hatch	24WC	WCL24VIPower
12WUp1	12VWUptoA48	24RHF2	FanRoof2toSW306	24WUp1	24WUpFront
12Wup1	12WUpFront	24RHF2-D	Roof_Hatch	24Wup1	24WUpFront
12Wup1b		24SS	VSS	24Wup2	WakeUpPower
12Wup2	12WUptoDash	24SS3	VSS	24WupSS	VSS
12WUp5	PwrtoModuleA51	24VA	24vEquilizer	25	EngineRunSignal
13	SignalToPre-heatrelay	24VB	24VEnginePreheater	25A1	ExcitationSignal
14A	FlushingPumpSig	24VB1	24VEnginePreheater	25A1D	Alternator_signal
15	UpperWipInt.Signal	24VB2	24VEnginePreheater	25A2	Alternator_Signal
15A	UpperWip.1StSpdSig	24VD	24VD	25A2D	Alternator_Signal
16	Speed_Sig	24VD1	24VDInsideDoorOpen	25A4	BatteryNotChargingSig
16A	UpperWasherPump	24VD2	24VDtoRearVec	26	12VI
16B	PwrofSensorSpd	24VD3	24VDofCECM	26A	DriverWdo
17	UpperWasherSwSignal	24VD4	24VDFrontWake-up	26B	DriverWdo
18	Wip.WasherLevel	24VD5	24VDtoPre-Heat	27A	EmergencySwSig
19A	TagUnload	24VD6	24VDPre-Heat	30A	Galley
19B	TagUnload	24VD7	PassandPRackPwr	31	UnloaderRH
20	AirDryer	24VD8		31B	WiperIntermittentSignal
21	FlasherLHSig	24VD8A	UreaPowerACM	31EE	UpperWipSpd.1
21A	Front_Flasher	24VD8B	UreaPowerACM	32A	BackupLtandalarm
21AA	Flasher_Front_LH	24VD9	24VD	32D	ReverseSigtoBackupMonitor
21B	CorneringLtsLH	24VDALT	Alternators	32EE	UpperWiperMotor
21C	ClearanceLts	24VDCust	24VDCustomer	33	UnloaderLH
22	HazardSwSig	24VDR4	Cut_Off_Preheater_Power	34	ParkBrakeReleaseSignal
23	FlasherRHSig	24VDS	24VD	34A	OrleanOption
23A	RAMCOMIRRORLED	24VI	24VI	35	EntranceDoorLights
23AA	FrontFlasherRHSide	24VI1	24VItoRearVec	35A	WatchYourStepLts
23B	CorneringLtsRH	24VI2	24VItoSw1	38	DirectLights
23C	ClearanceLts	24VI3	UpperWip.MotorPwr	38A	DirectLights
24	MasterRelayPwr	24VI4	24VIgn	38AA	
24A	BoosterBlock	24VI5	24VIofMuxmodules	38BB	DirectLightsLH
24CO	Pwr_to_Alternators	24VI6	PwrtoDefrostUnit	38C	DirectLightSwSig
24D	24DtoCB6	24VI7	LowerWiperPwr	39	DriverLtSwSig
24E	24VItoCB1	24VI8	24VItoMux	39D	DriverLt
24GA	Galley	24VI9	24VIofA54	40	WitnessGnd
24ISH		24VI9A	24VIofA54	41	24VCondensor
24IZ	ZFTransmission	24VI9B	24VIofA54	41A1	CondensorPwr
24MUSB		24VI10	24VI	43	SuppressingDiode
24P	Galley_Power	24VI12	RJBLightPwr	43F	WitnessGndSw27
24PV	Galley	24VI13	24VI	43G	PassandPRackLiquidValve
24PVA	Relaisinverter	24VIA	Cut-outPneumaticAcc	43H	PassandPRackLiquidValve
24RHF	Roof_Hatch_Fan_Option	24VICust	24VICustomer	44	P-RackLHFan
24RHF1	Roof_Hatch	24VIF	24VItoFrontVEC	45	UpperFanSig

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
45A	PassengerHeatSig	64A	Blinker	79	GndServiceBrake
46	FrontFlasherRh	65	FootDamper	79A	DecelSignal
46A	VSS	65A	FootDamper	80	BrakeRedundant
47	DoorOpenSignal	65D	DriverCylinder	81	HeadLtCallSw1
47A	DoorOpenSignal	65P	Pass.Cylinder	82A	RELS
48A	DoorOpenSol	66	MarkersSigSw2	82B	CyclopeLamp
49	DoorCloseSignal	67	EvaporatorPwr	82Low	StopRearLowerLamp
49A	DoorCloseSol	67A	Condensor1stSpdSig	82UP	FrontTrailerStopSig
50	WitnessGndSig	68	DashDamper	82Up	TrailerStopSig
51	WitnessGnd	68A	DashDamper	83	24vAccessories
53	LowerWip.Spd1Sig	69	ElectricalHorn	84	StartSigSw83
53A	ElectricalHorn	69A	HornTogglesig	84A	StartSigSw83
53B	PneumaticHorn	70A	HatRackLighting	84B	StartSigSw83
53C	LowerWip.IntSig	70B	HatRackLighting	85	24VIgnition
53D	LowerWip.WasherSwSig	70C	HatRackLighting	85A	Ign-AccSignal
53E	LowerWiper1stSpd	70D	HatRackLighting	85B	Ign-AccSignal
53F	LowerWasherPump	70E	GndHatRackLamps	85C	PositionNormalSw58
53G	LowerWip1stSpd	70F	GndHatRackLamps	85D	RearStartPwr
53H	LowerWip.IntSig	70G	GndHatRackLamps	85E	RearStartSignal
55	LuggageLockSol	70H	GndHatRackLamps	85F	
55R	left/right_luggage_door_lock	70J	GndHatRackLamps	85G	Ign-AccSignal
57A	WaterPump	71	UpperDefrostPump	85X	24VIgn
57G	Pre-HeatWebasto	71A	DockingLtsLH	85Z	Trailer_Abs_Ind
57GA	Pre-HeattoWtrPmpRly	72A	DockingLtsRH	86	DefrostunitSpd
57H	Pre-HeattoWtrPmpRly	72B	Sun_Visor	86Rtn	GndDefrostUnit
57L	Hi-Beam	72C	Sun_Visor	87	Park_Brake
57R	High_Beam	73	HostessChimePwr	88	TransducerPwr
57Rtn	SignalRtnHeadLtsLH	73A	RearOccupiedSig	89	DriverSensorSig
58L	LowBeam	73B	RearOccupiedSig	90H	24VtoEvap
58R	Low_Beam	74	ReadingLampSig	90H1	Evaporator
58Rtn	Lamp_Module_Gnd	74A		90H1H	SuppressingDiode
59	Hi/LowBeamSignal	74B		91	Park_brake_signal
60	FogsLtsSwSig	74C	ReadingLamp	91B	WitnessSigSw14
61	HeadLtsSig	74D		92	TrailerParkBrakeSig
62	FrontOccupiedLts	75	ReadingLampsRH	95	DockingLTswSig
62B	LavatoryLts	75A	ReadingLampsLH	96	CorneringLTswSig
63	ClearanceLts	76	FuelLevelSig	99	Sw20Gnd
63A	FrontClearanceLts	76C	GndFuelsender	00A1	GndElectronic
63AA	ClearanceLts	77	TransducerHi-Side	0B1	GndEnginePreheater
63B	ClearanceLts	77B	PassandPRackLiquidValve	00B1	GndEng.Start
63BB	ClearanceLts	77BA	A/Cclutch	0G1	Galley
63C	CtrlHeadBacklight	77C	PassandPRackLiquidValve	0P2	Inverter_Gnd
64	EmergencyLampsSig	78	StopLightSensorSig	0V1	LuggageDoorOpenSig

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
OV2	LuggageDoorOpenSig	126B	KneelingDownSwSig	139	Transmission
OV3	LuggageDoorOpenSig	126F	KneelingDownSol	140	Transmission
OY2	GndChassisABSSol	126G	KneelingUpSol	141	Transmission
OY3	GndChassisABSSol	126H	KneelingCtrl.Sol	142	ABSSolenoid
100	IndirectLights	126J	KneelingHi-BuoySol	143	ABSSensor
100A	IndirectLight	126JR	GndKneeling	143A	ABSSensor
100B	IndirectLightLH	126P	KneelingBuzzer	144	ABSSensor
100C	IndirectLightsSig	127	Transmission	144A	ABSSensor
100D		127D	BattCharger	145	ABSSolenoid
101	Starter_Power	128	Pre-HeatStatus	146	ABSSolenoid
101A	Starter	128B	Pre-HeatTTLT	147	ABSSolenoid
101B	Starter	129	Sun_visor	148	Transmission
102	Alternator_Power	130	Sun_visor	149	Transmission
102A	Alternator	131	Transmission	149A	ABSSensor
103	LowBuoySig	133	Transmission	150	Transmission
104	Pwrl_Shift	133A	Galley	151	GndtoEcm
105	Fog_Light	133B	Galley	151A	GndtoEcm
105A	Fog_Light	133C	Galley	151B	GndtoEcm
105ARtn	Fog_Light_Gnd	134	Galley	151C	GndtoEcm
105Rtn	Fog	134A	Galley	151D	CoolantLevelGround
106	Fog_Light	134B	Galley	152	Transmission
106A	Fog_Light	135	Transmission	153	12VtoABS
106Rtn	Fog_Light_gnd	135A	Transmission	154	Transmission
107	Pwrl_Shift	136	Transmission	155	Transmission
108	Pwr_Trans_IShift	136A	TransmissionPwr	156A	12VtoABS
109	Cmd_Ground	136AA	ShifterSignal	157D	ATCSignal
110	12VD_IShift	136C	Galley	159	Transmission
111	Transmission	137	Transmission	160	TagSignal
114	DriverLt	137A	MirrorPwrSig	163A	Retarder
114A	Backlight	137B	Mirrors	163B	RetarderEnable
115	Transmission	137C	Mirrors	164	HandLevelSig
115A	WitnessPwr	137D	Mirrors	166	WitnessSigSw16
115W	Check_Transmission	137E	Mirrors	167	ACB
116	DriverLiq	137F	Mirrors	168	ACB
116A	DriverLiq	137H	Mirrors	170C	left/right_luggage_door_lock
118	Transmission	137J	Mirrors	170E	LuggageLockSwSig
119	Transmission	137K	Mirrors	170H	LuggageUnlockSol
120	Transmission	137L	RAMCOMIRROR	170HR	left/right_luggage_door_lock
122	DigitalClock	137M	Mirrors	171	LuggageUnlockSwSig
123	Flame_Detection_Signal	137N	RAMCOMIRRORLED	174	Transmission
124A	Transmission	137P	MIRRORLED	175	Transmission
125	Retarder_active	138	Transmission	175C	TagUnload
126A	KneelingUpSwSig	138A	ABSSensor	176	Transmission

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
177	Transmission	308	WCL	516	UreaSystem
180	Transmission	309	WCL	517	UreaSystem
181	PassengerSensor	311	WCL_Power	518	UreaSystem
185	TransmissionInhibitSig	311A	WCL	519	UreaSystem
197	FuelFilterSig	313	WCL	520	UreaSystem
201	Headlampcleaningsignal	314		521	UreaSystem
202	headlampcleaningpump	341	PowerProtectionPanel	522	UreaSystem
225	LavatoryFan	342	FireExting.Gnd	523	UreaSystem
225R		343	Fire-EngineStopTTL	524C	IdleValidationSig
231	Neutral	343A	Cut_Off_Preheater	525	UreaSystem
231A	Crank_Signal	344	ExtinguisherSignal	526	UreaSystem
240A	PowertoEcm	345	ManualSignal	526A	UreaSystem
240B		346	PowerSensors	526B	UreaSystem
241A	PowertoEcm	347	FireSignal	526C	UreaSystem
241B	24VoltIgnition	348	PowerManualSignal	527	UreaSystem
241C	WaterInFuelHeater	351	EngineShout-downSignal	528	UreaSystem
253	Galley	352	OverrideSignal	530	UreaSystem
253A	Galley	360	ClusterKeypad	531	UreaSystem
253j	SWinverter	361	ClusterKeypad	532	UreaSystem
254	Galley	362	ClusterKeypad	541	Cruise_Decelerate
254F	Galley	363	ClusterKeypad	544	CruiseOn_OffSignal
255	Galley	364	Trans.FrontAirBrake	544A	CruiseOn-OffLed
255B	Galley	365	Trans.FrontAirBrake	545	Cruise_Resume
255BA	Galley	366	Trans.RearAirBrake	583	EngineBrakeB
260	WindowAjarSig	367	Trans.RearAirBrake	600	ABSSensor
290	GndFanClutch	368	AirAccPressureSig	600A	ABSSensor
290A	GndFanClutch	369	AirAccPressureSig	601	ABSSensor
290Rtn	GndMarkersandStopLts	417	ThrottlePositionSignal	601A	ABSSensor
291	FanClutch	439	12VtoABS	602	ABSSteering&Yawsensor
291Rtn	GndMarkersandStopLts	439G	GateWay	603	ABSSteering&Yawsensor
292	FanClutch	485A	Dest_sign	604	ABSSteering&Yawsensor
300	WCLTopLightSliding	485B	Dest_sign	605	ABSSteering&Yawsensor
301	WheelChairLiftSwitch	500	Ground/Supply_Detroit/Volvo	606	ABSPressuresensor
302	WCLRicon	501		607	ABSPressuresensor
302A	WCLSlidingdoorSig	502	IVSOOut	608	ABSPressuresensor
303	WCLRicon	505	UreaSystem	610	ABSPressuresensor
304	WheelChairLift	506	UreaSystem	611	AbsTagSolenoid
304A	WCL	507	UreaSystem	612	AbsTagSolenoid
305	ParkBrakeSol	510	FastIdleSignal	613	AbsTagSolenoid
305A	WCLUpperDoorSignal	511	UreaSystem	614	ABSSteeringSolenoid
306	WCLTopLights	512	UreaSystem	614A	ABSSteeringSolenoid
307	WCLPower	513	UreaSystem	615	ABStrailersolenoid
307A	WCL	515	GroundPreheaterRelay	616	ABStrailersolenoid

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
617	ABTrailersolenoid	BlkRR	TPMS	G	HandLever
618	HillStartAssistSignal	Blue	Audio	GndA	ComputerSignals
618Rtn	HillStartAssistGnd	Bref1	PassengerSensor	GREEN	120VACOUTLET
900	J1587	Bref2	PassengerSensor	Green	USB
901	J1587	C	HandLever	Green/White	USB
910	L_SPEAKER_HARNESS	CAN2-H	EngineCan2	GRN1	VSS
911	EmergencyCutoutRlySignal	CAN2-L	EngineCan2	GRN2	VSS
916	5VSensorPwr	CAN2H	DPFVolvo	H	HandLever
952	GndSensorRtn	Can2H	Can2	HOSTESS	HostessPwr
953	Electronic_ground_DDEC_VI	CAN2L	DPFVolvo	J1939H	J1939
979	EngineBrakeA	Can2L	Can2	J1939L	J1939
A	HandLever	CanH	CanHSignal	J1939PH	J1939Prop
AMP	VSS	CanH1	Spare	J1939PL	J1939Prop
ANT	VSS	CanL	CanLSignal	KneeLevel	KneelingLevel
AuxVideoGnd	VSS	CanL1	Spare	KneeRef	KneelingLevel
AuxVideoL	VSS	Cd1	ComputerSignals	L+	VSS
AuxVideoR	VSS	Chgr	BattCharger	L+TV	VSS
B	HandLever	COM	Destination_Sign	L-	VSS
B1A	DirectLighting	com	Destination_Sign	LF+	L_SPEAKER_HARNESS
B1B	DirectLighting	CTS	MCMInterface	LF+LL	VSS
B2A	DirectLighting	Cts	ComputerSignals	LF-	VSS
B2B	DirectLighting	D	HandLever	LF-LL	VSS
B3A	DirectLighting	d	BattCharger	LightGreen	USB
B3B	DirectLighting	D1	UpperWiperMotor	LIN	Steering
B4A	DirectLighting	DBusH	DBusSignal	LR+	VSS
B4B	DirectLighting	DBusL	DBusSignal	LR+HS	VSS
B5A	DirectLighting	Down	cluster	LR-	VSS
B5B	DirectLighting	Drain	Audio	LR-HS	VSS
B6A	DirectLighting	DSL+++	VSS	MUTE	VSS
B6B	DirectLighting	DSL---	VSS	N1	A41Adress
B7A	DirectLighting	DSR+++	VSS	N2	A41Adress
B7B	DirectLighting	DSR---	VSS	N3	A42Adress
BB2H	Can2	DVD_GND	VSS	N4	A42Adress
BB2L	Can2	DVD_Gnd	VSS	N5	A43Adress
BKK1	VSS	DVD_L+	VSS	N6	A43Adress
BLACK	Starter_Volvo	DVD_R+	VSS	N7	A44Adress
Black	USB_Gnd	E	HandLever	N8	A44Adress
Black1		e	BattCharger	N9	A45Adress
Black2		Escape	cluster	N10	A45Adress
BLK1	VSS	F	HandLever	N11	A46Adress
BLK2	VSS	f	BattCharger	N12	A46Adress
BlkFR	TPMS	FAKE	L_SPEAKER_HARNESS	N13	A47Adress
BlkRL	TPMS	FAKE1	R_SPEAKER_HARNESS	N14	A47Adress

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
N15	A48Address	Radio_R+	VSS	SL1113	L_SPEAKER_HARNESS
N16	A48Address	RED	Starter_volvo	SL1214	L_SPEAKER_HARNESS
N17	A49Address	Red	USB	SL1315	L_SPEAKER_HARNESS
N18	A49Address	RED1	VSS	SL1416	L_SPEAKER_HARNESS
N19	A50Address	Red1		sp52	EvaporatorEngageSig
N20	A50Address	RED2	VSS	spare2	SparesFr-to-RearHarness
N21	A51Address	Red2		spare3	SWinverter
N22	A51Address	RedFR	TPMS	spare4	SparesEvap.Harness
N23	A52Address	RedRL	TPMS	spare5	SparesEvap.Harness
N24	A52Address	RedRR	TPMS	spare6	SparesEvap.Harness
N25	A53Address	Ref2	GndPassengerSensor	spare7	SparesEvap.Harness
N26	A53Address	RF+	VSS	spare8	SparesEvap.Harness
N27	A54Address	RF+LL	VSS	spare9	SparesEvap.Harness
N28	A54Address	RF-	VSS	spare10	SparesInteriorLtsHarness
N29	A36Address	RF-LL	VSS	spare11	SparesInteriorLtsHarness
N30	A55_Address	RR	Ext_Speaker	spare12	SparesInteriorHarness
N31	A55_Address	RR+	VSS	spare13	SparesInteriorHarness
NETWORK1		RR+HS	VSS	spare14	SparesInteriorHarness
NETWORK2		RR-	VSS	spare15	SparesInteriorHarness
OFA6	POWER_CAPTAIN_CHAIR	RR-HS	VSS	spare16	SparesInteriorHarness
OFB1	RAMCOMIRROR	RTS	MCMInterface	spare17	FrontTrailerMarkers
OFB2	GndFanRoof1	Rts	ComputerSignals	spare18	FrontTrailerFlashRH
OFB2-D	GndFanRoof2	RX	TPMS	spare19	FrontTrailerFlashLH
OFB3	GND_TPMS	RxD	ComputerSignals	spare20	SparesClearanceLts
OP1	POWER_CAPTAIN_CHAIR	RxTx	MCMInterface	spare21	SparesClearanceLts
OP2	POWER_CAPTAIN_CHAIR	SE1	Ext_Speaker	spare22	SparesClearanceLts
OP3	POWER_CAPTAIN_CHAIR	Select	cluster	spare23	SparesClearanceLts
OP4	POWER_CAPTAIN_CHAIR	SH1	I_ShiftGearLevelSignal	spare24	SparesClearanceLts
OP12VI	POWER_CAPTAIN_CHAIR	SH2	I_ShiftGearLevelSignal	spare25	SparesClearanceLts
OPR1	GndDestinationSign	SH3	I_ShiftGearLevelSignal	spare32	SparesFrontHarness
OPST	Strobe	SH4	I_ShiftGearLevelSignal	spare33	SparesFrontHarness
OR	TagUnloadValve	SH5	I_ShiftGearLevelSignal	spare39	SparesDash
ORB4	TagUnload	SH6	I_ShiftGearLevelSignal	spare40	SparesDash
Pink	USB	SH7	I_ShiftGearLevelSignal	spare41	SparesDash
PP1	InverterPwr	SH8	I_ShiftGearLevelSignal	spare42	SparesDash
R+	VSS	SHL2	VSS	spare43	SparesDash
R+TV	VSS	SL13	L_SPEAKER_HARNESS	spare44	SparesDash
R-	VSS	SL24	L_SPEAKER_HARNESS	spare45	SparesFr-to-RearHarness
RadioAudioGnd	VSS	SL35	L_SPEAKER_HARNESS	spare46	SparesFr-to-RearHarness
RadioL+	VSS	SL46	L_SPEAKER_HARNESS	spare49	SparesEngineCradle
RadioR+	VSS	SL57	L_SPEAKER_HARNESS	spare50	SparesEngineCradle
Radio_Gnd	VSS	SL68	L_SPEAKER_HARNESS	spare51	SparesEngineCradle
Radio_L+	VSS	SL1012	L_SPEAKER_HARNESS	spare52	SparesEngineCradle

CIRCUITS LIST

CircuitID	Description	CircuitID	Description		
spare53	SparesEngineCradle	TrigPA	VSS		
spare54	SparesEngineCradle	TrigPaDr	VSS		
spare55	SparesEnginesAccessories	TrigTv	VSS		
spare56	SparesEnginesAccessories	TvGnd	VSS		
spare57	SparesEnginesAccessories	TV_GND	VSS		
spare58	SparesEnginesAccessories	TV_L+	VSS		
spare59	SparesEnginesAccessories	TV_R+	VSS		
spare60	SparesEnginesAccessories	TX	TPMS		
spare61	SparesEnginesAccessories	TxD	MCMInterface		
spare62	spareABSHarness	Up	cluster		
spare63	spareABSHarness	VI11	12V_Sup		
spare64	SapreTransmission	VI14	Galley		
spare65	SparesTransmission	WC2	WCLRemoteCtrl		
spWcl1	SpareWCL	WC3	WCLRemoteCtrl		
spWcl2	SpareWCL	WC4	WCLRemoteCtrl		
SR13	FR_SPEAKER_HARNESS_	WC6	WCLRemoteCtrl		
SR24	FR_SPEAKER_HARNESS_	WC7	WCL		
SR35	FR_SPEAKER_HARNESS_	WHITE	120VACOUTLET		
SR46	FR_SPEAKER_HARNESS_	White	USB		
SR57	FR_SPEAKER_HARNESS_	WHT1	VSS		
SR68	FR_SPEAKER_HARNESS_	WHT2	VSS		
SR911	R_SPEAKER_HARNESS_WCL	WhtFR	dataTPMS		
SR1012	R_SPEAKER_HARNESS_WCL	WhtRL	dataTPMS		
SR1113	R_SPEAKER_HARNESS_WCL	WhtRR	dataTPMS		
SR1214	R_SPEAKER_HARNESS_WCL	Y1A	DirectLighting		
SR1315	R_SPEAKER_HARNESS_WCL	Y1B	DirectLighting		
SR1416	R_SPEAKER_HARNESS_WCL	Y2A	DirectLighting		
STO_LOC		Y2B	DirectLighting		
Sub1+	VSS	Y3A	DirectLighting		
Sub1-	VSS	Y3B	DirectLighting		
Sub2+	VSS	Y4A	DirectLighting		
Sub2-	VSS	Y4B	DirectLighting		
SubH	Subnet	Y5A	DirectLighting		
SubL	Subnet	Y5B	DirectLighting		
TEST	TestLampOption	Y6A	DirectLighting		
TEST1	SOUND_SYSTEM	Y6B	DirectLighting		
Test1	SOUND_SYSTEM	Y7A	DirectLighting		
Test1a	SOUND_SYSTEM	Y7B	DirectLighting		
Test1B	SOUND_SYSTEM	zf1	SteeringCtrl		
TrigCam	VSS	zf2	SteeringCtrl		
TrigDVD	VSS				
TrigDvd	VSS				
TrigNav	VSS				