

# FUSES LIST

| No  | Location                 | Part # | Function                      | Rating | Page |
|-----|--------------------------|--------|-------------------------------|--------|------|
| F1  | FuseBoxFJB               | 563279 | CecmPower                     | 3amp   | 4.1  |
| F2  | FuseBoxFJB               | 563279 | FrontStartMainSwitch          | 3amp   | 4.1  |
| F3  | FuseBoxFJB               | 563279 | EnginePre-HeatH.W.+DrvLiq.Vlv | 3amp   | 4.1  |
| F4  | FuseBoxFJB               | 563280 | *opt*                         | 5Amp   | 4.1  |
| F5  | FuseBoxFJB               | 563165 | 24vtoWUp                      | 30amp  | 4.1  |
| F6  | FuseBoxFJB               | 563005 | Custumer24VD                  | 7.5amp | 4.1  |
| F7  | FuseBoxFJB               | 563279 | Abs+PreHeatController         | 3amp   | 4.1  |
| F8  | FuseBoxFJB               | 563279 | AirHorn                       | 3amp   | 4.1  |
| F9  | FuseBoxFJB               | 563284 | SpareFuse                     | 15amp  | 4.1  |
| F10 | FuseBoxFJB               | 563279 | SpareFuse                     | 3amp   | 4.1  |
| F11 | FuseBoxFJB               | 563279 | SunVisor                      | 3amp   | 4.1  |
| F12 | FuseBoxFJB               | 563282 | PwrMuxModule                  | 20amp  | 4.1  |
| F13 | FuseBoxFJB               | 563282 | PwrMuxModule                  | 20amp  | 4.1  |
| F14 | FuseBoxFJB               | 563284 | Custumer                      | 15amp  | 4.1  |
| F15 | FuseBoxFJB               | 563004 | *opt*                         | 2Amp   | 4.1  |
| F16 | FuseBoxFJB               | 563153 | DefrosterUnit                 | 25Amp  | 4.1  |
| F17 | FuseBoxFJB               | 563280 | DestinationSign               | 5Amp   | 4.1  |
| F18 | FuseBoxFJB               | 563284 | UpperWiper                    | 15amp  | 4.1  |
| F19 | FuseBoxFJB               | 563279 | Prodriver                     | 3amp   | 4.1  |
| F20 | FuseBoxFJB               | 563005 | *opt*                         | 7.5amp | 4.1  |
| F21 | FuseBoxFJB               | 563282 | PwrMuxA44                     | 20amp  | 4.1  |
| F22 | FuseBoxFJB               | 563279 | SteeringCtrl                  | 3amp   | 4.1  |
| F23 | FuseBoxFJB               | 563165 | ABS                           | 30amp  | 4.1  |
| F24 | FuseBoxFJB               | 563005 | Mirror                        | 7.5amp | 4.1  |
| F25 | FuseBoxFJB               | 563280 | BackupCamera                  | 5Amp   | 4.1  |
| F26 | FuseBoxFJB               | 563279 | SpareFuse                     | 3amp   | 4.1  |
| F27 | FuseBoxFJB               | 563284 | Custumer                      | 15amp  | 4.1  |
| F28 | FuseBoxFJB               | 563282 | DriverWindow                  | 20amp  | 4.1  |
| F29 | FuseBoxFJB               | 563279 | ClusterandDDDR                | 3amp   | 4.1  |
| F30 | FuseBoxFJB               | 563284 | PwrOutletandCigarLighter      | 15amp  | 4.1  |
| F31 | FuseBoxFJB               | 563279 | KeylessModule                 | 3amp   | 4.1  |
| F32 | FuseBoxFJB               | 563282 | SpareFuse                     | 20amp  | 4.1  |
| F33 | FuseBoxFJB               | 563165 | 12VDtoWakeUp                  | 30amp  | 4.1  |
| F34 | FuseBoxFJB               | 563165 | *opt*                         | 30amp  | 4.1  |
| F35 | FuseBoxFJB               | 563283 | 12vPwrOutlet                  | 10amp  | 4.1  |
| F36 | FuseBoxFJB               | 563279 | PwrHvacandTTItModule          | 3amp   | 4.1  |
| F37 | FuseBoxFJB               | 563283 | Flipdownscreen                | 10amp  | 4.1  |
| F38 | FuseBoxFJB               | 563283 | SpareFuse                     | 10amp  | 4.1  |
| F39 | FuseBoxFJB               | 563283 | SpareFuse                     | 10amp  | 4.1  |
| F40 | FuseBoxFJB               | 563283 | SpareFuse                     | 15amp  | 4.1  |
| F41 | FuseBoxFJB               | 563283 | SpareFuse                     | 10amp  | 4.1  |
| F42 | FuseBoxFJB               | 563283 | Transmission_I_Shift          | 10amp  | 4.1  |
| F42 | Parcel_Rack_LH_1st_Cmpt_ | 562604 | VSS                           | 15Amp  | 35.6 |

# FUSES LIST

| No  | Location                 | Part # | Function               | Rating | Page |
|-----|--------------------------|--------|------------------------|--------|------|
| F43 | FuseBoxFJB               | 563282 | Transmission_I_Shift   | 20amp  | 4.1  |
| F44 | FJB                      | 560599 | FuseDestinationSign    | 5Amp   | 3.3  |
| F45 | FJB                      | 562604 | FireProtectionSyst.    | 15Amp  | 3.3  |
| F46 | Parcel_Rack_LH_1st_Cmpt_ | 562604 | VSS                    | 15Amp  | 35.6 |
| F50 | FuseBoxRJB               | 563284 | EnginePre-Heat         | 15amp  | 5.1  |
| F51 | FuseBoxRJB               | 563153 | EnginePre-Heat         | 25Amp  | 5.1  |
| F52 | FuseBoxRJB               | 563284 | SpareFuse              | 15amp  | 5.1  |
| F53 | FuseBoxRJB               | 563284 | PwrMuxA54              | 15amp  | 5.1  |
| F54 | FuseBoxRJB               | 563284 | Customer               | 25amp  | 5.1  |
| F55 | FuseBoxRJB               | 563283 | EmergencyLts           | 10amp  | 5.1  |
| F56 | FuseBoxRJB               | 563282 | IndirectLightingLH     | 20amp  | 5.1  |
| F57 | FuseBoxRJB               | 563283 | IndirectLightingRH     | 10amp  | 5.1  |
| F58 | FuseBoxRJB               | 563283 | DirectLightingLH       | 20amp  | 5.1  |
| F59 | FuseBoxRJB               | 563283 | DirectLightingRH       | 10amp  | 5.1  |
| F60 | FuseBoxRJB               | 563282 | ReadingLampRH          | 20amp  | 5.1  |
| F61 | FuseBoxRJB               | 563282 | ReadingLampLH          | 20amp  | 5.1  |
| F62 | FuseBoxRJB               | 563283 | LavatoryNightLight     | 10amp  | 5.1  |
| F63 | FuseBoxRJB               | 563283 | EnginePre-Heat         | 10amp  | 5.1  |
| F64 | FuseBoxRJB               | 563283 | Spare                  | 10amp  | 5.1  |
| F65 | FuseBoxRJB               | 563165 | PwrMuxModuleRJB        | 30amp  | 5.1  |
| F66 | FuseBoxRJB               | 563279 | RadiatorFanClutch      | 3amp   | 5.1  |
| F67 | FuseBoxRJB               | 563153 | PwrMuxA54              | 25Amp  | 5.1  |
| F68 | FuseBoxRJB               | 563153 | PwmMuxA54              | 25Amp  | 5.1  |
| F69 | FuseBoxRJB               | 563005 | HatRackLightingLHandRH | 3amp   | 5.1  |
| F70 | FuseBoxRJB               | 563005 | Customer24Vl           | 7.5amp | 5.1  |
| F71 | FuseBoxRJB               | 563284 | SpareFuse              | 15amp  | 5.1  |
| F72 | FuseBoxRJB               | 563153 | PwrMuxA50              | 25Amp  | 5.1  |
| F73 | FuseBoxRJB               | 563282 | SpareFuse              | 20amp  | 5.1  |
| F74 | FuseBoxRJB               | 563283 | EcuEngineIgnition      | 10amp  | 5.1  |
| F75 | FuseBoxRJB               | 563283 | EcuTransmissionIgn     | 10amp  | 5.1  |
| F76 | FuseBoxRJB               | 563283 | Customer               | 10amp  | 5.1  |
| F77 | FuseBoxRJB               | 563283 | EcuTransmissionWakeUp  | 10amp  | 5.1  |
| F78 | FuseBoxRJB               | 563284 | EcuEngineWakeUp        | 15amp  | 5.1  |
| F79 | FuseBoxRJB               | 563284 | EcuEngineWakeUp        | 15amp  | 5.1  |
| F80 | FuseBoxRJB               | 563284 | PwrMuxA51              | 15amp  | 5.1  |
| F81 | FuseBoxRJB               | 563004 | PwrOfRearSwitchBox     | 2Amp   | 5.1  |
| F83 | FuseBoxFJB               | 563005 | SoundSystem            | 10amp  | 4.1  |
| F84 | FuseBoxFJB               | 563284 | Customer               | 15amp  | 4.1  |
| F85 | FuseBoxRJB               | 563283 | SpareFuse              | 10amp  | 5.1  |
| F86 | FuseBoxRJB               | 563283 | SpareFuse              | 10amp  | 5.1  |
| F87 | FuseBoxRJB               | 563283 | SpareFuse              | 20amp  | 5.1  |
| F88 | FuseBoxRJB               | 563283 | SpareFuse              | 20amp  | 5.1  |
| F89 | FuseBoxRJB               | 563284 | SpareFuse              | 20amp  | 5.1  |

