


# Ground Distribution

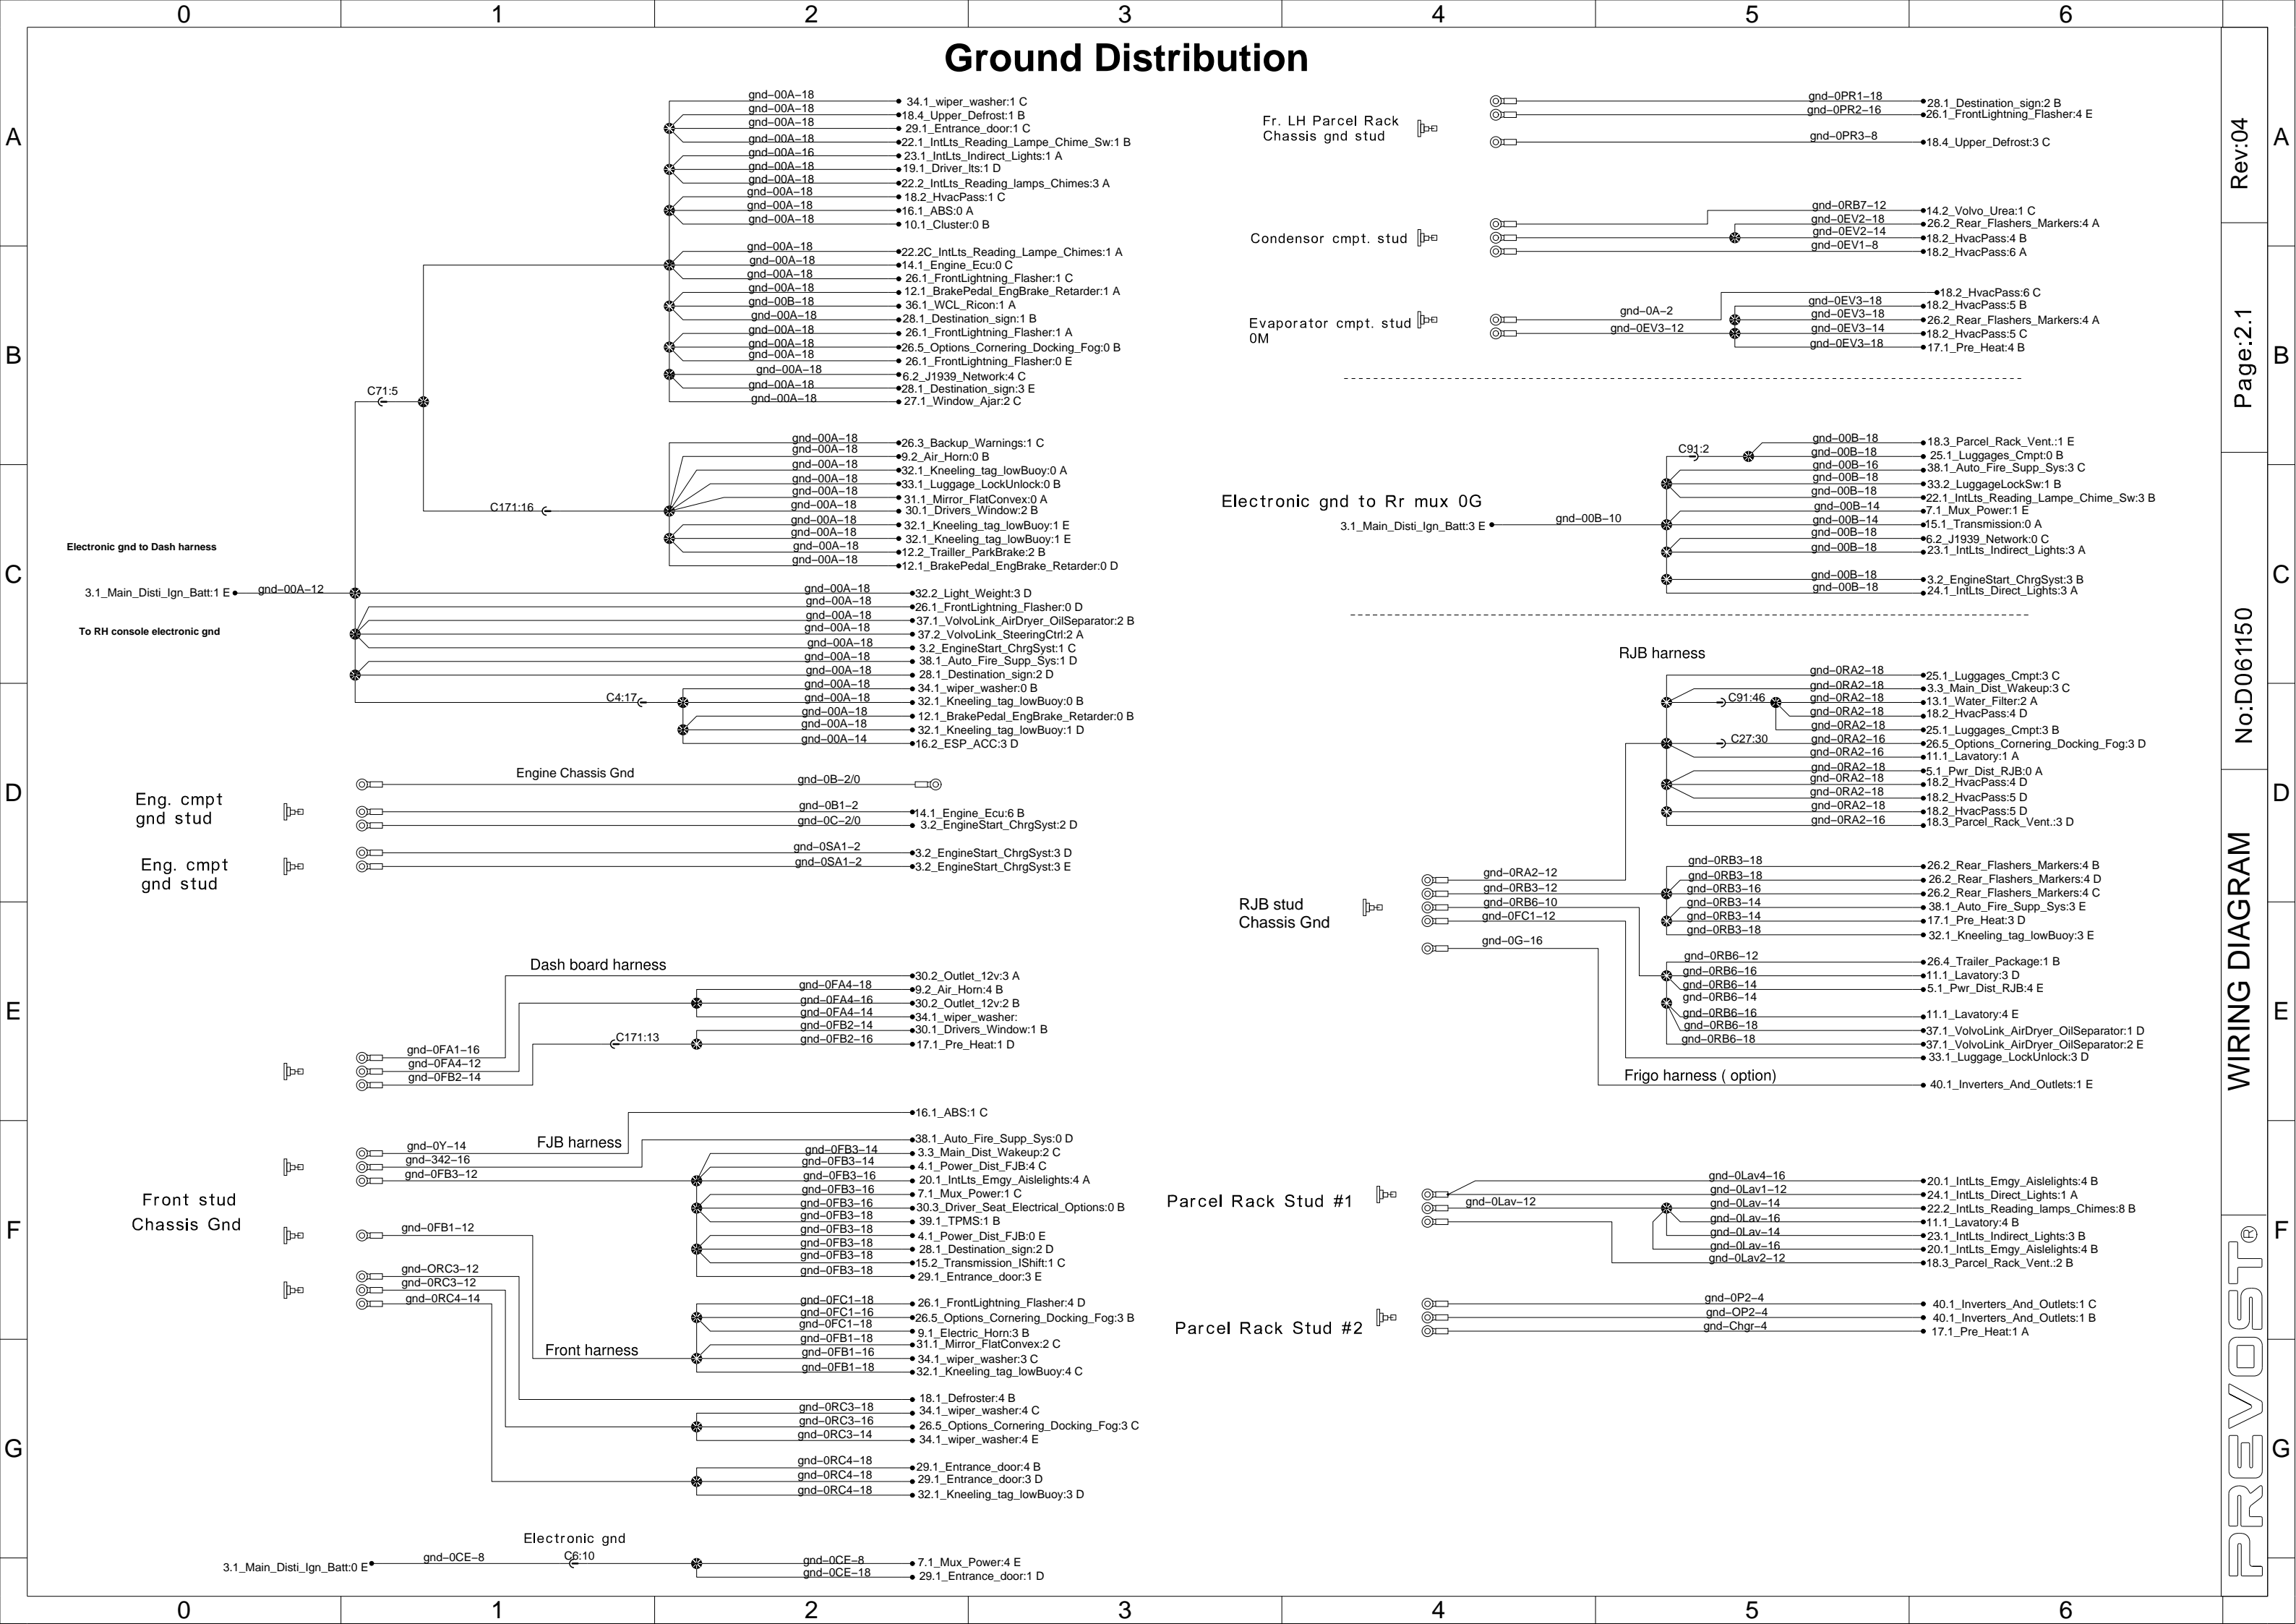

Rev:04

Page:2.1

No:D061150

WIRING DIAGRAM

PREVOST®