

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
0	WCLRemoteCtrl	0FB2	GndDriverWdo	0WC	WCLRemoteCtrl
0	GroundIVNandMotorola	0FB3	GndMasterID	0WE	GND_weight
1	CommuterOption	0FC!	IndirectLightsGnd	0WR	GND_weight
2	JumperSpeaker	0FC1	Lugg_Door_Gnd	0Y	GndSignal
2A		0FC2	DirectLightSwSig	0lav	wclextraswitch
2B	CondensorLow	0FC3	GndSw25	10	LuggageCmpt.LtsPwr
2mph	PowerEntranceDoor	0FC4	ElectricalHorn	10A	LuggageCmpt.LtsPwr
3	DoorLatchSig	0FDS	Driver_seat_optional	10R	LuggageDoorOpenSig
4A	HostessChimeSig	0FE	Gnd_AFSS	11	DestinationSignPwr
4C	HostessChimeSig	0G	gndIO-BA54	12A	12VtoR3
4c	wcl_extra_switch	0GF1	Refrigerator_Option	12Ecu	12vEngineEcu
4CWcl	HostessChimeSig	0H	GroundCoolantSensor	12H	Dest_Sign
5	EmergandAisleLampsPwr	0OIS	Gnd_IShift	12ISH	Pwrl_Shift
5A	UpperDefrostfan	0LAV	IndirectLightsGnd	12SS	12VDirect
5B	UpperDefrostfan	0Lav	GndReadingLamps	12SS1	12VMotorola
5BPI	BrakeInterlock	0LAV1	IndirectLightsPwr	12SS2	12VMotorola
5C	UpperDefrostfan	0Lav1	GndDirectLights	12VA	12vEqualizer
5vKnee	KneelingLevel	0Lav2	PRackChassisGnd	12VD	12VD_Battery
5WE	Power5V_weight	0Lav4	GndAisleLampsLH	12VD1	12VDFrontWake-up
5WR	Power5V_weight	0PR1	GndDestinationSign	12VD3	12vRearwake-up
6	GndWitnessSw24	0PR2	Gnd_Fr_Clearance_Lts	12VD4	12vEngineEcu
7	GndDriverSensor	0PR3	UpperDefrosterGnd	12VDCust	12VD Castomer
8	GndParkBrakeSol	0RA2	GndR1-R3	12VDF	12VDtoFrontVec
9A	EngineDoorOpenSig	0RA3	DiodetoR1	12VDG	12VDGLI
9B	EngineCmpt.Lt	0RB3	Gnd_Fire_Exting	12VDG1	12vFuseBox3
0A	EvaporatorMain	0RB5	GndPre-Heat	12VDG1A	12vGLI
00A	GndElectronic	0RB6	RJB_Chassis_Gnd	12VDG2	12vFuseBox3
0B	EngineChassisGnd	0RB7	GndToEcm	12VDG3	12vFuseBox3
00B	ElectronicGndofMuxModules	0RB8	GndtoACM	12VDG4	12vFuseBox3
0BB	SensorGnd	0RB8A	GndtoACM	12VI	12VIttoCB10
0BF	GND_Preheater_Fuel_Filter	0RB8B	GND_to_ACM	12VI1	12VlofA44
0BPI	BrakeInterlock	0RC2	GndDefrostUnit	12VI2	Preheater_Fuel_Filter_PWR
0C	GndStarter	0RC3	GndR23	12VI3	PwrOutletDrawer
0CE	Gnd	0RC4	GndEntranceLights	12VI4	PwrOutletandCigarLighter
0CG	Batteries_Chassis_Gnd	0SA1	ChassisGnd	12VI5	12VIttoVECR
0EV1	CondensorGnd	0SB	GndSeatBelt	12VI6	PwrtoModuleA50
0EV2	GndFlashersandMarkersCenter	0SB1	SeatBeltSig	12VI7	Lugg_Door_Lock
0EV3	gnd	0SS	ChassisGND	12VI8	Lugg_Door_Lock
0F	FJBDoorOpenSig	0SS2W	wifi_gnd	12VI9	TiremonitoringPwr
0FA1	GndofAccessoires	0V	LuggageDoorOpenSig	12VI10	MirrorPwr
0FA4	GndPwrOutlet	0VE	GndEqualizer	12VICust	12VICustomer
0FB1	ChassisGnd	0W	WCLGnd		

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
12VIF	12VtoFrontVec	24EE2	24VI_To_CB	24VIA	Cut-outPneumaticAcc
12VIF19	PowerOBDconn	24ISH	12VIgnShift	24VICust	24VICustomer
12VIG	12VIGLI	24IZ	24VII_Shift	24VIDVR	DVR
12VIG1	12vFuseBox4	24SS	24VIgnition	24VIF	24VtoFrontVEC
12VIG1A	12vGLI	24VA	24vEquilizer	24VIH1	Cut-outPneumaticAcc
12VIG2	12vFuseBox4	24VB	24VEnginePreheater	24VIS	12VIgnShift
12VIG3	12vFuseBox4	24VB1	24VEnginePreheater	24WC	WCL24VDPower
12VIG4	12VIGLI	24VB2	24VEnginePreheater	24WUp1	24WUp_To_A47_A48
12VIG5	12VIGLI	24VD	24VDEng.Start	24Wup1	24WUp_Front
12VIZF	ZFsterringControl	24VD1	24VDtoRearVec	24Wup76	24WUpFront
12W	DoorUnlockSol	24VD2	24VDEng.StartSw83	24WupSS	24WUpFront
12WA	DoorFullOpenSig	24VD3	24VDofCECM	25	EngineRunSignal
12WUp1	12VWUptoA48	24VD4	24VDFrontWake-up	25A1	ExcitationSignal
12Wup1	12WUpFront	24VD5	24VDtoPre-Heat	25A2	ExcitationSignal
12Wup1a	12WUpFront	24VD5A	24VDtoPre-Heat	25A4	BatteryNotChargingSig
12Wup2	12WUptoDash	24VD6	24VDPre-Heat	26	DriverWindoPwr
12Wup5	PwrtoModuleA51	24VD7	PassandPRackPwr	26A	DriverWdo
12Wup5	12Wup	24VD8	UreaPowerACM	26B	DriverWdo
13	SignalToPre-heatrelay	24VD8A	UreaPowerACM	27A	EmergencySwSig
14A	FlushingPumpSig	24VD8B	UreaPowerACM	29	TagAxleValveSig
15A	Flushing_pump	24VD10	Volvo_Link	30	GndTransducer
16	Speed_Signal	24VDCH	BattCharger	31	UnloaderRH
16B	PwrofSensorSpd	24VDCust	24VDCustomer	31B	WiperParkPwr
17	ReadingLampTest	24VDR4	AFSS	32A	TrailerLightsPackage
18	Wip.WasherLevel	24VDS	Driver_Seat_Power	32AA	BackupLtandalarm
20	Airdryer	24VFB	CommuterOption	32D	ReversesigtoBUpMonitor
21	FlasherLHSig	24VI	24VI	33	UnloaderLH
21A	FrontFlasher	24VI1	24VltoRearVec	34	ParkBrakeReleaseValve
21AA	FlashersRearLH	24VI2	24VltoSw1	35	EntranceDoorLights
21B	CorneringLtsLH	24VI4	SunVisor	35A	EntranceDoorLights
21C	ClearanceLts	24VI5	24VILogic	38	DirectLights
21D	ClearanceLts	24VI6	PwrtoDefrostUnit	38A	DirectLights
22	HazardSwSig	24VI7	LowerWiperPwr	38AA	Direct_Light_RH
23	FlasherRHSig	24VI8	24VltoMux	38BB	IndirectLightsPwr
23A	FrontFlasherRH	24VI9	24VltoA54	38C	Direct_Light
23AA	FrontFlasherRH	24VI9A	24VltoA54	39	DriverLtSwSig
23B	CorneringLtsRH	24VI9B	24VltoA54	39D	DriverLt
23C	ClearanceLts	24VI10	HatRackLampsPwr	40	WitnessGnd
23D	ClearanceLts	24VI12	Hat_Rack_Lamps_PWR	41	24VCondensor
24A	Booster_Block	24VI13	Volvo_Link	41A	CondensorPwr
24CO	PwrtoExcitationResistor	24VI14	CommuterOption	41A1	CondensorPwr
24D	24DtoCB6	24VI15	CommuterOption	41B	CondensorPwr
24EE1	24VD_Battery	24VI16	CommuterOption		

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
41Pwm	CondensorLow	59	Hi/LowBeamSignal	75A	ReadingLampsLH
42A1	CondensorPwr	60	FogsLtsSwSig	76	FuelLevelSig
42B	CondensorPwr	61	HeadLtsSig	76C	FuelGaugeWrn
43	PRackRH	62B	LavatoryLts	77	TransducerHi-Side
43F	WitnessGndSw27	63	ClearanceLts	77B	PassandPRackLiquidValve
43G	Parcel_Rack_Vent	63A	FrontClearanceLts	77BA	A/CClutch
44	P-RackLHFan	63B	ClearanceLts	77C	PassandPRackLiquidValve
45	Pre-HeatSigRly	64	EmergencyLampsSig	78	StopLightSensorSig
45A	PassengerHeatSig	64A	Blinker	78BA	Aux_Air_Cond
46	FrontFlasherRh	65	FootDamper	79	Gnd_Service_Brake
46A	FrontMarkers	65A	FootDamper	79A	StopLightSensorSig
46B	MarkersCenter	65D	DriverCylinder	80	BrakeRedundant
47	DoorOpenSignal	65P	Pass.Cylinder	81	HeadLtCallSw1
47A	DoorOpenSignal	66	MarkersSigSw2	82A	CyclopeSignal
48A	DoorOpenSol	67	EvaporatorPwr	82Low	StopRearLowerLamp
49	DoorCloseSignal	67A	Condensor1stSpdSig	82Up	TrailerLightsPackage
49A	DoorInsideSwCloseSig	68	DashDamper	83	24vAccessories
50	DriverHeatValve	68A	DashDamper	84	StartSigSw83
51	WitnessGnd	69	ElectricalHorn	84A	StartSigSw83
52	RJB_Spare52	69A	HornSignal	84B	StartSigSw83
52A	ElectricalHorn	70A	HatRackLighting	85	24VIgnition
53	LowerWip1stSpd	70B	HatRackLighting	85A	Ign-AccSignal
53B	LowerWip2ndSpd	70C	HatRackLighting	85B	Wake-upSig
53C	LowerWip.IntSig	70D	HatRackLighting	85BB	Ign-AccSignal
53D	Washer_ctrl	70E	HatRackLighting	85C	PositionNormalSw58
53E	LowerWiper1stSpd	70F	HatRackLighting	85D	RearStartPwr
53F	LowerWasherPump	70G	HatRackLighting	85E	RearStartSignal
53G	LowerWip1stSpd	70H	GndHatRackLamps	85F	EgnineStartPwr
53H	LowerWip.IntSig	70J	GndHatRackLamps	85G	DiodetoR1
53J	Washer_ctrl	72B	SunVisor	85X	24VIgn
55	Lugg_Door_Lock_Signal	72C	SunVisor	85Z	ABS_Trailer_Sig
57A	WaterPump	73	HostessChimePwr	86	DefrostunitSpd
57G	Pre-HeatWebasto	73A	RearOccupiedSig	86ARtn	EntranceCeilingLtGnd
57GA	Pre-HeattoWtrPmpRly	73B	RearOccupiedSig	86BRtn	Gnd
57H	Pre-HeattoWtrPmpRly	74	ReadingLamps	87	GndSignal
57L	Hi-Beam	74A	ReadingLampsRH	88	TransducerPwr
57R	HighBeamRH	74AB	Reading_Lamp_RH	89	DriverSensorSig
57Rtn	GndLowBeam	74B	ReadingLampsLH	90H	Evap_Rly_Power
58L	LowBeam	74C	ReadingLamp	90H1	EvaporatorMain
58R	LowBeam	74D	Reading_Lamp_Pwr	91	ParkBrakeSig
58Rtn	RetarderOffLight	75	wcl_extra_switch	91B	WitnessSigSw14

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
92	TrailerParkBrakeSig	119	Transmission	138	ABSSensor
93	TranducerLow-Side	120	Transmission	138A	ABSSensor
95A	DockingLTswSig	122	DigitalClock	139	ABSSolenoid
96A	CorneringLTswSig	123	123_Fire_Alarme_Signal	140	ABSSolenoid
98	BackupAlarmCancel	124	FireAlarm_Detector	141	ABSSolenoid
99	Sw20Gnd	124A	ShifterSignal	142	ABSSolenoid
00A1	GndElectronic	125	RetarderActiveLamp	143	ABSSensor
0B1	GndEnginePreheater	126A	KneelingUpSwSig	143A	ABSSensor
0I1	CommuterOption	126B	KneelingDownSwSig	144	ABSSensor
0I2	CommuterOption	126F	KneelingDownSol	144A	ABSSensor
0I3	CommuterOption	126G	KneelingUpSol	145	ABSSolenoid
0P2	Inverter_Gnd	126H	KneelingCtrl.Sol	146	ABSSolenoid
0V2	LuggageDoorOpenSig	126J	KneelingHi-BuoySol	146A	PwrtoModuleA50
0V3	LuggageDoorOpenSig	126JR	GndKneeling	147	ABSSolenoid
0Y2	GndChassisABSSol	126P	KneelingBuzzer	148	ABSSolenoid
0Y3	GndChassisABSSol	127	Pre-HeatSignal	149	ABSSensor
100	IndirectLight	127D	ChargerRlyGndSig	149A	ABSSensor
100A	IndirectLight	128	Pre-HeatStatus	150	Transmission
100B	IndirectLightLH	128B	Pre-HeatTTLT	151	GndtoEcm
100C	IndirectLightsSig	129	SunVisor	151A	GNDECM
100D	IndirectLight	130	SunVisor	151B	GNDECM
101	R1toStarter	131	Evaporator2ndSpd	151C	GNDECM
101A	StarterCtr	132	IndirectLights	152	ABSRearAtcSolenoid
101B	StarterCtr	133	Transmission	153	12VtoACC
102A	Alternator	135	Transmission	154	Transmission
103	LowBuoySig	135A	HandLevelSig	155	Transmission
104	PwrI_Shift	136	Transmission	156A	12VtoABS
105	FogLtsLH	136A	TransmissionPwr	157D	ATCSignal
106	FogLtRH	136AA	ShifterSignal	159	Transmission
107	PwrI_Shift	137	Transmission	160	TagSignal
108	PwrI_Shift	137A	MirrorPwrSig	163	Retarder_Sig
109	Cmd_Ground	137B	Mirrors	163A	RetarderSig
110	PwrI_Shift	137C	Mirrors	163B	Retarder_Sig
111	Transmission	137D	Mirrors	164	HandLevelSig
114	DriverLt	137E	Mirrors	166	WitnessSigSw16
114A	Backlight	137F	Mirrors	167	Aux.A/CLowPressSig
114AA	Backlight	137H	Mirrors	168	Aux.A/CHighPressSig
115	Transmission	137J	Mirrors	170	LuggageLock_UnlockSig
115A	WitnessPwr	137K	Mirrors	170A	Lugg_Door_Lock
115W	CheckTransSig	137L	Mirrors	170B	Lugg_Door_Lock
116	DriverLiq	137M	Mirrors	170D	Lugg_Door_Lock
116A	DriverLiq	137N	Mirrors	170E	Lugg_Door_Lock
118	Transmission	137P	Mirrors		

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
170F	Lugg_Door_Lock	303	WCLRicon	506	UreaSystem
170G	Lugg_Door_Lock	304	WheelChairLift	507	DeltaPSignals
170H	Lugg_Door_Lock_Signal	304A	WheelChairLift	510	FastIdleSignal
170Q	LuggageLock_UnlockSig	305	ParkBrakeSol	511	DPFVolvo
170R	LuggageLock_UnlockSig	305A	WCLUpperDoorSignal	512	DPFVolvo
170S	ElectronicGnd	306	WCLTopLights	513	DPFVolvo
170T	LuggageLock_UnlockSig	307	WCL	515	GroundPreheaterRelay
170U	LuggageLock_UnlockSig	308	WCL	516	DPFVolvo
170V	LuggageLock_UnlockSig	309	WCL	517	UreaSystem
170W	LuggageLock_UnlockSig	311	WCL	518	UreaSystem
170X	LuggageLock_UnlockSig	313	WCL	519	UreaSystem
170Y	Lugg_Door_Lock	314	WCL_Se62	520	UreaSystem
170Z	Lugg_Door_Lock	341	Pwr_AFSS_Sys	521	UreaSystem
171	LuggageUnlockSwSig	342	AFSS_Panel_Gnd	522	UreaSystem
174	Transmission	343	Fire-EngineStopTTL	523	UreaSystem
175	Transmission	343A	See_H3_Design	524C	IdleValidationSig
176	Transmission	344	ExtinguisherSignal	525	UreaSystem
177	Transmission	345	See_H3_Design	526	UreaSystem
180	Transmission	346	PowerSensors	526A	UreaSystem
181	PassengerSensor	347	Fire_Detect_Alarme	526B	DPFVolvo
185	TransmissionInhibitSig	348	See_H3_Design	526C	UreaSystem
188	AutomaticTagUnload	351	EngineShout-downSignal	526D	UreaSystem
197	FuelFilterSig	352	OverrideSignal	527	UreaSystem
201	headlampwashersignal	360	ClusterCtr	528	UreaSystem
202	Headlampwasherpump	361	ClusterCtr	530	UreaSystem
225	LavatoryFan	362	ClusterCtr	531	UreaSystem
231	NeutralSig	363	ClusterCtr	532	UreaSystem
231A	StarterRelay	364	Trans.RearAirBrake	541	CruiseSetSig
240A	ECMPOWER	365	Trans.RearAirBrake	544	CruiseOn_OffSignal
240B	CPC_Supply	366	Trans.RearAirBrake	544A	CruiseOn-OffLed
241A	ECMPOWER	367	Trans.RearAirBrake	545	CruiseResumeSig
241B	24Voltignition	368	AccAirPressureSig	583	EngineBrakeB
241C	WIF_Heater	369	AccAirPressureSig	600	ABSSensor
254	Frigo	403	CadecSw	600A	ABSSensor
260	WindowAjarSig	404	CadecSw	601	ABSSensor
290	GndFanClutch	417	ThrottlePositionSignal	601A	ABSSensor
290A	GndFanClutch	439	12VtoABS	602	ABSSteering&Yawsensor
291	FanClutch	439G	Gateway	603	ABSSteering&Yawsensor
292	FanClutch	500	12VPwrIdleValid	604	ABSSteering&Yawsensor
300	WCLTopLightSliding	501	SupplyControl	605	ABSSteering&Yawsensor
301	WheelChairLiftSwitch	502	IVSOut	606	ABSPressuresensor
302	WCLRicon	503	WheelChairLift	607	ABSPressuresensor
302A	WCLSlidingdoorSig	505	UreaSystem	608	ABSPressuresensor

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
610	ABSPressuresensor	BrkNeg	HillStartAssist	down	ClusterCtr
611	AbsTagSolenoid	BRKP	BrakeInterlock	escape	ClusterCtr
612	AbsTagSolenoid	Brown	CommuterOption	Ethernet	CameraInterfaceBox
613	AbsTagSolenoid	Bwn_DrCam	Ign_DriveCam	EVENT	CameraInterfaceBox
614	ABSSteeringSolenoid	CAM1	CameraInterfaceBox	FAKE	L_SPEAKER_HARNESS
614A	ABSSteeringSolenoid	CAM2	CameraInterfaceBox	FAKE1	R_SPEAKER_HARNESS
618	Hill_Start_Assist_Sig	CAM3	CameraInterfaceBox	fuilf	fake
618Rtn	HillStartAssist	CAM4	CameraInterfaceBox	GndA	ComputerSignals
900	J1587	CAM5	CameraInterfaceBox	GndDVR	GroundIVNandMotorola
901	J1587	CAM6	CameraInterfaceBox	GndG	GndCadece
910	L_SPEAKER_HARNESS	CAM7	CameraInterfaceBox	GndG1	GndCadece
911	EmergencyCutoutRlySignal	CAM9	CameraInterfaceBox	GndIVN	Chime
916	5VSensorPwr	CAM10	CameraInterfaceBox	GREEN	120VAC_OUTLET
952	GndSensorRtn	CAN1-HI	GatewayCan2	Green	PwrBatteryCharger
953	GNDPCPC	CAN1-LO	GatewayCan2	HOSTESS	SOUND_SYSTEM
979	EngineBrakeA	CAN2-H	EngineCan2	INTER	Battery_Jumper
A4A	Retarder	CAN2-L	EngineCan2	INTLK	BrakeInterlock
A4B	Retarder	Can2H	SparesFr-to-RearHarness	J2	CommuterOption
A4C	Retarder	Can2L	SparesFr-to-RearHarness	KneeLevel	KneelingLevel
A4D	Retarder	CanH2	SpareCan	KneeRef	KneelingLevel
A4E	Retarder	CanL2	SpareCan	LF+	L_SPEAKER_HARNESS
A4F	Retarder	Cd1	ComputerSignals	LF-	L_SPEAKER_HARNESS
A4G	Retarder	Chgr	Battery_Charger_Gnd	LIN	Gaateway
A4H	Retarder	Chime	Chime	LR+	R_SPEAKER_HARNESS_WCL
ANT1	CameraInterfaceBox	COM	GndDestinationSign	LR-	FR_SPEAKER_HARNESS_
ANT2	CameraInterfaceBox	CTS	MCMDData	Master	MasterInterlockBypass
ANT3	CameraInterfaceBox	Cts	ComputerSignals	MICRO	CameraInterfaceBox
AuxBP	BrakeAuxBypass	DATA+	GndDestinationSign	MOTION	CameraInterfaceBox
AXLE	LoadMonitor	DBusH	DBusSignal	Motorola	TriggerMotorola
BB2H	Can2	DBusL	DBusSignal	N1	A41Adress
BB2L	Can2	DL0	SparesCanFrontHarness	N2	A41Adress
BK	CommuterOption	DL1H	J1939	N3	A42Adress
BLACK	120VAC_OUTLET	DL1L	J1939	N4	A42Adress
Black	PwrBatteryCharger	DL2H	BB2	N5	A43Adress
BIkFR	TiremonitoringGnd	DL2L	BB2	N6	A43Adress
BIkRL	TiremonitoringGnd	DL3H	DBus	N7	A44Adress
BIkRR	TiremonitoringGnd	DL3L	DBus	N8	A44Adress
BIk_DrCam	Gnd_DriveCam	DL7H	EngineCan2	N9	A45Adress
Blue	CommuterOption	DL7L	EngineCan2	N10	A45Adress
BRef1	SensorGnd	DL9H	EngineCan2	N11	A46Adress
Bref2	PassengerSensor	DL9L	EngineCan2	N12	A46Adress
BrkAux	BrakeAuxBypass	DLOH	SparesFr-to-RearHarness	N13	A47Adress
		DLOL	SparesFr-to-RearHarness	N14	A47Adress

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
N15	A48Address	SH1	I_ShiftGearLevelSignal	spare25	SparesClearanceLts
N16	A48Address	SH2	I_ShiftGearLevelSignal	spare28	SparesFrontHarness
N17	A49Address	SH3	I_ShiftGearLevelSignal	spare29	SparesFrontHarness
N18	A49Address	SH4	I_ShiftGearLevelSignal	spare30	SparesFrontHarness
N19	A50Address	SH5	I_ShiftGearLevelSignal	spare31	SparesFrontHarness
N20	A50Address	SH6	I_ShiftGearLevelSignal	spare32	SparesFrontHarness
N21	A51Address	SH7	I_ShiftGearLevelSignal	spare33	SparesFrontHarness
N22	A51Address	SH8	I_ShiftGearLevelSignal	spare34	SparesFrontHarness
N23	A52Address	SHD	CommuterOption	spare35	SparesFrontHarness
N24	A52Address	SHIELD	GndDestinationSign	spare39	SparesDash
N25	A53Address	Shield	CommuterOption	spare40	SparesDash
N26	A53Address	SIGNAL	signal_weight	spare41	SparesDash
N27	A54Address	SilentAlarm+	SilentAlarm	spare42	SparesDash
N28	A54Address	SilentAlarm-	SilentAlarm	spare43	SparesDash
N29	A36Address	SL13	L_SPEAKER_HARNESS	spare44	SparesDash
N30	A55address	SL24	L_SPEAKER_HARNESS	spare51	SparesEngineCradle
N31	A55address	SL35	L_SPEAKER_HARNESS	spare52	SparesEngineCradle
NEG	GndDestinationSign	SL46	L_SPEAKER_HARNESS	spare53	SparesEngineCradle
OFB1	GndMirror	SL57	L_SPEAKER_HARNESS	spare54	SparesEngineCradle
OFB3	TiremonitoringGnd	SL68	L_SPEAKER_HARNESS	spare62	spareABSHarness
OilSep	OilSeparatorCtr	SL1012	L_SPEAKER_HARNESS	spare64	Spare_Transmission
OP2	Inverter_Gnd	SL1113	L_SPEAKER_HARNESS	spare65	Spare_Transmission
Out+	Speaker	SL1214	L_SPEAKER_HARNESS	spare72	spare
Out-	Speaker	SL1315	L_SPEAKER_HARNESS	spare73	spare
POS	GndDestinationSign	SL1416	L_SPEAKER_HARNESS	SpeakEasy	TriggerMotorola
PP1	InverterPwr	sp52	Pre-HeatSignal	SpkDriver+	Speaker
RED	CommuterOption	spare1	spare	SpkDriver-	Speaker
RedFR	Tiremonitoring12v	spare10	SparesInteriorLtsHarness	SpkIn+	Speaker
RedRL	Tiremonitoring12v	spare11	SparesInteriorLtsHarness	SpkIn-	Speaker
RedRR	Tiremonitoring12v	spare12	SparesInteriorHarness	SpkIVN+	Speaker
Red_DrCam	Batt_DriveCam	spare13	SparesInteriorHarness	SpkIVN-	Speaker
Ref1	gndsensor	spare14	SparesInteriorHarness	SpkOut+	Speaker
RetOff	RetarderOffLight	spare15	SparesInteriorHarness	SpkOut-	Speaker
RF+	L_SPEAKER_HARNESS	spare16	SparesInteriorHarness	SpkPA+	Speaker
RF-	L_SPEAKER_HARNESS	spare17	SparesFr-to-RearHarness	SpkPA-	Speaker
RR+	FR_SPEAKER_HARNESS_	spare18	SparesFr-to-RearHarness	SR13	FR_SPEAKER_HARNESS_
RR-	FR_SPEAKER_HARNESS_	spare19	SparesFr-to-RearHarness	SR24	FR_SPEAKER_HARNESS_
RTS	MCMDData	spare20	SparesClearanceLts	SR35	FR_SPEAKER_HARNESS_
Rts	ComputerSignals	spare21	SparesClearanceLts	SR46	FR_SPEAKER_HARNESS_
RX	DataTireMon	spare22	SparesClearanceLts	SR57	FR_SPEAKER_HARNESS_
RxD	ComputerSignals	spare23	SparesClearanceLts	SR68	FR_SPEAKER_HARNESS_
RxTx	MCMDData	spare24	SparesClearanceLts	SR911	R_SPEAKER_HARNESS_WCL
select	ClusterCtr				

