


Ground Distribution

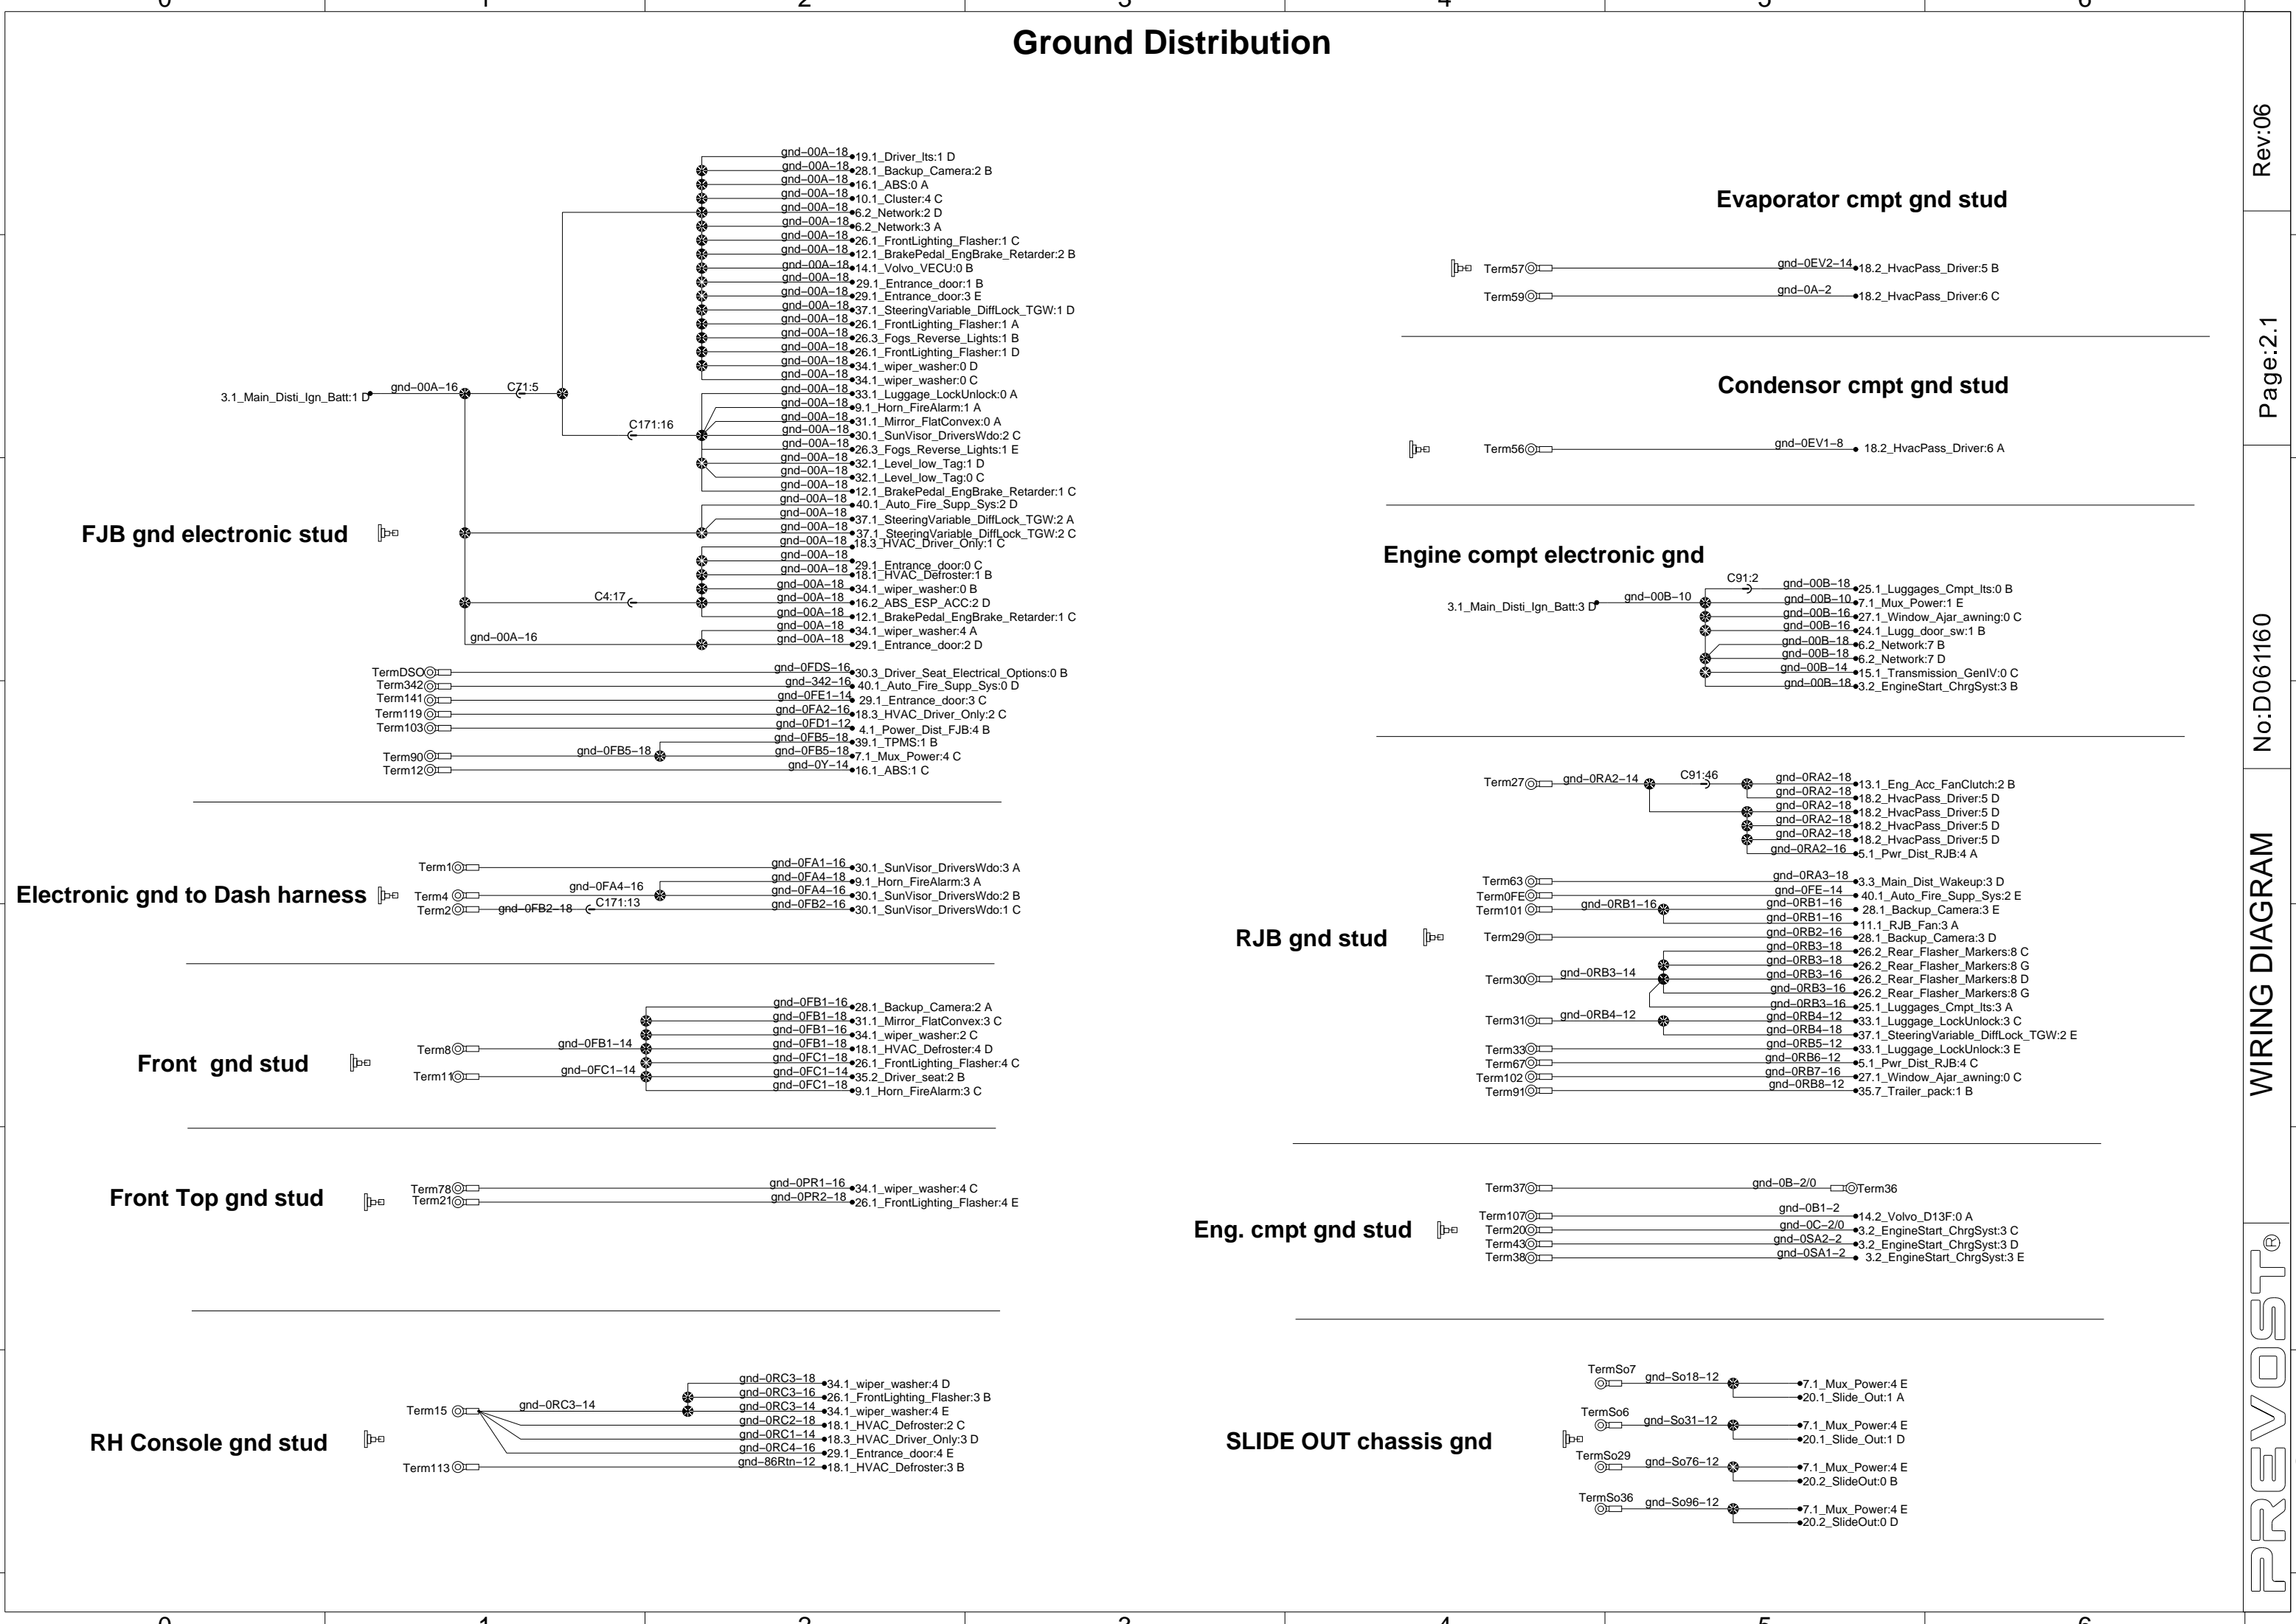

Rev:06

Page:2.1

No:D061160

WIRING DIAGRAM

PREVOST®