

# WIRING DIAGRAM PAGES LIST

Information pages		C		H		S	
Multiplex output list	B1	Charging System	3.2	Hazard	26.1	Service Brake Relay	12.1
Multiplex input list	B2	Clearance lights rear & front	26.1,26.2	Head Lights	26.1	Slide out	20.1
Multiplex error messages list	B3	Cluster	10.1	Horn	9.1	Spare Wires	8.1
Arrangement - Harness	C1	Cornering Lights (Optional)	26.3	Hvac Defroster	18.1	Stop lights	26.2
Can Configuration	C3	Cruise control	14.1	Hvac Passenger	18.2	Sun Visor	32.1
Glossary	D	Converter interface	21.1	Hvac Driver only	18.3	Steering Control ZF	37.1
Circuit Number Listing	E					Steering Wheel Control	32.1
Circuit Breaker code	F	<b>D</b>		<b>J</b>			
Connectors code	G	Dash Lights	19.1	J1939 and 1587 Network	6.2		
Diode Number Code	H	Differential lock	23.1				
Resistors Number Code	J	Docking Lights	26.3	<b>K</b>			
Fuses Code	L	Driver's Light and Backlight	19.1	Keyless keypad	29.1		
Relay Code	K	Driver's Window & Seat	30.1,30.3			<b>T</b>	
Multiplex Output List	B1	Driver's seat	17.1	<b>L</b>		Tag	28.1
Multiplex Input List	B2			Level low	28.1	Tail and Licence Lights	26.2
Multiplex error Messages List	B3	<b>E</b>		Luggage compt lighting	25.1	Test Switch	9.1
		Engine brake and Retarder	12.1	Luggage door Lock/Unlock	24.2	Transmission ECU	15.1-15.2
		Engine compt lighting	25.1	Luggage door switches	24.1	Trailer Package	26.4
		Engine Start	3.2			Tire Pressure Monitoring Sys.	33.1
<b>A</b>		Engine ECM	14.1	<b>M</b>			
Abs	16.1	Engine Override	14.1	Main Distribution Ignition & Batt.	3.1		
Abs-Esp	16.2	Entrance door	29.1	Main Distribution Wake-Up	3.3	<b>U</b>	
ACB	16.2	Ether Switch	13.1	Marker Lights	26.1,26.2		
		Engine bloc heater	11.1	Mirror Ramco	22.1	Urea ACM	14.5
		Engine Volvo	14.2	Multiplexing Power	7.1		
<b>B</b>				Multiplexing Network	6.1		
Back-up Camera	28.1					<b>W</b>	
Back-up lights and alarm	26.3			<b>P</b>		Window Ajar &Awning	27.1
Battery and Equalizer	1.1	<b>F</b>		Park Brake Sensor	12.1	Wiper & Washer	31.1
Battery Charger	17.1	Fast Idle	14.1	Trailer Brake Sensor	12.1		
Brake Pedal Sensor	12.1	Fire Alarm	9.1	Power Distribution FJB	4.1		
		Flashers	26.1,26.2	Power Distribution RJB	5.1		
		Fog lights	26.3	Power Outlet	30.1		
		Fuel Sender	10.1	Prime Pump	13.1		
		Fuel Prime Pump	13.1	Prodriver	11.1		
		Fuel water Filter	13.1	Pneumatic Cut-Out Acc sol	9.1		
		<b>G</b>		<b>R</b>			
		Grounds	2.1	Radiator Fan Clutch	13.1		
				Rear junction box door fan	11.1		